



ROBOTICS

Product manual, spare parts

Motor Units and Gear Units



Trace back information:
Workspace 24B version a13
Checked in 2024-06-18
Skribenta version 5.5.019

Product manual, spare parts

**MU 80, MU 100, MU 200, MU 250, MU 300, MU 400
MTD 250, MTD 500, MTD 750, MTD 2000, MTD 5000
MID 500, MID 1000**

OmniCore

Document ID: 3HAC090256-001

Revision: A

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

Table of contents

Overview of this manual	7
Product documentation	8
1 Spare parts	11
1.1 Spare parts for motor units	11
1.2 Spare parts for gear units	12
1.3 Spare parts for cables	14

This page is intentionally left blank

Overview of this manual

About this manual

This manual describes the spare parts for motor units and gear units.

- MU 100, MU 200, MU 250, MU 300, MU 400
- MTD 250, MTD 500, MTD 750, MTD 2000, MTD 5000, MID 500, MID 1000

Who should read this manual?

This manual is intended for:

- Installation personnel.
- Maintenance personnel.
- Repair personnel.

Prerequisites

Maintenance/repair/installation personnel working with an ABB Robot must be trained by ABB and have the required knowledge of mechanical and electrical installation/repair/maintenance work.

References

Reference	Document ID
<i>Product manual - Motor Units and Gear Units</i>	<i>Document.ID-1</i>
<i>Product specification - Motor Units and Gear Units</i>	<i>Document.ID-1</i>
<i>Circuit diagram - Motor Units and Gear Units</i>	<i>3HAC039887-001</i>

Revisions

Revision	Description
-	First edition
A	Spare parts updated based on the OmniCore controller

Product documentation

Categories for user documentation from ABB Robotics

The user documentation from ABB Robotics is divided into a number of categories. This listing is based on the type of information in the documents, regardless of whether the products are standard or optional.



Tip

All documents can be found via myABB Business Portal, www.abb.com/myABB.

Product manuals

Manipulators, controllers, DressPack, and most other hardware is delivered with a **Product manual** that generally contains:

- Safety information.
- Installation and commissioning (descriptions of mechanical installation or electrical connections).
- Maintenance (descriptions of all required preventive maintenance procedures including intervals and expected life time of parts).
- Repair (descriptions of all recommended repair procedures including spare parts).
- Calibration.
- Troubleshooting.
- Decommissioning.
- Reference information (safety standards, unit conversions, screw joints, lists of tools).
- Spare parts list with corresponding figures (or references to separate spare parts lists).
- References to circuit diagrams.

Technical reference manuals

The technical reference manuals describe reference information for robotics products, for example lubrication, the RAPID language, and system parameters.

Application manuals

Specific applications (for example software or hardware options) are described in **Application manuals**. An application manual can describe one or several applications.

An application manual generally contains information about:

- The purpose of the application (what it does and when it is useful).
- What is included (for example cables, I/O boards, RAPID instructions, system parameters, software).
- How to install included or required hardware.
- How to use the application.

Continues on next page

- Examples of how to use the application.

Operating manuals

The operating manuals describe hands-on handling of the products. The manuals are aimed at those having first-hand operational contact with the product, that is production cell operators, programmers, and troubleshooters.

This page is intentionally left blank

1 Spare parts

1.1 Spare parts for motor units


Motor units	Article number
	Graphite White
MU 80 ⁱ	3HAC063505-005
MU 100 ⁱⁱ	3HAC040655-002
MU 200 ⁱⁱ	3HAC040656-002 (type A)
MU 200 with smooth shaft adaptor ⁱⁱⁱ	3HAC061548-003
MU 250 ⁱⁱ	3HAC061305-004
MU 300 ⁱⁱ	3HAC040657-002 (type A)
MU 400 ⁱⁱ	3HAC040658-002

i Use shaft adaptor with key.

ii Use shaft adaptor with key.

iii Use smooth shaft adaptor.

Confirm the type of the shaft adaptor.

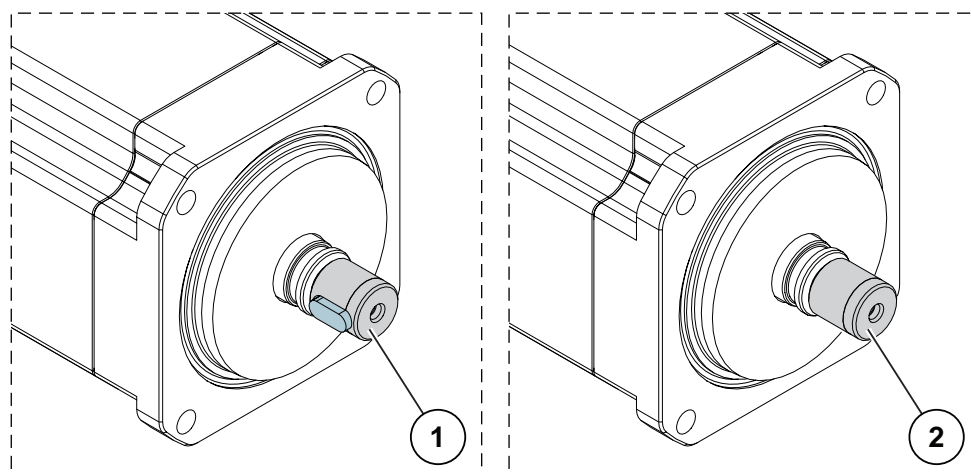

xx1700000589

1 Shaft adaptor with key

2 Smooth shaft adaptor

1 Spare parts

1.2 Spare parts for gear units

1.2 Spare parts for gear units

Gear units

Gear units	Article number	
	Graphite White	Dark grey
Gearbox MTD 250, including motor	3HAC035434-005	-
Gearbox MTD 500, including motor	3HAC035436-005	-
Gearbox MTD 750, including motor	3HAC035398-008	-
Gearbox MTD 2000, including motor	3HAC035406-008	-
Gearbox MTD 5000, including motor	3HAC035444-004	-
Gearbox MID 1.1, including motor	-	3HAC035480-004
Gearbox MID 1.2, including motor	3HAC035398-007	-
Gearbox MID 2.1, including motor	3HAC035406-007	-
Gearbox MID 500, including motor	-	3HAC040682-002
Gearbox MID 1000, including motor	3HAC040683-002	-

Motors

Motor units	Article number
	Graphite White
Motor for MTD 250	3HAC038187-003
Motor for MTD 500	3HAC038210-010
Motor for MTD 750	3HAC038210-010
Motor for MTD 2000	3HAC038210-009
Motor for MTD 5000	3HAC038212-003
Motor for MID 1.2	3HAC038210-007
Motor for MID 2.1	3HAC038210-008
Motor for MID 2.2	3HAC038210-008

Connection boxes

Connection boxes	Article number		
	Graphite White	Dark grey	Black
Connection Box MTD 250	3HAC038188-003	-	-
Connection Box MTD 500, MTD 750, MTD 2000, and MTD 5000	3HAC038209-003	-	-

Isolation kits

Isolation kits	Article number
Isolation kit MTD 250	3HAC038213-002
Isolation kit MTD 500 - MTD 2000	3HAC038214-002

Continues on next page

Isolation kits	Article number
Isolation kit MTD 5000	3HAC038215-002

1 Spare parts

1.3 Spare parts for cables

1.3 Spare parts for cables

Motor cables

Flex cable from OmniCore controller to motor unit.

Power cables	Article number	Length
OmniCore - MU/GU, power	3HAC090151-001	7 m
OmniCore - MU/GU, power	3HAC090151-004	15 m
OmniCore - MU/GU, power	3HAC090151-005	30 m

Flex cable from motor connection box to motor unit or gear unit.

Power cables	Article number	Length
Motor connection box - MU/GU, power	3HAC039603-001	3 m
Motor connection box - MU/GU, power	3HAC039603-002	7 m
Motor connection box - MU/GU, power	3HAC039603-003	15 m

Resolver cables

Flex cable from motor connection box to motor unit or gear unit or from IRB to motor unit.

FB cables	Article number	Length
Motor connection box - MU/GU, signal	3HAC039602-001	3 m
Motor connection box - MU/GU, signal	3HAC039602-002	7 m
Motor connection box - MU/GU, signal	3HAC039602-003	15 m

**ABB AB****Robotics & Discrete Automation**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS**Robotics & Discrete Automation**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

ABB Inc.**Robotics & Discrete Automation**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics