



ROBOTICS

Product manual

IRP



Trace back information:
Workspace 25A version a17
Checked in 2025-03-11
Skribenta version 5.6.018

Product manual

IRP A

IRP B

IRP C

IRP K

IRP R

IRP L

OmniCore

Document ID: 3HAC088963-001

Revision: C

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2010-2025 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

| | |
|---|-----------|
| Overview of this manual | 9 |
| Product documentation | 12 |
| How to read the product manual | 14 |
| 1 Safety | 15 |
| 1.1 Safety information | 15 |
| 1.1.1 Limitation of liability | 15 |
| 1.1.2 Requirements on personnel | 16 |
| 1.2 Safety signals and symbols | 17 |
| 1.2.1 Safety signals in the manual | 17 |
| 1.2.2 Safety symbols on manipulator labels | 19 |
| 1.3 Robot stopping functions | 25 |
| 1.4 Safety during installation and commissioning | 26 |
| 1.5 Safety during operation | 29 |
| 1.6 Safety during maintenance and repair | 30 |
| 1.6.1 Safety during maintenance and repair | 30 |
| 1.6.2 Brake testing | 33 |
| 1.7 Safety during troubleshooting | 34 |
| 1.8 Safety during decommissioning | 35 |
| 2 System description | 37 |
| 2.1 IRP positioner | 37 |
| 2.1.1 Positioner overview | 37 |
| 2.1.2 Station interchange unit MID | 40 |
| 2.1.3 Rotary units | 42 |
| 2.1.4 Support collar | 44 |
| 2.2 Customer options | 45 |
| 2.2.1 Optional swivels | 45 |
| 3 Installation and commissioning | 47 |
| 3.1 Introduction to installation and commissioning | 47 |
| 3.2 Installation and set-up | 48 |
| 3.3 Unpacking and handling | 49 |
| 3.3.1 Pre-installation procedure | 49 |
| 3.3.2 Lifting the positioner | 51 |
| 3.3.3 Forces on foundation | 58 |
| 3.3.4 Recommendations for attachment bolts and screws | 62 |
| 3.3.5 Screw joints | 63 |
| 3.3.6 The unit is sensitive to ESD | 66 |
| 3.4 On-site installation | 67 |
| 3.4.1 Orienting and securing the manipulator | 67 |
| 3.4.2 Mounting of secondary shield on IRP-K | 74 |
| 3.4.3 Dimensions of the tailstock IRP L-5000 | 76 |
| 3.5 Electrical connections | 77 |
| 3.5.1 Electrical connections | 78 |
| 3.5.2 Positioner interface to MCB | 86 |
| 3.6 Installing fixtures and testing with corresponding workpieces | 87 |
| 3.6.1 Installing fixtures | 87 |
| 3.6.2 Removing or changing fixtures | 89 |
| 3.7 Test run after installation, maintenance, or repair | 91 |
| 4 Configuration of RobotWare | 93 |
| 4.1 Creating and downloading a system | 93 |
| 4.2 Safe Disable of Drive Unit | 95 |
| 4.3 Axis Position Supervision | 96 |

| | | |
|----------|--|------------|
| 5 | Maintenance | 97 |
| 5.1 | Introduction | 97 |
| 5.2 | Specification of maintenance intervals | 98 |
| 5.3 | Maintenance schedule and expected component life | 99 |
| 5.3.1 | Maintenance schedule | 99 |
| 5.4 | Inspection activities | 100 |
| 5.4.1 | Inspection, cables | 100 |
| 5.4.2 | Inspecting, weld return path | 104 |
| 5.4.3 | Inspection, rotary unit current collector | 106 |
| 5.4.4 | Inspection, support collar current collector | 108 |
| 5.4.5 | Inspection, gearbox oil leak | 110 |
| 5.5 | Cleaning activities | 111 |
| 5.5.1 | Cleaning the IRP | 111 |
| 5.6 | Lubrication activities | 113 |
| 5.6.1 | Lubricating the current collector | 113 |
| 5.6.2 | Oil in gearboxes | 115 |
| 6 | Repair | 117 |
| 6.1 | General procedures | 117 |
| 6.1.1 | Introduction | 117 |
| 6.1.2 | Mounting instructions for bearings | 118 |
| 6.1.3 | Mounting instructions for sealings | 120 |
| 6.1.4 | Cut the paint or surface on the robot before replacing parts | 124 |
| 6.2 | Frame parts | 125 |
| 6.2.1 | Replacing frame parts | 125 |
| 6.2.1.1 | Overview | 126 |
| 6.2.1.2 | Replacing the station frame | 128 |
| 6.2.1.3 | Replacing the base frame | 129 |
| 6.2.1.4 | Replacing the frame and covers | 132 |
| 6.2.1.5 | Replacing the turning disc | 135 |
| 6.2.2 | Lifting frame parts | 136 |
| 6.3 | Lower frame and base | 143 |
| 6.3.1 | Replacing stop lugs | 143 |
| 6.4 | Motors | 146 |
| 6.4.1 | Replacing motors | 146 |
| 6.4.2 | Checking insulation | 152 |
| 6.5 | Rotary units | 153 |
| 6.5.1 | Replacing rotary unit | 153 |
| 6.6 | Support collar | 155 |
| 6.6.1 | Replacing support collar axis | 155 |
| 6.7 | Electrical | 157 |
| 6.7.1 | Replacing current collector | 157 |
| 7 | Calibration information | 159 |
| 7.1 | When to calibrate | 159 |
| 7.2 | Calibration marks | 160 |
| 7.3 | Updating revolution counters on OmniCore robots | 162 |
| 7.4 | Manual setting of the calibration values | 163 |
| 7.5 | Recalibrating the axes | 164 |
| 7.6 | Calibration of the station interchange unit for positioner IRP | 165 |
| 7.7 | Checking the synchronization position | 166 |
| 7.7.1 | Checking the synchronization position on OmniCore robots | 167 |
| 7.8 | Multi-arc calibration (not IRP C) | 168 |
| 7.8.1 | Introduction | 168 |
| 7.8.2 | Calibrating the multi-arc system | 169 |
| 7.9 | Tool and speed data | 175 |
| 7.10 | Drivers | 176 |
| 7.10.1 | Identification of load data for positioners IRP | 176 |

| | | |
|--------------|--|------------|
| 7.10.2 | Define payload for a mechanical unit | 182 |
| 7.10.3 | Define base frame | 186 |
| 8 | Decommissioning | 187 |
| 8.1 | Introduction to decommissioning | 187 |
| 8.2 | Environmental information | 188 |
| 9 | Reference information | 191 |
| 9.1 | Applicable standards | 191 |
| 9.2 | Unit conversion | 192 |
| 9.3 | Screw joints | 193 |
| 9.4 | Weight specifications | 196 |
| 9.5 | Standard toolkit | 197 |
| 9.6 | Circuit diagrams | 198 |
| 10 | Lifting instructions | 201 |
| Index | | 213 |

This page is intentionally left blank

Overview of this manual

About this manual

This manual contains instructions for:

- mechanical and electrical installation of the manipulator system
- maintenance of the manipulator system
- mechanical and electrical repair of the manipulator system.

It also contains reference information for all procedures described in the manual.

Usage

This manual should be used during:

- installation, from lifting the manipulator to its work site and securing it to the foundation, to making it ready for operation
- maintenance work
- operation
- repair work and calibration.

Who should read this manual?

This manual is intended for:

- installation personnel
- maintenance personnel
- repair personnel.

Prerequisites

A maintenance/repair/installation technician working with an ABB manipulator must:

- be trained by ABB and have the required knowledge of mechanical and electrical installation/repair/maintenance work.

Product manual scope

The manual covers covers all variants and designs of the IRP. Some variants and designs may have been removed from the business offer and are no longer available for purchase.

Organization of chapters

The manual is organized in the following chapters:

| Chapter | Contents |
|--------------------------------|---|
| Safety | Safety information that must be read through before performing any installation or service work on the manipulator. Contains general safety aspects as well as more specific information on how to avoid personal injuries and damage to the product. |
| System description | Useful information when performing installation. |
| Installation and commissioning | Required information about lifting and installation of the manipulator. |

Continues on next page

Overview of this manual

Continued

| Chapter | Contents |
|-------------------------|---|
| Maintenance | Step-by-step procedures that describe how to perform the maintenance of manipulator. Based on a maintenance schedule that may be used to plan periodical maintenance. |
| Repair | Step-by-step procedures that describe how to perform repair activities of the manipulator. Based on available spare parts. |
| Operation | Step-by-step procedures for starting and stopping programs. |
| Calibration information | Procedures that do not require specific calibration equipment. General information about calibration. |
| Decommissioning | Environmental information about the manipulator and its components. |
| Reference information | Useful information when performing installation, maintenance or repair work. Includes lists of necessary tools, additional documents, safety standards etc. |

References

| Reference | Document ID |
|--|----------------|
| <i>Product manual, spare parts - IRP</i> | 3HAC088964-001 |
| <i>Product specification - IRBP /D2009</i> | 3HAC088965-001 |
| <i>Technical reference manual - Lubrication in gearboxes</i> | 3HAC042927-001 |
| <i>Safety manual for robot - Manipulator and IRC5 or OmniCore controllerⁱ</i> | 3HAC031045-001 |
| <i>Product manual - OmniCore V250XT Type B</i> | 3HAC087112-001 |
| <i>Product manual - OmniCore V400XT</i> | 3HAC081697-001 |
| <i>Operating manual - OmniCore</i> | 3HAC065036-001 |
| <i>Operating manual - Integrator's guide OmniCore</i> | 3HAC065037-001 |
| <i>Application manual - Additional axes</i> | 3HAC082287-001 |
| <i>Technical reference manual - System parameters</i> | 3HAC065041-001 |
| <i>Operating manual - RobotStudio</i> | 3HAC032104-001 |

ⁱ This manual contains all safety instructions from the product manuals for the manipulators and the controllers.

Circuit diagrams

| Product | Article numbers for circuit diagrams |
|----------------------------------|--------------------------------------|
| <i>Circuit diagram - IRP C</i> | 3HAC091012-001 |
| <i>Circuit diagram - IRP L</i> | 3HAC091012-002 |
| <i>Circuit diagram - IRP K/R</i> | 3HAC091012-003 |
| <i>Circuit diagram - IRP A</i> | 3HAC091012-004 |
| <i>Circuit diagram - IRP B</i> | 3HAC091012-005 |

Revisions

| Revision | Description |
|----------|----------------|
| A | First edition. |

Continues on next page

| Revision | Description |
|----------|--|
| B | Published in release 24C. The following updates are done in this revision: <ul style="list-style-type: none"> Added the missing link to the safety configuration template, see Safety configuration on page 93. |
| C | Published in release 25A. The following updates are done in this revision: <ul style="list-style-type: none"> Corrections done in section Calibration information on page 159. |

Product documentation

Categories for user documentation from ABB Robotics

The user documentation from ABB Robotics is divided into a number of categories. This listing is based on the type of information in the documents, regardless of whether the products are standard or optional.



Tip

All documents can be found via myABB Business Portal, www.abb.com/myABB.

Product manuals

Manipulators, controllers, DressPack, and most other hardware is delivered with a **Product manual** that generally contains:

- Safety information.
- Installation and commissioning (descriptions of mechanical installation or electrical connections).
- Maintenance (descriptions of all required preventive maintenance procedures including intervals and expected life time of parts).
- Repair (descriptions of all recommended repair procedures including spare parts).
- Calibration.
- Troubleshooting.
- Decommissioning.
- Reference information (safety standards, unit conversions, screw joints, lists of tools).
- Spare parts list with corresponding figures (or references to separate spare parts lists).
- References to circuit diagrams.

Technical reference manuals

The technical reference manuals describe reference information for robotics products, for example lubrication, the RAPID language, and system parameters.

Application manuals

Specific applications (for example software or hardware options) are described in **Application manuals**. An application manual can describe one or several applications.

An application manual generally contains information about:

- The purpose of the application (what it does and when it is useful).
- What is included (for example cables, I/O boards, RAPID instructions, system parameters, software).
- How to install included or required hardware.
- How to use the application.

Continues on next page

- Examples of how to use the application.

Operating manuals

The operating manuals describe hands-on handling of the products. The manuals are aimed at those having first-hand operational contact with the product, that is production cell operators, programmers, and troubleshooters.

How to read the product manual

Reading the procedures

The procedures contain references to figures, tools, material, and so on. The references are read as described below.

References to figures

The procedures often include references to components or attachment points located on the manipulator/controller. The components or attachment points are marked with *italic text* in the procedures and completed with a reference to the figure where the current component or attachment point is shown.

The denomination in the procedure for the component or attachment point corresponds to the denomination in the referenced figure.

The table below shows an example of a reference to a figure from a step in a procedure.

| | Action | Note/Illustration |
|----|---|--|
| 8. | Remove the <i>rear attachment screws, gearbox</i> . | Shown in the figure Location of gearbox on page xx . |

References to required equipment

The procedures often include references to equipment (spare parts, tools, etc.) required for the different actions in the procedure. The equipment is marked with *italic text* in the procedures and completed with a reference to the section where the equipment is listed with further information, that is article number and dimensions.

The designation in the procedure for the component or attachment point corresponds to the designation in the referenced list.

The table below shows an example of a reference to a list of required equipment from a step in a procedure.

| | Action | Note/Illustration |
|----|--|--|
| 3. | Fit a new <i>sealing, axis 2</i> to the gearbox. | Art. no. is specified in Required equipment on page xx . |

Safety information

The manual includes a separate safety chapter that must be read through before proceeding with any service or installation procedures. All procedures also include specific safety information when dangerous steps are to be performed.

Read more in the chapter [Safety on page 15](#).

Illustrations

The robot is illustrated with general figures that does not take painting or protection type in consideration.

Likewise, certain work methods or general information that is valid for several robot models, can be illustrated with illustrations that show a different robot model than the one that is described in the current manual.

1 Safety

1.1 Safety information

1.1.1 Limitation of liability

Limitation of liability

Any information given in this manual regarding safety must not be construed as a warranty by ABB that the industrial robot will not cause injury or damage even if all safety instructions are complied with.

The information does not cover how to design, install and operate a robot system, nor does it cover all peripheral equipment that can influence the safety of the robot system.

In particular, liability cannot be accepted if injury or damage has been caused for any of the following reasons:

- Use of the robot in other ways than intended.
- Incorrect operation or maintenance.
- Operation of the robot when the safety devices are defective, not in their intended location or in any other way not working.
- When instructions for operation and maintenance are not followed as intended.
- Non-authorized design modifications of the robot.
- Repairs on the robot and its spare parts carried out by in-experienced or non-qualified personnel.
- Foreign objects.
- Force majeure.

Spare parts and equipment

ABB supplies original spare parts and equipment which have been tested and approved for their intended use. The installation and/or use of non-original spare parts and equipment can negatively affect the safety, function, performance, and structural properties of the robot. ABB is not liable for damages caused by the use of non-original spare parts and equipment.

1 Safety

1.1.2 Requirements on personnel

1.1.2 Requirements on personnel

General

Only personnel with appropriate training are allowed to install, maintain, service, repair, and use the robot. This includes electrical, mechanical, hydraulics, pneumatics, and other hazards identified in the risk assessment.

Persons who are under the influence of alcohol, drugs or any other intoxicating substances are not allowed to install, maintain, service, repair, or use the robot.

The plant liable must make sure that the personnel is trained on the robot, and on responding to emergency or abnormal situations.

Personal protective equipment

Use personal protective equipment, as stated in the instructions.

1.2 Safety signals and symbols

1.2.1 Safety signals in the manual







Introduction to safety signals

This section specifies all safety signals used in the user manuals. Each signal consists of:

- A caption specifying the hazard level (DANGER, WARNING, or CAUTION) and the type of hazard.
- Instruction about how to reduce the hazard to an acceptable level.
- A brief description of remaining hazards, if not adequately reduced.

Hazard levels

The table below defines the captions specifying the hazard levels used throughout this manual.


| Symbol | Designation | Significance |
|---|-------------------------------|---|
|  | DANGER | Signal word used to indicate an imminently hazardous situation which, if not avoided, will result in serious injury. |
|  | WARNING | Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in serious injury. |
|  | ELECTRICAL SHOCK | Signal word used to indicate a potentially hazardous situation related to electrical hazards which, if not avoided, could result in serious injury. |
|  | CAUTION | Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in slight injury. |
|  | ELECTROSTATIC DISCHARGE (ESD) | Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in severe damage to the product. |
|  | NOTE | Signal word used to indicate important facts and conditions. |

Continues on next page

1 Safety

1.2.1 Safety signals in the manual

Continued

| Symbol | Designation | Significance |
|---|-------------|---|
|  | TIP | Signal word used to indicate where to find additional information or how to do an operation in an easier way. |

1.2.2 Safety symbols on manipulator labels

Introduction to symbols

This section describes safety symbols used on labels (stickers) on the manipulator. Symbols are used in combinations on the labels, describing each specific warning. The descriptions in this section are generic, the labels can contain additional information such as values.



Note

The symbols on the labels on the product must be observed. Additional symbols added by the integrator must also be observed.




Types of symbols

Both the manipulator and the controller are marked with symbols, containing important information about the product. This is important for all personnel handling the robot, for example during installation, service, or operation.

The safety labels are language independent, they only use graphics. See [Symbols on safety labels on page 19](#).

The information labels can contain information in text.

Symbols on safety labels






| Symbol | Description |
|---|--|
|  xx0900000812 | Warning! Warns that an accident <i>may</i> occur if the instructions are not followed that can lead to serious injury, possibly fatal, and/or great damage to the product. It applies to warnings that apply to danger with, for example, contact with high voltage electrical units, explosion or fire risk, risk of poisonous gases, risk of crushing, impact, fall from height, etc. |
|  xx0900000811 | Caution! Warns that an accident may occur if the instructions are not followed that can result in injury and/or damage to the product. It also applies to warnings of risks that include burns, eye injury, skin injury, hearing damage, crushing or slipping, tripping, impact, fall from height, etc. Furthermore, it applies to warnings that include function requirements when fitting and removing equipment where there is a risk of damaging the product or causing a breakdown. |
|  xx0900000839 | Prohibition Used in combinations with other symbols. |

Continues on next page



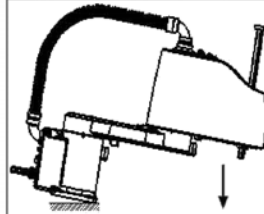


1 Safety

1.2.2 Safety symbols on manipulator labels

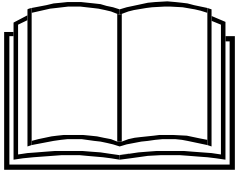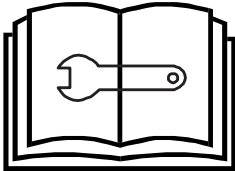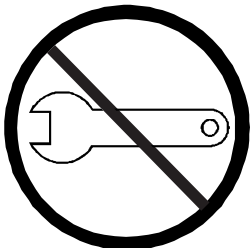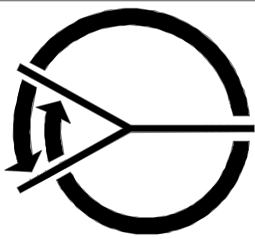Continued

| Symbol | Description |
|---|---|
|  xx0900000813 | See user documentation Read user documentation for details. Which manual to read is defined by the symbol: <ul style="list-style-type: none">No text: <i>Product manual</i>. |
|  xx0900000816 | Before disassembly, see product manual |
|  xx0900000815 | Do not disassemble Disassembling this part can cause injury. |
|  xx0900000814 | Extended rotation This axis has extended rotation (working area) compared to standard. |
|  xx0900000808 | Brake release Pressing this button will release the brakes. This means that the robot arm can fall down. |

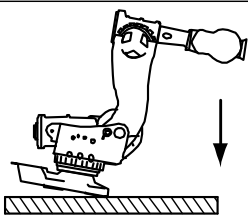Continues on next page






| Symbol | Description |
|--|--|
|  xx0900000810 | Tip risk when loosening bolts The robot can tip over if the bolts are not securely fastened. |
|   3HAC 057068-001 | |
| xx1500002402 | |
|   xx0900000817 | Crush Risk of crush injuries. |

Continues on next page


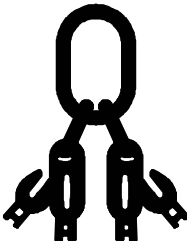




1 Safety

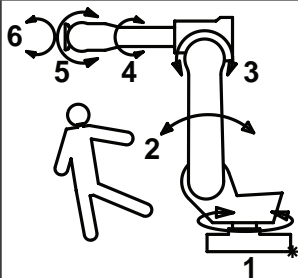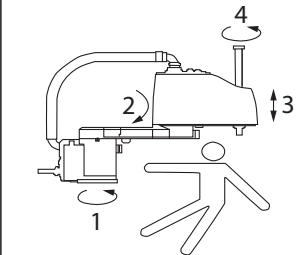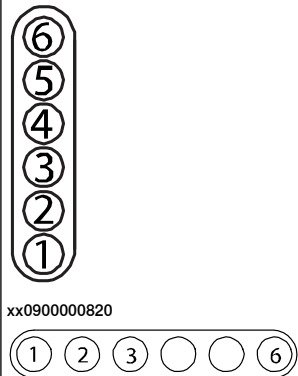1.2.2 Safety symbols on manipulator labels

Continued

| Symbol | Description |
|---|---|
|  xx0900000818  xx1300001087 | Heat Risk of heat that can cause burns. (Both signs are used) |
|  xx2400000736  xx1500002616 | Moving robot The robot can move unexpectedly. |
|  xx0900000820 xx1000001140 | Brake release buttons |

Continues on next page


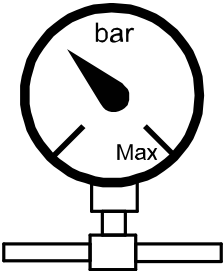
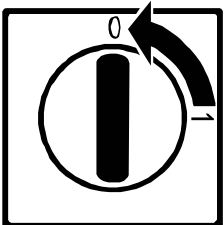

| Symbol | Description |
|---|--|
|  xx0900000821 | Lifting bolt |
|  xx1000001242 | Adjustable chain sling with shortener |
|  xx0900000822 | Lifting of robot |
| | Swivel eye bolt The exclamation mark indicates required usage of swivel eye bolts at the lifting points. |
|  xx0900000823 | Oil Can be used in combination with prohibition if oil is not allowed. |
|  xx0900000824 | Mechanical stop |
|  xx1000001144 | No mechanical stop |

Continues on next page

1 Safety

1.2.2 Safety symbols on manipulator labels

Continued

| Symbol | Description |
|---|--|
|  xx0900000825 | Stored energy Warns that this part contains stored energy. Used in combination with <i>Do not disassemble</i> symbol. |
|  xx0900000826 | Pressure Warns that this part is pressurized. Usually contains additional text with the pressure level. |
|  xx0900000827 | Shut off with handle Use the power switch on the controller. |
|  xx1400002648 | Do not step Warns that stepping on these parts can cause damage to the parts. |

1.3 Robot stopping functions

Protective stop and emergency stop

The protective stops and emergency stops are described in the product manual for the controller.

For more information see:

- *Product manual - OmniCore V250XT Type B*
- *Product manual - OmniCore V400XT*

1 Safety

1.4 Safety during installation and commissioning

1.4 Safety during installation and commissioning

National or regional regulations

The integrator of the robot system is responsible for the safety of the robot system.

The integrator is responsible that the robot system is designed and installed in accordance with the safety requirements set forth in the applicable national and regional standards and regulations.

The integrator of the robot system is required to perform a risk assessment.

Layout

The robot integrated to a robot system shall be designed to allow safe access to all spaces during installation, operation, maintenance, and repair.

If robot movement can be initiated from an external control panel then an emergency stop must also be available.

If the manipulator is delivered with mechanical stops, these can be used for reducing the working space.

A perimeter safeguarding, for example a fence, shall be dimensioned to withstand the following:

- The force of the manipulator.
- The force of the load handled by the robot if dropped or released at maximum speed.
- The maximum possible impact caused by a breaking or malfunctioning rotating tool or other device fitted to the robot.

The maximum TCP speed and the maximum velocity of the robot axes are detailed in the section *Robot motion* in the product specification for the respective manipulator.

Consider exposure to hazards, such as slipping, tripping, and falling.

Hazards due to the working position and posture for a person working with or near the robot shall be considered.

Hazards due to noise emission from the robot needs to be considered.

Consider hazards from other equipment in the robot system, for example, that guards remain active until identified hazards are reduced to an acceptable level.

Allergenic material

See [Environmental information on page 188](#) for specification of allergenic materials in the product, if any.

Securing the robot to the foundation

The robot must be properly fixed to its foundation/support, as described in the respective product manual.

When the robot is installed at a height, hanging, or other than mounted directly on the floor, there will be additional hazards.

Continues on next page

Using lifting accessories and other external equipment

Ensure that all equipment used during installation, service and all handling of the robot are in correct condition for the intended use.

Electrical safety

Incoming mains must be installed to fulfill national regulations.

The power supply wiring to the robot must be sufficiently fused and if necessary, it must be possible to disconnect it manually from the mains power.

The power to the robot must be turned off with the main switch and the mains power disconnected when performing work inside the controller cabinet. Lock and tag shall be considered.

Harnesses between controller and manipulator shall be fixed and protected to avoid tripping and wear.

Wherever possible, power on/off or rebooting the robot controller shall be performed with all persons outside the safeguarded space.

**Note**

Use a CARBON DIOXIDE (CO₂) extinguisher in the event of a fire in the robot.

Safety devices

The integrator is responsible for that the safety devices necessary to protect people working with the robot system are designed and installed correctly.

When integrating the robot with external devices to a robot system:

- The integrator of the robot system must ensure that emergency stop functions are interlocked in accordance with applicable standards.
- The integrator of the robot system must ensure that safety functions are interlocked in accordance with applicable standards.

Other hazards

A robot may perform unexpected limited movement.

**WARNING**

Manipulator movements can cause serious injuries on users and may damage equipment.

The risk assessment should also consider other hazards arising from the application, such as, but not limited to:

- Water
- Compressed air
- Hydraulics

End-effector hazards require particular attention for applications which involve close human collaboration with the robot.

Continues on next page

1 Safety

1.4 Safety during installation and commissioning

Continued

Pneumatic or hydraulic related hazards



Note

The pressure in the complete pneumatic or hydraulic systems must be released before service and maintenance.

All components in the robot system that remain pressurized after switching off the power to the robot must be marked with clearly visible drain facilities and a warning sign that indicates the hazard of stored energy.

Loss of pressure in the robot system may cause parts or objects to drop.

Dump valves should be used in case of emergency.

Shot bolts should be used to prevent tools, etc., from falling due to gravity.

All pipes, hoses, and connections have to be inspected regularly for leaks and damage. Damage must be repaired immediately.

Safety measures for arc welding

The following points should be observed:

- Consider the welding robot equipment as a single unit.
- Do not mix up the phase and grounding conductors when connecting the equipment to the main supply.
- The workpiece, fixtures, and positioner are usually in direct contact with the welding circuit, and should therefore be regarded as live.
- Do not touch live parts of the equipment with your bare hands or with damp gloves.
- The welding circuit shall not be grounded without necessary measures being taken to ensure proper functioning of the grounding conductor.
- The welding circuit must not be broken during the welding process.



WARNING

The welding wire is live during the welding process even before the arc is ignited.

Personal protective equipment

Use personal protective equipment, based on the risk assessment for the robot system.

Do not wear loose-fitting garments or belts, bracelets, etc., that can become entangled in the robot or positioner. Always use the prescribed personal protective equipment.

Welding fumes and any gases formed or used when welding can be dangerous to inhale.

Verify the safety functions

Before the robot system is put into operation, verify that the safety functions are working as intended and that any remaining hazards identified in the risk assessment are mitigated to an acceptable level.

1.5 Safety during operation

Automatic operation

Verify the application in the operating mode manual reduced speed, before changing mode to automatic and initiating automatic operation.

Unexpected movement of robot arm



WARNING

Hazards due to the use of brake release devices and/or gravity beneath the manipulator shall be considered.

A robot may perform unexpected limited movement.



WARNING

Manipulator movements can cause serious injuries on users and may damage equipment.

1 Safety

1.6.1 Safety during maintenance and repair

1.6 Safety during maintenance and repair

1.6.1 Safety during maintenance and repair

General

Corrective maintenance must only be carried out by personnel trained on the robot. Maintenance or repair must be done with all electrical, pneumatic, and hydraulic power switched off, that is, no remaining hazards.

Hazards due to stored mechanical energy in the manipulator for the purpose of counterbalancing axes must be considered before maintenance or repair.

Never use the robot as a ladder, which means, do not climb on the controller, manipulator, including motors, or other parts. There are hazards of slipping and falling. The robot might be damaged.


Make sure that there are no tools, loose screws, turnings, or other unexpected parts remaining after maintenance or repair work.

When the work is completed, verify that the safety functions are working as intended.

Hot surfaces

Surfaces can be hot after running the robot, and touching these may result in burns. Allow the surfaces to cool down before maintenance or repair.

Allergic reaction

| Warning | Description | Elimination/Action |
|--|---|---|
|  Allergic reaction | When working with lubricants there is a risk of an allergic reaction. | Make sure that protective gear like goggles and gloves are always worn. |


Gearbox lubricants (oil or grease)

When handling oil, grease, or other chemical substances the safety information of the respective manufacturer must be observed.










Note

Take special care when handling hot lubricants.

| Warning | Description | Elimination/Action |
|--|--|--|
|  Hot oil or grease | Changing and draining gearbox oil or grease may require handling hot lubricant heated up to 90 °C. | Make sure that protective gear like goggles and gloves are always worn during this activity. |

Continues on next page


| Warning | Description | Elimination/Action |
|--|---|---|
|  Allergic reaction | When working with lubricants there is a risk of an allergic reaction. | Make sure that protective gear like goggles and gloves are always worn. |
|  Possible pressure build-up in gearbox | When opening the oil or grease plug, there may be pressure present in the gearbox, causing hot lubricant to spray from the opening. | Open the plug carefully and keep away from the opening. Do not overfill the gearbox when filling. Put oil absorbent cloth, bags or paper at appropriate locations to catch any oil residues. Use appropriate protective gear such as heat-resistant gloves, goggles/protective visor, or a body suit if necessary. |
|  Do not overfill | Overfilling of gearbox lubricant can lead to internal over-pressure inside the gearbox which in turn may: <ul style="list-style-type: none"> • damage seals and gaskets • completely press out seals and gaskets • prevent the robot from moving freely. | Make sure not to overfill the gearbox when filling it with oil or grease. After filling, verify that the level is correct. |
|  Do not mix types of oil | Mixing types of oil may cause severe damage to the gearbox. | When filling gearbox oil, do not mix different types of oil unless specified in the instructions. Always use the type of oil specified for the product. |
|  Oil residues | Oil residues might be present in a drained gearbox and spilled when separating a motor and gearbox during repair. | Make sure that protective gear like goggles/protective visor, gloves and arm protection are always worn during this activity. Put oil absorbent cloth, bags or paper at appropriate locations to catch any oil residues. |
|  Heat up the oil | Warm oil drains quicker than cold oil. | Run the robot before changing the gearbox oil, if possible. |
|  Specified amount depends on drained volume | The specified amount of oil or grease is based on the total volume of the gearbox. When changing the lubricant, the amount refilled may differ from the specified amount, depending on how much has previously been drained from the gearbox. | After filling, verify that the level is correct. |

Continues on next page

1 Safety

1.6.1 Safety during maintenance and repair

Continued

| Warning | Description | Elimination/Action |
|---|--|--------------------|
|  Contaminated oil in gearboxes | For lifetime reasons always drain as much oil as possible from the gearbox. The magnetic oil plugs will gather residual metal chips. | |

Hazards related to batteries

Under rated conditions, the electrode materials and liquid electrolyte in the batteries are sealed and not exposed to the outside.

There is a hazard in case of abuse (mechanical, thermal, electrical) which leads to the activation of safety valves and/or the rupture of the battery container. As a result under certain circumstances, electrolyte leakage, electrode materials reaction with moisture/water or battery vent/explosion/fire may follow.

Do not short circuit, recharge, puncture, incinerate, crush, immerse, force discharge or expose to temperatures above the declared operating temperature range of the product. Risk of fire or explosion.

Operating temperatures are listed in [Operating conditions on page 50](#).

See safety instructions for the batteries in *Material/product safety data sheet - Battery pack (3HAC043118-001)*.

Unexpected movement of robot arm



WARNING

Hazards due to the use of brake release devices and/or gravity beneath the manipulator shall be considered.

A robot may perform unexpected limited movement.



WARNING

Manipulator movements can cause serious injuries on users and may damage equipment.

Related information

See also the safety information related to installation and operation.

1.6.2 Brake testing

When to test

During operation, the holding brake of each axis normally wears down. A test can be performed to determine whether the brake can still perform its function.

How to test

The function of the holding brake of each axis motor may be verified as described below:

- 1 Run each axis to a position where the combined weight of the manipulator and any load is maximized (maximum static load).
- 2 Switch the motor to the MOTORS OFF.
- 3 Inspect and verify that the axis maintains its position.

If the manipulator does not change position as the motors are switched off, then the brake function is adequate.



Note

It is recommended to run the service routine *BrakeCheck* as part of the regular maintenance, see the operating manual for the robot controller.

For robots with the option SafeMove, the *Cyclic Brake Check* routine is recommended. See the manual for SafeMove in [References on page 10](#).

1 Safety

1.7 Safety during troubleshooting

1.7 Safety during troubleshooting

General

When troubleshooting requires work with power switched on, special considerations must be taken:

- Safety circuits might be muted or disconnected.
- Electrical parts must be considered as *live*.
- The manipulator can move unexpectedly at any time.



DANGER

Troubleshooting on the controller while powered on must be performed by personnel trained by ABB or by ABB field engineers.



CAUTION

Risk of hot surfaces that can cause burns.

A risk assessment must be done to address both robot and robot system specific hazards.



WARNING

Hazards due to the use of brake release devices and/or gravity beneath the manipulator shall be considered.

A robot may perform unexpected limited movement.



WARNING

Manipulator movements can cause serious injuries on users and may damage equipment.

Related information

See also the safety information related to installation, operation, maintenance, and repair.

1.8 Safety during decommissioning

General

See section [Decommissioning on page 187](#).

If the robot is decommissioned for storage, take extra precaution to reset safety devices to delivery status.

Unexpected movement of robot arm



WARNING

Hazards due to the use of brake release devices and/or gravity beneath the manipulator shall be considered.

A robot may perform unexpected limited movement.



WARNING

Manipulator movements can cause serious injuries on users and may damage equipment.

This page is intentionally left blank

2 System description

2.1 IRP positioner

2.1.1 Positioner overview

Positioner

A positioner is used to position work pieces optimally for welding joints and robots. The positioner is equipped with maintenance-free AC motors with electro-magnetic brakes.

The letter in the positioner name indicates the positioner type and the number indicates its maximum handling capacity in Kg.

Movement without drive power


There are no brake release buttons on the positioners to use in an emergency situation. Due to positioner kinematics and payload, releasing the brake can cause additional hazards. This needs to be considered while doing a risk assessment of the complete installation. If a brake release function is needed, then this shall be solved by the integrator.

In order to rescue a trapped person, a suitable device should be used to overcome motor brake force such as a crane, a forklift, a jack, etc.

Axis limiting

There are no adjustable mechanical stops on the IRP. This needs to be considered while doing a risk assessment of the complete installation.



Positioner models
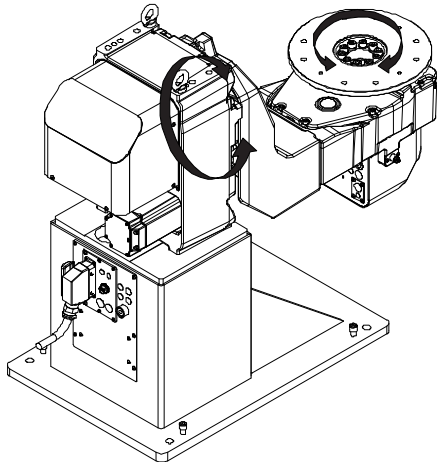
| Positioner type | Illustration |
|--|--|
| A: <ul style="list-style-type: none"> • 250 • 500 • 750 |  <p>xx0900000830</p> |




Continues on next page

2 System description

2.1.1 Positioner overview
Continued
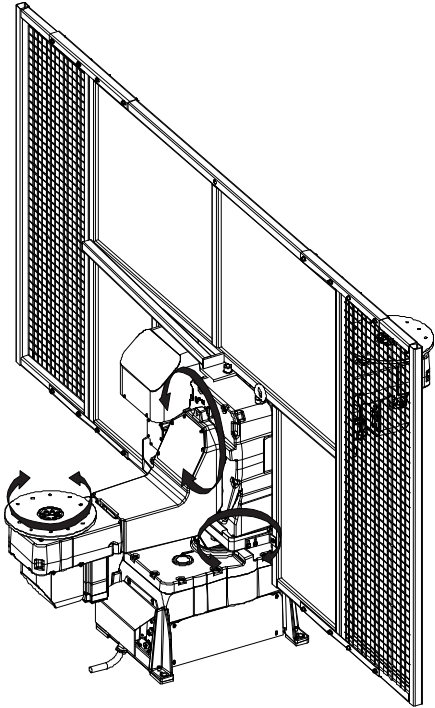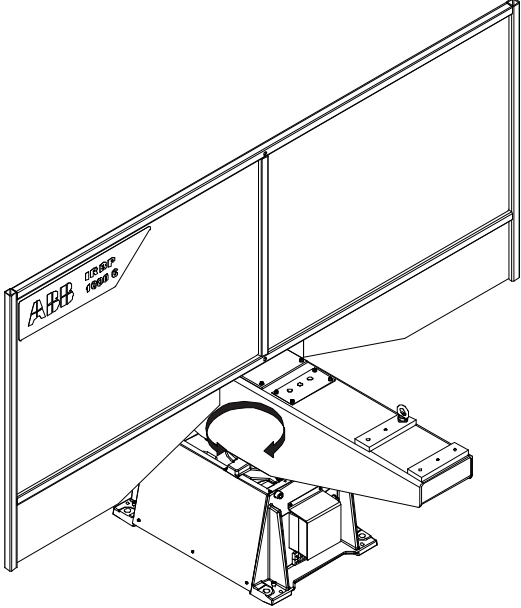
| Positioner type | Illustration |
|--|--|
| B: <ul style="list-style-type: none">• 250• 500• 750 |  <p>xx0900000840</p> |
| C: <ul style="list-style-type: none">• 500• 1000 |  <p>xx0900000846</p> |

Continues on next page
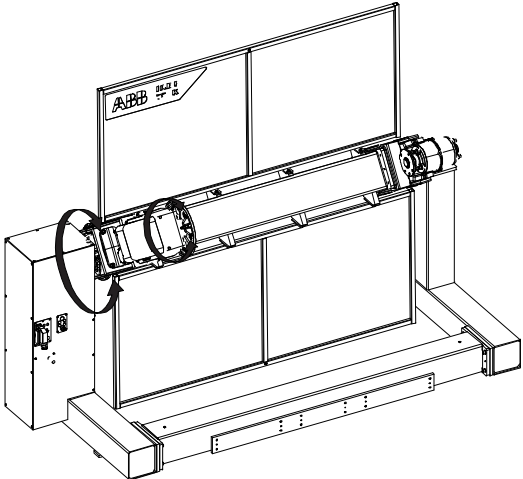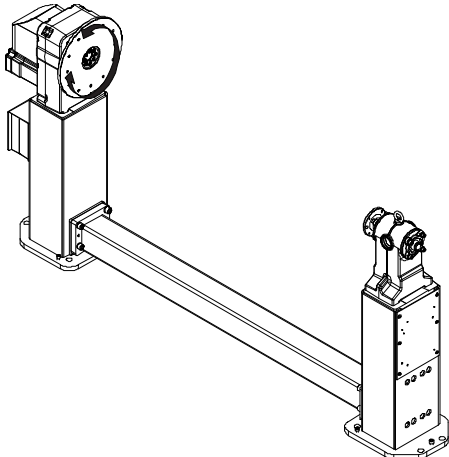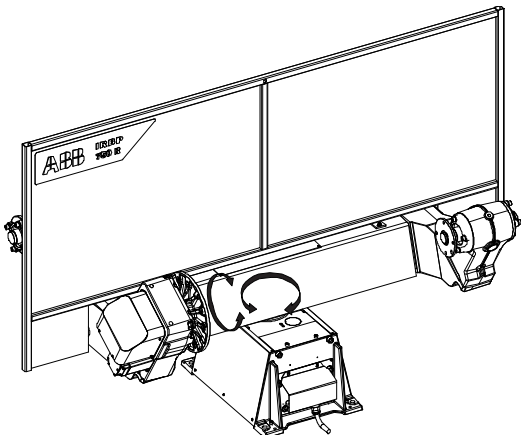
| Positioner type | Illustration |
|---|--|
| <div>K:<ul style="list-style-type: none">• 300• 600• 1000</div> | <div><p>xx0900000832</p></div> |
| <div>L:<ul style="list-style-type: none">• 300• 600• 1000• 2000• 5000</div> | <div><p>xx0900000845</p></div> |
| <div>R:<ul style="list-style-type: none">• 300• 600• 1000</div> | <div><p>xx0900000838</p></div> |

2 System description

2.1.2 Station interchange unit MID


2.1.2 Station interchange unit MID

Station interchange unit componets

The station interchange unit MID is a modular unit specifically developed for robot applications and is intended for indexed movement.

Station interchange unit MID 2.1

The station interchange unit for two stations consists of the following:

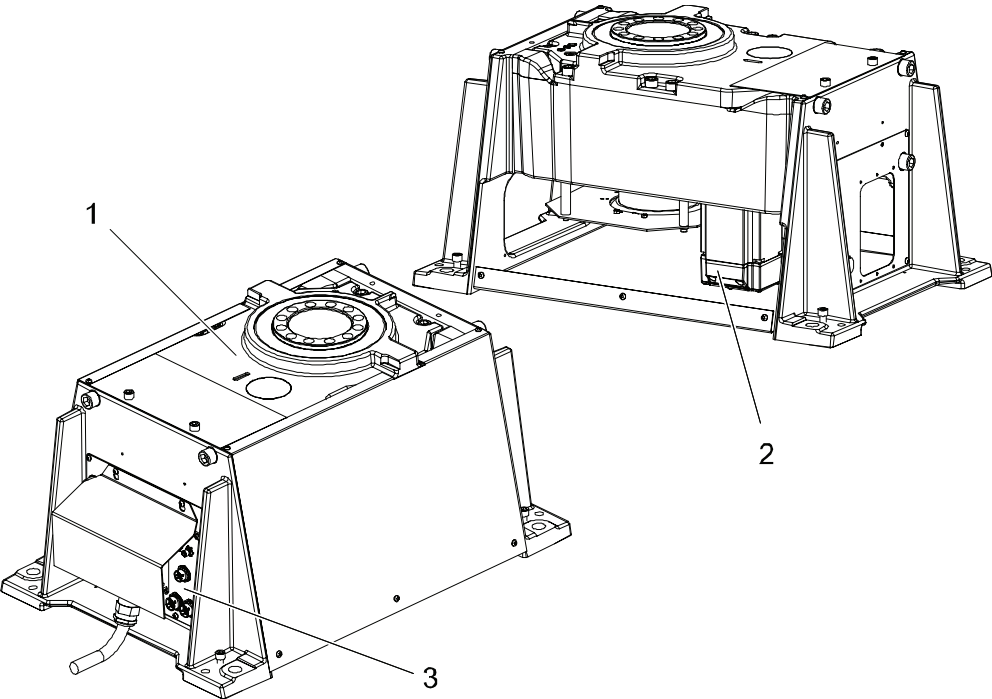


xx2300001925

| | |
|---|---|
| 1 | Gear drive |
| 2 | AC servo motor with integrated resolver and brake |
| 3 | Connection panel |

Continues on next page

Station interchange unit MID 1.1

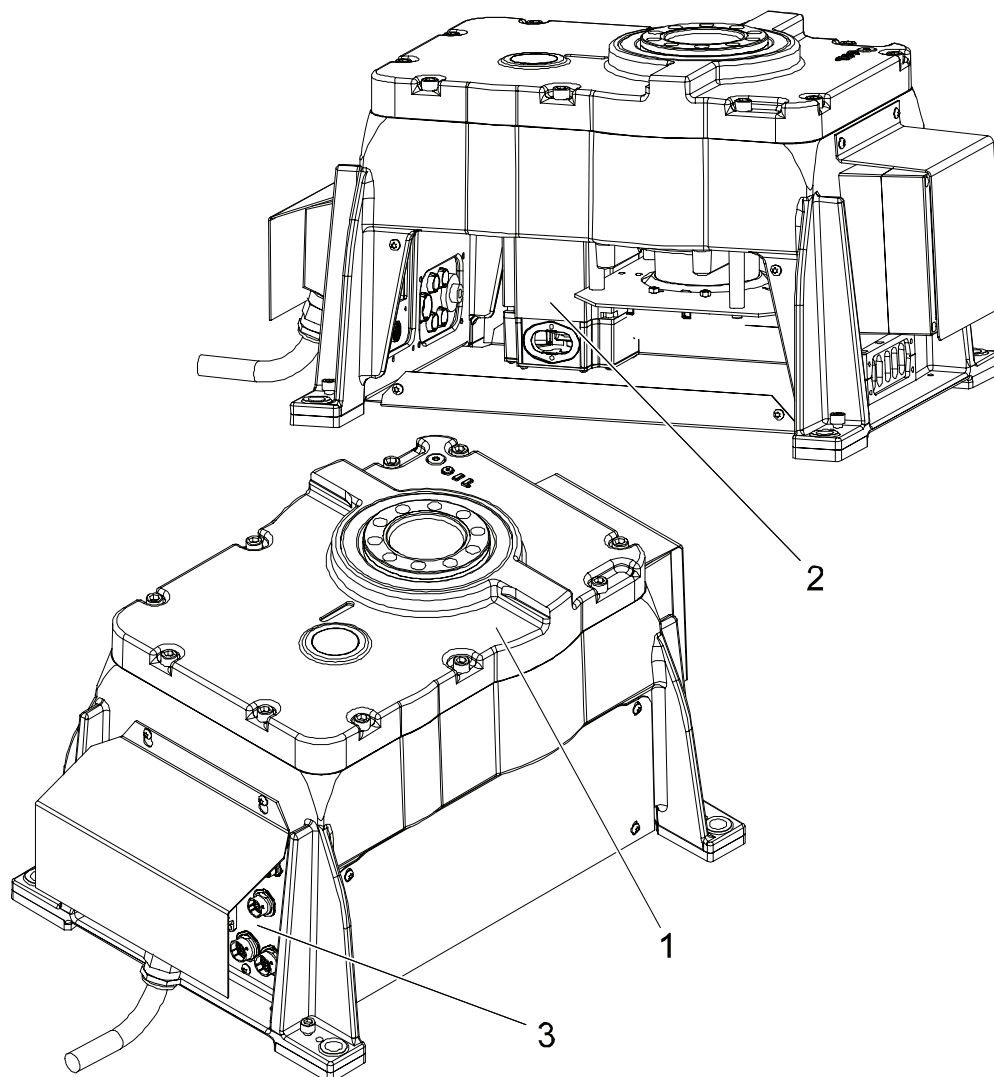

xx2300001928

| | |
|---|---|
| 1 | Gear drive |
| 2 | AC servo motor with integrated resolver and brake |
| 3 | Connection panel |

2 System description

2.1.3 Rotary units


2.1.3 Rotary units

Rotary unit components

Overview

The rotary unit MTD is a modular unit, developed specifically for robot applications and is intended for positioning the workpiece.

MTD units

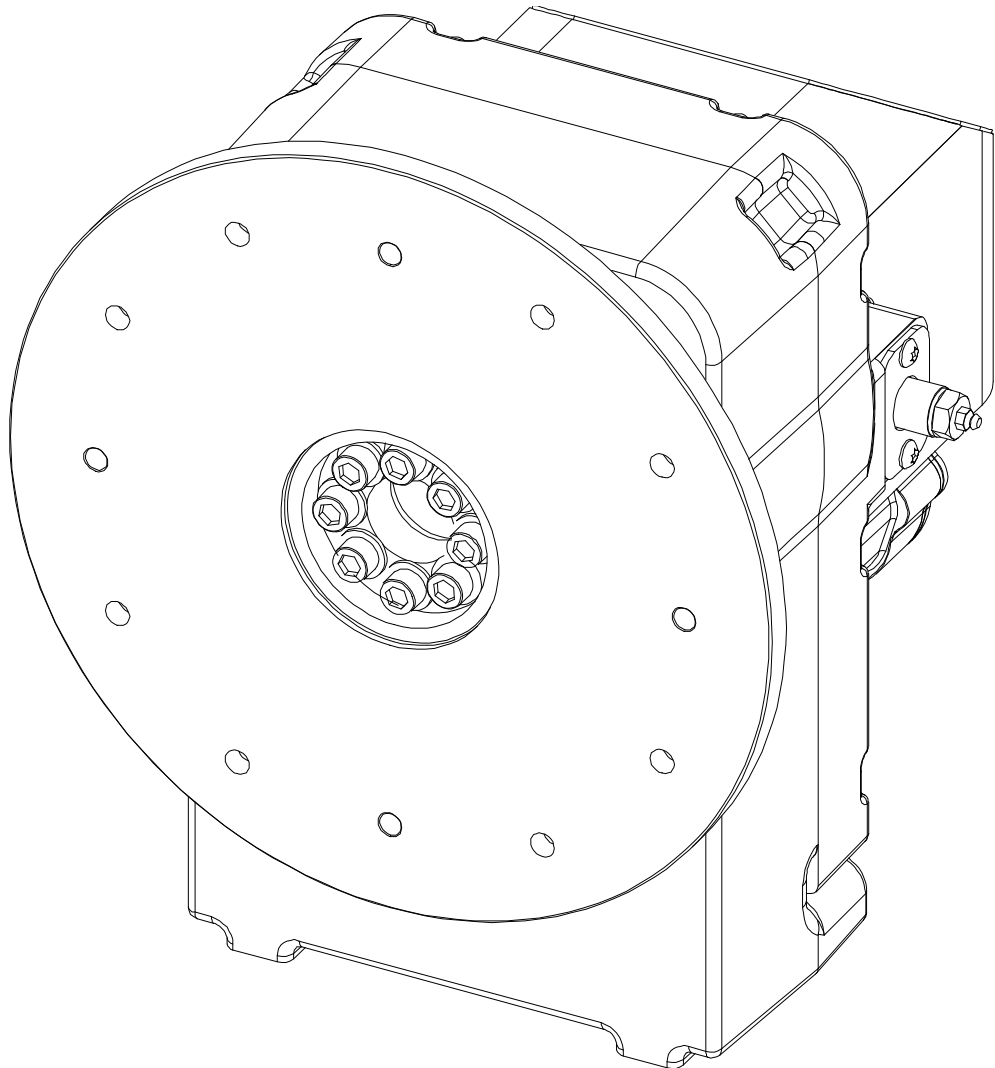

xx0900000843

| |
|-------------|
| MTD 250 |
| MTD 500/750 |
| MTD 2000 |
| MTD 5000 |

Components

The rotary unit consists of the following components.

Continues on next page

Gearbox MTD

The gearbox is a precision gear drive specifically developed to withstand the high demands placed on robot applications, among others, rigidity and torsional strength, speed and accuracy. The gearbox is virtually free of play and never needs to be adjusted; conforming to requirements during its entire life. The gearbox is maintenance free and the lubricant is sufficient for the gearbox's entire life, equivalent to 40000 hours of operation.

Current collector

The function of the current collector is to transfer the weld current through the rotary unit. This takes place through a spring-loaded contact bar against the shaft. The contact bar needs to be lubricated after approximately 400 hours of operation. This should be done using a special grease, article number 501 869-001.

AC servo motor

The AC-servo motor is a permanent magnetized 3-phase AC motor and runs smoothly throughout the entire speed range. The motor is equipped with high-grade permanent magnets that are marginally affected by the temperature. The motor has a resolver for motor feedback and position indication. The motor is equipped with a brake for locking into a position when the rotary unit is not actuated and to provide braking with an emergency or operating stop. **This brake is not an operating brake.** This means that with normal operations the FlexPendant or the operator's panel are to be used to stop. The motor is grounded and electrically insulated from other parts in order to prevent the weld current from being conducted through the motor's protective conductor in the event of a malfunction. The motor is maintenance free.


2 System description

2.1.4 Support collar

2.1.4 Support collar

Components

The support collar allows axial movement during rotation.

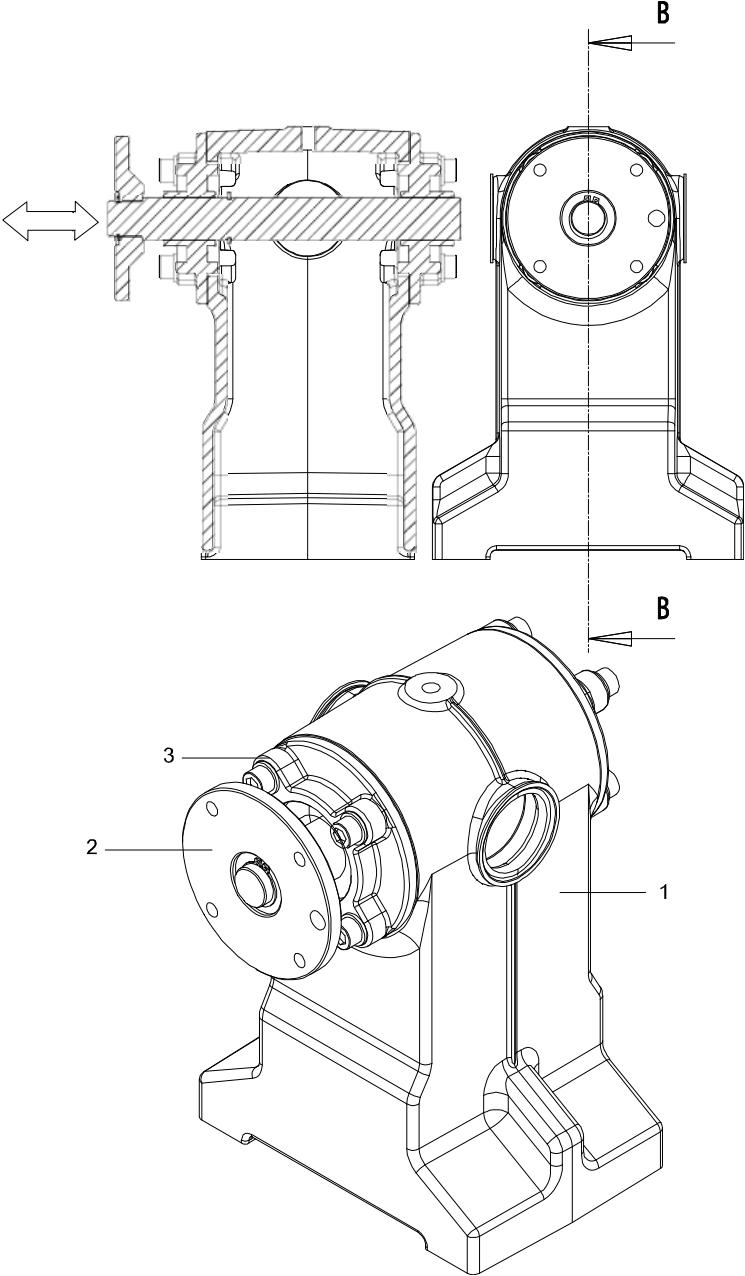


xx0900000844

| | |
|---|---|
| 1 | Support collar |
| 2 | Shaft with the mounting flange |
| 3 | Flange bearing with spherical bearing position. |

2.2 Customer options


2.2.1 Optional swivels

Air swivel, 1 channel

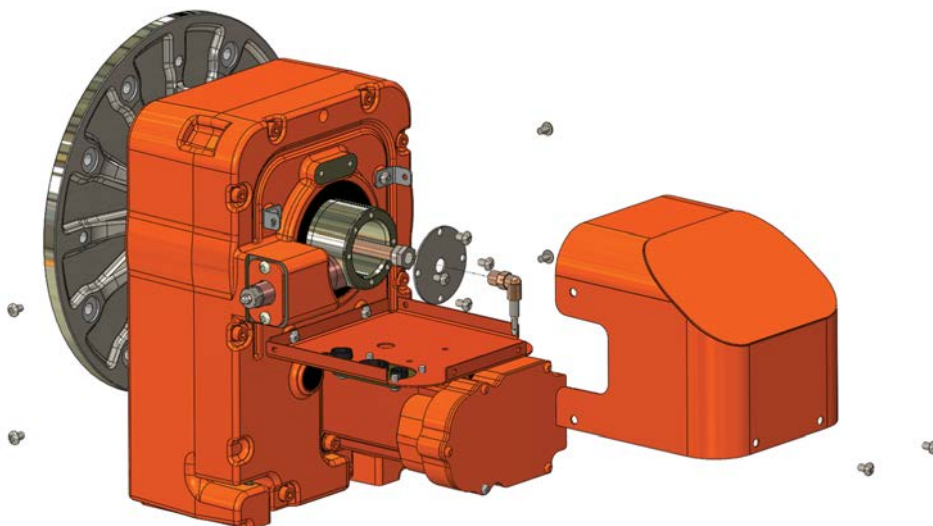

xx1000000177

Air swivel, 2 channel

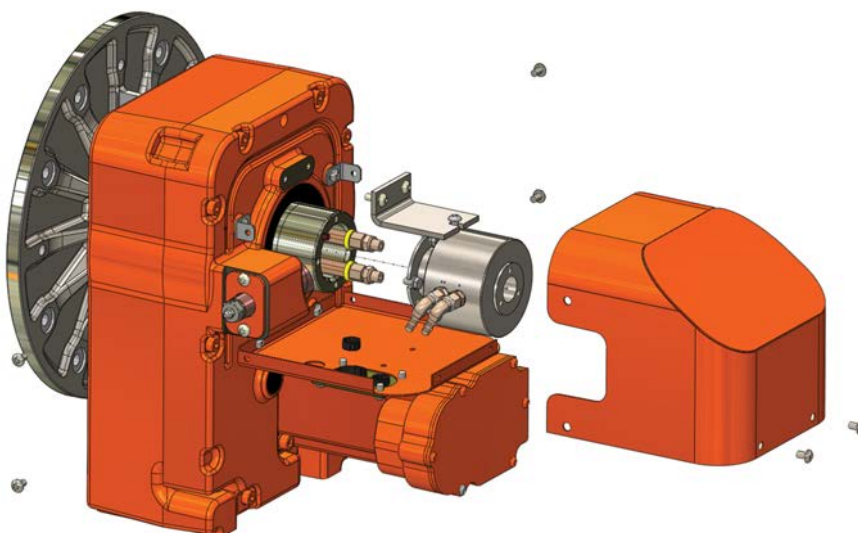

xx1000000179


Continues on next page

2 System description

2.2.1 Optional swivels


Continued

Electrical swivel

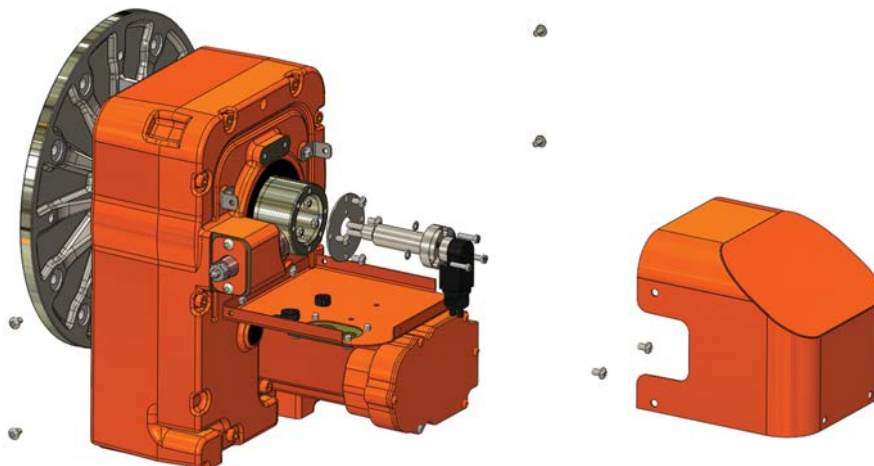

xx1000000178

Air swivel, 1 channel and 1 electrical channel

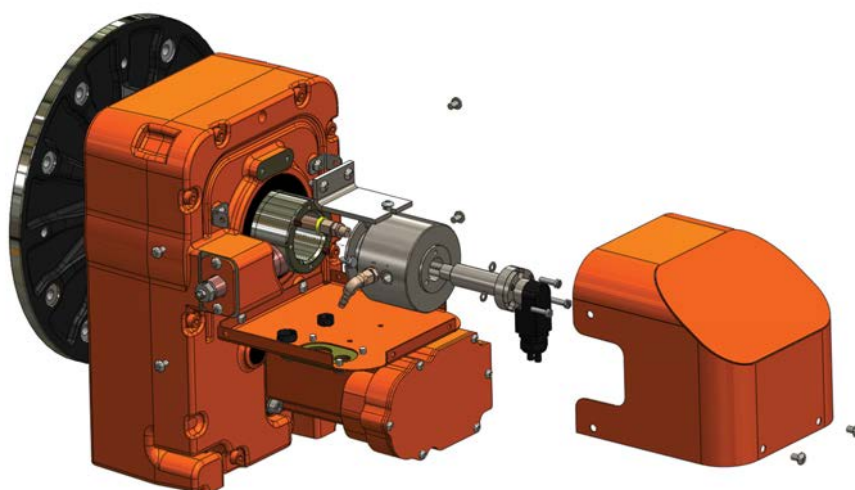

xx1000000180

3 Installation and commissioning

3.1 Introduction to installation and commissioning

General

This chapter contains assembly instructions and information for installing the IRP at the working site.

See also the product manual for the robot controller.

The installation must be done by qualified installation personnel in accordance with the safety requirements set forth in the applicable national and regional standards and regulations.

Safety information

Before any installation work is commenced, all safety information must be observed. There are general safety aspects that must be read through, as well as more specific safety information that describes the danger and safety risks when performing the procedures. Read the chapter [Safety on page 15](#) before performing any installation work.



Note

Always connect the IRP and the robot to protective earth and residual current device (RCD) before connecting to power and starting any installation work.

For more information see:

- *Product manual - OmniCore V250XT Type B*
- *Product manual - OmniCore V400XT*

3 Installation and commissioning

3.2 Installation and set-up

3.2 Installation and set-up



WARNING

This work must only be carried out by persons trained in the complete installation, who are aware of the particular risks associated with its different parts.



CAUTION

Caution must be observed. All work carried out on the system shall be done professionally and conform to the applicable safety regulations.

Transport and unpacking



WARNING

The safety instructions and other instructions should be studied carefully before initiating transport and unpacking of the safety equipment. These can be found under a separate tab in the System Manual.

Unpacking

- Check that the equipment is not damaged in any way.
- Report any visible transport damage immediately.

Lifting instructions

Lifting of the safety equipment must only:

- be carried out using equipment that corresponds with the applicable lifting standards.
- be carried out by authorized personnel.



Note

Lifting eyes (standard as well as with swivel) are not delivered with the positioner. Use lifting eyes and/or swiveled lifting eyes in the proper positions as described in the lifting instructions for each positioner. Always use lifting eyes with the correct lifting capacity according to the part being lifted.



WARNING

Do not walk under a suspended load!

3.3 Unpacking and handling

3.3.1 Pre-installation procedure

General

This section is intended for use when unpacking and installing the IRP system for the first time. It also contains information useful during later re-installation of the IRP system.

Checking the pre-requisites for installation

The checklist below details what must be observed before proceeding with the actual installation of the positioner system:

| | Action |
|---|---|
| 1 | Make sure only qualified installation personnel conforming to all national and local codes are allowed to perform the installation. |
| 2 | Visually inspect the robot to make sure it is not damaged. |
| 3 | Make sure the lifting accessory used is suitable to handle the weight of the system units. |
| 4 | If the positioner system is not installed directly, it must be stored. |
| 5 | Before taking the positioner system to its installation site, make sure the foundation conforms to the requirements. |
| 6 | Before moving the positioner system, please observe and read the sections regarding lifting of the positioner system. |
| 7 | When these prerequisites are met, the positioner system may be taken to its installation site: |

Requirements, foundation

The positioner requires a good foundation and/or a concrete floor with strength according to standard C20/25 or better according to ENV 206. If necessary, use shims under the foundation of the positioner to avoid alignment problem. The bolts can be either anchor or chemical type. For more detailed information regarding installation please see section [Forces on foundation on page 58](#).

Storage conditions

The table below shows the allowed storage conditions for the robot:

| Parameter | Value |
|---|----------------------------------|
| Min. ambient temperature | -25° C |
| Max. ambient temperature | +55° C |
| Max. ambient temperature (less than 24 h) | +70° C |
| Max. ambient humidity | Max. 95% at constant temperature |

Continues on next page

3 Installation and commissioning

3.3.1 Pre-installation procedure

Continued

Operating conditions

The table below shows the allowed operating conditions for the robot:

| Parameter | Value |
|--------------------------|----------------------------------|
| Min. ambient temperature | +5° C 0° C ¹⁾ |
| Max. ambient temperature | +50° C ¹⁾ |
| Max. ambient humidity | Max. 95% at constant temperature |

¹⁾ At cold start (0° C - 5° C), see note in the product specification on how to warm up the robot.

Protection classes

The table below shows the protection class of the manipulators:

| Equipment | Protection class |
|-------------------|------------------|
| Manipulator IRP A | IP 42 |
| Manipulator IRP B | IP 42 |
| Manipulator IRP C | IP 42 |
| Manipulator IRP L | IP 65 |
| Manipulator IRP K | IP 42 |
| Manipulator IRP R | IP 42 |

3.3.2 Lifting the positioner

Actions before lifting

See section [Lifting instructions on page 201](#) before lifting.



Note

Lifting eyes (standard as well as with swivel) are not delivered with the IRP. Use lifting eyes and/or lifting eyes with swivel in the proper positions as described in the lifting instructions for each IRP. Always use lifting eyes with the correct lifting capacity according to the part being lifted.



WARNING

Always lift the manipulator in a safe manner, using lifting tools according to the specified lifting weight in section *Lifting weight*.



WARNING

Do not walk under a suspended load!



WARNING

In order to prevent damage, only use the pre-mounted lifting eyes.

Lifting weight

The table below shows the minimum and maximum weights of the different IRP models, for exact weight see the silver tags on the manipulator:

Weight IRP

| Type | Handling weight/kg | Weight min. | Weight max, kg |
|------|--------------------|-------------|----------------|
| A | 250 | | 470 |
| | 500 | | 870 |
| | 750 | | 870 |
| B | 250 | | 915 |
| | 500 | | 1,750 |
| | 750 | | 1,750 |
| C | 500 | | 380 |
| | 1000 | | 660 |

Continues on next page

3 Installation and commissioning


3.3.2 Lifting the positioner

Continued

| Type | Handling weight/kg | Weight min. | Weight max, kg |
|------|--------------------|-------------|----------------|
| L | 300 | 250 | 300 |
| | 600 | 465 | 515 |
| | 1000 | 465 | 515 |
| | 2000 | 700 | 740 |
| | 5000 | | |
| K | 300 | 1090 | 1,515 |
| | 600 | 1980 | 2,570 |
| | 1000 | 1980 | 2,570 |
| R | 300 | 620 | 645 |
| | 600 | 1285 | 1,380 |
| | 1000 | 1285 | 1,380 |

Continues on next page

Lifting type A

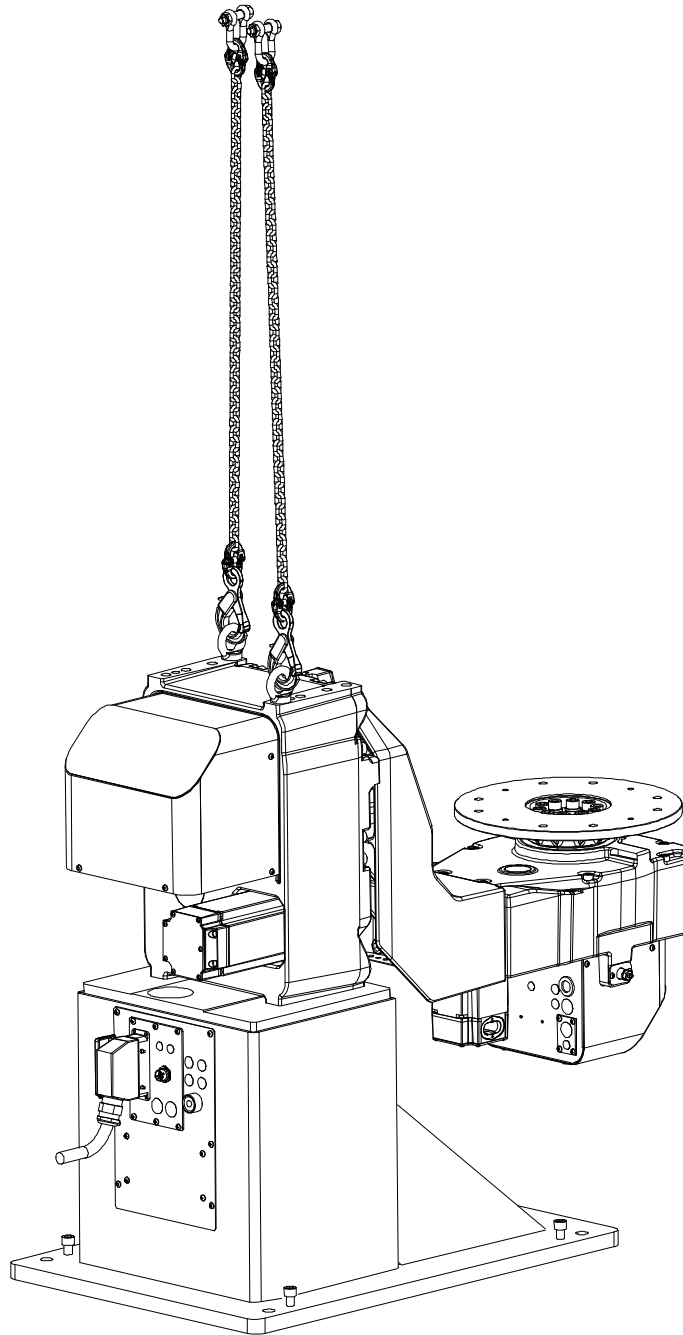

xx0900000897

Continues on next page

3 Installation and commissioning

3.3.2 Lifting the positioner

Continued


Lifting type B



xx1000000089

Continues on next page


Lifting type R, K

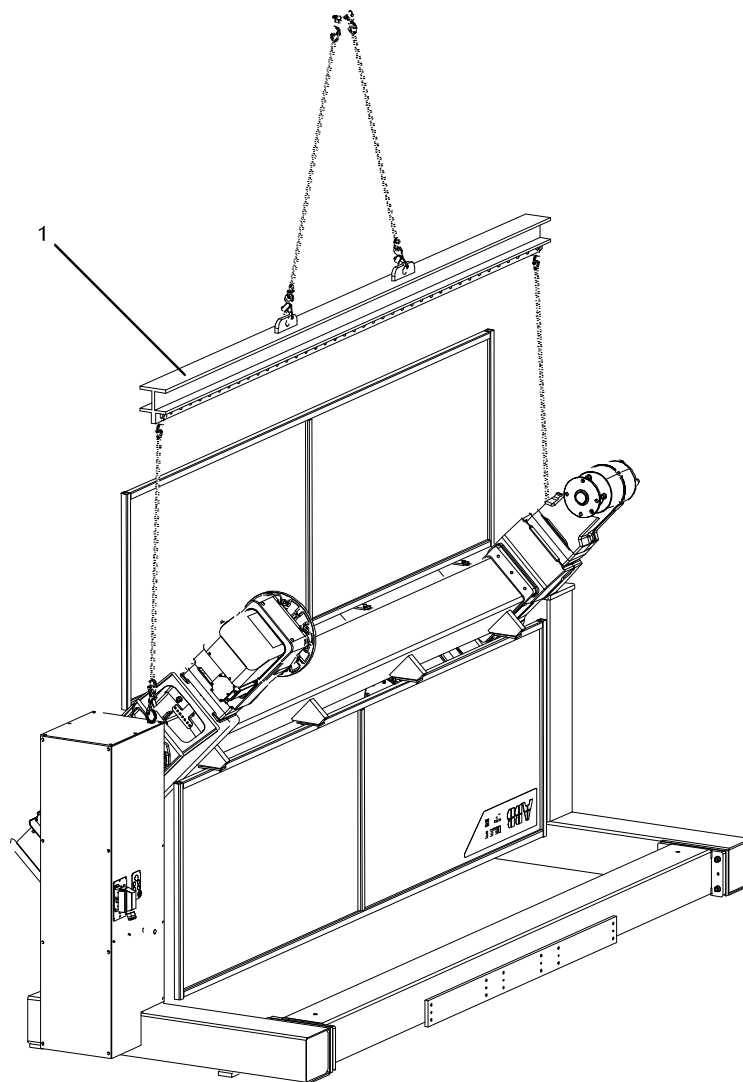

xx100000092

| | |
|---|----------------------|
| 1 | Lifting beam 4000 mm |
|---|----------------------|

Fitting the lifting eyes on IRP R

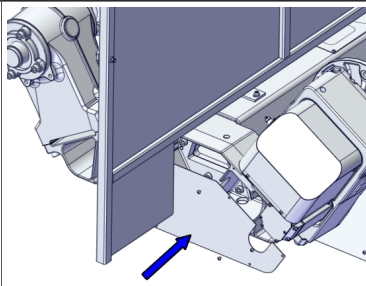
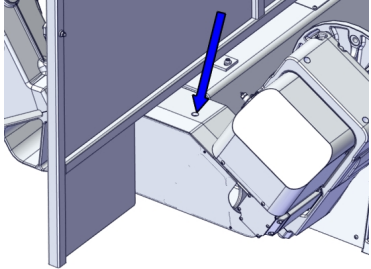
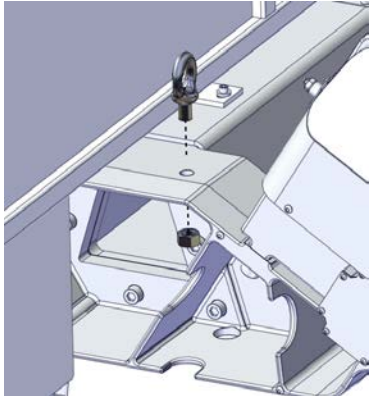
| | Action | Note |
|---|--|---|
| 1 | Remove the plates to get access to the lifting eye holes in the frame. |  <p>xx1700001322</p> |

Continues on next page

3 Installation and commissioning


3.3.2 Lifting the positioner

Continued

| | Action | Note |
|---|--|---|
| 2 | <p>Remove the protection plugs from the lifting eye holes.</p> <div data-bbox="475 387 533 443"></div> <p>Note</p> <p>Save the plugs for refit after installation.</p> |  <p>xx1700001324</p> |
| 3 | <p>Attach the lifting eyes.</p> | <p>2 pcs</p>  <p>xx1700001323</p> |

Continues on next page

Lifting type L

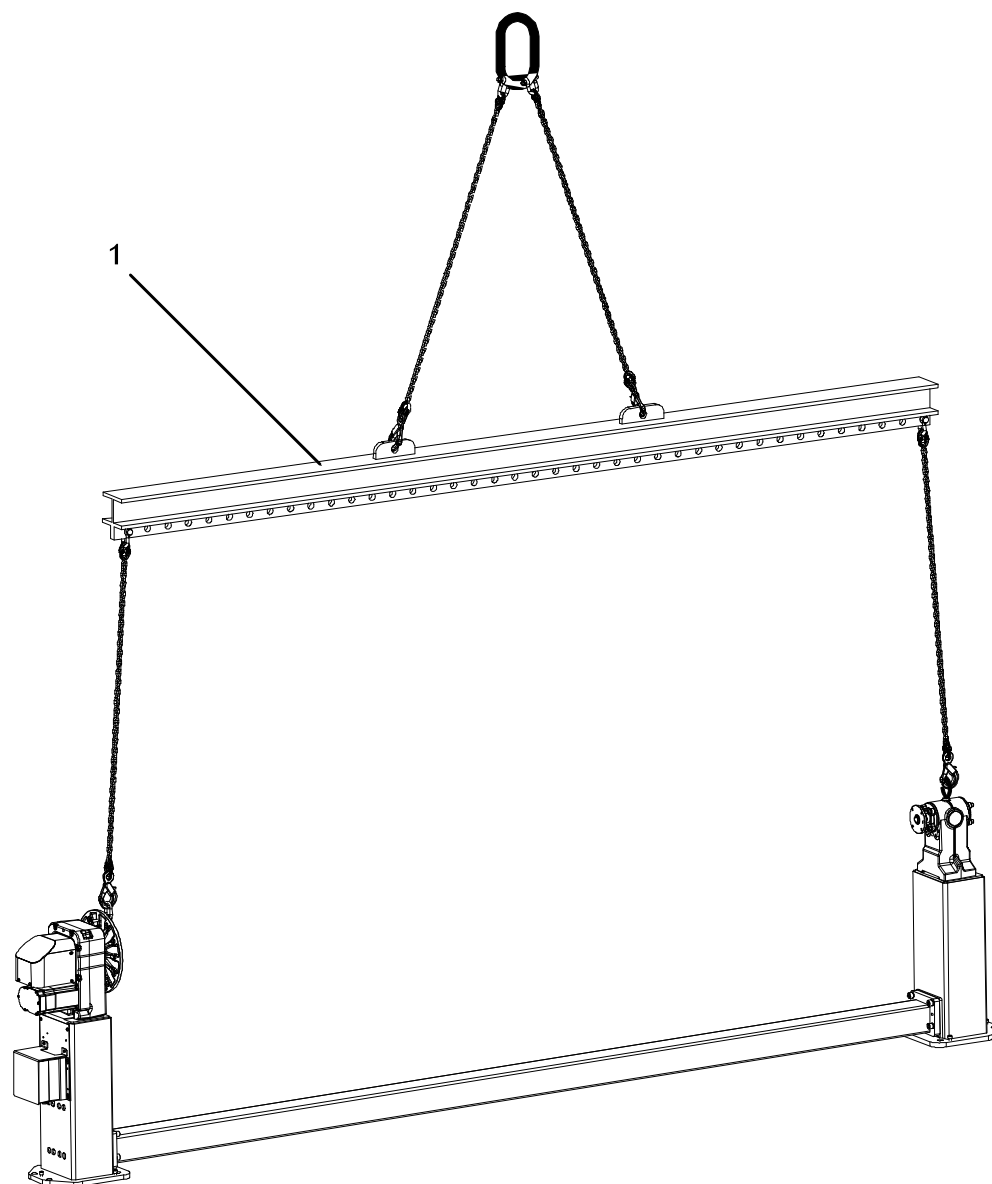

xx1000000093

| | |
|---|----------------------|
| 1 | Lifting beam 4000 mm |
|---|----------------------|

3 Installation and commissioning

3.3.3 Forces on foundation

3.3.3 Forces on foundation

Robustness

The foundation must withstand the static loads caused by the weight of the equipment, and the dynamic loads generated by the movement of the manipulator.

Incline


The foundation must be designed, so that the manipulator can be mounted without the incline exceeding 0.5 mm/m.

Maximum floor loads

When a floor mounting base (FMB) is used, then the floor load is the combined load from both the positioner and the robot. The forces are the sum of the maximum component for each direction.

Maximum floor loads in relation to the base coordinate system and indicated per each screw of the base on the positioner, see figure below.

Forces IRP A

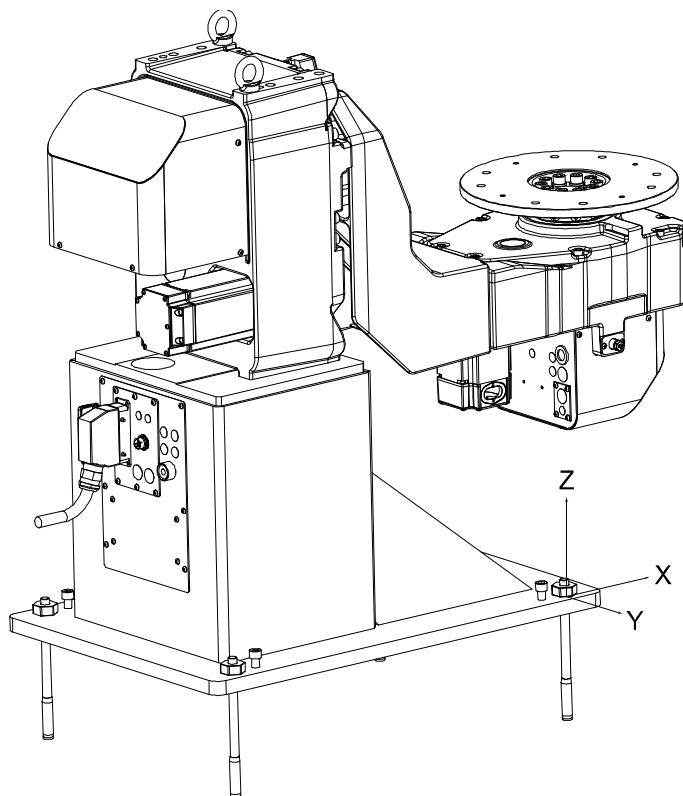

xx0900000907

| Rotation unit | Endurance load in operation (N) | | Max load at emergency stop (N) | | Screw dimension |
|---------------|---------------------------------|-------|--------------------------------|-------|-----------------|
| | Fxy | Fz | Fxy | Fz | |
| A-250 | 800 | 6300 | 1930 | 11500 | M16 |
| A-500 | 3300 | 12900 | 6700 | 23200 | M20 |

Continues on next page


3 Installation and commissioning

3.3.3 Forces on foundation

Continued

| Rotation unit | Endurance load in operation (N) | | Max load at emergency stop (N) | | Screw dimension |
|---------------|---------------------------------|-------|--------------------------------|-------|-----------------|
| | Fxy | Fz | Fxy | Fz | |
| A-750 | 4400 | 17200 | 9000 | 31000 | M20 |

Forces IRP K

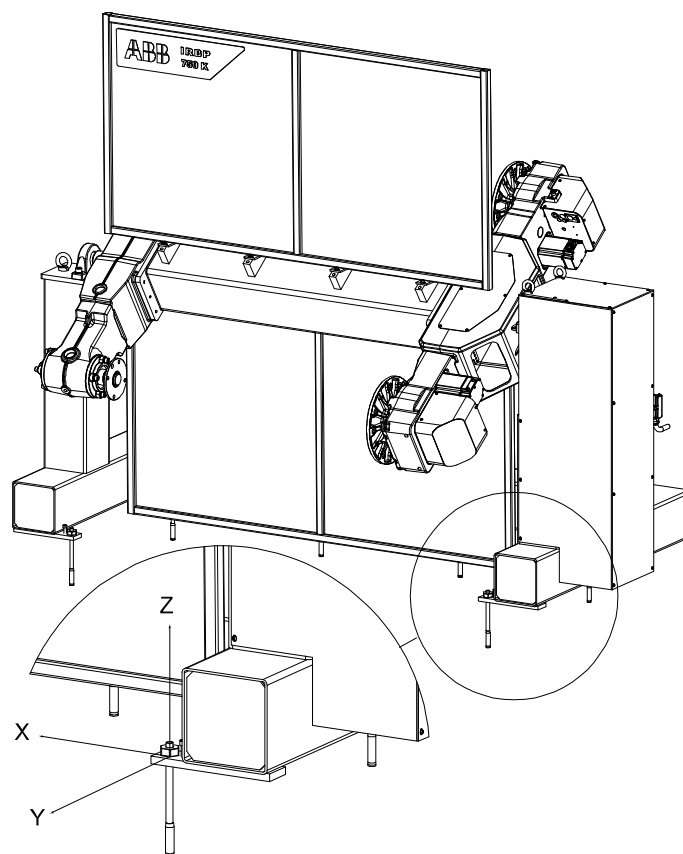

xx0900000906


| Rotation unit | Endurance load in operation (N) | | Max load at emergency stop (N) | | Screw dimension |
|---------------|---------------------------------|------|--------------------------------|-------|-----------------|
| | Fxy | Fz | Fxy | Fz | |
| K-300 | 1000 | 3100 | 1500 | 5000 | M20 |
| K-600 | 2000 | 7000 | 2000 | 10200 | M20 |
| K-1000 | 2000 | 7000 | 2000 | 10200 | M20 |

Continues on next page

3 Installation and commissioning

3.3.3 Forces on foundation
Continued

Forces IRP L

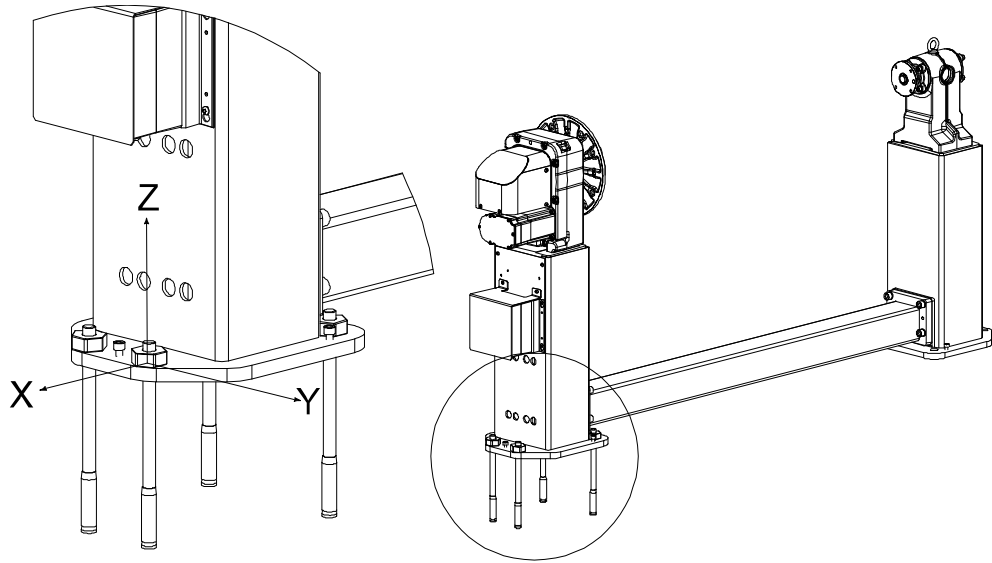


xx0900000909

| Rotation unit | Endurance load in operation (N) | | Max load at emergency stop (N) | | Screw dimension |
|---------------|---------------------------------|-------|--------------------------------|-------|-----------------|
| | Fxy | Fz | Fxy | Fz | |
| L-300 | 500 | 5200 | 1800 | 8900 | M20 |
| L-600 | 1200 | 12000 | 2200 | 18800 | M20 |
| L-1000 | 1200 | 12000 | 2200 | 18800 | M20 |
| L-2000 | 1700 | 25700 | 3700 | 36700 | M20 |
| L-5000 | 3000 | 35000 | 9000 | 44500 | M20 |

Continues on next page

Forces IRP B/C/R

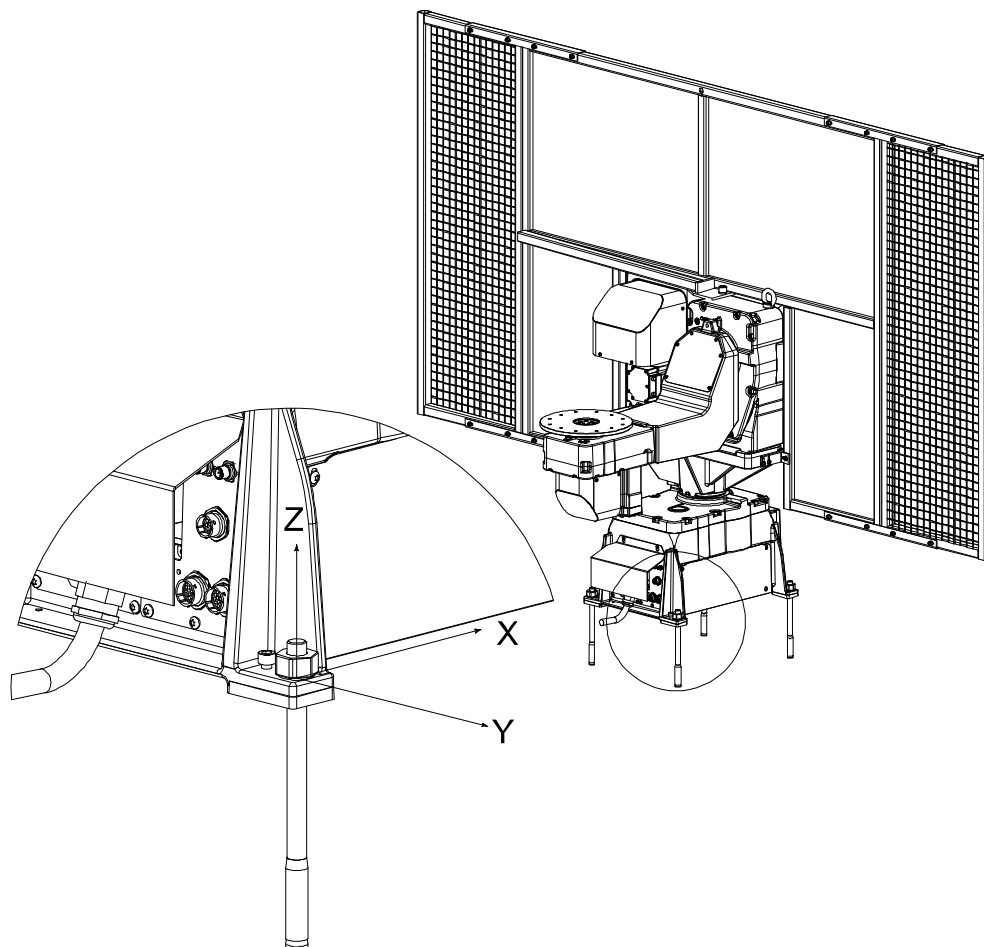

xx0900000908

| Rotation unit | Endurance load in operation (N) | | Max load at emergency stop (N) | | Screw dimension |
|---------------|---------------------------------|-------|--------------------------------|-------|-----------------|
| | Fxy | Fz | Fxy | Fz | |
| B-250 | 2000 | 8300 | 3600 | 12400 | M16 |
| B-500 | 5000 | 20600 | 9000 | 30900 | M20 |
| B-750 | 5000 | 20600 | 9000 | 30900 | M20 |
| C-500 | 1500 | 6000 | 3000 | 8000 | M16 |
| C-1000 | 2700 | 15000 | 6400 | 22300 | M20 |
| R-300 | 1380 | 5400 | 3000 | 7800 | M16 |
| R-600 | 2700 | 15000 | 6400 | 22300 | M20 |
| R-1000 | 2700 | 15000 | 6400 | 22300 | M20 |

3 Installation and commissioning

3.3.4 Recommendations for attachment bolts and screws

3.3.4 Recommendations for attachment bolts and screws

Attachment bolts

Chemical anchor bolts or expansion-shell bolts are recommended for securing the manipulator to the floor. However, the attachment bolts are not supplied since they must be selected based on the material or the foundation.

Choose attachment bolts so that they are suitable for and fit inside the holes in the foundation. Choose attachment bolts that can handle the dynamic loads.

The bolts must be able to bear the combined dynamic loads that can occur when the manipulator is stopped with the emergency brake.

Instructions for tightening screw joints

| Recommended screws for securing the manipulator to the base | Note |
|---|---|
| Steel structure | See section Screw joints on page 63 |
| Concrete floor | See section Screw joints on page 63 |



Note

Expansion shell anchor bolts with a notch or chemical anchor are recommended for the IRP.



CAUTION

It is of the utmost importance that all screw joints be tightened with the correct torque.

Application

The following tightening torques are to be used for all screw joints in metallic materials unless otherwise specified in the text. See section [Screw joints on page 63](#). These instructions do not apply to screw joints composed of soft or brittle materials. For screws with a higher property class than 8.8, the data for 8.8 must be used unless otherwise specified.

3.3.5 Screw joints

General

This section describes how to tighten the various types of screw joints on ABB robots.

The instructions and torque values are valid for screw joints comprised of metallic materials and do *not* apply to soft or brittle materials.

UNBRAKO screws

UNBRAKO is a special type of screw recommended by ABB for certain screw joints. It features special surface treatment (Gleitmo as described below) and is extremely resistant to fatigue.

Whenever used, this is specified in the instructions, and in such cases, *no other type of replacement screw* is allowed. Using other types of screws will void any warranty and may potentially cause serious damage or injury.

Gleitmo treated screws

Gleitmo is a special surface treatment to reduce the friction when tightening the screw joint. It is recommended by ABB for M6-M20 screw joints. Screws treated with Gleitmo may be reused 3-4 times before the coating disappears. After this the screw must be discarded and replaced with a new one.

When handling screws treated with Gleitmo, protective gloves of nitrile rubber type should be used.

Generally, screws are lubricated with *Gleitmo 603* mixed with *Geomet 500* or *Geomet 702* in proportion 1:3. *Geomet* thickness varies according to screw dimensions, refer to the following.

| Dimension | Lubricant | Geomet thickness |
|-----------------------------------|---------------------------------|------------------|
| M6-M20 (any length except M20x60) | <i>Gleitmo 603 + Geomet 500</i> | 3-5 µm |
| M6-M20 (any length except M20x60) | <i>Gleitmo 603 + Geomet 720</i> | 3-5 µm |
| M20x60 | <i>Gleitmo 603 + Geomet 500</i> | 8-12 µm |
| M20x60 | <i>Gleitmo 603 + Geomet 720</i> | 6-10 µm |

Screws lubricated in other ways

Screws lubricated with Molykote 1000 or Molykote P1900 should *only* be used when specified in the repair, maintenance or installation procedure descriptions.

In such cases, proceed as follows:

- 1 Apply lubricant to the screw thread.
- 2 Apply lubricant between the plain washer and screw head.
- 3 Screw dimensions of M8 or larger must be tightened with a torque wrench. Screw dimensions of M6 or smaller may be tightened without a torque wrench *if* this is done by trained and qualified personnel.

Continues on next page

3 Installation and commissioning

3.3.5 Screw joints

Continued

| Lubricant | Article number |
|---|----------------|
| Molykote 1000 (molybdenum disulphide grease) | 3HAC042472-001 |
| Molykote P1900 (molybdenum disulphide grease) | 3HAC070875-001 |

Tightening torque

Before tightening any screw, note the following:

- Determine whether a **standard** tightening torque or **special** torque is to be applied. The **standard torques** are specified in the following tables. Any **special torques** are specified in the repair, maintenance or installation procedure descriptions. **Any special torque specified overrides the standard torque!**
- Use the *correct tightening torque* for each type of screw joint.
- Only use *correctly calibrated* torque keys.
- *Always tighten the joint by hand*, and never use pneumatic tools.
- Use the *correct tightening technique*, that is *do not* jerk. Tighten the screw in a slow, flowing motion.
- Maximum allowed total deviation from the specified value is **10%!**

Tightening torque for oil-lubricated screws with slotted or cross-recess head screws

The following table specifies the recommended standard tightening torque for *oil-lubricated screws with slotted or cross-recess head screws*.



Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

Tightening torque for oil-lubricated screws with allen head screws

The following table specifies the recommended standard tightening torque for *oil-lubricated screws with allen head screws*.



Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

| Dimension | Tightening torque (Nm) Class 8.8, oil-lubricated | Tightening torque (Nm) Class 10.9, oil-lubricated | Tightening torque (Nm) Class 12.9, oil-lubricated |
|-----------|---|--|--|
| M5 | 6 | - | - |
| M6 | 10 | - | - |
| M8 | 24 | 34 | 40 |
| M10 | 47 | 67 | 80 |
| M12 | 82 | 115 | 140 |
| M16 | 200 | 290 | 340 |
| M20 | 400 | 560 | 670 |

Continues on next page

| Dimension | Tightening torque (Nm) Class 8.8, oil-lubricated | Tightening torque (Nm) Class 10.9, oil-lubricated | Tightening torque (Nm) Class 12.9, oil-lubricated |
|-----------|---|--|--|
| M24 | 680 | 960 | 1150 |

Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws

The following table specifies the recommended standard tightening torque for *screws lubricated with Molykote 1000, Gleitmo 603 or equivalent with allen head screws*.



Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

| Dimension | Tightening torque (Nm) Class 10.9, lubricated ⁱ | Tightening torque (Nm) Class 12.9, lubricated ⁱ |
|-----------|---|---|
| M5 | | 8 |
| M6 | | 14 |
| M8 | 28 | 35 |
| M10 | 55 | 70 |
| M12 | 96 | 120 |
| M16 | 235 | 300 |
| M20 | 460 | 550 |
| M24 | 790 | 950 |

ⁱ Lubricated with Molykote 1000, Gleitmo 603 or equivalent

3 Installation and commissioning

3.3.6 The unit is sensitive to ESD

3.3.6 The unit is sensitive to ESD

Description

ESD (electrostatic discharge) is the transfer of electrical static charge between two bodies at different potentials, either through direct contact or through an induced electrical field. When handling parts or their containers, personnel not grounded may potentially transfer high static charges. This discharge may destroy sensitive electronics.

Safe handling

Use one of the following alternatives:

- Use a wrist strap.

Wrist straps must be tested frequently to ensure that they are not damaged and are operating correctly.

- Use an ESD protective floor mat.

The mat must be grounded through a current-limiting resistor.

- Use a dissipative table mat.

The mat should provide a controlled discharge of static voltages and must be grounded.

3.4 On-site installation


3.4.1 Orienting and securing the manipulator

Illustration, positioning the manipulator



Note

The illustration shows IRP A, but the principle for orienting and securing the positioner is the same for all variants.

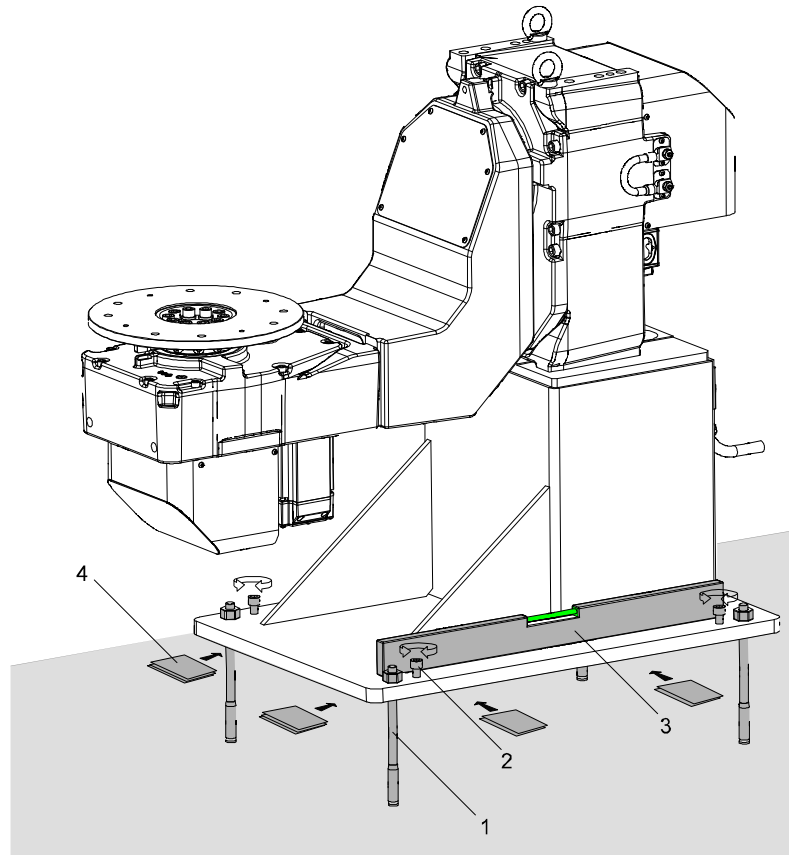

xx0900000914

| | |
|---|------------------------------------|
| 1 | Screws for fastening (floor bolts) |
| 2 | Adjusting screws |
| 3 | Machine level meter |
| 4 | Shim |

Securing the manipulator IRP

Use this procedure to secure the manipulator.





| | Action | Note |
|---|---|------|
| 1 | Position the IRP at the intended work site. | |

Continues on next page

3 Installation and commissioning

3.4.1 Orienting and securing the manipulator

Continued
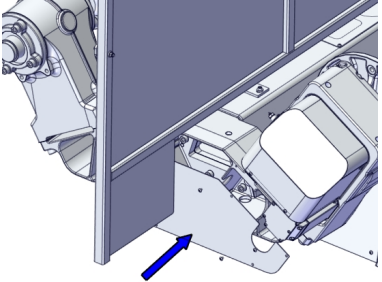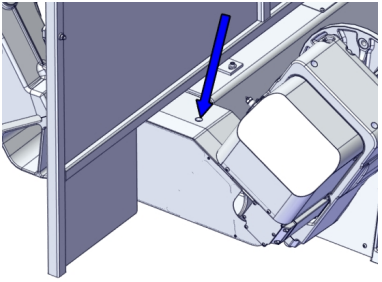
| | Action | Note |
|---|--|--|
| 2 | Drill all holes according to the screw manufactures recommendation for the specific foundation. Facts and drilling recommendations are found in section Recommendations for attachment bolts and screws on page 62 | |
| 3 | Adjust the foot to level using a machine level meter and the level screws. | |
| 4 | Insert shims to fill the gap between the pedestal foot and the floor.  CAUTION Always loosen the adjusting screws before tightening the floor bolts. |  Note Never use any shims between gear unit and the pedestal. |
| 5 | Tighten all the floor bolts. | Tightening torque according to screw manufactures. |
| 6 | Remove all lifting accessories used. | |
| 7 | Valid for IRP R Refit the plates at the frame ends. |  xx1700001322 |
| 8 | Valid for IRP R Refit the protection plugs to the lifting eye holes. |  xx1700001324 |

Securing the manipulator IRP using fixture laser

Use this procedure to secure the IRP L using a fixture laser.


| | Action | Note |
|---|--|--------------------------------------|
| 1 | Position the IRP L at the intended work site. | |
| 2 | Drill all holes according to the screw manufactures recommendation for the specific foundation. Facts and drilling recommendations are found in section Recommendations for attachment bolts and screws on page 62 | |
| 3 | Adjust the level screws in the foot to level using a fixture laser. | Recommended data in the table below. |

Continues on next page


3 Installation and commissioning

3.4.1 Orienting and securing the manipulator

Continued

| | Action | Note |
|---|---|---|
| 4 | Insert shims to fill the gap between the foot and the floor.  CAUTION Always loosen the adjusting screws before tightening the floor bolts. | |
| 5 | Tighten all the floor bolts. | Tightening torque according to screw manufactures. |
| 6 | Check the reading on the laser after tightening the floor bolts. | See recommendations for bearing units, Adjusting the bearing units for IRP L-300, L-600, L-1000 och L-2000 on page 69 . |

Example of fixture laser aligning

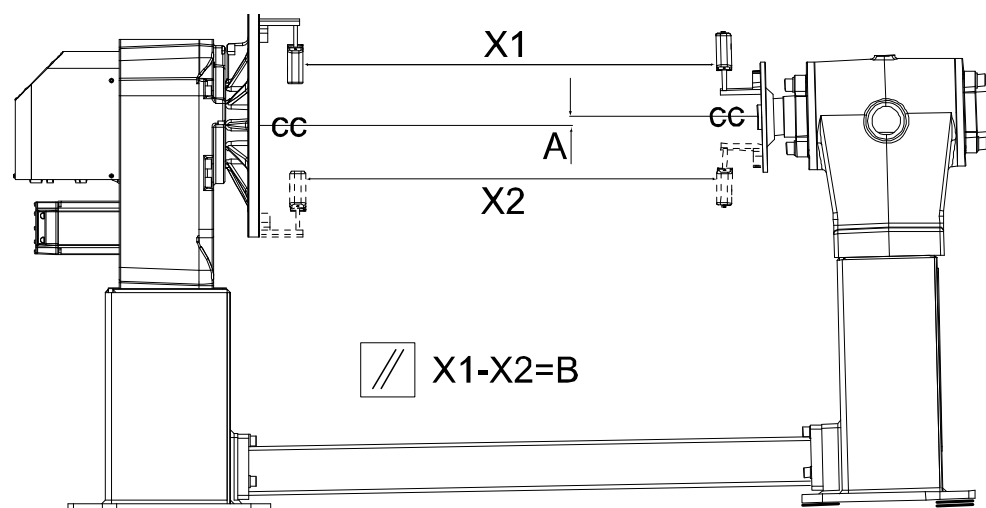

The figure shows an example of aligning the bearing units using laser sensors for example, NXA by Fixturlaser or TKSA41 from SKF, turning disc adapters and adjustment tool. For more information, see [Adjusting the bearing units for IRP L-300, L-600, L-1000 och L-2000 on page 69](#)


Adjusting the bearing units for IRP L-300, L-600, L-1000 och L-2000

After securing the positioner to the foundation the bearing units may need adjustments. This is an example on how to use the adjustment tool when adjusting the bearing units on the IRP L positioner. The adjustment tool can be ordered from ABB as a spare part. Other equipment mentioned in this example, for example laser sensors and turning disc adapter, is to be considered generic and therefore not available as spare parts delivered by ABB.

Continues on next page

3 Installation and commissioning

3.4.1 Orienting and securing the manipulator
Continued

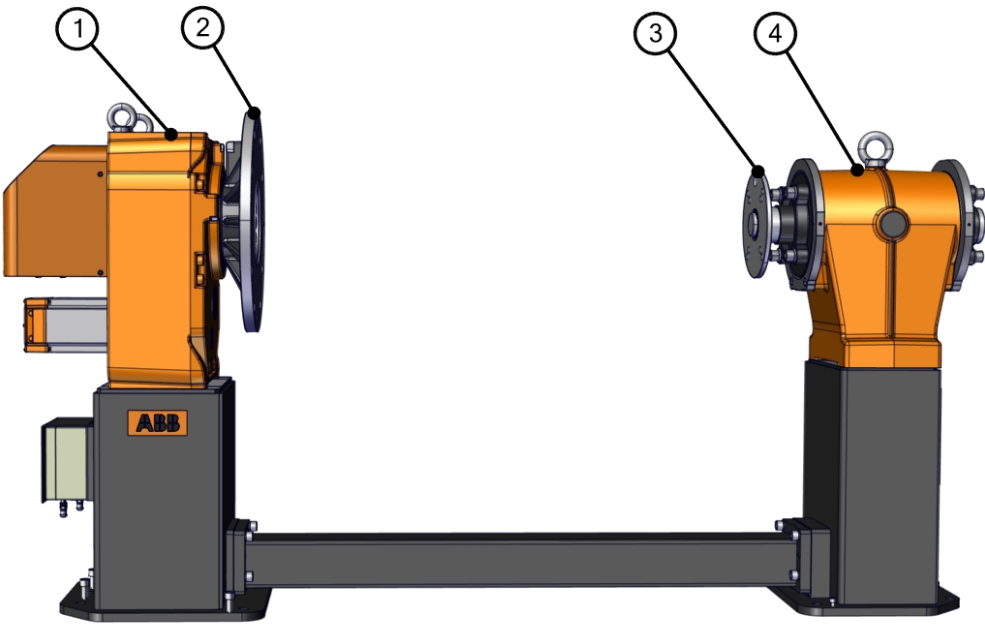


xx1700001361

| | |
|---|---------------|
| 1 | Gearbox |
| 2 | Rotary disc |
| 3 | Bearing disc |
| 4 | Bearing house |

Required equipment

| Equipment | Article number |
|---------------------------|----------------|
| Adjustment tool, MTD 250 | 3HAC036527-001 |
| Adjustment tool, MTD 750 | 3HAC036532-001 |
| Adjustment tool, MTD 2000 | 3HAC037846-001 |

Fitting the adjustment tools and the laser sensor on to the bearing house


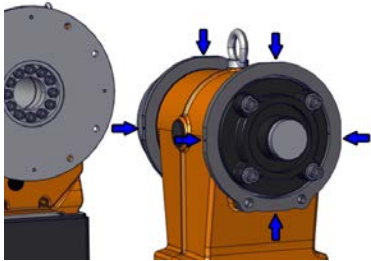
| | Action | Note |
|---|--|---|
| 1 | Fit the adjustment tool on both sides of the bearing house using the set screws. |  xx1700001363 |

Continues on next page



3 Installation and commissioning

3.4.1 Orienting and securing the manipulator

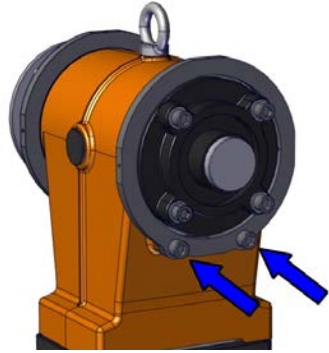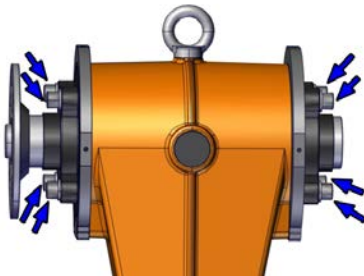Continued

| | Action | Note |
|---|---|--|
| 2 | Fasten the adjustment tools using the adjustment screws. |  xx1700001364 |
| 3 | Loosen the bearing screws from both sides of the bearing house. |  xx1700001365 |

Measuring the positioner

| | Action | Note |
|----|---|--|
| 1 | Fit the laser sensor on to the gearbox turning plate, and tailstock turning flange. |  Note The fitting of the laser sensors varies depending on the equipment used. |
| 2 | Start the laser sensors. | |
| 3 | Attach the motor cable to the gearbox. | |
| 4 | Rotate the bearing disc to -90 degrees (9 o'clock). |  Note Adjust the position of the disc during the measuring process by rotating the set screws attached to the adjustment tool if needed. It is possible to adjust up to 2.5 mm. |
| 5 | Rotate the rotary disc to -90 degrees (9 o'clock). | |
| 6 | Measure the laser position as position 1. | |
| 7 | Rotate the bearing disc to +90 degrees (3 o'clock). | |
| 8 | Rotate the rotary disc to +90 degrees (3 o'clock). | |
| 9 | Measure the laser position as position 2. | |
| 10 | Rotate the bearing disc to 0 degrees (12 o'clock). | |
| 11 | Rotate the rotary disc to 0 degrees (12 o'clock). | |

Continues on next page


3 Installation and commissioning

3.4.1 Orienting and securing the manipulator

Continued

| | Action | Note |
|----|---|------|
| 12 | Measure the laser position as position 3. | |
| 13 | Calibrate the positioner. | |

Calibrating the positioner

| | Action | Note |
|----|--|--|
| 1 | Measure the IRP L. | |
| 2 | Rotate the bearing disc to 0 degrees (12 o'clock). | |
| 3 | Rotate the rotary disc to 0 degrees (12 o'clock). | |
| 4 | Adjust the laser value by rotating the vertically aligned set screws. | |
| 5 | Rotate the bearing disc to -90 degrees (9 o'clock). | |
| 6 | Rotate the rotary disc to -90 degrees (9 o'clock). | |
| 7 | Adjust the laser value by rotating the horizontally aligned set screws. | |
| 8 | Repeat the measurement process to make sure that the calibration is correct.  Note If the values from the laser reading is not within the allowed deviation during calibration, then re-calibrate and measure again. If the problem remain, please contact ABB. | For more information about the allowed deviations, see Deviations on page 72 . |
| 9 | Remove any equipment fitted on the IRP L positioner. | |
| 10 | Fasten the bearing screws to the bearing house using the correct torque. | For more information about the correct torque, see Screw joints on page 63 |

Deviations

| Type | L1 [mm] | L2 [mm] | L3 [mm] | Position deviation [mm] | | | Parallel deviation [mm/100mm] | | |
|-------------------|---------|---------|---------|-------------------------|------------------|--------------|-------------------------------|------------------|--------------|
| | | | | Preferred (X,Y) | Acceptable (X,Y) | Not OK (X,Y) | Preferred (X,Y) | Acceptable (X,Y) | Not OK (X,Y) |
| L-300 L=1250 | 1150 | 46.5 | 160 | 0-0.22 | 0.23-0.44 | >0.44 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-300 L=1600 | 1500 | 46.5 | 160 | 0-0.28 | 0.29-0.56 | >0.56 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-300 L=2000 | 1900 | 46.5 | 160 | 0-0.35 | 0.36-0.70 | >0.70 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-300 L=2500 | 2400 | 46.5 | 160 | 0-0.44 | 0.45-0.88 | >0.88 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-300 L=3150 | 3050 | 46.5 | 160 | 0-0.55 | 0.56-1.10 | >1.10 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-300 L=4000 | 3900 | 46.5 | 160 | 0-0.70 | 0.71-1.40 | >1.40 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-600/1000 L=1250 | 1160 | 83 | 266 | 0-0.22 | 0.23-0.44 | >0.44 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-600/1000 L=1600 | 1510 | 83 | 266 | 0-0.28 | 0.29-0.56 | >0.56 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-600/1000 L=2000 | 1910 | 83 | 266 | 0-0.35 | 0.36-0.70 | >0.70 | 0-0.04 | 0.05-0.08 | >0.08 |

Continues on next page

3 Installation and commissioning

3.4.1 Orienting and securing the manipulator

Continued

| Type | L1 [mm] | L2 [mm] | L3 [mm] | Position deviation [mm] | | | Parallel deviation [mm/100mm] | | |
|----------------------|---------|---------|---------|-------------------------|------------------|--------------|-------------------------------|------------------|--------------|
| | | | | Preferred (X,Y) | Acceptable (X,Y) | Not OK (X,Y) | Preferred (X,Y) | Acceptable (X,Y) | Not OK (X,Y) |
| L-600/1000 L=2500 | 2410 | 83 | 266 | 0-0.44 | 0.45-0.88 | >0.88 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-600/1000 L=3150 | 3060 | 83 | 266 | 0-0.55 | 0.56-1.10 | >1.10 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-600/1000 L=4000 | 3910 | 83 | 266 | 0-0.70 | 0.71-1.40 | >1.40 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-2000 L=1250 | 1160 | 98 | 366 | 0-0.22 | 0.23-0.44 | >0.44 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-2000 L=1600 | 1510 | 98 | 366 | 0-0.28 | 0.29-0.56 | >0.56 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-2000 L=2000 | 1910 | 98 | 366 | 0-0.35 | 0.36-0.70 | >0.70 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-2000 L=2500 | 2410 | 98 | 366 | 0-0.44 | 0.45-0.88 | >0.88 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-2000 L=3150 | 3060 | 98 | 366 | 0-0.55 | 0.56-1.10 | >1.10 | 0-0.04 | 0.05-0.08 | >0.08 |
| L-2000 L=4000 | 3910 | 98 | 366 | 0-0.70 | 0.71-1.40 | >1.40 | 0-0.04 | 0.05-0.08 | >0.08 |

Adjusting the bearing units for IRP L-5000

The L5000 differs from the smaller L models in that sense that the support bearing side is not attached to the rotary unit with a distance beam.

Since the length between Rotary disc and Bearing disc is unknown, no fixed values can be provided. The figures in the table could be used as a guidance, see [Deviations](#).

Laser adjustment on turning disk can be used. Adjustment is done by using shims between the floor and the bottom of the tailstock foot.


3 Installation and commissioning

3.4.2 Mounting of secondary shield on IRP-K

3.4.2 Mounting of secondary shield on IRP-K

Location of the shield

The secondary shield is located as shown in the figure.

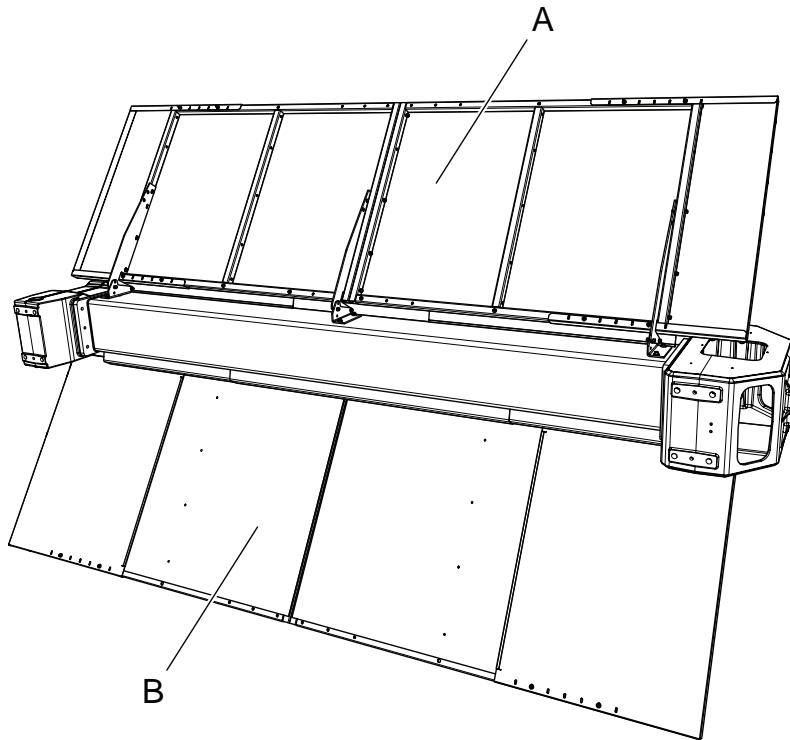


xx1700000439

| | |
|---|------------------|
| A | Secondary shield |
| B | Primary shield |

Required tools and equipment

| Equipment | Article number | Note |
|------------------|----------------|--|
| Standard toolkit | - | Content is defined in section Standard toolkit on page 197 . |

Mounting the shield





| <div> Note</div> <div>It's important to check tightening torque on all pre-mounted fixings.</div> | | |
|---|---|------|
| | Action | Note |
| 1 | Attach a lifting device to the shield and align it to the beam. | |

Continues on next page

3 Installation and commissioning

3.4.2 Mounting of secondary shield on IRP-K

Continued
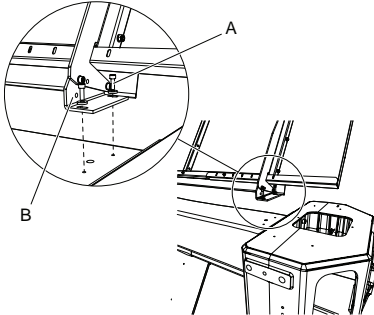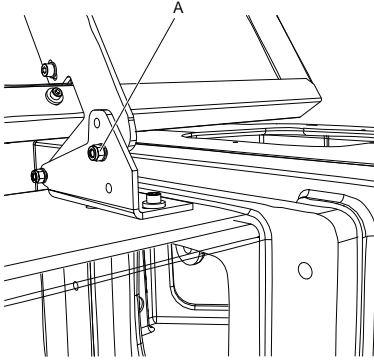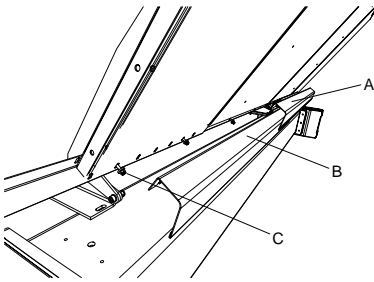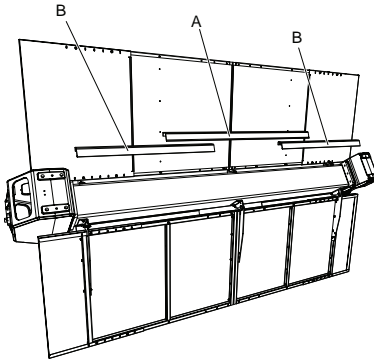
| | Action | Note |
|---|---|--|
| 2 | Fit the six screws with washers (A) through the pre-mounted bracket (B). |  <p>xx1700000440</p> <p>Screw: M8x25 (6 pcs) Washer: 8.4x21x4 (6 pcs)</p> |
| 3 | Tighten the screws. | Tightening torque: 25 Nm |
| 4 | Tighten the screws (A) with nuts (6 pcs) on the pre-mounted shield brackets. |  <p>xx1700000447</p> <p>Tightening torque: 10 Nm</p> |
| 5 | Loosen the locking nut with washer (C) from the screws in the back of the shields and push the washer towards the nut creating a space of 5-8 mm between the shield and washer. |  <p>xx1700000441</p> |
| 6 | Push down the two inner covers (B) first, and then the outer cover (A) between the shield and the washer (C). |  <p>xx1700000446</p> |
| 7 | Tighten the locknuts. | |


3 Installation and commissioning

3.4.3 Dimensions of the tailstock IRP L-5000

3.4.3 Dimensions of the tailstock IRP L-5000

Tailstock dimensions

The tailstock on the IRP L-5000 has a centered hole to be able to, for example, pull cable harness through.

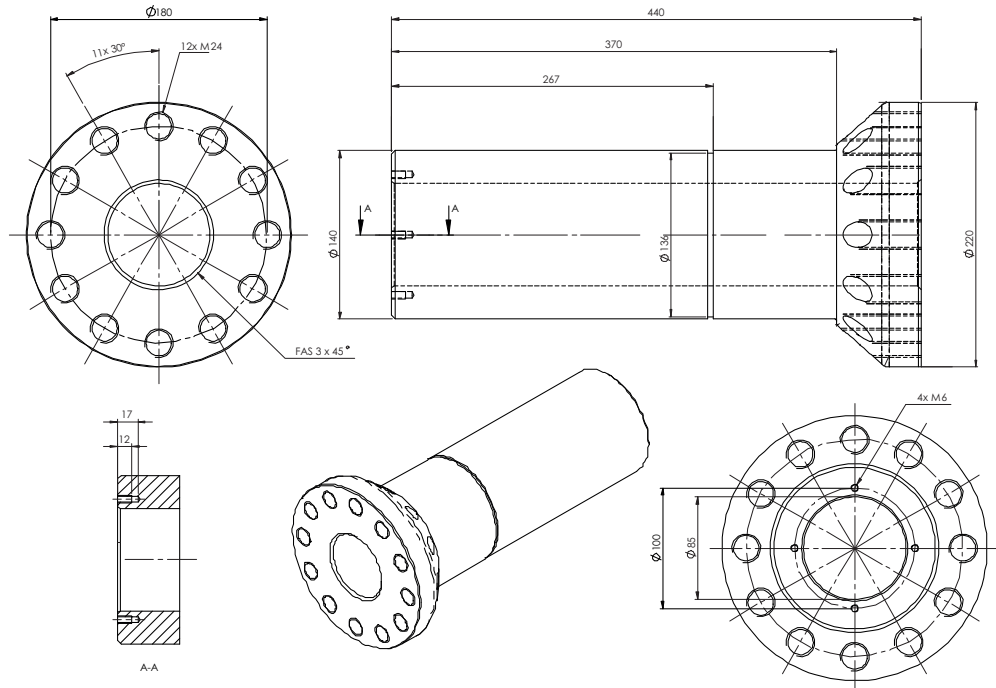

xx1800001201

3.5 Electrical connections

Introduction

Connect the positioner to motor connection box and motor connection box to controller after securing them to the foundation.

The lists below specify which cables to use for each respective application.



DANGER

Turn off the main power before connecting any cables.



CAUTION

Verify that the positioner serial number is according to the number(s) in the *Declaration of Incorporation (DoI)*.

Protecting cables

Protect all flexible cables from weld spatter. Place the cables so the risk of mechanical wear is minimized.

Connect power connectors on MCB

When fasten power connectors, wobble the connector body while tightening the connectors to make sure that they are fully fastened.


Continues on next page

3 Installation and commissioning

3.5.1 Electrical connections

3.5.1 Electrical connections

Robot system

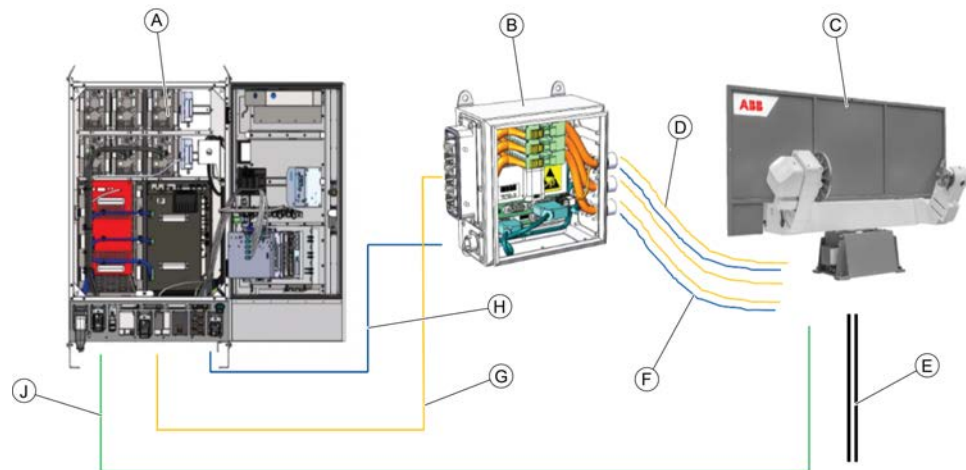


xx2300001480

| Position | Description |
|----------|--|
| A | V250XT/V400XT Controller, with external drives |
| B | Motor connection box (3 or 6 axis) |
| C | IRP |
| D | Power |
| E | Weld return cable |
| F | Resolver signal |
| G | Cable harness power |
| H | Cable harness resolver, bus |
| J | Profibus, Customer power |

Continues on next page

Connection interface

Positioners type A

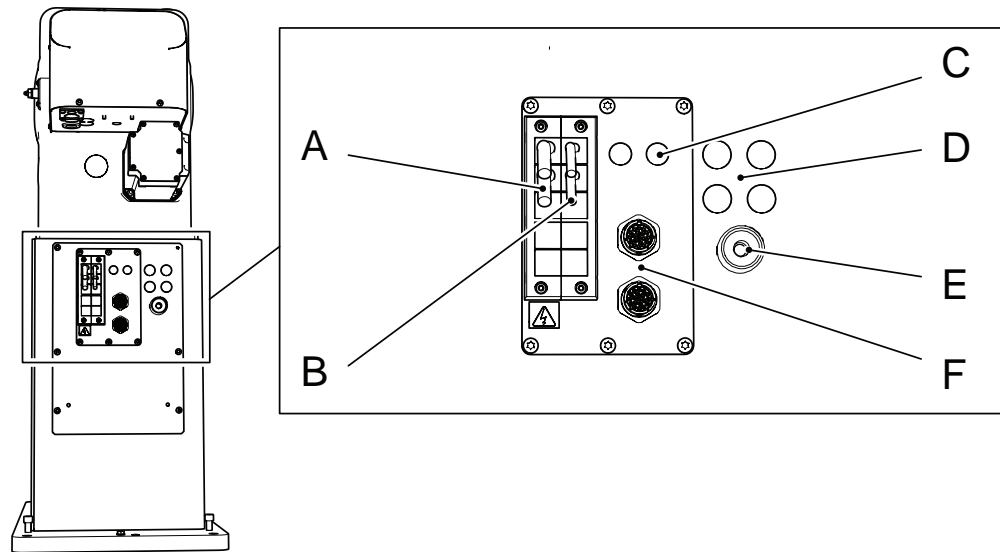

xx2300001481

| Pos | Description | Pos | Description |
|-----|---------------------------|-----|-------------------------|
| A | Power, axis 1-2 | D | Air (option) |
| B | Resolver signal, axis 1-2 | E | Weld return cable |
| C | Profibus (option) | F | Customer power (option) |


Continues on next page

3 Installation and commissioning

3.5.1 Electrical connections

Continued

Positioners type B

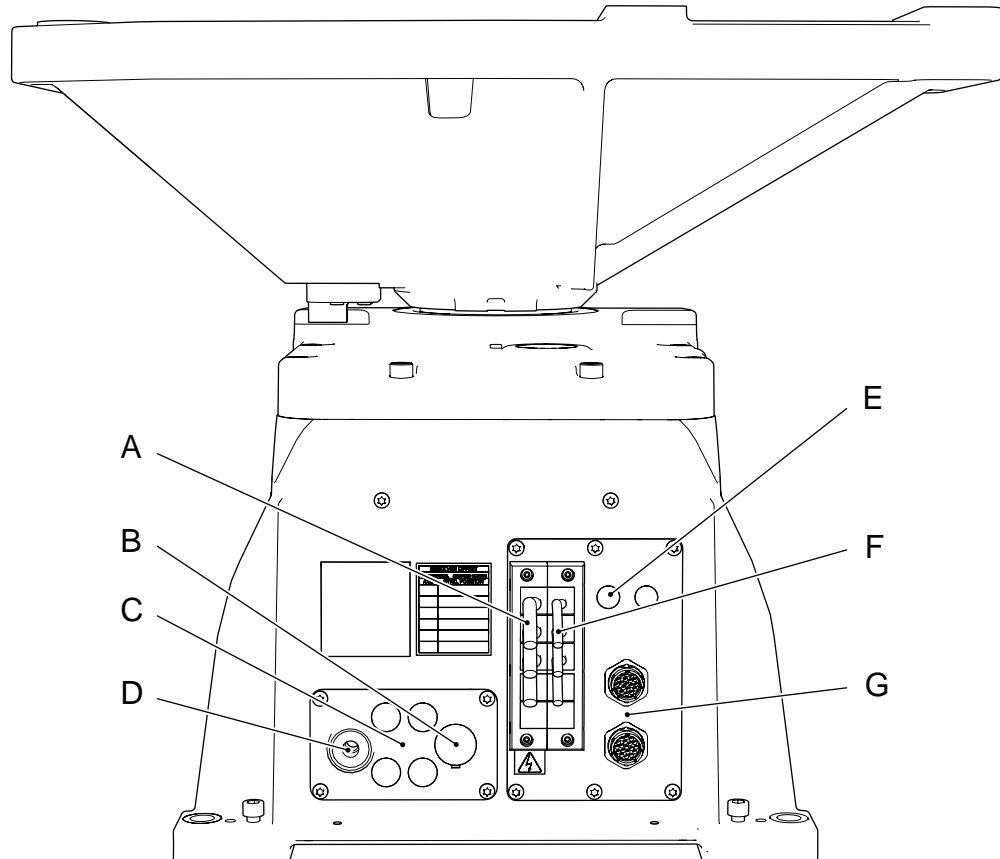


xx2300001482

| Pos | Description | Pos | Description |
|-----|--|-----|--|
| A | Power, axis 1 (IRP C) Power, axis 1-5 (IRP B) | E | Profibus (option) |
| B | Extra weld return cable (option) | F | Resolver signal, axis 1 (IRP C) Resolver signal, axis 1-5 (IRP B) |
| C | Air (option) | G | Customer power (option) |
| D | Weld return cable | | |

Continues on next page

Positioners type C

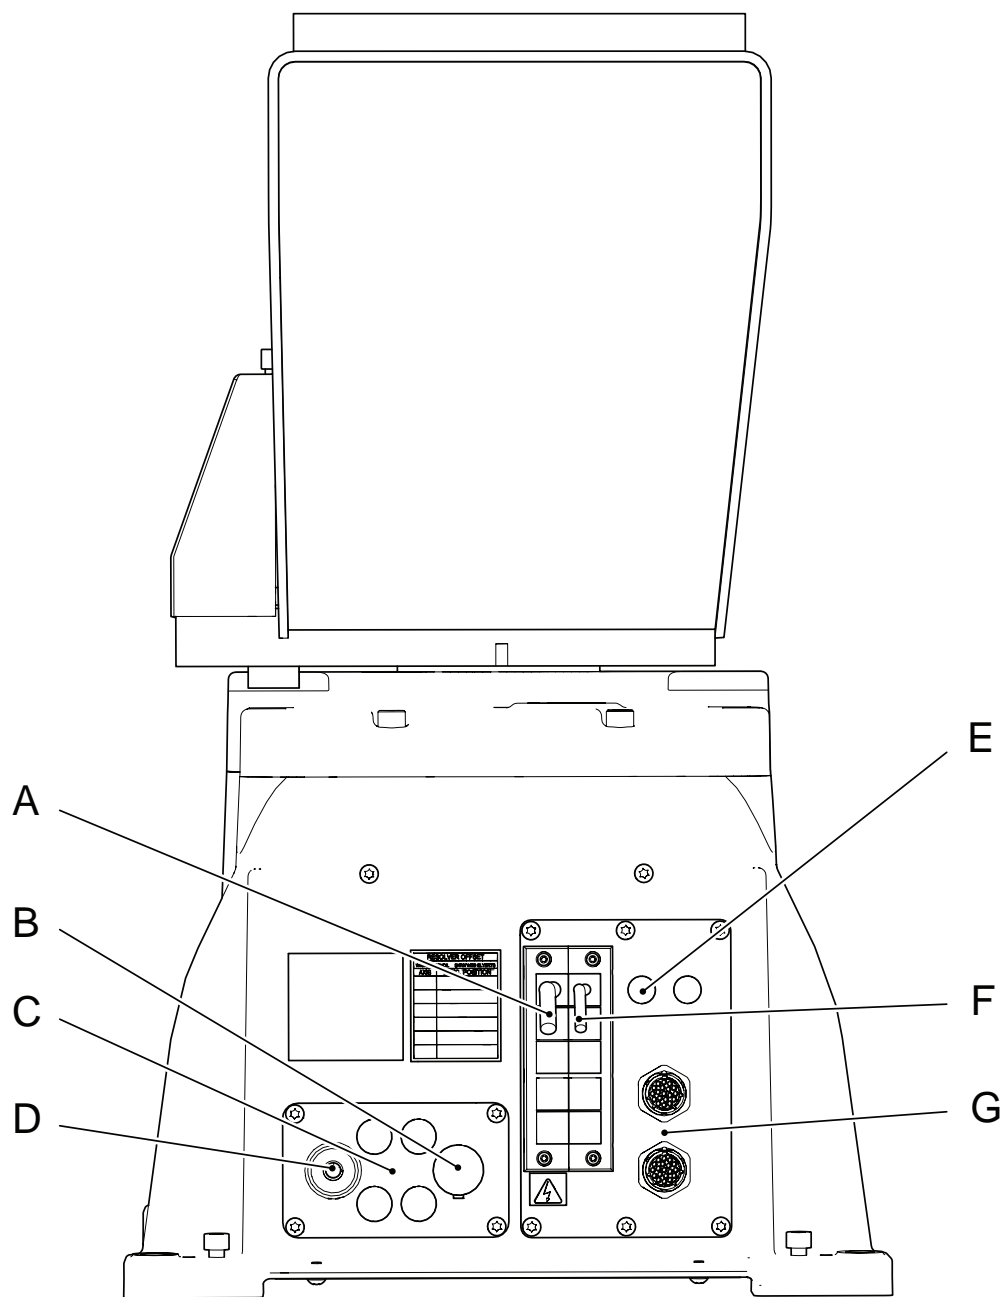

xx2300001483


| Pos | Description | Pos | Description |
|-----|--|-----|--|
| A | Power, axis 1 (IRP C) Power, axis 1-5 (IRP B) | E | Profibus (option) |
| B | Extra weld return cable (option) | F | Resolver signal, axis 1 (IRP C) Resolver signal, axis 1-5 (IRP B) |
| C | Air (option) | G | Customer power (option) |
| D | Weld return cable | | |

Continues on next page

3 Installation and commissioning

3.5.1 Electrical connections
Continued


Positioners type K

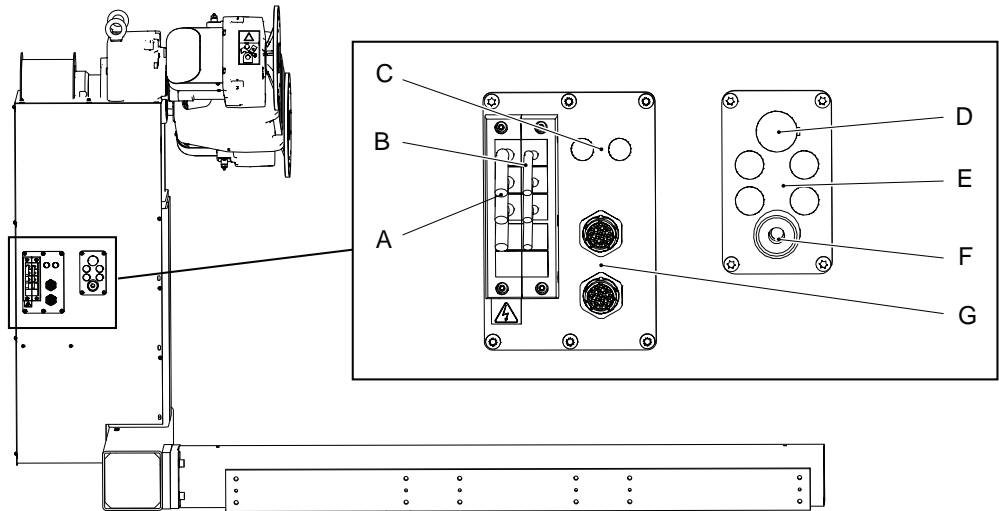

| Pos | Description | Pos | Description |
|-----|----------------------------------|-----|-------------------------|
| A | Power axis, 1-3 | E | Air (option) |
| B | Resolver signal, axis 1-3 | F | Weld return cable |
| C | Profibus (option) | G | Customer power (option) |
| D | Extra weld return cable (option) | | |

Continues on next page

Positioners type L

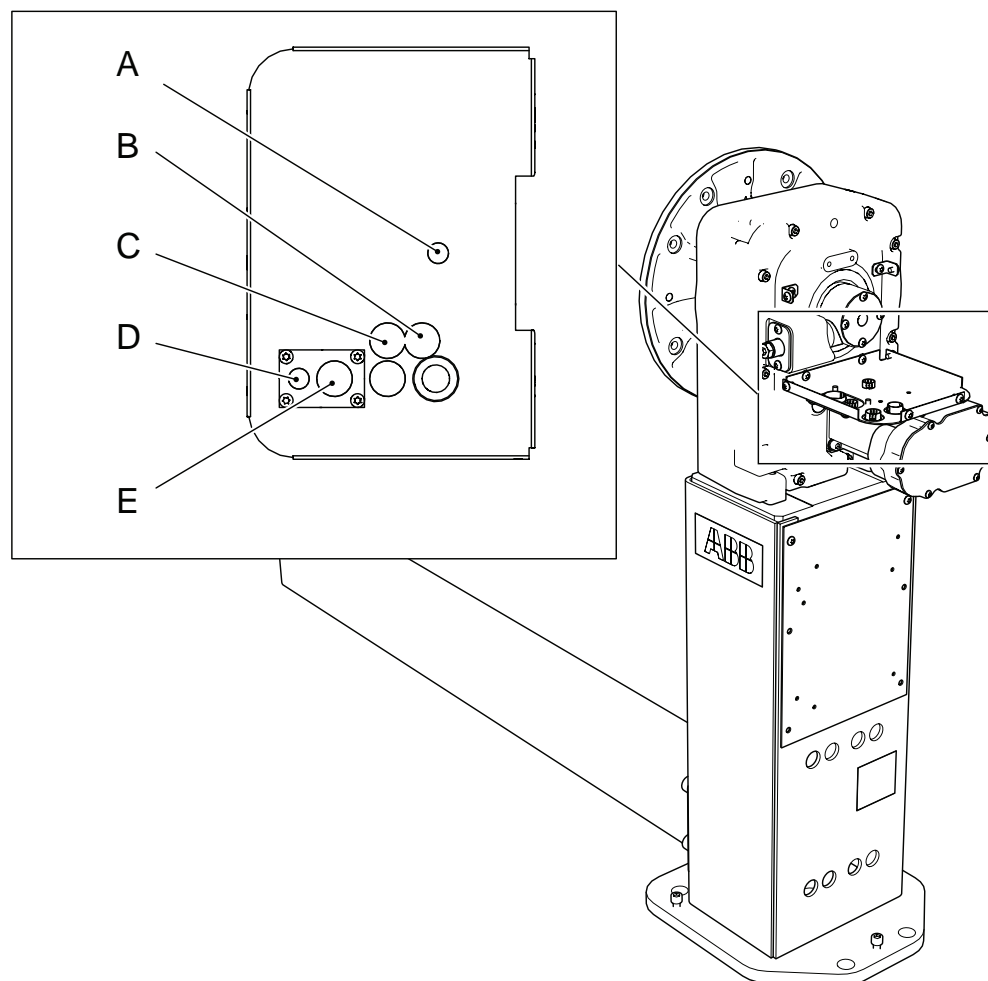

xx2300001485


| Pos | Description | Pos | Description |
|-----|------------------------|-----|------------------------------------|
| A | T1 (swivel 1 air) | D | Station 1 (CS1) Station 2 (CS2) |
| B | T1 (swivel 1 el/1 air) | E | Station 1 (CP1) Station 2 (CP2) |
| C | T2 | | |

Continues on next page

3 Installation and commissioning

3.5.1 Electrical connections
Continued

Positioners type R

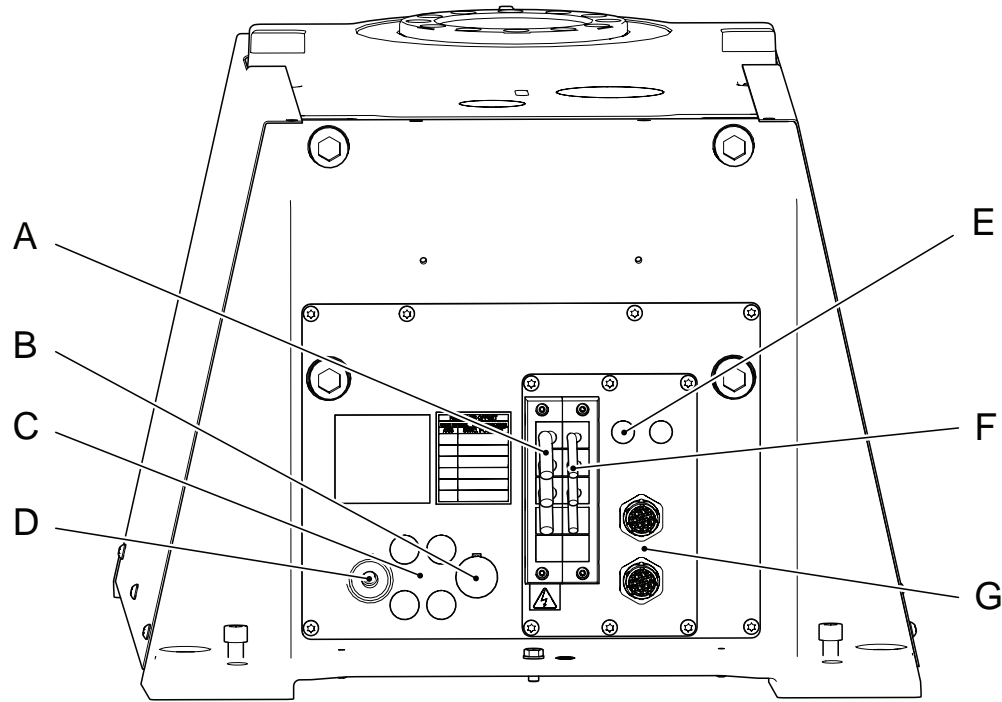


xx2300001486

| Pos | Description | Pos | Description |
|-----|--|-----|--|
| A | Power axis 1 (IRP C) Power axis 1-5 (IRP B) | E | Profibus (option) |
| B | Extra weld return cable (option) | F | Resolver signal, axis 1 (IRP C) Resolver signal, axis 1-5 (IRP B) |
| C | Air (option) | G | Customer power (option) |
| D | Weld return cable | | |

Continues on next page

Current collectors

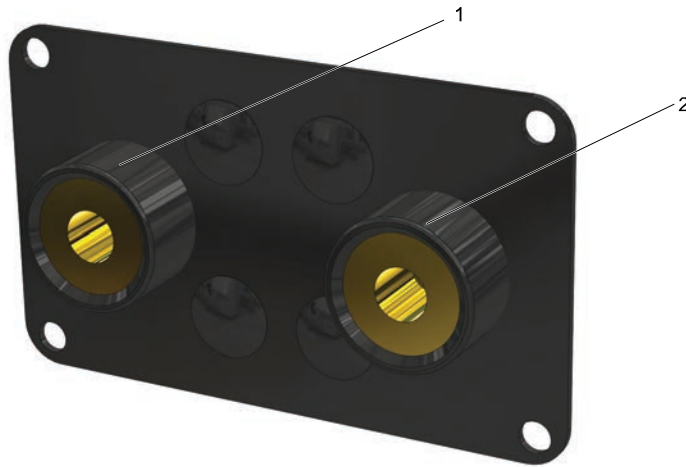

xx0900000990


| | |
|---|--------------------------------|
| 1 | Current collector connection 1 |
| 2 | Current collector connection 2 |

3 Installation and commissioning

3.5.2 Positioner interface to MCB

3.5.2 Positioner interface to MCB

Interface for positioner

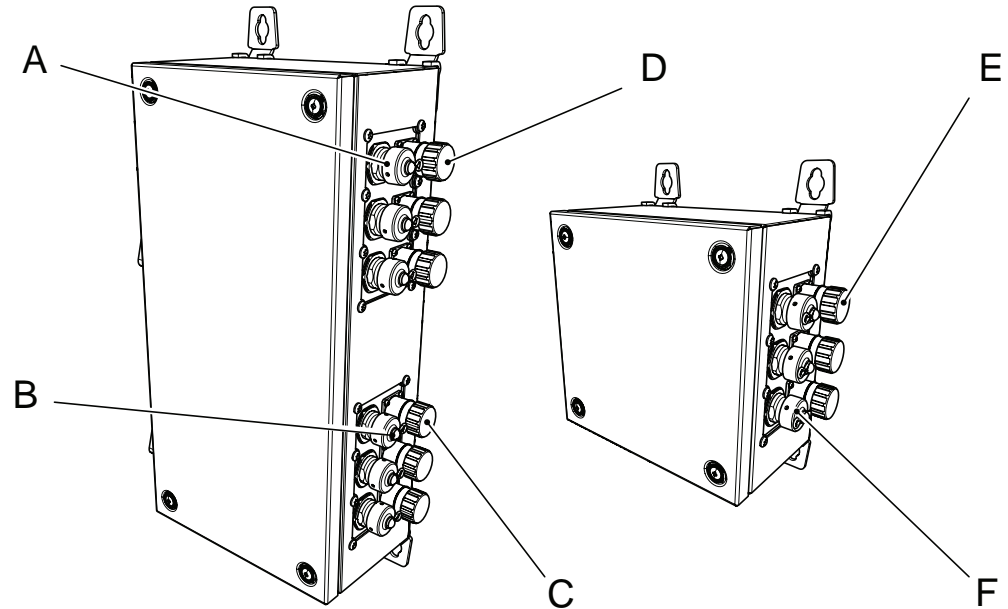

xx2300001487

| Pos | Description |
|-----|--|
| A | Resolver connector axis 1-3 (6 axis version) |
| B | Resolver connector axis 4-6 (6 axis version) |
| C | Power connector axis 1-3 (6 axis version) |
| D | Power connector axis 4-6 (6 axis version) |
| E | Power connector axis 1-3 (3 axis version) |
| F | Resolver connector axis 1-3 (3 axis version) |



Note

The MCB must be installed in close to the IRP.

3.6 Installing fixtures and testing with corresponding workpieces

3.6.1 Installing fixtures

Introduction

If there is a difference between the loads on each side of the positioner IRP K, then special care must be taken when installing fixtures or workpieces.



Note

The values for *Max load difference between sides 1 and 2* are listed in the technical data in *Product specification - Product.ProductName*.

Load difference sides 1 and 2 does not exceed specified maximum value

If the positioner is in a horizontal position or not at the end of the working range when installing fixtures, make sure that the value of *Max load difference sides 1 and 2* is not exceeded.

Fixtures can be installed in any positioner position.

Load difference sides 1 and 2 exceeds specified maximum value

If the weight of the fixture exceeds the value of *Max load difference sides 1 and 2*, run the positioner to the working range end when positioner side 2 is oriented towards the operator side (positioner side 1 is toward the welding robot). Then the positioner cannot move further downwards when the first fixture is installed.

- 1 Install the fixture on positioner side 2.
- 2 Install the fixture on positioner side 1.



WARNING

Do not move the positioner before both fixtures are installed.



Note


If the fixtures must be installed in another position then the positioner must be supported on the surfaces shown with arrows in the graphic below.

Continues on next page

3 Installation and commissioning

3.6.1 Installing fixtures

Continued

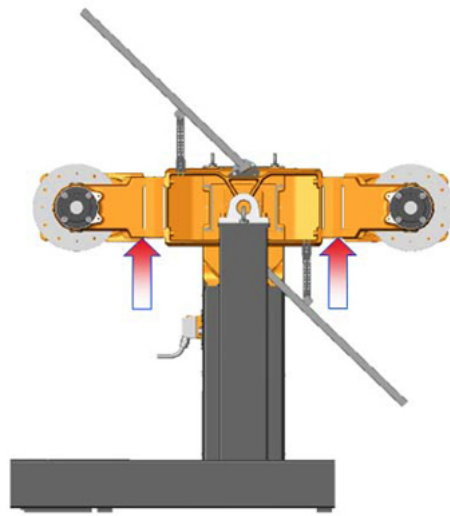

xx1100000143

Brake testing

After installing fixtures, always test the brakes, see [Brake testing on page 33](#).

3.6.2 Removing or changing fixtures

Introduction

If there is a difference between the loads on each side of the positioner IRP K, then special care must be taken when removing or changing fixtures or workpieces.



Note

The values for *Max load difference between sides 1 and 2* are listed in the technical data in *Product specification - Product.ProductName*.

Load difference sides 1 and 2 does not exceed specified maximum value

If the positioner is in a horizontal position or not at the end of the working range when removing or changing fixtures, make sure that the value of *Max load difference sides 1 and 2* is not exceeded.

Fixtures can be installed in any positioner position.

Load difference sides 1 and 2 exceeds specified maximum value

If the weight of the fixture exceeds the value of *Max load difference sides 1 and 2*, run the positioner to the working range end when positioner side 2 is oriented towards the operator side (positioner side 1 is toward the welding robot). Then the positioner cannot move further downwards when the first fixture is removed.

- 1 Remove the fixture on positioner side 1.
- 2 Remove the fixture on positioner side 2.
- 3 If changing fixtures, then install the new fixture on side 2 and finally the new fixture on side 1.



WARNING

Do not move the positioner before both fixtures are removed or replaced by new fixtures!



Note


If the fixtures must be installed in another position then the positioner must be supported on the surfaces shown with arrows in the graphic below.

Continues on next page

3 Installation and commissioning

3.6.2 Removing or changing fixtures

Continued

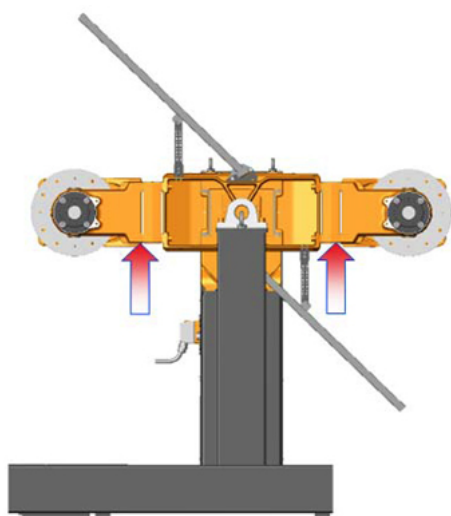

xx1100000143

Brake testing

After installing fixtures, always test the brakes, see [Brake testing on page 33](#).

3.7 Test run after installation, maintenance, or repair


Safe handling

Use the following procedure after installation, maintenance, or repair, before initiating motion.



DANGER

Initiating motion without fulfilling the following aspects, may increase the risk for injury or cause damage to the robot.

| | Action |
|----|--|
| 1 | Remove all tools and foreign objects from the positioner and its working area. |
| 2 | Verify that the positioner is properly secured to its position by all screws, before it is powered up. |
| 3 | Verify that any safety equipment installed to secure the position or restrict the positioner motion during service activity is removed. |
| 4 | Verify that the fixture and work piece are well secured, if applicable. |
| 5 | Verify that all safety equipment is installed, as designed for the application. |
| 6 | Verify that the brake release tool is in its intended place. |
| 7 | Verify that no personnel are inside the safeguarded space before initiating motion. |
| |  Note A positioner may perform unexpected limited movement. |
| 8 | The manual mode of operation shall be performed with all persons outside the safeguarded space. |
| 9 | Power on/off or rebooting the robot controller shall be performed with all persons outside the safeguarded space. |
| 10 | If maintenance or repair has been done, verify the function of the part that was maintained. |
| 11 | Always verify the results after calibrating any positioner axis, to verify that all calibration positions are correct. |
| 12 | Verify the application in the operating mode manual reduced speed. |
| 13 | When programming the movements of the positioner, always identify potential collision risks before initiating motion |

This page is intentionally left blank

4 Configuration of RobotWare

4.1 Creating and downloading a system

Introduction

RobotStudio is used for modifying and downloading systems to the controller, and to download the add-in **Positioner** that contains configuration data for the different positioner variants.

The robot is delivered with a RobotWare system installed and configured according to the order specification. The positioner must be added to the RobotWare system, as described in the following procedure.


Before modifying the system

Before modifying the system it is recommended to take a backup of the system and put all axes of the robot and any external axes in their zero positions.

Creating a system for RobotWare 7

In RobotWare 7, the positioner is loaded as an add-in. The add-in **Positioner** is available in the RobotStudio **Gallery**.

For more detailed instructions on using the function Modify Installation, see *Operating manual - Integrator's guide OmniCore*.

| | Action |
|---|---|
| 1 | On the Gallery tab, install the add-in Positioners . |
| 2 | On the Home tab, choose Virtual Controller > New controller to create a new virtual controller accordingly. |
| 3 | On the Controller tab, choose Installation > Modify Installation to modify the system. |
| 4 | In the Software tab, click Available and locate the add-in. Click Include . Add other software, if needed. |
| 5 | In the Options tab, scroll down to Positioners and select the positioner family. Then select the variant. |
| 6 | Select Joint configuration to modify which measurement channel and what drive unit to use for each joint. |
| 7 | Select other options, such as the ADU (in Controller). |
| 8 | Click Apply to accept the changes. |
| |  Tip If the PC is connected to the controller, then the system can be transferred using <i>Installation Utilities</i> , see <i>Operating manual - Integrator's guide OmniCore</i> , or create a package and transfer it with a USB memory. |

Safety configuration

The safety logic, for example, interchange positions, pre-reset, can be configured using an external safety PLC or using the safety logic in **Visual SafeMove**.

Continues on next page

4 Configuration of RobotWare

4.1 Creating and downloading a system

Continued

All axes of the positioner should be configured to use Safe Disable of Drive Unit in **Visual SafeMove**.

The interchange positions should be configured using Axis Position Supervision in **Visual SafeMove**.

A pre-reset functionality can be set up using a template, see [LINK](#)¹. This template must be modified and tested as part of the safety verification for the actual installation. This is the responsibility of the integrator.

¹ <https://search.abb.com/library/Download.aspx?DocumentID=9AKK108469A9002&LanguageCode=en&Action=Launch>

4.2 Safe Disable of Drive Unit

Safe Disable of Drive Unit

Safe Disable of Drive Unit is a function that can be used to disable a manipulator or additional axis, by safely setting its drive unit in a state with all brakes applied and servo control switched off. This can, for example, be used to prevent unexpected start-up.

Functionality

The function is activated by a safe input signal. It shall be used when there is no movement on the mechanical unit. If the function is activated while one or more axes of the mechanical unit are moving, a violation is triggered with a stop category 0 or stop category 1, depending on the configuration.

Related information

More information about the safety function *Safe Disable of Drive Unit* is available in *Application manual - Functional safety and SafeMove*.

4 Configuration of RobotWare

4.3 Axis Position Supervision

4.3 Axis Position Supervision

Axis Position Supervision

Axis Position Supervision is an active supervision function that triggers a violation if any axis is outside of the defined ranges.

Functionality

Supervision of up to 9 axes (robot axes and additional axes) in each set. Up to 8 sets can be configured, one for each safe axis range.


If an axis in an active set exceeds its allowed range, the safety controller triggers. This violation will cause a stop category 0, a stop category 1, and/or set an output signal, depending on the configuration.

Safe ranges

IRP positioners with an interchange axis has no mechanical limit switch to indicate if station 1 (STN1) or station 2 (STN2) is facing the operator. The functionality is instead provided using safe ranges and Axis Position Supervision, and is configured in Visual SafeMove.

There is one safe range for 0°, and one for 180°. In the following example, the first safe range uses Lower bound -1 and Upper bound +1. The second safe range uses Lower bound 179 and Upper bound 181.

For each safe range, an Axis Position Supervision should be added with the violation action defined as **NoStop** and a signal that indicates if the interchanger is in position 0° or 180°.

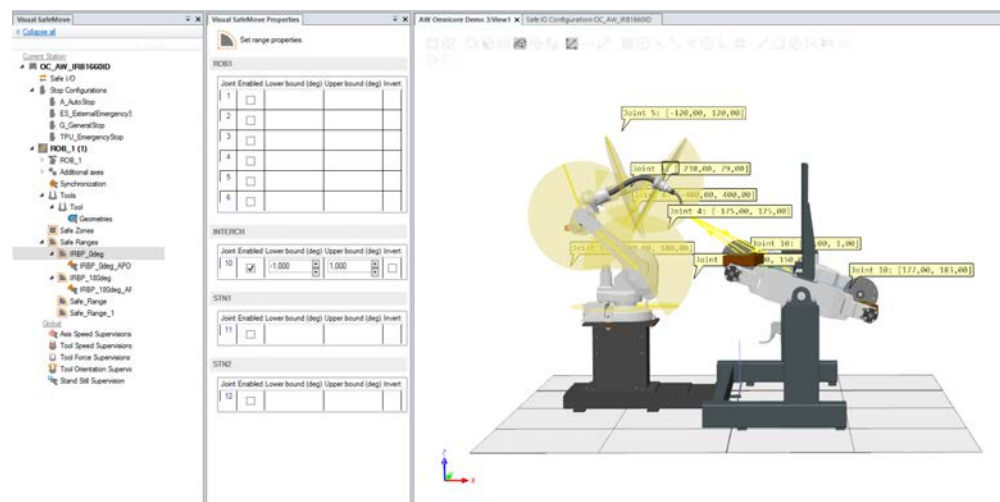

xx2400001846

Related information

More information about the safety function *Axis Position Supervision* is available in *Application manual - Functional safety and SafeMove*.

5 Maintenance

5.1 Introduction

Structure of this chapter

This chapter describes all the maintenance activities recommended for the IRP. It is based on the maintenance schedule found at the beginning of the chapter. The schedule contains information about required maintenance activities including intervals, and refers to procedures for the activities.

Each procedure contains all the information required to perform the activity, including required tools and materials.

The procedures are gathered in different sections and divided according to the maintenance activity.

Safety information

Observe all safety information before conducting any maintenance work.

There are general safety aspects that must be read through, as well as more specific safety information that describes the danger and safety risks when performing the procedures. Read the chapter [Safety on page 15](#) before performing any maintenance work.

The maintenance must be done by qualified personnel in accordance with the safety requirements set forth in the applicable national and regional standards and regulations.



Note

If the IRP is connected to power, always make sure that the IRP is connected to protective earth and a residual current device (RCD) before starting any maintenance work.

For more information see:

- *Product manual - OmniCore V250XT Type B*
- *Product manual - OmniCore V400XT*

5.2 Specification of maintenance intervals

Introduction

The intervals are specified in different ways depending on the type of maintenance activity to be carried out and the working conditions of the IRP:

- Calendar time: specified in months regardless of whether the system is running or not.
- Operating time: specified in operating hours. More frequent running means more frequent maintenance activities.

Robots with the functionality *Service Information System* activated can show active counters in the device browser in RobotStudio, or on the FlexPendant.

5.3 Maintenance schedule and expected component life

5.3.1 Maintenance schedule

General

This chapter details all maintenance activities recommended for the IRP. It is based on the maintenance schedule located at the beginning of the chapter. The schedule contains information about required maintenance activities including intervals, and refers to procedures for the activities. Each procedure contains all information required to perform the activity, e.g. required tools and materials. The procedures are gathered in different sections and divided according to the maintenance activity.

Activities and intervals, standard equipment

The sections referred to in the table can be found in the different chapters for every maintenance activity. The table below specifies the required maintenance activities and intervals:

| Maintenance activity | Equipment | Interval |
|----------------------|--|--|
| Inspection | Positioner harness | Running |
| Inspection | Current collector | Running |
| Inspection | Interchange gearbox, oil leak | Running |
| Inspection | Rotary gearbox, oil leak | Running |
| Clean | Positioner | Running |
| Lubrication | Current collector | 400h |
| Lubrication | Gearbox, oil | 40,000h |
| Replacement | Battery pack, measurement system with 2-pole battery contact, e.g. DSQC633A | Battery low alert ⁱ |
| Replacement | Battery pack, measurement system of type RMU101 or RMU102 (3-pole battery contact) | 36 months or battery low alert ⁱⁱ |

ⁱ The battery low alert (38213 **Battery charge low**) is displayed when remaining backup capacity (robot powered off) is less than 2 months. The typical lifetime of a new battery is 36 months if the robot is powered off 2 days/week or 18 months if the robot is powered off 16 h/day. The lifetime can be extended with a battery shutdown service routine. See *Operating manual - OmniCore* for instructions.

ⁱⁱ The battery low alert (38213 **Battery charge low**) is displayed when the battery needs to be replaced. The recommendation to avoid an unsynchronized robot is to keep the power to the controller turned on until the battery is to be replaced.

See the replacement instruction for more details.


5 Maintenance

5.4.1 Inspection, cables

5.4 Inspection activities

5.4.1 Inspection, cables


Location

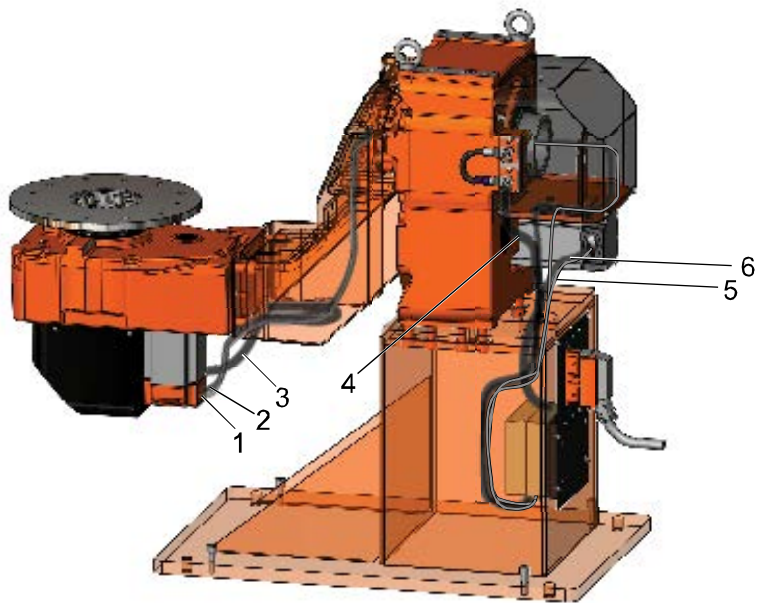

xx0900001055

| | |
|---|---------------------------------|
| 1 | Motor power axis 2 |
| 2 | SMB 2 signals axis 2 |
| 3 | Current collector rotary unit 2 |
| 4 | Current collector rotary unit 1 |
| 5 | Motor power axis 1 |
| 6 | SMB 1 signals axis 1 |

Continues on next page

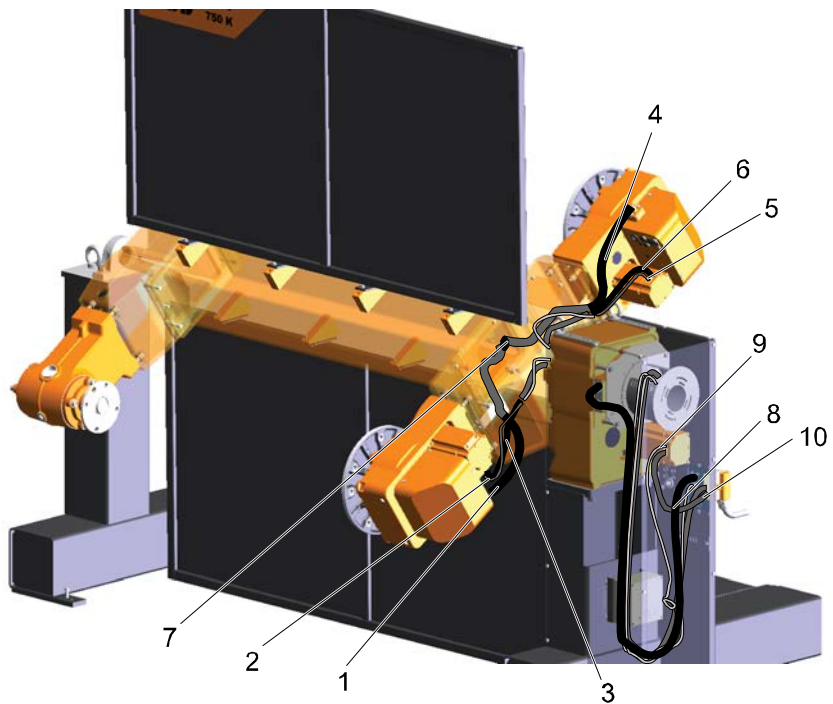

xx0900001062


| | |
|----|------------------------------------|
| 1 | Current collector rotary unit 3 |
| 2 | SMB signals axis 3 |
| 3 | Motor power axis 3 |
| 4 | Current collector rotary unit 2 |
| 5 | SMB signals axis 2 |
| 6 | Motor power axis 2 |
| 7 | Current collector connection point |
| 8 | Current collector rotary unit 1 |
| 9 | SMB signals axis 1 |
| 10 | Motor power axis 1 |

Continues on next page

5 Maintenance

5.4.1 Inspection, cables


Continued

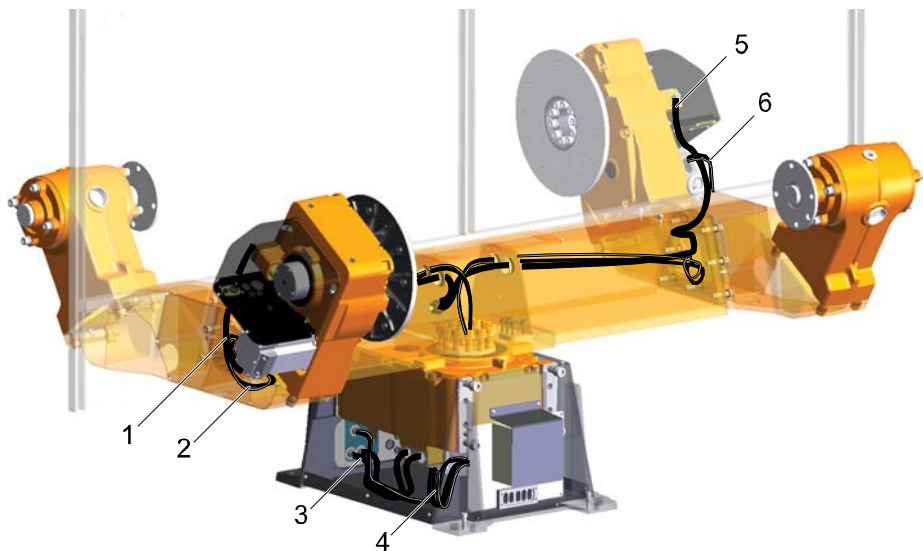

xx1000000010

| | |
|---|--|
| 1 | Current collector rotary unit 3 |
| 2 | SMB signals axis 3/ Motor power axis 3 |
| 3 | Current collector rotary unit 1 |
| 4 | SMB signals axis 1/ Motor power axis 1 |
| 5 | Current collector rotary unit 2 |
| 6 | SMB signals axis 2/ Motor power axis 2 |

Continues on next page

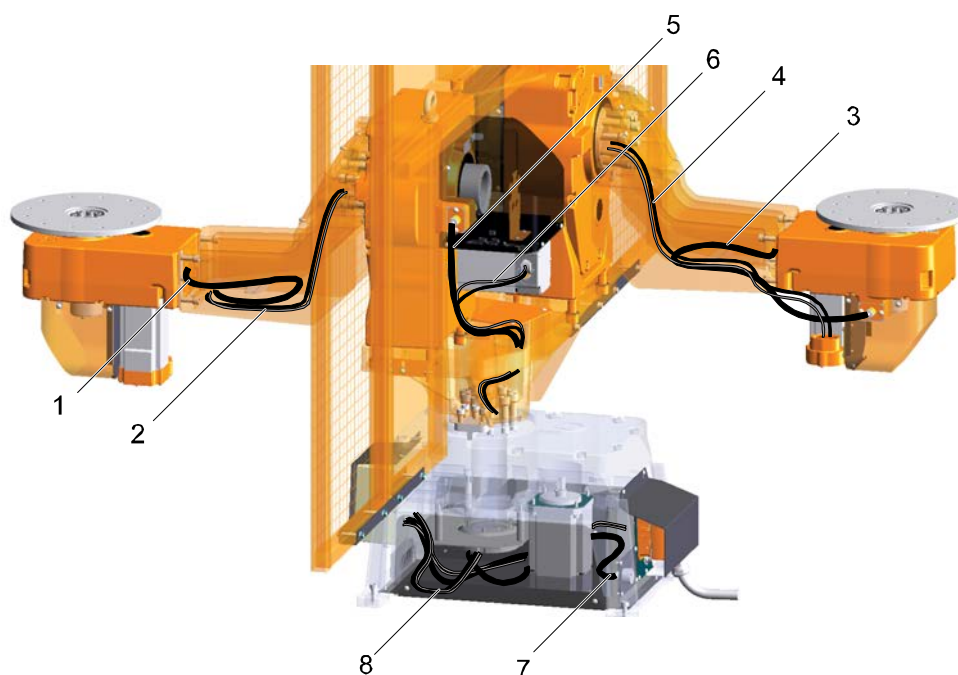

xx1000000011

| | |
|---|--|
| 1 | Current collector rotary unit 4 |
| 2 | SMB signals axis 4/ Motor power axis 4 |
| 3 | Current collector rotary unit 5 |
| 4 | SMB signals axis 5/ Motor power axis 5 |
| 5 | Current collector rotary unit 2 |
| 6 | SMB signals axis 2/ Motor power axis 2 |
| 7 | Current collector rotary unit 1 |
| 8 | SMB signals axis 1/ Motor power axis 1 |

Inspection procedure



WARNING

Turn off all electrical power supplies to the manipulator before entering its work space.

| | Action | Note |
|---|---|------|
| 1 | Make an overall visual inspection of the cable harness, in order to detect wear and damage. | |
| 2 | Replace the cable harness if wear, cracks or damage is detected. | |

5 Maintenance

5.4.2 Inspecting, weld return path

5.4.2 Inspecting, weld return path

General

Make an overall visual inspection of weld return path all the way from welding fixture to welding power source. There must be proper contact between fixture and welding power source. Lack of above might lead to a situation when welding current can bypass normal path and pass through e.g. gearbox or support collar bearings reducing bearing or gearbox life time.




ELECTRICAL SHOCK

An inadequate contact between the current collector and the shaft may result in stray welding currents can pass through the earthing and lead to dangerous situations that can result in serious personal injury, damage to the control unit or other safety risks.

Location

Welding equipment connected to a positioner with one and a second current collector.

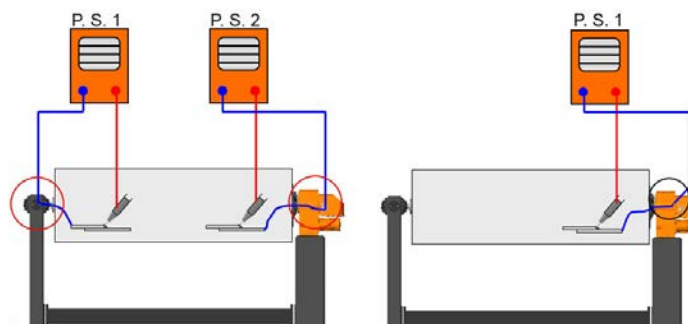

xx2300001345



Note

Current from one weld circuit is transferred through the current collector in the gearbox.

Two separated weld circuits gives less risk for interference.

Required tools and equipment

| Equipment | Article number | Note |
|------------|----------------|------|
| Multimeter | - | - |

Inspection procedure

| | Action | Note |
|---|--------------------------|--|
| 1 | Check current collector. | See section Inspection, support collar current collector on page 108 |

Continues on next page

| | Action | Note |
|---|--|------|
| 2 | Check weld return cable. Is intact, connection between cable and current collector is tight. Bayonet connector is tight at positioner foot and at welding power source side. | |
| 3 | Check weld return cable is intact. | |
| 4 | Check that the connection between cable and current collector is tight. | |
| 5 | Check that the bayonet connector is tight at positioner foot and at welding power source side. | |

5 Maintenance

5.4.3 Inspection, rotary unit current collector

5.4.3 Inspection, rotary unit current collector



DANGER

Turn off all electrical power, hydraulic and pneumatic pressure supplies before entering the workspace of the manipulator.

See also [Safety on page 15](#).

General

The function of the current collector is to transfer the weld current through the rotary unit. The contact bar needs to be checked for damage caused by sparking during welding start after approximately 1000 hours of operation.


To ensure a good contact between the current collector and the shaft, the surface of the current collector must be thoroughly cleaned and lubricated according to [Lubricating the current collector on page 113](#).



ELECTRICAL SHOCK

An inadequate contact between the current collector and the shaft may result in stray welding currents can pass through the earthing and lead to dangerous situations that can result in serious personal injury, damage to the control unit or other safety risks.

Location MTD

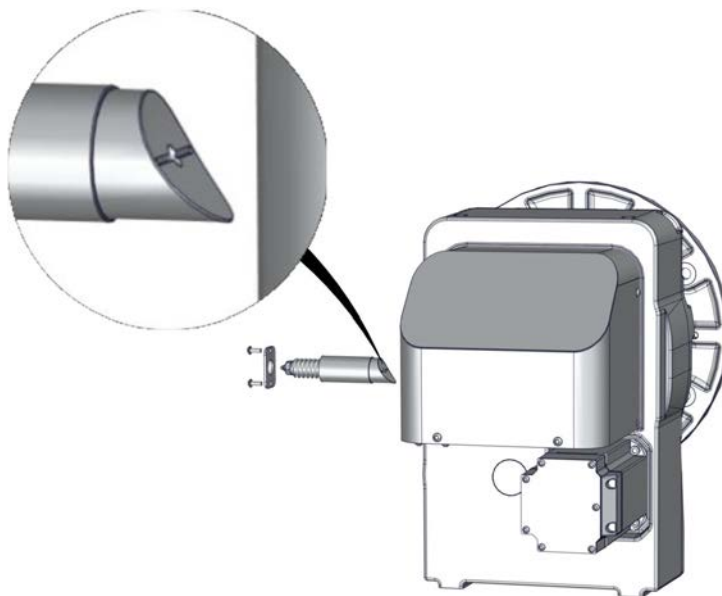


xx2300001343

Inspection procedure

| | Action | Information |
|---|-------------------------------------|-------------|
| 1 | Remove the Current Collector cable. | |

Continues on next page
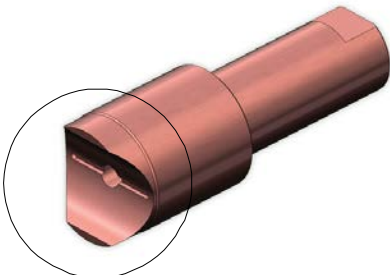
| | Action | Information |
|---|--|---|
| 2 | Remove the Current Collector. | Open key 46 mm |
| 3 | Check the collector surface for damage. |  xx1000000113 |
| 4 | For assemble see Replacing support collar axis on page 155 . | |

5 Maintenance

5.4.4 Inspection, support collar current collector

5.4.4 Inspection, support collar current collector



DANGER

Turn off all electrical power, hydraulic and pneumatic pressure supplies before entering the workspace of the manipulator.

See also [Safety on page 15](#).

General

The function of the current collector is to transfer the weld current through the support collar. The contact bar needs to be checked for damage caused by sparking during welding start after approximately 1000 hours of operation.


To ensure a good contact between the current collector and the shaft, the surface of the current collector must be thoroughly cleaned and lubricated according to [Lubricating the current collector on page 113](#).



ELECTRICAL SHOCK

An inadequate contact between the current collector and the shaft may result in stray welding currents can pass through the earthing and lead to dangerous situations that can result in serious personal injury, damage to the control unit or other safety risks.


Inspection procedure

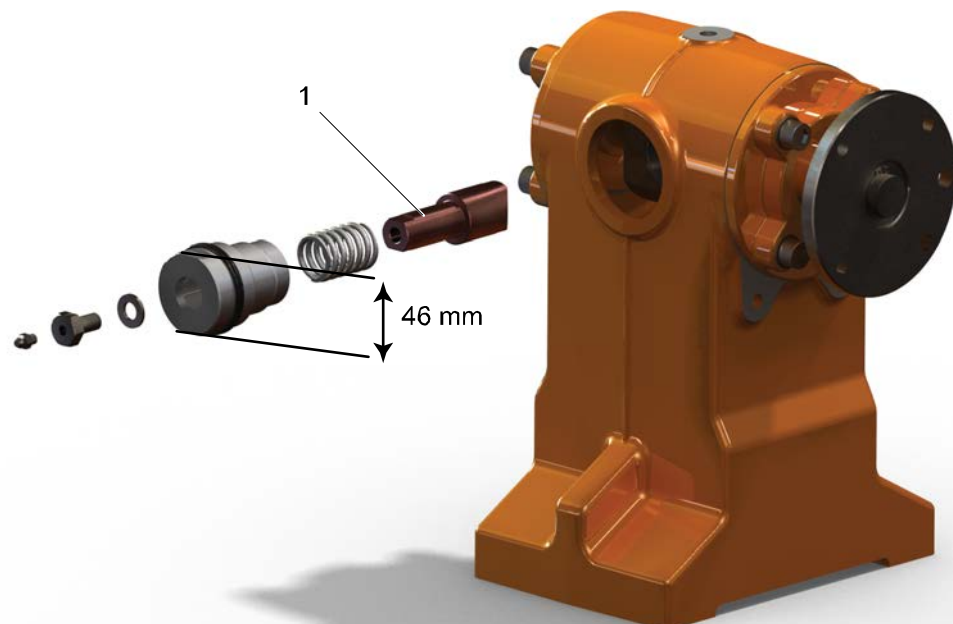

xx1000000043

| | |
|---|-------------------|
| 1 | Current Collector |
|---|-------------------|

Continues on next page
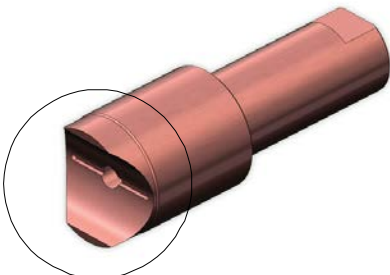
| | Action | Information |
|---|--|---|
| 1 | Remove the Current Collector cable. | |
| 2 | Remove the Current Collector. | Open key 46 mm |
| 3 | Check the collector surface for damage. |  xx1000000113 |
| 4 | For assemble see Replacing support collar axis on page 155 . | |

5 Maintenance

5.4.5 Inspection, gearbox oil leak

5.4.5 Inspection, gearbox oil leak




DANGER

Turn off all electrical power, hydraulic and pneumatic pressure supplies before entering the workspace of the manipulator.

See also [Safety on page 15](#).

Location MTD

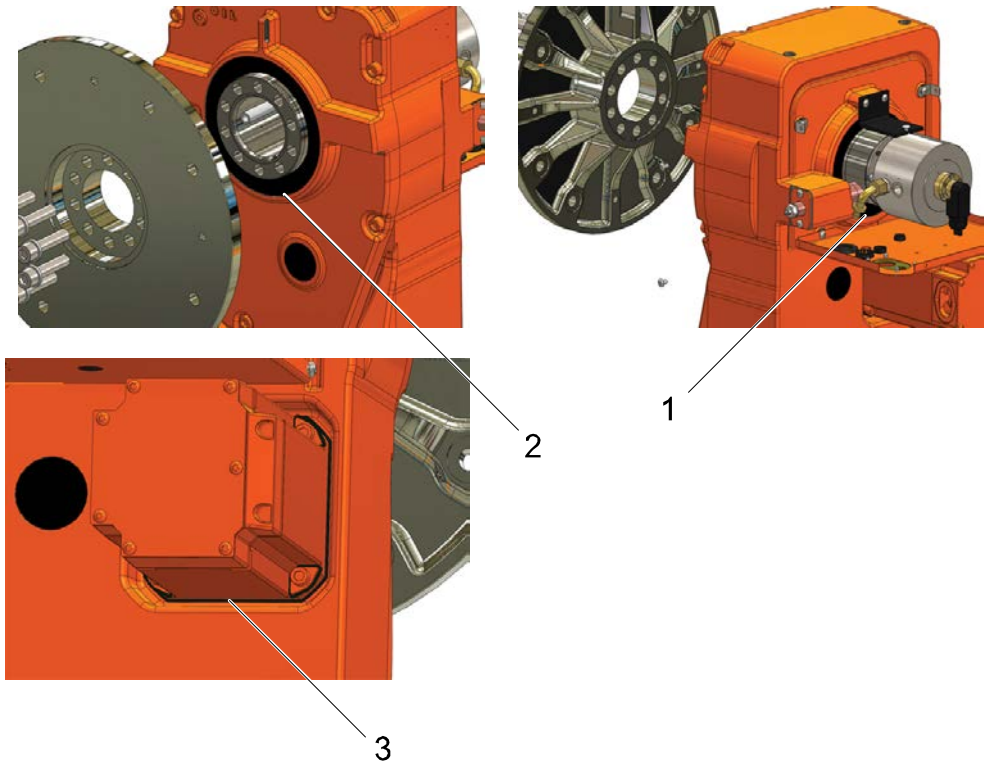

xx1000000250

| | |
|---|---------------|
| 1 | Axis sealing |
| 2 | Axis sealing |
| 3 | Motor sealing |

Inspection procedure

| | Action | Information |
|---|---------------------------------------|-------------|
| 1 | Check all sealing areas for oil leak. | |

5.5 Cleaning activities

5.5.1 Cleaning the IRP



DANGER

Turn off all:

- electric power supply
- hydraulic pressure supply
- air pressure supply

to the robot, before entering the safeguarded space.

General

To secure high uptime it is important that the IRP is cleaned regularly. The frequency of cleaning depends on the environment in which the product works.

Different cleaning methods are allowed depending on the type of protection of the IRP.



Note

Always verify the protection type of the robot before cleaning.

Oil spills

Oil spills from gearboxes

Use the following procedure if any oil spills are detected that can be suspected to originate from a gearbox.

- 1 Inspect that the oil level in the suspected gearbox is according to the recommendations, see [Inspection activities on page 100](#).
- 2 Write down the oil level.
- 3 Inspect the oil level again after, for example, 6 months.
- 4 If the oil level is decreased then replace the gearbox.

Special cleaning considerations

This section specifies some special considerations when cleaning the robot.

- Always use cleaning equipment as specified. Any other cleaning equipment may shorten the life of the robot.
- Always check that all protective covers are fitted to the robot before cleaning.
- Never point the water jet at connectors, joints, sealings, or gaskets.
- Do not use compressed air to clean the robot.
- Never use solvents that are not approved by ABB to clean the robot.
- Do not spray from a distance closer than 0.4 m.
- Do not remove any covers or other protective devices before cleaning the robot.

Continues on next page

5 Maintenance

5.5.1 Cleaning the IRP

Continued

Cleaning methods

The following table defines what cleaning methods are allowed depending on the protection type.

| Protection type | Cleaning method | | | |
|-----------------|-----------------|------------------------------------|--|------------------------------|
| | Vacuum cleaner | Wipe with cloth | Rinse with water | High pressure water or steam |
| Standard | Yes | Yes. With mild cleaning detergent. | Yes. It is highly recommended that the water contains a rust-prevention solution and that the manipulator is dried afterwards. | No |

Cleaning with water and steam

Instructions for rinsing with water

ABB robots with protection types *Standard*, *Foundry Plus*, *Wash*, or *Foundry Prime* can be cleaned by rinsing with water (water cleaner), provided that the robot is not equipped with the option of motor cooling fans.²

The following list defines the prerequisites:

- Maximum water pressure at the nozzle: 700 kN/m² (7 bar)¹
- Fan jet nozzle should be used, min. 45° spread
- Minimum distance from nozzle to encapsulation: 0.4 meters
- Maximum flow: 20 liters/min¹

¹ Typical tap water pressure and flow

Cables

Movable cables need to be able to move freely:

- Remove waste material, such as sand, dust and chips, if it prevents cable movement.
- Clean the cables if they have a crusty surface, for example from dry release agents.

² See [Cleaning methods on page 112](#) for exceptions.

5.6 Lubrication activities

5.6.1 Lubricating the current collector

**DANGER**

Turn off all electrical power, hydraulic and pneumatic pressure supplies before entering the workspace of the manipulator.

See also [Safety on page 15](#).

Current collector

The function of the current collector is to transfer the weld current through the rotary unit. This takes place through a spring-loaded contact bar against the shaft. The contact bar needs to be lubricated approximately after 400 hours of operation. This should be done using a special grease, P34 from Nies, article number: 0501869-001.

Required equipment


| Equipment | Note |
|----------------|---|
| Grease | Grease type: P34 from Nies. Article number: 0501869002. |
| Standard tools | Standard toolkit on page 197 |
| Grease gun | |

Continues on next page


5 Maintenance

5.6.1 Lubricating the current collector
Continued

Lubricate

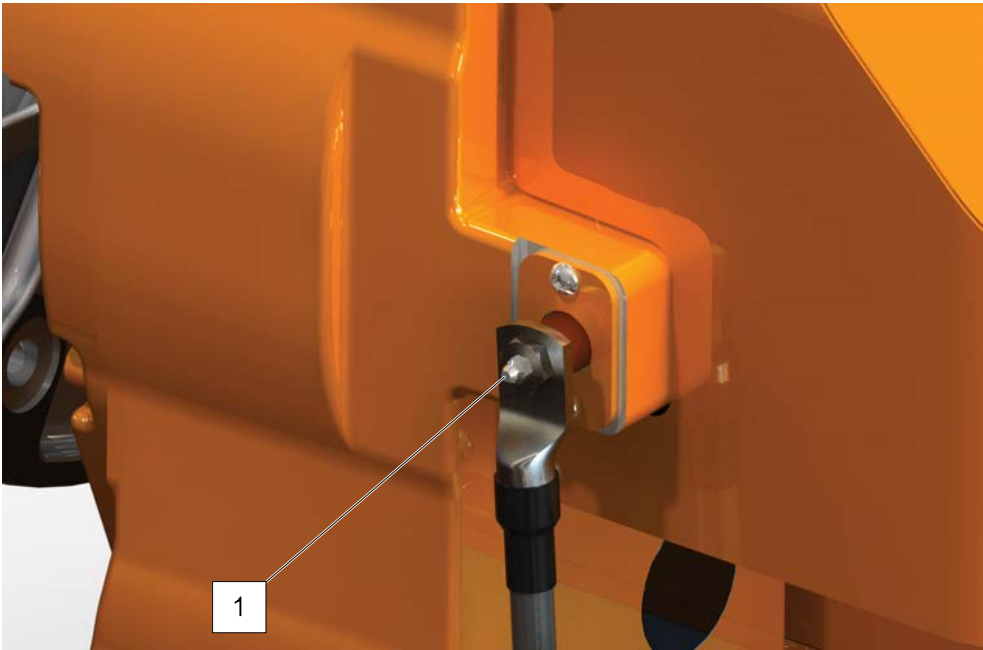


xx1000000024

| 1 | Lubrication nipple (4 mm) | |
|---|---|---|
| | Action | Information |
| 1 | Lubricate the current collector using a grease gun. | <div> Note Amount of grease: 12 ml.</div> |

5.6.2 Oil in gearboxes

Location of oil plugs

MTD/MID

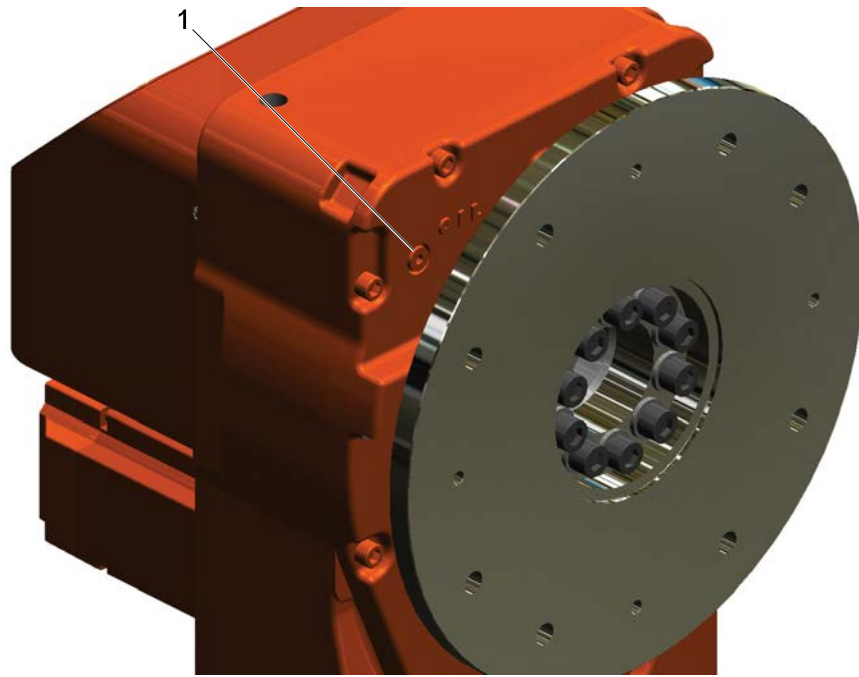

xx1000000083

| | |
|---|----------|
| 1 | Oil plug |
|---|----------|

Oil in gearbox MTD/MID

The oil in the gearbox does not need to be changed during the lifetime of the gearbox.

Type and amount of oil in gearboxes

Information about the type of lubrication, article number as well as the amount in the specific gearbox can be found in *Technical reference manual - Lubrication in gearboxes* available for registered users on myABB Business Portal, www.abb.com/myABB.

Before starting any inspection, maintenance, or changing activities of lubrication, **always** contact the local ABB Service organization for more information.

For ABB personnel: Always check ABB Library for the latest revision of the manual *Technical reference manual - Lubrication in gearboxes*, in order to always get the latest information of updates about lubrication in gearboxes. A new revision will be published on ABB Library immediately after updates.

This page is intentionally left blank

6 Repair

6.1 General procedures

6.1.1 Introduction

Structure of this chapter

This chapter describes repair activities for the IRP. Each procedure contains the information required to perform the activity, for example spare parts numbers, required special tools, and materials.



WARNING

Repair activities not described in this chapter must only be carried out by ABB.

Report replaced units



Note

When replacing a part on the IRP, report to your local ABB the serial number, the article number, and the revision of both the replaced unit and the replacement unit.

This is particularly important for safety equipment to maintain the safety integrity of the installation.

Safety information

Make sure to read through the chapter [Safety on page 15](#) before commencing any service work.



Note

If the IRP is connected to power, always make sure that the IRP is connected to protective earth and a residual current device (RCD) before starting any repair work.

For more information see:

- *Product manual - OmniCore V250XT Type B*
- *Product manual - OmniCore V400XT*

6 Repair

6.1.2 Mounting instructions for bearings

6.1.2 Mounting instructions for bearings

General

This section describes how to mount and grease different types of bearings on the robot.

Equipment

| Equipment, etc. | Article number | Note |
|-----------------|----------------|--|
| Grease | 3HAC042536-001 | Shell Gadus S2 Used to grease the bearings, if not specified otherwise. |

Assembly of all bearings


Attend to the following instructions while mounting a bearing on the robot.

| | Action | Note |
|---|---|------|
| 1 | To avoid contamination, let a new bearing remain in its wrapping until it is time for fitting. | |
| 2 | Ensure that the parts included in the bearing fitting are free from burrs, grinding waste, and other contamination. Cast components must be free of foundry sand. | |
| 3 | Bearing rings, inner rings, and roller elements must not be subjected to direct impact. The roller elements must not be exposed to any stresses during the assembly work. | |

Assembly of tapered bearings

Follow the preceding instructions for the assembly of the bearings when mounting a tapered bearing on the robot.

In addition to those instructions, the following procedure must be carried out to enable the roller elements to adjust to the correct position against the race flange.

| | Action | Note |
|---|--|------|
| 1 | Tension the bearing gradually until the recommended pre-tension is achieved.  Note The roller elements must be rotated a specified number of turns before pre-tensioning is carried out and also rotated during the pre-tensioning sequence. | |
| 2 | Make sure the bearing is properly aligned as this will directly affect the durability of the bearing. | |

Greasing of bearings



Note

This instruction is not valid for solid oil bearings.

Continues on next page

The bearings must be greased after assembly according to the following instructions:

- The bearings must not be completely filled with grease. However, if space is available beside the bearing fitting, the bearing may be totally filled with grease when mounted, as excessive grease will be pressed out from the bearing when the robot is started.
- During operation, the bearing should be filled to 70-80% of the available volume.
- Ensure that grease is handled and stored properly to avoid contamination.

Grease the different types of bearings as following description:

- *Grooved ball bearings* must be filled with grease from both sides.
- *Tapered roller bearings* and axial needle bearings must be greased in the split condition.

6 Repair

6.1.3 Mounting instructions for sealings

6.1.3 Mounting instructions for sealings

General

This section describes how to mount different types of sealings.

Equipment

| Consumable | Article number | Note |
|------------|----------------|----------------|
| Grease | 3HAC042536-001 | Shell Gadus S2 |

Rotating sealings

The following procedures describe how to fit rotating sealings.



CAUTION


Please observe the following before commencing any assembly of sealings:

- Protect the sealing during transport and mounting, especially the main lip on radial sealings.
- Keep the sealing in its original wrappings or protect it well before actual mounting.
- The fitting of sealings and gears must be carried out on clean workbenches.
- Use a protective sleeve for the main lip during mounting, when sliding over threads, keyways or other sharp edges.
- Do not lubricate a static side of a sealing with grease, since this may result in movement of the sealing during operation.

The only exception for lubrication of static sides of a sealing, is to use P-80 rubber lubrication gel against certain aluminium surfaces. If usage of P-80 is relevant, it is stated in the repair procedures.

Radial sealings

A radial sealing consists of a flexible rubber lip bonded to a rigid metal case. Only one side of the sealing is static with a metal insert.

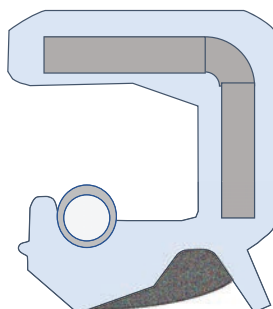



xx2300000433

Continues on next page

6.1.3 Mounting instructions for sealings

Continued

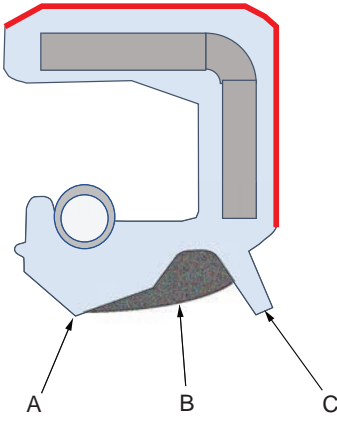
| | Action | Note |
|---|--|---|
| 1 | Check the sealing to ensure that: <ul style="list-style-type: none"> • The sealing is of the correct type. • There is no damage on the main lip. | |
| 2 | Inspect the shaft surface before mounting. If scratches or damage are found, the shaft must be replaced since it may result in future leakage. Do not try to grind or polish the shaft surface to get rid of the defect. | |
| 3 | Lubricate the sealing with grease just before fitting. (Not too early - there is a risk of dirt and foreign particles adhering to the sealing.) Fill 2/3 of the space between the dust lip and the main lip with grease. If the sealing is without dust lip, just lubricate the main lip with a thin layer of grease. | <p>Article number is specified in Equipment on page 120.</p>  <p>xx2000000071</p> <p>A Main lip B Grease C Dust lip</p> <p> Note</p> <p>Ensure that no grease is applied to the red marked surface.</p> |

Continues on next page

6 Repair

6.1.3 Mounting instructions for sealings

Continued
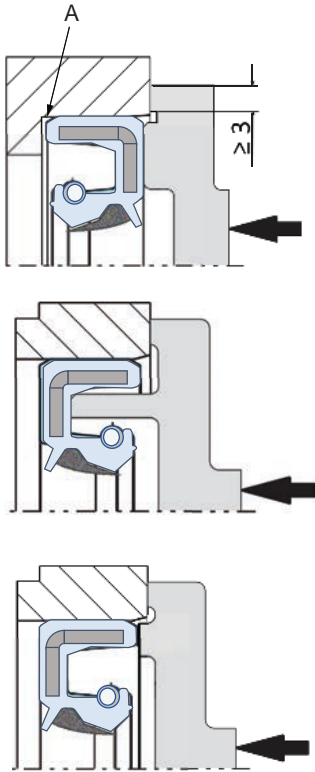
| | Action | Note |
|---|---|---|
| 4 | Mount the sealing correctly with a mounting tool. Never hammer directly on the sealing as this may result in leakage. |  <p>xx2000000072</p> <p>A Gap</p> |

Flange sealings and static sealings

The following procedure describes how to fit flange sealings and static sealings.

| | Action |
|---|---|
| 1 | Check the flange surfaces. They must be even and free from pores. It is easy to check flatness using a gauge on the fastened joint (without sealing compound). If the flange surfaces are defective, the parts may not be used because leakage could occur. |
| 2 | Clean the surfaces properly in accordance with the recommendations of ABB. |
| 3 | Distribute the sealing compound evenly over the surface. |
| 4 | Tighten the screws evenly when fastening the flange joint. |

O-rings

The following procedure describes how to fit o-rings.

| | Action | Note |
|---|--|--|
| 1 | Ensure that the correct o-ring size is used. | |
| 2 | Check the o-ring for surface defects, burrs, shape accuracy, or deformation. | Defective o-rings, including damaged or deformed o-rings, may not be used. |

Continues on next page

6.1.3 Mounting instructions for sealings
Continued

| | Action | Note |
|---|---|------|
| 3 | Check the o-ring grooves and mating surfaces. They should be free of pores, contamination and obvious scratches/damage. | |
| 4 | Lubricate the o-ring with grease. | |
| 5 | Tighten the screws evenly while assembling. | |
| 6 | Check that the o-ring is not squashed outside the o-ring groove. | |

6 Repair

6.1.4 Cut the paint or surface on the robot before replacing parts

6.1.4 Cut the paint or surface on the robot before replacing parts


General

Follow the procedures in this section whenever breaking the paint of the robot during replacement of parts.

Required equipment

| Equipment | Spare parts | Note |
|--------------------------------------|----------------|----------------|
| Cleaning agent | | Ethanol |
| Knife | | |
| Lint free cloth | | |
| Touch up paint Standard/Foundry Plus | 3HAC067974-001 | Graphite White |

Removing
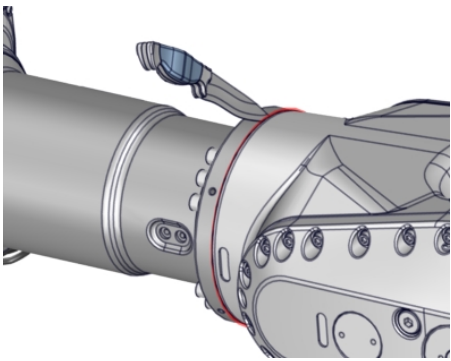
| | Action | Description |
|---|--|---|
| 1 | Cut the paint with a knife in the joint between the part that will be removed and the structure, to avoid that the paint cracks. |  xx2300000950 |
| 2 | Carefully grind the paint edge that is left on the structure to a smooth surface. | |

6.2 Frame parts

6.2.1 Replacing frame parts



DANGER

Turn off all:

- electric power supply
- hydraulic pressure supply
- air pressure supply

to the robot, before entering the safeguarded space.

Continues on next page

6 Repair

6.2.1.1 Overview


6.2.1.1 Overview

General

The following procedures in this section details how to remove the gearbox axes 1-3.

- [Remove the station frame on page 128](#)
- [Refit station frame on page 128](#)
- [Remove the station frame on page 128](#)
- [Remove the frame and covers on page 132](#)
- [Refit the frame and covers on page 134](#)
- [Remove the turning disc, MTD unit on page 135](#)
- [Refit turning disc, MTD unit on page 135](#)

Frame parts

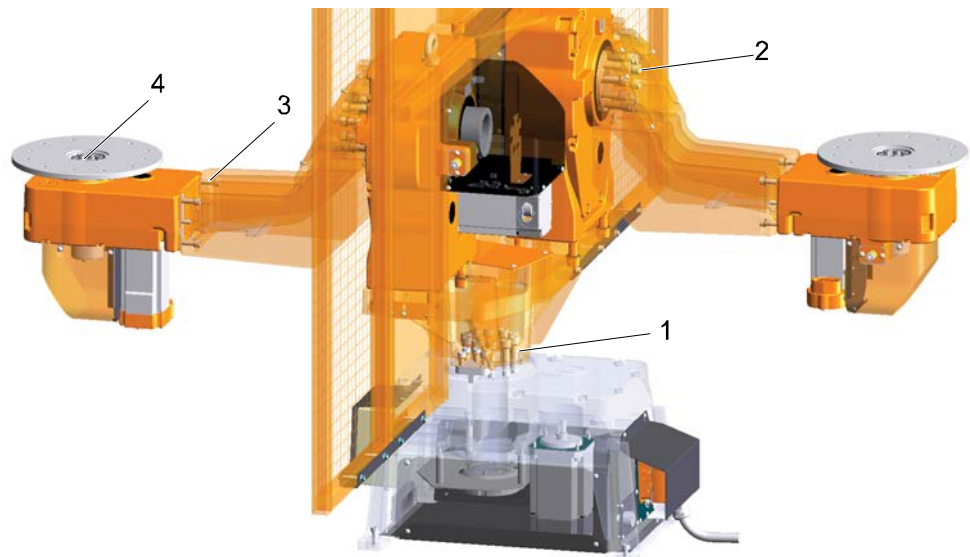

xx1000000019

| | |
|---|----------------------|
| 1 | Base frame screws |
| 2 | Station frame screws |
| 3 | Rotary units screws |
| 4 | Turning disc screws |

Required equipment

| Equipment | Note |
|----------------|--|
| Standard tools | For more information, see Standard toolkit on page 197 . |

Continues on next page

Screw joints axis


| MTD/MID | Axis | Screw dim. 12.9 UNB | Screw dim. 12.9 | Tightening torque (Nm) |
|-------------------------|-------------------|------------------------|--------------------|---------------------------|
| MTD 250 | Turning axis | 10x40 | | 70 |
| MTD 500 | Turning axis | 16x70 | | 300 |
| MTD 750 | Turning axis | 16x70 | | 300 |
| MTD 2000 | Turning axis | 20x90 | | 550 |
| MTD 5000 | Turning axis | 24x110 | | 950 |
| MID 2.1 | Foot - Frame | | 20x90 | 550 |
| Support collar MTD 250 | Spherical bearing | | 10x40 | 70 |
| Support collar MTD 500 | Spherical bearing | | 16x70 | 300 |
| Support collar MTD 750 | Spherical bearing | | 16x70 | 300 |
| Support collar MTD 2000 | Spherical bearing | | 20x90 | 550 |

6 Repair

6.2.1.2 Replacing the station frame

6.2.1.2 Replacing the station frame

Remove the station frame

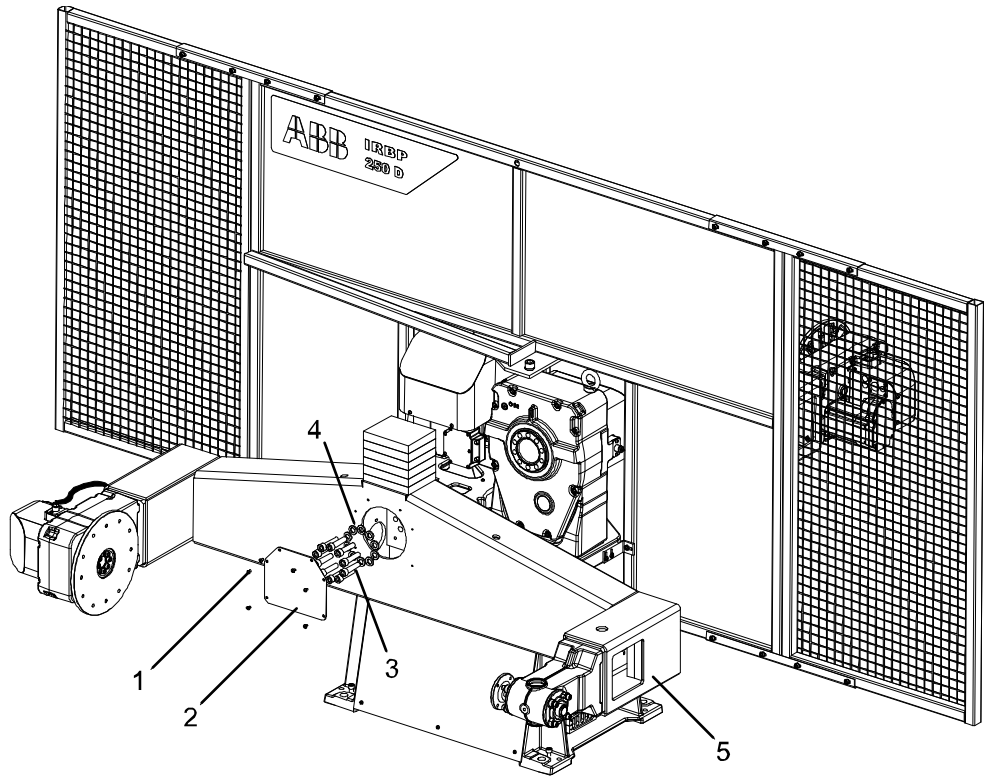

xx1000000015

| | |
|---|---------------------------------------|
| 1 | Screw |
| 2 | Cover plate |
| 3 | Attachment screws M16x70 12.9 Gleitmo |
| 4 | Washers |
| 5 | Station frame |


| | Action | Note |
|---|---|--|
| 1 | Loosen the screws (1) and remove the cover plate (2). | |
| 2 | Loosen the attachment screws. | |
| 3 | Lift the station frame. | Described in section Lifting frame parts on page 136 . |

Refit station frame

| | Action | Note |
|---|-----------------------------|--|
| 1 | Clean the contact surface | |
| 2 | Lift the station frame. | Described in section Lifting frame parts on page 136 . |
| 3 | Mount the attachment screws | Tightening torque according to table in Screw joints MTD axis. |

6.2.1.3 Replacing the base frame

Remove the base frame

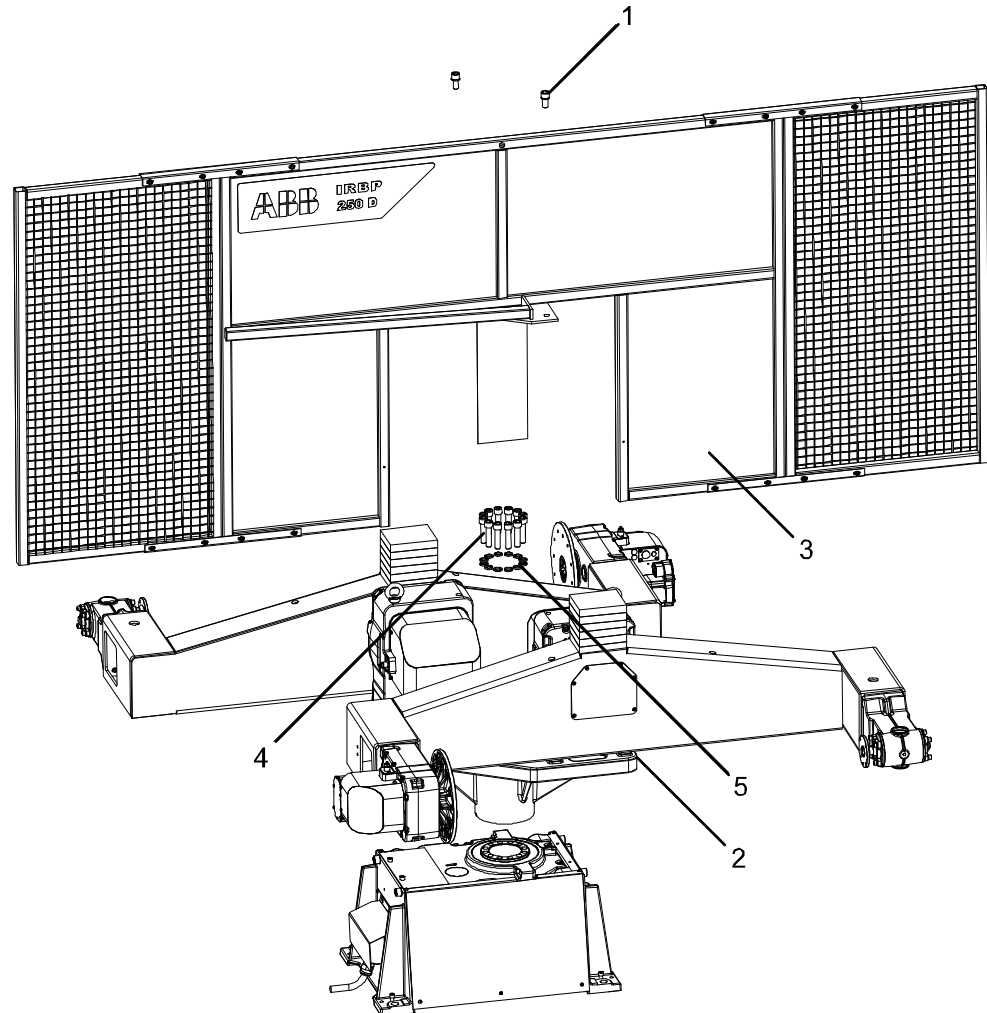

xx100000014

| | |
|---|-------------------------------------|
| 1 | Screws |
| 2 | Base frame |
| 3 | Station shield |
| 4 | Attachment screws M20x90 Steel 12.9 |
| 5 | Washers |


| | Action | Note |
|---|---|------|
| 1 | Remove the screws holding the station shield. | |

Continues on next page


6 Repair

6.2.1.3 Replacing the base frame


Continued

| | Action | Note |
|---|------------------------------------|--|
| 2 | Remove the cover on the base frame |  xx1000000115 |
| 3 | Remove the attachment screws | |
| 4 | Lift the base frame. | Described in section Lifting frame parts on page 136 . |

Refit base frame
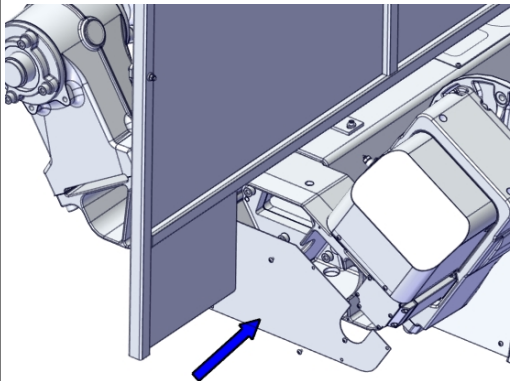
| | Action | Note |
|---|--|--|
| 1 | Clean the contact surface. | |
| 2 | Lift the base frame. | Described in section Lifting frame parts on page 136 . |
| 3 | Mount the attachment screws. | Tightening torque according to table in Screw joints MTD axis. |
| 4 | Remove the lifting accessories from the frame. | |
| 5 | Valid for IRP R Refit the plates at the frame ends. |  xx1700001322 |

Continues on next page

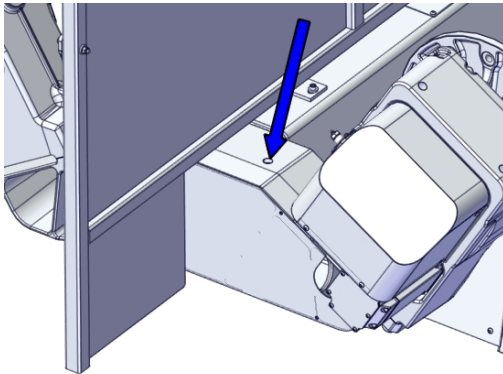
| | Action | Note |
|---|--|--|
| 6 | Valid for IRP R Refit the protection plugs to the lifting eye holes. |  xx1700001324 |
| 7 | Refit the station shield. | |

6 Repair

6.2.1.4 Replacing the frame and covers

6.2.1.4 Replacing the frame and covers



Remove the frame and covers

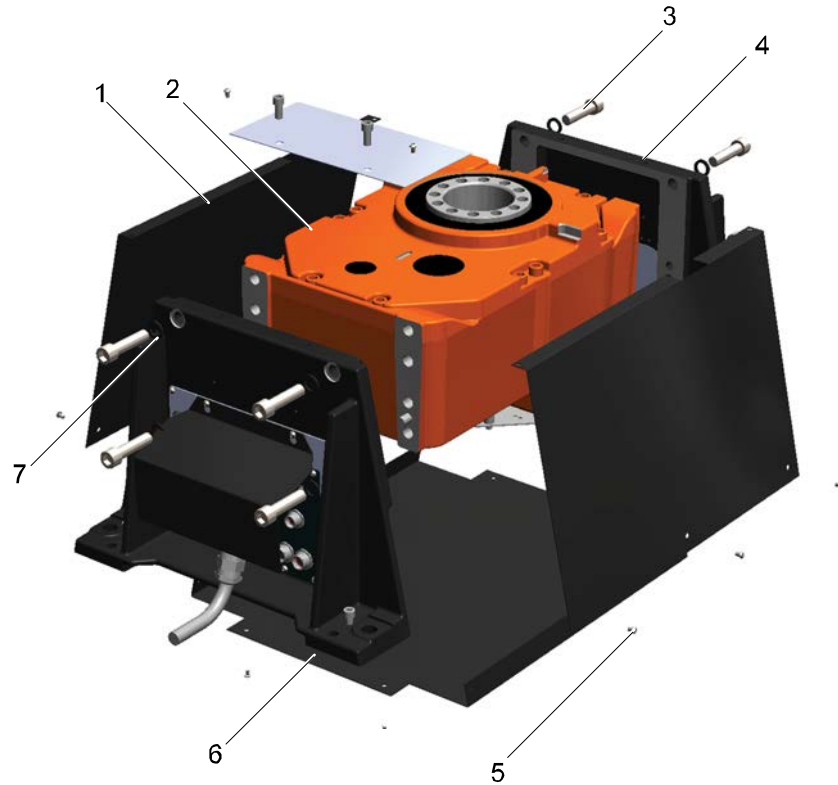

xx1000000020

| | |
|---|------------------------------------|
| 1 | Side cover |
| 2 | Rotary Unit |
| 3 | Attachment screw M20x90 Steel 12.9 |
| 4 | Frame |
| 5 | Screw M6x10 |
| 6 | Bottom plate |
| 7 | Washer 21x31/ 4 mm |


Continues on next page
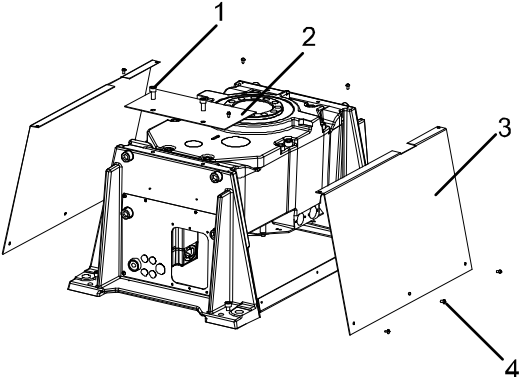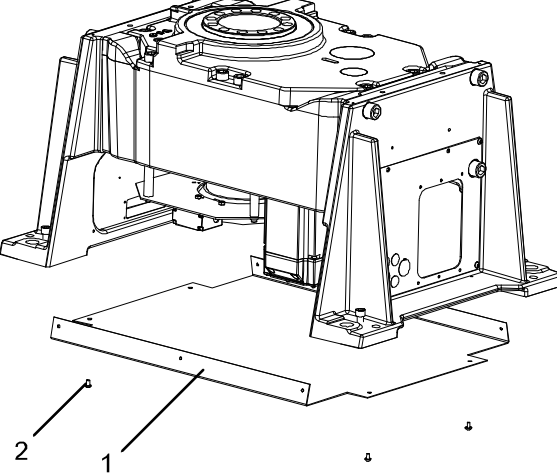
| | Action | Note |
|---|---|--|
| 1 | <p>1 Unscrew (4) and remove the side covers (3).</p> <p>2 Unscrew (1) and remove the cover plate (2).</p> |  <p>xx1000000006</p> <p>1 Screw 2 Cover plate 3 Side cover 4 Screw M6x10</p> |
| 2 | <p>Unscrew (2) and remove the bottom plate (1).</p> |  <p>xx1000000007</p> <p>1 Bottom plate 2 Screw M6x10</p> |
| 3 | <p>Remove the electrical connection.</p> | |


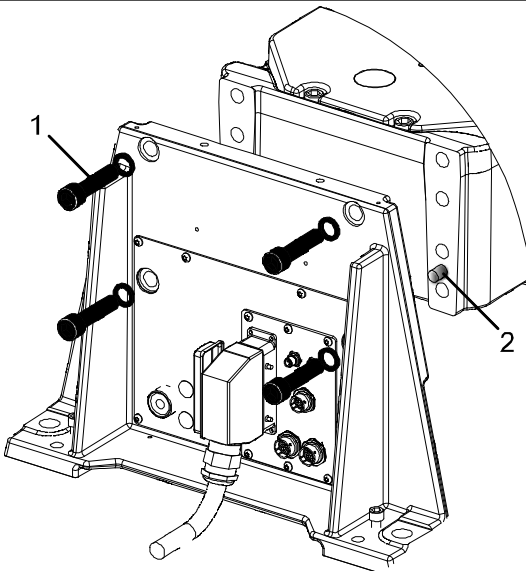
Continues on next page

6 Repair

6.2.1.4 Replacing the frame and covers
Continued

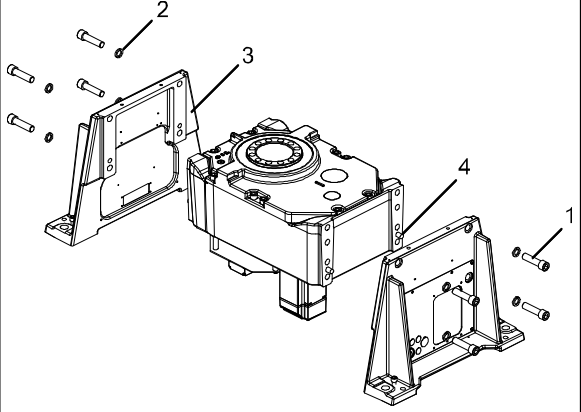
| Action | Note |
|--|--|
| 4 Unscrew (1) and loose the washers (2) and remove the two frames (3). |  <p>xx1000000008</p> <p>1 Attachment screw M20x90 Steel 12.9 2 Washers 3 Frame 4 Guide pin</p> |

Refit the frame and covers

| Actions | Note |
|--|--|
| 1 Mount the frames using the attachment screws M20x90. <ul style="list-style-type: none">Tightening torque is 550 Nm <div> Note Use Molycote-lubricant for the screw joints.</div> |  <p>xx1000000077</p> <p>1 Attachment screw M20x90 Steel 12.9 2 Guide pin</p> |
| 2 Mount all electrical connections. | |
| 3 Mount the bottom plate. | |
| 4 Mount the side plates and cover. | |

6.2.1.5 Replacing the turning disc

Remove the turning disc, MTD unit

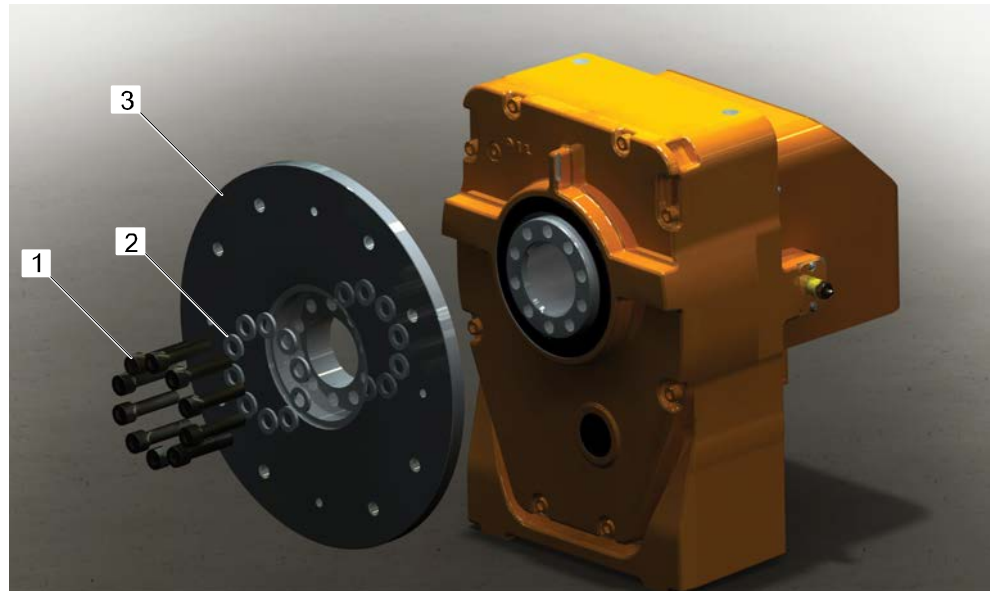

xx1000000023

| | | |
|---|-------------------|--|
| 1 | Attachment screws | |
| 2 | Washers | |
| 3 | Turning disc | |

| | Action | Note |
|---|--|------|
| 1 | Remove the screws (1) by holding the turning disc (3). | |

Refit turning disc, MTD unit

| | Action | Note |
|---|---|---|
| 1 | Refit the turning disc (3) with screws (1). | Tightening torque according to the table in Screw joints axis on page 127 . |

6 Repair

6.2.2 Lifting frame parts

6.2.2 Lifting frame parts

General

This section describes about the lifting of frame parts.

For information about the lifting of manipulator, see the section [Lifting the positioner on page 51](#). For information about replacing rotary units see the section [Replacing rotary unit on page 153](#).



Note

Lifting eyes (standard as well as with swivel) are not delivered with the IRP. Use lifting eyes and/or lifting eyes with swivel in the proper positions as described in the lifting instructions for each IRP. Always use lifting eyes with the correct lifting capacity according to the part being lifted.



WARNING

Do not work or walk under a suspended load!



DANGER

Turn off all:

- electric power supply
- hydraulic pressure supply
- air pressure supply

to the robot, before entering the safeguarded space.



WARNING


Always lift the manipulator in a safe manner, using lifting tools according to the specified lifting weight in section [Lifting weight](#).

Required equipment

| Equipment | Note |
|----------------------|--|
| Standard tools | See section Standard toolkit on page 197 . |
| Lifting accessories | Suitable for the specified lifting weight. |
| Lifting eyes | Suitable for the specified lifting weight. |
| Lifting eyes, swivel | Suitable for the specified lifting weight. |
| Winch min. 500 kg | |

Continues on next page

Lifting A, B station arm

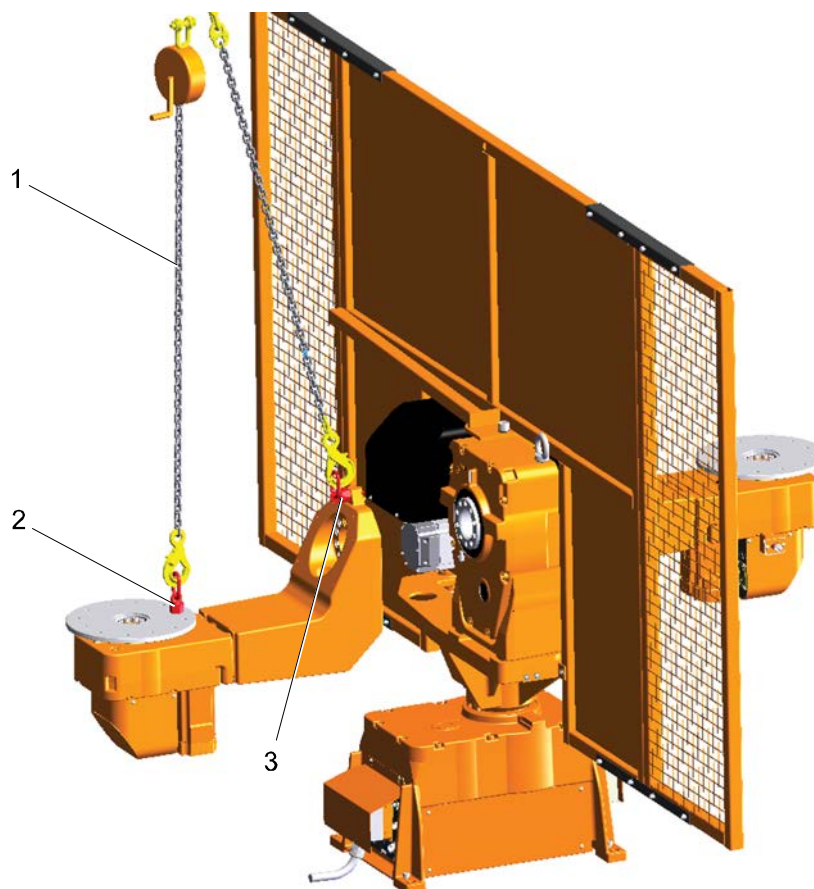

xx100000078

| | |
|---|---------------------------|
| 1 | Winch min. 500 Kg |
| 2 | Lifting eye, swivel |
| 3 | Lifting eye, swivel 14 mm |

| Frame parts | Lifting weight |
|-----------------------|----------------|
| 250 A/B | 117 kg |
| 500/750A, dist. =1000 | 250 kg |
| 500/750 A/B | 270 kg |


| | Action | Note |
|---|--|------|
| 1 | Attach the lifting eyes with swivel, as shown in the figure. | |
| 2 | Stretch the lifting chains. | |
| 3 | Remove the attachment screws. | |
| 4 | Lift the gearbox and the frame. | |

Continues on next page

6 Repair

6.2.2 Lifting frame parts
Continued

Lifting A, B station frame

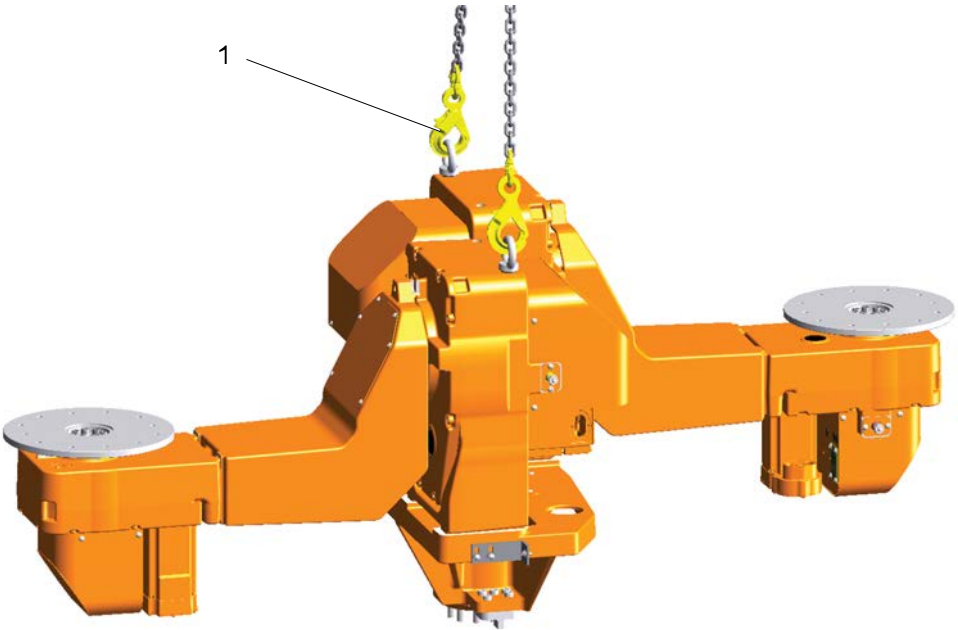


xx1000000125

| 1 | Lifting eye (2 pcs) | |
|-------------|---|----------------|
| Frame parts | | Lifting weight |
| 250B | | 640 kg |
| 500/750B | | 1,250 kg |
| | Action | Note |
| 1 | Attach the lifting eyes as shown in the figure. | |
| 2 | Stretch the lifting chains | |
| 3 | Remove the attachment screws | |
| 4 | Lift the gearbox and the frame | |

Continues on next page

Lifting K stations

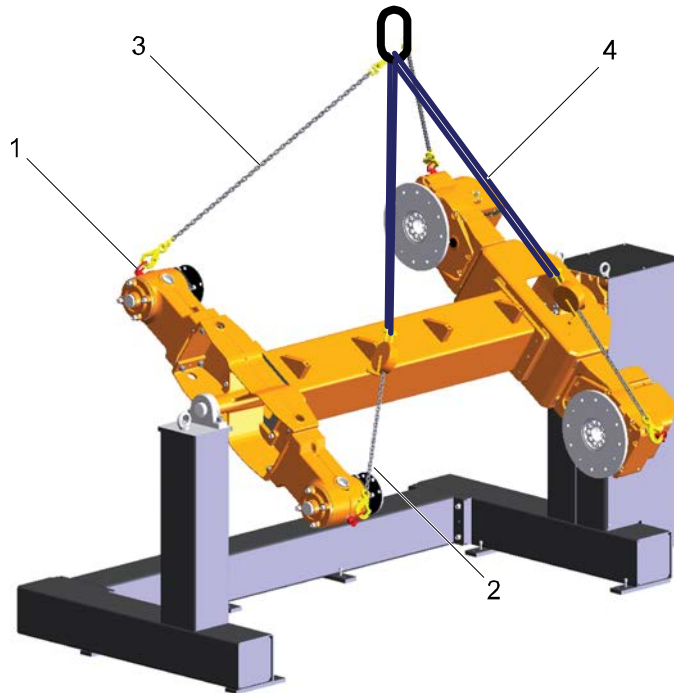

xx100000080

| | |
|---|------------------------------|
| 1 | Lifting eyes, swivel (4 pcs) |
| 2 | Winch min.500 Kg |
| 3 | Lifting chain |
| 4 | Lifting sling |

| Frame parts | Lifting weight |
|--------------------------|----------------|
| 250K, D=1000, L=1600 | 454 kg |
| 250K, D=1000, L=4000 | 606 kg |
| 250K, D=1200, L=1600 | 500 kg |
| 250K, D=1200, L=4000 | 652 kg |
| 500/750K, D=1200, L=1600 | 975 kg |
| 500/750K, D=1200, L=4000 | 1,188 kg |
| 500/750K, D=1400, L=1600 | 1,036 kg |
| 500/750K, D=1400, L=4000 | 1,248 kg |


| | Action | Note |
|---|---|------|
| 1 | Attach the lifting eyes as shown in the figure. | |
| 2 | Stretch the lifting chains | |
| 3 | Remove the attachment screws | |
| 4 | Lift the gearbox and the frame | |

Continues on next page

6 Repair

6.2.2 Lifting frame parts
Continued

Lifting R stations



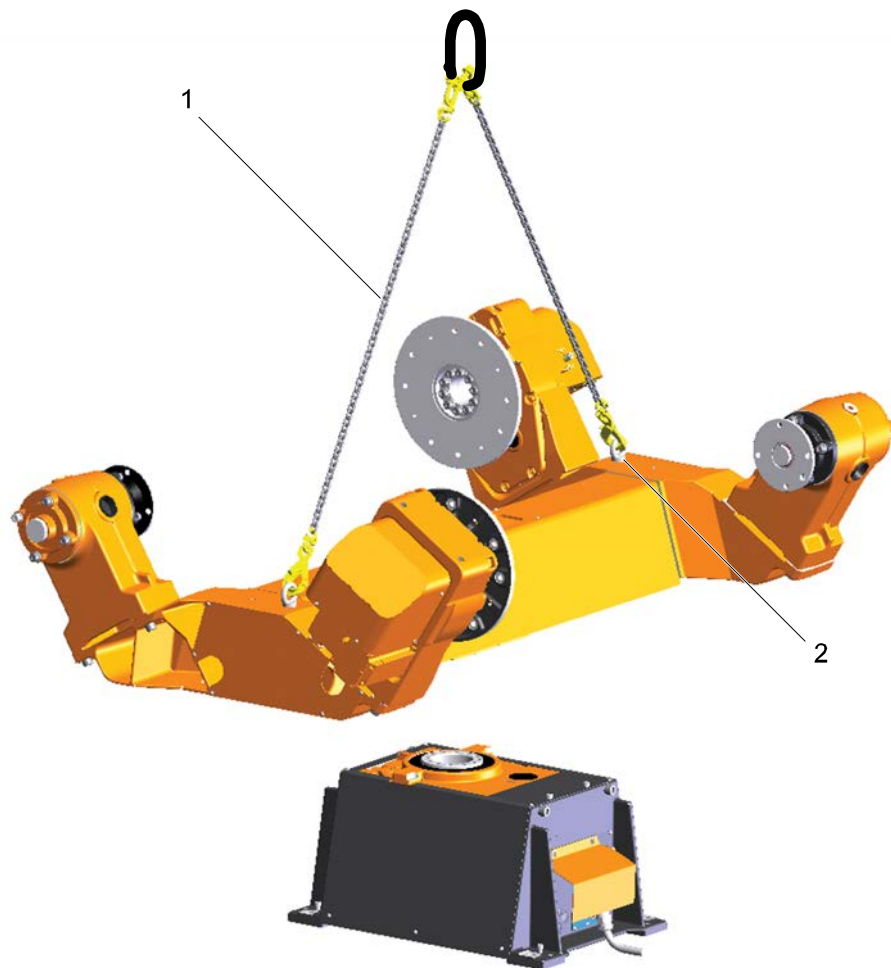


xx1000000081

| | |
|---|---------------------------|
| 1 | Lifting chain |
| 2 | Lifting eye 24 mm (2 pcs) |

| Frame parts | Lifting weight |
|---------------------------|----------------|
| 300R, L=1250 | 376 kg |
| 300R, L=1600 | 394 kg |
| 600/1000R, D=1000, L=1600 | 828 kg |
| 600/1000R, D=1000, L=2000 | 853 kg |
| 600/1000R, D=1200, L=1600 | 884 kg |
| 600/1000R, D=1200, L=2000 | 909 kg |

Continues on next page
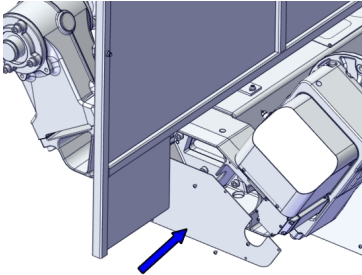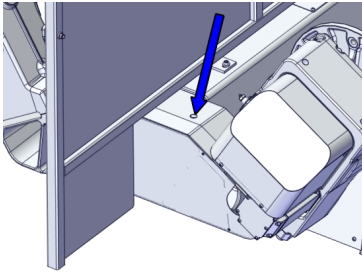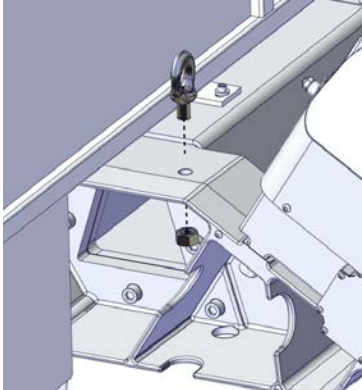
| | Action | Note |
|---|--|--|
| 1 | Remove the plates to get access to the lifting eye holes in the frame. |  xx1700001322 |
| 2 | Remove the protection plugs from the lifting eye holes. |  xx1700001324 |
| 3 | Attach the lifting eyes. | 2 pcs  xx1700001323 |
| 4 | Stretch the lifting chains | |
| 5 | Remove the attachment screws | |
| 6 | Lift the gearbox and the frame | |

Continues on next page

6 Repair

6.2.2 Lifting frame parts
Continued

Lifting rotary units



xx1000000116

| Frame parts | | Lifting weight |
|-------------|--|----------------|
| MTD 5000 | | 770 kg |
| MTD 2000 | | 340 kg |
| MTD 750 | | 180 kg |
| MTD 500 | | 180 kg |
| MTD 250 | | 70 kg |
| MID 1.1 | | 180 kg |
| MID 1.2 | | 165 kg |
| MID 2.1 | | 370 kg |
| MID 2.2 | | 285 kg |

| | Action | Note |
|---|---|------|
| 1 | Attach the lifting eyes as shown in the figure. | |
| 2 | Stretch the lifting chains | |
| 3 | Remove the attachment screws | |
| 4 | Lift the gearbox | |

6.3 Lower frame and base

6.3.1 Replacing stop lugs

General

The function of the stop lug is to allow the positioner after station interchange to be positioned in an accurate position.

Replace the station stop lug immediately if it is damaged.



DANGER

Turn off all:

- electric power supply
- hydraulic pressure supply
- air pressure supply

to the robot, before entering the safeguarded space.



Note

Keep the contact surfaces clean.

Required equipment

| Equipment | Note |
|----------------|--|
| Standard tools | For more information, see Standard toolkit on page 197 . |
| Stop lug | Product Manual Sparepart IRP |


Continues on next page

6 Repair

6.3.1 Replacing stop lugs

Continued


Remove stop lug

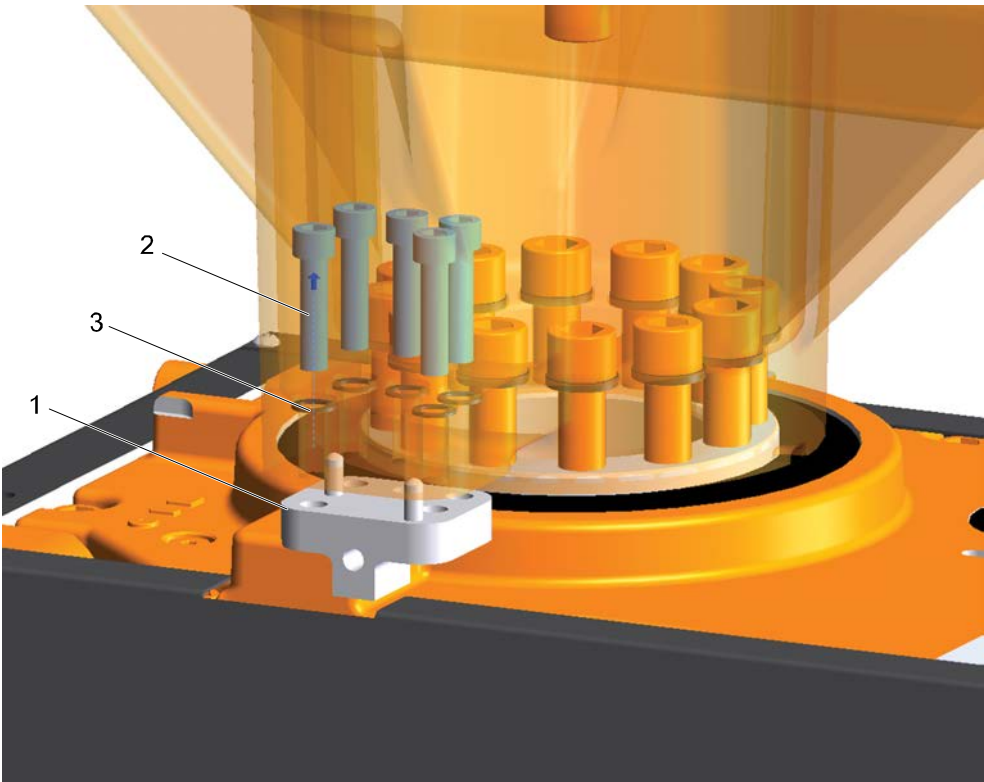


xx1000000082

| | |
|---|--------------------------------|
| 1 | Stop lug |
| 2 | Attachment screw M12 x 50/12.9 |
| 3 | Washer |

Continues on next page
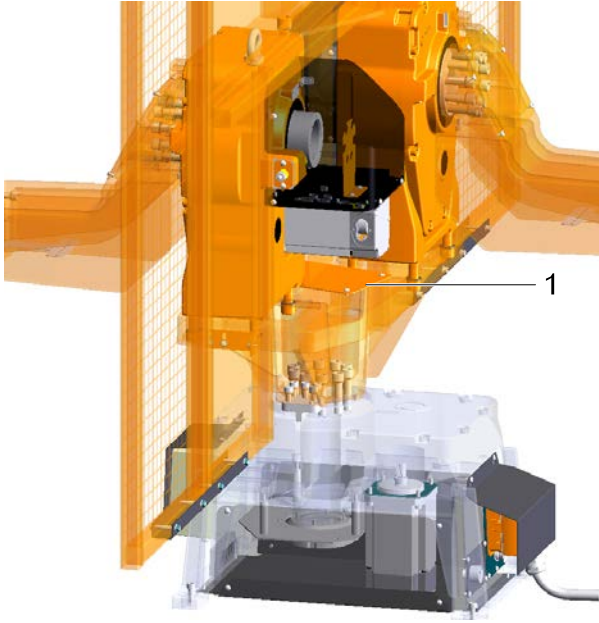
| | Action | Mote |
|---|-------------------------------|---|
| 1 | Remove the cover (1). |  <p>xx1000000298</p> <p>1 Cover</p> |
| 2 | Remove the attachment screws. | Use standard tools |
| 3 | Remove the stop lug. | |

Refit stop lug

| | Action | Note |
|---|---|--|
| 1 | Mount the stop lug.  Note Always use the two locking pins | |
| 2 | Mount the attachment screws. | Use standard tools, Tightening torque 140 Nm. |
| 3 | Mount the cover (1) | Use standard torque, see section Screw joints on page 63 . |

6 Repair

6.4.1 Replacing motors

6.4 Motors

6.4.1 Replacing motors

General

The procedure below details how to remove and refit motors, and how to isolation check the motor.




CAUTION

Galvanic contact between the gearbox and the motor can seriously damage the motor, see section [Checking insulation on page 152](#).

Required equipment

| Equipment | Note |
|----------------|--|
| Standard tools | For more information, see Standard toolkit on page 197 . |
| Spareparts | |

Continues on next page

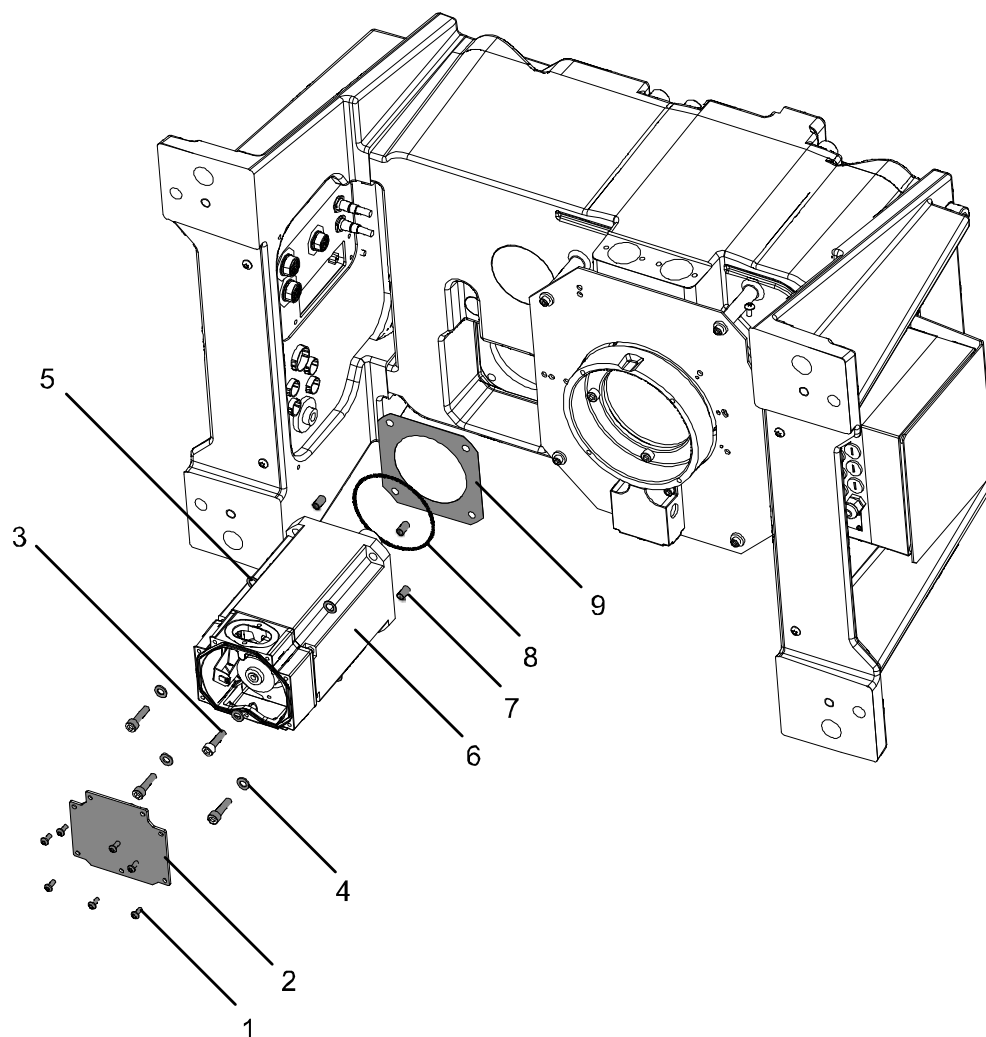Remove motor rotary units axis 1

xx1000000017


| | |
|---|---------------------|
| 1 | Screws |
| 2 | Cover plate |
| 3 | Attachment screws |
| 4 | Plain washers |
| 5 | Insulating washer |
| 6 | Motor |
| 7 | Insulating tube |
| 8 | O-ring |
| 9 | Insulating material |

Continues on next page


6 Repair

6.4.1 Replacing motors


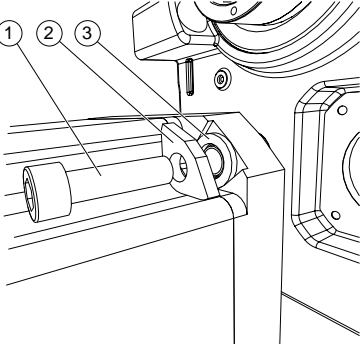
Continued

| | Action | Note |
|---|---|---|
| 1 |  DANGER Turn off all: <ul style="list-style-type: none">• electric power supply• hydraulic pressure supply• air pressure supply to the robot, before entering the safeguarded space. | |
| 2 | Remove all the covers on the manipulator foot. Not required on rotary units for axis two or three. | Detailed in the section Replacing frame parts on page 125 . |
| 3 | Remove the cover plate on top of the motor by unscrewing the attachment screws (1-2). | |
| 4 | Remove the cable gland cover at the cable exit by unscrewing its the attachment screws. | |
| 5 | Disconnect all connectors. | |
| 6 | Remove the motor by unscrewing the attachment screws and plain washers (3-4). | |
| 7 | Remove the o-ring (8). | |
| 8 | Remove the insulating material and insulating tubes (5, 7, 9). | |

Refit motor rotary units axis 1

|  CAUTION Do not mix motors <i>valid from</i> serial number SEROP POF-110001- & CNAUS POF-510001-, with motors <i>valid up to</i> serial numbers SEROP -POF 110000 & CNAUS -POF 510000. They are not compatible. | | |
|--|---|---|
| | Action | Note |
| 1 | Refit the insulating material and insulating tubes (7-9). | |
| 2 | Refit the o-ring (8) on the motor. | Replace the o-ring if necessary. See superport in the spare parts manual. |

Continues on next page

| | Action | Note |
|---|--|--|
| 3 | Refit the insulating washer (5).  Note If countersunk holes in motor flange. Make sure that the plane washer is mounted before the insulating washer to fill out the recess. |  xx1500002519 1 Attachment screw 2 Insulating washer 3 Plane washer |
| 4 | Refit the motor using the attachment screws and plain washers (3-4). | Use standard torque, see section Screw joints on page 63 . |
| 5 | Connect all connectors. | |
| 6 | Refit the cable gland cover at the cable exit. | |
| 7 | Refit the cover plate (2). | |
| 8 | Refit all the covers on the manipulator foot. Only axis one. | Detailed in the section Replacing frame parts on page 125 . |


Continues on next page

6 Repair

6.4.1 Replacing motors


Continued

Remove MTD rotary unit motor, axis 2-3

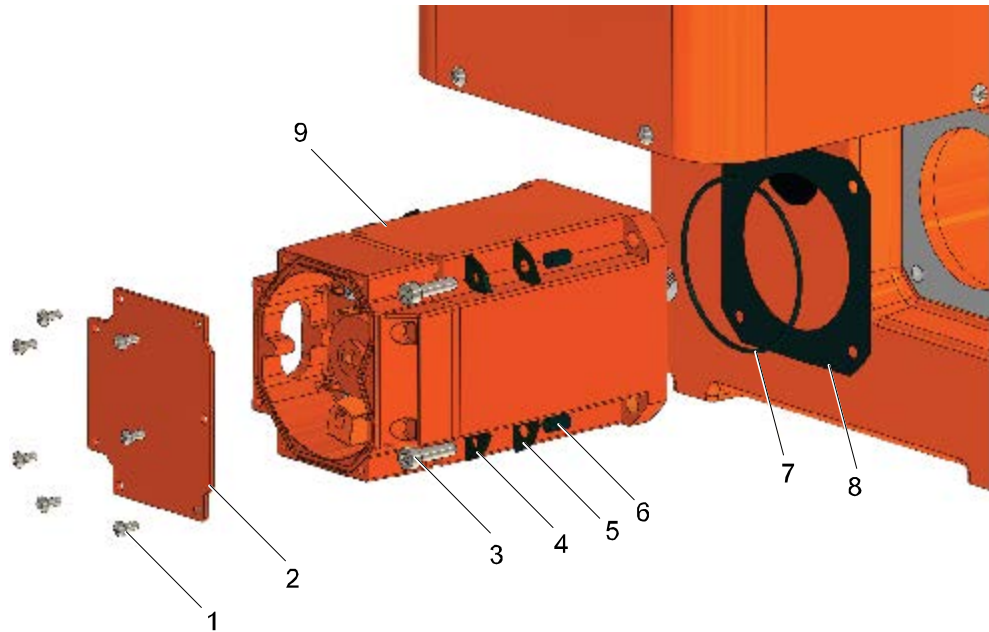

xx1000000206

| | |
|---|---------------------------------|
| 1 | Torx screw M5x12 |
| 2 | Cover plate |
| 3 | Hex socket head cap screw M8x30 |
| 4 | Washer |
| 5 | Insulating material |
| 6 | Insulating tube |
| 7 | O-ring |
| 8 | Insulating material |
| 9 | Motor |

| | Action | Note |
|---|---|------|
| 1 |  DANGER Turn off all: <ul style="list-style-type: none">• electric power supply• hydraulic pressure supply• air pressure supply to the robot, before entering the safeguarded space. | |
| 2 | Remove the cover plate (2) on top of the motor by unscrewing the attachment screws (1). | |
| 3 | Remove the cable gland cover at the cable exit by unscrewing its the attachment screws. | |
| 4 | Disconnect all connectors. | |
| 5 | Remove the motor by unscrewing the attachment screws and washers (3-4). | |


Continues on next page

| | Action | Note |
|---|--|------|
| 6 | Remove the motor (9). | |
| 7 | Remove the o-ring (7). | |
| 8 | Remove the insulating material and insulating tubes (5, 6, 8). | |

Refit MTD rotary unit motor, axis 2-3

**CAUTION**

Do not mix motors *valid from* serial number SEROP POF-110001- & CNAUS POF-510001-, with motors *valid up to* serial numbers SEROP -POF 110000 & CNAUS -POF 510000. They are not compatible.

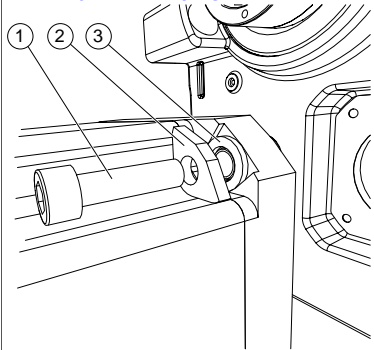
| | Action | Note |
|---|--|---|
| 1 | Refit the insulating material and insulating tubes (5, 6, 8). | |
| 2 | Refit the o-ring (7) on the motor. | |
| 3 | Refit the motor using the attachment screws and plain washers (4-5). <div data-bbox="501 1014 563 1070" data-label="Image"> </div> Note If countersunk holes in motor flange. Make sure that the plane washer is mounted before the insulating washer to fill out the recess. | Use standard torque, see section Screw joints on page 63 .  xx1500002519 1 Attachment screw 2 Insulating washer 3 Plane washer |
| 4 | Connect all connectors. | |
| 5 | Refit the cable gland cover at the cable exit. | |
| 6 | Refit the cover plate (2). | |

6 Repair

6.4.2 Checking insulation

6.4.2 Checking insulation

Measuring points

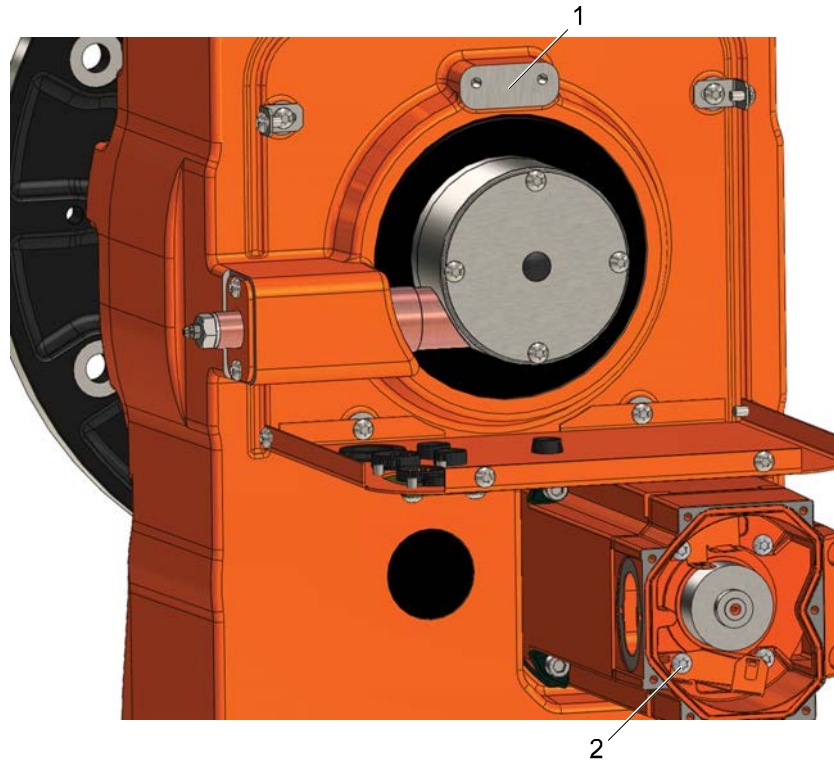

xx1000000209

| | |
|---|-------------------------------|
| 1 | Gearbox body (clean surface) |
| 2 | Ground point in the AC motor. |



DANGER

Turn off all:

- electric power supply
- hydraulic pressure supply
- air pressure supply

to the robot, before entering the safeguarded space.

Insulation resistance tests

Insulation resistance greater than 2.5 MOhm at 500 V DC between the output shaft (Gearbox body) and the ground point in the AC motor.

Voltage tests

1 kVolt AC 50/60 Hz - 1 sec. between the output shaft (gearbox body) and the ground point in the AC motor. The test voltage is to be supplied from a transformer with a minimum rating of 500 VA.

6.5 Rotary units

6.5.1 Replacing rotary unit

General

The gearbox is a precision gear drive specifically developed to withstand the high demands placed on robot applications, among others, rigidity and torsional strength, speed and accuracy. The gearbox is virtually free of play and never needs to be adjusted; conforming to requirements during its entire life. The gearbox is maintenance free and the lubricant is sufficient for the gearbox's entire life, equivalent to 40,000 hours of operation. For lifting instructions, see section [Lifting rotary units on page 142](#)



DANGER

Turn off all:

- electric power supply
- hydraulic pressure supply
- air pressure supply

to the robot, before entering the safeguarded space.



WARNING

Always lift the manipulator in a safe manner, using lifting tools according to the specified lifting weight in section [Lifting weight](#).

Required equipment

| Equipment | Note |
|----------------|--|
| Standard tools | For more information, see Standard toolkit on page 197 . |

Screw joints


| MTD/MID | Screw quality | Screw dim. | Qty. | Tightening torque (Nm) |
|----------|---------------|------------|------|------------------------|
| MTD 250 | 12.9 | M12 | 4 | 140 |
| MTD 500 | 12.9 | M20 | 4 | 550 |
| MTD 750 | 12.9 | M20 | 4 | 550 |
| MTD 2000 | 12.9 | M20 | 8 | 550 |
| MTD 5000 | 12.9 | M24 | 12 | 1150 |

Continues on next page

6 Repair

6.5.1 Replacing rotary unit
Continued

Remove rotary unit

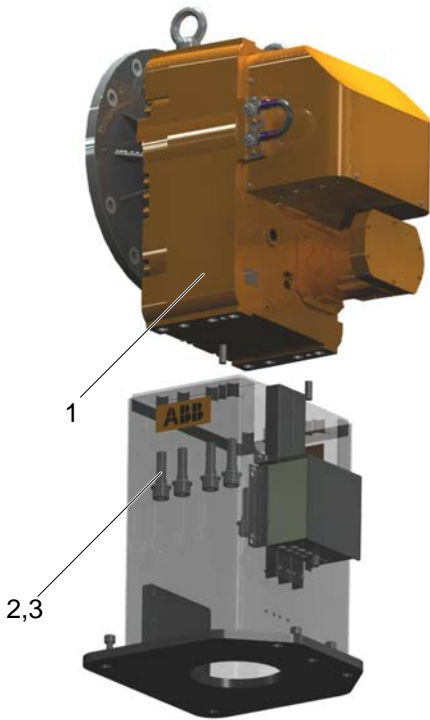

xx1000000013

| | | |
|---|-------------------|--|
| 1 | Rotary unit | |
| 2 | Attachment screws | |
| 3 | Washers | |

| | Action | Information |
|---|--|--------------------|
| 1 | Remove the cable harness from the motor, slipping. | |
| 2 | Attach the lifting accessories. | |
| 3 | Remove the attachment screws. | Use standard tools |
| 4 | Lift the rotary unit according to section Lifting rotary units on page 142 . | |

Refit rotary unit

| | Action | Information |
|---|--|--|
| 1 | Lift the rotary unit according to section Lifting rotary units on page 142 . | |
| 2 | Refit the attachment screws and washers. | Use standard tools, For Tightening torque see table Screw joints on page 153 |
| 3 | Assemble the cable harness. | |

6.6 Support collar

6.6.1 Replacing support collar axis

General



DANGER

Turn off all:


- electric power supply
- hydraulic pressure supply
- air pressure supply

to the robot, before entering the safeguarded space.

Required equipment

| Equipment | Note |
|----------------|--|
| Standard tools | Standard toolkit on page 197 |
| Spare parts | Product Manual Sparepart IRP |

Replacing support collar

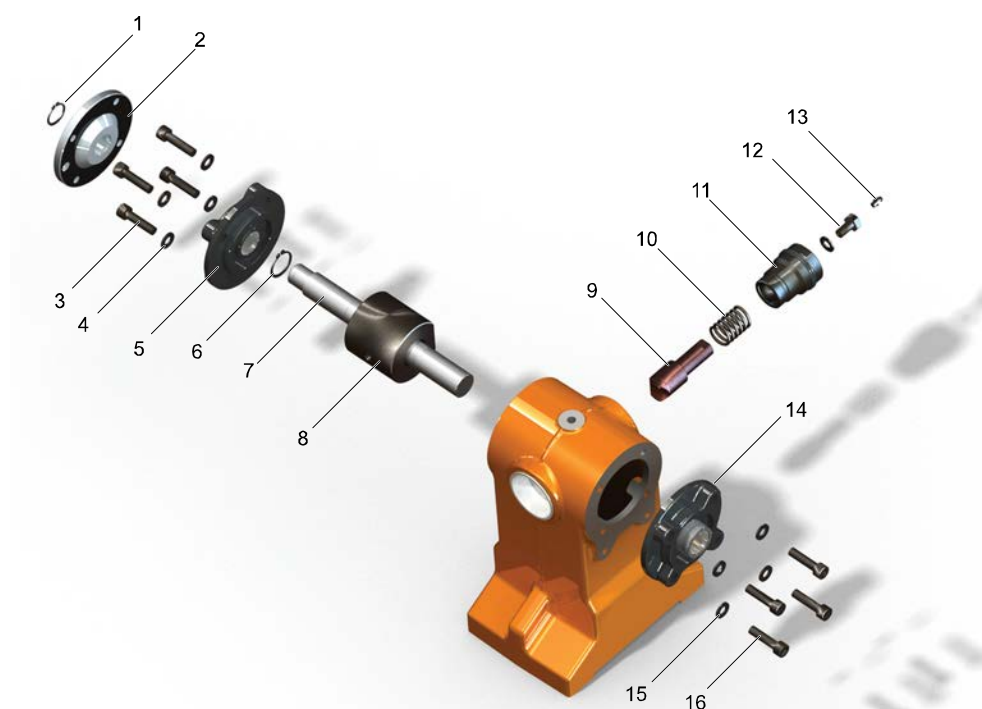

xx1000000028

| | Action | Note |
|---|--|-----------------|
| 1 | Remove screw (12) to loosen the current collector cable. | Standard tools. |

Continues on next page

6 Repair

6.6.1 Replacing support collar axis

Continued

| | Action | Note |
|---|--|--------------------------------|
| 2 | Remove the spring housing with the current collector and spring.(9, 10, 11). | Standard tools, open key 46mm. |
| 3 | Remove the attachment screws with washers (15,16). | |
| 4 | Loosen the flange bearing locking screw. | |
| 5 | Remove the back flange bearing(14). | |
| 6 | Remove the bearing housing (8) from the axis. | |
| 7 | Loosen the flange bearing locking screw. | |
| 8 | Remove the axis with the turning disk and the front bearing housing (1, 2, 5, 6, 7) from the collar house. | |

Refitting support collar

| | Action | Note |
|---|--|--|
| 1 | Mount the axis with the turning disk and the front bearing housing (1, 2, 5, 6, 7) in to the collar house. | |
| 2 | Refit the attachment screws with washers (3,4). | Use standard torque, see section Screw joints on page 63 . |
| 3 | Refit the bearing housing (8) to the axis. | |
| 4 | Refit the back flange bearing(14). | |
| 5 | Refit the attachment screws with washers (15,16). | Use standard torque, see section Screw joints on page 63 . |
| 6 | Tightening the flange bearing locking screw. | Use standard torque, see section Screw joints on page 63 . |
| 7 | Remove the spring housing with the current collector and spring.(9, 10, 11). | Standard tools, open key 46mm. |
| 8 | Refit the screw (12) and attach the current collector cable. | |
| 9 | Lubricate the current collector. | See Lubricating the current collector on page 113 |

6.7 Electrical

6.7.1 Replacing current collector

General

**DANGER**

Turn off all:

- electric power supply
- hydraulic pressure supply
- air pressure supply

to the robot, before entering the safeguarded space.

Required equipment

| Equipment | Note |
|-------------------|--|
| Standard tools | See section Standard toolkit on page 197 . |
| Current collector | Product Manual Sparepart IRP |


Continues on next page

6 Repair

6.7.1 Replacing current collector

Continued

Replacing current collector

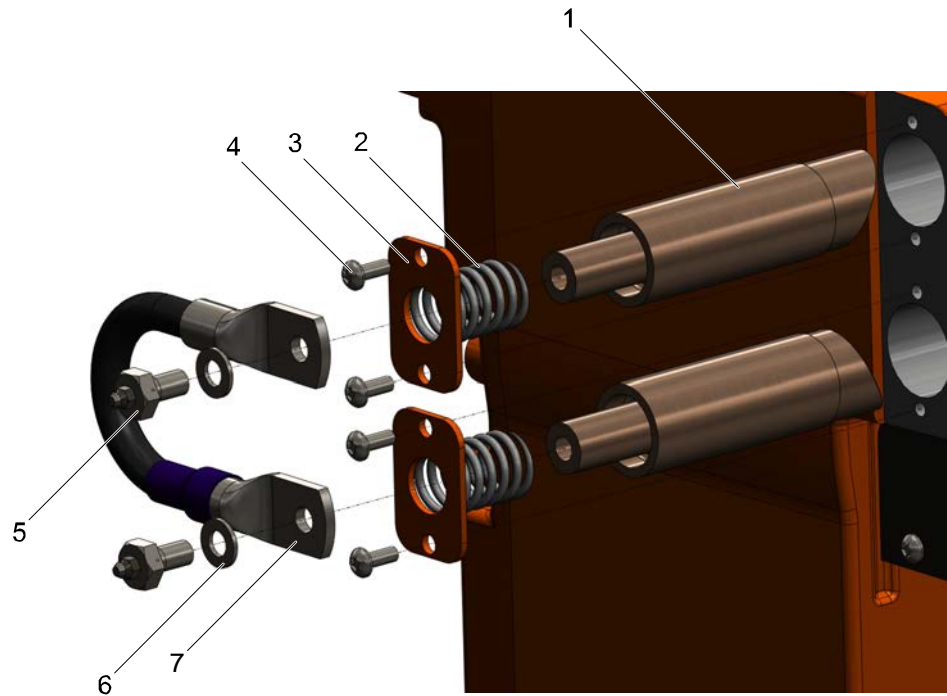

xx1000000016

| | |
|---|-------------------------|
| 1 | Current collector |
| 2 | Spring |
| 3 | Spring support |
| 4 | Screw |
| 5 | Lubrication nipple |
| 6 | Washer |
| 7 | Current collector cable |

| | Action | Note |
|---|--|------|
| 1 | Remove the lubrication nipple and the current collector cable. | |
| 2 | Remove the screws holding the spring support. | |
| 3 | Remove the spring and the current collector. | |

Assemble current collector

| | Action | Note |
|---|--|--|
| 1 | Assemble the new current collector. | |
| 2 | Assemble the spring and the spring support using the screws. | |
| 3 | Assemble the lubrication nipple and the current collector cable. | Lubricate the current collector, see section Lubricating the current collector on page 113 . |

7 Calibration information

7.1 When to calibrate

When to calibrate

The system must be calibrated if any of the following situations occur.

The resolver values are changed

If resolver values are changed, the robot must be re-calibrated using the calibration methods supplied by ABB. Calibrate the robot carefully with standard calibration, according to information in this manual.

The resolver values will change when parts affecting the calibration position are replaced on the robot, for example motors or parts of the transmission.

The revolution counter memory is lost

If the revolution counter memory is lost, the counters must be updated. See [Updating revolution counters on OmniCore robots on page 162](#). This will occur when:

- The battery is discharged
- A resolver error occurs
- The signal between a resolver and measurement board is interrupted
- A robot axis is moved with the control system disconnected

The revolution counters must also be updated after the robot and controller are connected at the first installation.

The robot is rebuilt


If the robot is rebuilt, for example, after a crash or when the reachability of a robot is changed, it needs to be re-calibrated for new resolver values.

7 Calibration information

7.2 Calibration marks

7.2 Calibration marks


Synchronization mark MID station foot

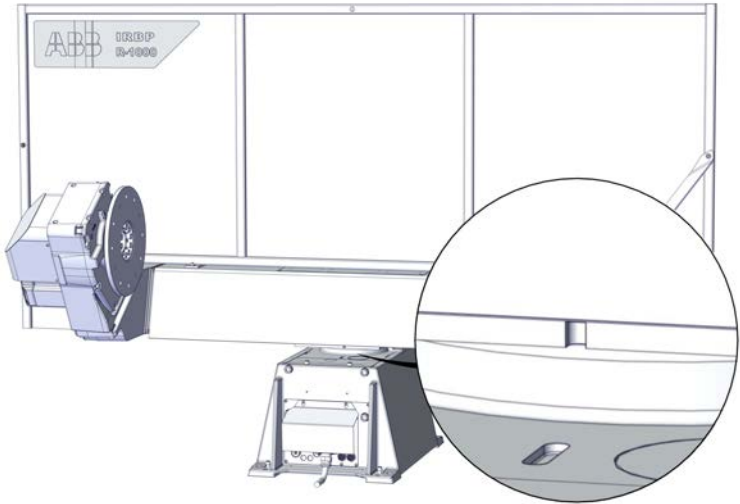

xx1000000121

| | |
|---|------------------------------|
| 1 | Synchronization mark MID 2.1 |
|---|------------------------------|

Synchronization mark MTD station unit

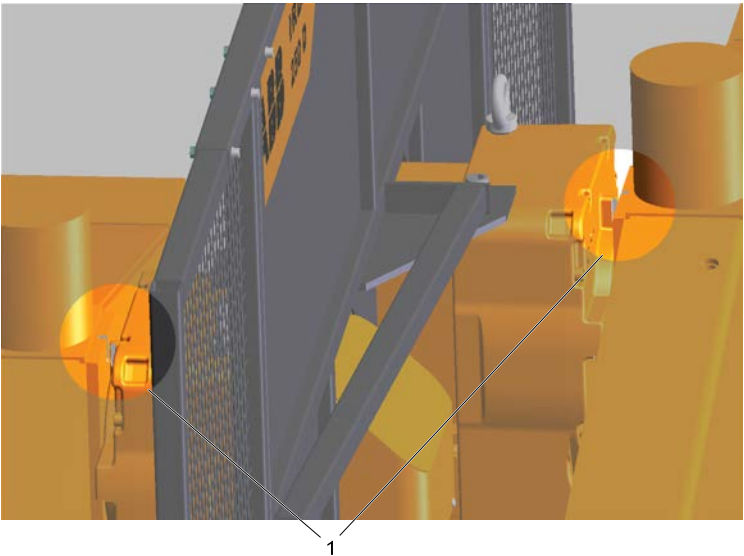


xx1000000122

| | |
|---|--------------------------|
| 1 | Synchronization mark MTD |
|---|--------------------------|

Continues on next page

Synchronization mark MTD rotary unit

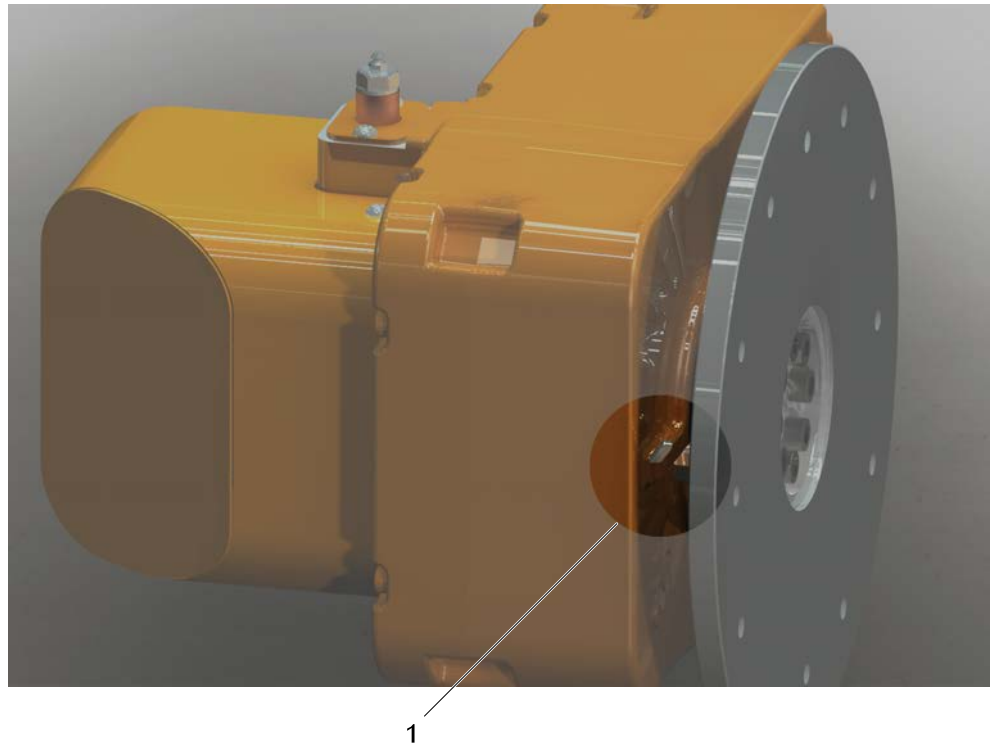

xx1000000117

| | |
|---|--------------------------|
| 1 | Synchronization mark MTD |
|---|--------------------------|

7 Calibration information

7.3 Updating revolution counters on OmniCore robots

7.3 Updating revolution counters on OmniCore robots

Introduction

This section describes how to do a rough calibration of each manipulator axis by updating the revolution counter for each axis, using the FlexPendant.


Step 1 - Manually running the manipulator to the synchronization position

Use this procedure to manually run the manipulator to the synchronization position.

| | Action | Note |
|---|--|---|
| 1 | Select axis-by-axis motion mode. | |
| 2 | Jog the manipulator to align the synchronization marks. | See Calibration marks on page 160 . |
| 3 | When all axes are positioned, update the revolution counter. | Step 2 - Updating the revolution counter with the FlexPendant on page 162 . |

Step 2 - Updating the revolution counter with the FlexPendant

Use this procedure to update the revolution counter with the FlexPendant (OmniCore).

| | Action |
|---|--|
| 1 | On the start screen, tap Calibrate . The calibration summary page for the mechanical unit is displayed. |
| 2 | In the Calibration Methods menu, select Revolution Counters . |
| 3 | In the Selection column select the axes for which revolution counters need to be updated. |
| 4 | Tap Update . A dialog box is displayed warning that the updating operation cannot be undone. |
| 5 | Tap OK to update the revolution counter. |
| 6 |  CAUTION If a revolution counter is incorrectly updated, it will cause incorrect manipulator positioning, which in turn may cause damage or injury! Check the synchronization position very carefully after each update. See Checking the synchronization position on page 166 . |

7.4 Manual setting of the calibration values

General

This chapter describes how to make manual settings for calibration values and recalibrate the axes. The measure is only necessary if the system has lost the calibration values (resolver values). The chapter describes the procedure for all robot and positioner axes where there are calibration values are available.

Manual setting of the calibration values, procedure

| | Action | Note |
|---|--|------|
| 1 | Tap Calibration . | |
| 2 | Tap on the mechanical unit to be calibrated. When the unit concerned is not visible in the window, use the scroll bar arrows, in the lower part of the window. | |
| 3 | Tap Calibration Parameters . | |
| 4 | Tap Edit Motor Calibration . | |
| 5 | The system awaits a response: <ul style="list-style-type: none"> Tap Yes to proceed. | |
| 6 | Tap on the axis where the value is to be modified. <ul style="list-style-type: none"> Enter the new value with the help of the keypad. | |
| 7 | Confirm the value by tapping OK . | |
| 8 | The system awaits a response: <ul style="list-style-type: none"> Tap Yes to restart. | |

7.5 Recalibrating the axes

General

This measure is necessary when the external axes lack calibration values or you wish to recalibrate the axes.

You should be aware that the programmed positions can change depending on whether the new calibrated position differs from the previous position. The chapter describes the procedure for the positioner, not for the robot. (Specialist know-how, which is not described here, and equipment are required to calibrate the robot's axes.) Calibration of the external axes is performed in different ways depending on the type of positioner in question.



Note

This procedure should not be used if calibration values already exist for the axis in question.

Recalibrating the axes



| | Action | Note |
|----|--|------|
| 1 | Move the positioner's axes (axis) to respective zero positions (synchronization marking). <ul style="list-style-type: none">Be precise when adjusting the position of the axis so that it lies in the centre of the marking. The marking is made up of a machined groove or a machined notch on the gearbox respective faceplates. | |
| 2 | Tap Calibration . | |
| 3 | Tap on the mechanical unit to be calibrated. When the unit concerned is not visible in the window, use the scroll bar arrows, in the lower part of the window. | |
| 4 | Tap Calibration Parameters . | |
| 5 | Tap Fine Calibration . | |
| 6 | The system awaits a response: <ul style="list-style-type: none">Tap Yes to proceed. | |
| 7 | Select one or more axes, to be recalibrated. | |
| 8 | Tap Calibrate . | |
| 9 | The system awaits a response: <ul style="list-style-type: none">Tap Calibrate, to confirm recalibration. | |
| 10 | Tap Close . | |

7.6 Calibration of the station interchange unit for positioner IRP

General

Applies to IRP positioners, types B, C, D, K or R, with mechanical stop. The position for the mechanical stop for side 1 and side 2 must be adjusted to attain the right torque. The program guides you through the adjustment.

Calibration procedure

| | Action |
|----|--|
| 1 | Tap Code and select the module <code>IrpSetup</code> . |
| 2 | Tap Debug and then tap PP to Routine . Select CalibInterch1 . |
| 3 | Tap OK to start the calibration. |
| 4 | Tap OK , then jog the robot to a position that is free from the positioners working area. |
| 5 | Start the routine again. |
| 6 | A warning is displayed that the station interchange will move to side 1.  CAUTION Make sure that you are at a safe distance. Tap OK to continue. |
| 7 | Wait while station side 1 is calibrated. |
| 8 | A warning is displayed that the station interchange will move to side 2.  CAUTION Make sure that you are at a safe distance. Tap OK to continue. |
| 9 | Wait while station side 2 is calibrated. |
| 10 | Station interchange calibration is finished. Measured values are displayed on the screen. Tap OK to finish. |

7 Calibration information

7.7 Checking the synchronization position

7.7 Checking the synchronization position

Introduction

Check the synchronization position of the robot before beginning any programming of the robot system. This may be done:

- Using a `MoveAbsJ` instruction with argument zero on all axes.
- Using the **Jog** window on the FlexPendant.

Continues on next page

7.7.1 Checking the synchronization position on OmniCore robots

Using a MoveAbsJ instruction

Use this procedure to create a program that runs all the robot axes to their synchronization position.

| | Action | Note |
|---|--|---|
| 1 | Tap Code . | |
| 2 | Create a new program. | |
| 3 | Use MoveAbsJ in the Add Instruction menu. | |
| 4 | Create the following program: <pre>MoveAbsJ [[0,0,0,0,0,0], [9E9,9E9,9E9,9E9,9E9,9E9]] \NoEOffs, v1000, fine, tool0</pre> | |
| 5 | Run the program in manual mode. | |
| 6 | Check that the synchronization marks for the axes align correctly. If they do not, update the revolution counters. | See Calibration marks on page 160 and Updating revolution counters on OmniCore robots on page 162 . |

Using the jogging window

Use this procedure to jog the robot to the synchronization position of all axes.

| | Action | Note |
|---|--|---|
| 1 | Tap Jog . | |
| 2 | From the Mechanical unit list select a mechanical unit. | |
| 3 | From the Motion mode section, select an axis-set that need to be jogged. For example, to jog axis 2, select the axis set Axis 1-3 . | |
| 4 | Follow the screen instruction on joystick movements to understand the direction of the axis that you want to move and move the joystick. | |
| 5 | Manually run the robots axes to a position where the axis position value read on the FlexPendant, is equal to zero. | |
| 6 | Check that the synchronization marks for the axes align correctly. If they do not, update the revolution counters. | See Calibration marks on page 160 and Updating revolution counters on OmniCore robots on page 162 . |

7 Calibration information

7.8.1 Introduction

7.8 Multi-arc calibration (not IRP C)

7.8.1 Introduction

General

Before the system can be used, the system has to be calibrated. The calibration principle is based on tools with defined TCPs that are moved together a number of times.

This method will move and rotate the base frame in relation to the world frame. Normally the base frame is centered and aligned with the world frame.


Positioner IRP C is not calibrated for base frame (it has no stations).



Note

Note that the base frame is fixed to the base of the robot.

Overview

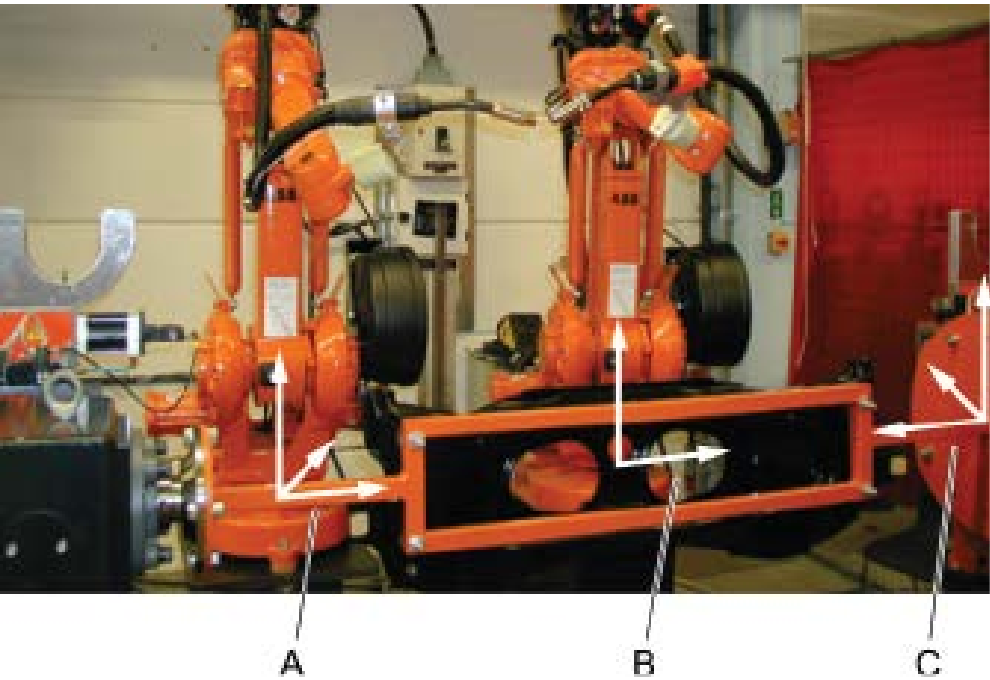

xx1400000897


| | |
|---|--|
| A | Base coordinate system for robot 2 |
| B | Base and world coordinate system for robot 1 |
| C | Base Frame for positioner |

7.8.2 Calibrating the multi-arc system

Introduction

The calibration should be done in the positive x-direction of the positioner plate. If the calibration is done in negative direction, then the virtual and real system will not fit together.

Required equipment


| Equipment | Article number | Note |
|-------------------------|----------------|---|
| Pointer | - | <p>Make a pointer that screws into the tip adapter.</p> <p>The point of the pointer should be in exactly the same position as the defined TCP, e.g. 15 mm from the end of the nozzle.</p>  <p>xx1800000747</p> |
| Centre punch and hammer | - | |

Tool calibration

Start to calibrate the welding tool TCP using BullsEye.

| | Action | Note |
|---|--|------|
| 1 | Open Program Data and select tooldata . | |
| 2 | Select the tool. | |
| 3 | Change the mass in the tool data from the negative value to the correct value for your tool, see figure. | |
| 4 | Activate the tool. | |

Preparing the robot

| | Action | Note |
|---|--|---|
| 1 | <p>Attach the pointer to the tip adapter on the robot.</p> <p>The point of the pointer should be in exactly the same position as the defined TCP, e.g. 15 mm from the end of the nozzle.</p> |  <p>xx1800000747</p> |


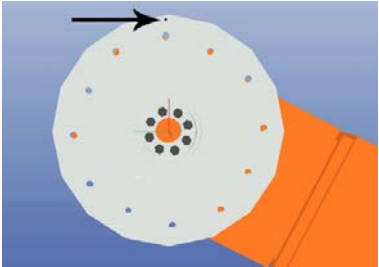
Continues on next page

7 Calibration information

7.8.2 Calibrating the multi-arc system

Continued

Preparing the positioner discs

| | Action | Note |
|---|--|--|
| 1 | <p>Activate the station, then jog the turning disc to 0°.</p> <p> Tip</p> <p>Instead of jogging, use a short program to move the positioner, for example the following that works for IRP A.</p> <pre>MODULE Setup(SYSMODULE) CONST jointtarget jZero := [[0,0,0,0,0,0],[0,0,0,0,0,0]]; PROC rZero() MoveAbsJ jZero \NoEOffs, v400, fine, tool0; ENDPROC ENDMODULE</pre> | |
| 2 | <p>Make a small punch mark at the top dead centre on the turning disc.</p> | <p>Centre punch and hammer.</p>  <p>xx1800000749</p> |

Calibrating the base frame of robot 1

Use the procedure to calibrate the base frame of robot 1. The FlexPendant images shown in the procedure can differ between the positioner variants.

Base frame calibration can be done with any robot, but only on one of the robots.



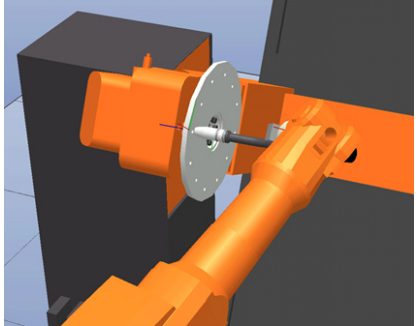


Note

If robot 1 (ROB_1) is selected, you cannot do the base frame calibration between robot 2 (ROB_2) and positioner.

| | Action | Note |
|---|---|------|
| 1 | On the FlexPendant, open Calibrate . | |
| 2 | Select Mechanical Unit STN1 . | |

Continues on next page



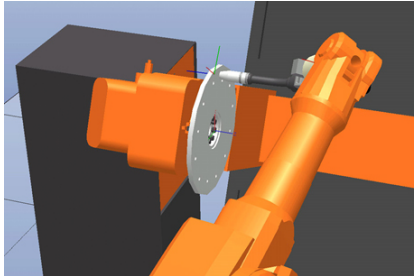
| | Action | Note |
|----|--|---|
| 3 | <p>Select Define Base Frame and then select which points to calibrate.</p> <p>The number of axes and points to calibrate differ depending on positioner variant.</p> <p>IRP A, IRP B, IRP D: 4 points for Axis 1 or 4 points for Axis 2. (Both axes need to be calibrated. Choose axis 1 first and run the complete procedure according to the following steps. When done, repeat the procedure for axis 2, keeping axis 1 at 0° meanwhile.)</p> <p>IRP K, IRP L, IRP R: 4 points Z</p> | |
| 4 | Check that the correct Mechanical unit , Measurement unit and Active tool are selected. | |
| 5 | With the station at 0°, jog the robots TCP to position the pointer exactly onto the punch mark. |  <p>xx1800000755</p> |
| 6 | Highlight Point 1 and tap Modify . | |
| 7 | Point 1 will now show Modified and Point 2 will automatically be highlighted. | |
| 8 | <p>Rotate the turning disc to 30-60°, using the jogging window to see the exact position information.</p> <p> Note</p> <p>It is important that all other axes stay in the same position during all measurements.</p> | |
| 9 | Position the pointer exactly on the punch mark. |  <p>xx1800000759</p> |
| 10 | Ensure that Point 2 is highlighted and tap Modify Position . | |
| 11 | Point 2 will now show Modified and Point 3 will automatically be highlighted. | |

Continues on next page



7 Calibration information

7.8.2 Calibrating the multi-arc system

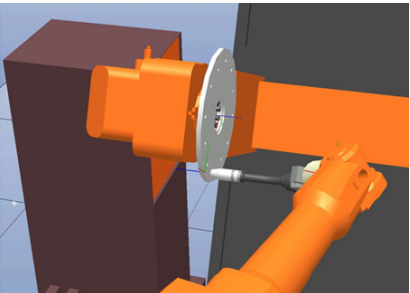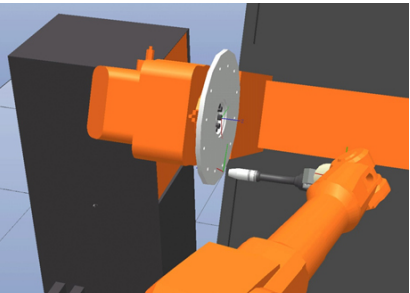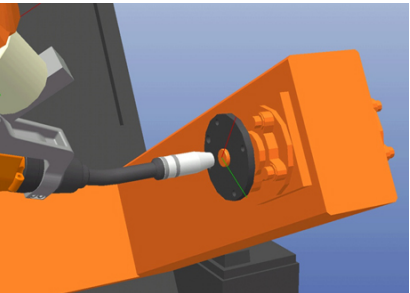Continued


| | Action | Note |
|----|--|--|
| 12 | Rotate the turning disc 30-60° again, using the jogging window to see the exact position information. | |
| 13 | Position the pointer exactly on the punch mark. |  xx1800000763 |
| 14 | Ensure that Point 3 is highlighted and tap Modify Position . | |
| 15 | Point 3 will now show Modified and Point 4 will automatically be highlighted. | |
| 16 | Rotate the turning disc to 30-60° again, using the jogging window to see the exact position information. | |
| 17 | Position the pointer exactly on the punch mark. |  xx1800000767 |
| 18 | Ensure that Point 4 is highlighted and tap Modify Position . | |
| 19 | Valid for positioners that have a tailstock (IRP K, IRP L, IRP R): Jog the robot's TCP towards the bearing disc. The position gives the system the information about the orientation of the base frame, so it does not to be precise. | |
| 20 | Valid for positioners that have a tailstock (IRP K, IRP L, IRP R): Jog the robots TCP to position the pointer exactly onto the punch mark on the bearing disc spigot. |  xx1800000770 |

Continues on next page

| | Action | Note |
|----|---|------|
| 21 | <p>Valid for positioners that have a tailstock (IRP K, IRP L, IRP R): Ensure that Elongator Point Z is highlighted and tap Modify Position.</p> <p> Tip</p> <p>Save the positions to save time.</p> | |
| 22 | <p>The Calculation Result will be shown. Tap OK.</p> <p> Tip</p> <p>The goal is it to have as small error as possible. A mean error lower than 0.1 mm is usually sufficient.</p> | |
| 23 | Restart the controller by tapping Yes . | |
| 24 | <p>Valid for positioners IRP A, IRP B, IRP D: Go to step 2 and repeat the calibration procedure for the 4 points of the second axis.</p> | |
| 25 | <p>To use the base frame in your WorkObject:</p> <ol style="list-style-type: none"> 1 Change the ufprog to FALSE. 2 Insert the station name in the ufmec field and then define your fixture or part WorkObject. | |

Calibrating the base coordinate for robot 2

Calibrate the robot 1 base coordinate system to the robot 2 world coordinate system.

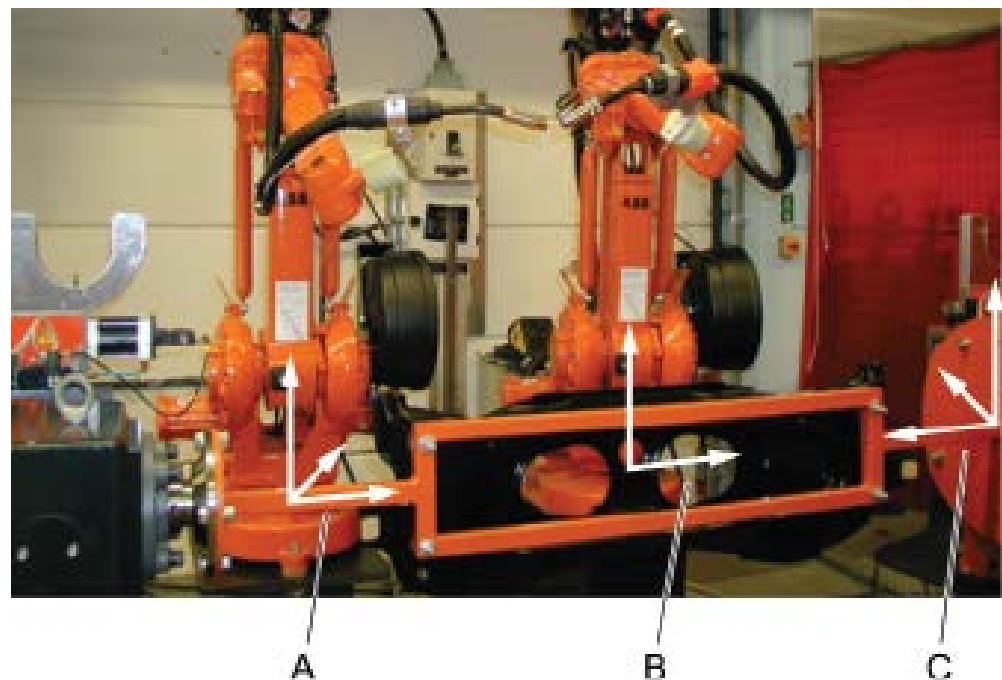

xx1400000897


Continues on next page

7 Calibration information

7.8.2 Calibrating the multi-arc system

Continued

| | | |
|---|--|--|
| A | Base coordinate system for robot 2 | |
| B | Base and world coordinate system for robot 1 | |
| C | Base Frame for positioner | |

| | Action | Note |
|----|---|---|
| 1 | On the FlexPendant, select Calibration . | |
| 2 | Select robot 1 (ROB_1). | |
| 3 | Select base frame and then Relative n points . | |
| 4 | Select Number of points . | |
| 5 | Point the TCPs of the robots towards each other. |  xx1400000909 |
| 6 | Tap Modify position . | |
| 7 | For each of the steps: Move the robots to a new position where they are far apart compared to the previous position. | |
| 8 | Tap Modify position . | |
| 9 | When all positions are modified, tap OK . | |
| 10 | Create a work object according to <i>Operating manual - OmniCore</i> , to confirm that the calibration is correct. | |

7.9 Tool and speed data

Definition of the tool data (tload)

These are the movement related data that should be defined first. All movement is dependent on this definition.



WARNING

It is very important to always define correct actual load data and correct payload of the positioner. Incorrect definitions of load data can result in overloading of the positioner.

If incorrect load data and/or loads are outside load diagram is used the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure



Note

When using the option *Collision Detection*, it is very important to have the right tool load in the tool data.

The following data components are recommended for the tool.

| | |
|---------|--|
| robhold | true |
| tframe | 5-point TCP&Z is normally used with weaving during MIG/MAG welding. Without weaving, the 4-point TCP is sufficient. |
| tload | Values for the supplied standard welding guns and guns with a swan neck. |

Speed data for external axes

Use the following maximum speed data for IRP.

| IRP positioner | Maximum speed of rotation |
|----------------|---------------------------|
| MTD 250 | 180 degree/s |
| MTD 250 | 150 degree/s |
| MTD 750 | 150 degree/s |
| MTD 2000 | 90 degree/s |
| MTD 5000 | 39 degree/s |
| MID 500 | 90 degree/s |
| MID 1000 | 90 degree/s |

7 Calibration information

7.10.1 Identification of load data for positioners IRP

7.10 Drivers

7.10.1 Identification of load data for positioners IRP

Introduction

Since the data of the different loads that can be mounted on the external positioner can be quite difficult to compute, there is a load identification service routine (*ManLoadIdentify*) that computes the necessary load data by moving the positioner. Here we will describe which parameters are identified with the load identification.




Note

If you run the load identification for the first time on a specific type of positioner, it is recommended that you first run the procedure in slow test mode to prevent any collisions.

Load identification for IRP L

A simplified view of positioner IRP L is shown in figure. Load identification can be performed in any position for this positioner.

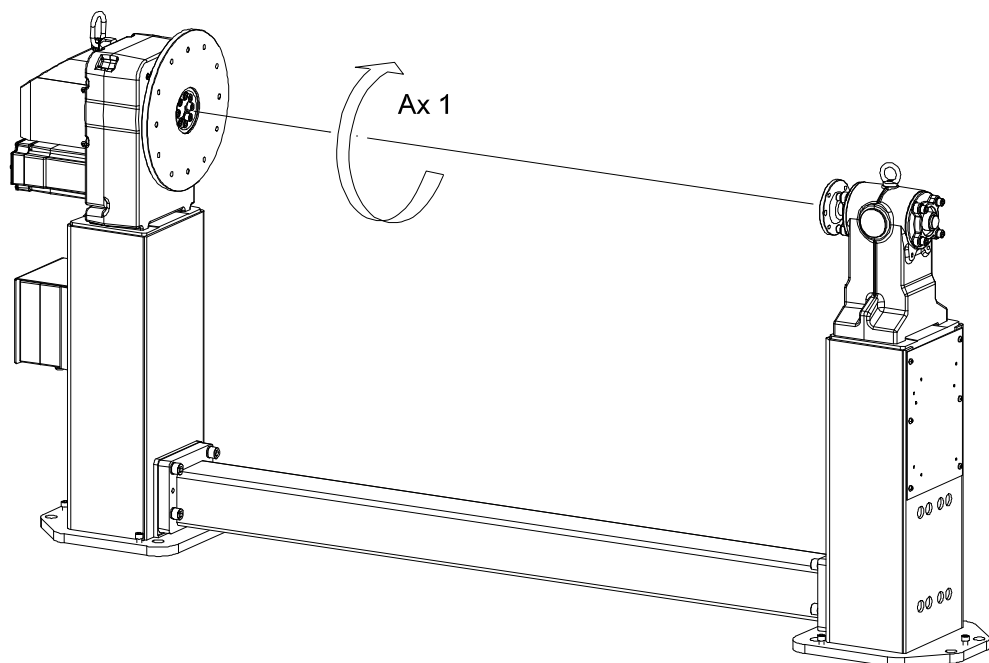

xx1000000139

Parameters and movements




Note

The mass of the load must be known in advance. The mass data is entered when performing the load identification.

Continues on next page

Parameters

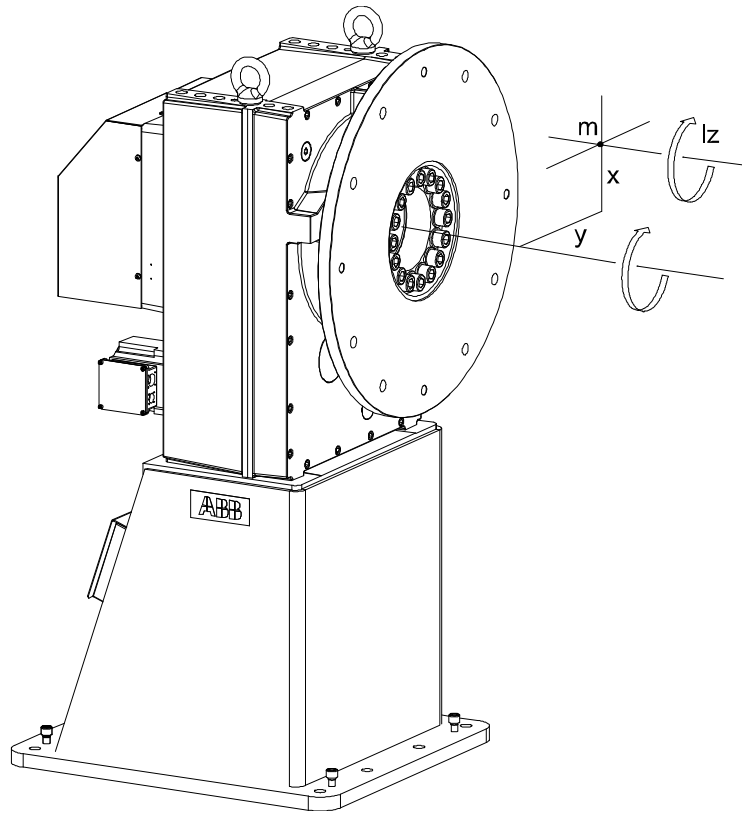

xx1000000140

The parameters that are identified are the center of gravity in a plane perpendicular to the axis, and moments of inertia around the axis, see figure.

To perform the identification the positioner moves the load and computes the parameters.

Movements


The movements for the axis are performed around two configuration points as described in the following figure. At each configuration, the maximum motion for the axis is approximately 30 degrees up and 30 degrees down. The optimum value for the configuration angle is 90 degrees.

Continues on next page

7 Calibration information

7.10.1 Identification of load data for positioners IRP

Continued

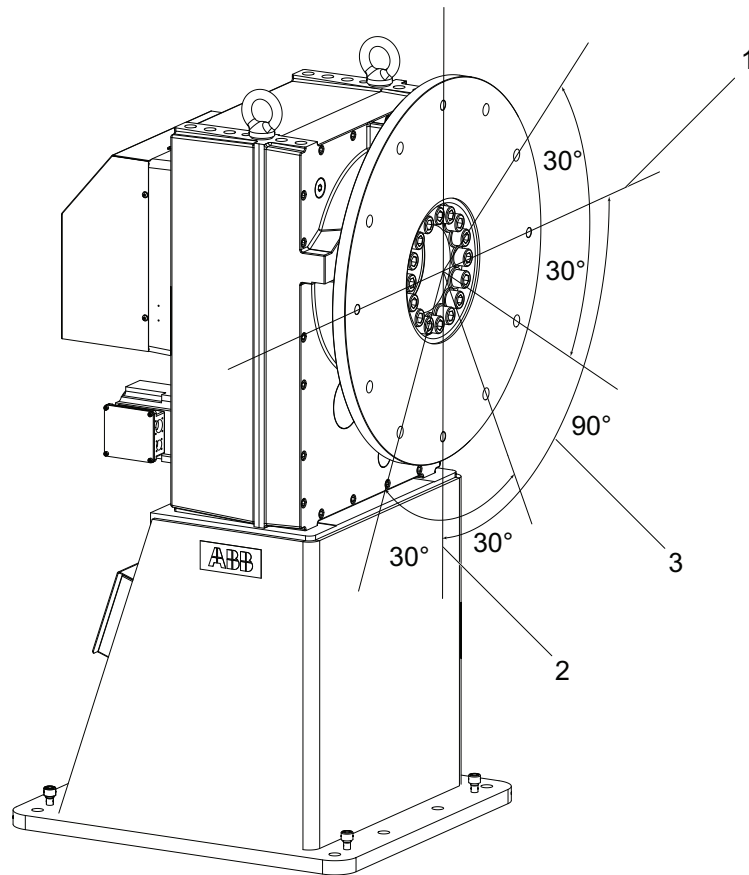

xx1000000142

| | |
|---|----------------------------------|
| 1 | Configuration 2 |
| 2 | Configuration 1 (start position) |
| 3 | Configuration angle |

Load identification for IRP C

Load identification can be performed in positions according to load identification service routine (*ManLoadIdentify*).



Note

The data entered when performing the load identification is the sum of the loads applied. Load identification should be performed separately for all different load scenarios that is used.


Parameters

The parameter identified is the total moments of inertia around the axis. Note that the mass of the loads must be known in advance.

Continues on next page

Load identification for IRP K

A simplified view of positioner IRP K is shown in the following figure. Load identification is allowed on axes 2 and 3 for this positioner. Load identification can only be performed when axis 1 is in one of its end positions. This is checked by the load identification procedure.

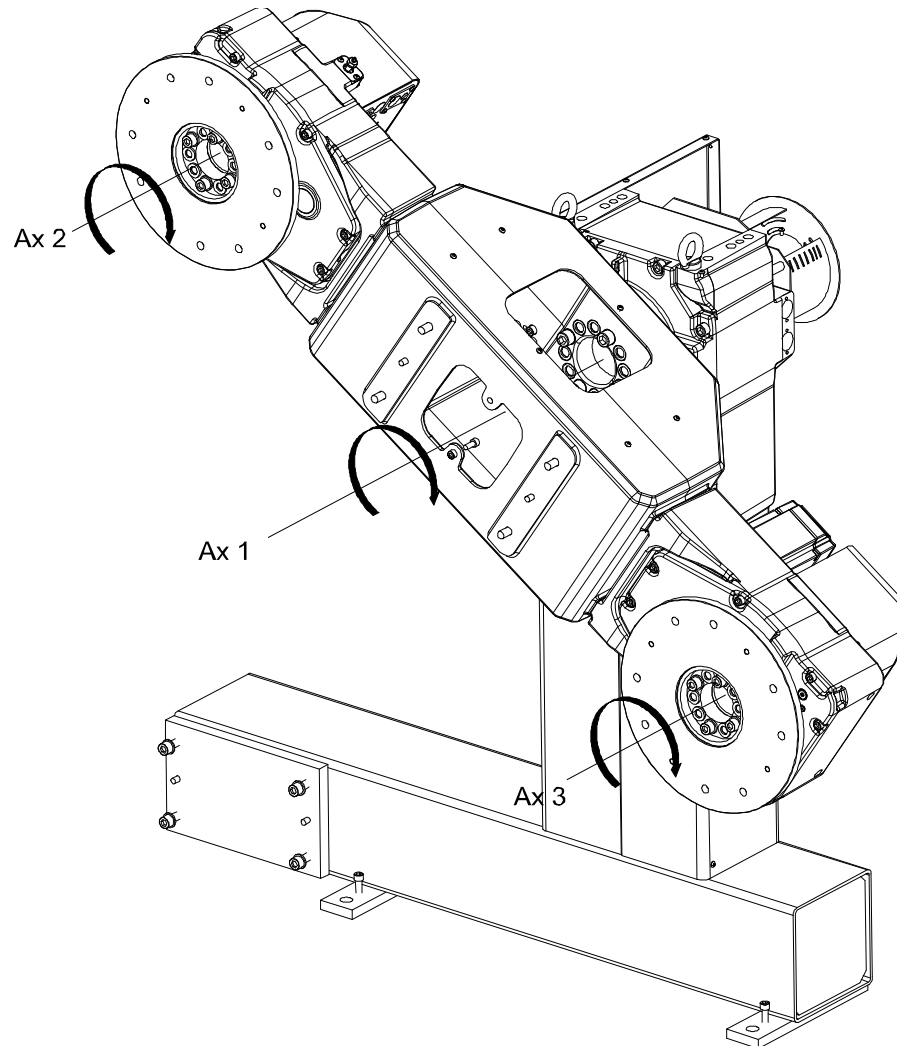

xx1000000144

Parameters

The identified parameters and movements for each axis are the same as for the IRP L positioner. See [Parameters and movements on page 176](#).

Load identification for IRP R


A simplified view of the positioner IRP R is shown in the following figure.

Continues on next page

7 Calibration information

7.10.1 Identification of load data for positioners IRP

Continued

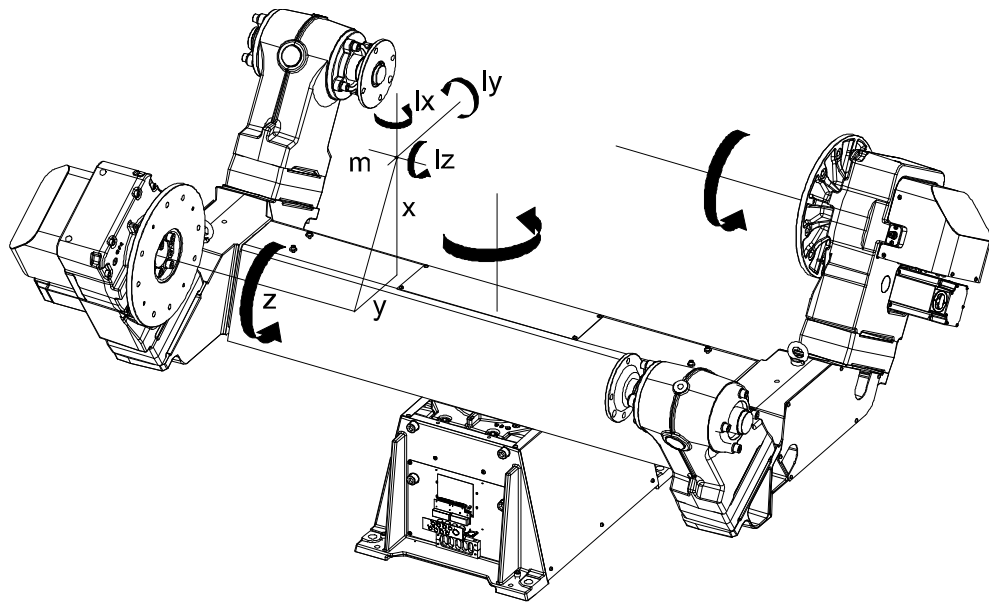

xx1000000149

Parameters

The parameters identified are the center of gravity in a plane perpendicular to the axis, and three moments of inertia at the center of gravity. Note that both the mass of the load and the distance z to the center of gravity must be known in advance. These data are entered when performing the load identification.

Movements

One part of the identification movements for one axis is the same as for the positioner IRP L. To find the extra moment of inertia we also move the interchange axis with the load to two different positions. The movements for the interchange axis are the movements described in the figure in section [Parameters and movements on page 176](#), but only at one configuration point.




CAUTION

The identification on one axis will be correct only if there is no load mounted on the other axis.

Load identification for IRP A/B/D

A simplified view of positioner IRP A/B/D is shown in the following figure. When the identification is performed, the positioner must be positioned so that the z axis is horizontal. This is verified by the load identification procedure. If axis 1 is too far from this position the load identification procedure will suggest which angle it should be moved to.

Continues on next page

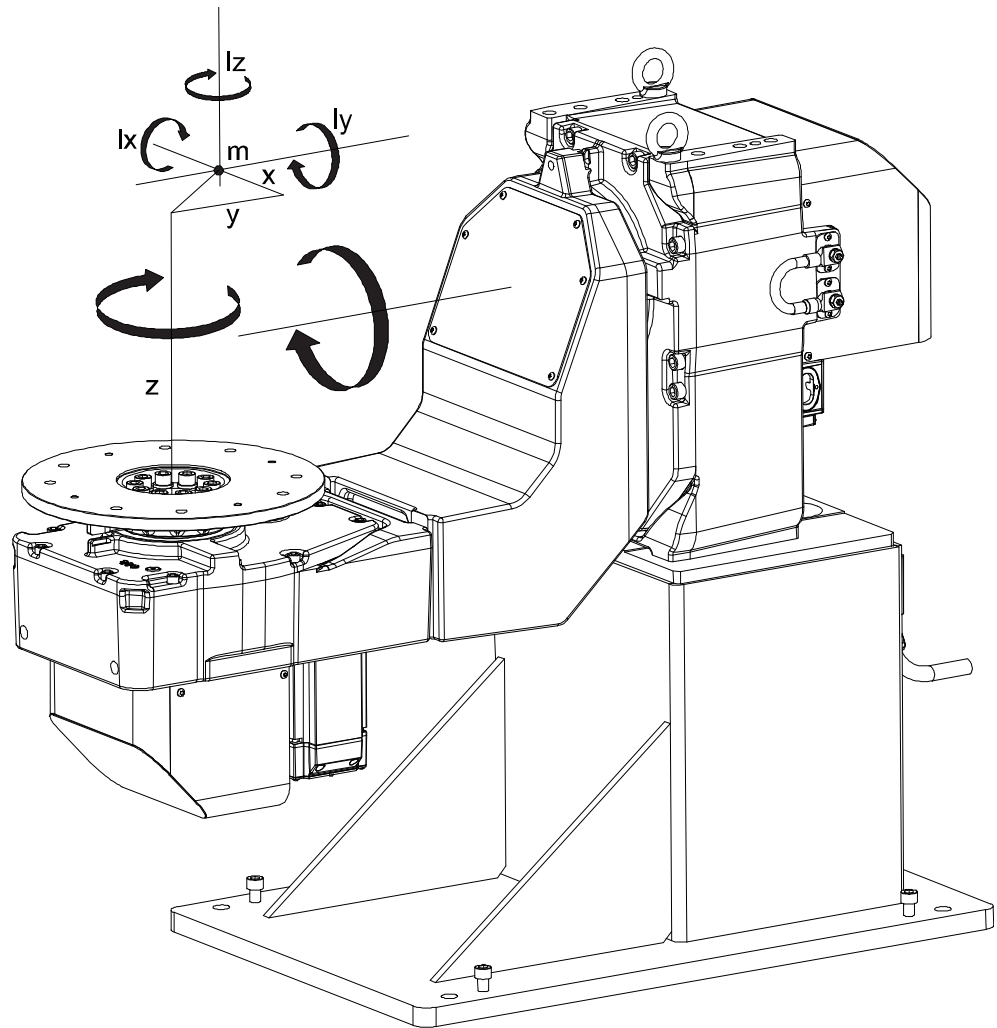

xx1000000150

Parameters

The parameters identified are the center of gravity and three moments of inertia at the center of gravity, see figure.

The mass of the load must be known in advance. The mass data is entered when performing the load identification.

Movements

The motion for each axis is, in principal, the same as for the positioner IRP L, see figure in section [Parameters and movements on page 176](#). However, axis 1 only performs its movements around one configuration point.

7 Calibration information

7.10.2 Define payload for a mechanical unit

7.10.2 Define payload for a mechanical unit

Description of MechUnitLoad


The instruction `MechUnitLoad` is used to define a payload for an additional axis (external mechanical unit). The payload for the robot is defined with instruction `GripLoad`. When using the drivers `MechUnitLoad` is built in.

This instruction should be used for all mechanical units with dynamic model in servo to achieve the best motion performance.

Examples

Basic examples of the instruction `MechUnitLoad` are illustrated below.

The following figure shows axis 1 on a mechanical unit named STN1 of type IRP L.

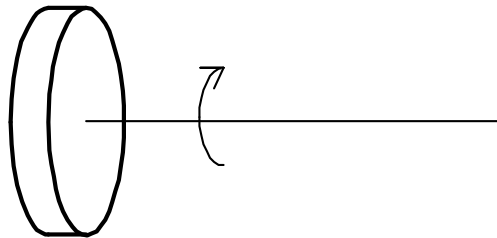

xx0500002142

Example 1

```
MechUnitLoad STN1, 1, load0;
```

Define the payload *load0* corresponding to no load (at all) mounted on axis 1.

Example 2

```
MechUnitLoad STN1, 1, fixture1;
```

Define the payload *fixture1* corresponding to fixture *fixture1* mounted on axis 1.

Example 3

```
MechUnitLoad STN1, 1, workpiece1;
```

Define the payload *workpiece1* corresponding to fixture and work piece named *workpiece1* mounted on axis 1.

Arguments

```
MechUnitLoad MechUnit AxisNo Load
```

MechUnit

Mechanical Unit

Data type: mecunit

The name of the mechanical unit

AxisNo

Axis Number

Data type: num

The axis number, within the mechanical unit, that holds the load.

Continues on next page

Load

Data type: loaddata

The load data that describes the current payload to be defined.


Program execution

After execution of `MechUnitLoad`, when the robot and additional axes have come to a standstill, the specified load is defined for the specified mechanical unit and axis. This means that the payload is controlled and monitored by the control system. The default payload at cold start for a certain mechanical unit type, is the predefined maximal payload for this mechanical unit type.

When another payload is used the actual payload for the mechanical unit and axis should be redefined with this instruction. This should always be done after activation of the mechanical unit.

The defined payload will survive a power failure restart. The defined payload will also survive a restart of the program after manual activation of other mechanical units from the jogging window.

The following graphic shows a payload mounted on the end-effector of a mechanical unit (end-effector coordinate system for the mechanical unit).

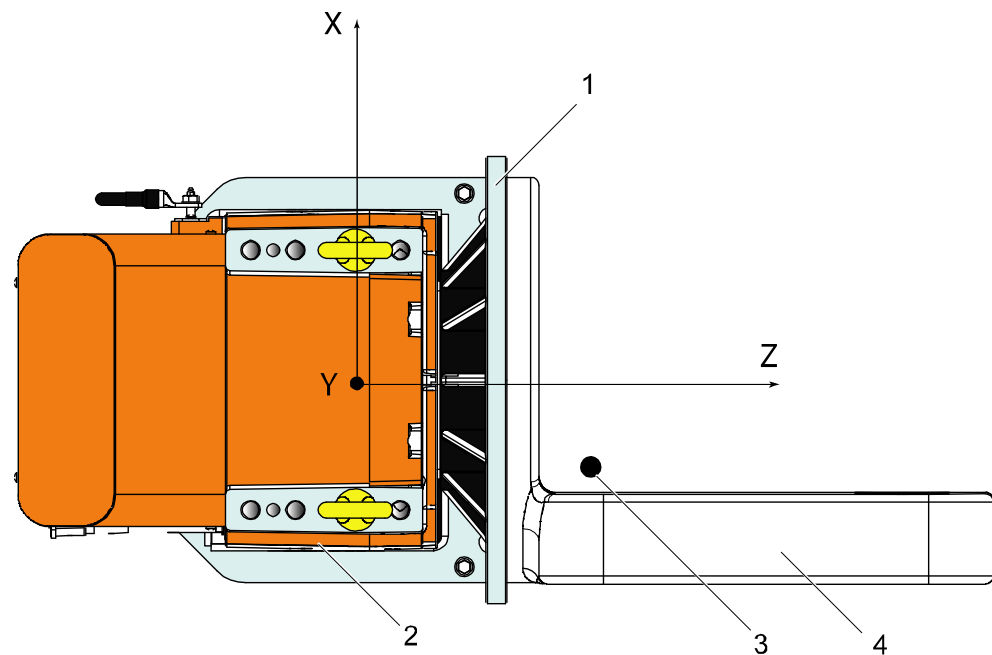

xx1000000153

| | |
|---|--|
| 1 | Fixture |
| 2 | Mechanical unit |
| 3 | Center of gravity for the payload (fixture + work piece) |
| 4 | Work piece |

Continues on next page


7 Calibration information

7.10.2 Define payload for a mechanical unit

Continued

More examples

More examples of how to use the instruction `MechUnitLoad` are illustrated below. The following figure shows a mechanical unit named **INTERCH** of type IRP K with three axes (1, 2, and 3).

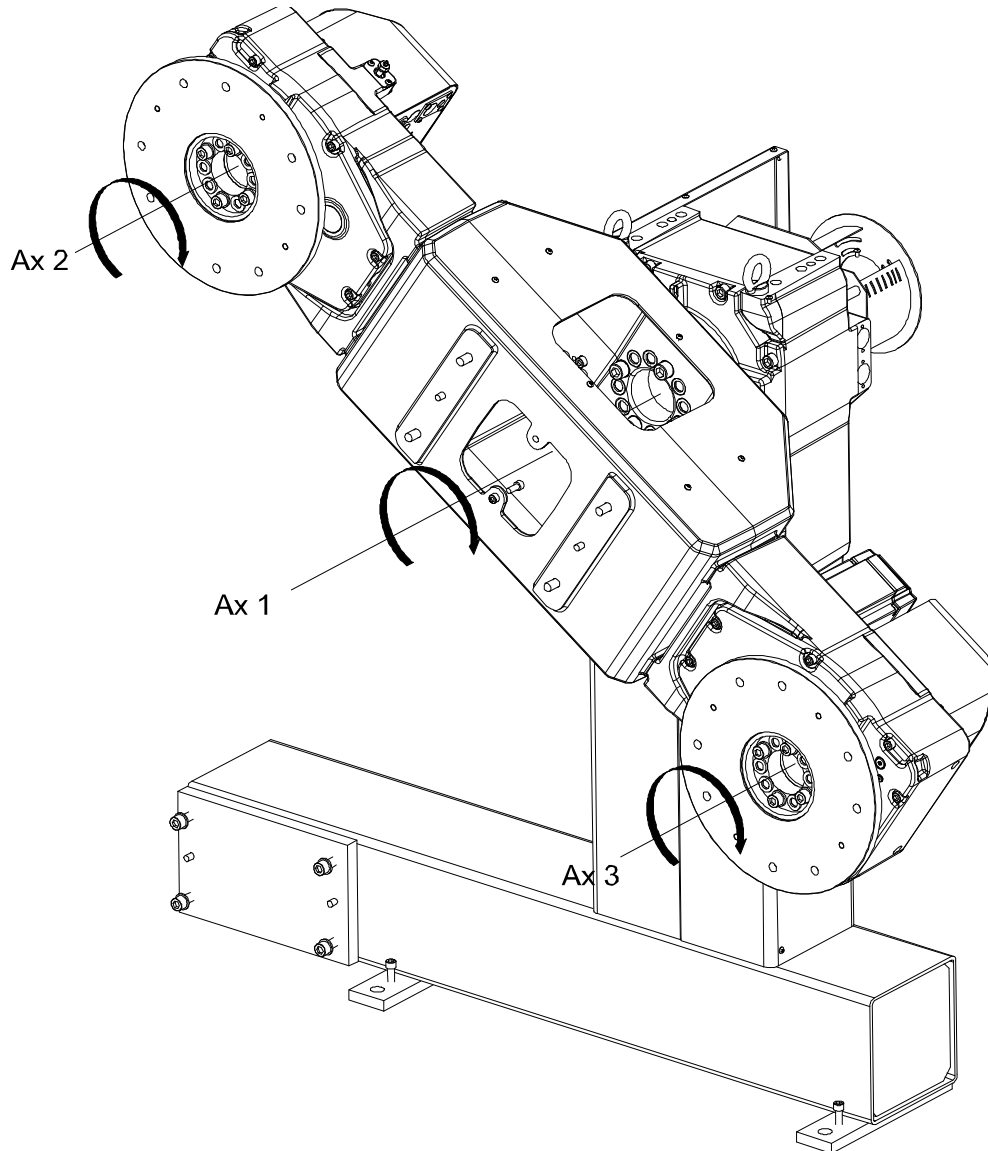

xx1000000144

Example 1

```
MoveL homeside1, v1000, fine, gun1;  
....  
ActUnit INTERCH;
```

The whole mechanical unit **INTERCH** is activated.

Example 2

```
MechUnitLoad INTERCH, 2, workpiece1;
```

Defines payload **workpiece1** on the mechanical unit **INTERCH** axis 2.

Continues on next page

Example 3

```
MechUnitLoad INTERCH, 3, workpiece2;
```

Defines payload *workpiece2* on the mechanical unit *INTERCH* axis 3.

Example 4

```
MoveL homeside2, v1000, fine, gun1
```

The axes of the mechanical unit *INTERCH* move to the switch position *homeside2* with mounted payload on both axes 2 and 3.

Limitations

If this instruction is preceded by a move instruction, that move instruction must be programmed with a stop point (zonedata fine), not a fly-by point. Otherwise restart after power failure will not be possible.

`MechUnitLoad` cannot be executed in a RAPID routine connected to any of the following special system events: PowerOn, Stop, QStop, Restart or Step.

Syntax

```
MechUnitLoad
[ MechUnit '[:=' ] < variable (VAR) of mecunit> ', '
[ AxisNo '[:=' ] < expression (IN) of num ' ', '
[ Load '[:=' ] < persistent (PERS) of loaddata> '; '
```

Related information

| Information | Described in |
|-------------------------------------|--|
| Mechanical units | <i>Technical reference manual - RAPID Instructions, Functions and Data types</i> , data type <code>mecunit</code> |
| Definition of load data | <i>Technical reference manual - RAPID Instructions, Functions and Data types</i> , data type <code>loaddata</code> |
| Definition of payload for the robot | <i>Technical reference manual - RAPID Instructions, Functions and Data types</i> , instruction <code>GripLoad</code> and data type <code>tooldata</code> |

7 Calibration information

7.10.3 Define base frame

7.10.3 Define base frame

General

To run coordinated axes, the base frame must be defined. See *Application manual - Additional axes (Coordinated track motion)*.

8 Decommissioning

8.1 Introduction to decommissioning

Introduction

This section contains information to consider when taking a product, robot or controller, out of operation.

It deals with how to handle potentially dangerous components and potentially hazardous materials.



Note

The decommissioning process shall be preceded by a risk assessment.

Disposal of materials used in the robot

All used grease/oils and dead batteries **must** be disposed of in accordance with the current legislation of the country in which the robot and the control unit are installed.

If the robot or the control unit is partially or completely disposed of, the various parts **must** be grouped together according to their nature (which is all iron together and all plastic together), and disposed of accordingly. These parts **must** also be disposed of in accordance with the current legislation of the country in which the robot and control unit are installed.

See also [Environmental information on page 188](#).

Transportation

Prepare the robot or parts before transport, this to avoid hazards.

8 Decommissioning

8.2 Environmental information


8.2 Environmental information

Introduction

ABB robots contain components in different materials. During decommissioning, all materials shall be dismantled, recycled, or reused responsibly, according to the relevant laws and industrial standards. Robots or parts that can be reused or upcycled helps to reduce the usage of natural resources.

Disposal symbol

The following symbol indicates that the product must not be disposed of as common garbage. Handle each product according to local regulations for the respective content (see table below).

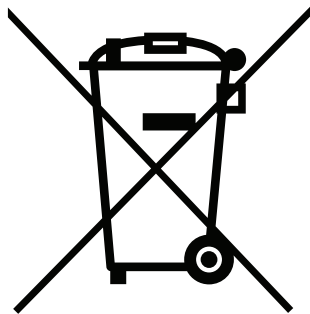

xx1800000058

Materials used in the product

The table specifies some of the materials in the product and their respective use throughout the product.

Dispose components properly according to local regulations to prevent health or environmental hazards.

| Material | Example application |
|------------------------|---|
| Batteries, Lithium | Motor connection box |
| Cast iron/nodular iron | Gearboxes |
| Copper | Cables, motors |
| Neodymium | Brakes, motors |
| Oil, grease | Gearboxes |
| Plastic/rubber | Cables, connectors, drive belts, and so on. |
| Steel | Frame |

Continues on next page

Oil and grease

Where possible, arrange for oil and grease to be recycled. Dispose of via an authorized person/contractor in accordance with local regulations. Do not dispose of oil and grease near lakes, ponds, ditches, down drains, or onto soil. Incineration must be carried out under controlled conditions in accordance with local regulations.

Also note that:

- Spills can form a film on water surfaces causing damage to organisms. Oxygen transfer could also be impaired.
- Spillage can penetrate the soil causing ground water contamination.

This page is intentionally left blank

9 Reference information

9.1 Applicable standards

General

The product is compliant with ISO 10218-1:2011, *Robots for industrial environments - Safety requirements - Part 1 Robots*, and applicable parts in the normative references, as referred to from ISO 10218-1:2011. In case of deviation from ISO 10218-1:2011, these are listed in the declaration of incorporation. The declaration of incorporation is part of the delivery.

Robot standards

| Standard | Description |
|----------|--|
| ISO 9283 | Manipulating industrial robots – Performance criteria and related test methods |
| ISO 9787 | Robots and robotic devices – Coordinate systems and motion nomenclatures |
| ISO 9946 | Manipulating industrial robots – Presentation of characteristics |

Other standards used in design

| Standard | Description |
|---------------------------------------|---|
| IEC 60204-1 | Safety of machinery - Electrical equipment of machines - Part 1: General requirements, normative reference from ISO 10218-1 |
| IEC 61000-6-2 | Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments |
| IEC 61000-6-4 | Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments |
| ISO 13849-1:2006 | Safety of machinery - Safety related parts of control systems - Part 1: General principles for design, normative reference from ISO 10218-1 |
| UL 1740 (option) CSA Z434 (option) | Standards For Safety - Robots and Robotic Equipment Industrial robots and robot Systems - General safety requirements Valid for USA and Canada. |

9 Reference information

9.2 Unit conversion

9.2 Unit conversion

Converter table

Use the following table to convert units used in this manual.

| Quantity | Units | | |
|----------|-------|--------------|----------|
| Length | 1 m | 3.28 ft. | 39.37 in |
| Weight | 1 kg | 2.21 lb. | |
| Weight | 1 g | 0.035 ounces | |
| Pressure | 1 bar | 100 kPa | 14.5 psi |
| Force | 1 N | 0.225 lbf | |
| Moment | 1 Nm | 0.738 lbf-ft | |
| Volume | 1 L | 0.264 US gal | |

9.3 Screw joints

General

This section describes how to tighten the various types of screw joints on ABB robots.

The instructions and torque values are valid for screw joints comprised of metallic materials and do *not* apply to soft or brittle materials.

UNBRAKO screws

UNBRAKO is a special type of screw recommended by ABB for certain screw joints. It features special surface treatment (Gleitmo as described below) and is extremely resistant to fatigue.

Whenever used, this is specified in the instructions, and in such cases, *no other type of replacement screw* is allowed. Using other types of screws will void any warranty and may potentially cause serious damage or injury.

Gleitmo treated screws

Gleitmo is a special surface treatment to reduce the friction when tightening the screw joint. It is recommended by ABB for M6-M20 screw joints. Screws treated with Gleitmo may be reused 3-4 times before the coating disappears. After this the screw must be discarded and replaced with a new one.

When handling screws treated with Gleitmo, protective gloves of nitrile rubber type should be used.

Generally, screws are lubricated with *Gleitmo 603* mixed with *Geomet 500* or *Geomet 702* in proportion 1:3. *Geomet* thickness varies according to screw dimensions, refer to the following.

| Dimension | Lubricant | Geomet thickness |
|-----------------------------------|--|------------------|
| M6-M20 (any length except M20x60) | <i>Gleitmo 603</i> + <i>Geomet 500</i> | 3-5 µm |
| M6-M20 (any length except M20x60) | <i>Gleitmo 603</i> + <i>Geomet 720</i> | 3-5 µm |
| M20x60 | <i>Gleitmo 603</i> + <i>Geomet 500</i> | 8-12 µm |
| M20x60 | <i>Gleitmo 603</i> + <i>Geomet 720</i> | 6-10 µm |

Screws lubricated in other ways

Screws lubricated with Molykote 1000 or Molykote P1900 should *only* be used when specified in the repair, maintenance or installation procedure descriptions.

In such cases, proceed as follows:

- 1 Apply lubricant to the screw thread.
- 2 Apply lubricant between the plain washer and screw head.
- 3 Screw dimensions of M8 or larger must be tightened with a torque wrench. Screw dimensions of M6 or smaller may be tightened without a torque wrench *if* this is done by trained and qualified personnel.

Continues on next page

9 Reference information

9.3 Screw joints

Continued

| Lubricant | Article number |
|---|----------------|
| Molykote 1000 (molybdenum disulphide grease) | 3HAC042472-001 |
| Molykote P1900 (molybdenum disulphide grease) | 3HAC070875-001 |

Tightening torque

Before tightening any screw, note the following:

- Determine whether a **standard** tightening torque or **special** torque is to be applied. The **standard torques** are specified in the following tables. Any **special torques** are specified in the repair, maintenance or installation procedure descriptions. **Any special torque specified overrides the standard torque!**
- Use the *correct tightening torque* for each type of screw joint.
- Only use *correctly calibrated* torque keys.
- *Always tighten the joint by hand*, and never use pneumatic tools.
- Use the *correct tightening technique*, that is *do not* jerk. Tighten the screw in a slow, flowing motion.
- Maximum allowed total deviation from the specified value is **10%!**

Tightening torque for oil-lubricated screws with slotted or cross-recess head screws

The following table specifies the recommended standard tightening torque for *oil-lubricated screws with slotted or cross-recess head screws*.



Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

Tightening torque for oil-lubricated screws with allen head screws

The following table specifies the recommended standard tightening torque for *oil-lubricated screws with allen head screws*.



Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

| Dimension | Tightening torque (Nm) Class 8.8, oil-lubricated | Tightening torque (Nm) Class 10.9, oil-lubricated | Tightening torque (Nm) Class 12.9, oil-lubricated |
|-----------|---|--|--|
| M5 | 6 | - | - |
| M6 | 10 | - | - |
| M8 | 24 | 34 | 40 |
| M10 | 47 | 67 | 80 |
| M12 | 82 | 115 | 140 |
| M16 | 200 | 290 | 340 |
| M20 | 400 | 560 | 670 |

Continues on next page

| Dimension | Tightening torque (Nm) Class 8.8, oil-lubricated | Tightening torque (Nm) Class 10.9, oil-lubricated | Tightening torque (Nm) Class 12.9, oil-lubricated |
|-----------|---|--|--|
| M24 | 680 | 960 | 1150 |

Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws

The following table specifies the recommended standard tightening torque for *screws lubricated with Molycote 1000, Gleitmo 603 or equivalent with allen head screws*.



Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

| Dimension | Tightening torque (Nm) Class 10.9, lubricated ⁱ | Tightening torque (Nm) Class 12.9, lubricated ⁱ |
|-----------|---|---|
| M5 | | 8 |
| M6 | | 14 |
| M8 | 28 | 35 |
| M10 | 55 | 70 |
| M12 | 96 | 120 |
| M16 | 235 | 300 |
| M20 | 460 | 550 |
| M24 | 790 | 950 |

ⁱ Lubricated with Molycote 1000, Gleitmo 603 or equivalent

9 Reference information

9.4 Weight specifications

9.4 Weight specifications


Definition

In installation, repair, and maintenance procedures, weights of the components handled are sometimes specified. All components exceeding 22 kg (50 lbs) are highlighted in this way.

To avoid injury, ABB recommends the use of a lifting accessory when handling components with a weight exceeding 22 kg. A wide range of lifting accessories and devices are available for each manipulator model.

Example

Following is an example of a weight specification in a procedure:

| Action | Note |
|--|------|
|  CAUTION The arm weighs 25 kg. All lifting accessories used must be sized accordingly. | |

9.5 Standard toolkit

General

All service (repairs, maintenance and installation) procedures contain lists of tools required to perform the specified activity.

All special tools required are listed directly in the procedures while all the tools that are considered standard are gathered in the Standard toolkit and defined in the table below.

This way, the tools required are the sum of the Standard toolkit and any tools listed in the instructions.

Contents, standard toolkit

| Qty | Tool | Note |
|-----|---|--------------------------|
| 1 | Ring-open-end spanner 8-19 mm | |
| 1 | Socket head cap 5-17 mm | |
| 1 | Torx socket no: 20-60 | |
| 1 | Box spanner set | |
| 1 | Torque wrench 75-400 Nm | |
| 1 | Torque wrench 500-1500 Nm | |
| 1 | Ratchet head for torque wrench 1/2 | |
| 2 | Hexagon-headed screw M10x100 | |
| 1 | Socket head cap no: 14, socket 40 mm bit L 100 mm | |
| 1 | Socket head cap no: 14, socket 40 mm bit L 20 mm | To be shortened to 12 mm |
| 1 | Socket head cap no: 6, socket 40 mm bit L 145 mm | |
| 1 | Socket head cap no: 6, socket 40 mm bit L 220 mm | |

9 Reference information

9.6 Circuit diagrams

9.6 Circuit diagrams

Overview

The circuit diagrams are not included in this manual, but are available for registered users on myABB Business Portal, www.abb.com/myABB.

See the article numbers in the tables below.

Controllers

| Product | Article numbers for circuit diagrams |
|--|--------------------------------------|
| <i>Circuit diagram - OmniCore V250XT</i> | 3HAC074000-008 |
| <i>Circuit diagram - OmniCore V400XT</i> | 3HAC082020-008 |

Manipulators

| Product | Article numbers for circuit diagrams |
|--|--------------------------------------|
| <i>Circuit diagram - IRB 120</i> | 3HAC031408-003 |
| <i>Circuit diagram - IRB 140 type C</i> | 3HAC6816-3 |
| <i>Circuit diagram - IRB 260</i> | 3HAC025611-001 |
| <i>Circuit diagram - IRB 360</i> | 3HAC028647-009 |
| <i>Circuit diagram - IRB 390</i> | 3HAC060545-009 |
| <i>Circuit diagram - IRB 460</i> | 3HAC036446-005 |
| <i>Circuit diagram - IRB 660</i> | 3HAC025691-001 |
| <i>Circuit diagram - IRB 760</i> | 3HAC025691-001 |
| <i>Circuit diagram - IRB 1200</i> | 3HAC046307-003 |
| <i>Circuit diagram - IRB 1410</i> | 3HAC2800-3 |
| <i>Circuit diagram - IRB 1600/1660</i> | 3HAC021351-003 |
| <i>Circuit diagram - IRB 1510</i> | 3HAC087368-003 |
| <i>Circuit diagram - IRB 1520</i> | 3HAC039498-007 |
| <i>Circuit diagram - IRB 2400</i> | 3HAC6670-3 |
| <i>Circuit diagram - IRB 2600</i> | 3HAC029570-007 |
| <i>Circuit diagram - IRB 4400/4450S</i> | 3HAC9821-1 |
| <i>Circuit diagram - IRB 4600</i> | 3HAC029038-003 |
| <i>Circuit diagram - IRB 6620</i> | 3HAC025090-001 |
| <i>Circuit diagram - IRB 6620 / IRB 6620LX</i> | 3HAC025090-001 |
| <i>Circuit diagram - IRB 6640</i> | 3HAC025744-001 |
| <i>Circuit diagram - IRB 6650S</i> | 3HAC13347-1 3HAC025744-001 |
| <i>Circuit diagram - IRB 6660</i> | 3HAC025744-001 3HAC029940-001 |
| <i>Circuit diagram - IRB 6700 / IRB 6790</i> | 3HAC043446-005 |


Continues on next page

| Product | Article numbers for circuit diagrams |
|------------------------------------|---|
| <i>Circuit diagram - IRB 7600</i> | <i>3HAC13347-1</i> <i>3HAC025744-001</i> |
| <i>Circuit diagram - IRB 14000</i> | <i>3HAC050778-003</i> |
| <i>Circuit diagram - IRB 910SC</i> | <i>3HAC056159-002</i> |

This page is intentionally left blank

10 Lifting instructions

IRP A-250

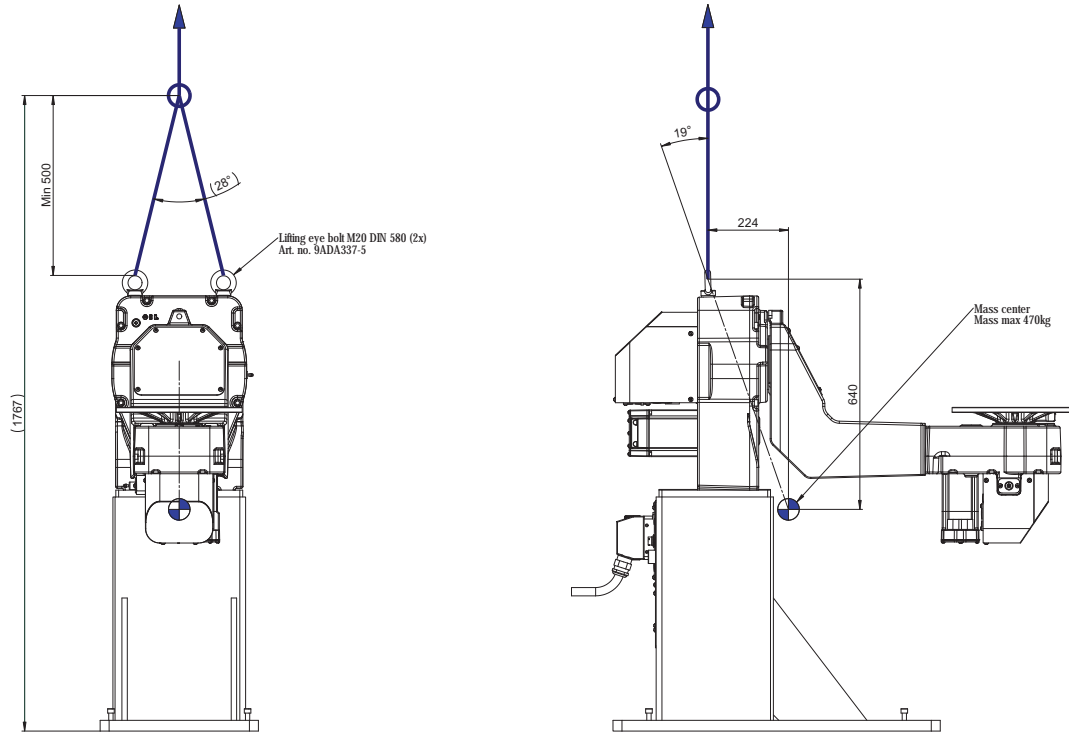


xx1500002131

Continues on next page

10 Lifting instructions

Continued


IRP A-500/750

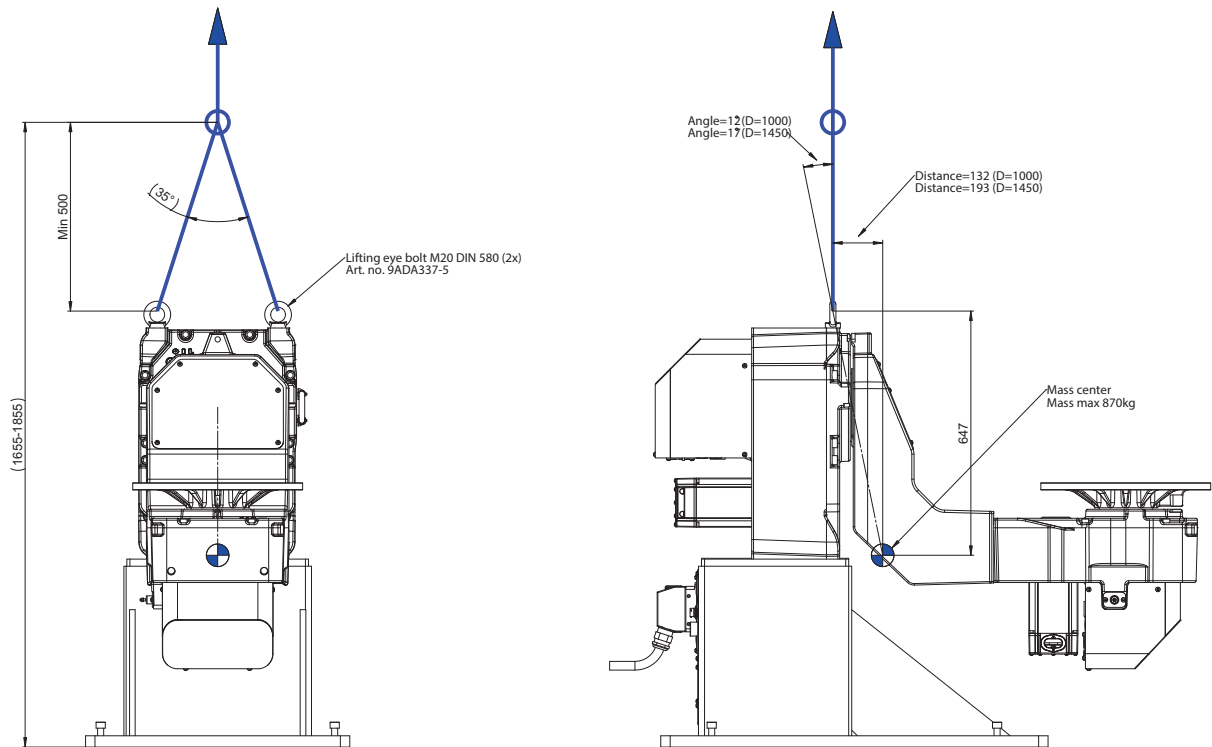

xx1500002132


Continues on next page

IRP B-250

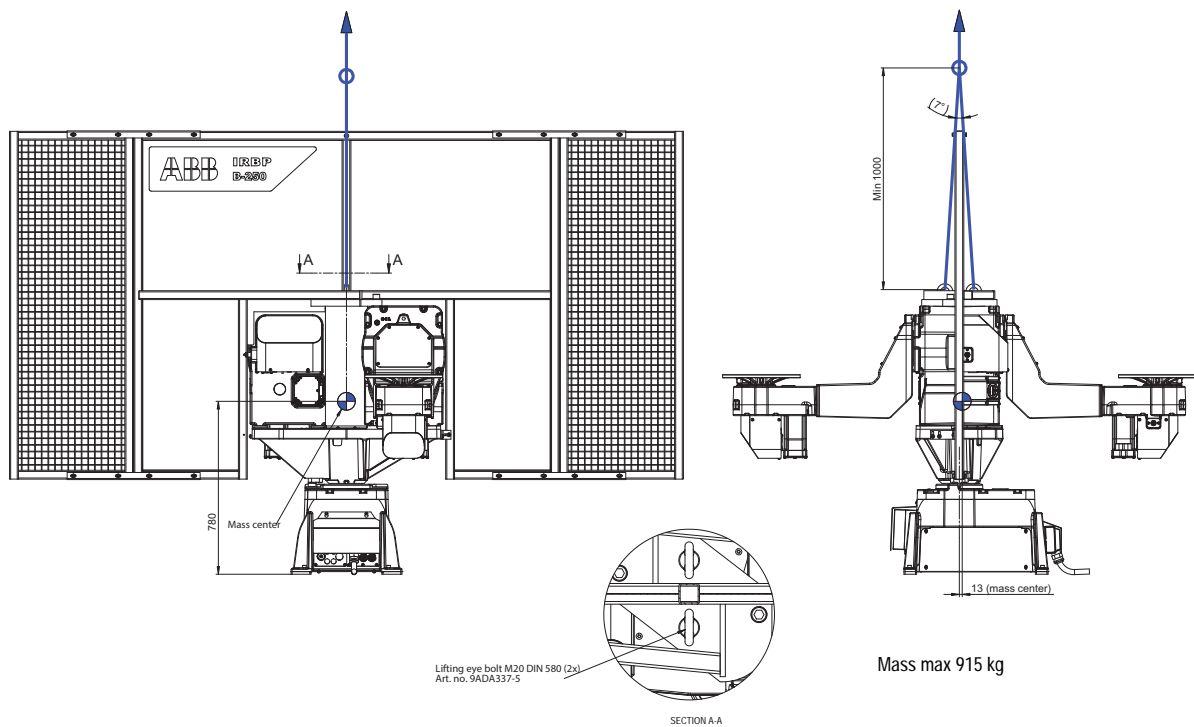

xx1500002133

IRP B-500/750

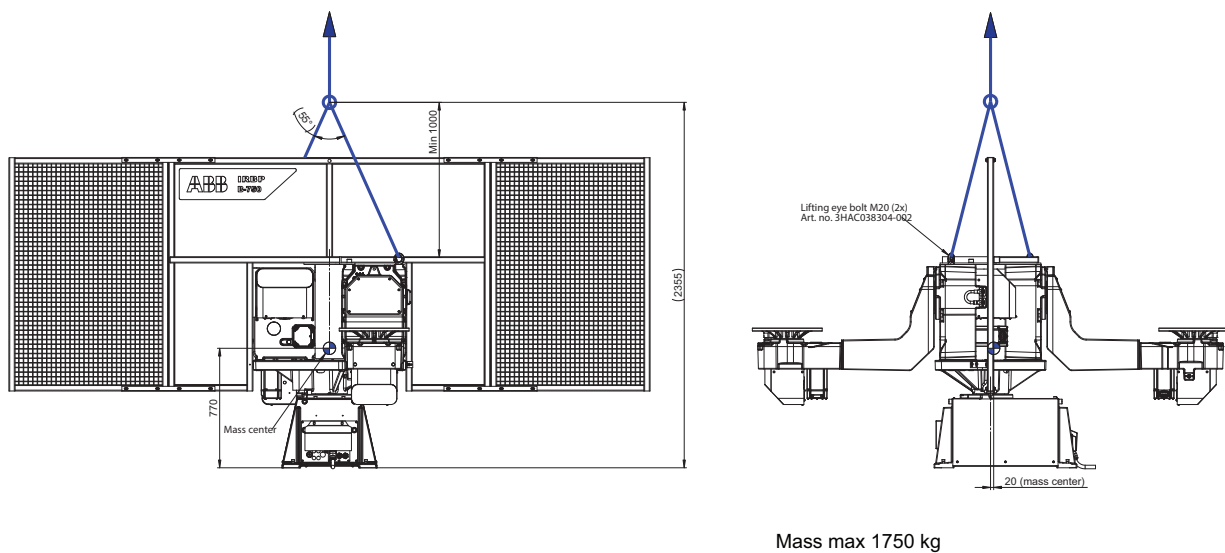


xx1500002134

Continues on next page

10 Lifting instructions

Continued


IRP C-500

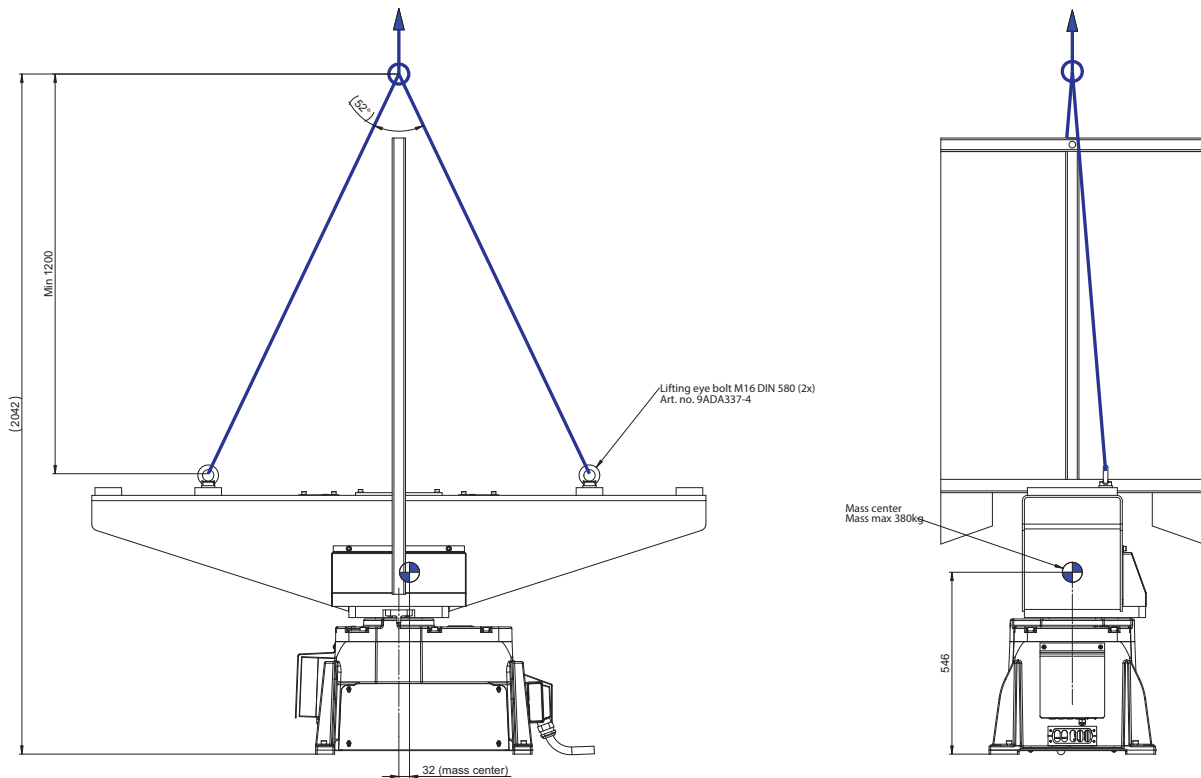

xx1500002135

Continues on next page

IRP C-1000

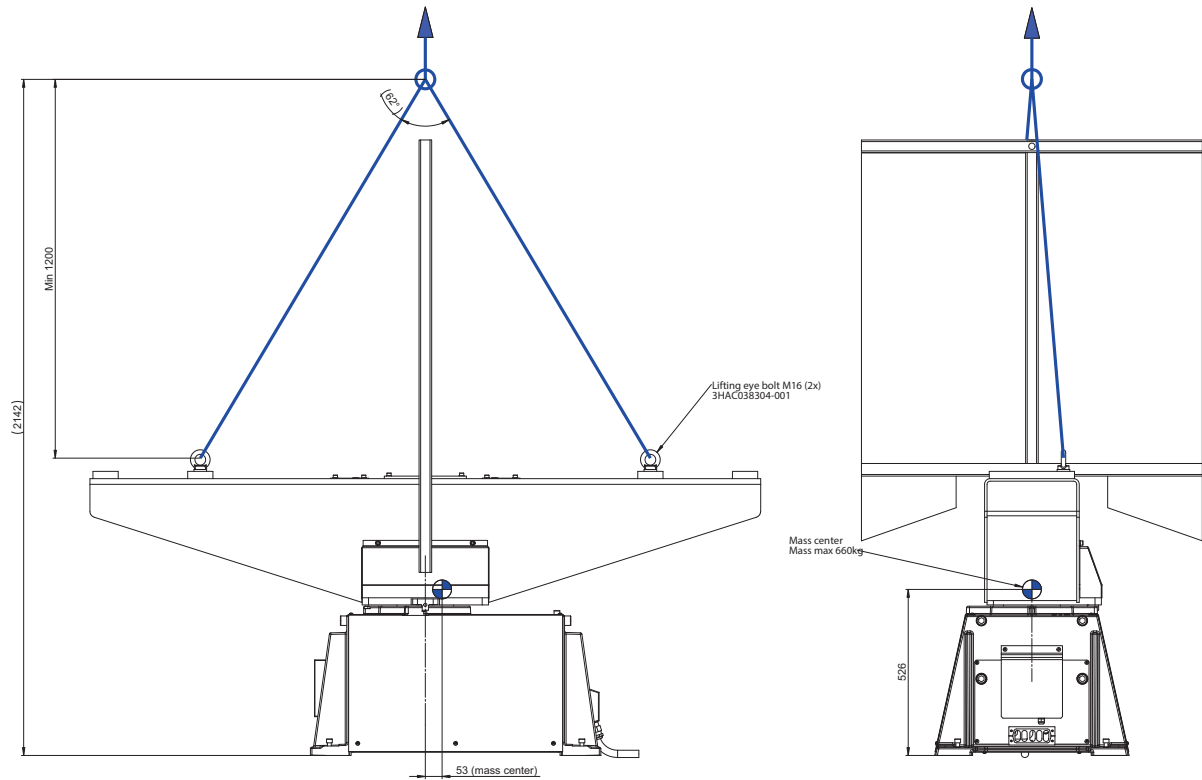


xx1500002136

Continues on next page

10 Lifting instructions

Continued


IRP K-300

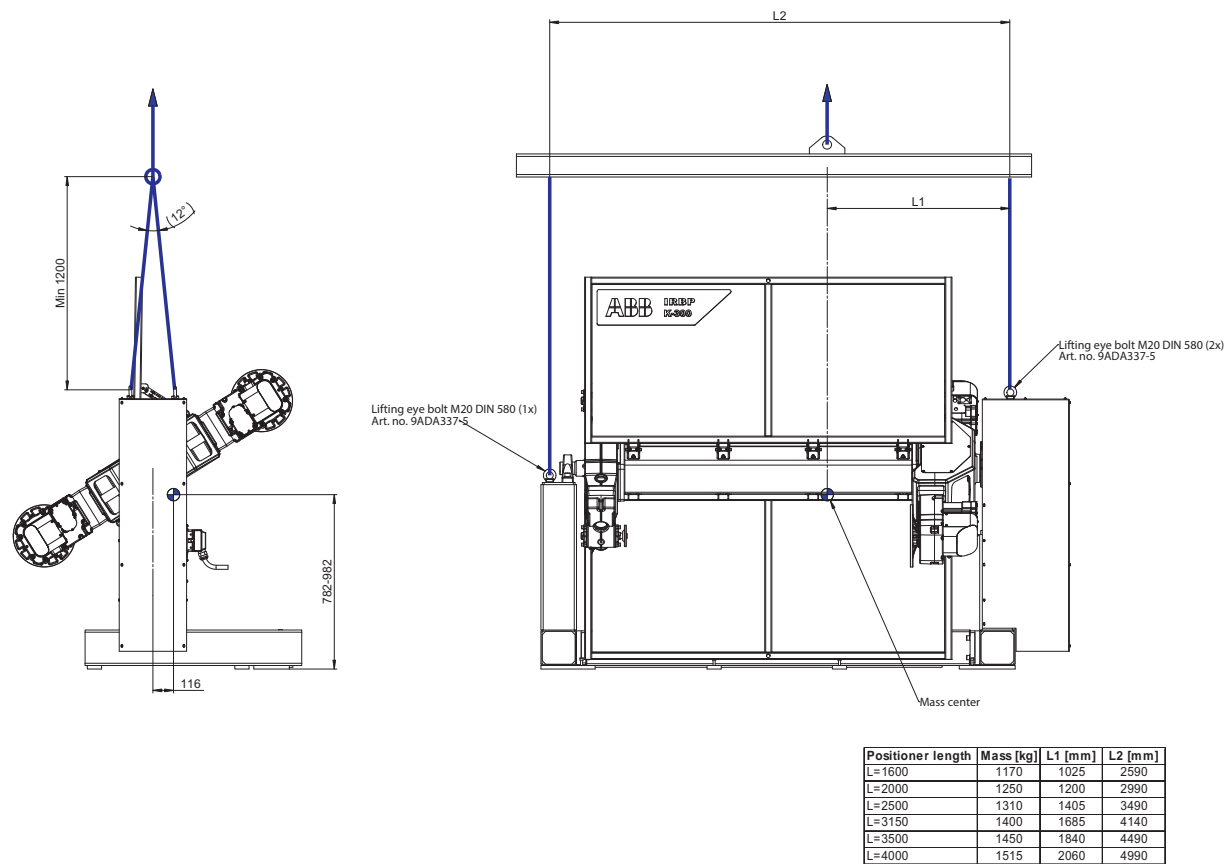

xx1500002139

Continues on next page

IRP K-600/1000

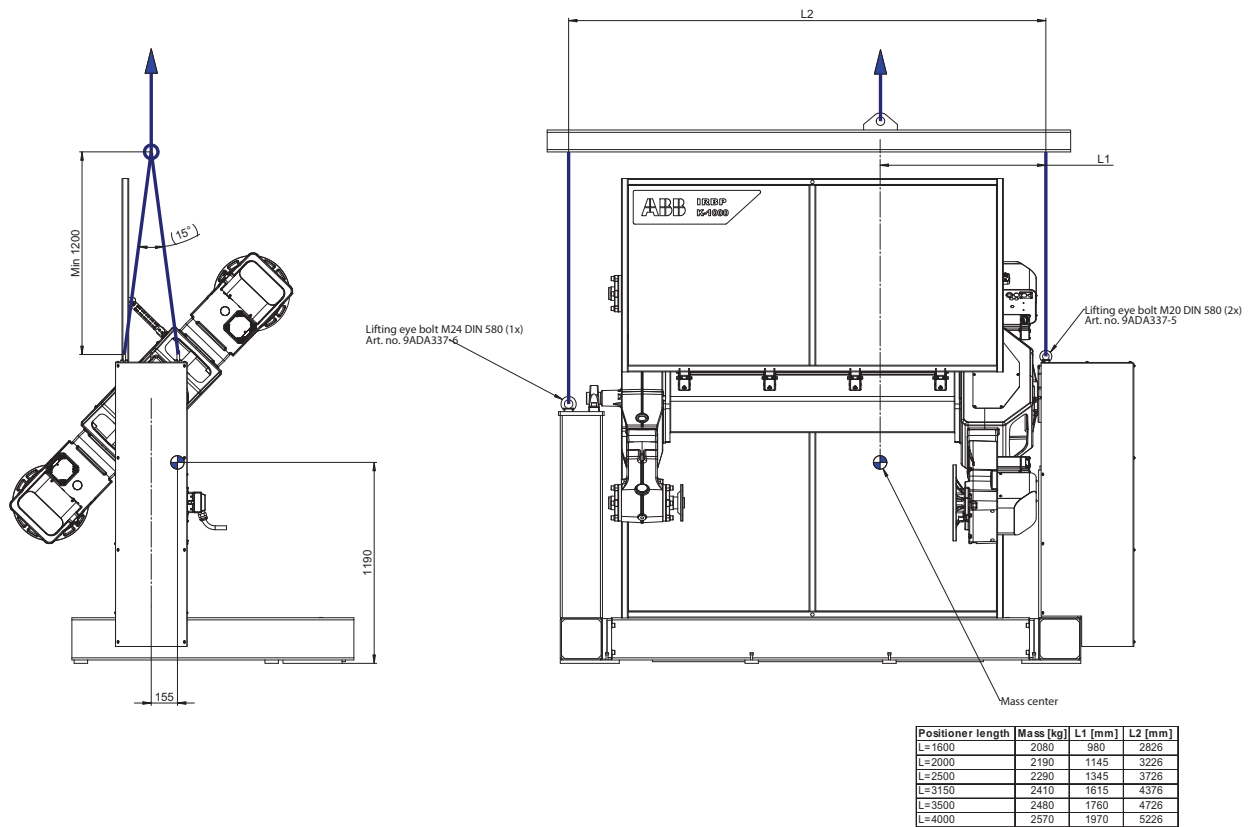


xx1500002140

Continues on next page

10 Lifting instructions

Continued

IRP L-300

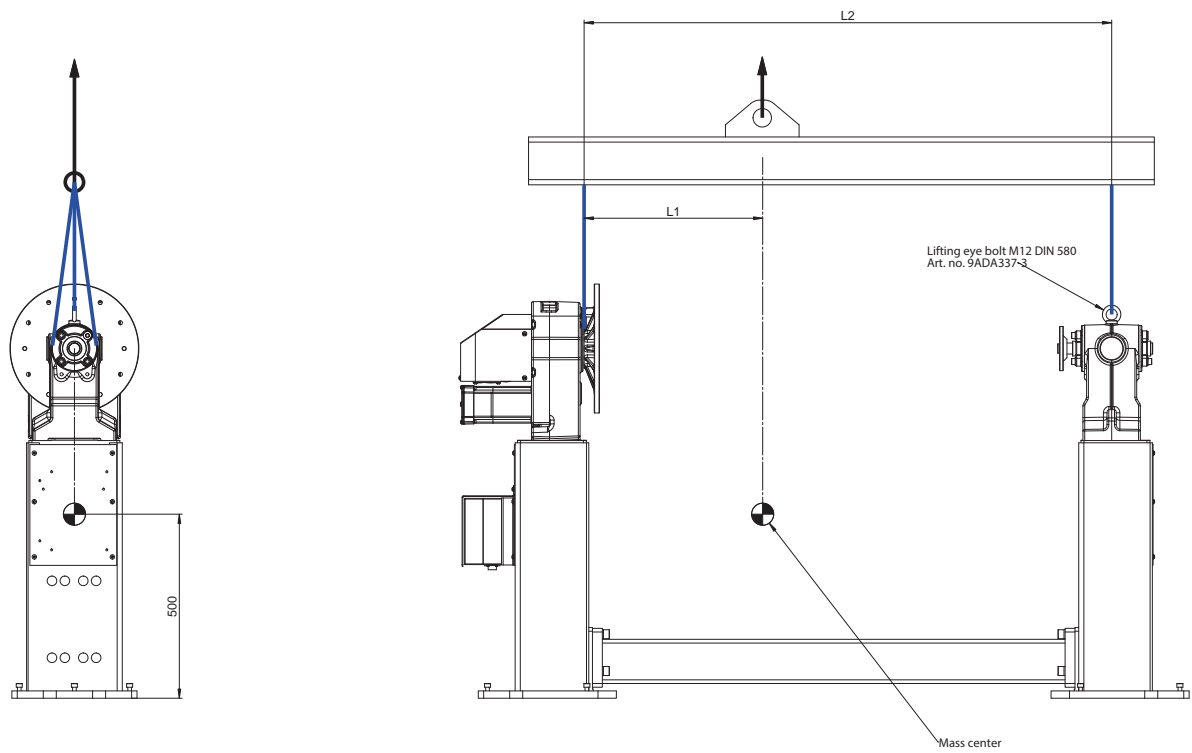


| Positioner length | Mass [kg] | L1 [mm] | L2 [mm] |
|-------------------|-----------|---------|---------|
| L=1250 | 250 | 485 | 1433 |
| L=1600 | 255 | 625 | 1783 |
| L=2000 | 260 | 785 | 2183 |
| L=2500 | 270 | 985 | 2683 |
| L=3150 | 280 | 1250 | 3333 |
| L=4000 | 300 | 1610 | 4183 |

xx1500002141

Continues on next page

IRP L-600/1000

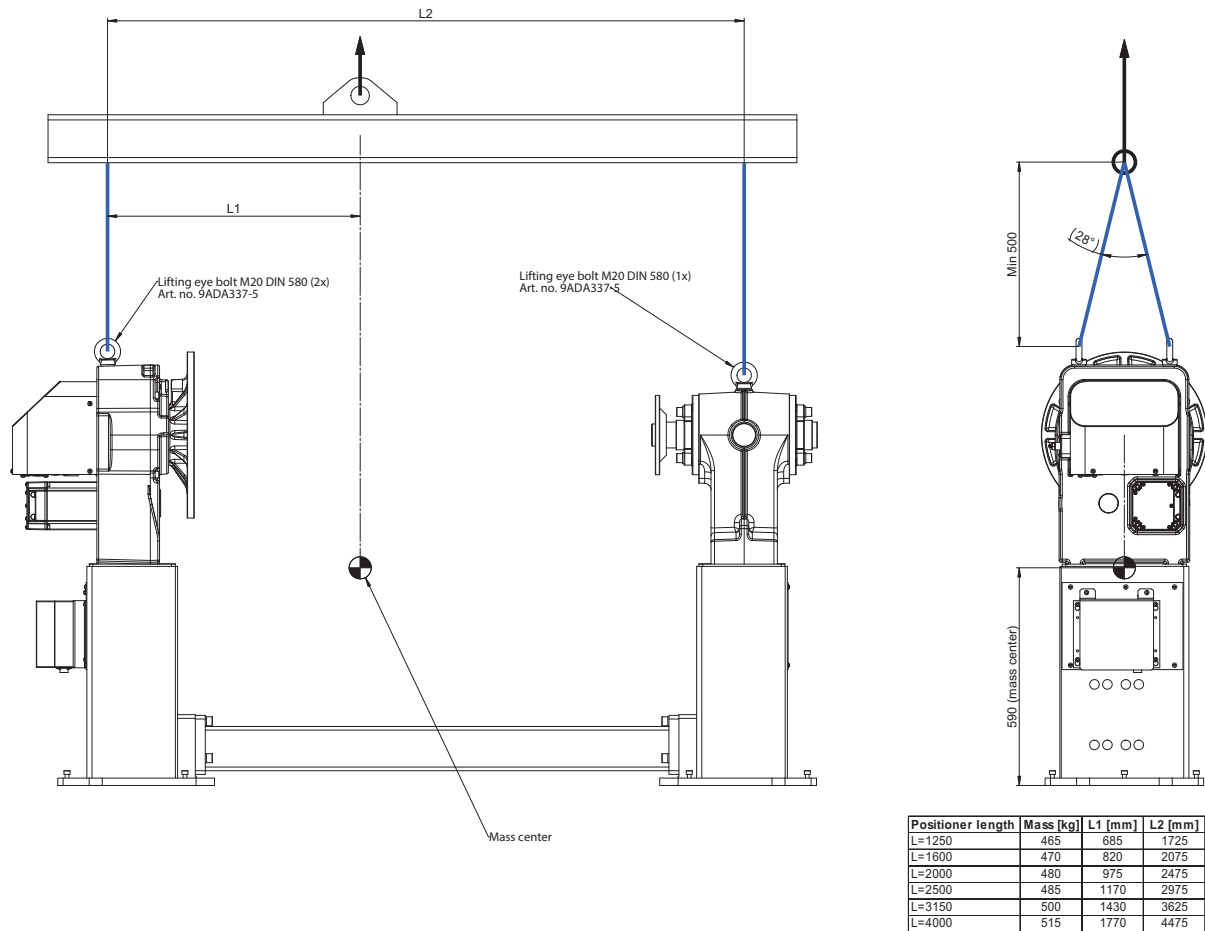


xx1500002142

Continues on next page

10 Lifting instructions

Continued



IRP L-2000

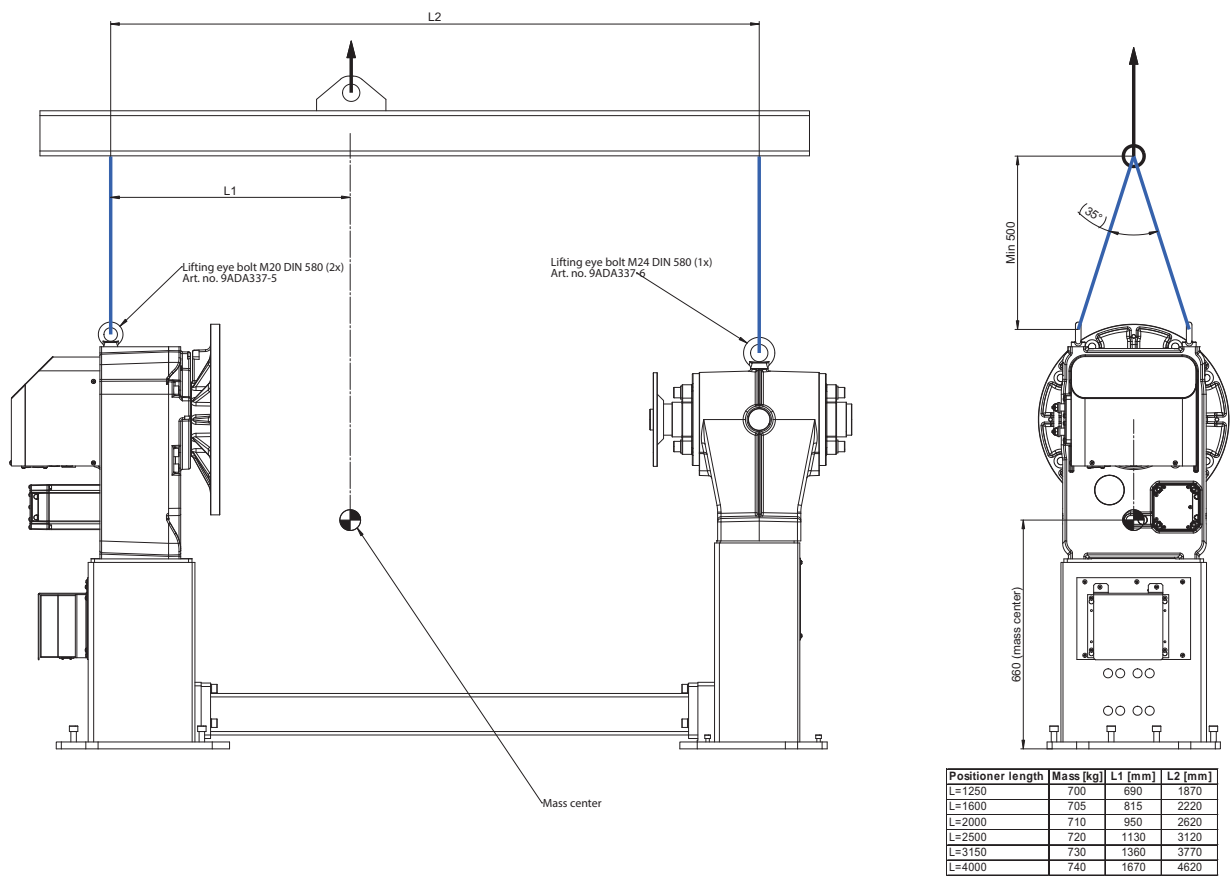

xx1500002143

Continues on next page

IRP R-300

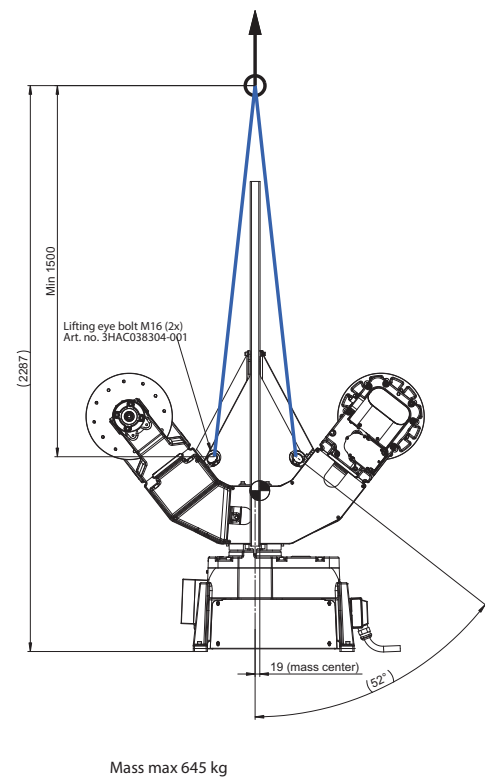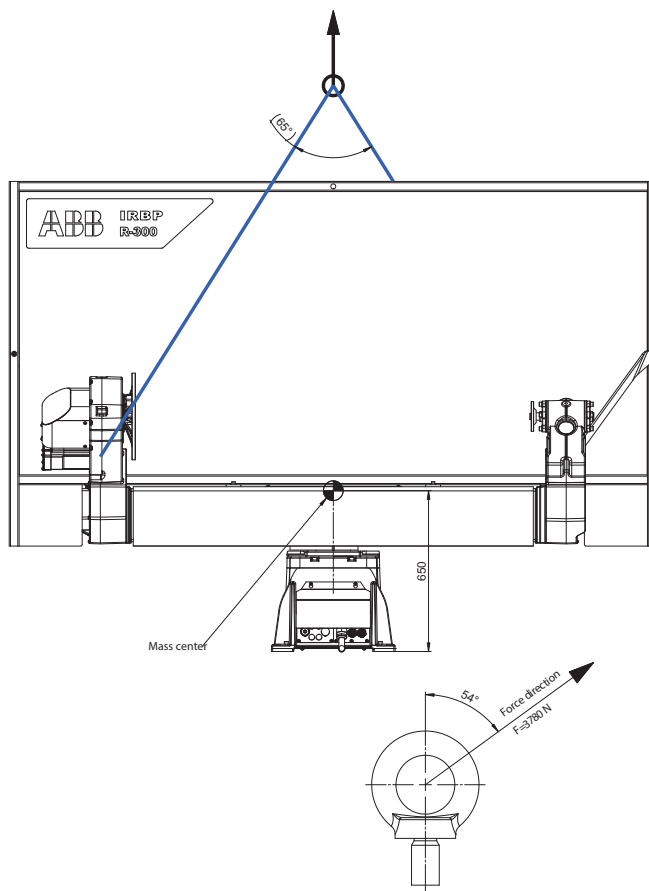


xx1500002144

Continues on next page

10 Lifting instructions

Continued

IRP R-600/1000

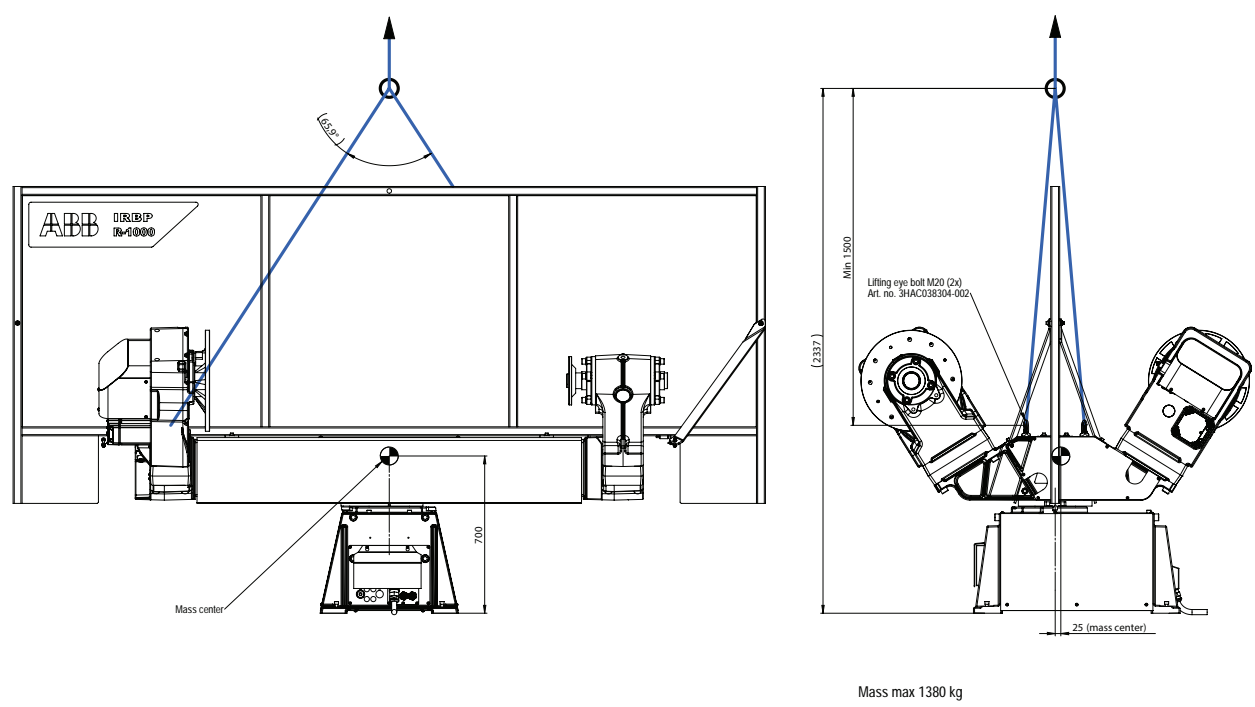

xx1500002145

Index

A

Adjusting screws, 67
allergenic material, 26
APO, 96
assembly instructions, 47
assessment of hazards and risks, 26
Axis Position Supervision, 96

B

batteries
 disposal, 188
battery pack
 replacing, interval, 99
brakes
 testing function, 33

C

cabinet lock, 27
calibrating
 roughly, 162
calibration
 rough, 162
 when to calibrate, 159
calibration position
 jogging to, 167
carbon dioxide extinguisher, 27
cast iron
 disposal, 188
cleaning, 111
climbing on robot, 30
copper
 disposal, 188
current collector, 113

D

dismounting
 fixtures, 89

E

environmental information, 188
ESD
 damage elimination, 66
 sensitive equipment, 66

F

fire extinguishing, 27
fixtures
 dismounting, 89
 installing, 87
FlexPendant
 jogging to calibration position, 167
 MoveAbsJ instruction, 167
 updating revolution counters, 162
floor bolts, 67
foundation
 forces, 58
 requirements, 49

G

grease, 30
 disposal, 188

H

hanging
 installed hanging, 26

hazard levels, 17
hazardous material, 188
height
 installed at a height, 26
hot surfaces, 30
HRA, 26
<http://library.abb.com>, 94

I

install
 fixtures, 87
instructions
 MechUnitLoad, 182
instructions for assembly, 47
integrator responsibility, 26

L

labels
 robot, 19
lifting accessory, 196
limitation of liability, 15
Lithium
 disposal, 188
load data, 176
load identification
 additional axes, 182
 MechUnitLoad, 182
 positioners, 176
lock and tag, 27
lubricants, 30

M

ManLoadIdentify, 176, 178
max load difference, 87
MechUnitLoad, instruction, 182
MoveAbsJ instruction, 167

N

national regulations, 26
neodymium
 disposal, 188
nodular iron
 disposal, 188

O

oil, 30
 disposal, 188
original spare parts, 15

P

pedestal
 installed on pedestal, 26
personnel
 requirements, 16
plastic
 disposal, 188
PPE, 16, 28
product standards, 191
protective equipment, 16, 28
protective wear, 16, 28

R

recycling, 188
regional regulations, 26
replacements, report, 117
replacing
 xx, 74, 104, 106

- report replacements, 117
- requirements on foundation, 49
- responsibility and validity, 15
- revolution counters
 - storing on FlexPendant, 162
 - updating, 162
- risk of burns, 30
- robot
 - labels, 19
 - symbols, 19
- rubber
 - disposal, 188

S

- safety
 - brake testing, 33
 - ESD, 66
 - fire extinguishing, 27
 - signals, 17
 - signals in manual, 17
 - symbols, 17
 - symbols on robot, 19
- safety devices, 27
- safety hazard
 - hydraulic system, 28
 - pneumatic system, 28
- safety signals
 - in manual, 17
- safety standards, 191
- screw joints, 63, 193
- service routine
 - ManLoadIdentify, 176
- shipping, 187
- signals
 - safety, 17
- standards, 191

- steel
 - disposal, 188
- stop lugs, 143
- symbols
 - safety, 17
- synchronization position, 162
- system integrator requirements, 26

T

- testing
 - brakes, 33
- transportation, 187
- troubleshooting
 - oil spills, 111
 - safety, 34

U

- upcycling, 188
- updating revolution counters, 162
- users
 - requirements, 16

V

- validity and responsibility, 15

W

- work pieces
 - dismounting, 89
 - installing, 87

X

- xx
 - replacing, 74, 104, 106

Z

- zero position
 - checking, 166

**ABB AB****Robotics & Discrete Automation**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS**Robotics & Discrete Automation**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201315, China

Telephone: +86 21 6105 6666

ABB Inc.**Robotics & Discrete Automation**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics