

ROBOTICS

# Product manual

## IRB 5710



Trace back information:  
Workspace 25A version a14  
Checked in 2025-03-07  
Skribenta version 5.6.018



**Product manual**

**IRB 5710**

OmniCore

Document ID: 3HAC075184-001

Revision: L

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2022-2025 ABB. All rights reserved.  
Specifications subject to change without notice.

# Table of contents

|   |            |
|---|------------|
| Overview of this manual .....   | 9          |
| Product documentation .....   | 12         |
| How to read the product manual .....  | 14         |
| <b>1 Safety</b> .....   | <b>15</b>  |
| 1.1 Safety information .....  | 15         |
| 1.1.1 Limitation of liability .....   | 15         |
| 1.1.2 Requirements on personnel .....   | 16         |
| 1.2 Safety signals and symbols .....  | 17         |
| 1.2.1 Safety signals in the manual .....  | 17         |
| 1.2.2 Safety symbols on manipulator labels .....                                | 19         |
| 1.3 Robot stopping functions .....  | 25         |
| 1.4 Safety during installation and commissioning .....                          | 26         |
| 1.5 Safety during operation .....   | 29         |
| 1.6 Safety during maintenance and repair .....                                  | 30         |
| 1.6.1 Safety during maintenance and repair .....                                | 30         |
| 1.6.2 Emergency release of the robot axes .....                                 | 33         |
| 1.6.3 Brake testing .....   | 34         |
| 1.7 Safety during troubleshooting .....   | 35         |
| 1.8 Safety during decommissioning .....   | 36         |
| <b>2 Manipulator description</b> .....  | <b>37</b>  |
| 2.1 Technical data .....  | 37         |
| 2.2 Working range .....   | 41         |
| 2.3 The unit is sensitive to ESD .....  | 48         |
| <b>3 Installation and commissioning</b> .....                                   | <b>49</b>  |
| 3.1 Introduction to installation and commissioning .....                        | 49         |
| 3.2 Unpacking .....   | 50         |
| 3.2.1 Pre-installation procedure .....  | 50         |
| 3.2.2 Risk of tipping/stability .....   | 51         |
| 3.3 On-site installation .....  | 53         |
| 3.3.1 Brief installation procedure .....  | 53         |
| 3.3.2 Installing a base plate .....   | 54         |
| 3.3.3 Lifting the robot .....   | 63         |
| 3.3.3.1 Lifting robot with lifting accessory (recommended lifting method) ..... | 63         |
| 3.3.3.2 Lifting the robot with fork lift .....                                  | 66         |
| 3.3.3.3 Lifting and rotating a suspended mounted or tilted manipulator .....    | 67         |
| 3.3.3.4 Lifting the robot with roundslings .....                                | 68         |
| 3.3.4 Orienting and securing the robot .....                                    | 72         |
| 3.3.5 Manually releasing the brakes .....                                       | 76         |
| 3.3.6 Setting the system parameters for an inverted or a tilted robot .....     | 78         |
| 3.3.7 Loads fitted to the robot, stopping time and braking distances .....      | 80         |
| 3.3.8 Installing the motor cooling fan (option 3320-1, 3321-1) .....            | 81         |
| 3.3.9 Fitting equipment on the robot (robot dimensions) .....                   | 86         |
| 3.4 Working range alterations .....   | 97         |
| 3.4.1 Adjusting the working range .....   | 97         |
| 3.4.2 Installing movable mechanical stops on axis 1 (option 3323-1) .....       | 98         |
| 3.4.3 Extended working range, axis 1 (option) .....                             | 102        |
| 3.5 Electrical connections .....  | 104        |
| 3.5.1 Robot cabling and connection points .....                                 | 104        |
| 3.6 Test run after installation, maintenance, or repair .....                   | 107        |
| <b>4 Maintenance</b> .....  | <b>109</b> |
| 4.1 Introduction .....  | 109        |

|          |   |            |
|----------|---|------------|
| 4.2      | Maintenance schedule and expected component life .....                      | 110        |
| 4.2.1    | Specification of maintenance intervals .....                                | 110        |
| 4.2.2    | Maintenance schedule .....  | 111        |
| 4.2.3    | Expected component life .....   | 113        |
| 4.3      | Inspection activities .....   | 114        |
| 4.3.1    | Inspecting the motor seal .....   | 114        |
| 4.3.2    | Inspecting the cable harness .....  | 116        |
| 4.3.3    | Inspecting the dampers .....  | 118        |
| 4.3.4    | Inspecting the information labels .....                                     | 120        |
| 4.3.5    | Inspecting the axis-1 mechanical stop .....                                 | 123        |
| 4.3.6    | Inspecting the oil level in axis-1 gearbox .....                            | 125        |
| 4.3.7    | Inspecting the oil level in axis-2 gearbox .....                            | 130        |
| 4.3.8    | Inspecting the oil level in axis-3 gearbox .....                            | 134        |
| 4.3.9    | Inspecting the oil level in axis-4 gearbox .....                            | 138        |
| 4.3.10   | Inspecting the oil level in axis-5 gearbox .....                            | 141        |
| 4.3.11   | Inspecting the oil level in axis-6 gearbox .....                            | 144        |
| 4.4      | Replacement/changing activities .....                                       | 148        |
| 4.4.1    | Type of lubrication in gearboxes .....                                      | 148        |
| 4.4.2    | Changing the oil in axis-1 gearbox .....                                    | 150        |
| 4.4.3    | Changing the oil in axis-2 gearbox .....                                    | 161        |
| 4.4.4    | Changing the oil in axis-3 gearbox .....                                    | 167        |
| 4.4.5    | Changing the oil in axis-4 gearbox .....                                    | 172        |
| 4.4.6    | Changing the oil in axis-5 gearbox .....                                    | 177        |
| 4.4.7    | Changing the oil in axis-6 gearbox .....                                    | 182        |
| 4.4.8    | Replacing the SMB battery .....   | 187        |
| 4.5      | Cleaning activities .....   | 190        |
| 4.5.1    | Cleaning the IRB 5710 .....   | 190        |
| <b>5</b> | <b>Repair</b> .....   | <b>195</b> |
| 5.1      | Introduction .....  | 195        |
| 5.2      | General procedures .....  | 196        |
| 5.2.1    | Performing a leak-down test .....   | 196        |
| 5.2.2    | Mounting instructions for bearings .....                                    | 197        |
| 5.2.3    | Mounting instructions for sealings .....                                    | 199        |
| 5.2.4    | Cut the paint or surface on the robot before replacing parts .....          | 203        |
| 5.3      | Lifting procedures .....  | 204        |
| 5.3.1    | Lifting down the manipulator from inverted to floor-standing position ..... | 204        |
| 5.4      | Axes 1 and 2 .....  | 207        |
| 5.4.1    | Replacing the axis-1 cassette sealing .....                                 | 207        |
| 5.5      | Axes 3 and 4 .....  | 222        |
| 5.5.1    | Replacing the arm house cover including the axis-4 cassette sealing .....   | 222        |
| 5.6      | Wrist .....   | 255        |
| 5.6.1    | Replacing the wrist .....   | 255        |
| 5.6.2    | Replacing the turning disc .....  | 280        |
| 5.7      | Electronic parts .....  | 287        |
| 5.7.1    | Removing the cable harness .....  | 287        |
| 5.7.2    | Refitting the cable harness .....   | 310        |
| 5.7.3    | Replacing the brake release unit .....                                      | 341        |
| 5.7.4    | Replacing the SMB unit .....  | 348        |
| 5.8      | Motors .....  | 354        |
| 5.8.1    | Replacing the axis-1 motor .....  | 354        |
| 5.8.2    | Replacing the axis-2 motor .....  | 379        |
| 5.8.3    | Replacing the axis-3 motor .....  | 398        |
| 5.8.4    | Replacing the axis-4 motor .....  | 413        |
| 5.8.5    | Replacing the axis-5 motor .....  | 428        |
| 5.8.6    | Replacing the axis-6 motor .....  | 446        |
| 5.9      | Gears .....   | 458        |
| 5.9.1    | Replacing the axis-1 gearbox .....  | 458        |
| 5.9.2    | Replacing the axis-2 gearbox .....  | 513        |

|                    |   |            |
|--------------------|---|------------|
| 5.9.3              | Replacing the axis-3 gearbox .....                                | 556        |
| 5.9.4              | Replacing the axis-6 gearbox .....                                | 601        |
| <b>6</b>           | <b>Calibration .....</b>  | <b>621</b> |
| 6.1                | Introduction to calibration .....                                 | 621        |
| 6.1.1              | Introduction and calibration terminology .....                    | 621        |
| 6.1.2              | Calibration methods .....   | 622        |
| 6.1.3              | When to calibrate .....   | 624        |
| 6.2                | Synchronization marks and axis movement directions .....          | 625        |
| 6.2.1              | Synchronization marks and synchronization position for axes ..... | 625        |
| 6.2.2              | Calibration movement directions for all axes .....                | 627        |
| 6.3                | Updating revolution counters .....                                | 628        |
| 6.3.1              | Updating revolution counters on OmniCore robots .....             | 628        |
| 6.4                | Calibrating with Axis Calibration method .....                    | 630        |
| 6.4.1              | Description of Axis Calibration .....                             | 630        |
| 6.4.2              | Calibration tools for Axis Calibration .....                      | 633        |
| 6.4.3              | Installation locations for the calibration tools .....            | 635        |
| 6.4.4              | Axis Calibration - Running the calibration procedure .....        | 637        |
| 6.4.5              | Reference calibration .....                                       | 641        |
| 6.5                | Verifying the calibration .....                                   | 643        |
| 6.6                | Checking the synchronization position .....                       | 644        |
| 6.6.1              | Checking the synchronization position on OmniCore robots .....    | 645        |
| <b>7</b>           | <b>Troubleshooting .....</b>                                      | <b>647</b> |
| 7.1                | Introduction to troubleshooting .....                             | 647        |
| 7.2                | Oil and grease stains on motors and gearboxes .....               | 649        |
| 7.3                | Mechanical noise or dissonance .....                              | 650        |
| 7.4                | Troubleshooting too hot gearboxes .....                           | 651        |
| 7.5                | Manipulator collapses on power down .....                         | 652        |
| <b>8</b>           | <b>Decommissioning .....</b>                                      | <b>653</b> |
| 8.1                | Introduction to decommissioning .....                             | 653        |
| 8.2                | Environmental information .....                                   | 654        |
| 8.3                | Scrapping of robot .....  | 656        |
| <b>9</b>           | <b>Reference information .....</b>                                | <b>657</b> |
| 9.1                | Introduction .....  | 657        |
| 9.2                | Applicable standards .....  | 658        |
| 9.3                | Unit conversion .....   | 659        |
| 9.4                | Screw joints .....  | 660        |
| 9.5                | Weight specifications .....                                       | 664        |
| 9.6                | Standard toolkit .....  | 665        |
| 9.7                | Special tools .....   | 666        |
| 9.8                | Lifting accessories and lifting instructions .....                | 671        |
| <b>Index .....</b> |   | <b>673</b> |

**This page is intentionally left blank**

# Overview of this manual

---

## About this manual

This manual contains instructions for:

- mechanical and electrical installation of the IRB 5710
- maintenance of the IRB 5710
- mechanical and electrical repair of the IRB 5710

The robot described in this manual has the following protection types:

- *Standard*
- *Foundry Plus*

---

## Product manual scope

The manual covers all variants and designs of the IRB 5710. Some variants and designs may have been removed from the business offer and are no longer available for purchase.

---

## Usage

This manual shall be used during:

- installation and commissioning, from lifting the product to its work site and securing it to the foundation, to making it ready for operation
- maintenance work
- repair work
- decommissioning work



### Note

It is the responsibility of the integrator to conduct a risk assessment of the final application.

It is the responsibility of the integrator to provide safety and user guides for the robot system.

---

## Who should read this manual?

This manual is intended for:

- installation personnel
- maintenance personnel
- repair personnel.

---

## Prerequisites

A maintenance/repair/installation craftsman working with an ABB robot shall:

- be trained by ABB and have the required knowledge of mechanical and electrical installation/repair/maintenance work.
- be trained to respond to emergencies or abnormal situations.

*Continues on next page*

### References

Documentation referred to in the manual, is listed in the table below.

| Document name  | Document ID           |
|--|-----------------------|
| <i>Product manual, spare parts - IRB 5710</i>                | <i>3HAC079891-001</i> |
| <i>Product specification - IRB 5710</i>                      | <i>3HAC075188-001</i> |
| <i>Technical reference manual - Lubrication in gearboxes</i> | <i>3HAC042927-001</i> |
| <i>Product manual - DressPack IRB 5710</i>                   | <i>3HAC082052-001</i> |
| <i>Product manual - OmniCore V250XT Type B</i>               | <i>3HAC087112-001</i> |
| <i>Product manual - OmniCore V400XT</i>                      | <i>3HAC081697-001</i> |
| <i>Circuit diagram - IRB 5710/IRB 5720</i>                   | <i>3HAC080367-001</i> |
| <i>Technical reference manual - System parameters</i>        | <i>3HAC065041-001</i> |
| <i>Operating manual - Integrator's guide OmniCore</i>        | <i>3HAC065037-001</i> |
| <i>Application manual - Functional safety and SafeMove</i>   | <i>3HAC066559-001</i> |



#### Tip

All documents can be found via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

### Revisions

| Revision | Description  |
|----------|--|
| A        | First edition.   |
| B        | Published in release 22C. The following updates are done in this revision: <ul style="list-style-type: none"><li>• Added sections into the Decommissioning chapter.</li><li>• Added section for lifting the robot with lifting accessory 3HAC15607-1.</li><li>• Several minor corrections, clarifications and additions made throughout the repair procedures.</li></ul>   |
| C        | Published in release 22D. The following updates are done in this revision: <ul style="list-style-type: none"><li>• Added a step for overall inspection of cabling after cable harness has been replaced.</li><li>• Removed M16 guide pins from the axis-2 gearbox replacement procedure.</li><li>• Added inspection of motor seal to the maintenance schedule.</li><li>• Added images showing cabling and connectors in the motor connection boxes.</li><li>• Added a step for loosening the cable harness from the electronic box during cable harness replacement.</li><li>• Changed tightening torque for axis-1 mechanical stop pin from 24 Nm to 12 Nm.</li><li>• Changed article number for the oil level gauge for inverted manipulators.</li></ul> |

Continues on next page



| Revision | Description  |
|----------|--|
| D        | Published in release 23A. The following updates are done in this revision: <ul style="list-style-type: none"> <li>Added table with specified values for axes angles of most stable transportation position.</li> <li>Changed tightening torque for axis-1 mechanical stop pin from 12 Nm to 10 Nm.</li> <li>Added maintenance activity for cleaning of seals.</li> <li>Several minor corrections, clarifications and additions made throughout the repair procedures.</li> </ul> |
| E        | Published in release 23B. The following updates are made in this revision: <ul style="list-style-type: none"> <li>Added general information about cassette sealings in repair chapter.</li> </ul>  |
| F        | Published in release 23C. The following updates are made in this revision: <ul style="list-style-type: none"> <li>New tool for refitting the axis-4 cassette sealing added.</li> </ul>   |
| G        | Published in release 23D. The following updates are made in this revision: <ul style="list-style-type: none"> <li>Added attachment holes for equipment on lower arm dimension drawing.</li> </ul>  |
| H        | Published in release 24A. The following updates are made in this revision: <ul style="list-style-type: none"> <li>Changed article numbers for CP/CS floor cables.</li> </ul>   |
| J        | Published in release 24B. The following updates are made in this revision: <ul style="list-style-type: none"> <li>Added option motor cooling fans.</li> <li>Added connection box cover with threaded connection to axis-1 and axis-2 motor spare part list.</li> <li>Corrected measurement on the base in dimension drawings.</li> </ul>   |
| K        | Published in release 24D. The following updates are made in this revision: <ul style="list-style-type: none"> <li>Updated the figures and the refitting procedures of arm house cable guide due to changed design.</li> <li>Added information about securing and tightening the axis-4 arm house cover attachment screws crosswise.</li> <li>Changed article number for movable mechanical stop set for axis 1.</li> </ul>   |
| L        | Published in release 25A. The following updates are made in this revision: <ul style="list-style-type: none"> <li>Added section <a href="#">Troubleshooting too hot gearboxes on page 651</a>.</li> <li>Added flange sealant to refitting of axis-1 cable harness protection ring. Also added spare part number for protection ring o-ring.</li> <li>Removed attachment hole from arm house dimension drawing.</li> </ul>  |

# Product documentation

### Categories for user documentation from ABB Robotics

The user documentation from ABB Robotics is divided into a number of categories. This listing is based on the type of information in the documents, regardless of whether the products are standard or optional.



#### Tip

All documents can be found via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

### Product manuals

Manipulators, controllers, DressPack, and most other hardware is delivered with a **Product manual** that generally contains:

- Safety information.
- Installation and commissioning (descriptions of mechanical installation or electrical connections).
- Maintenance (descriptions of all required preventive maintenance procedures including intervals and expected life time of parts).
- Repair (descriptions of all recommended repair procedures including spare parts).
- Calibration.
- Troubleshooting.
- Decommissioning.
- Reference information (safety standards, unit conversions, screw joints, lists of tools).
- Spare parts list with corresponding figures (or references to separate spare parts lists).
- References to circuit diagrams.

### Technical reference manuals

The technical reference manuals describe reference information for robotics products, for example lubrication, the RAPID language, and system parameters.

### Application manuals

Specific applications (for example software or hardware options) are described in **Application manuals**. An application manual can describe one or several applications.

An application manual generally contains information about:

- The purpose of the application (what it does and when it is useful).
- What is included (for example cables, I/O boards, RAPID instructions, system parameters, software).
- How to install included or required hardware.
- How to use the application.

*Continues on next page*

- Examples of how to use the application.

---

### Operating manuals

The operating manuals describe hands-on handling of the products. The manuals are aimed at those having first-hand operational contact with the product, that is production cell operators, programmers, and troubleshooters.

# How to read the product manual

---

### Reading the procedures

The procedures contain all information required for the installation or service activity and can be printed out separately when needed for a certain service procedure.

### Safety information

The manual includes a separate safety chapter that must be read through before proceeding with any service or installation procedures. All procedures also include specific safety information when dangerous steps are to be performed.

Read more in the chapter [Safety on page 15](#).

### Illustrations

The product is illustrated with general figures that does not take painting or protection type in consideration.

Likewise, certain work methods or general information that is valid for several product models, can be illustrated with illustrations that show a different product model than the one that is described in the current manual.

# 1 Safety

## 1.1 Safety information

### 1.1.1 Limitation of liability

---

**Limitation of liability**

Any information given in this manual regarding safety must not be construed as a warranty by ABB that the industrial robot will not cause injury or damage even if all safety instructions are complied with.

The information does not cover how to design, install and operate a robot system, nor does it cover all peripheral equipment that can influence the safety of the robot system.

In particular, liability cannot be accepted if injury or damage has been caused for any of the following reasons:

- Use of the robot in other ways than intended.
- Incorrect operation or maintenance.
- Operation of the robot when the safety devices are defective, not in their intended location or in any other way not working.
- When instructions for operation and maintenance are not followed as intended.
- Non-authorized design modifications of the robot.
- Repairs on the robot and its spare parts carried out by in-experienced or non-qualified personnel.
- Foreign objects.
- Force majeure.

---

**Spare parts and equipment**

ABB supplies original spare parts and equipment which have been tested and approved for their intended use. The installation and/or use of non-original spare parts and equipment can negatively affect the safety, function, performance, and structural properties of the robot. ABB is not liable for damages caused by the use of non-original spare parts and equipment.

# 1 Safety

---

## 1.1.2 Requirements on personnel

### 1.1.2 Requirements on personnel

---

#### General

Only personnel with appropriate training are allowed to install, maintain, service, repair, and use the robot. This includes electrical, mechanical, hydraulics, pneumatics, and other hazards identified in the risk assessment.

Persons who are under the influence of alcohol, drugs or any other intoxicating substances are not allowed to install, maintain, service, repair, or use the robot.

The plant liable must make sure that the personnel is trained on the robot, and on responding to emergency or abnormal situations.

---

#### Personal protective equipment

Use personal protective equipment, as stated in the instructions.

## 1.2 Safety signals and symbols

### 1.2.1 Safety signals in the manual







#### Introduction to safety signals

This section specifies all safety signals used in the user manuals. Each signal consists of:

- A caption specifying the hazard level (DANGER, WARNING, or CAUTION) and the type of hazard.
- Instruction about how to reduce the hazard to an acceptable level.
- A brief description of remaining hazards, if not adequately reduced.

#### Hazard levels

The table below defines the captions specifying the hazard levels used throughout this manual.

| Symbol  | Designation                   | Significance  |
|---|-------------------------------|---|
|   | DANGER                        | Signal word used to indicate an imminently hazardous situation which, if not avoided, will result in serious injury.                                |
|  | WARNING                       | Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in serious injury.                               |
|  | ELECTRICAL SHOCK              | Signal word used to indicate a potentially hazardous situation related to electrical hazards which, if not avoided, could result in serious injury. |
|  | CAUTION                       | Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in slight injury.                                |
|  | ELECTROSTATIC DISCHARGE (ESD) | Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in severe damage to the product.                 |
|  | NOTE                          | Signal word used to indicate important facts and conditions.  |


*Continues on next page*

# 1 Safety

---

## 1.2.1 Safety signals in the manual

*Continued*

| Symbol  | Designation | Significance  |
|---|-------------|---|
|  | TIP         | Signal word used to indicate where to find additional information or how to do an operation in an easier way. |



## 1.2.2 Safety symbols on manipulator labels

### Introduction to symbols

This section describes safety symbols used on labels (stickers) on the manipulator. Symbols are used in combinations on the labels, describing each specific warning. The descriptions in this section are generic, the labels can contain additional information such as values.



#### Note

The symbols on the labels on the product must be observed. Additional symbols added by the integrator must also be observed.




### Types of symbols

Both the manipulator and the controller are marked with symbols, containing important information about the product. This is important for all personnel handling the robot, for example during installation, service, or operation.

The safety labels are language independent, they only use graphics. See [Symbols on safety labels on page 19](#).

The information labels can contain information in text.

### Symbols on safety labels

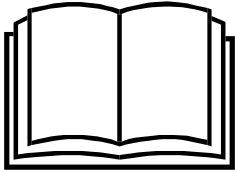
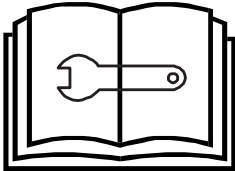
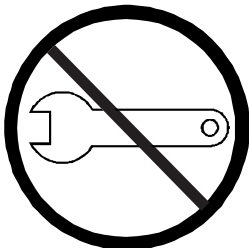
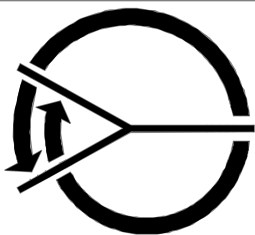

| Symbol  | Description  |
|---|--|
| <br>xx0900000812 | <b>Warning!</b><br>Warns that an accident <i>may</i> occur if the instructions are not followed that can lead to serious injury, possibly fatal, and/or great damage to the product. It applies to warnings that apply to danger with, for example, contact with high voltage electrical units, explosion or fire risk, risk of poisonous gases, risk of crushing, impact, fall from height, etc.  |
| <br>xx0900000811 | <b>Caution!</b><br>Warns that an accident may occur if the instructions are not followed that can result in injury and/or damage to the product. It also applies to warnings of risks that include burns, eye injury, skin injury, hearing damage, crushing or slipping, tripping, impact, fall from height, etc. Furthermore, it applies to warnings that include function requirements when fitting and removing equipment where there is a risk of damaging the product or causing a breakdown. |
| <br>xx0900000839 | <b>Prohibition</b><br>Used in combinations with other symbols.   |

*Continues on next page*

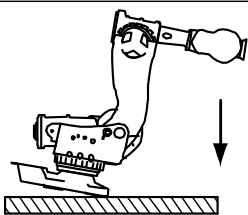

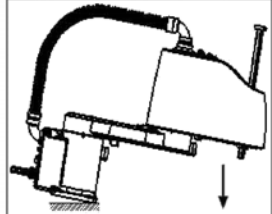


# 1 Safety

## 1.2.2 Safety symbols on manipulator labels

*Continued*

| Symbol  | Description   |
|---|---|
| <br>xx0900000813   | <b>See user documentation</b><br>Read user documentation for details.<br>Which manual to read is defined by the symbol: <ul style="list-style-type: none"><li>No text: <i>Product manual</i>.</li></ul> |
| <br>xx0900000816   | <b>Before disassembly, see product manual</b>   |
| <br>xx0900000815  | <b>Do not disassemble</b><br>Disassembling this part can cause injury.  |
| <br>xx0900000814 | <b>Extended rotation</b><br>This axis has extended rotation (working area) compared to standard.  |
| <br>xx0900000808 | <b>Brake release</b><br>Pressing this button will release the brakes. This means that the robot arm can fall down.  |



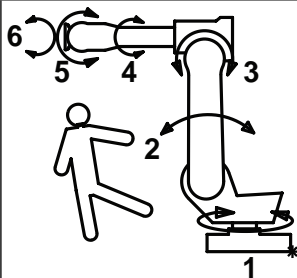
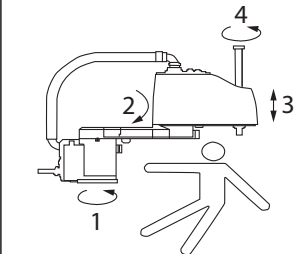
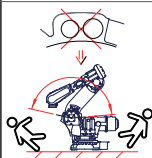
*Continues on next page*

| Symbol   | Description   |
|--|---|
|  <p>xx0900000810</p>   <p>3HAC 057068-001</p> <p>xx1500002402</p> | <p><b>Tip risk when loosening bolts</b></p> <p>The robot can tip over if the bolts are not securely fastened.</p> |
|   <p>xx0900000817</p>  | <p><b>Crush</b></p> <p>Risk of crush injuries.</p>  |

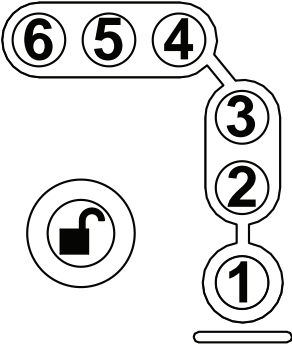

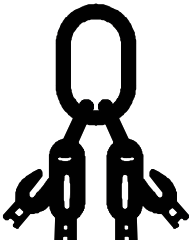


1 Safety

1.2.2 Safety symbols on manipulator labels

Continued

| Symbol  | Description  |
|---|--|
| <br>xx0900000818<br><br>xx1300001087    | <b>Heat</b><br>Risk of heat that can cause burns. (Both signs are used)  |
| <br>xx2400000736<br><br>xx1500002616 | <b>Moving robot</b><br>The robot can move unexpectedly.  |
| <br>xx1700000813   | <b>Moving robot</b><br>The robot can move unexpectedly when floor standing. Always use transportation lock screw in floor standing position. |

Continues on next page




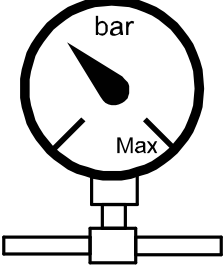
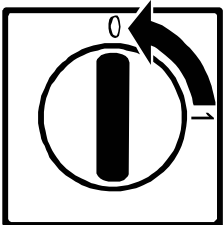

| Symbol  | Description  |
|---|--|
| <br>xx2100002463   | Brake release buttons  |
| <br>xx0900000821   | Lifting bolt   |
| <br>xx1000001242  | Adjustable chain sling with shortener  |
| <br>xx0900000822 | Lifting of robot   |
|   | <b>Swivel eye bolt</b><br>The exclamation mark indicates required usage of swivel eye bolts at the lifting points. |
| <br>xx0900000823 | <b>Oil</b><br>Can be used in combination with prohibition if oil is not allowed.                                   |

Continues on next page

# 1 Safety

## 1.2.2 Safety symbols on manipulator labels

Continued

| Symbol  | Description  |
|---|--|
| <br>xx0900000824   | <b>Mechanical stop</b>   |
| <br>xx1000001144   | <b>No mechanical stop</b>  |
| <br>xx0900000825   | <b>Stored energy</b><br>Warns that this part contains stored energy.<br>Used in combination with <i>Do not disassemble</i> symbol. |
| <br>xx0900000826 | <b>Pressure</b><br>Warns that this part is pressurized. Usually contains additional text with the pressure level.                  |
| <br>xx0900000827 | <b>Shut off with handle</b><br>Use the power switch on the controller.   |
| <br>xx1400002648 | <b>Do not step</b><br>Warns that stepping on these parts can cause damage to the parts.  |

### 1.3 Robot stopping functions

---

#### Protective stop and emergency stop

The protective stops and emergency stops are described in the product manual for the controller.

For more information see:

- *Product manual - OmniCore V250XT Type B*
- *Product manual - OmniCore V400XT*

# 1 Safety

---

## 1.4 Safety during installation and commissioning

### 1.4 Safety during installation and commissioning

---

#### National or regional regulations

The integrator of the robot system is responsible for the safety of the robot system.

The integrator is responsible that the robot system is designed and installed in accordance with the safety requirements set forth in the applicable national and regional standards and regulations.

The integrator of the robot system is required to perform a risk assessment.

---

#### Layout

The robot integrated to a robot system shall be designed to allow safe access to all spaces during installation, operation, maintenance, and repair.

If robot movement can be initiated from an external control panel then an emergency stop must also be available.

If the manipulator is delivered with mechanical stops, these can be used for reducing the working space.

A perimeter safeguarding, for example a fence, shall be dimensioned to withstand the following:

- The force of the manipulator.
- The force of the load handled by the robot if dropped or released at maximum speed.
- The maximum possible impact caused by a breaking or malfunctioning rotating tool or other device fitted to the robot.

The maximum TCP speed and the maximum velocity of the robot axes are detailed in the section *Robot motion* in the product specification for the respective manipulator.

Consider exposure to hazards, such as slipping, tripping, and falling.

Hazards due to the working position and posture for a person working with or near the robot shall be considered.

Hazards due to noise emission from the robot needs to be considered.

Consider hazards from other equipment in the robot system, for example, that guards remain active until identified hazards are reduced to an acceptable level.

---

#### Allergenic material

See [Environmental information on page 654](#) for specification of allergenic materials in the product, if any.

---

#### Securing the robot to the foundation

The robot must be properly fixed to its foundation/support, as described in the respective product manual.

When the robot is installed at a height, hanging, or other than mounted directly on the floor, there will be additional hazards.

*Continues on next page*



---

**Using lifting accessories and other external equipment**

Ensure that all equipment used during installation, service and all handling of the robot are in correct condition for the intended use.

---

**Electrical safety**

Incoming mains must be installed to fulfill national regulations.

The power supply wiring to the robot must be sufficiently fused and if necessary, it must be possible to disconnect it manually from the mains power.

The power to the robot must be turned off with the main switch and the mains power disconnected when performing work inside the controller cabinet. Lock and tag shall be considered.

Harnesses between controller and manipulator shall be fixed and protected to avoid tripping and wear.

Wherever possible, power on/off or rebooting the robot controller shall be performed with all persons outside the safeguarded space.

**Note**

Use a CARBON DIOXIDE (CO<sub>2</sub>) extinguisher in the event of a fire in the robot.

---

**Safety devices**

The integrator is responsible for that the safety devices necessary to protect people working with the robot system are designed and installed correctly.

When integrating the robot with external devices to a robot system:

- The integrator of the robot system must ensure that emergency stop functions are interlocked in accordance with applicable standards.
- The integrator of the robot system must ensure that safety functions are interlocked in accordance with applicable standards.

---

**Other hazards**

A robot may perform unexpected limited movement.

**WARNING**

Manipulator movements can cause serious injuries on users and may damage equipment.

The risk assessment should also consider other hazards arising from the application, such as, but not limited to:

- Water
- Compressed air
- Hydraulics

End-effector hazards require particular attention for applications which involve close human collaboration with the robot.

*Continues on next page*

# 1 Safety

---

## 1.4 Safety during installation and commissioning

*Continued*

---

### Verify the safety functions

Before the robot system is put into operation, verify that the safety functions are working as intended and that any remaining hazards identified in the risk assessment are mitigated to an acceptable level.

### 1.5 Safety during operation

#### Automatic operation

Verify the application in the operating mode manual reduced speed, before changing mode to automatic and initiating automatic operation.

#### Unexpected movement of robot arm



##### **WARNING**

Hazards due to the use of brake release devices and/or gravity beneath the manipulator shall be considered.

A robot may perform unexpected limited movement.



##### **WARNING**

Manipulator movements can cause serious injuries on users and may damage equipment.

# 1 Safety

## 1.6.1 Safety during maintenance and repair

## 1.6 Safety during maintenance and repair

### 1.6.1 Safety during maintenance and repair

#### General

Corrective maintenance must only be carried out by personnel trained on the robot. Maintenance or repair must be done with all electrical, pneumatic, and hydraulic power switched off, that is, no remaining hazards.

Hazards due to stored mechanical energy in the manipulator for the purpose of counterbalancing axes must be considered before maintenance or repair.

Never use the robot as a ladder, which means, do not climb on the controller, manipulator, including motors, or other parts. There are hazards of slipping and falling. The robot might be damaged.


Make sure that there are no tools, loose screws, turnings, or other unexpected parts remaining after maintenance or repair work.

When the work is completed, verify that the safety functions are working as intended.

#### Hot surfaces

Surfaces can be hot after running the robot, and touching these may result in burns. Allow the surfaces to cool down before maintenance or repair.

#### Allergic reaction

| Warning  | Description   | Elimination/Action  |
|--|---|---|
| <br>Allergic reaction | When working with lubricants there is a risk of an allergic reaction. | Make sure that protective gear like goggles and gloves are always worn. |


#### Gearbox lubricants (oil or grease)

When handling oil, grease, or other chemical substances the safety information of the respective manufacturer must be observed.










#### Note

Take special care when handling hot lubricants.

| Warning  | Description  | Elimination/Action   |
|--|--|--|
| <br>Hot oil or grease | Changing and draining gearbox oil or grease may require handling hot lubricant heated up to 90 °C. | Make sure that protective gear like goggles and gloves are always worn during this activity. |

*Continues on next page*


| Warning  | Description   | Elimination/Action  |
|--|---|---|
| <br><b>Allergic reaction</b>                            | When working with lubricants there is a risk of an allergic reaction.   | Make sure that protective gear like goggles and gloves are always worn.   |
| <br><b>Possible pressure build-up in gearbox</b>        | When opening the oil or grease plug, there may be pressure present in the gearbox, causing hot lubricant to spray from the opening.   | Open the plug carefully and keep away from the opening. Do not overfill the gearbox when filling. Put oil absorbent cloth, bags or paper at appropriate locations to catch any oil residues.<br>Use appropriate protective gear such as heat-resistant gloves, goggles/protective visor, or a body suit if necessary. |
| <br><b>Do not overfill</b>                              | Overfilling of gearbox lubricant can lead to internal over-pressure inside the gearbox which in turn may: <ul style="list-style-type: none"> <li>• damage seals and gaskets</li> <li>• completely press out seals and gaskets</li> <li>• prevent the robot from moving freely.</li> </ul> | Make sure not to overfill the gearbox when filling it with oil or grease.<br>After filling, verify that the level is correct.   |
| <br><b>Do not mix types of oil</b>                    | Mixing types of oil may cause severe damage to the gearbox.   | When filling gearbox oil, do not mix different types of oil unless specified in the instructions. Always use the type of oil specified for the product.   |
| <br><b>Oil residues</b>                               | Oil residues might be present in a drained gearbox and spilled when separating a motor and gearbox during repair.   | Make sure that protective gear like goggles/protective visor, gloves and arm protection are always worn during this activity. Put oil absorbent cloth, bags or paper at appropriate locations to catch any oil residues.  |
| <br><b>Heat up the oil</b>                            | Warm oil drains quicker than cold oil.  | Run the robot before changing the gearbox oil, if possible.   |
| <br><b>Specified amount depends on drained volume</b> | The specified amount of oil or grease is based on the total volume of the gearbox. When changing the lubricant, the amount refilled may differ from the specified amount, depending on how much has previously been drained from the gearbox.   | After filling, verify that the level is correct.  |

*Continues on next page*

# 1 Safety

## 1.6.1 Safety during maintenance and repair

*Continued*

| Warning   | Description  | Elimination/Action |
|---|--|--------------------|
| <br><b>Contaminated oil in gearboxes</b> | For lifetime reasons always drain as much oil as possible from the gearbox. The magnetic oil plugs will gather residual metal chips. |                    |

### Hazards related to batteries

Under rated conditions, the electrode materials and liquid electrolyte in the batteries are sealed and not exposed to the outside.

There is a hazard in case of abuse (mechanical, thermal, electrical) which leads to the activation of safety valves and/or the rupture of the battery container. As a result under certain circumstances, electrolyte leakage, electrode materials reaction with moisture/water or battery vent/explosion/fire may follow.

Do not short circuit, recharge, puncture, incinerate, crush, immerse, force discharge or expose to temperatures above the declared operating temperature range of the product. Risk of fire or explosion.

Operating temperatures are listed in [Operating conditions, robot on page 40](#).

See safety instructions for the batteries in *Material/product safety data sheet - Battery pack (3HAC043118-001)*.

### Unexpected movement of robot arm



#### WARNING

Hazards due to the use of brake release devices and/or gravity beneath the manipulator shall be considered.

A robot may perform unexpected limited movement.



#### WARNING

Manipulator movements can cause serious injuries on users and may damage equipment.

### Related information

See also the safety information related to installation and operation.

## 1.6.2 Emergency release of the robot axes

### Description

In an emergency situation, the brakes on a robot axis can be released manually by pushing a brake release button.

How to release the brakes is described in the section:

- [Manually releasing the brakes on page 76.](#)

The robot may be moved manually on smaller robot models, but larger models may require using an overhead crane or similar equipment.

### Increased injury

Before releasing the brakes, make sure that the weight of the manipulator does not result in additional hazards, for example, even more severe injuries on a trapped person.



#### **DANGER**

When releasing the holding brakes, the robot axes may move very quickly and sometimes in unexpected ways.

Make sure no personnel is near or beneath the robot.

### Prerequisites for access to brake release buttons

Make sure that the brake release buttons on the manipulator are within reach and quickly accessible in case of emergency situations, even when the manipulator is installed on a height, on a wall, or suspended.

### 1.6.3 Brake testing

---

#### When to test

During operation, the holding brake of each axis normally wears down. A test can be performed to determine whether the brake can still perform its function.

#### How to test

The function of the holding brake of each axis motor may be verified as described below:

- 1 Run each axis to a position where the combined weight of the manipulator and any load is maximized (maximum static load).
- 2 Switch the motor to the MOTORS OFF.
- 3 Inspect and verify that the axis maintains its position.

If the manipulator does not change position as the motors are switched off, then the brake function is adequate.



#### Note

It is recommended to run the service routine *BrakeCheck* as part of the regular maintenance, see the operating manual for the robot controller.

For robots with the option SafeMove, the *Cyclic Brake Check* routine is recommended. See the manual for SafeMove in [References on page 10](#).



## 1.7 Safety during troubleshooting

### General

When troubleshooting requires work with power switched on, special considerations must be taken:

- Safety circuits might be muted or disconnected.
- Electrical parts must be considered as *live*.
- The manipulator can move unexpectedly at any time.



#### **DANGER**

Troubleshooting on the controller while powered on must be performed by personnel trained by ABB or by ABB field engineers.



#### **CAUTION**

Risk of hot surfaces that can cause burns.

A risk assessment must be done to address both robot and robot system specific hazards.



#### **WARNING**

Hazards due to the use of brake release devices and/or gravity beneath the manipulator shall be considered.

A robot may perform unexpected limited movement.



#### **WARNING**

Manipulator movements can cause serious injuries on users and may damage equipment.

### Related information

See also the safety information related to installation, operation, maintenance, and repair.

# 1 Safety

---

## 1.8 Safety during decommissioning

## 1.8 Safety during decommissioning

---

### General

See section [Decommissioning on page 653](#).

If the robot is decommissioned for storage, take extra precaution to reset safety devices to delivery status.

### Unexpected movement of robot arm



#### **WARNING**

Hazards due to the use of brake release devices and/or gravity beneath the manipulator shall be considered.

A robot may perform unexpected limited movement.



#### **WARNING**

Manipulator movements can cause serious injuries on users and may damage equipment.

## 2 Manipulator description

### 2.1 Technical data

#### Weight, robot

The table shows the weight of the robot.

| Robot model         | Nominal weight <sup>i</sup> |
|---------------------|-----------------------------|
| IRB 5710-110/2.3    | 830 kg                      |
| IRB 5710-90/2.7     | 830 kg                      |
| IRB 5710-90/2.3 LID | 890 kg                      |
| IRB 5710-70/2.7 LID | 885 kg                      |

<sup>i</sup> Option Inverted (3317-1) adds approximately 15 kg to the nominal weight.



#### Note

The weight does not include additional options, tools and other equipment fitted on the robot.

The weight does not include the weight of the DressPack.

#### Mounting positions

The table shows valid mounting positions and the installation (mounting) angle for the manipulator.

| Mounting position | Installation angle |
|-------------------|--------------------|
| Floor mounted     | 0°                 |
| Inverted          | 180°               |
| Tilted            | 0-20°              |



#### Note

The actual mounting angle must always be configured in the system parameters, otherwise the performance and lifetime is affected. See [Setting the system parameters for an inverted or a tilted robot on page 78](#).

*Continues on next page*

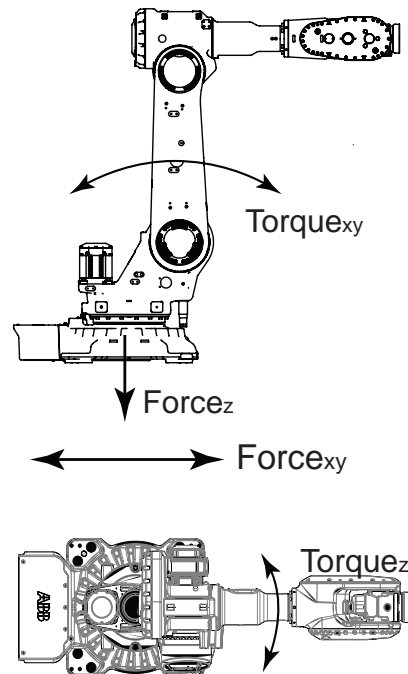
## 2 Manipulator description

### 2.1 Technical data

*Continued*

#### Loads on foundation, robot

The illustration shows the directions of the robots stress forces. The directions are valid for all floor mounted, tilted mounted and inverted robots.



xx2100002622

The table shows the various forces and torques working on the robot during different kinds of operation.



#### Note

These forces and torques are extreme values that are rarely encountered during operation. The values also never reach their maximum at the same time!



#### WARNING

The robot installation is restricted to the mounting options given in following load table(s).

#### Floor mounted

| Force     | Endurance load (in operation) | Maximum load (emergency stop) |
|-----------|-------------------------------|-------------------------------|
| Force xy  | $\pm 6.7$ kN                  | $\pm 14.1$ kN                 |
| Force z   | $9.6 \pm 4.4$ kN              | $9.6 \pm 10.7$ kN             |
| Torque xy | $\pm 13.9$ kNm                | $\pm 23.7$ kNm                |
| Torque z  | $\pm 4.2$ kNm                 | $\pm 10.2$ kNm                |

#### Inverted

| Force    | Endurance load (in operation) | Max. load (emergency stop) |
|----------|-------------------------------|----------------------------|
| Force xy | $\pm 6.1$ kN                  | $\pm 14.4$ kN              |

*Continues on next page*

Tilted

| Force     | Endurance load (in operation) | Max. load (emergency stop) |
|-----------|-------------------------------|----------------------------|
| Force z   | -9.6 ±4.3 kN                  | -9.6 ±10.2 kN              |
| Torque xy | ±13 kNm                       | ±23 kNm                    |
| Torque z  | ±4.2 kNm                      | ±10.2 kNm                  |

| Force     | Endurance load (in operation) | Max. load (emergency stop) |
|-----------|-------------------------------|----------------------------|
| Force xy  | ±9.4 kN                       | ±16.5 kN                   |
| Force z   | 8.9 ±4.5 kN                   | 8.9 ±11.1 kN               |
| Torque xy | ±14.7 kNm                     | ±24.6 kNm                  |
| Torque z  | ±4.2 kNm                      | ±10.4 kNm                  |



#### Note

Values valid for maximum tilted robot.

### Requirements, foundation

The table shows the requirements for the foundation where the weight of the installed robot is included:

| Requirement                    | Value   | Note  |
|--------------------------------|---|---|
| Flatness of foundation surface | 0.3 mm  | <p>Flat foundations give better repeatability of the resolver calibration compared to original settings on delivery from ABB.</p> <p>The value for levelness aims at the circumstance of the anchoring points in the robot base.</p> <p>In order to compensate for an uneven surface, the robot can be recalibrated during installation. If resolver/encoder calibration is changed this will influence the absolute accuracy</p> |
| Minimum resonance frequency    | <p>22 Hz</p> <p><b>Note</b></p> <p>It may affect the manipulator lifetime to have a lower resonance frequency than recommended.</p> | <p>The value is recommended for optimal performance.</p> <p>Due to foundation stiffness, consider robot mass including equipment.<sup>i</sup></p> <p>For information about compensating for foundation flexibility, see the description of <i>Motion Process Mode</i> in the manual that describes the controller software option, see <a href="#">References on page 10</a>.</p>   |

<sup>i</sup> The minimum resonance frequency given should be interpreted as the frequency of the robot mass/inertia, robot assumed stiff, when a foundation translational/torsional elasticity is added, i.e., the stiffness of the pedestal where the robot is mounted. The minimum resonance frequency should not be interpreted as the resonance frequency of the building, floor etc. For example, if the equivalent mass of the floor is very high, it will not affect robot movement, even if the frequency is well below the stated frequency. The robot should be mounted as rigid as possible to the floor.

Disturbances from other machinery will affect the robot and the tool accuracy. The robot has resonance frequencies in the region 10 – 20 Hz and disturbances in this region will be amplified, although somewhat damped by the servo control. This might be a problem, depending on the requirements from the applications. If this is a problem, the robot needs to be isolated from the environment.

Continues on next page

## 2 Manipulator description

### 2.1 Technical data

*Continued*

#### Storage conditions, robot

The table shows the allowed storage conditions for the robot:

| Parameter                                      | Value  |
|--|--------|
| Minimum ambient temperature                    | -25 °C |
| Maximum ambient temperature                    | 55 °C  |
| Maximum ambient temperature (less than 24 hrs) | 70 °C  |
| Maximum ambient humidity                       | 95%    |

#### Operating conditions, robot

The table shows the allowed operating conditions for the robot:

| Parameter                   | Value                       |
|-----------------------------|-----------------------------|
| Minimum ambient temperature | 5 °C <sup>i</sup>           |
| Maximum ambient temperature | 50 °C                       |
| Maximum ambient humidity    | 95% at constant temperature |

<sup>i</sup> At low environmental temperature < 10°C is, as with any other machine, a warm-up phase recommended to be run with the robot. Otherwise there is a risk that the robot stops or run with lower performance due to temperature dependent oil and grease viscosity.

#### Protection classes, robot

The table shows the available protection types of the robot, with the corresponding protection class.

| Protection type                             | Protection class <sup>i</sup> |
|---|-------------------------------|
| Manipulator, protection type Standard       | IP67                          |
| Manipulator, protection type Foundry Plus 2 | IP67                          |

<sup>i</sup> According to IEC 60529.

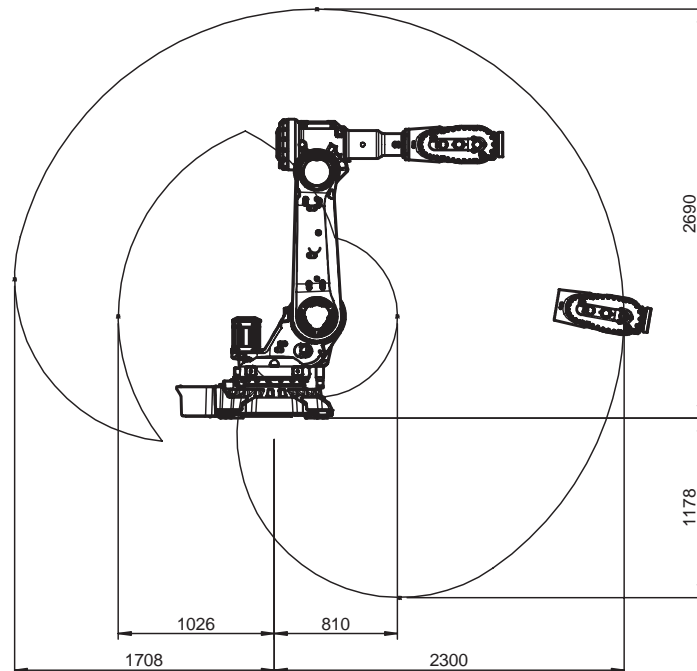
#### Environmental information

The product complies with IEC 63000. *Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.*

## 2.2 Working range

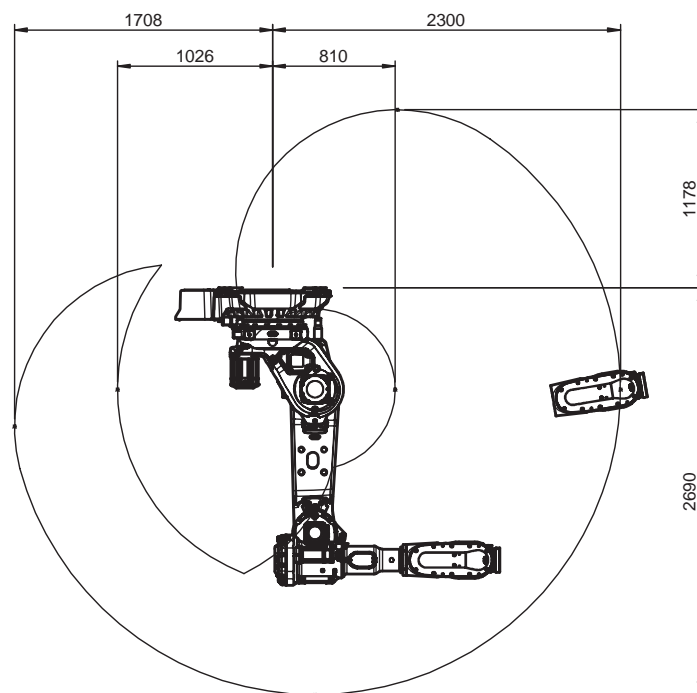
### Illustration, working range IRB 5710-110/2.3

This illustration shows the unrestricted working range of the robot.



xx2100000387

### IRB 5710-110/2.3 inverted (with option 3317-1)



xx2100002542

*Continues on next page*

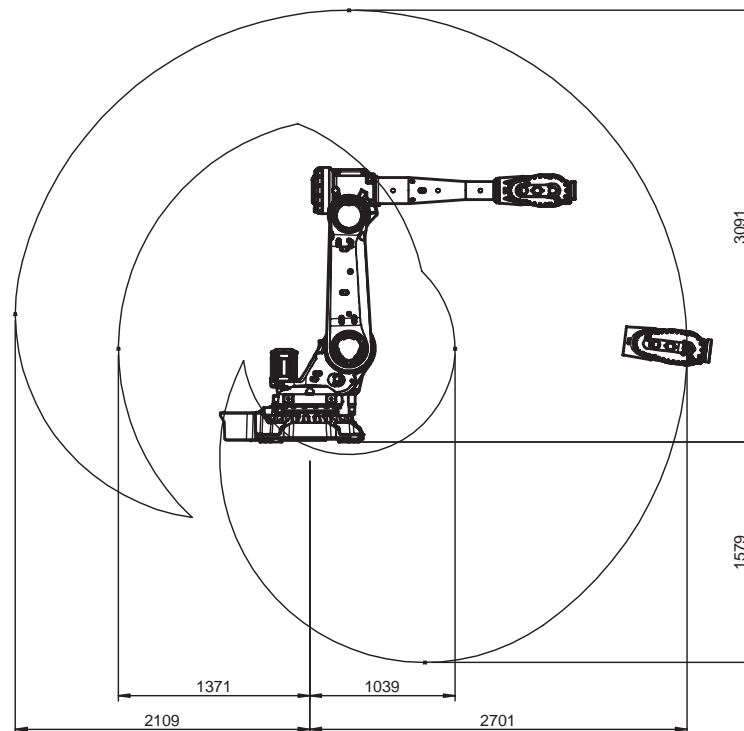
## 2 Manipulator description

### 2.2 Working range

*Continued*

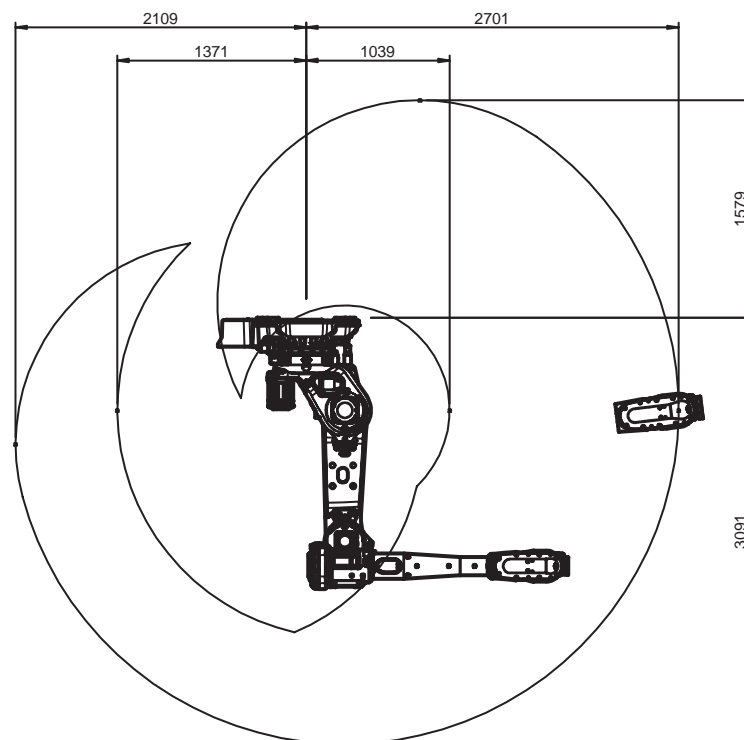
#### Illustration, working range IRB 5710-90/2.7

This illustration shows the unrestricted working range of the robot.



xx2100000388

#### IRB 5710-90/2.7 inverted (with option 3317-1)



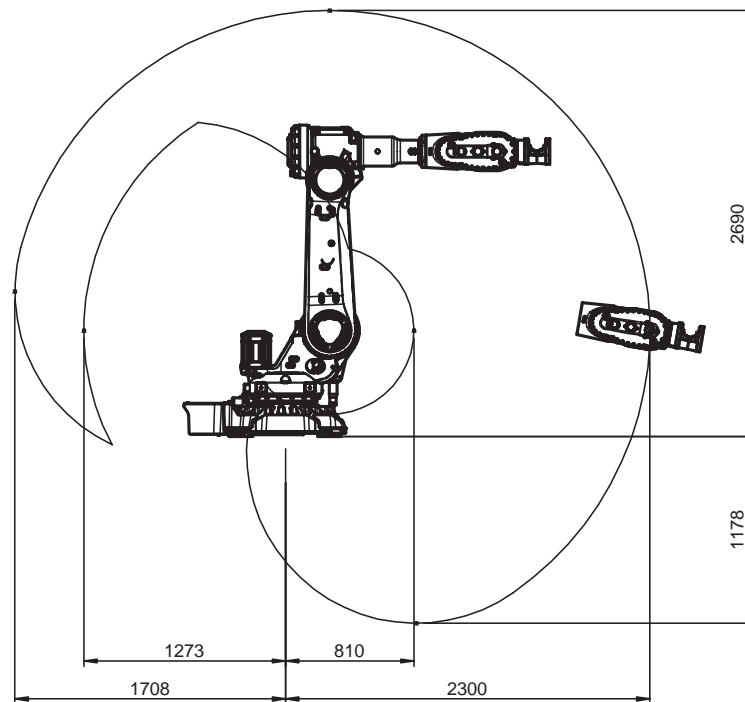
xx2100002543

*Continues on next page*



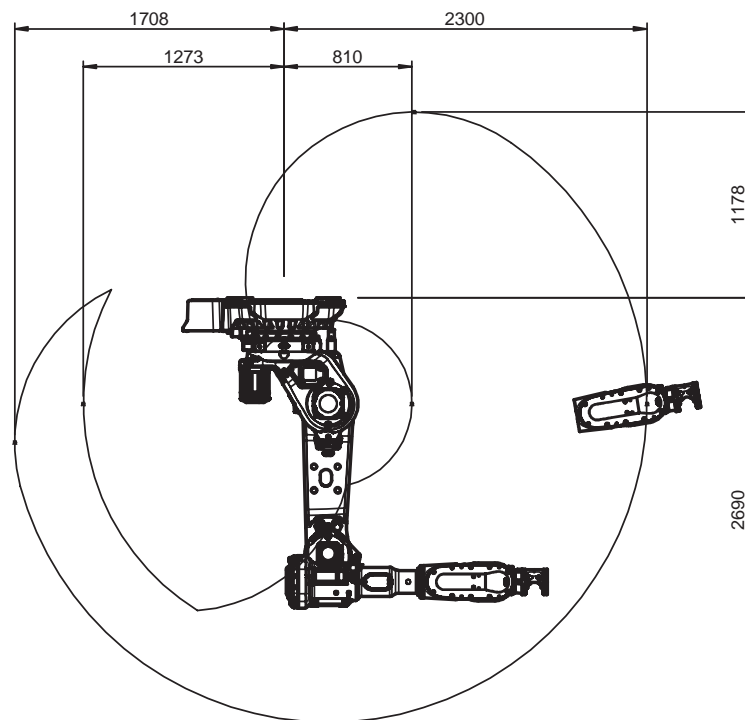
#### Illustration, working range IRB 5710-90/2.3 LID

This illustration shows the unrestricted working range of the robot.



xx2100000389

#### IRB 5710-90/2.3 LID inverted (with option 3317-1)



xx2100002544

*Continues on next page*

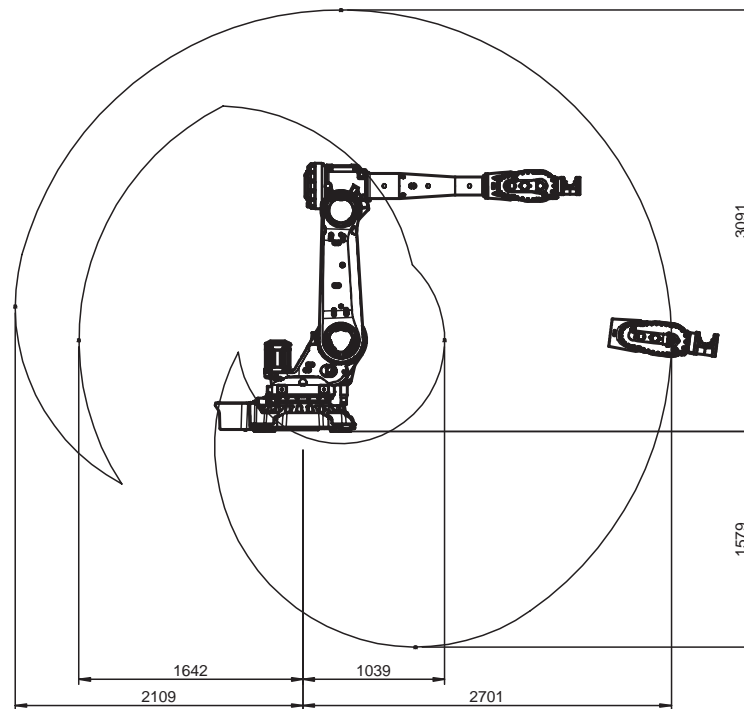
## 2 Manipulator description

### 2.2 Working range

*Continued*

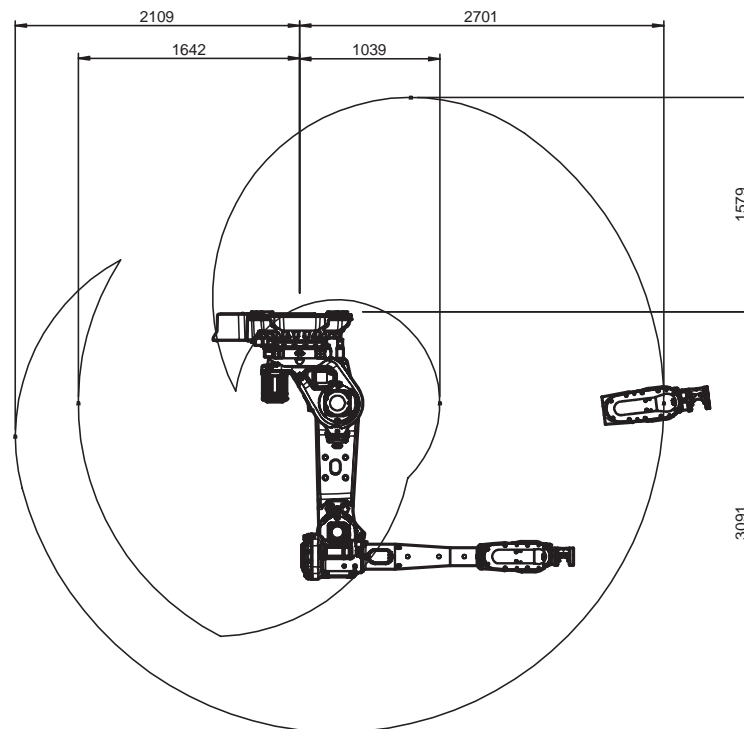
#### Illustration, working range IRB 5710-70/2.7 LID

This illustration shows the unrestricted working range of the robot.



xx2100000390

#### IRB 5710-70/2.7 LID inverted (with option 3317-1)

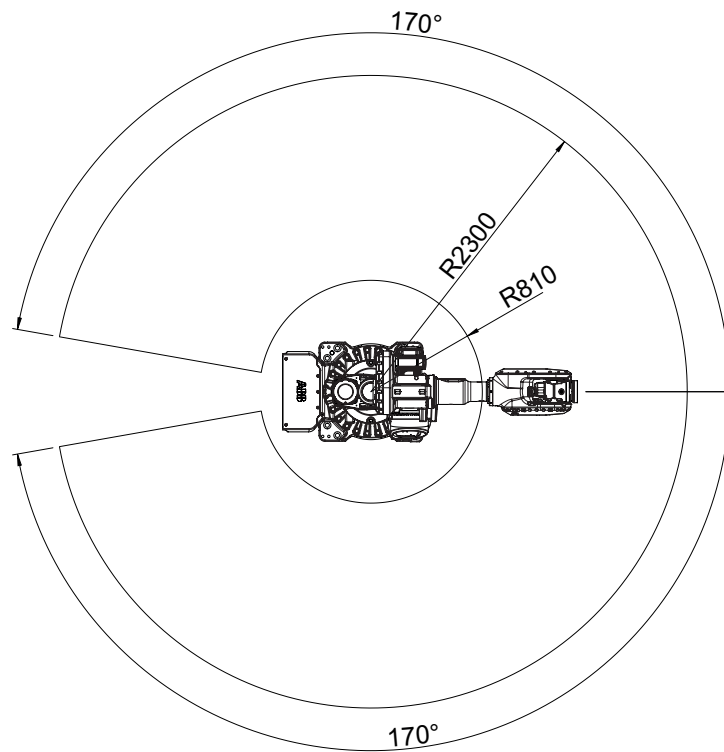


xx2100002545

*Continues on next page*

### Top view of working range

IRB 5710-110/2.3, IRB 5710-90/2.3 LID



xx2100000401

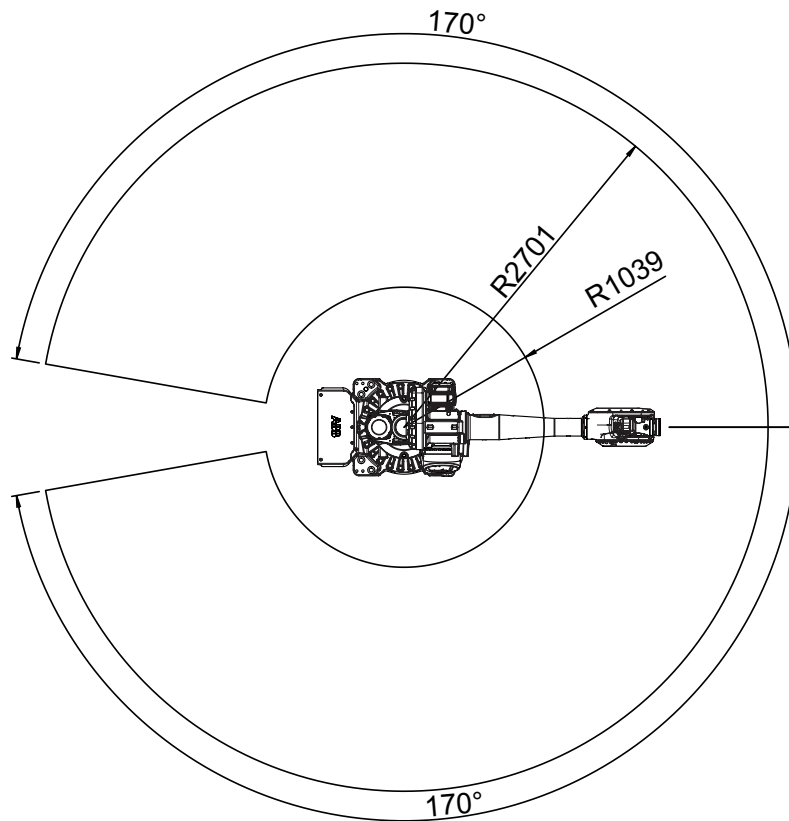
*Continues on next page*

## 2 Manipulator description

### 2.2 Working range

*Continued*

IRB 5710-90/2.7, IRB 5710-70/2.7 LID



xx2100000402

### Working range

| Axis   | Working range                 | Note   |
|--------|-------------------------------|--|
| Axis 1 | $\pm 170^\circ$               | The default working range for axis 1 can be extended as an option.<br>See <a href="#">Extended working range, axis 1 (option)</a> on page 102. |
|        | $\pm 220^\circ$ <sup>i</sup>  |  |
| Axis 2 | $-75^\circ / +145^\circ$      |  |
| Axis 3 | $-180^\circ / +70^\circ$      | IRB 5710-110/2.3, IRB 5710-90/2.7  |
|        | $-160^\circ / +70^\circ$      | IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID   |
| Axis 4 | $\pm 300^\circ$               |  |
| Axis 5 | $\pm 130^\circ$               | IRB 5710-110/2.3, IRB 5710-90/2.7  |
|        | $\pm 120^\circ$ <sup>ii</sup> | IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID   |
| Axis 6 | $\pm 360^\circ$               | IRB 5710-110/2.3, IRB 5710-90/2.7  |
|        | $\pm 200^\circ$ <sup>ii</sup> | IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID   |

<sup>i</sup> Option *Extended Working Range Axis 1* (3324-1)

Not valid for option *Inverted* (3317-1)

Not valid with DressPack options for spot welding.

<sup>ii</sup> Maximum combined movements reduced.

*Continues on next page*

#### Working range limitation

The working range of axis 1 can be reduced by altering the parameter values. Installation of additional mechanical stops is recommended. See [Working range alterations on page 97](#).

## 2 Manipulator description

---

### 2.3 The unit is sensitive to ESD

### 2.3 The unit is sensitive to ESD

---

#### Description

ESD (electrostatic discharge) is the transfer of electrical static charge between two bodies at different potentials, either through direct contact or through an induced electrical field. When handling parts or their containers, personnel not grounded may potentially transfer high static charges. This discharge may destroy sensitive electronics.

---

#### Safe handling

Use one of the following alternatives:

- Use a wrist strap.

Wrist straps must be tested frequently to ensure that they are not damaged and are operating correctly.

- Use an ESD protective floor mat.

The mat must be grounded through a current-limiting resistor.

- Use a dissipative table mat.

The mat should provide a controlled discharge of static voltages and must be grounded.

## 3 Installation and commissioning

### 3.1 Introduction to installation and commissioning

#### General

This chapter contains assembly instructions and information for installing the IRB 5710 at the working site.

See also the product manual for the robot controller.

The installation must be done by qualified installation personnel in accordance with the safety requirements set forth in the applicable national and regional standards and regulations.

The technical data is detailed in section [Technical data on page 37](#).

#### Safety information

Before any installation work is commenced, all safety information must be observed. There are general safety aspects that must be read through, as well as more specific safety information that describes the danger and safety risks when performing the procedures. Read the chapter [Safety on page 15](#) before performing any installation work.



#### Note

Always connect the IRB 5710 and the robot to protective earth and residual current device (RCD) before connecting to power and starting any installation work.

For more information see:

- *Product manual - OmniCore V250XT Type B*
- *Product manual - OmniCore V400XT*

## 3 Installation and commissioning

### 3.2.1 Pre-installation procedure

## 3.2 Unpacking

### 3.2.1 Pre-installation procedure

#### Introduction


This section is intended for use when unpacking and installing the robot for the first time. It also contains information useful during later re-installation of the robot.

#### Prerequisites for installation personnel

Installation personnel working with an ABB product must:

- Be trained by ABB and have the required knowledge of mechanical and electrical installation/maintenance/repair work.
- Conform to all national and local codes.

#### Checking the pre-requisites for installation

|    | Action  |
|----|---|
| 1  | Make a visual inspection of the packaging and make sure that nothing is damaged.  |
| 2  | Remove the packaging.   |
| 3  | Check for any visible transport damage.<br><br> <b>Note</b><br>Stop unpacking and contact ABB if transport damages are found.  |
| 4  | Clean the unit with a lint-free cloth, if necessary.<br>Wipe away the protective transportation grease applied to the tool flange.  |
| 5  | Make sure that the lifting accessory used (if required) is suitable to handle the weight of the robot as specified in: <a href="#">Weight, robot on page 37</a>   |
| 6  | If the robot is not installed directly, it must be stored as described in: <a href="#">Storage conditions, robot on page 40</a>   |
| 7  | Make sure that the expected operating environment of the robot conforms to the specifications as described in: <a href="#">Operating conditions, robot on page 40</a>   |
| 8  | Before taking the robot to its installation site, make sure that the site conforms to: <ul style="list-style-type: none"><li>• <a href="#">Loads on foundation, robot on page 38</a></li><li>• <a href="#">Protection classes, robot on page 40</a></li><li>• <a href="#">Requirements, foundation on page 39</a></li></ul> |
| 9  | Before moving the robot, please observe the stability of the robot: <a href="#">Risk of tipping/stability on page 51</a>  |
| 10 | When these prerequisites are met, the robot can be taken to its installation site as described in section: <a href="#">On-site installation on page 53</a>  |
| 11 | Install required equipment, if any.   |



### 3.2.2 Risk of tipping/stability

#### Risk of tipping

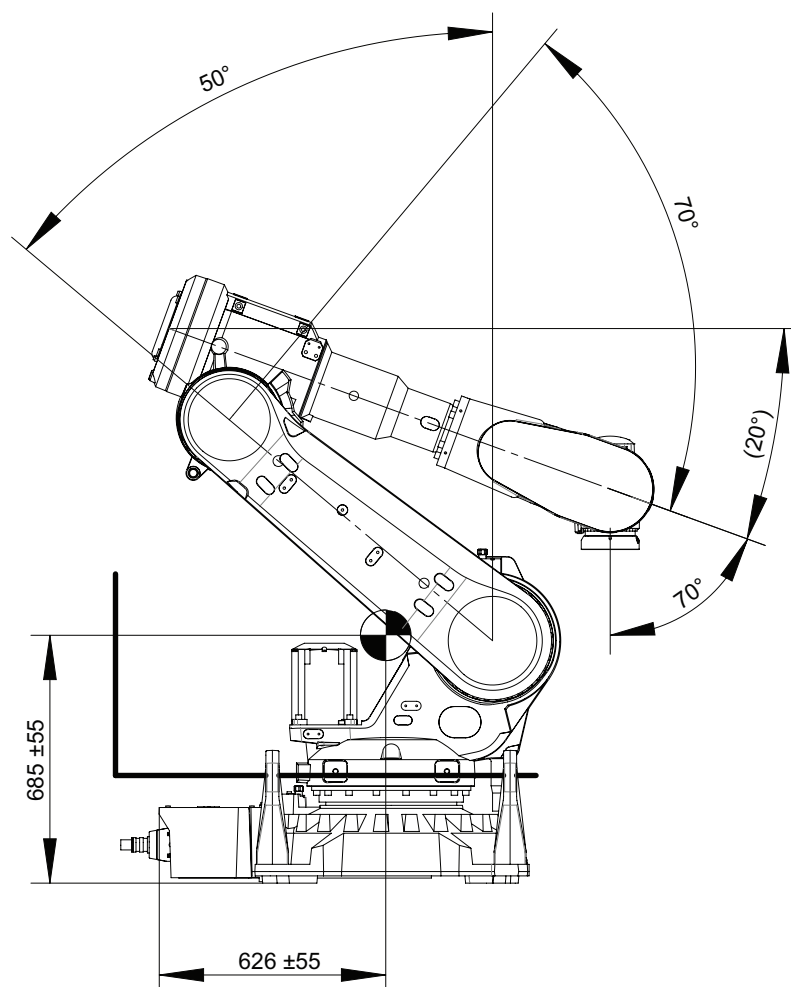
If the robot is not fastened to the foundation while moving the arm, the robot is not stable in the whole working area. Moving the arm will displace the center of gravity, which may cause the robot to tip over.

The transportation position is the most stable position.

**Do not change the robot position before securing it to the foundation!**

#### Transportation position

This figure shows the robot in its transportation position.



xx2100000477



#### Note

The robot might be positioned in a different position at delivery, due to actual configurations and options (for example DressPack).

| Axis number | Angle of axis |
|-------------|---------------|
| Axis 1      | 0°            |

*Continues on next page*

### 3 Installation and commissioning

---

#### 3.2.2 Risk of tipping/stability

*Continued*

| Axis number | Angle of axis |
|-------------|---------------|
| Axis 2      | -50°          |
| Axis 3      | +70°          |
| Axis 4      | 0°            |
| Axis 5      | +70°          |
| Axis 6      | 0°            |



#### **WARNING**

The robot is likely to be mechanically unstable if not secured to the foundation.

### 3.3 On-site installation


#### 3.3.1 Brief installation procedure

##### Introduction

This procedure is a brief guide when installing the robot for the first time. Also see [Pre-installation procedure on page 50](#).

##### First installation

Use these procedures to install the IRB 5710.

|   | Action   | Note  |
|---|--|---|
| 1 | Transport the manipulator to its intended location.  |   |
| 2 | Install the valid platform or prepare the foundation for the manipulator.  | See <a href="#">Installing a base plate on page 54</a> .  |
| 3 | Lift and secure the manipulator to the platform/foundation.  | See <a href="#">Lifting the robot on page 63</a> .<br>See <a href="#">Orienting and securing the robot on page 72</a> .                                   |
| 4 | Connect the manipulator to the controller.   | See <ul style="list-style-type: none"> <li>• <i>Product manual - OmniCore V250XT Type B</i></li> <li>• <i>Product manual - OmniCore V400XT</i></li> </ul> |
| 5 | Configure the safety settings.   | See <ul style="list-style-type: none"> <li>• <i>Product manual - OmniCore V250XT Type B</i></li> <li>• <i>Product manual - OmniCore V400XT</i></li> </ul> |
| 6 | How to start and run the robot is described in the product manual for the controller.  | See <ul style="list-style-type: none"> <li>• <i>Product manual - OmniCore V250XT Type B</i></li> <li>• <i>Product manual - OmniCore V400XT</i></li> </ul> |
| 7 | Install required equipment, if any.  |   |
| 8 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

## 3 Installation and commissioning

---

### 3.3.2 Installing a base plate

### 3.3.2 Installing a base plate

---

#### Advantages of using a base plate

Instead of installing the robot directly on the floor, a base plate can be manufactured and used as an adapter between the floor and the robot base. This list specifies some of the advantages of using a base plate:

- to ensure a plain surface with a high precision of the robot base hole configuration
- to simplify adjustment of levelness by machined surfaces or by using shims
- to distribute the press force from the robot to a larger foot print
- to compensate poor floor quality that might not be suitable for fastening the robot base directly onto. The base plate has a greater number of fastening points to the foundation and makes a larger footprint, which reduces the load on each fastening point.
- to reduce surface pressure on the foundation contact points, which minimizes the risk of wearing down an uneven surface and thereby causing changes in the robot fastening tightening torque
- to be able to prepare the installation site before robot delivery
- to increase the precision between the positions of an installed robot and other equipment



#### Note

Do not use a base plate for installation of an inverted robot.

---

#### Base plate drawing

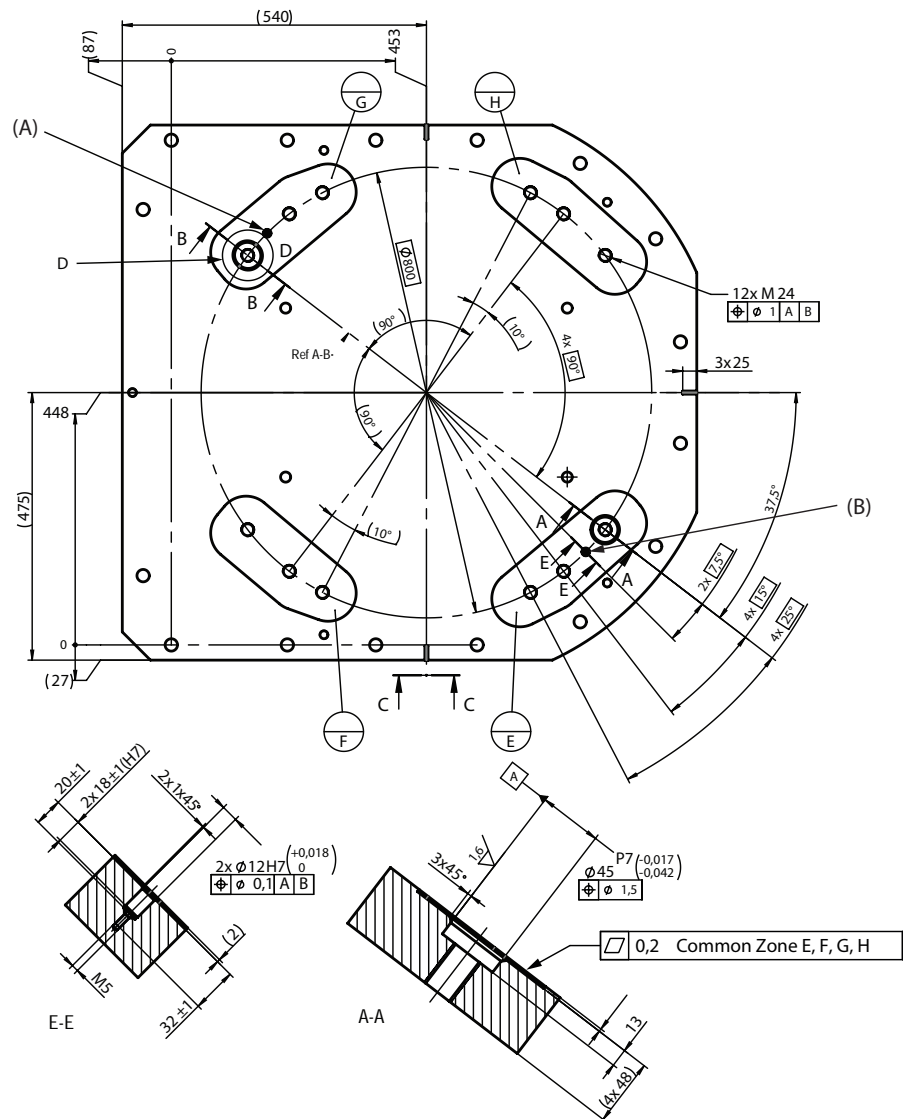
The following figure shows the dimensions for a base plate (dimensions in mm).

*Continues on next page*

### 3 Installation and commissioning

### 3.3.2 Installing a base plate

Continued



xx1500000246

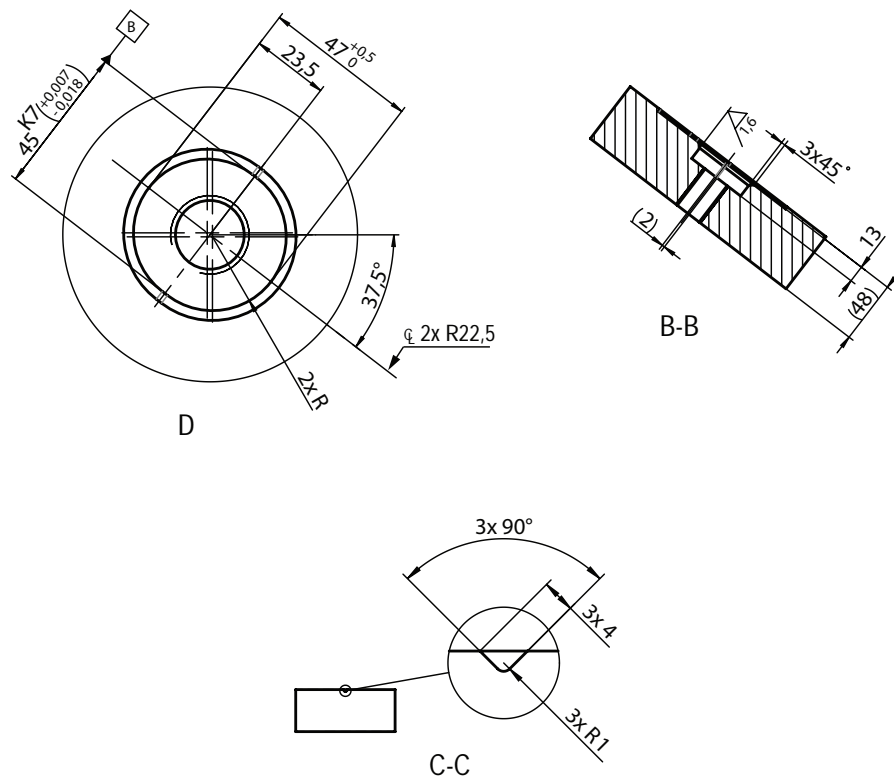
| Pos        | Description  |
|------------|--|
| A, B       | Hole for locating pins, see <i>Base plate, locating pins on page 58</i>                        |
| E, F, G, H | Common tolerance zone (accuracy all over the base plate from one contact surface to the other) |

*Continues on next page*

### 3 Installation and commissioning

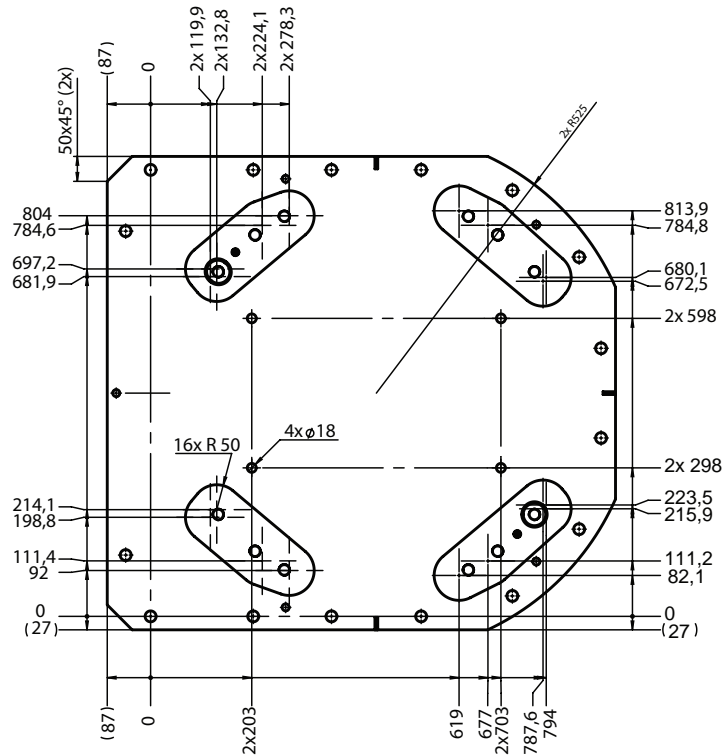
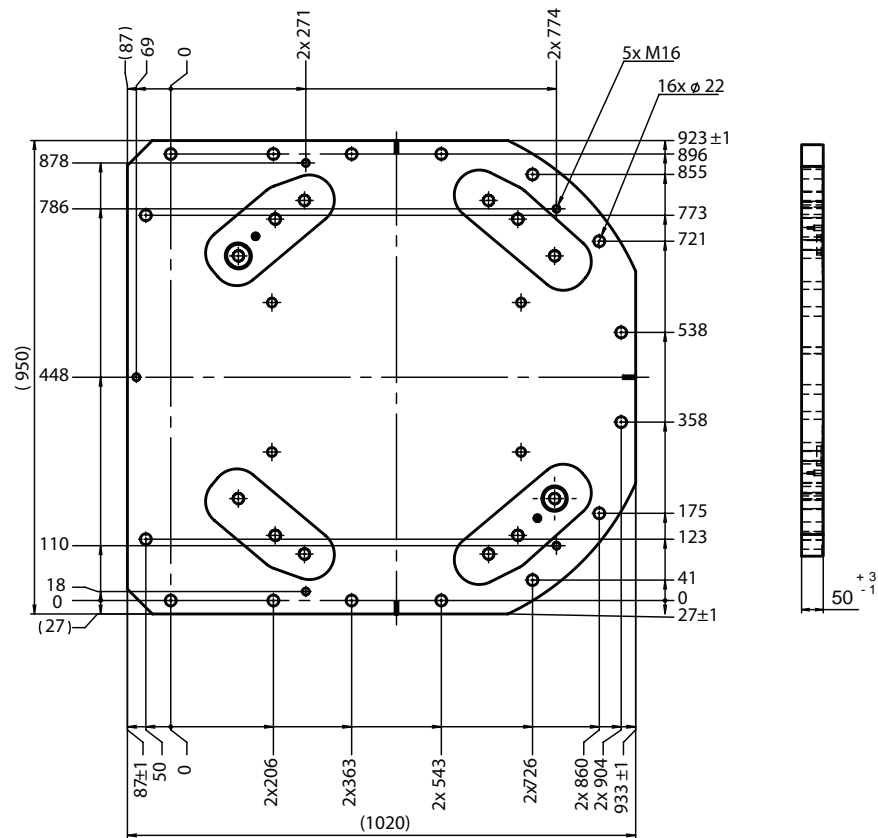
#### 3.3.2 Installing a base plate

*Continued*



xx1500000247

*Continues on next page*



xx1500000249

*Continues on next page*

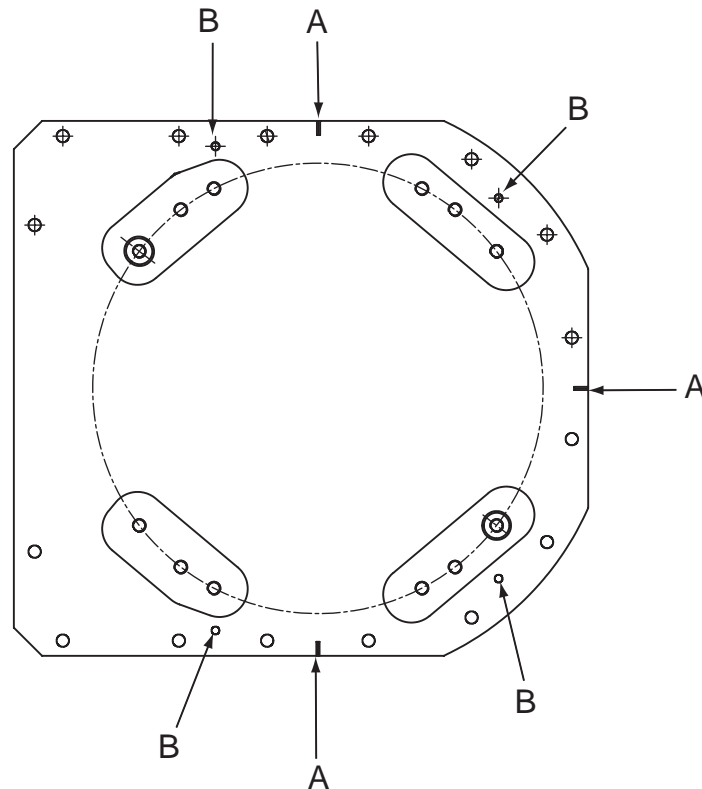
### 3 Installation and commissioning

#### 3.3.2 Installing a base plate

*Continued*

##### Base plate, orienting grooves and leveling bolts

The illustration below shows the orienting grooves and attachment holes for leveling bolts in the base plate.



xx1500000312

|   |   |
|---|---|
| A | Orienting grooves (3 pcs)                 |
| B | Levelling bolts, attachment holes (4 pcs) |

##### Base plate, locating pins

Locating pins are the recommended positioning components and especially required for robots with option Absolute Accuracy.

##### Assembly of locating pins

The figure below shows the locating pins installed in the base plate.

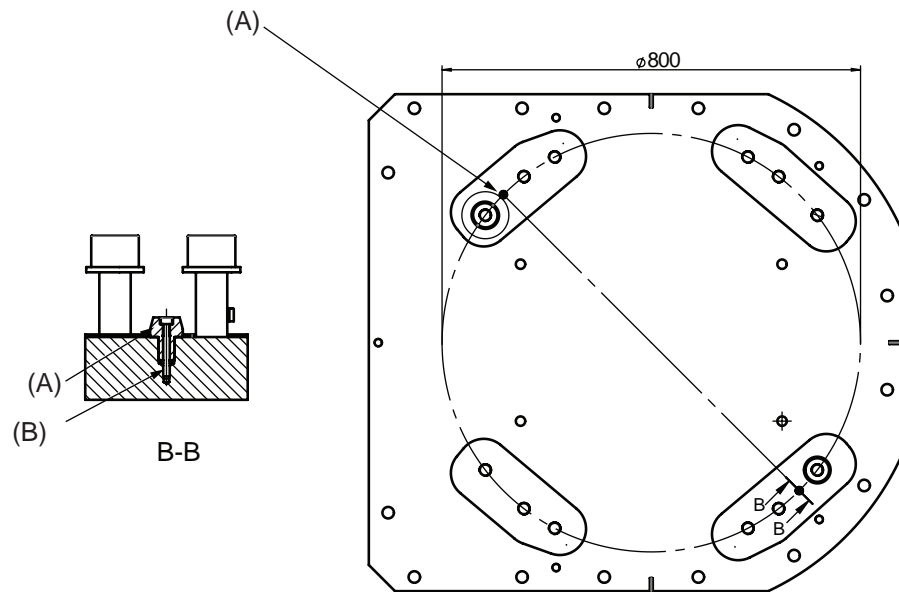
*Continues on next page*



### 3 Installation and commissioning

#### 3.3.2 Installing a base plate

*Continued*



xx1500000250

| Pos | Description                           |
|-----|---------------------------------------|
| A   | Locating pin: 3HAC051645-001 (2 pcs)  |
| B   | M5 x 40. Tightening torque 6 Nm. (x2) |

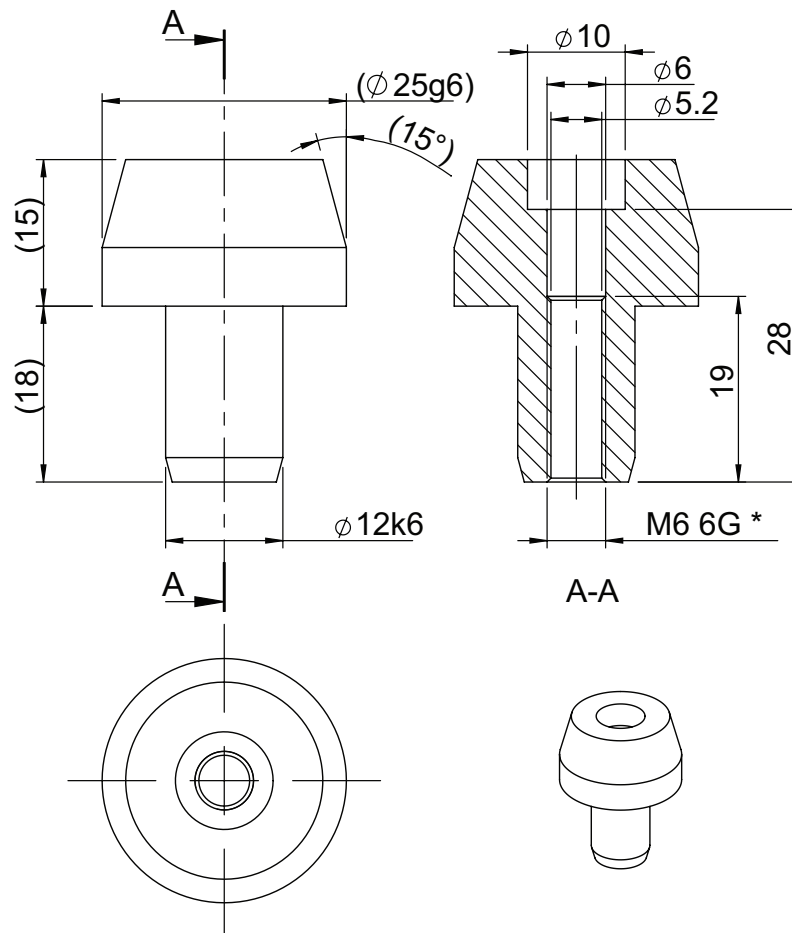
*Continues on next page*

### 3 Installation and commissioning

#### 3.3.2 Installing a base plate

*Continued*

Dimension of locating pins (guide pins)



XX1500000248

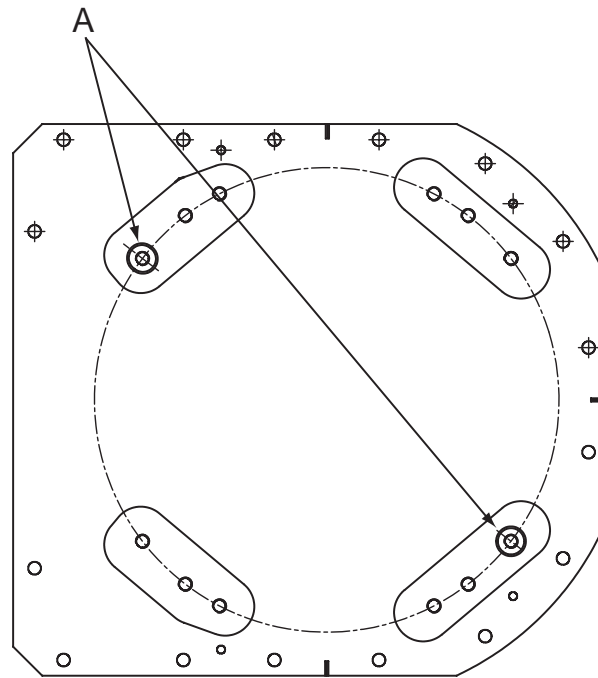
| Pos | Description   |
|-----|---|
| -   | Cylindrical guide pin<br>(Requires attachment screws, see <a href="#">Assembly of locating pins on page 58.</a> ) |
| *   | Threaded M6 hole that can be used for removal of the locating pin, for example with a slide hammer.               |

#### Base plate, guide sleeve holes

Guide sleeves are not recommended for robots with option Absolute Accuracy.

The illustration below shows the guide sleeve holes in the base plate.

*Continues on next page*




xx0300000045

|   |                            |
|---|----------------------------|
| A | Guide sleeve holes (2 pcs) |
|---|----------------------------|

#### Base plate

This section details how to secure the base plate to the foundation.

|   | Action  | Note  |
|---|---|---|
| 1 | Make sure the foundation is levelled.   |   |
| 2 |  <b>CAUTION</b><br>All lifting equipment used must be sized accordingly! |   |
| 3 | Position base plate in relation to the robot work location using the grooves in the base plate.   | Shown in figure <a href="#">Base plate, orienting grooves and leveling bolts on page 58</a> . |
| 4 | Lift the base plate to its mounting position.   |   |
| 5 | Use the base plate as a template and drill attachment holes as required by the selected bolt dimension.   | Attachment holes: 16 pcs.   |
| 6 | Fit the base plate and use the levelling bolts to level the base plate.   | Shown in figure <a href="#">Base plate, orienting grooves and leveling bolts on page 58</a> . |
| 7 | If required, fit strips of sheet metal underneath the base plate to fill any gaps.  |   |
| 8 | Secure the base plate to the foundation with screws and sleeves.  |   |

Continues on next page

### 3 Installation and commissioning

---

#### 3.3.2 Installing a base plate

*Continued*

|   | Action  | Note  |
|---|---|---|
| 9 | Recheck the four contact surfaces on the base plate to make sure the base plate is levelled and flat.<br>If it is not, use pieces of sheet metal or similar to bring the base plate to a levelled position. | Maximum allowed deviation all over the base plate, from one contact surface to the other: 0.3 mm. |

### 3.3.3 Lifting the robot

#### 3.3.3.1 Lifting robot with lifting accessory (recommended lifting method)

---

##### General

This section contains a general overview of how to lift the complete robot using special lifting accessory.

This lifting accessory is only valid for floor mounted manipulators. To lift inverted mounted manipulators, see [Lifting and rotating a suspended mounted or tilted manipulator on page 67](#).

---

##### Illustration, lifting accessory

The following figure shows the principle for how to use and lift the entire robot with lifting accessory. For a more detailed instruction, see the user instructions enclosed with the accessory.



##### Note

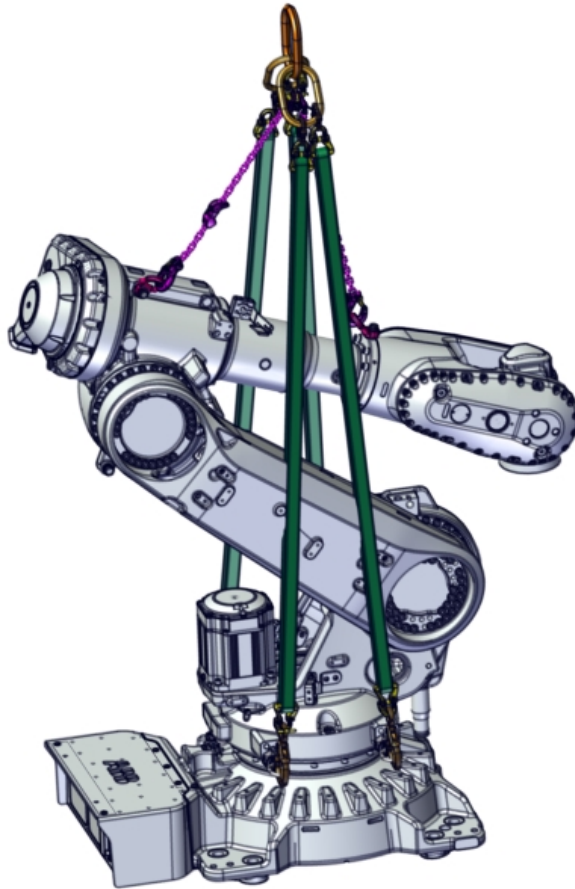
The user manual may be out of date. The latest revision is available for download via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

*Continues on next page*

### 3 Installation and commissioning

#### 3.3.3.1 Lifting robot with lifting accessory (recommended lifting method)

*Continued*



xx2100001140

#### Required equipment

| Equipment                | Article number | Note                                   |
|--------------------------|----------------|--|
| Lifting accessory, robot | 3HAC15607-1    | Includes user instructions 3HAC15971-2 |

#### Slings attached directly onto robot

This section details how to lift and move the robot using lifting slings when these are attached directly onto the robot.






#### Note

Please refer to the enclosed user instruction for instruction how to place the manipulator in an correct position. Attempting to lift a manipulator in any other position may result in the robot tipping over, causing severe damage or injury!

|   | Action  | Note |
|---|---|------|
| 1 | Run the overhead crane to a position above the robot. |      |

*Continues on next page*

|   | Action  | Note   |
|---|---|--|
| 2 | Position the robot as detailed in enclosed instruction!   | Article number is specified in <a href="#">Required equipment on page 64</a> .<br>Release the brakes, if required, as detailed in section <a href="#">Manually releasing the brakes on page 76</a> . |
| 3 | <p>Fit the <i>lifting accessory</i> to the robot as described in the enclosed instruction!<br/>Go to the user instructions enclosed with the lifting accessory.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.<br/>Read and follow enclosed user instructions for the tool.</p>                                 | Article number is specified in <a href="#">Required equipment on page 64</a> .   |
| 4 | <p> <b>CAUTION</b></p> <p>The IRB 5710 robot weighs .<br/>IRB 5710-110/2.3: 830 kg (<i>Inverted: 845 kg</i>)<br/>IRB 5710-90/2.7: 830 kg (<i>Inverted: 840 kg</i>)<br/>IRB 5710-90/2.3 LID: 890 kg (<i>Inverted: 905 kg</i>)<br/>IRB 5710-70/2.7 LID: 885 kg (<i>Inverted: 900 kg</i>)<br/>All lifting accessories used must be sized accordingly!</p> |  |
| 5 | <p> <b>WARNING</b></p> <p>Personnel must not, under any circumstances, be present under the suspended load!</p>  |  |
| 6 | Raise overhead crane to lift the robot.   | <p>Make sure all hooks and attachments maintain their correct positions while lifting the robot!</p> <p>Always move the robot at very low speeds, making sure it does not tip.</p>                   |

## 3 Installation and commissioning

### 3.3.3.2 Lifting the robot with fork lift

#### 3.3.3.2 Lifting the robot with fork lift

##### Lifting methods

The robot may be lifted and transported using a fork lift, provided that available special aids are used.

For rotation of the robot to an inverted position, the fork lift accessory must be used together with a special turning tool or a fork lift truck with a rotator attachment.

This section specifies available special aids and references to valid user documentation for the lifting accessories.

##### Required tools and equipment

| Equipment                               | Article number | Note  |
|---|----------------|---|
| Fork lift accessory set                 | 3HAC058825-001 | Contains fork lift pockets and all required hardware for installation on frame.<br>User instructions are enclosed with the tool.      |
| Fork lift accessory set                 | 3HAC047054-003 | Contains fork lift pockets and all required hardware for installation on robot base.<br>User instructions are enclosed with the tool. |
| Fork lift truck with rotator attachment | -              | Required for rotating the robot to an inverted position.  |

##### Required documents

| Document  | Document number |
|---|-----------------|
| Directions for use - Fork lift accessory set 3HAC058825-001 | 3HAC060303-001  |
| Directions for use - Fork lift accessory set 3HAC047054-001 | 3HAC048484-002  |

##### Lifting the robot

|   | Action  | Note |
|---|---|------|
| 1 | Lift the robot with a fork lift according to the user instructions enclosed with the fork lift accessory. |      |



#### 3.3.3.3 Lifting and rotating a suspended mounted or tilted manipulator

##### Introduction

How to lift and turn the robot to a suspended/inverted position using the turning accessory is described in the lifting instruction delivered with the turning accessory. Article numbers for the accessory and the instruction is specified in [Special tools on page 666](#). Any additional equipment required is specified in the instruction for the lifting accessory. Contact ABB for more information.

How to lift and turn the robot into position for tilted position: Contact ABB for more information.

##### Illustration



xx2100002608

## 3 Installation and commissioning

### 3.3.3.4 Lifting the robot with roundslings

#### 3.3.3.4 Lifting the robot with roundslings

##### Recommended lifting method

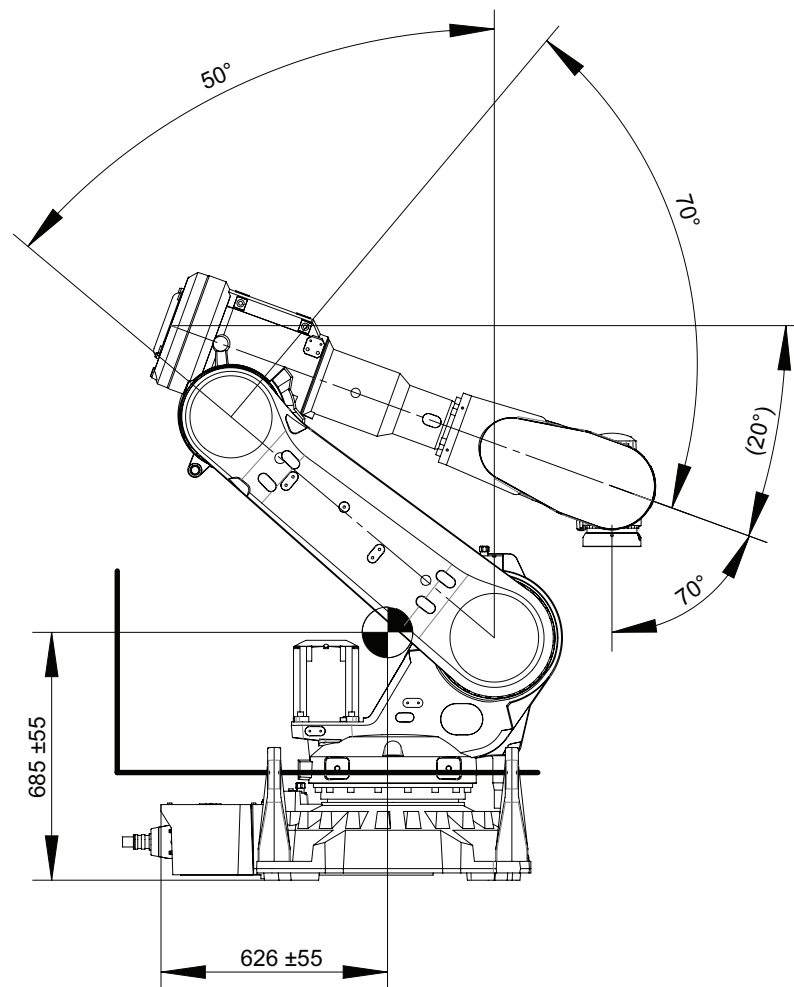
Recommended lifting method for the robot includes one of following lifting accessories:

- Lifting accessory set: 3HAC15607-1. See [Lifting robot with lifting accessory \(recommended lifting method\) on page 63](#).
- Fork lift accessory set: 3HAC058825-001. See [Lifting the robot with fork lift on page 66](#).
- Fork lift accessory set: 3HAC047054-003. See [Lifting the robot with fork lift on page 66](#).
- Lifting and turning tool: 3HAC073537-001. See [Lifting and rotating a suspended mounted or tilted manipulator on page 67](#).

The robot can also be lifted with roundslings as detailed in this section.

##### Illustration - lifting position

This figure shows the robot in its lifting and transportation position.



xx2100000477

*Continues on next page*

### 3 Installation and commissioning

#### 3.3.3.4 Lifting the robot with roundslings

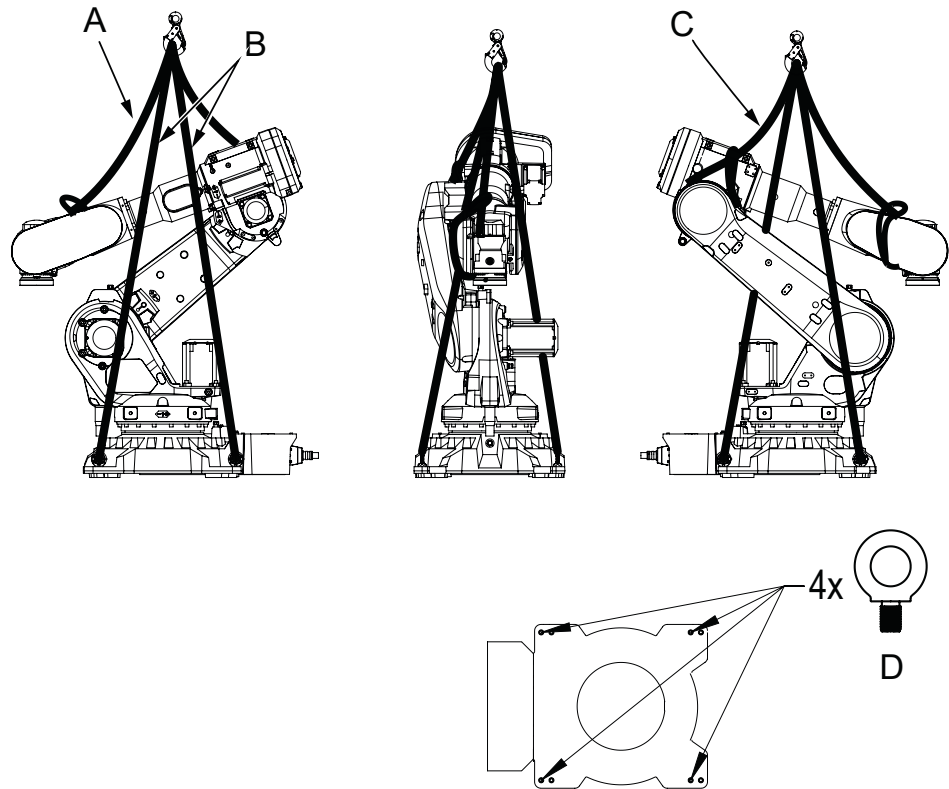
*Continued*



#### **DANGER**

Attempting to lift a robot in any other position than the recommended lifting position may result in the robot tipping over, causing severe damage or injury.

#### Illustration - attaching the roundslings



xx2100000703

| Pos | Description     | Note   | Quantity |
|-----|-----------------|--|----------|
| A   | Roundsling      | 2 m or 2.5 m depending on robot variant. <sup>i</sup>  | 1 pcs    |
| B   | Roundsling      | 2.5 m  | 4 pcs    |
| C   | Roundsling      | 2 m or 2.5 m depending on robot variant. <sup>ii</sup> | 1 pcs    |
| D   | Lifting eye M20 |  | 4 pcs    |

<sup>i</sup> Fit the roundsling with slack. They prevent the robot from rotating if there is a sudden stop during transport.

<sup>ii</sup> Fit the roundsling with slack. They prevent the robot from rotating if there is a sudden stop during transport.

*Continues on next page*

### 3 Installation and commissioning

#### 3.3.3.4 Lifting the robot with roundslings

Continued



#### CAUTION

The weight of the IRB 5710 robot is

IRB 5710-110/2.3: 830 kg (*Inverted: 845 kg*)

IRB 5710-90/2.7: 830 kg (*Inverted: 840 kg*)

IRB 5710-90/2.3 LID: 890 kg (*Inverted: 905 kg*)

IRB 5710-70/2.7 LID: 885 kg (*Inverted: 900 kg*)


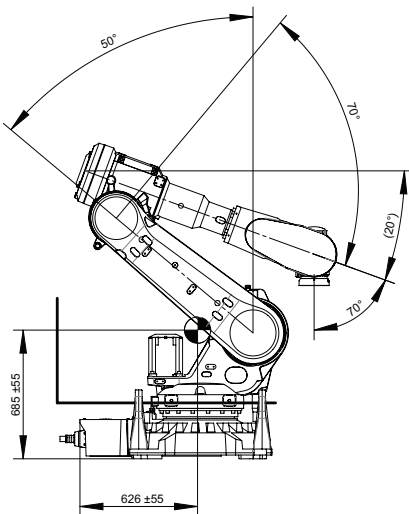

All lifting accessories used must be sized accordingly.

#### Required tools and equipment

| Equipment                    | Article number | Note  |
|------------------------------|----------------|---|
| Overhead crane               | -              |   |
| Roundslings and lifting eyes | -              | See <a href="#">Illustration - attaching the roundslings on page 69</a> . |

#### Lifting the robot with roundslings

Use this procedure to lift the robot with roundslings.

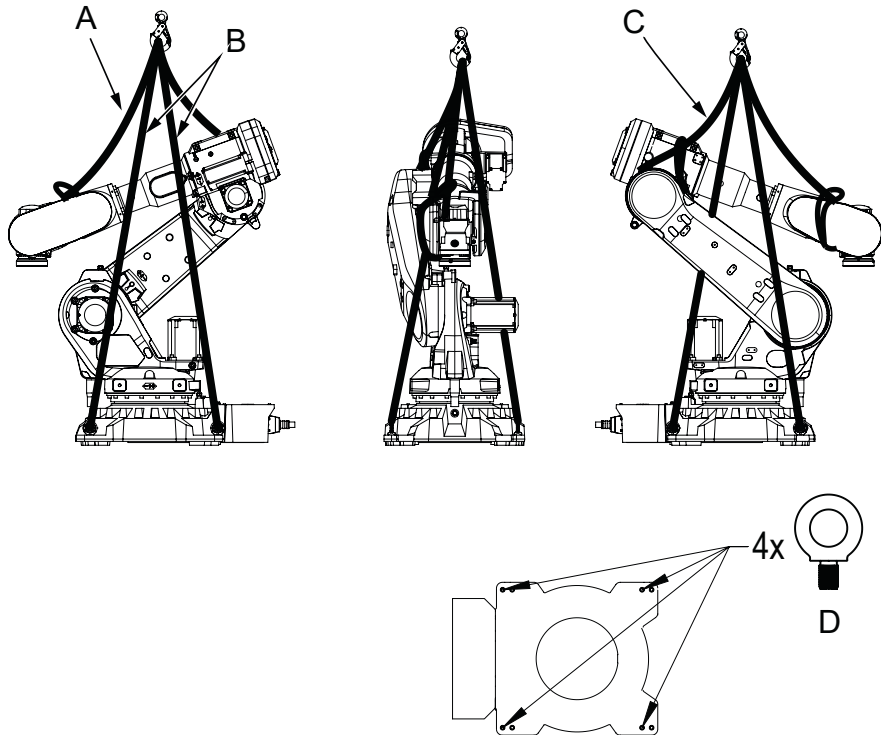

|   | Action   | Note   |
|---|--|--|
| 1 | <p>Make sure the robot is positioned in the recommended position for transportation and lifting.</p> <ul style="list-style-type: none"><li>• Axis 1: 0°</li><li>• Axis 2: -50°</li><li>• Axis 3: +70°</li><li>• Axis 4: 0°</li><li>• Axis 5: +70°</li><li>• Axis 6: 0°</li></ul> <p> <b>WARNING</b></p> <p>The robot is mechanically unstable if not secured to the foundation.</p> | <br>xx2100000477 |
| 2 | <p> <b>CAUTION</b></p> <p>The weight of the IRB 5710 robot is</p> <p>IRB 5710-110/2.3: 830 kg (<i>Inverted: 845 kg</i>)</p> <p>IRB 5710-90/2.7: 830 kg (<i>Inverted: 840 kg</i>)</p> <p>IRB 5710-90/2.3 LID: 890 kg (<i>Inverted: 905 kg</i>)</p> <p>IRB 5710-70/2.7 LID: 885 kg (<i>Inverted: 900 kg</i>)</p> <p>All lifting accessories used must be sized accordingly.</p>       |  |
| 3 | Fit lifting eyes / eye bolts to the lifting points of the robot.   | Lifting eye M20 (4 pcs)  |

Continues on next page

### 3 Installation and commissioning

#### 3.3.3.4 Lifting the robot with roundslings

*Continued*

|     | Action   | Note   |             |      |          |   |            |   |       |   |            |       |       |   |            |  |       |   |                 |  |       |  |
|-----|--|--|-------------|------|----------|---|------------|---|-------|---|------------|-------|-------|---|------------|--|-------|---|-----------------|--|-------|--|
| 4   | <p>Attach the roundslings to the robot according to the figure.</p> <p>Make sure the roundslings do not rub against any sharp edges.</p> <p>Fit roundslings A and C with slack. They prevent the robot from rotating if there is a sudden stop during transport.</p> <div></div> <p>xx2100000703</p> <table><tr><th>Pos</th><th>Description</th><th>Note</th><th>Quantity</th></tr><tr><td>A</td><td>Roundsling</td><td>2 m or 2.5 m depending on robot variant.<sup>i</sup></td><td>1 pcs</td></tr><tr><td>B</td><td>Roundsling</td><td>2.5 m</td><td>4 pcs</td></tr><tr><td>C</td><td>Roundsling</td><td>2 m or 2.5 m depending on robot variant.<sup>ii</sup></td><td>1 pcs</td></tr><tr><td>D</td><td>Lifting eye M20</td><td></td><td>4 pcs</td></tr></table> <p><sup>i</sup> Fit the roundsling with slack. They prevent the robot from rotating if there is a sudden stop during transport.</p> <p><sup>ii</sup> Fit the roundsling with slack. They prevent the robot from rotating if there is a sudden stop during transport.</p> | Pos  | Description | Note | Quantity | A | Roundsling | 2 m or 2.5 m depending on robot variant. <sup>i</sup> | 1 pcs | B | Roundsling | 2.5 m | 4 pcs | C | Roundsling | 2 m or 2.5 m depending on robot variant. <sup>ii</sup> | 1 pcs | D | Lifting eye M20 |  | 4 pcs |  |
| Pos | Description  | Note   | Quantity    |      |          |   |            |   |       |   |            |       |       |   |            |  |       |   |                 |  |       |  |
| A   | Roundsling   | 2 m or 2.5 m depending on robot variant. <sup>i</sup>  | 1 pcs       |      |          |   |            |   |       |   |            |       |       |   |            |  |       |   |                 |  |       |  |
| B   | Roundsling   | 2.5 m  | 4 pcs       |      |          |   |            |   |       |   |            |       |       |   |            |  |       |   |                 |  |       |  |
| C   | Roundsling   | 2 m or 2.5 m depending on robot variant. <sup>ii</sup> | 1 pcs       |      |          |   |            |   |       |   |            |       |       |   |            |  |       |   |                 |  |       |  |
| D   | Lifting eye M20  |  | 4 pcs       |      |          |   |            |   |       |   |            |       |       |   |            |  |       |   |                 |  |       |  |
| 5   | <div><b>WARNING</b></div> <p>Personnel must not, under any circumstances, be present under the suspended load.</p>  |  |             |      |          |   |            |   |       |   |            |       |       |   |            |  |       |   |                 |  |       |  |
| 6   | Raise the overhead crane to lift the robot.  |  |             |      |          |   |            |   |       |   |            |       |       |   |            |  |       |   |                 |  |       |  |

## 3 Installation and commissioning

### 3.3.4 Orienting and securing the robot

### 3.3.4 Orienting and securing the robot

#### General

This section describes how to orient and secure the robot to the base plate or to the steel structure foundation in order to run the robot safely.

#### Attachment screws

The table below specifies the type of securing screws and washers to be used for securing the robot to the base plate/steel structure foundation.

|  |   |
|--|---|
| Suitable screws  | M24 x 100   |
| Quantity   | 8 pcs   |
| Quality  | 8.8   |
| Suitable washer  | 4 mm flat washer  |
| Guide pins   | Locating pin: 3HAC051645-001 (2 pcs)<br>Locating pins are required if mounting the manipulator to a track motion or to a base plate.<br>Locating pins are also required for robots with option Absolute Accuracy.<br>For more information, see <a href="#">Base plate, locating pins on page 58</a> . |
| Tightening torque  | 550 Nm (screws lubricated with Molykote 1000)<br>600-725 Nm, typical 650 Nm (screws none or lightly lubricated)   |
| Screw tightening yield point utilization factor (v) (according to VDI2230) | 90% (v=0.9)   |
| Level surface requirements   | 0.3 mm <sup>i</sup>   |

<sup>i</sup> See [Requirements, foundation on page 39](#).

#### Securing a floor mounted robot

Use this procedure to orient and secure the robot floor mounted.



|   | Action  | Note  |
|---|---|---|
| 1 | Make sure the installation site for the robot conforms to the specifications in section <a href="#">Technical data on page 37</a> . |   |
| 2 | Prepare the installation site with attachment holes or install a base plate.<br>The foundation surface must be clean and unpainted. | The hole configuration of the base is shown in the figure in <a href="#">Hole configuration, base on page 75</a> .<br>For information about a base plate, see <a href="#">Installing a base plate on page 54</a> .  |
| 3 | If using a base plate: fit two locating pins in the base plate.   | Locating pins are required if mounting the manipulator to a track motion or to a base plate.<br>Locating pins are also required for robots with option Absolute Accuracy.<br>For more information, see <a href="#">Base plate, locating pins on page 58</a> . |

*Continues on next page*

### 3 Installation and commissioning

#### 3.3.4 Orienting and securing the robot

*Continued*

|   | Action  | Note  |
|---|---|---|
| 4 |  <b>CAUTION</b><br><br>The weight of the IRB 5710 robot is<br>IRB 5710-110/2.3: 830 kg ( <i>Inverted: 845 kg</i> )<br>IRB 5710-90/2.7: 830 kg ( <i>Inverted: 840 kg</i> )<br>IRB 5710-90/2.3 LID: 890 kg ( <i>Inverted: 905 kg</i> )<br>IRB 5710-70/2.7 LID: 885 kg ( <i>Inverted: 900 kg</i> )<br>All lifting accessories used must be sized accordingly. |   |
| 5 |  <b>CAUTION</b><br><br>When the robot is put down after being lifted or transported, there is a risk of it tipping, if not properly secured.   |   |
| 6 | Lift the robot.   | See <a href="#">Lifting the robot on page 63</a> .  |
| 7 | Guide the robot gently, using the attachment screws while lowering it into its mounting position.   | Make sure the robot base is correctly fitted onto the pins.   |
| 8 | Fit the securing screws and washers in the attachment holes of the base.  | Screws: M24 x 100, 8 pcs, quality 8.8<br>Washers: 4 mm flat washer  |
| 9 | Tighten the bolts in a crosswise pattern to ensure that the base is not distorted.  | Tightening torque:<br>550 Nm (screws lubricated with Molykote 1000)<br>600-725 Nm, typical 650 Nm (screws none or lightly lubricated) |

#### Securing an inverted robot

Use this procedure to orient and secure the robot inverted.




|   | Action  | Note   |
|---|---|--|
| 1 | Make sure the installation site for the robot conforms to the specifications in section <a href="#">Technical data on page 37</a> . |  |
| 2 | Prepare the installation site with attachment holes. The foundation surface must be clean and unpainted.                            | The hole configuration of the base is shown in the figure in <a href="#">Hole configuration, base on page 75</a> . |
| 3 | Lift the robot using the fork lift accessory.   | Fork lift accessory set:<br>3HAC058825-001<br>See user instructions enclosed with the fork lift accessory.         |
| 4 | Move the robot close to its installation location.  |  |

*Continues on next page*

### 3 Installation and commissioning

#### 3.3.4 Orienting and securing the robot

*Continued*

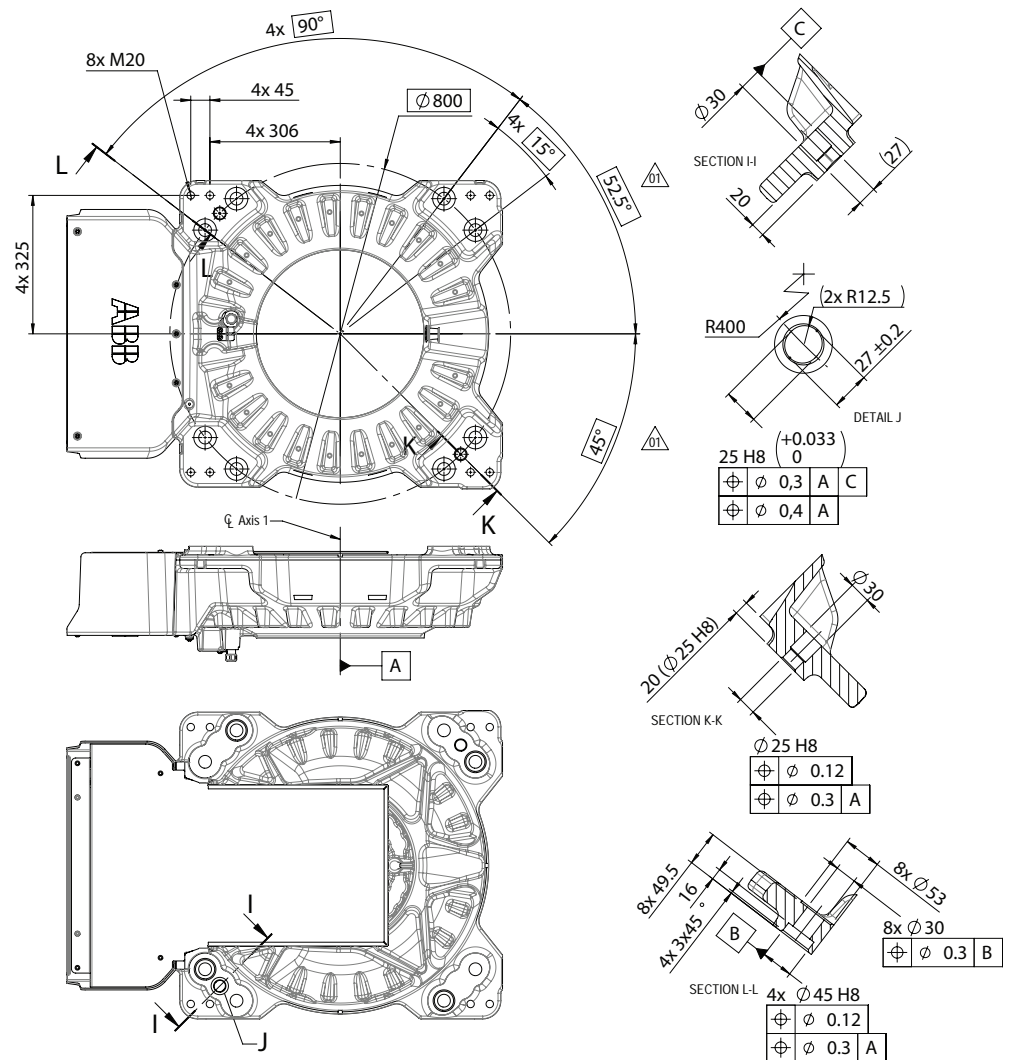
|   | Action   | Note   |
|---|--|--|
| 5 | <p>Rotate the robot into inverted position using the turning tool or using a fork lift truck with a rotator attachment.</p> <p> <b>DANGER</b></p> <p>Make sure that there is enough space underneath the robot. See user instructions for the turning tool.</p>   | <p>Lifting and turning tool:<br/>3HAC073537-001</p> <p>See user instructions enclosed with the turning tool.</p>   |
| 6 | <p>Guide the robot using two attachment screws while lifting it into its mounting position.</p>  |  |
| 7 | <p>Fit the bolts and washers in the base attachment holes.</p> <p> <b>Note</b></p> <p>Lightly lubricate screws before assembly.</p> <p> <b>CAUTION</b></p> <p>If high stress on screws are suspected, replace used screws with new ones.</p> | <p>Suitable screws, lightly lubricated:<br/>M24 x 100 (8 pcs), 8.8.</p> <p>Suitable washer: 4 mm flat washer.</p> <p>Screw tightening yield point utilization factor (v) (according to VDI2230): 90% (v=0.9).</p> <p>Tightening torque:<br/>550 Nm (screws lubricated with Molykote 1000)<br/>600-725 Nm, typical 650 Nm (screws none or lightly lubricated)</p> |
| 8 | <p>Tighten bolts in a crosswise pattern to ensure that the base is not distorted.</p>  |  |

*Continues on next page*



### Hole configuration, base

**This illustration shows the hole configuration used when securing the robot.**



xx2100000788

### 3 Installation and commissioning

#### 3.3.5 Manually releasing the brakes

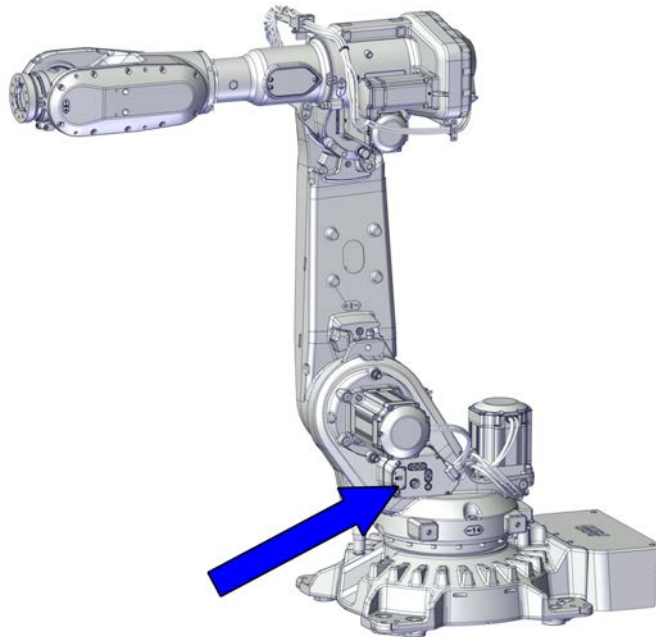
#### 3.3.5 Manually releasing the brakes

##### Introduction to manually releasing the brakes

This section describes how to release the holding brakes for the axes motors.

##### Location of the brake release unit


The brake release unit is located as shown in the figure.




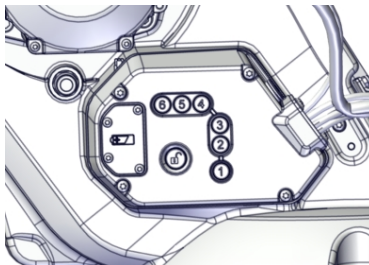
xx2000000232

##### Releasing the brakes

This procedure describes how to release the holding brakes when the robot is equipped with a brake release unit.



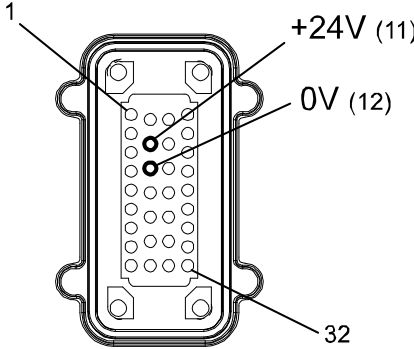
|   | Action   | Note |
|---|--|------|
| 1 | <p>The internal brake release unit is equipped with buttons for controlling the axes brakes. The buttons are numbered according to the numbers of the axes.</p> <div> <b>Note</b></div> <p>If the robot is not connected to the controller, power must be supplied to the connector R1.MP according to the section <a href="#">Supplying power to connector R1.MP on page 77</a>.</p> |      |

*Continues on next page*

|   | Action   | Note  |
|---|--|---|
| 2 |  <b>DANGER</b><br>When releasing the holding brakes, the robot axes may move very quickly and sometimes in unexpected ways.<br>Make sure no personnel is near or beneath the robot. |   |
| 3 | Release the holding brake on a particular robot axis by pressing the corresponding button and the padlock button simultaneously, on the internal brake release unit.<br>The brake will be enable as soon as the button is released.                                  | <br>xx2000000233 |

#### Supplying power to connector R1.MP

If the robot is not connected to the controller, power must be supplied to connector R1.MP on the robot, in order to enable the brake release buttons.

|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br>Incorrect connections, such as supplying power to the wrong pin, may cause all brakes to be released simultaneously and instantly!  |   |
| 2 | Supply <ul style="list-style-type: none"> <li>• 0V on pin 12.</li> <li>• 24V on pin 11.</li> </ul>  <b>Note</b><br>Do not interchange the 24V and 0V pins.<br>If they are mixed up, damage can be caused to internal electrical components. | <br>xx0600002937 |
| 3 | Use the brake releasing button as described in <a href="#">Releasing the brakes on page 76</a> .   |   |

## 3 Installation and commissioning

---

### 3.3.6 Setting the system parameters for an inverted or a tilted robot

#### 3.3.6 Setting the system parameters for an inverted or a tilted robot

---

##### General

A robot delivered for inverted mounting, is configured for mounting parallel to the floor, without tilting. If the robot is mounted in any other angle than 180°, then the system parameters that describe the mounting angle (how the robot is oriented relative to the gravity) must be re-defined.



##### Note

With inverted installation, make sure that the gantry or corresponding structure is rigid enough to prevent unacceptable vibrations and deflections, so that optimum performance can be achieved.



##### Note

The mounting positions are described in [Mounting positions on page 37](#), and the requirements on the foundation are described in [Requirements, foundation on page 39](#).

##### System parameters



##### Note

The mounting angle must be configured correctly in the system parameters so that the robot system can control the movements in the best possible way. An incorrect definition of the mounting angle will result in:

- Overloading the mechanical structure.
- Lower path performance and path accuracy.
- Some functions will not work properly, for example *Load Identification* and *Collision detection*.

##### Gravity Beta

When the robot is mounted other than floor-standing (rotated around the y-axis), the robot base frame and the system parameter *Gravity Beta* must be redefined. If the robot is mounted upside down (inverted), then *Gravity Beta* should be  $\pi$  (+3.141593).

The *Gravity Beta* is a positive rotation direction around the y-axis in the base coordinate system. The value is set in radians.

##### Gamma Rotation

*Gamma Rotation* defines the orientation of the robot foot on the travel carriage (track motion).

*Continues on next page*

##### Mounting angles and values

The parameter *Gravity Beta* (or *Gravity Alpha*) specifies the mounting angle of the robot in radians. It is calculated in the following way.

$\text{Gravity Beta} = A^\circ \times 3.141593/180 = B \text{ radians}$ , where A is the mounting angle in degrees and B is the mounting angle in radians.

| Example of position | Mounting angle (A °) | Gravity Beta                    |
|---------------------|----------------------|---------------------------------|
| Floor mounted       | 0°                   | 0.000000 (Default)              |
| Tilted mounting     | Example:<br>15°      | Corresponds to:<br>0.261799 rad |
| Inverted mounting   | 180°                 | 3.141593                        |

##### Defining the system parameters in RobotWare

The value of the system parameters that define the mounting angle must be redefined when changing the mounting angle of the robot. The parameters belong to the type *Robot*, in the topic *Motion*.

The system parameters are described in *Technical reference manual - System parameters*.

The system parameters are configured in RobotStudio or on the FlexPendant.

## 3 Installation and commissioning

---

### 3.3.7 Loads fitted to the robot, stopping time and braking distances

#### 3.3.7 Loads fitted to the robot, stopping time and braking distances

---

##### Define loads carefully

Any loads mounted on the robot must be defined correctly and carefully (with regard to the position of center of gravity and mass moments of inertia) in order to avoid jolting movements and overloading motors, gears and structure.



##### CAUTION

Incorrectly defined loads may result in operational stops or major damage to the robot.

Load diagrams, permitted extra loads (equipment) and their positions are specified in the product specification. The loads must be defined in the software.

---

##### Stopping time and braking distances

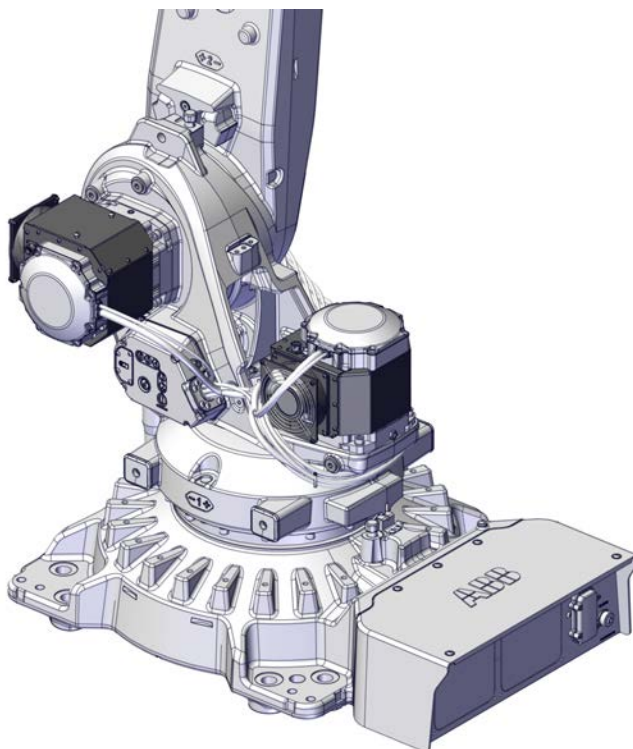
The performance of the motor brake depends on if there are any loads attached to the robot.

See the product specification for the robot, listed in [References on page 10](#).

### 3.3.8 Installing the motor cooling fan (option 3320-1, 3321-1)

#### Location of the motor cooling fan

A cooling fan can be installed on the motors shown in the figure, as an option. The fan is not possible to install on a robot with protection type Foundry Plus.



xx2400000601

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part                             | Article number   | Note   |
|--|--|--|
| Fan unit                               | 3HAC049771-001   | Available for the axis-1 and axis-2 motor. Can not be used together with protection type Foundry Plus.   |
| Cable harness for fan unit             | 3HAC033082-001   |  |
| Connection box cover FS180 with gasket | 3HAC074336-004 (Graphite White, threaded connection)<br>3HAC074336-005 (ABB Orange, threaded connection) | Required if the current motor cover does not have a threaded connection, since the threaded connection is required for cooling fan option.<br>On axis-1 and axis-2 motor |

*Continues on next page*

### 3 Installation and commissioning

#### 3.3.8 Installing the motor cooling fan (option 3320-1, 3321-1)

*Continued*

##### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |


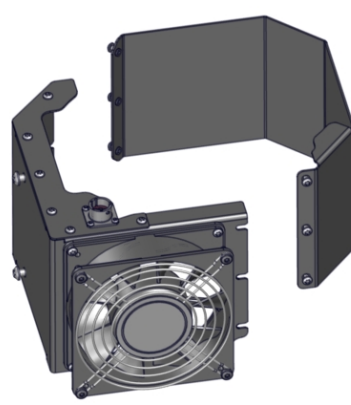
##### Required consumables

| Consumable   | Article number | Note |
|--------------|----------------|------|
| Cable straps | -              |      |

##### Installing the cooling fan

Use these procedures to install the cooling fan.

##### Installing the fan

|   | Action  | Note  |
|---|---|---|
| 1 | Move the robot to its synchronization position.   |   |
| 2 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safeguarded space. |   |
| 3 | Remove the metal sheet frame from the fan unit assembly by loosening the six screws.  | <br>xx2400000551 |

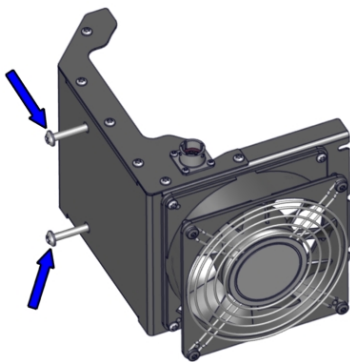
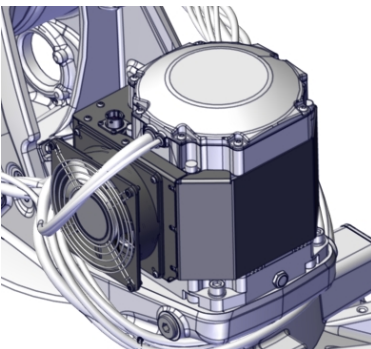
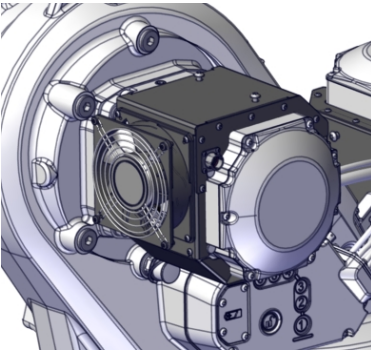
*Continues on next page*



### 3 Installation and commissioning

#### 3.3.8 Installing the motor cooling fan (option 3320-1, 3321-1)

*Continued*

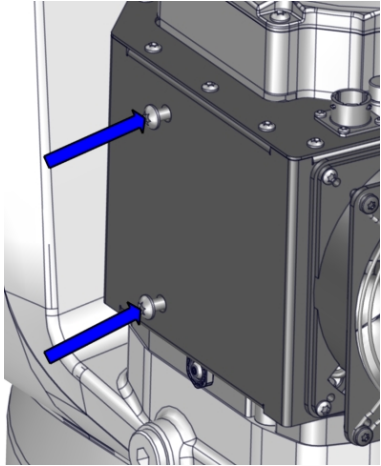
|   | Action   | Note   |
|---|--|--|
| 4 | Loosen the two tightening screws so they do not damage the motor surface during installation.        | <br>xx2400000552                        |
| 5 | Fit the fan unit sheets around the motor and fasten them to each other by tightening the six screws. | <p>Axis-1 motor:</p> <br>xx2400000627  |
|   |  | <p>Axis-2 motor:</p> <br>xx2400000628 |

*Continues on next page*

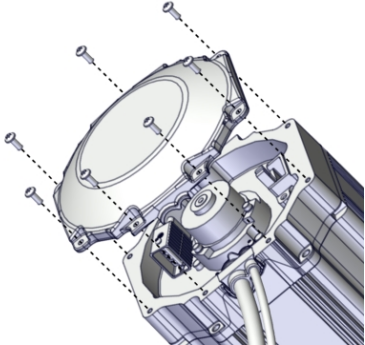
3 Installation and commissioning

3.3.8 Installing the motor cooling fan (option 3320-1, 3321-1)

Continued

|   | Action  | Note  |
|---|---|---|
| 6 | Lift the box so that it does not rest directly on the robot and secure the box against the motor with the two tightening screws.<br>Tighten them so that the box is firmly attached to the motor. | <br>xx2400000556 |

Connecting the fan cabling

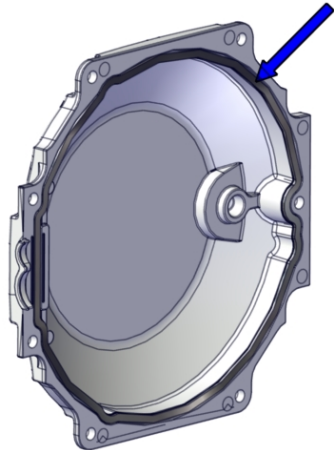

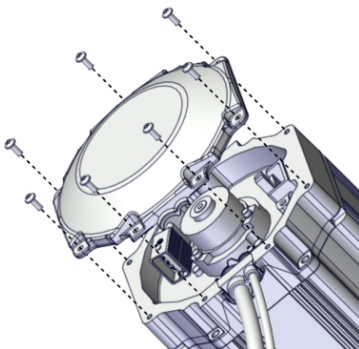
|   | Action  | Note   |
|---|---|--|
| 1 | Open the motor cover.<br>Replace it with a motor cover with threaded connection, if required. | Connection box cover FS180 with gasket:<br>3HAC074336-004 (Graphite White, threaded connection)<br>3HAC074336-005 (ABB Orange, threaded connection)<br><br>xx2100000596 |
| 2 | Run the fan cabling through the threaded connection in the cover and connect the connectors.  |  |

Continues on next page

### 3 Installation and commissioning

#### 3.3.8 Installing the motor cooling fan (option 3320-1, 3321-1)

*Continued*

|   | Action  | Note   |
|---|---|--|
| 3 | Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <p>Connection box cover FS180 with gasket:<br/> 3HAC074336-004 (Graphite White, threaded connection)<br/> 3HAC074336-005 (ABB Orange, threaded connection)</p>  <p>xx2100000600</p> |
| 4 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |
| 5 | Refit the motor cover with its attachment screws.<br>Use locking liquid.  | <p>Torx pan head screw: M5x12<br/> Stainless steel A2-70<br/> Locking liquid: Loctite 2400 (or equivalent Loctite 243)<br/> Tightening torque: 6 Nm.</p>  <p>xx2100000596</p>     |

#### Adjustments in RobotWare

|   | Action  | Note   |
|---|---|--|
| 1 | Modify the settings in RobotWare to include the cooling fans. | See the operating manual for the controller. |

### 3 Installation and commissioning

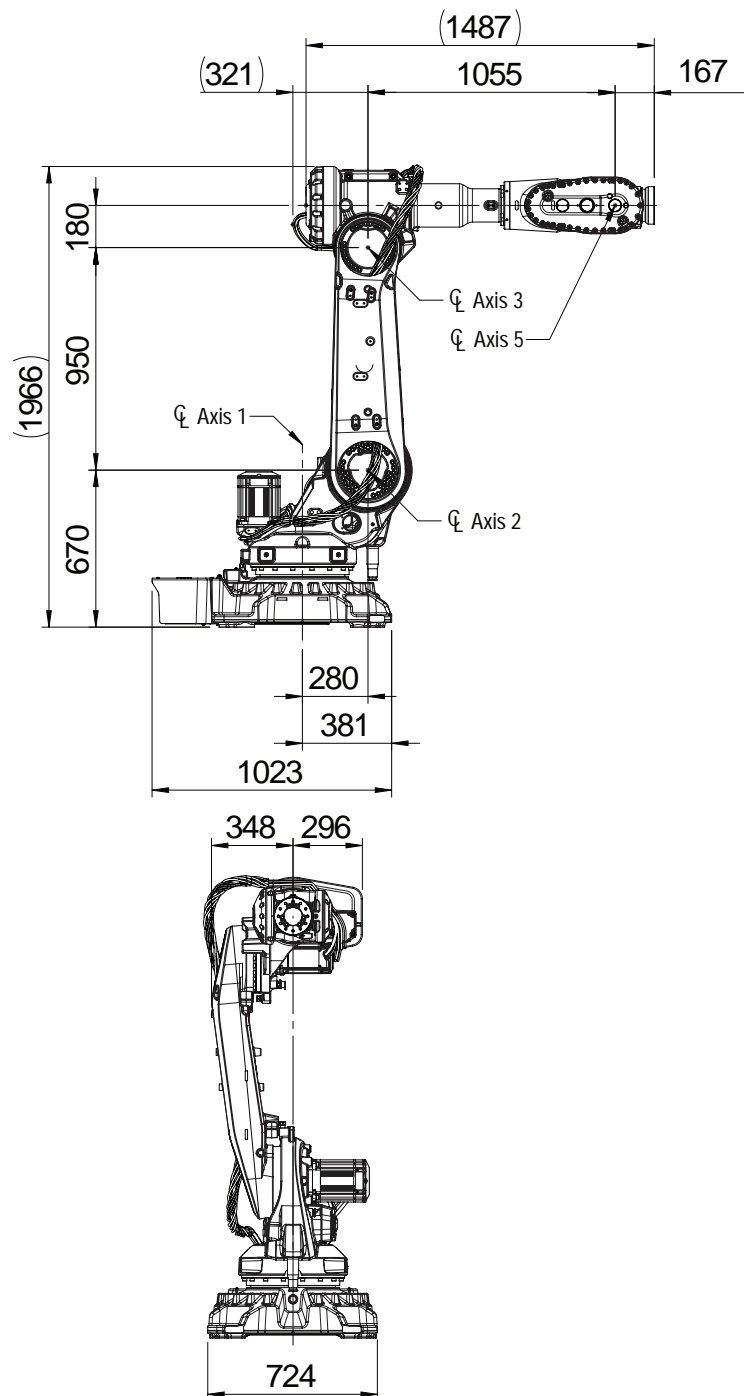
#### 3.3.9 Fitting equipment on the robot (robot dimensions)

#### 3.3.9 Fitting equipment on the robot (robot dimensions)

##### Robot dimensions

The figure shows the dimension of the robot. For more information regarding geometry, see CAD models online.

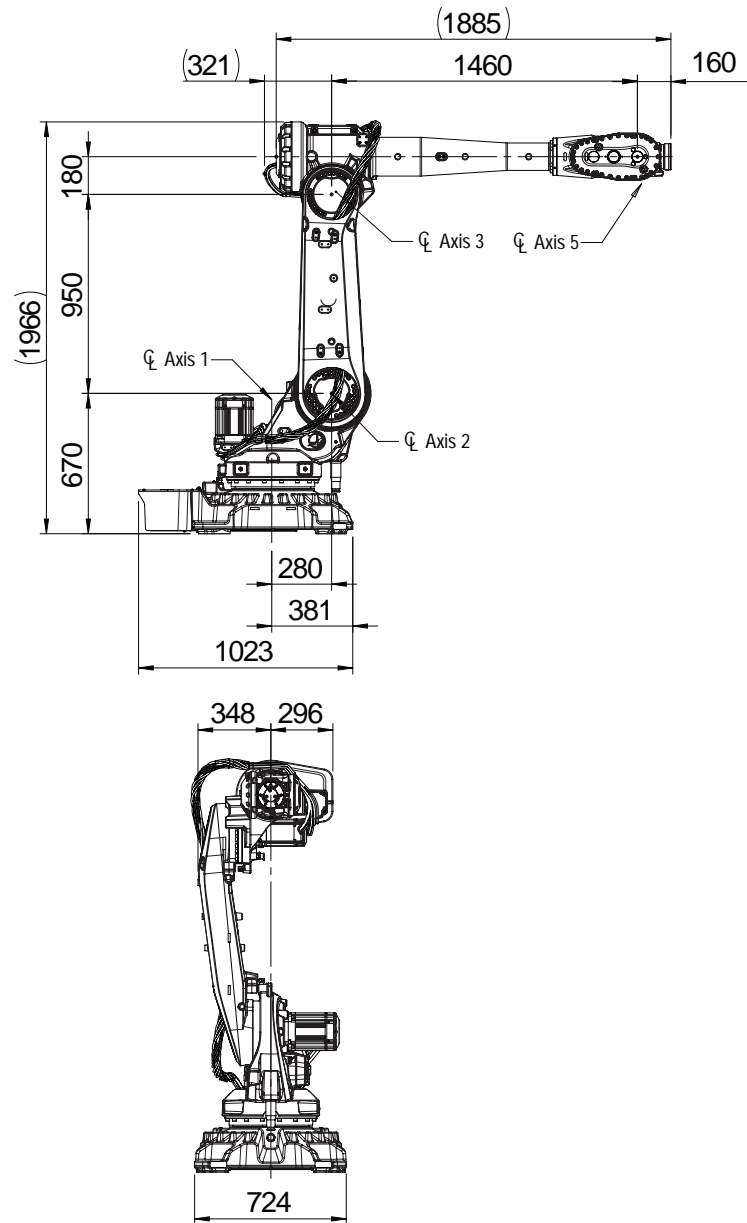
IRB 5710-110/2.3



xx2100000792

*Continues on next page*

IRB 5710-90/2.7



xx2100000794

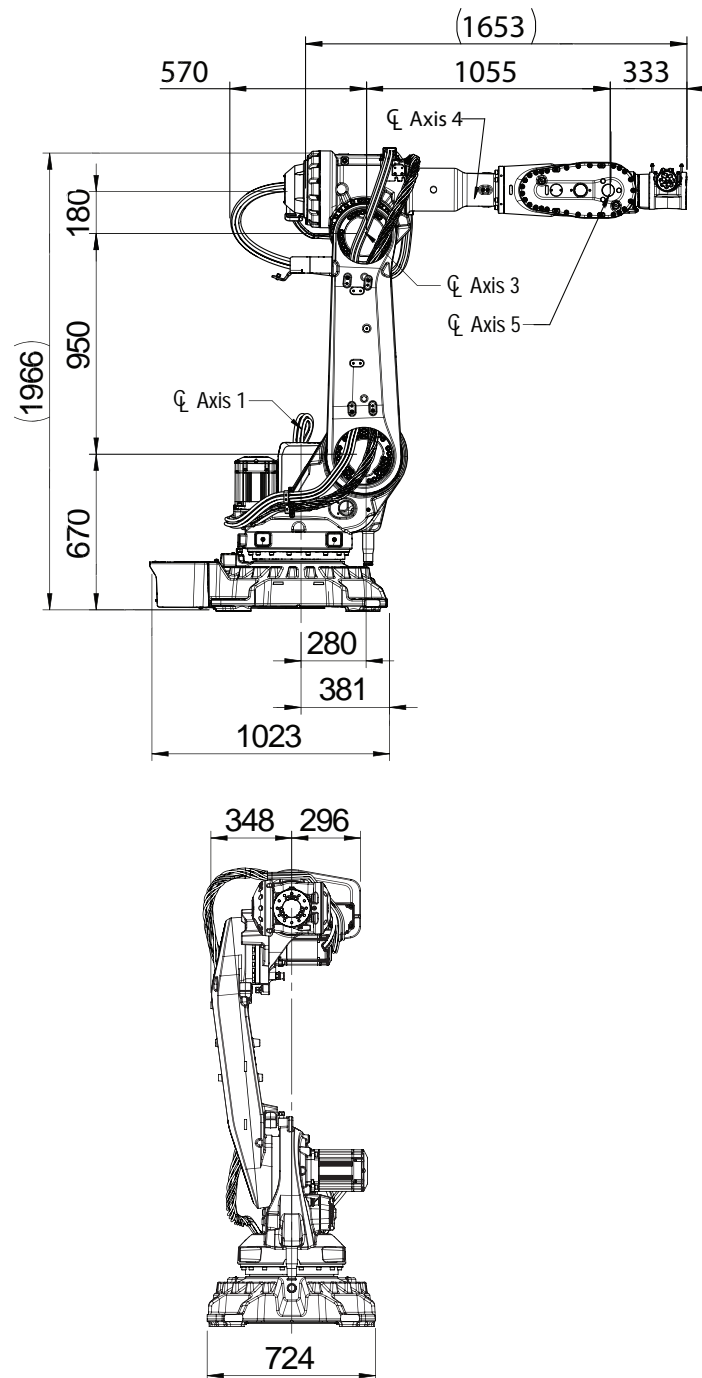
*Continues on next page*

### 3 Installation and commissioning

#### 3.3.9 Fitting equipment on the robot (robot dimensions)

*Continued*

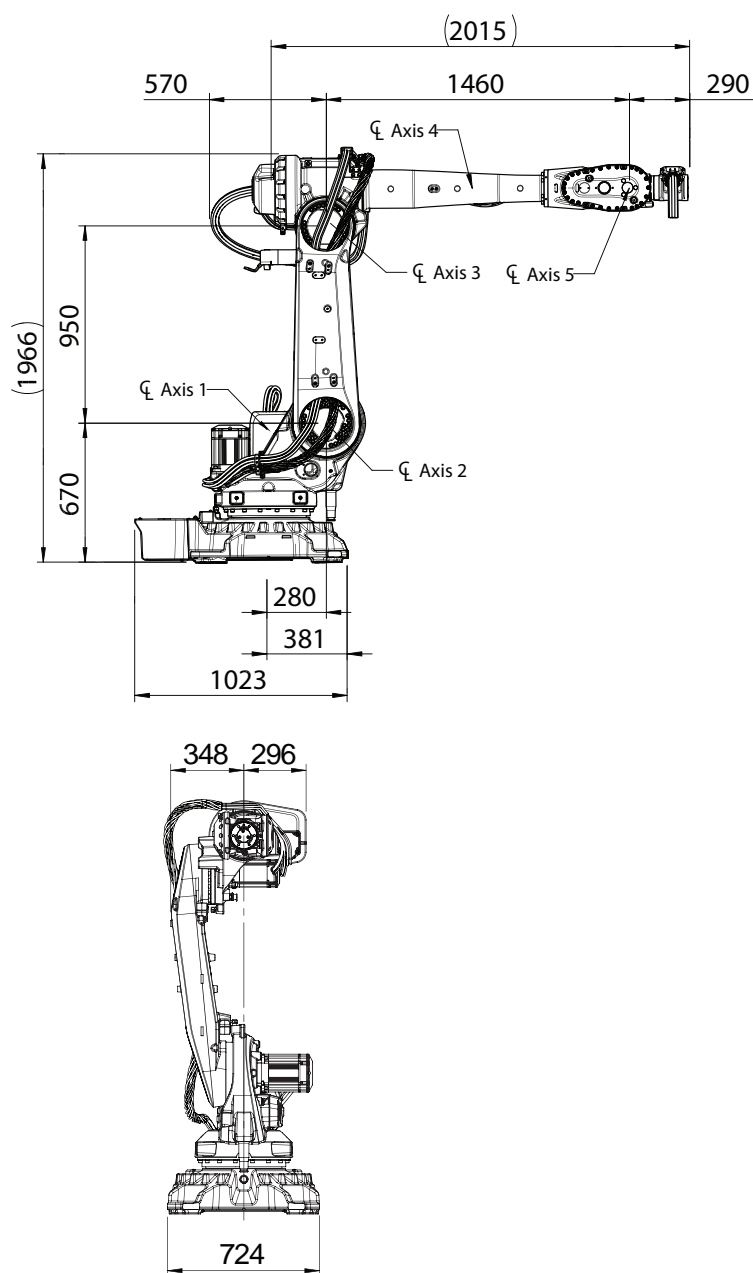
IRB 5710-90/2.3 LID



xx2100000793

*Continues on next page*

IRB 5710-70/2.7 LID



xx2100000795

#### Extra load on the robot

Extra loads can be mounted on robot. Definitions of dimensions and masses are shown in the following figures. The robot is supplied with holes for fitting extra equipment.

Maximum allowed arm load depends on center of gravity of arm load and robot payload.

*Continues on next page*

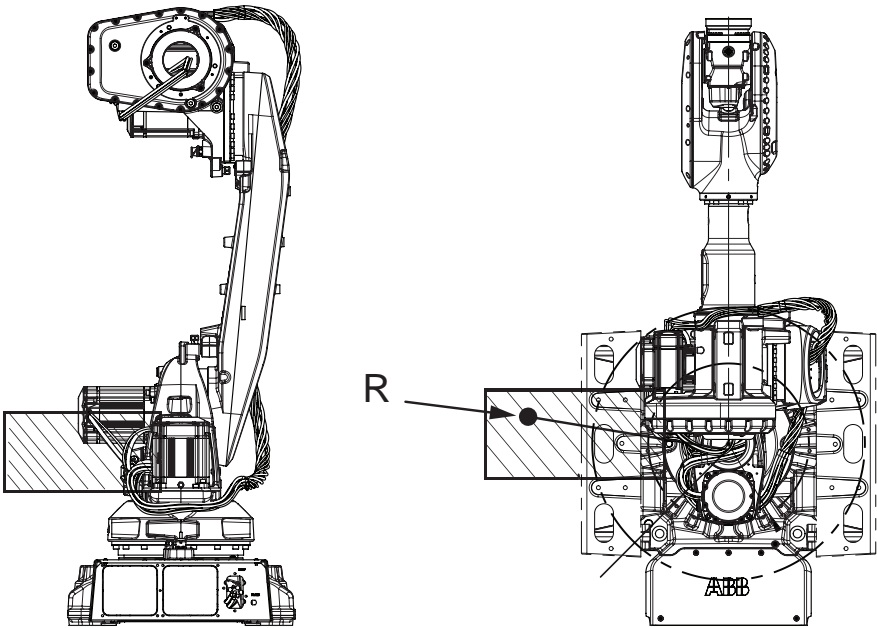
3 Installation and commissioning

3.3.9 Fitting equipment on the robot (robot dimensions)  
Continued

Frame

The table and figure shows allowed extra load on the frame.

|   | Description  |
|---|--|
| Permitted extra load on frame                   | $J_H = 100 \text{ kgm}^2$  |
| Recommended position (see the following figure) | $J_H = J_{H0} + M4 \times R^2$<br>where: <ul style="list-style-type: none"><li>• <math>J_{H0}</math> is the moment of inertia of the equipment</li><li>• <math>R</math> is the radius (m) from the center of axis 1</li><li>• <math>M4</math> is the total mass (kg) of the equipment including bracket and harness (<math>\leq 250 \text{ kg}</math>)</li></ul> |



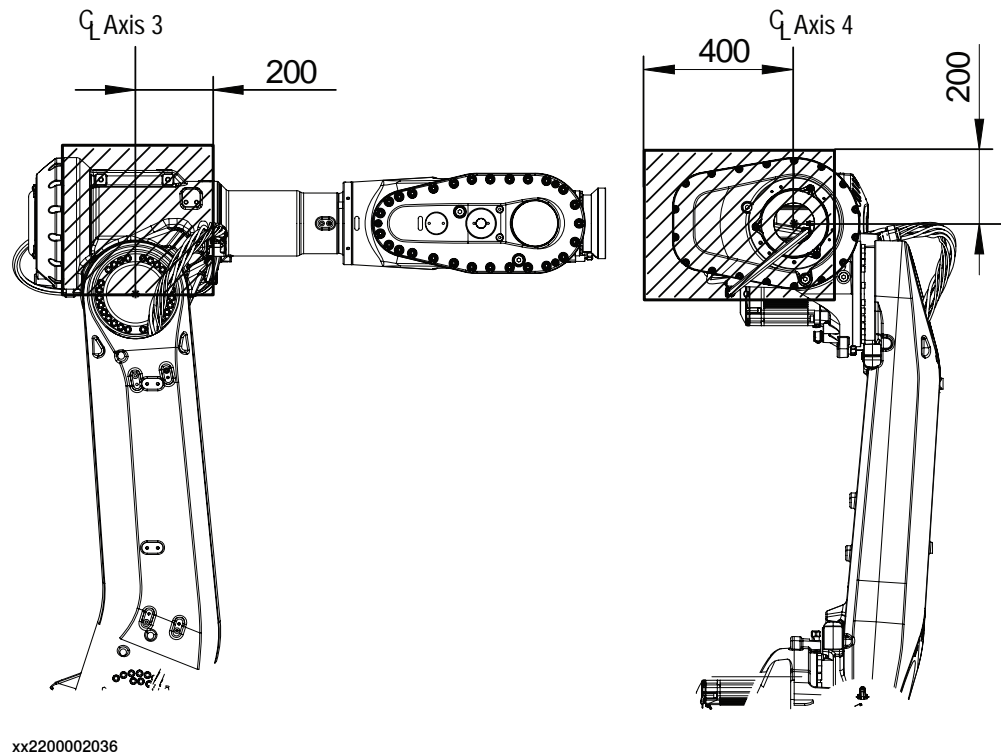
xx2100000824

Continues on next page



##### Upper arm

The figure shows the position for a nominal extra load of 20 kg on the upper arm housing on a standard robot. For more precise calculations of allowed extra load up to maximum 200 kg in combination with the reduced payload, use RobotStudio add-in RobotLoad or contact ABB.



##### Attachment holes for fitting extra equipment

The robot is supplied with holes for fitting extra equipment.

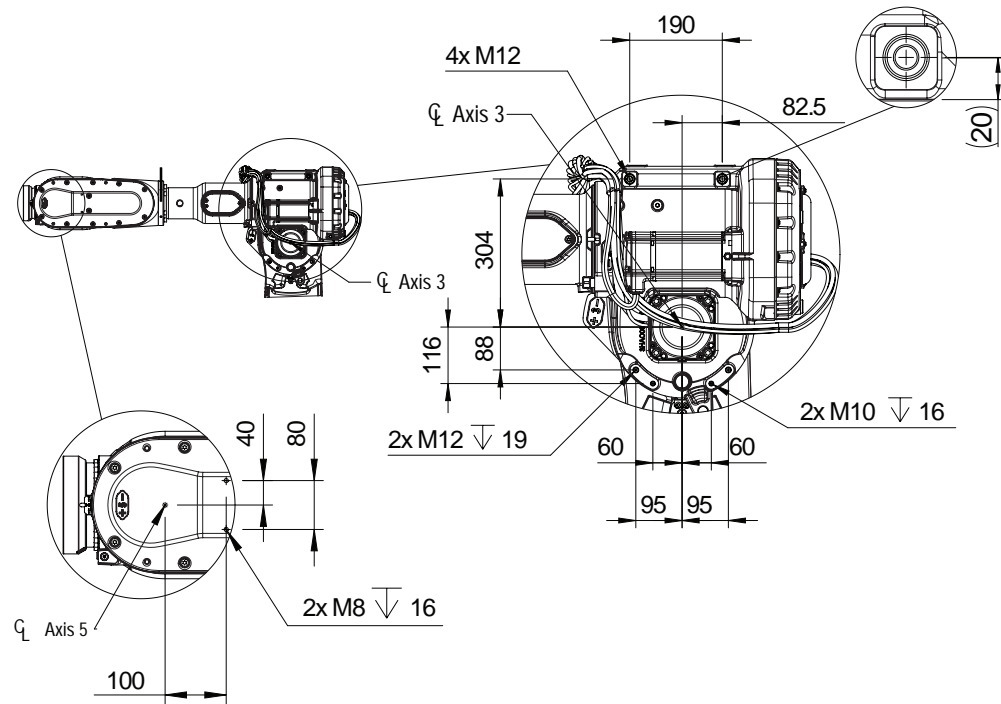
*Continues on next page*

### 3 Installation and commissioning

#### 3.3.9 Fitting equipment on the robot (robot dimensions)

*Continued*

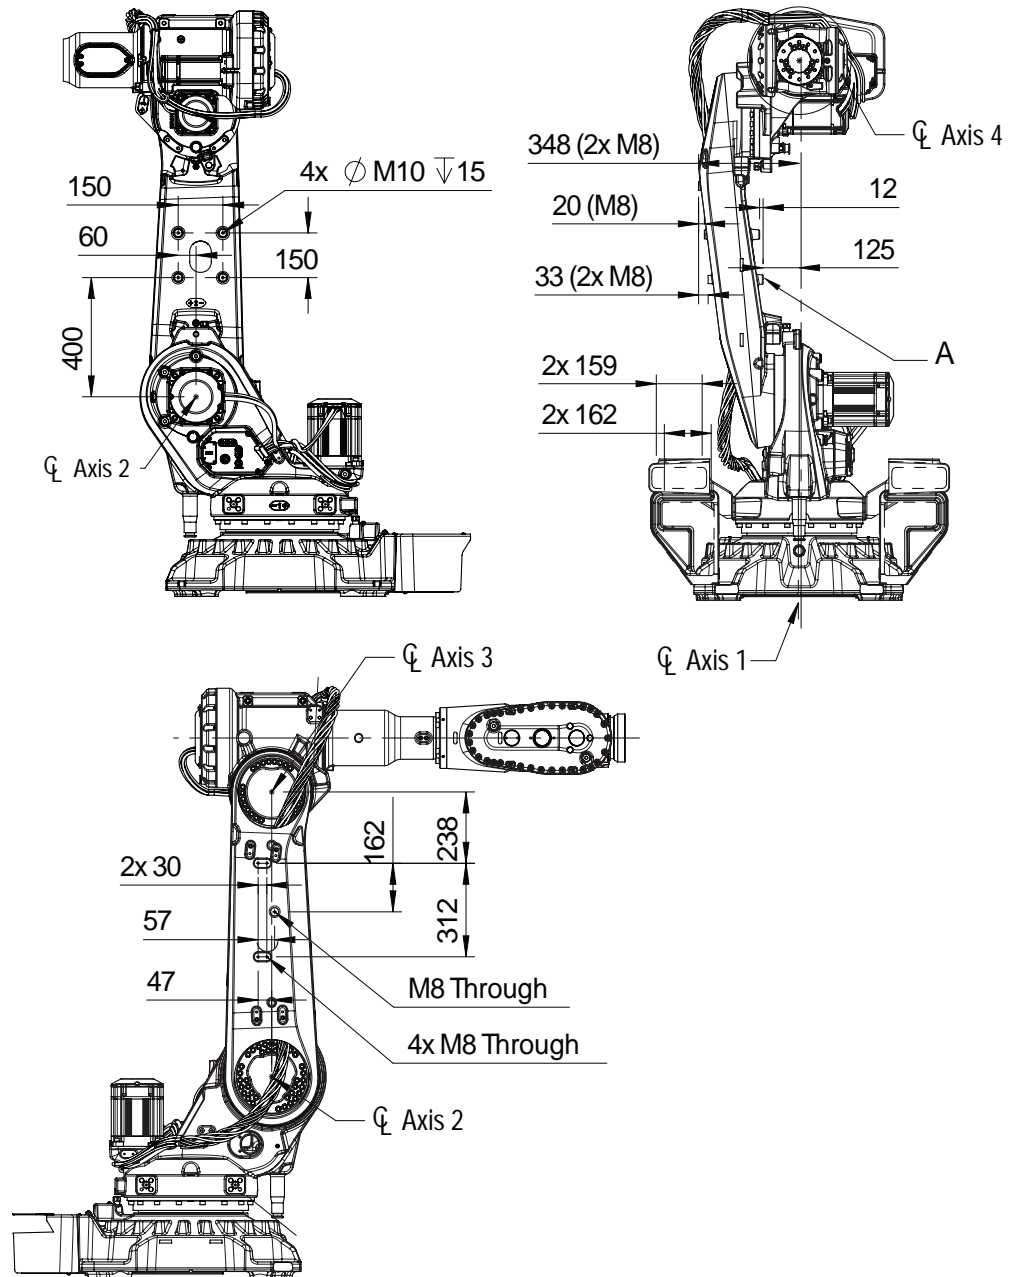
##### Upper arm



xx2100000810

*Continues on next page*

#### Lower arm



xx2100000811

|   |  |
|---|--|
| A | <p>Allowed positions for attachment holes.</p> <p>If no holes are present at delivery, they can be drilled at site: 4x M10 through. Avoid damaging cables when drilling.</p> |
|---|--|

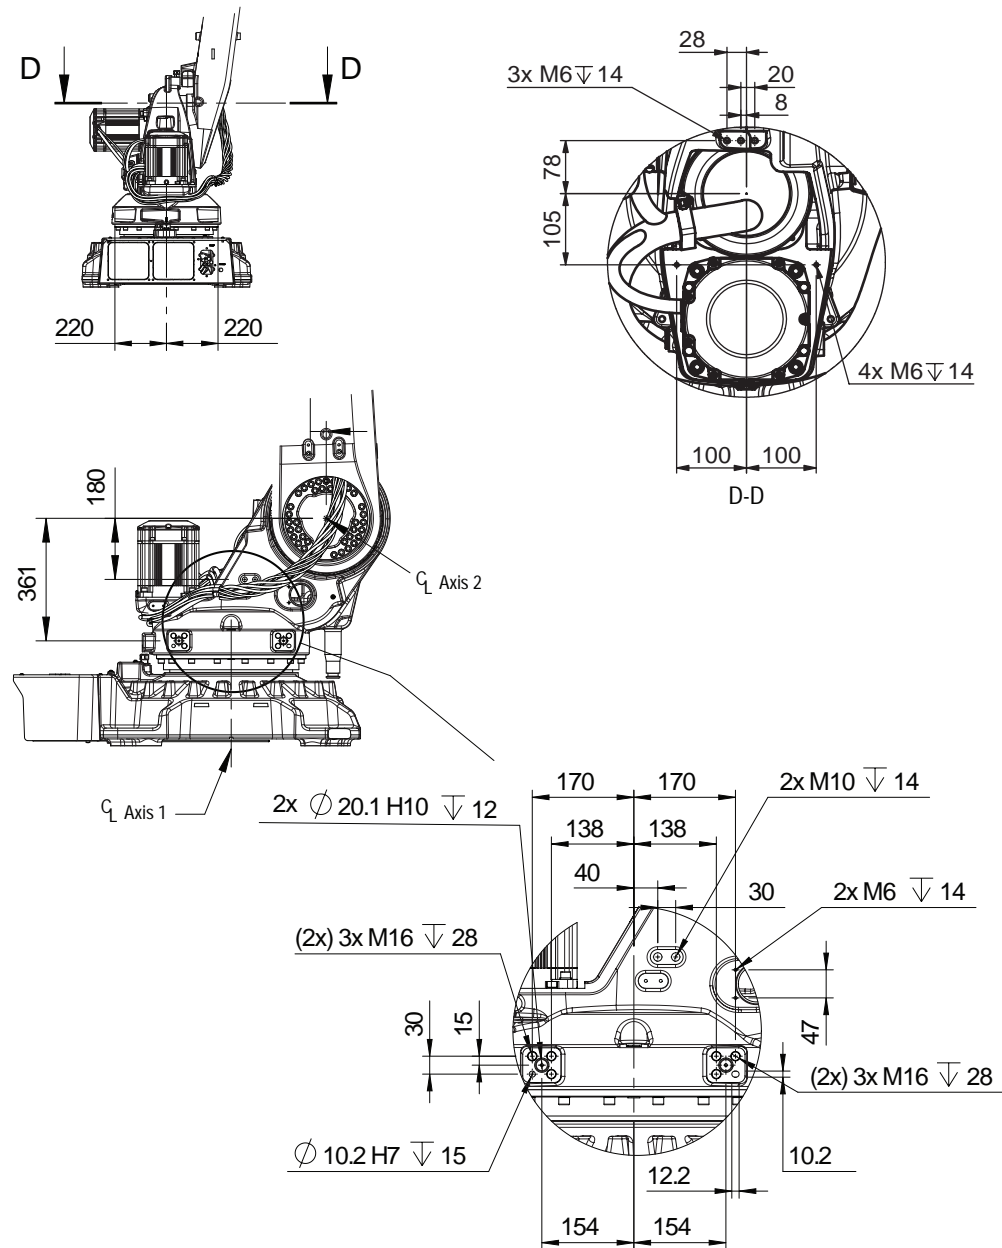
*Continues on next page*

### 3 Installation and commissioning

#### 3.3.9 Fitting equipment on the robot (robot dimensions)

*Continued*

##### Frame



xx2100000812

*Continues on next page*

#### Tool flange dimensions

| Robot variant    | Tool flange dimension |
|------------------|-----------------------|
| IRB 5710-110/2.3 | <p>xx2100000805</p>   |
| IRB 5710-90/2.7  | <p>xx2100000806</p>   |

*Continues on next page*

3 Installation and commissioning

3.3.9 Fitting equipment on the robot (robot dimensions)  
Continued

| Robot variant       | Tool flange dimension |
|---------------------|-----------------------|
| IRB 5710-90/2.3 LID | <p>xx2100000807</p>   |
| IRB 5710-70/2.7 LID | <p>xx2100000808</p>   |

Fastener quality

When fitting tools on the tool flange, only use screws with quality 12.9. For other equipment use suitable screws and tightening torque for your application.

## 3.4 Working range alterations

### 3.4.1 Adjusting the working range

#### Reasons for adjusting the manipulator working range

The working range of each manipulator axis is configured in the software. If there is a risk that the manipulator may collide with other objects at installation site, its working space should be limited. The manipulator must always be able to move freely within its entire working space.

#### Working range configurations

The parameter values for the axes working range can be altered within the allowed working range and according to available options for the robot, either to limit or to extend a default working range. Allowed working ranges and available options for each manipulator axis are specified in [Working range on page 46](#).

#### Mechanical stops on the manipulator

Mechanical stops are and can be installed on the manipulator as limiting devices to ensure that the manipulator axis does not exceed the working range values set in the software parameters.



#### Note

The mechanical stops are only installed as safety precaution to physically stop the robot from exceeding the working range set. A collision with a mechanical stop always requires actions for repair and troubleshooting.

| Axis   | Fixed mechanical stop <sup>i</sup> | Movable mechanical stop <sup>ii</sup>  |
|--------|------------------------------------|--|
| Axis 1 | yes                                | yes<br>The working range can be reduced by altering the parameter values. Installation of additional mechanical stops is recommended. See <a href="#">Installing movable mechanical stops on axis 1 (option 3323-1) on page 98</a> .<br>The working range can be extended (option 3324-1) by altering the parameter values and removing the movable mechanical stop pin. |
| Axis 2 | yes                                | no   |
| Axis 3 | yes                                | no   |
| Axis 4 | no                                 | no   |
| Axis 5 | yes                                | no   |
| Axis 6 | no                                 | no   |

<sup>i</sup> Part of the casting or fixed on the casting and can not /should not be removed.

<sup>ii</sup> Can be installed in one or more than one position, to ensure a reduced working range, or be removed to allow extended working range.

### 3 Installation and commissioning

#### 3.4.2 Installing movable mechanical stops on axis 1 (option 3323-1)

#### 3.4.2 Installing movable mechanical stops on axis 1 (option 3323-1)

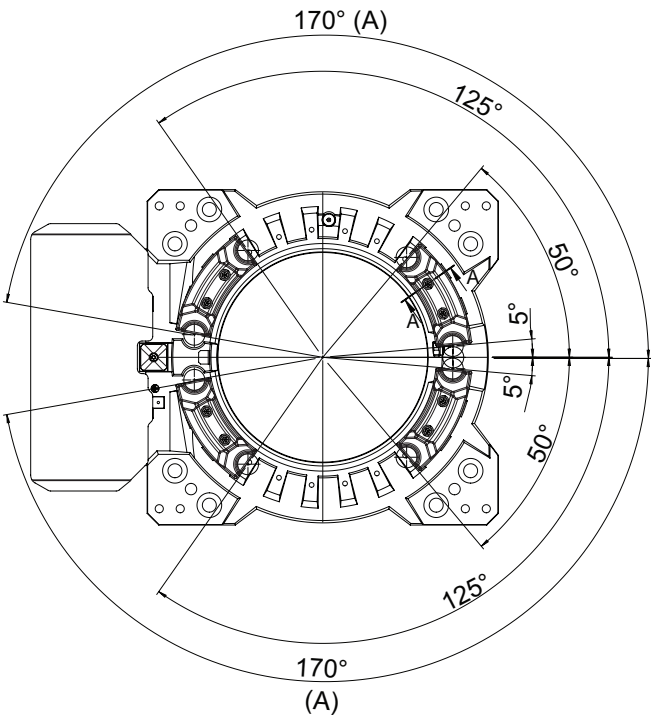
##### Reduction of the axis-1 working range

The working range of axis 1 is limited by system parameter configuration. To reduce the working range from default range, first adjust the parameter values and then install additional mechanical stops as a safety measure.

The movable mechanical stops reduce the working range according to the table.

| Graduation of limited working range | Reduction of working range                                |
|-------------------------------------|---|
| 15°                                 | from $\pm 5^\circ$ and $\pm 125^\circ$ in both directions |

Illustration, reduced working range



xx2100000973

|   |  |
|---|--|
| A | Standard working range without limitations |
|---|--|



##### WARNING

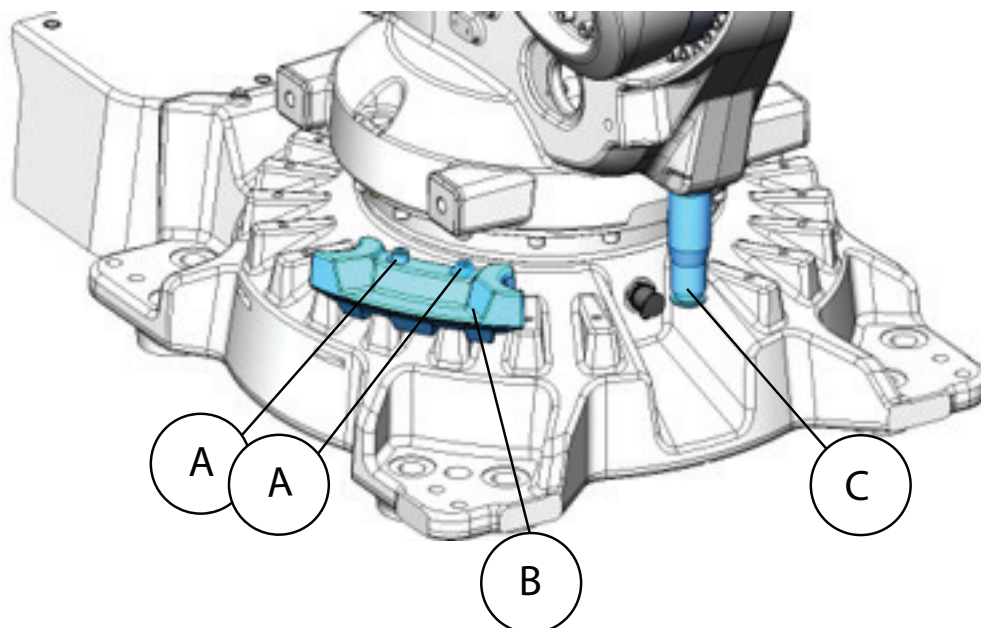
If the mechanical stop pin is deformed after a hard collision, it must be replaced! Deformed movable stops and/or additional stops as well as deformed attachment screws must also be replaced after a hard collision.

*Continues on next page*



#### Location of the mechanical stops

The mechanical stops are located as shown in the figure.



xx2100002647

|                |   |
|----------------|---|
| A <sup>i</sup> | Attachment screws M12x70 quality 12.9 and washers DIN 125 (2 pcs per additional mechanical stop); Tightening torque 60 Nm |
| B              | Movable mechanical stop   |
| C              | Mechanical stop pin axis-1  |

<sup>i</sup> There is a need to drill and make threaded M12 holes in base.  
Use the movable mechanical stop or the dents in the casting as a guide to drill.

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part                          | Article number | Note                            |
|-------------------------------------|----------------|---------------------------------|
| Movable mechanical stop set, axis 1 | 3HAC091079-001 | Screws and washers are enclosed |

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

Continues on next page



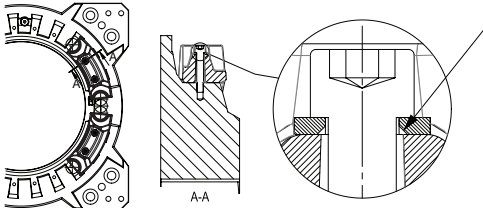

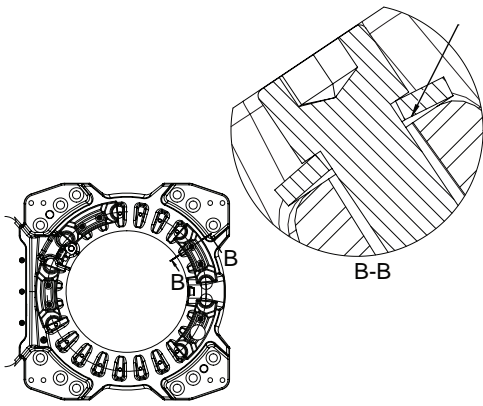
### 3 Installation and commissioning

#### 3.4.2 Installing movable mechanical stops on axis 1 (option 3323-1)


Continued

##### Installing the movable mechanical stops

Use this procedure to fit the additional mechanical stops. An assembly drawing is also enclosed with the product.

|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space.   |   |
| 2 | Use the additional mechanical stop as a template and drill fastening holes with dimension M12 at the base.  | See <a href="#">Location of the mechanical stops on page 99</a> . |
| 3 | Fit the additional mechanical stops according to the figure <a href="#">Location of the mechanical stops on page 99</a> .<br><br> <b>Note</b><br><b>Washer with chamfer:</b><br>Install the washer with the chamfer turned downwards.<br><br><br>xx2100000974<br><br> <b>Note</b><br><b>Spring washer:</b><br>Install the spring washer with orientation as shown in figure.<br><br><br>xx2400001308 | Tightening torque: 60 Nm.   |

Continues on next page

|   | Action   | Note  |
|---|--|---|
| 4 | Adjust the software working range limitations (system parameter configuration) to correspond to the mechanical limitations.  | The system parameters that must be changed ( <i>Upper joint bound</i> and <i>Lower joint bound</i> ) are described in <i>Technical reference manual - System parameters</i> . |
| 5 |  <b>DANGER</b><br><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

## 3 Installation and commissioning

### 3.4.3 Extended working range, axis 1 (option)

### 3.4.3 Extended working range, axis 1 (option)

#### Overview

The working range of axis 1 can be extended on a floor-mounted robot, from the default range limited by mechanical stops. The working range can be extended to  $\pm 220^\circ$ .



#### CAUTION

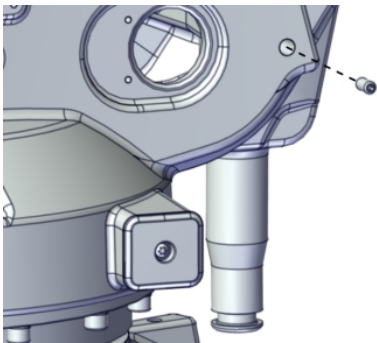
The option *Extended work range* enables an extension of the working range for axis 1, through a software configuration. With this option installed, the working range can exceed the range limited by the mechanical stop on axis 1. The working range shall be limited through the option *SafeMove*.

A risk analysis must be done to ensure that no risks remain when using option *Extended work range*, to limit the working range, and before removing the mechanical stops.

For information about the option *SafeMove*, see *Application manual - Functional safety and SafeMove*.

If the mechanical stop is removed, then the manipulator should have a marking for this, for example, a label. If the robot is delivered with the option *Extended work range*, then such a label is included on delivery.

#### Extending the working range

|   | Action  | Note/Illustration  |
|---|---|--|
| 1 | Configure the safety setup and verify it by test.   |  |
| 2 | Hold the mechanical stop pin in a firm grip, and remove it by unscrewing the attachment screw.  | <br>xx2100001410   |
| 3 | In RobotWare, redefine the working range limitations in the system parameters, topic <i>Motion</i> . The <i>Arm</i> parameters <i>Upper Joint Bound</i> and <i>Lower Joint Bound</i> can be changed to the values corresponding to the actual installation. | With the option <i>Extended working range</i> , the maximum value for the system parameters <i>Upper Joint Bound</i> and <i>Lower Joint Bound</i> is 3.84 respectively -3.84. The values are in radians, that is 3.84 radians = 220 degrees. |

#### Related information

The system parameters are described in detail in *Technical reference manual - System parameters*.

*Continues on next page*

For more information about SafeMove, see *Application manual - Functional safety and SafeMove*.

See [References on page 10](#) for document numbers.

## 3 Installation and commissioning

### 3.5.1 Robot cabling and connection points

## 3.5 Electrical connections

### 3.5.1 Robot cabling and connection points

#### Introduction

Connect the robot and controller to each other after securing them to the foundation. The lists below specify which cables to use for each respective application.



#### DANGER

Turn off the main power before connecting any cables.



#### CAUTION

Verify that the serial number is according to the number(s) in the *Declaration of Incorporation* (DoI).

#### Main cable categories

The following table specifies cabling categories between the robot and the controller. Some of the cabling belong to optional applications.

| Cable category  | Description  |
|-----------------|--|
| Robot cables    | Handles power supply to and control of the robot's motors as well as feedback from the serial measurement board. Specified in the table <a href="#">Robot cables on page 104</a> .   |
| Fan cables      | Handles supply to and feedback from any cooling fan on the robot.  |
| Customer cables | Handles communication with equipment fitted on the robot by the customer, low voltage signals and high voltage power supply + protective ground.<br>The customer cables also handle databus communication. See the product manual for the controller, see document number in <a href="#">References on page 10</a> . |

#### Robot cables

These cables are included in the standard delivery. They are completely pre-manufactured and ready to plug in.

| Cable sub-category   | Description  | Connection point, cabinet | Connection point, robot |
|----------------------|--|---------------------------|-------------------------|
| Robot cables, power  | Transfers drive power from the drive units in the control cabinet to the robot motors. | X1                        | R1.MP                   |
| Robot cable, signals | Transfers resolver data from and power supply to the serial measurement board.         | X2                        | R1.SMB                  |

*Continues on next page*

##### Robot cable, power

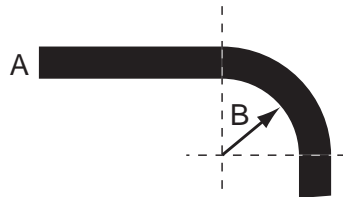
| Power cable length | Article number |
|--------------------|----------------|
| Power cable 7 m    | 3HAC026787-001 |
| Power cable 15 m   | 3HAC026787-002 |
| Power cable 22 m   | 3HAC026787-003 |
| Power cable 30 m   | 3HAC026787-004 |

##### Robot cable, signals

| Signal cable length          | Article number |
|------------------------------|----------------|
| Signal cable, shielded: 7 m  | 3HAC2493-1     |
| Signal cable, shielded: 15 m | 3HAC2530-1     |
| Signal cable, shielded: 22 m | 3HAC2540-1     |
| Signal cable, shielded: 30 m | 3HAC2566-1     |

##### Bending radius for static floor cables

The minimum bending radius is 10 times the cable diameter for static floor cables.



xx1600002016

|   |              |
|---|--------------|
| A | Diameter     |
| B | Diameter x10 |

*Continues on next page*

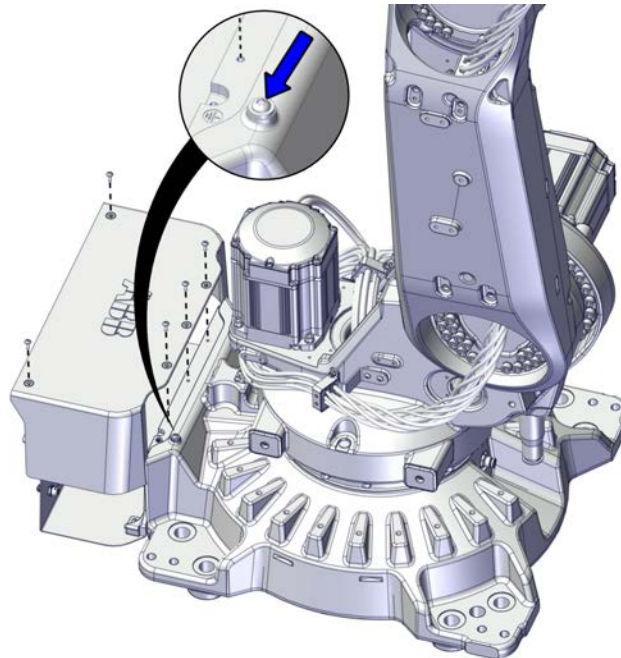
### 3 Installation and commissioning

#### 3.5.1 Robot cabling and connection points

*Continued*

##### Grounding and bonding point on manipulator

There is a grounding/bonding point on the manipulator base. The grounding/bonding point is used for potential equalizing between control cabinet, manipulator and any peripheral devices.



xx2100000853

##### Customer cables - CP/CS cable

| CP/CS cable length  | Article number |
|---------------------|----------------|
| Harness CP/CS: 7 m  | 3HAC089711-001 |
| Harness CP/CS: 15 m | 3HAC089711-002 |
| Harness CP/CS: 30 m | 3HAC089711-004 |

##### Customer cables - Ethernet floor cable

| Ethernet floor cable length | Article number |
|-----------------------------|----------------|
| Ethernet cable: 7 m         | 3HAC079476-001 |
| Ethernet cable: 15 m        | 3HAC079476-002 |
| Ethernet cable: 22 m        | 3HAC079476-003 |
| Ethernet cable: 30 m        | 3HAC079476-004 |



### 3.6 Test run after installation, maintenance, or repair

#### Safe handling

Use the following procedure after installation, maintenance, or repair, before initiating motion.



#### **DANGER**

Initiating motion without fulfilling the following aspects, may increase the risk for injury or cause damage to the robot.

|   | Action   |
|---|--|
| 1 | Remove all tools and foreign objects from the robot and its working area.  |
| 2 | Verify that the robot is properly secured to its position by all screws, before it is powered up.                                  |
| 3 | Verify that any safety equipment installed to secure the position or restrict the robot motion during service activity is removed. |
| 4 | Verify that the fixture and work piece are well secured, if applicable.  |
| 5 | Verify that all safety equipment is installed, as designed for the application.  |
| 6 | Verify that no personnel are inside the safeguarded space.   |
| 7 | If maintenance or repair has been done, verify the function of the part that was maintained.                                       |
| 8 | Verify the application in the operating mode manual reduced speed.   |

#### Collision risks



#### **CAUTION**

When programming the movements of the robot, always identify potential collision risks before initiating motion.

**This page is intentionally left blank**

## 4 Maintenance

### 4.1 Introduction

---

#### Structure of this chapter

This chapter describes all the maintenance activities recommended for the IRB 5710.

It is based on the maintenance schedule found at the beginning of the chapter. The schedule contains information about required maintenance activities including intervals, and refers to procedures for the activities.

Each procedure contains all the information required to perform the activity, including required tools and materials.

The procedures are gathered in different sections and divided according to the maintenance activity.

---

#### Safety information

Observe all safety information before conducting any maintenance work.

There are general safety aspects that must be read through, as well as more specific safety information that describes the danger and safety risks when performing the procedures. Read the chapter [Safety on page 15](#) before performing any maintenance work.

The maintenance must be done by qualified personnel in accordance with the safety requirements set forth in the applicable national and regional standards and regulations.



#### Note

If the IRB 5710 is connected to power, always make sure that the IRB 5710 is connected to protective earth and a residual current device (RCD) before starting any maintenance work.

For more information see:

- *Product manual - OmniCore V250XT Type B*
- *Product manual - OmniCore V400XT*
- [Robot cabling and connection points on page 104](#).

## 4 Maintenance

---

### 4.2.1 Specification of maintenance intervals

## 4.2 Maintenance schedule and expected component life

### 4.2.1 Specification of maintenance intervals

---

#### Introduction

The intervals are specified in different ways depending on the type of maintenance activity to be carried out and the working conditions of the IRB 5710:

- Calendar time: specified in months regardless of whether the system is running or not.
- Operating time: specified in operating hours. More frequent running means more frequent maintenance activities.

Robots with the functionality *Service Information System* activated can show active counters in the device browser in RobotStudio, or on the FlexPendant.

## 4.2.2 Maintenance schedule

### Scheduled and non-predictable maintenance

The robot must be maintained regularly to ensure proper function. The maintenance activities and intervals are specified in the table below.

Non-predictable situations also give rise to inspections of the robot. Any damages must be attended to immediately!

### Life of each component

The inspection intervals *do not* specify the life of each component. Values for these are specified in the section [Expected component life on page 113](#)

### Maintenance schedule

| Maintenance activities                | Regularly | After first 150 hours | Every 6 months | Every 12 months | Every 36 months | Every 8,000 hours <sup>i</sup> | Every 12,000 hours <sup>i</sup> | Every 20,000 hours | Every 40,000 hours <sup>i</sup> | Reference  |
|---------------------------------------|-----------|-----------------------|----------------|-----------------|-----------------|--------------------------------|---------------------------------|--------------------|---------------------------------|--|
| Cleaning the seals                    |           | x                     |                |                 |                 |                                |                                 |                    |                                 | Minor seepage of grease from the seals can occur, especially during the first running hours. Wipe down affected areas with a dry cloth.  |
| Cleaning the robot                    | x         |                       |                |                 |                 |                                |                                 |                    |                                 | <a href="#">Cleaning the IRB 5710 on page 190</a>  |
| Inspecting the dampers                |           |                       |                | x               |                 |                                |                                 |                    |                                 | <a href="#">Inspecting the dampers on page 118</a>   |
| Inspecting the information labels     |           |                       |                | x               |                 |                                |                                 |                    |                                 | <a href="#">Inspecting the information labels on page 120</a>  |
| Inspecting the mechanical stop        |           |                       |                | x               |                 |                                |                                 |                    |                                 | <a href="#">Inspecting the axis-1 mechanical stop on page 123</a>  |
| Inspecting the motor seal             |           |                       |                | x               |                 |                                |                                 |                    |                                 | <a href="#">Inspecting the motor seal on page 114</a>  |
| Inspecting the oil level in gearboxes |           |                       |                |                 |                 |                                |                                 |                    |                                 | Inspect the oil level in the actual gearbox if there is a suspected leakage, after an oil change or a maintenance or repair activity where draining and filling oil is required. |
| Inspecting the robot harness          |           |                       |                | x <sup>ii</sup> |                 |                                |                                 |                    |                                 | <a href="#">Inspecting the cable harness on page 116</a>   |
| Changing the oil in axis-1 gearbox    |           |                       |                |                 |                 |                                |                                 | x                  |                                 | <a href="#">Changing the oil in axis-1 gearbox on page 150</a>   |

*Continues on next page*

## 4 Maintenance

### 4.2.2 Maintenance schedule

*Continued*

| Maintenance activities             | Regularly | After first 150 hours | Every 6 months | Every 12 months | Every 36 months  | Every 8,000 hours <sup>i</sup> | Every 12,000 hours <sup>i</sup> | Every 20,000 hours | Every 40,000 hours <sup>i</sup> | Reference  |
|------------------------------------|-----------|-----------------------|----------------|-----------------|------------------|--------------------------------|---------------------------------|--------------------|---------------------------------|--|
| Changing the oil in axis-2 gearbox |           |                       |                |                 |                  |                                |                                 | x                  |                                 | <a href="#">Changing the oil in axis-2 gearbox on page 161</a> |
| Changing the oil in axis-3 gearbox |           |                       |                |                 |                  |                                |                                 | x                  |                                 | <a href="#">Changing the oil in axis-3 gearbox on page 167</a> |
| Changing the oil in axis-4 gearbox |           |                       |                |                 |                  |                                |                                 | x                  |                                 | <a href="#">Changing the oil in axis-4 gearbox on page 172</a> |
| Changing the oil in axis-5 gearbox |           |                       |                |                 |                  |                                |                                 | x                  |                                 | <a href="#">Changing the oil in axis-5 gearbox on page 177</a> |
| Changing the oil in axis-6 gearbox |           |                       |                |                 |                  |                                |                                 | x                  |                                 | <a href="#">Changing the oil in axis-6 gearbox on page 182</a> |
| Replacing the SMB battery pack     |           |                       |                |                 | x <sup>iii</sup> |                                |                                 |                    |                                 | <a href="#">Replacing the SMB battery on page 187</a>          |

<sup>i</sup> Operating hours counted by the DTC = Duty Time Counter

<sup>ii</sup> Replace when damage or cracks is detected or life limit is approaching that specified in section [Expected component life on page 113](#).

<sup>iii</sup> The battery is to be replaced at given maintenance interval or at battery low alert.

### 4.2.3 Expected component life

#### Expected life depends on usage

The expected life of a specific component of the robot can vary greatly depending on how hard it is run.

#### Expected component life

| Component                                   | Expected life              | Note   |
|---|----------------------------|--|
| Cable harness, normal usage <sup>i</sup>    | 40,000 hours <sup>ii</sup> | Not including DressPack or optional upper arm harnesses.                               |
| Cable harness, extreme usage <sup>iii</sup> | 20,000 hours <sup>ii</sup> | Not including DressPack or optional upper arm harnesses.                               |
| Gearboxes                                   | 40,000 hours               | The SIS system is described in <i>Operating manual - Integrator's guide OmniCore</i> . |

<sup>i</sup> Examples of "normal usage" in regard to movement: most material handling applications and limited use of bending backwards mode of axis 3.

<sup>ii</sup> Severe chemical or thermal environments, or similar environments, can result in shortened life expectancy.

<sup>iii</sup> Examples of "extreme usage" in regard to movement: press tending, very severe palletizing applications, major use of axis 1 movement and major use of bending backwards of axis 3.

## 4 Maintenance

---

### 4.3.1 Inspecting the motor seal

## 4.3 Inspection activities

### 4.3.1 Inspecting the motor seal

---

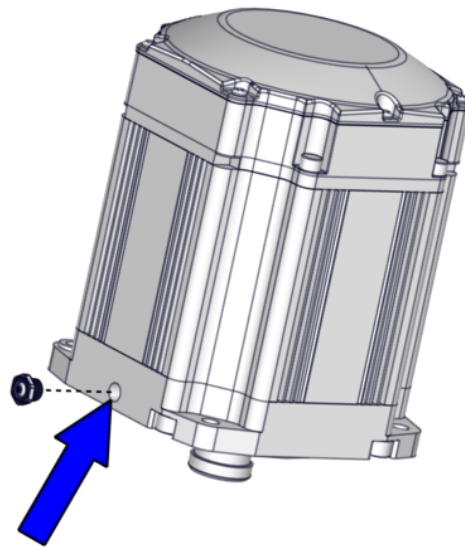
#### Purpose of evacuation holes

The motors include evacuation on the motor flange to indicate failure of primary sealing between the gearbox and the motor.

---

#### Location of evacuation hole on motor

The evacuation hole is located on each motor flange. The figure shows axis-1 motor as an example.



xx2300001602

#### Plug in the evacuation hole

New motors have a transparent plug/sight glass installed in the evacuation hole. Remove the plug or drill a drainage hole with diameter 3 mm, if an open evacuation hole is required instead.




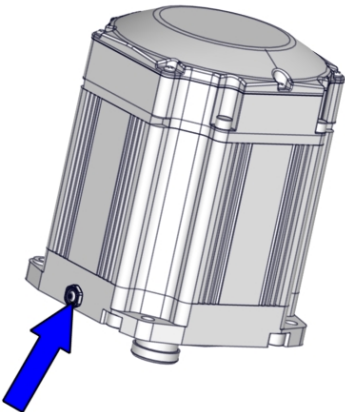


xx2200002188

*Continues on next page*



## Inspecting the evacuation hole

|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the robot working area.  |   |
| 2 |  <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .   |   |
| 3 | Do a leakage check of the sight glass/evacuation hole of each motor.<br>If any oil is available on the sight glass or if any oil has been spilled out from the evacuation hole, replacement of the motor is recommended.<br> <b>Note</b><br>If oil is present in the evacuation it is an indication that the primary seal of the motor is leaking. A secondary seal after the evacuation is keeping the oil out from the motor, but it is still recommended to replace the motor at a suitable timing if oil is present in the evacuation. | <br>xx2300001603<br>Replacing of motors is described in the repair chapter <a href="#">Motors on page 354</a> . |

## 4 Maintenance

### 4.3.2 Inspecting the cable harness

### 4.3.2 Inspecting the cable harness

#### Location of cable harness

The cable harness is located as shown in the figure.




xx2100000483

#### Required tools

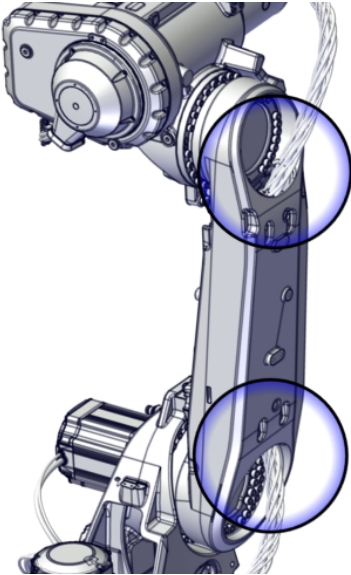

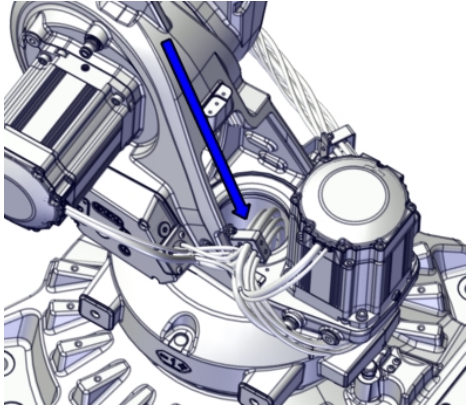
Visual inspection, no tools are needed.

#### Inspecting the cable harness

Use this procedure to inspect cable harness of axes 1-6.

|   | Action   | Note |
|---|--|------|
| 1 | <div> <b>DANGER</b></div> <p>Turn off all:</p> <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> <p>to the robot, before entering the safe-guarded space.</p> |      |

*Continues on next page*

|   | Action   | Note   |
|---|--|--|
| 2 | <p>Make an overall inspection of the cable harness in order to detect wear and damage.</p> <p>Pay special attention to the areas of axis-2 and axis-3 movement, shown in the figure. Make sure the cabling is not damaged between the cable brackets in these areas.</p>   |  <p>xx2100001472</p>  |
| 3 | <p>Check that all visible cable brackets, velcro straps and attachments are properly secured, by following the cable harness from the base to the wrist.</p>   |  |
| 4 | <p>Check the motor cables visually for any damage.</p>   |  |
| 5 | <p>Check the connectors and cables at the base visually for any damage.</p>  |  |
| 6 | <p>Check the cabling going through the protection tube, to detect possible cable chafing, by using your hands inside the tube to feel the cables. Ensure that the cables are undamaged.</p> <p>Remove any objects that may cause possible cable chafing.</p> <p>Replace damaged cabling, if any.</p> <p> <b>CAUTION</b></p> <p>Sharp debris might occur. Always wear protective gloves.</p> |  <p>xx2100001473</p> |
| 7 | <p>Replace the cable harness if wear, cracks or damage is detected.</p>  | <p>See <a href="#">Removing the cable harness on page 287</a>.</p>                                       |

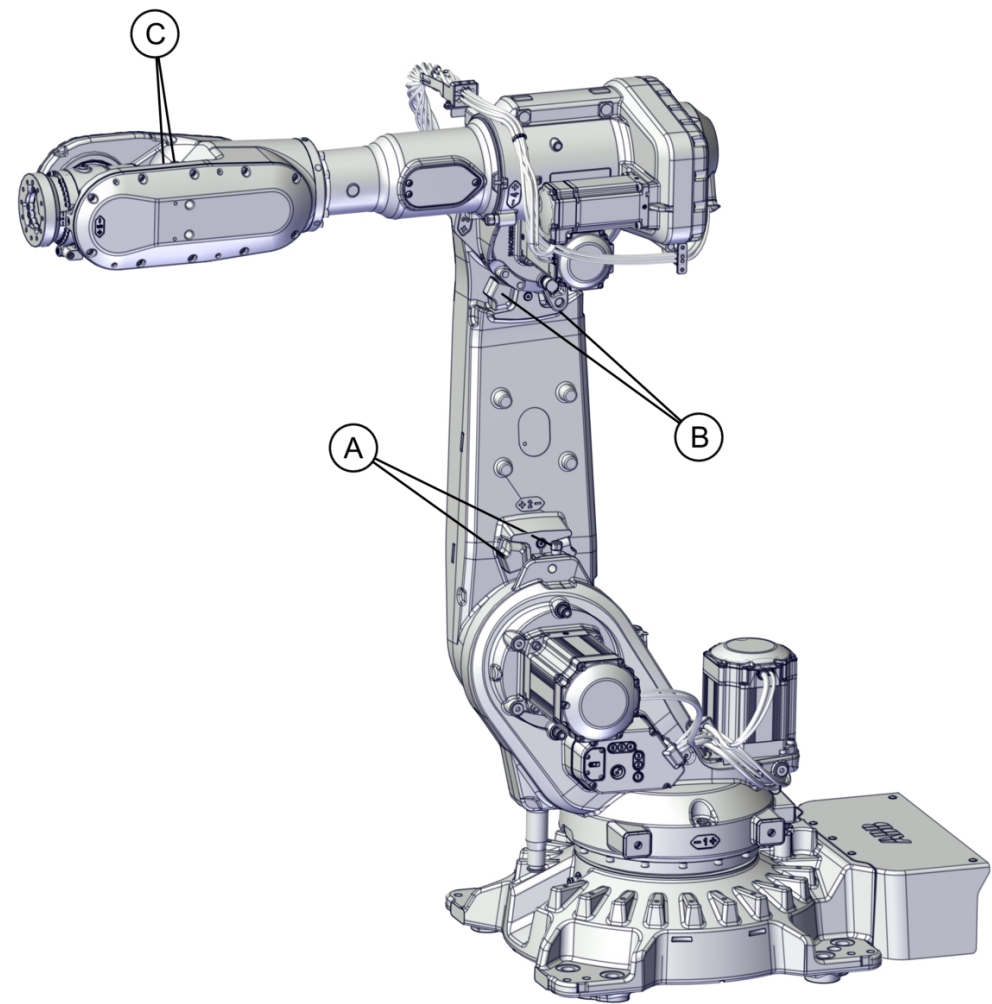
## 4 Maintenance

### 4.3.3 Inspecting the dampers

### 4.3.3 Inspecting the dampers


#### Location of the dampers

The figure below shows the location of all the dampers to be inspected.



xx2100002296

#### Required spare parts

**Note**

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number | Note           |
|------------|----------------|----------------|
| Damper     | 3HAC12320-1    | Axis 2, axis 3 |
| Damper     | 3HAC054956-001 | Axis 5         |

Continues on next page

**Required equipment**

Visual inspection, no tools are required.

**Inspecting, dampers**

The procedure below details how to inspect the dampers.

**Note**

A damaged damper must be replaced.

|   | Action  | Note   |
|---|---|--|
| 1 | <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |  |
| 2 | Check all dampers for damage, cracks or existing impressions larger than 1 mm.  |  |
| 3 | Check attachment screws for deformation.  |  |
| 4 | If any damage is detected, the damper must be replaced with a new one.  | Attachment screws:<br>Axis 2 and axis 3: M6x60 8.8-A2F (9ADA624-65 )<br>Axis 5: M6x25 8.8-A2F (9ADA618-58 )<br>Locking liquid: Loctite 2400 (or equivalent Loctite 243) (-). |
| 5 | <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> .  |  |

## 4 Maintenance

### 4.3.4 Inspecting the information labels

### 4.3.4 Inspecting the information labels

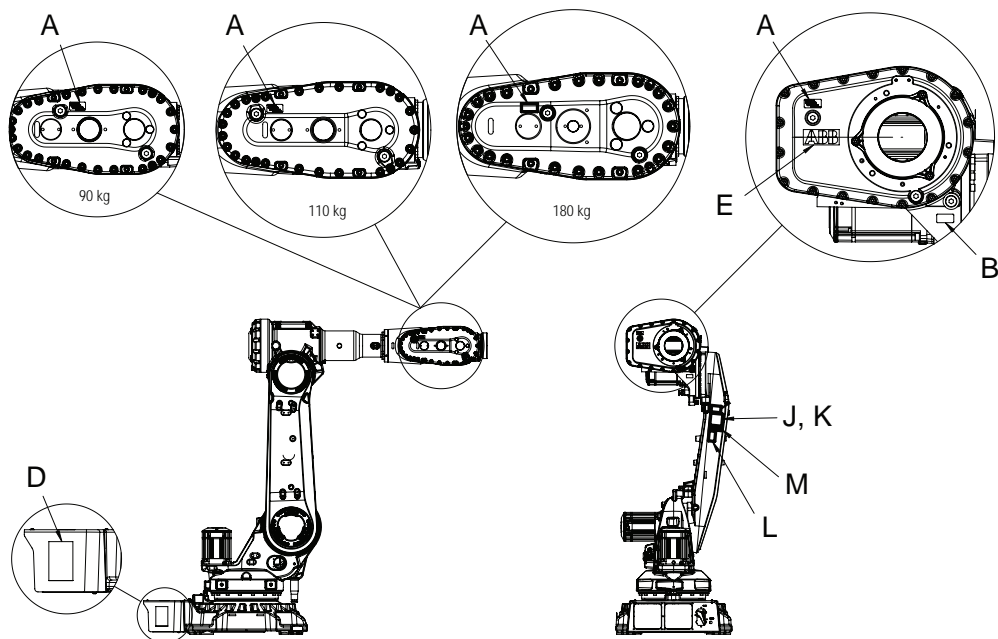
#### Required spare parts



#### Note

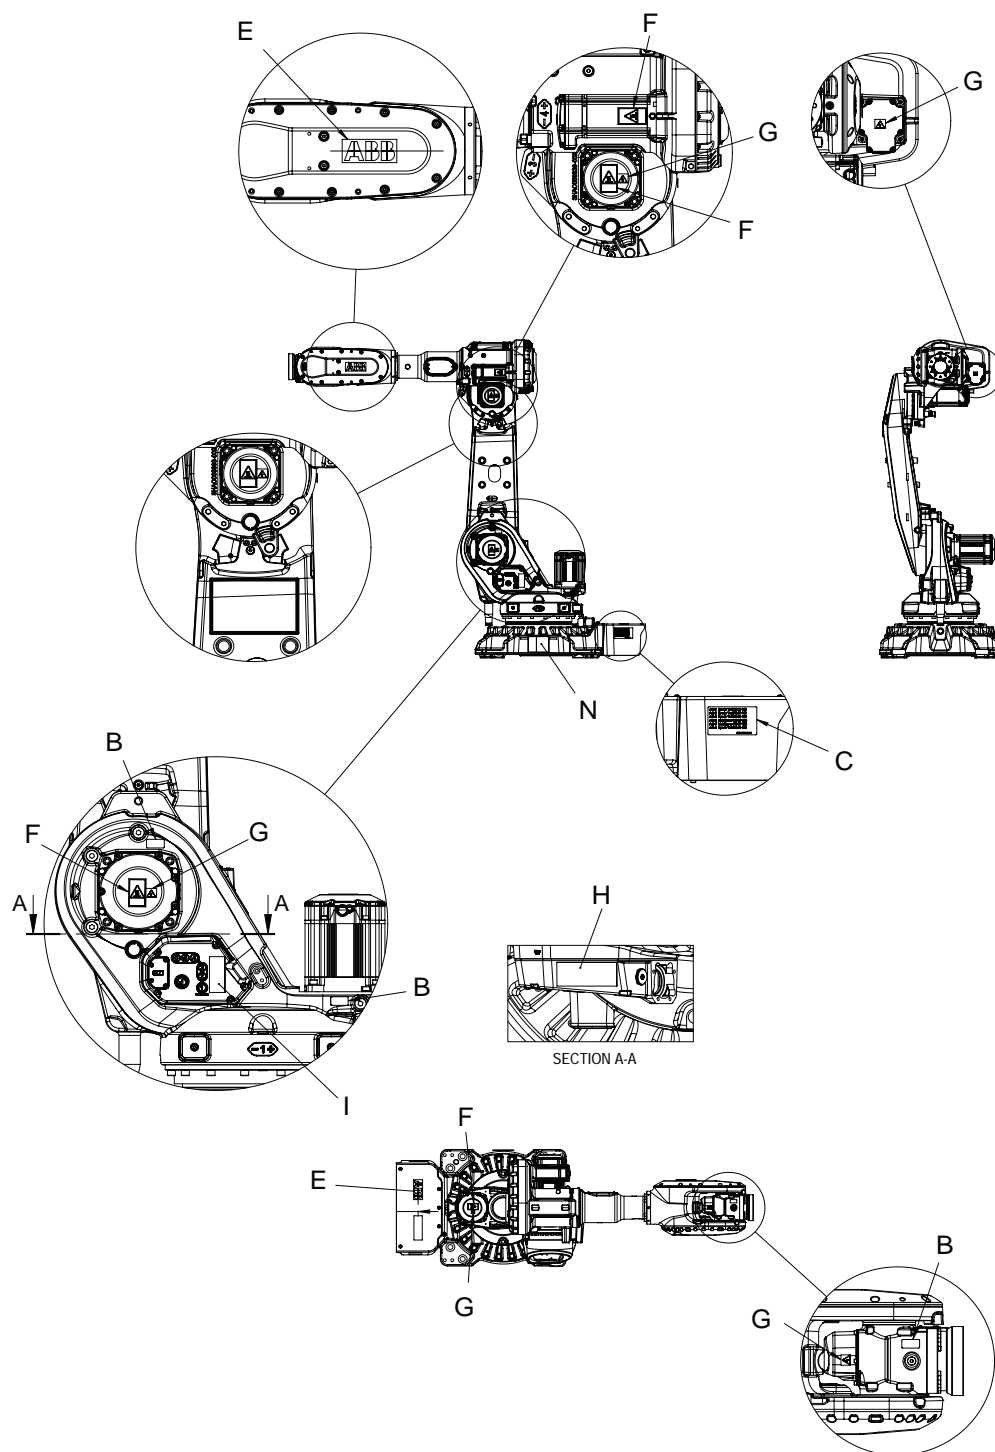
The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

The figures show the location of the information labels to be inspected. The symbols are described in section [Safety symbols on manipulator labels on page 19](#).



xx2100002292

*Continues on next page*



xx2100002291

|   | Spare part number | Description                               |
|---|-------------------|---|
| A | 3HAC021485-001    | Lubrication label<br>Mobilgear 600 XP 320 |
| B | 3HAC032726-001    | Lubrication label<br>Kyodo Yushi TMO 150  |
| C | 3HAC032905-001    | Lubrication label                         |

Continues on next page

## 4 Maintenance

### 4.3.4 Inspecting the information labels


*Continued*

|   | Spare part number | Description  |
|---|-------------------|--|
| D | 3HAC9191-1        | Warning label<br>Tipping robot                                 |
| E | 3HAC0453-5        | ABB logotype label   |
| F | 29454489-16       | Warning label<br>Hot surface                                   |
| G | 3HAC1589-1        | Warning label<br>Electrical (flash)                            |
| H | 3HAC076756-001    | Warning label / Instruction label<br>Moving robot / MOTORS OFF |
| I | 3HAC076755-001    | Instruction label<br>Brake release                             |
| J | 3HAB9549-1        | Rating label   |
| K | 3HAC067800-001    | Waste Electrical & Electronic Equipment<br>(WEEE) label        |
| L | 3HAC13488-1       | Calibration label  |
| M | 3HAC14257-1       | ABB information sign   |
| N | 3HAC021761-001    | Warning label<br>Extended working range                        |

#### Required tools and equipment

Visual inspection, no tools are required.

#### Inspecting, labels

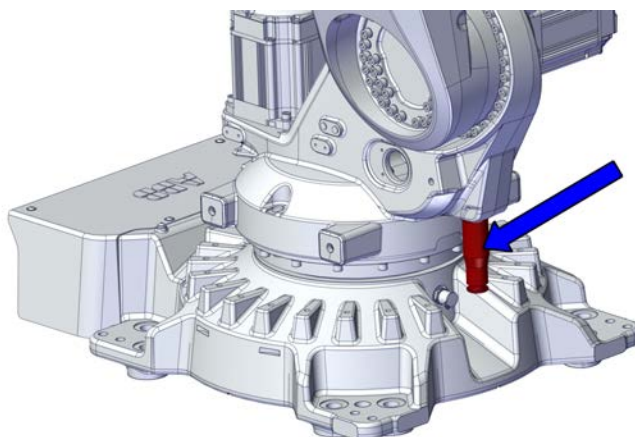
|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safeguarded space. |   |
| 2 | Inspect the labels, located as shown in the figures.  |   |
| 3 | Replace any missing or damaged labels.  | Article numbers for the labels and plate set is specified in <a href="#">Required spare parts on page 120</a> . |



### 4.3.5 Inspecting the axis-1 mechanical stop

#### Location of mechanical stop pin

The mechanical stop is located as shown in the figure.





xx2100001471

#### Required equipment

Visual inspection, no tools are required.

#### Inspecting the mechanical stop pin

Use this procedure to inspect the axis-1 mechanical stop pin.


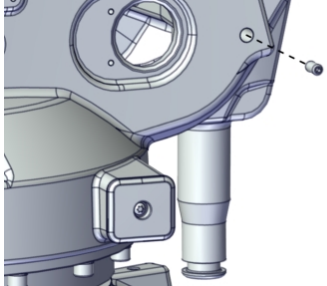
|   | Action  | Note                                |
|---|---|-------------------------------------|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |                                     |
| 2 | Inspect the axis-1 mechanical stop pin.<br>If the mechanical stop pin is bent or damaged, it must be replaced.<br><br> <b>Note</b><br>The expected life of gearboxes can be reduced after collision with the mechanical stop.      | Mechanical stop pin: 3HAC024014-001 |

*Continues on next page*

## 4 Maintenance

### 4.3.5 Inspecting the axis-1 mechanical stop

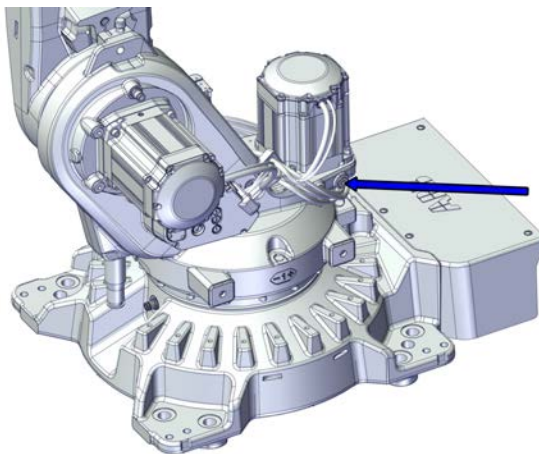
*Continued*

|   | Action   | Note   |
|---|--|--|
| 3 | <p>Check that the mechanical stop pin attachment screw is tightened correctly.</p> <p> <b>Note</b></p> <p>Do not overtighten the attachment screw, use specified tightening torque.</p> | <p>Tightening torque: 10 Nm<br/>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p>  <p>xx2100001410</p> |

### 4.3.6 Inspecting the oil level in axis-1 gearbox

#### Location of the oil plug

The oil plug for inspection is located as shown in the figure.

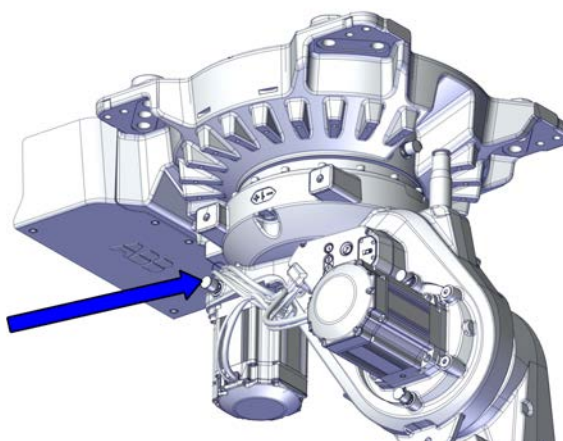


xx2100001478

#### *Option Inverted (3317-1)*

Measure the oil level in the axis-1 gearbox with an oil level gauge connected to the oil plug pointed out in the figure.

If no oil level gauge is available, take down the manipulator to floor-standing and measure the oil level according to floor-standing manipulator.



xx2100002062

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> .   |
| Oil level gauge  | 3HAC082693-001 | Used to inspect the oil level in the axis-1 gearbox when the manipulator is mounted inverted.<br>The tool also includes an air vent. |

*Continues on next page*

## 4 Maintenance

### 4.3.6 Inspecting the oil level in axis-1 gearbox

*Continued*

#### Required consumables and wear parts



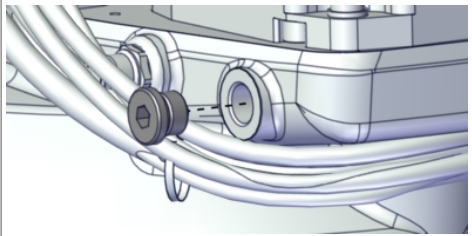
| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

#### Required documents

| Document name  | Document number |
|--|-----------------|
| <i>Technical reference manual - Lubrication in gearboxes</i> | 3HAC042927-001  |

#### Floor-mounted robot: Inspecting the oil level in axis-1 gearbox

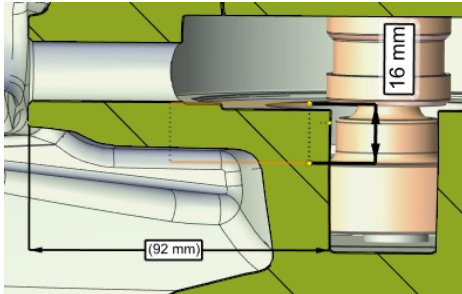
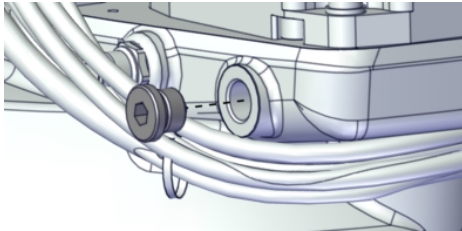

Use this procedure to inspect the oil level in the gearbox, when the robot is floor-standing.

|   | Action   | Note   |
|---|--|--|
| 1 |  <b>DANGER</b><br><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safe-guarded space. |  |
| 2 |  <b>WARNING</b><br><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .  |  |
| 3 | Make sure that the oil temperature is +25 °C ± 10 °C.  |  |
| 4 | Open the oil plug.   | <br><br>xx2100002056 |

*Continues on next page*


## 4.3.6 Inspecting the oil level in axis-1 gearbox

Continued

|   | Action   | Note   |
|---|--|--|
| 5 | Check the oil level.<br>Required oil level is: 0-16 mm below the oil plug hole.  | <br>xx2100001479   |
| 6 | Add or drain oil, if required.   | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .<br>Further information about how to drain or fill with oil is found in section <a href="#">Changing the oil in axis-1 gearbox on page 150</a> . |
| 7 | Refit the oil plug with a new o-ring.  | O-ring, G 1/2": 3HAC061327-059<br>Tightening torque: 24 Nm. <br>xx2100002056  |
| 8 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |  |

## Inverted robot: Inspecting the oil level in axis-1 gearbox

Use this procedure to inspect the oil level in the gearbox, when the robot is inverted.



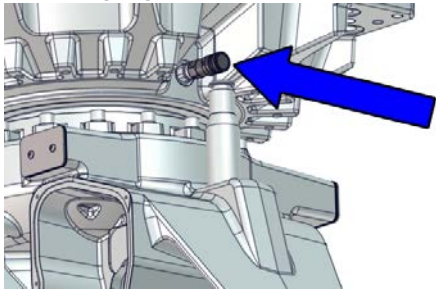
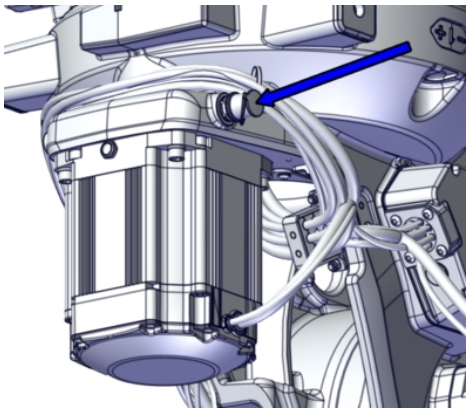
|   | Action   | Note |
|---|--|------|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safe-guarded space. |      |

Continues on next page

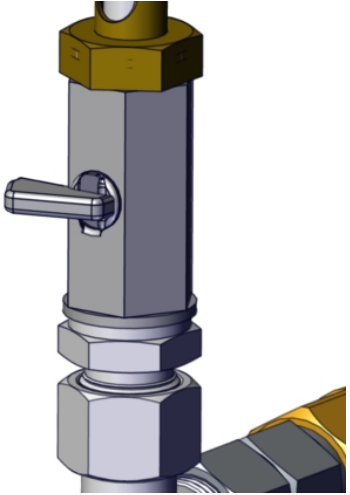
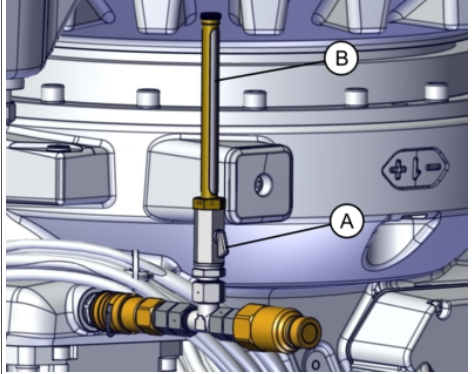

## 4 Maintenance

### 4.3.6 Inspecting the oil level in axis-1 gearbox

*Continued*

|   | Action  | Note   |
|---|---|--|
| 2 |  <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .   |  |
| 3 | Make sure that the oil temperature is $+25^{\circ}\text{C} \pm 10^{\circ}\text{C}$ .<br> <b>CAUTION</b><br>The gearbox can contain an <i>excess pressure</i> that can be hazardous. Open the oil plug carefully in order to let the excess pressure out. |  |
| 4 | Remove the protective cap and install the ventilating valve enclosed with the oil level gauge.  | Oil level gauge: 3HAC082693-001<br><br>xx1700000349 |
| 5 | Remove the protective cap from the inspection hole.   | <br>xx2100002057                                   |

*Continues on next page*

|    | Action  | Note  |
|----|---|---|
| 6  | Make sure that the valve is closed (horizontal) and install the oil level gauge to the inspection hole.   |  <p>xx2100002418</p>   |
| 7  | <p>Open the valve (A) slowly to reduce built-up pressure slowly.</p> <p>Check the oil level by reading the markings (B) on the oil level gauge.</p> <p>Required oil level is: at level measurement mark 57 on tool <math>\pm 5</math> mm.</p>                               |  <p>xx2100002102</p> <p>A Valve in open position<br/>B Level measurement marks</p>   |
| 8  | Add or drain oil, if required.  | <p>Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i>.</p> <p>Further information about how to drain or fill with oil is found in section <a href="#">Changing the oil in axis-1 gearbox on page 150</a>.</p> |
| 9  | Remove the tools and refit the protective caps.   |   |
| 10 |  <b>DANGER</b> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |   |



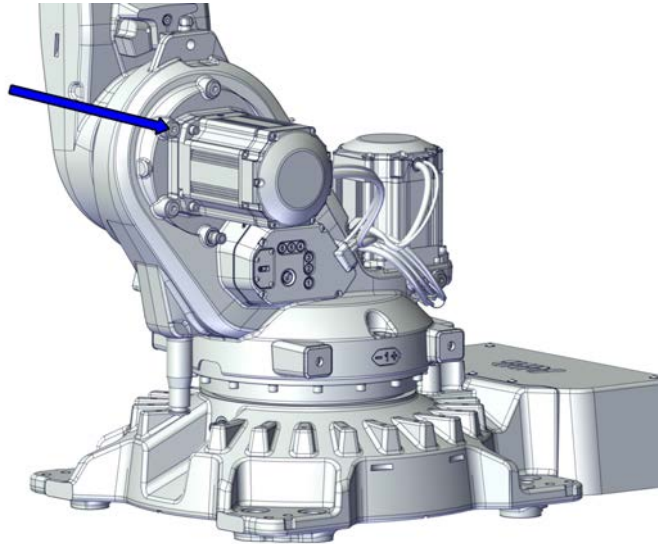
## 4 Maintenance

### 4.3.7 Inspecting the oil level in axis-2 gearbox

### 4.3.7 Inspecting the oil level in axis-2 gearbox

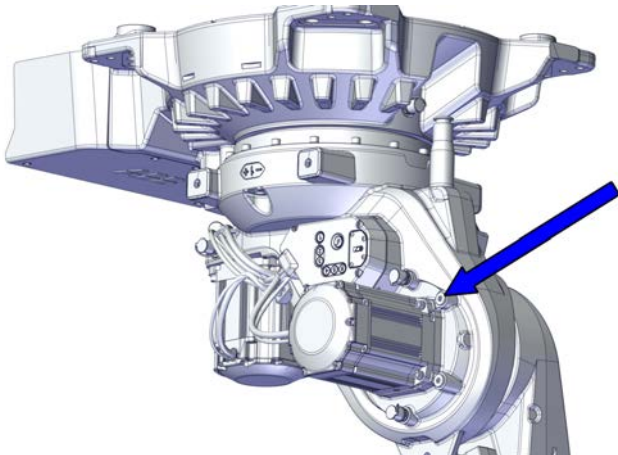
#### Location of the oil plug

The oil plug for inspection is located as shown in the figure.



xx2100002058

*Option Inverted (3317-1)*



xx2100002060

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

#### Required consumables and wear parts

| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |

*Continues on next page*



## 4.3.7 Inspecting the oil level in axis-2 gearbox

*Continued*



| Wear part      | Article number | Note  |
|----------------|----------------|---|
| O-ring, G 1/2" | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug. |

## Required documents

| Document name   | Document number |
|---|-----------------|
| Technical reference manual - Lubrication in gearboxes | 3HAC042927-001  |

## Inspecting the oil level in axis-2 gearbox

Use this procedure to inspect the oil level in the gearbox.

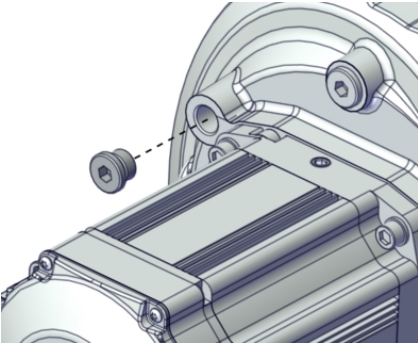
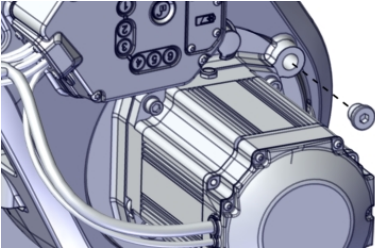
|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |      |
| 2 |  <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .   |      |
| 3 | Make sure that the oil temperature is $+25^{\circ}\text{C} \pm 10^{\circ}\text{C}$ .  |      |

*Continues on next page*

## 4 Maintenance

### 4.3.7 Inspecting the oil level in axis-2 gearbox

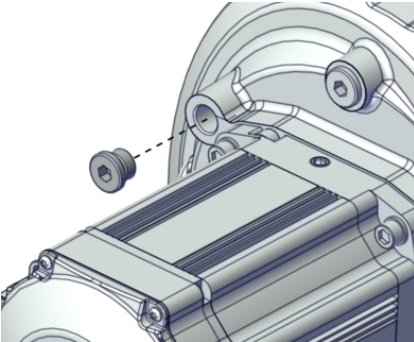
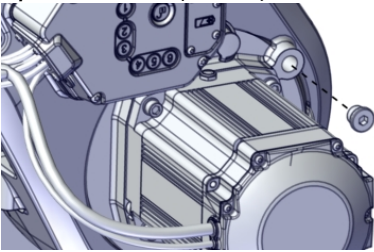

*Continued*

|   | Action  | Note   |
|---|---|--|
| 4 | Open the oil plug.  | <br>xx2100002059<br><i>Option Inverted (3317-1)</i><br><br>xx2100002061                |
| 5 | Check the oil level.<br>Required oil level is: 0-10 mm below oil plug hole.<br>Required oil level is: 0-10 mm below oil plug hole (floor-mounted robot).<br>Required oil level is: 0-10 mm below oil plug hole.<br>Required oil level is: 0-10 mm below oil plug hole (inverted robot). |  |
| 6 | Add or drain oil, if required.  | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .<br>Further information about how to drain or fill with oil is found in section <a href="#">Changing the oil in axis-2 gearbox on page 161</a> . |

*Continues on next page*

### 4.3.7 Inspecting the oil level in axis-2 gearbox

*Continued*

|   | Action   | Note  |
|---|--|---|
| 7 | Refit the oil plug with a new o-ring.  | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100002059</p> <p><i>Option Inverted (3317-1)</i></p>  <p>xx2100002061</p> |
| 8 |  <b>DANGER</b><br><p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |   |

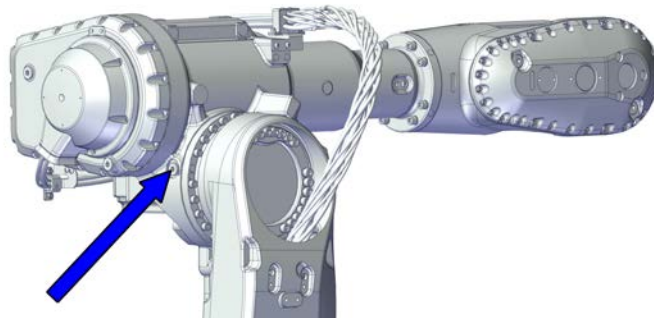
## 4 Maintenance

### 4.3.8 Inspecting the oil level in axis-3 gearbox

### 4.3.8 Inspecting the oil level in axis-3 gearbox

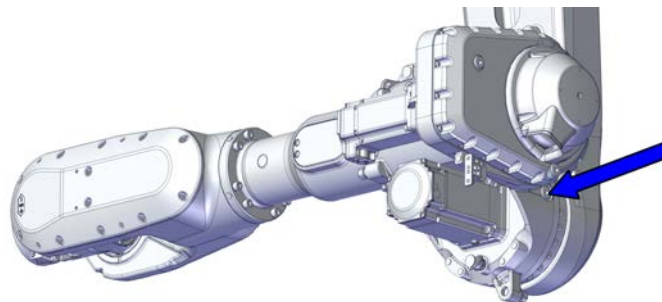
#### Location of the oil plug

The oil plug for inspection is located as shown in the figure.



xx2100002066

*Option Inverted (3317-1)*



xx2100002063

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

#### Required consumables and wear parts

| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

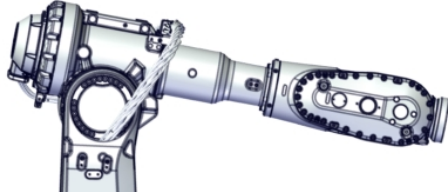
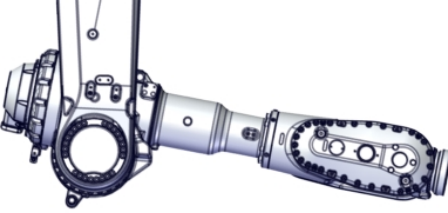


#### Required documents

| Document name  | Document number       |
|--|-----------------------|
| <i>Technical reference manual - Lubrication in gearboxes</i> | <i>3HAC042927-001</i> |

*Continues on next page*

## Inspecting the oil level in axis-3 gearbox

Use this procedure to inspect the oil level in the gearbox.

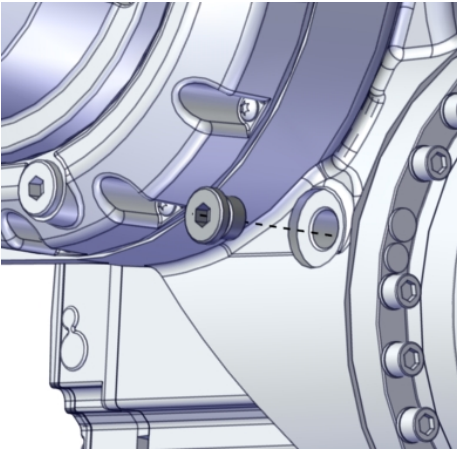
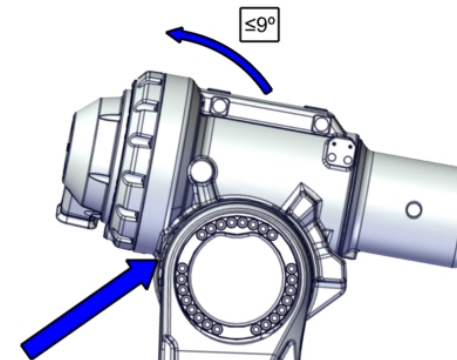

|   | Action  | Note   |
|---|---|--|
| 1 | <b>Floor-mounted robot:</b><br>Jog the robot into position: <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: 0°</li> <li>• Axis 3: +14°</li> <li>• Axis 4: no significance</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul>                        | <br>xx2100002068 |
| 2 | <b>Option Inverted (3317-1)</b><br>Jog the robot into position: <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: 0°</li> <li>• Axis 3: -166°</li> <li>• Axis 4: no significance</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul>                   | <br>xx2100002069 |
| 3 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safe-guarded space. |  |
| 4 | Make sure that the oil temperature is +25°C ± 10°C.   |  |
| 5 |  <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease)</a> on page 30.  |  |

Continues on next page

## 4 Maintenance

### 4.3.8 Inspecting the oil level in axis-3 gearbox

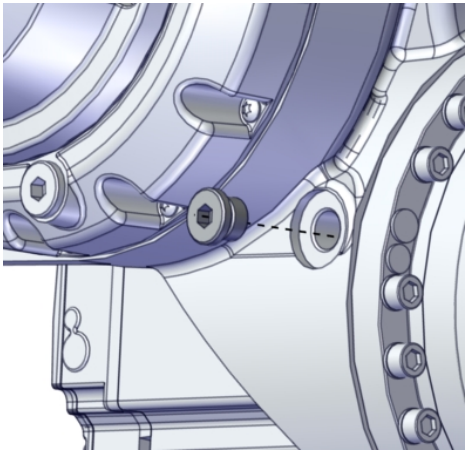

Continued

|    | Action  | Note  |
|----|---|---|
| 6  | Open the oil plug.  |  <p>xx2100002064</p>  |
| 7  | Turn on the power to the robot temporarily.   |   |
| 8  | <p>Check the oil level.</p> <p>Rotate axis 3 up to 9°, if needed, to achieve correct oil level measurement.</p> <p><i>Floor-mounted robot:</i></p> <p>Required oil level: in level with the oil plug hole when axis 3 is in position +14° to +5°.</p> <p><i>Option Inverted (3317-1)</i></p> <p>Required oil level: in level with the oil plug hole when axis 3 is in position -166° to -175° (0-7 mm).</p> |  <p>xx2100002067</p>   |
| 9  | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p>  |   |
| 10 | Add or drain oil, if required.  | <p>Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i>.</p> <p>Further information about how to drain or fill with oil is found in section <a href="#">Changing the oil in axis-3 gearbox on page 167</a>.</p> |

Continues on next page

### 4.3.8 Inspecting the oil level in axis-3 gearbox

*Continued*

|    | Action   | Note   |
|----|--|--|
| 11 | Refit the oil plug with a new o-ring.  | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100002064</p> |
| 12 | <p> <b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |  |

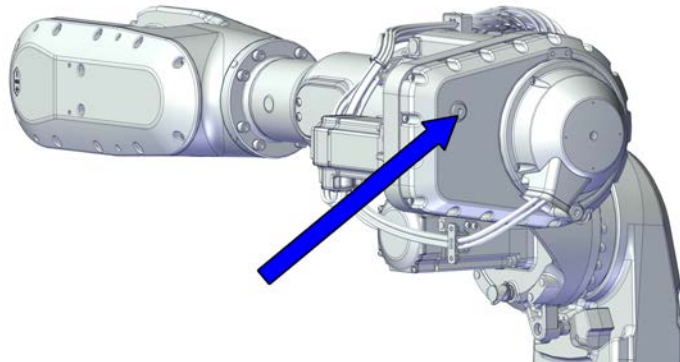
## 4 Maintenance

### 4.3.9 Inspecting the oil level in axis-4 gearbox

### 4.3.9 Inspecting the oil level in axis-4 gearbox

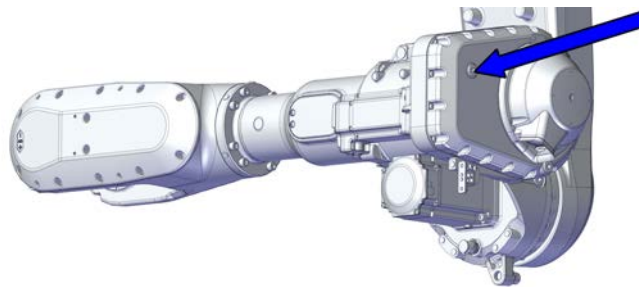
#### Location of the oil plug

The oil plug for inspection is located as shown in the figure.



xx2100002070

*Option Inverted (3317-1)*



xx2100002071

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

#### Required consumables and wear parts

| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

#### Required documents

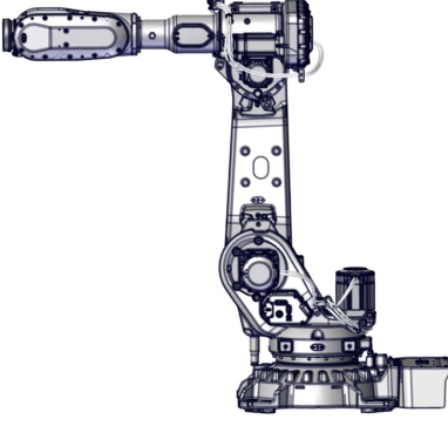


| Document name   | Document number |
|---|-----------------|
| Technical reference manual - Lubrication in gearboxes | 3HAC042927-001  |

*Continues on next page*



## Inspecting the oil level in axis-4 gearbox

Use this procedure to inspect the oil level in the gearbox.

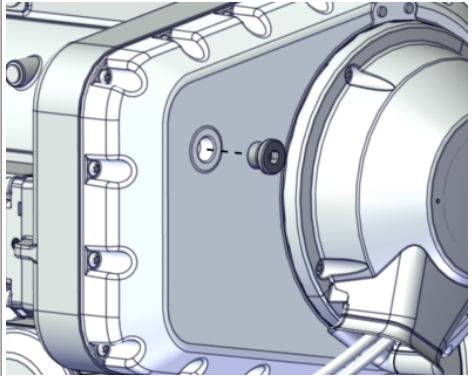
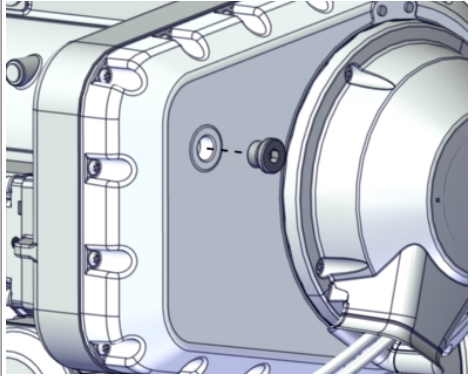

|   | Action   | Note   |
|---|--|--|
| 1 | <p><i>Floor-mounted robot:</i></p> <p>Run the robot to a position where the upper arm is horizontal.</p>   |  <p>xx2300000252</p> |
| 2 | <p><i>Option Inverted (3317-1)</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: 0°</li> <li>• Axis 3: -180°</li> <li>• Axis 4: no significance</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul>                           |  |
| 3 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p> |  |
| 4 | <p>Make sure that the oil temperature is +25°C ± 10°C.</p>   |  |
| 5 | <p> <b>WARNING</b></p> <p>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a>.</p>  |  |

Continues on next page

## 4 Maintenance

### 4.3.9 Inspecting the oil level in axis-4 gearbox

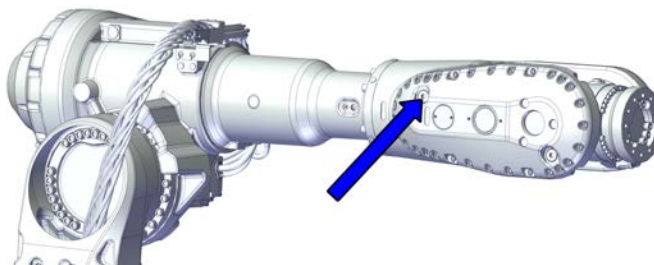
*Continued*

|    | Action   | Note   |
|----|--|--|
| 6  | Open the oil plug.   | <br>xx2100002072   |
| 7  | Check the oil level.<br>Required oil level is: 0-10 mm below oil plug hole   |  |
| 8  | Add or drain oil, if required.   | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .<br>Further information about how to drain or fill with oil is found in section <a href="#">Changing the oil in axis-4 gearbox on page 172</a> . |
| 9  | Refit the oil plug with a new o-ring.  | O-ring, G 1/2": 3HAC061327-059<br>Tightening torque: 24 Nm.<br><br>xx2100002072  |
| 10 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |  |

### 4.3.10 Inspecting the oil level in axis-5 gearbox

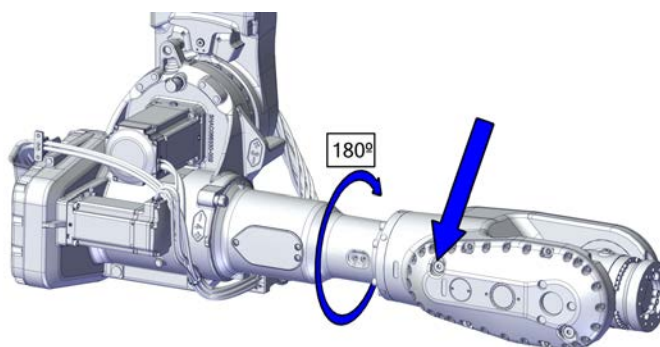
#### Location of the oil plug

The oil plug for inspection is located as shown in the figure.



xx2100002073

#### Option Inverted (3317-1)



xx2100002074

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

#### Required consumables and wear parts

| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

#### Required documents

| Document name   | Document number |
|---|-----------------|
| Technical reference manual - Lubrication in gearboxes | 3HAC042927-001  |

*Continues on next page*

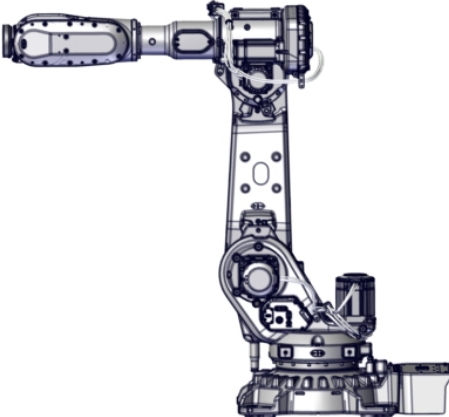
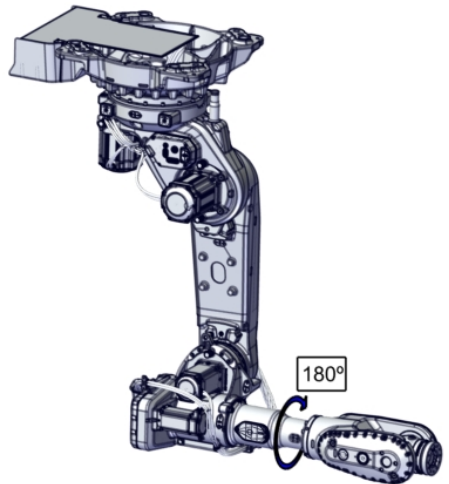


## 4 Maintenance

### 4.3.10 Inspecting the oil level in axis-5 gearbox

*Continued*

#### Inspecting the oil level in axis-5 gearbox

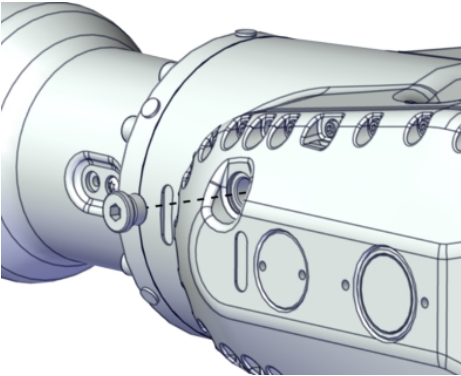
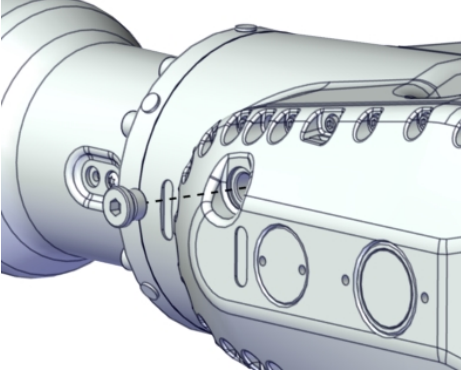

Use this procedure to inspect the oil level in the gearbox.

|   | Action   | Note  |
|---|--|---|
| 1 | <p><i>Floor-mounted robot:</i></p> <p>Run the robot to a position where the upper arm is horizontal.</p>   |  <p>xx2300000252</p>  |
| 2 | <p><i>Option Inverted (3317-1)</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: 0°</li> <li>• Axis 3: 0°</li> <li>• Axis 4: 180°</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul>   |  <p>xx2100002080</p> |
| 3 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p> |   |
| 4 | <p>Make sure that the oil temperature is +25 °C ± 10 °C.</p>   |   |
| 5 | <p> <b>WARNING</b></p> <p>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a>.</p>  |   |

*Continues on next page*

### 4.3.10 Inspecting the oil level in axis-5 gearbox

*Continued*

|    | Action   | Note  |
|----|--|---|
| 6  | Open the oil plug.   |  <p>xx2100002075</p>  |
| 7  | Check the oil level.<br>Required oil level is: 0-10 mm below oil plug hole.  |   |
| 8  | Add or drain oil, if required.   | <p>Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i>.</p> <p>Further information about how to drain or fill with oil is found in section <a href="#">Changing the oil in axis-5 gearbox on page 177</a>.</p> |
| 9  | Refit the oil plug with a new o-ring.  | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100002075</p>  |
| 10 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

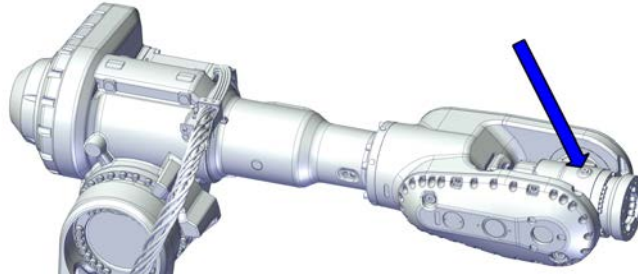
## 4 Maintenance

### 4.3.11 Inspecting the oil level in axis-6 gearbox

### 4.3.11 Inspecting the oil level in axis-6 gearbox

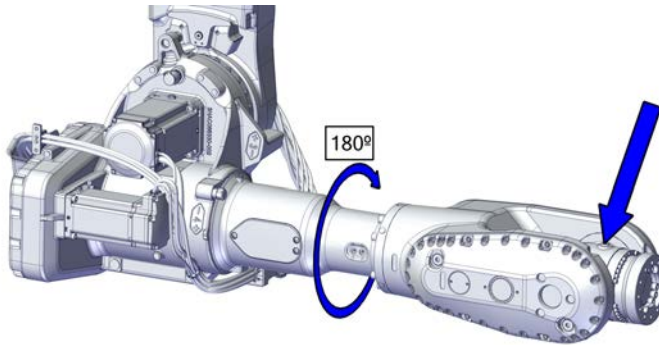
#### Location of the oil plug

The oil plug for inspection is located as shown in the figure.



xx2100002076

*Option Inverted (3317-1)*



xx2100002081

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

#### Required consumables and wear parts

| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/4"  | 3HAC061327-060 | Used on oil plug. Always replace when refitting oil plug.          |

#### Required documents

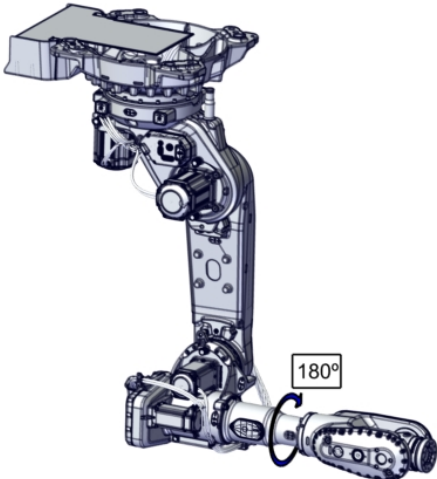


| Document name   | Document number |
|---|-----------------|
| Technical reference manual - Lubrication in gearboxes | 3HAC042927-001  |

*Continues on next page*

**Inspecting the oil level in axis-6 gearbox**

Use this procedure to inspect the oil level in the gearbox.

The procedure includes two alternative positions for axis 5, where one of the positions makes it possible to use the filling plug as a level plug.

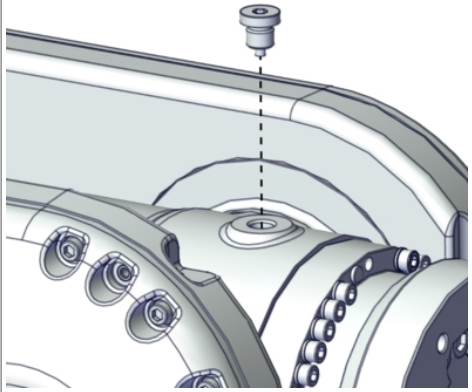
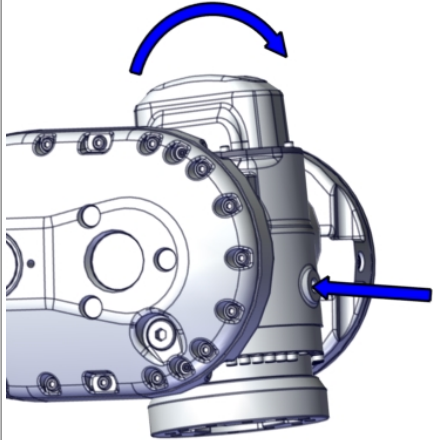
|   | Action   | Note  |
|---|--|---|
| 1 | <b>Floor-mounted robot:</b><br>Run the robot to a position where the upper arm is horizontal.  |   |
| 2 | <b>Option Inverted (3317-1)</b><br>Jog the robot into position: <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: 0°</li> <li>• Axis 3: 0°</li> <li>• Axis 4: 180°</li> <li>• Axis 5: 0°</li> <li>• Axis 6: no significance</li> </ul>   | <br>xx2100002080 |
| 3 |  <b>DANGER</b><br><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safe-guarded space. |   |
| 4 | Make sure that the oil temperature is +25°C ± 10°C.  |   |
| 5 |  <b>WARNING</b><br><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .  |   |

Continues on next page

## 4 Maintenance

### 4.3.11 Inspecting the oil level in axis-6 gearbox

*Continued*

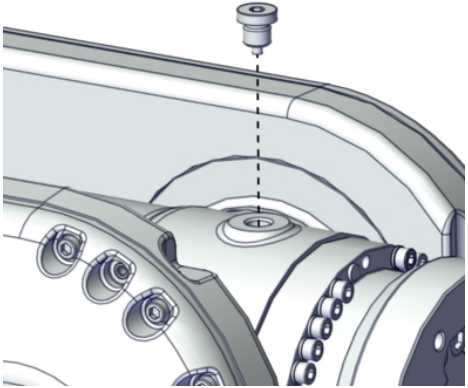

|   | Action  | Note   |
|---|---|--|
| 6 | Open the oil plug.  | <br>xx2100002077   |
| 7 | <b>Method 1</b><br>Check the oil level.<br>Required oil level is:<br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br>52-59 mm below oil plug hole<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID<br>46-53 mm below oil plug hole  |  |
| 8 | <b>Method 2</b><br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br>Rotate axis 5 to +85°.<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID<br>Rotate axis 5 to +84°.<br>Required oil level is: oil is visible through the oil plug hole.<br>If the oil level is not visible, rotate axis 5 up to additionally 5°, to achieve visual check of oil level. | <br>xx2100002079   |
| 9 | Add or drain oil, if required.  | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .<br>Further information about how to drain or fill with oil is found in section <a href="#">Changing the oil in axis-6 gearbox on page 182</a> . |

*Continues on next page*



### 4.3.11 Inspecting the oil level in axis-6 gearbox

*Continued*

|    | Action   | Note   |
|----|--|--|
| 10 | Refit the oil plug with a new o-ring.  | <p>O-ring, G 1/4": 3HAC061327-060<br/>Tightening torque: 20 Nm.</p>  <p>xx2100002077</p> |
| 11 | <p> <b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |  |

## 4 Maintenance

### 4.4.1 Type of lubrication in gearboxes

## 4.4 Replacement/changing activities

### 4.4.1 Type of lubrication in gearboxes

#### Introduction

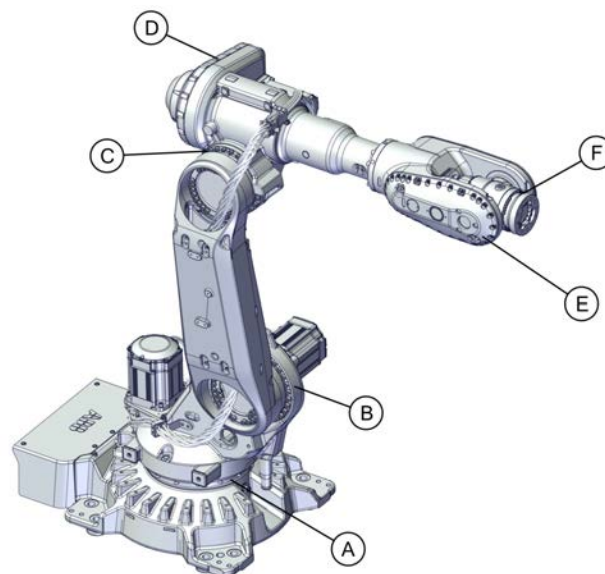
This section describes where to find information about the type of lubrication, article number and the amount of lubrication in the specific gearbox. It also describes the equipment needed when working with lubrication.

#### Type and amount of oil in gearboxes

Information about the type of lubrication, article number as well as the amount in the specific gearbox can be found in *Technical reference manual - Lubrication in gearboxes* available for registered users on myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

#### Location of gearboxes

The figure shows the location of the gearboxes.



xx2100002078

|   |                |
|---|----------------|
| A | Axis-1 gearbox |
| B | Axis-2 gearbox |
| C | Axis-3 gearbox |
| D | Axis-4 gearbox |
| E | Axis-5 gearbox |
| F | Axis-6 gearbox |

*Continues on next page*

#### Equipment

| Equipment                                     | Note   |
|---|--|
| Oil dispenser                                 | Includes pump with outlet pipe.<br>Use the suggested dispenser or a similar one: <ul style="list-style-type: none"><li>• Orion OriCan article number 22590 (pneumatic)</li></ul> |
| Nipple for quick connect fitting, with o-ring |  |
| Oil level gauge                               | Used to inspect the oil level in the axis-1 gear-box when the manipulator is mounted inverted. The tool also includes an air vent.   |

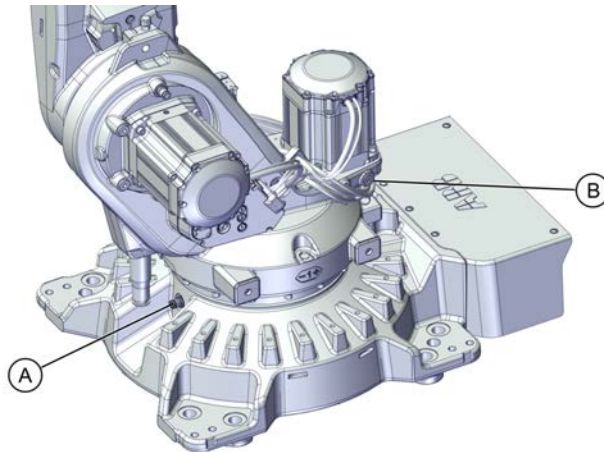
## 4 Maintenance

### 4.4.2 Changing the oil in axis-1 gearbox

#### 4.4.2 Changing the oil in axis-1 gearbox

##### Location of the gearbox and oil nipples / plugs

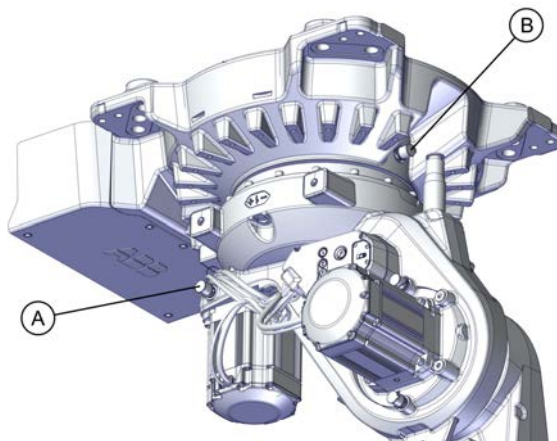
The gearbox and its oil plugs / nipples are located as shown in the figure.



xx2100001474

|   |   |
|---|---|
| A | Oil nipple for draining and filling with an oil dispenser |
| B | Oil plug hole for venting and inspection                  |

##### Option Inverted (3317-1)



xx2100001475

|   |   |
|---|---|
| A | Oil nipple for draining and filling with an oil dispenser |
| B | Oil nipple for venting                                    |

##### Changing oil in an inverted robot

The oil in the axis-1 gearbox can either be changed when the robot is inverted or standing on the floor.

*Continues on next page*

## Required tools and equipment

| Equipment             | Article number | Note  |
|-----------------------|----------------|---|
| Oil collecting vessel | -              | The capacity of the vessel must be sufficient to take the complete amount of oil.                                   |
| Oil dispenser         | -              | One example of oil dispenser can be found in section <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| Standard toolkit      | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

## Required consumables and wear parts



| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

## Required documents

| Document name  | Document number | Note |
|--|-----------------|------|
| <i>Technical reference manual - Lubrication in gearboxes</i> | 3HAC042927-001  |      |

## Floor-mounted robot: Draining the axis-1 gearbox

Use this procedure to drain the gearbox.



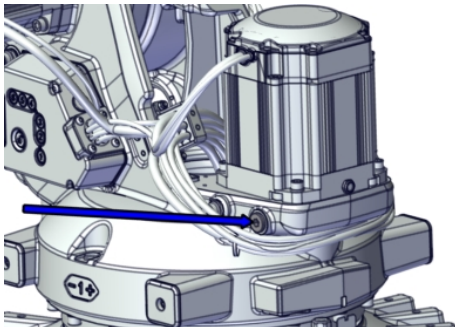
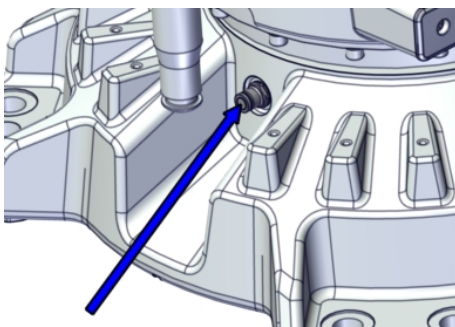


|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |      |
| 2 |  <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .   |      |
| 3 | Make sure that the oil temperature is +25 °C ± 10 °C.   |      |

Continues on next page

## 4 Maintenance

### 4.4.2 Changing the oil in axis-1 gearbox



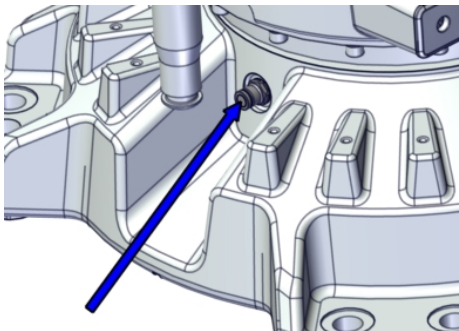

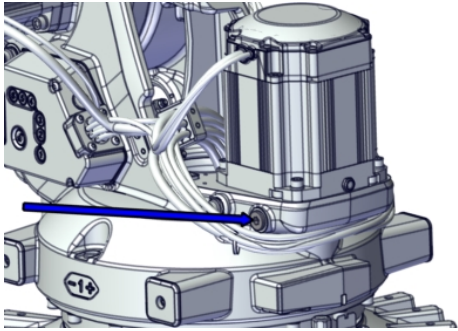

Continued

|   | Action  | Note  |
|---|---|---|
| 4 |  <b>CAUTION</b><br><br>The gearbox can contain an excess of pressure that can be hazardous. Open the oil plug carefully in order to let the excess pressure out.                                   |   |
| 5 | Remove the plug from the venting hole.<br><br> <b>WARNING</b><br><br>Let the venting hole stay open during draining and filling using the dispenser, to avoid damaging vital parts in the gearbox. | <br>xx2100001477  |
| 6 | Remove the protective cap from the nipple of the oil hole and connect the oil dispenser.  | <br>xx2100001476 |
| 7 | Suck out the oil with the oil dispenser.<br><br> <b>Note</b><br><br>There will be some oil left in the gear after draining.  |   |
| 8 |  <b>WARNING</b><br><br>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information.                               |   |

Continues on next page

## Floor-mounted robot: Filling oil into the axis-1 gearbox

Use this procedure to refill the gearbox with oil.


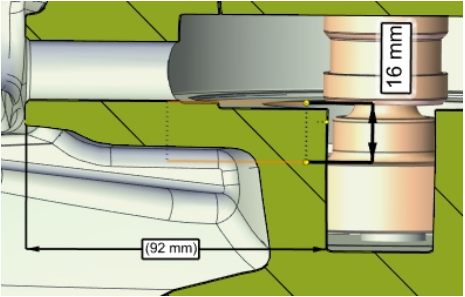
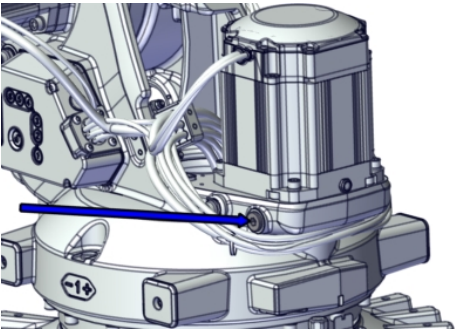


| Action  | Note   |
|---|--|
| <p>1</p> <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p> |  |
| <p>2</p> <p> <b>WARNING</b></p> <p>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a>.</p>  |  |
| <p>3</p> <p>Remove the protective cap from the nipple of the oil hole and connect the oil dispenser.</p>  |  <p>xx2100001476</p>          |
| <p>4</p> <p>Remove the plug from the venting hole.</p> <p> <b>Note</b></p> <p>The venting hole is opened to let out air during the filling process.</p>  |  <p>xx2100001477</p>         |
| <p>5</p> <p>Refill the gearbox with oil with the oil dispenser.</p> <p> <b>Note</b></p> <p>The amount of oil to be filled depends on the amount previously being drained.</p>  | <p>Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i>.</p> |

Continues on next page

## 4 Maintenance

### 4.4.2 Changing the oil in axis-1 gearbox




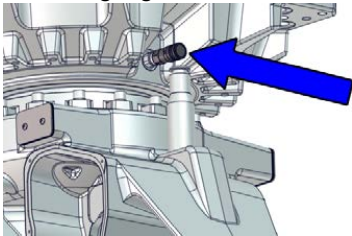
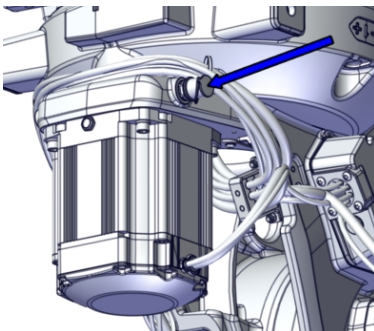
Continued

|    | Action   | Note  |
|----|--|---|
| 6  | <p>Inspect the oil level through the inspection hole.</p> <p> <b>CAUTION</b></p> <p>The oil level sinks when the oil fills all cavities in the gearbox. Wait until the oil stops sinking, before measuring the oil level.</p> | <p>Required oil level: 0-16 mm below the oil plug hole</p>  <p>xx2100001479</p>           |
| 7  | <p>Remove the oil dispenser and refit the protective cap to the nipple.</p>  |   |
| 8  | <p>Refit the oil plug with a new o-ring.</p>   | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100001477</p> |
| 9  | <p> <b>Note</b></p> <p>After all repair and maintenance work involving oil, always wipe the robot clean from all surplus oil. The robot color can otherwise be discolored.</p>  |   |
| 10 | <p> <b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p>                             |   |

Continues on next page



## Inverted robot: Draining the axis-1 gearbox

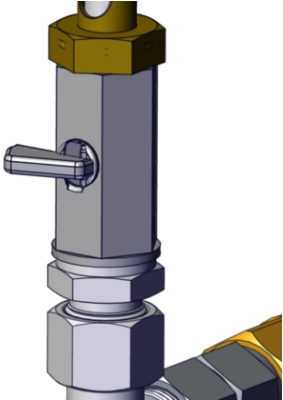




|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |  |
| 2 |  <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .   |  |
| 3 | Make sure that the oil temperature is $+25^{\circ}\text{C} \pm 10^{\circ}\text{C}$ .  |  |
| 4 |  <b>CAUTION</b><br>The gearbox can contain an excess of pressure that can be hazardous. Open the oil plug carefully in order to let the excess pressure out.  |  |
| 5 | Remove the protective cap and install the ventilating valve enclosed with the oil level gauge.  | Oil level gauge: 3HAC082693-001<br><br>xx1700000349 |
| 6 | Remove the protective cap from the drain hole.  | <br>xx2100002057                                    |

Continues on next page

## 4 Maintenance

### 4.4.2 Changing the oil in axis-1 gearbox




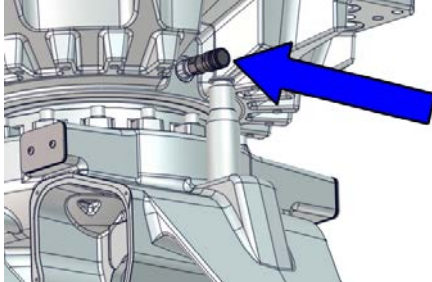
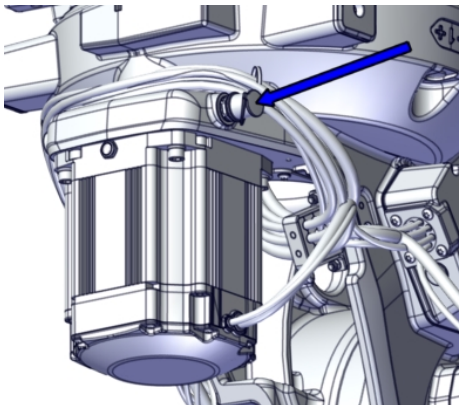
*Continued*

|    | Action   | Note  |
|----|--|---|
| 7  | Make sure that the valve is closed (horizontal) on the oil level gauge and install the gauge to the oil plug hole.   | <br>xx2100002418 |
| 8  | Connect the oil dispenser to the oil level gauge.  |   |
| 9  | Suck out the oil with the oil dispenser.<br> <b>Note</b><br>There will be some oil left in the gear after draining.   |   |
| 10 | Suck out as much remaining oil as possible with a small hose or syringe through the venting hole.  |   |
| 11 |  <b>WARNING</b><br>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information.                        |   |
| 12 |  <b>Note</b><br>After all repair and maintenance work involving oil, always wipe the robot clean from all surplus oil. The robot color can otherwise be discolored.                   |   |
| 13 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

*Continues on next page*

**Inverted robot: Filling oil into the axis-1 gearbox**

Use this procedure to refill the gearbox with oil.

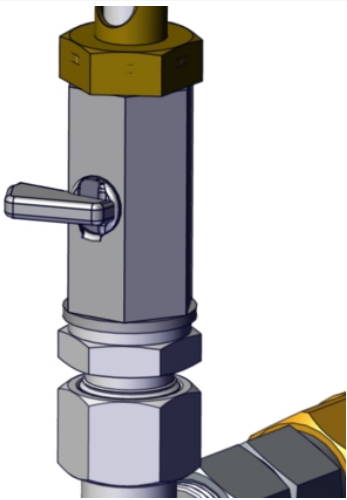



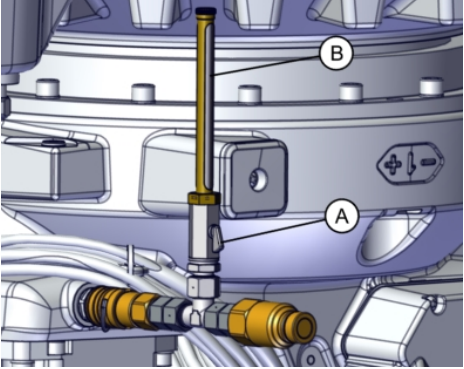
|   | Action   | Note   |
|---|--|--|
| 1 |  <b>DANGER</b><br><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safe-guarded space. |  |
| 2 |  <b>WARNING</b><br><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .  |  |
| 3 | Remove the protective cap and install the ventilating valve enclosed with the oil level gauge.<br><br> <b>Note</b><br><br>The venting hole is opened to let out air during the filling process.                                       | Oil level gauge: 3HAC082693-001<br><br>xx1700000349 |
| 4 | Remove the protective cap from the fill hole.  | <br>xx2100002057                                   |

*Continues on next page*




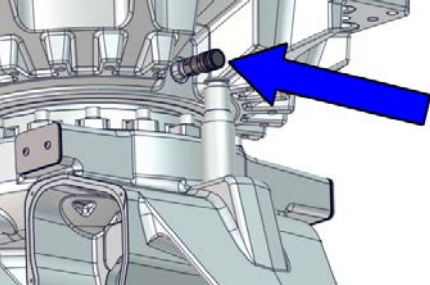

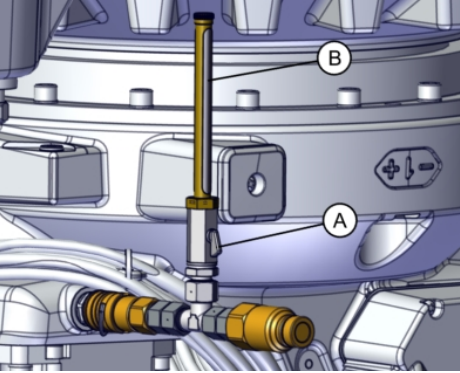
## 4 Maintenance

### 4.4.2 Changing the oil in axis-1 gearbox

Continued

|    | Action  | Note   |
|----|---|--|
| 5  | <p>Make sure that the valve is closed (horizontal) on the oil level gauge and install the gauge to the oil plug hole.</p>   |  <p>xx2100002418</p>  |
| 6  | <p>Connect the oil dispenser to the oil level gauge.</p>  |  |
| 7  | <p>Refill the gearbox with oil with the oil dispenser.</p> <p> <b>Note</b></p> <p>The amount of oil to be filled depends on the amount previously being drained.</p>   | <p>Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i>.</p>   |
| 8  | <p>Remove the oil dispenser.</p>  |  |
| 9  | <p>Open the valve (A) slowly to reduce built-up pressure slowly.</p> <p>Check the oil level by reading the markings (B) on the oil level gauge.</p> <p>Required oil level is: at level measurement mark 57 on tool <math>\pm 5</math> mm.</p> <p>Drain or fill more oil, if required.</p> <p> <b>Tip</b></p> <p>If oil is visible at the level gauge but does not reach to the marking, the amount of oil to be filled is maximum 5 cl.</p> <p> <b>CAUTION</b></p> <p>The oil level sinks when the oil fills all cavities in the gearbox. Wait until the oil stops sinking, before measuring the oil level.</p> |  <p>xx2100002102</p> <p>A Valve in open position<br/>B Level measurement marks</p> |
| 10 | <p>Remove the oil level gauge.</p>  |  |
| 11 | <p>Remove the ventilating valve from the upper oil nipple.</p>  |  |

Continues on next page



| Action   | Note   |
|--|--|
| <p>12 Turn on the power to the robot and let axis 1 move for approximately 5 minutes.</p> <p> <b>Tip</b></p> <p>This is done to eliminate any air bubbles in the oil.</p>   |  |
| <p>13 Let the manipulator stand still 1 hour.</p> <p>14  <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p>  |  |
| <p>15 Remove the protective cap and install the ventilating valve enclosed with the oil level gauge.</p> <p> <b>Note</b></p> <p>The venting hole is opened to let out air during the filling process.</p>   |  <p>xx1700000349</p>  |
| <p>16 Remove the protective cap from the fill hole.</p>  |  |
| <p>17 Make sure that the valve is closed (horizontal) and install the oil level gauge to the oil plug hole.</p>  |  |
| <p>18 Open the valve (A) slowly to avoid air bubbles in the oil.</p> <p>Check the oil level by reading the markings (B) on the oil level gauge.</p> <p>Required oil level is: at level measurement mark 57 on tool <math>\pm 5</math> mm.</p> <p> <b>Tip</b></p> <p>If oil is visible at the level gauge but does not reach to the marking, the amount of oil to be filled is maximum 5 cl.</p> <p>Drain or fill more oil, if required.</p> |  <p>xx2100002102</p> <p>A Valve in open position<br/>B Level measurement marks</p> |
| <p>19 Remove the oil dispenser and the oil level gauge.</p> <p>Refit the protective cap to the nipple.</p>   |  |

*Continues on next page*

## 4 Maintenance

### 4.4.2 Changing the oil in axis-1 gearbox

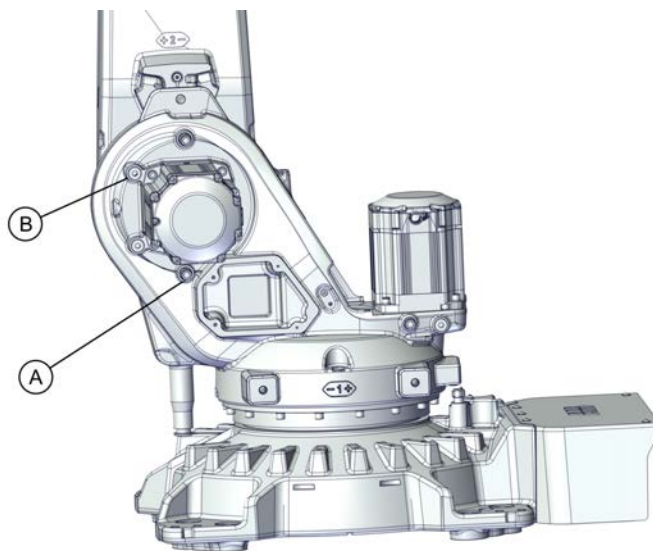
*Continued*

|    | Action   | Note |
|----|--|------|
| 20 | Remove the ventilating valve from the upper oil nipple.<br>Refit the protective cap to the nipple.   |      |
| 21 |  <b>Note</b><br><br>After all repair and maintenance work involving oil, always wipe the robot clean from all surplus oil. The robot color can otherwise be discolored.                   |      |
| 22 |  <b>DANGER</b><br><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |      |

### 4.4.3 Changing the oil in axis-2 gearbox

#### Location of the gearbox and oil plugs

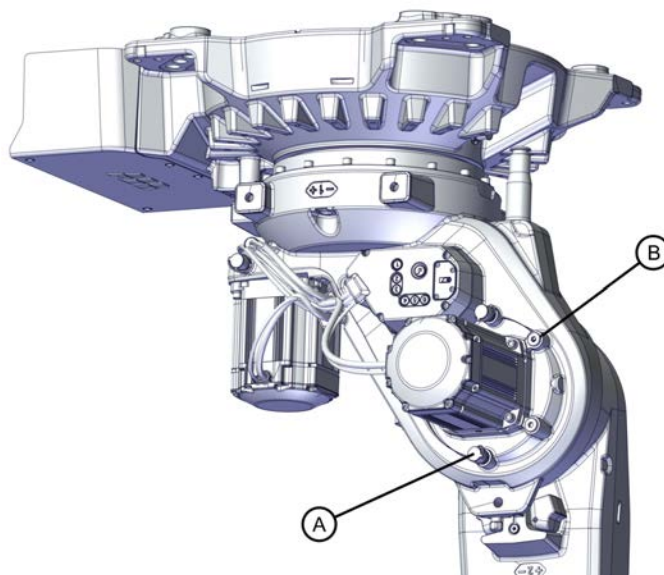
The gearbox and its oil plugs are located as shown in the figure.



xx2100002087

|   |   |
|---|---|
| A | Oil plug with nipple for draining and filling with an oil dispenser |
| B | Oil plug hole for ventilation and inspection                        |

#### Option Inverted (3317-1)



xx2100002088

|   |   |
|---|---|
| A | Oil plug with nipple for draining and filling with an oil dispenser |
| B | Oil plug hole for ventilation and inspection                        |

*Continues on next page*

## 4 Maintenance

### 4.4.3 Changing the oil in axis-2 gearbox

*Continued*

#### Required tools and equipment

| Equipment             | Article number | Note  |
|-----------------------|----------------|---|
| Oil collecting vessel | -              | The capacity of the vessel must be sufficient to take the complete amount of oil.                                   |
| Oil dispenser         | -              | One example of oil dispenser can be found in section <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| Standard toolkit      | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

#### Required consumables and wear parts




| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

#### Required documents

| Document name  | Document number | Note |
|--|-----------------|------|
| <i>Technical reference manual - Lubrication in gearboxes</i> | 3HAC042927-001  |      |

#### Draining the axis-2 gearbox

Use this procedure to drain the gearbox.


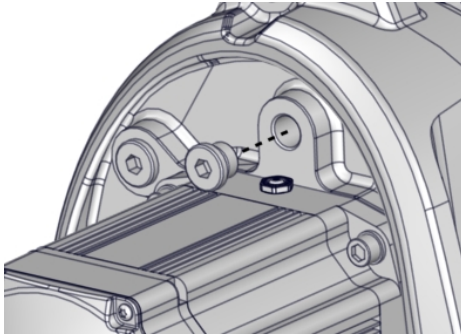
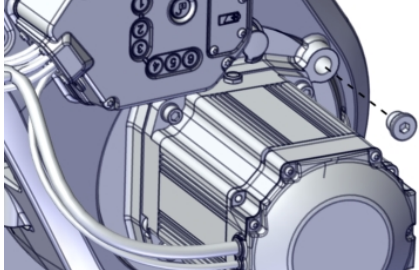
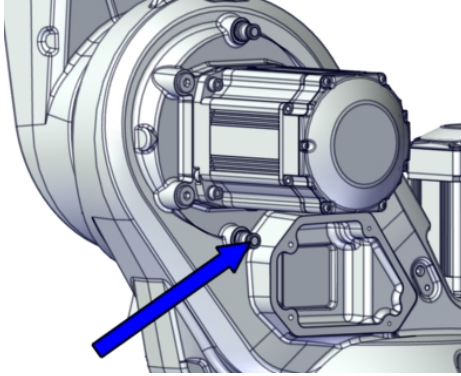
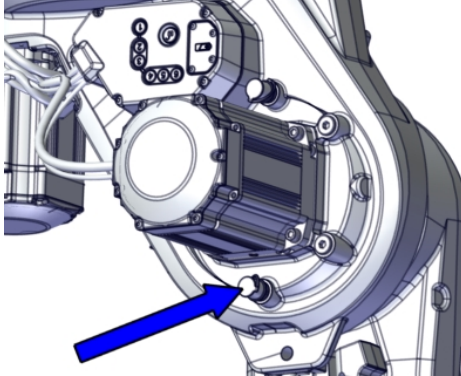
|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safeguarded space. |      |
| 2 |  <b>WARNING</b><br><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .   |      |
| 3 |  <b>CAUTION</b><br><br>The gearbox can contain an excess of pressure that can be hazardous. Open the oil plug carefully in order to let the excess pressure out.   |      |

*Continues on next page*



## 4.4.3 Changing the oil in axis-2 gearbox

Continued



|   | Action   | Note   |
|---|--|--|
| 4 | <p>Remove the plug from the venting hole.</p> <p> <b>WARNING</b></p> <p>Let the venting hole stay open during draining and filling using the dispenser, to avoid damaging vital parts in the gearbox.</p> |  <p>xx2300000002</p> <p><i>Option Inverted (3317-1)</i></p>  <p>xx2100002061</p>     |
| 5 | <p>Remove the protective cap from the nipple of the oil hole and connect the oil dispenser.</p>  |  <p>xx2100002090</p> <p><i>Option Inverted (3317-1)</i></p>  <p>xx2100002089</p> |

Continues on next page

## 4 Maintenance



### 4.4.3 Changing the oil in axis-2 gearbox

*Continued*

|   | Action   | Note |
|---|--|------|
| 6 | <p>Suck out the oil with the oil dispenser.</p> <p> <b>Note</b></p> <p>There will be some oil left in the gear after draining.</p>  |      |
| 7 | <p> <b>WARNING</b></p> <p>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information.</p> |      |

### Filling oil into the axis-2 gearbox


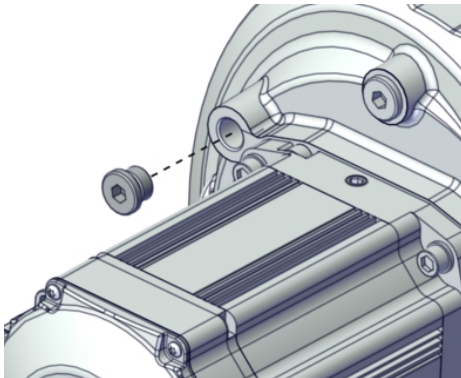
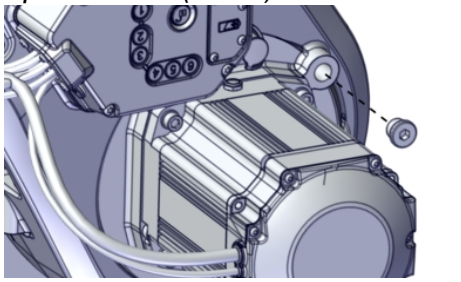
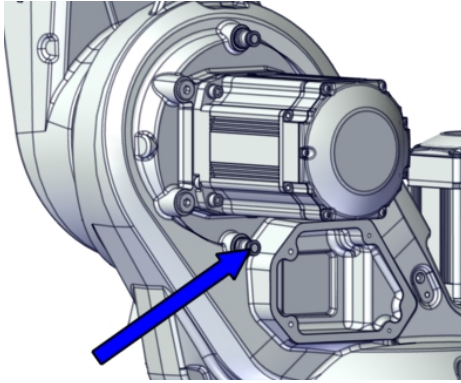
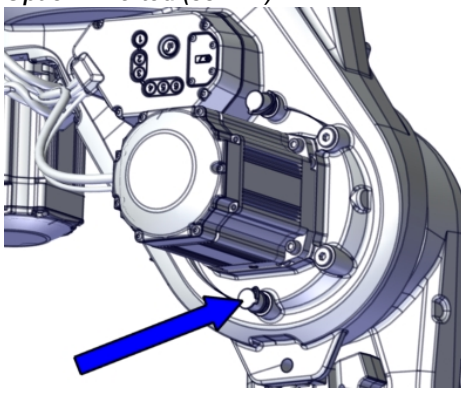
Use this procedure to refill the gearbox with oil.

|   | Action  | Note |
|---|---|------|
| 1 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> <p>to the robot, before entering the safeguarded space.</p> |      |
| 2 | <p> <b>WARNING</b></p> <p>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a>.</p>   |      |

*Continues on next page*

## 4.4.3 Changing the oil in axis-2 gearbox

*Continued*



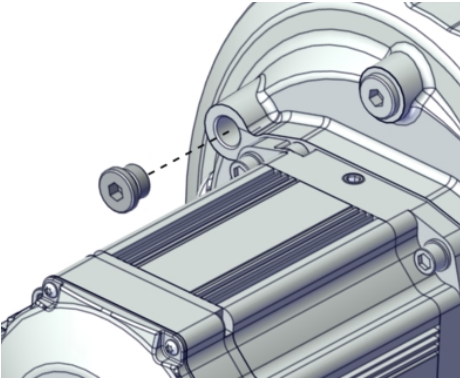
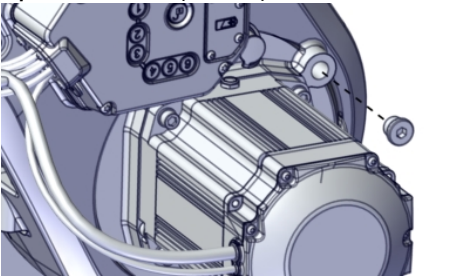

|   | Action   | Note   |
|---|--|--|
| 3 | <p>Remove the plug from the ventilation hole.</p> <p> <b>WARNING</b></p> <p>Let the venting hole stay open during draining and filling using the dispenser, to avoid damaging vital parts in the gearbox.</p> |  <p>xx2100002059</p> <p><i>Option Inverted (3317-1)</i></p>  <p>xx2100002061</p>    |
| 4 | <p>Remove the protective cap from the nipple of the oil hole and connect the oil dispenser.</p>  |  <p>xx2100002090</p> <p><i>Option Inverted (3317-1)</i></p>  <p>xx2100002089</p> |

*Continues on next page*

## 4 Maintenance

### 4.4.3 Changing the oil in axis-2 gearbox

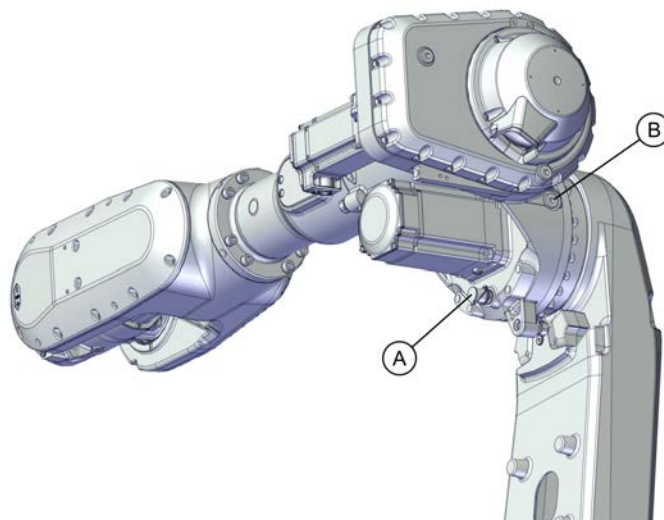
*Continued*

|   | Action   | Note  |
|---|--|---|
| 5 | Refill the gearbox with oil.<br> <b>Note</b><br>The amount of oil to be filled depends on the amount previously being drained.  | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .  |
| 6 | Inspect the oil level at the ventilation hole (level plug).<br> <b>CAUTION</b><br>The oil level sinks when the oil fills all cavities in the gearbox. Wait until the oil stops sinking, before measuring the oil level. | Required oil level is: 0-10 mm below oil plug hole (floor-mounted robot).<br>Required oil level is: 0-10 mm below oil plug hole (inverted robot).<br>More information is found in <a href="#">Inspecting the oil level in axis-2 gearbox on page 131</a> .  |
| 7 | Remove the oil dispenser.<br>Refit the protective cap on the nipple.   |   |
| 8 | Refit all removed oil plugs with new o-rings.  | O-ring, G 1/2": 3HAC061327-059<br>Tightening torque: 24 Nm.<br><br>xx2100002059<br><b>Option Inverted (3317-1)</b><br><br>xx2100002061 |
| 9 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> .                                 |   |

### 4.4.4 Changing the oil in axis-3 gearbox

#### Location of the gearbox and oil plugs

The gearbox and its oil plugs are located as shown in the figure.



xx2100002092

|   |   |
|---|---|
| A | Oil plug with nipple for draining and filling with an oil dispenser |
| B | Oil plug hole for ventilation and inspection                        |

#### Required tools and equipment

| Equipment             | Article number | Note  |
|-----------------------|----------------|---|
| Oil collecting vessel | -              | The capacity of the vessel must be sufficient to take the complete amount of oil.                                   |
| Oil dispenser         | -              | One example of oil dispenser can be found in section <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| Standard toolkit      | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

#### Required consumables and wear parts

| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

#### Required documents

| Document name   | Document number | Note |
|---|-----------------|------|
| Technical reference manual - Lubrication in gearboxes | 3HAC042927-001  |      |

*Continues on next page*

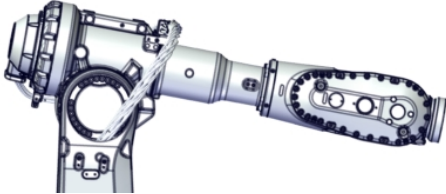
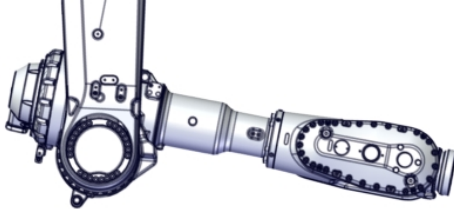



## 4 Maintenance

### 4.4.4 Changing the oil in axis-3 gearbox

*Continued*


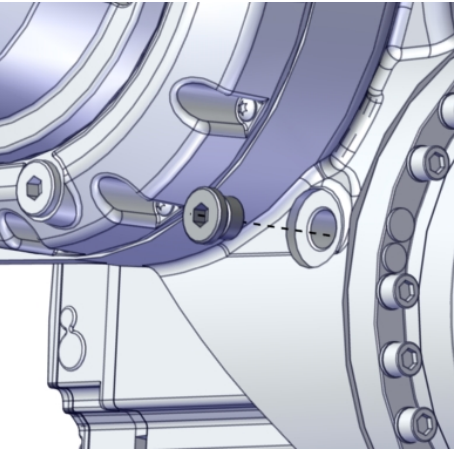
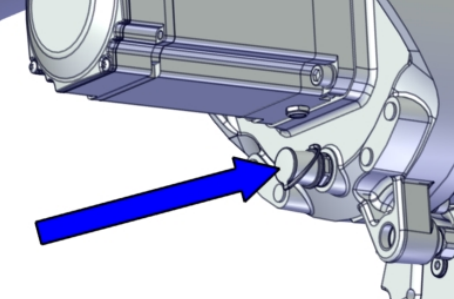


#### Draining the axis-3 gearbox

Use this procedure to drain the gearbox.

|   | Action  | Note   |
|---|---|--|
| 1 | <p><i>Floor-mounted robot:</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"><li>• Axis 1: no significance</li><li>• Axis 2: 0°</li><li>• Axis 3: +14°</li><li>• Axis 4: no significance</li><li>• Axis 5: no significance</li><li>• Axis 6: no significance</li></ul>                                  | <br>xx2100002068 |
| 2 | <p><i>Option Inverted (3317-1)</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"><li>• Axis 1: no significance</li><li>• Axis 2: 0°</li><li>• Axis 3: -166°</li><li>• Axis 4: no significance</li><li>• Axis 5: no significance</li><li>• Axis 6: no significance</li></ul>                             | <br>xx2100002069 |
| 3 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> <p>to the robot, before entering the safe-guarded space.</p> |  |
| 4 | <p> <b>WARNING</b></p> <p>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a>.</p>   |  |
| 5 | <p> <b>CAUTION</b></p> <p>The gearbox can contain an excess of pressure that can be hazardous. Open the oil plug carefully in order to let the excess pressure out.</p>  |  |

*Continues on next page*



|    | Action  | Note  |
|----|---|---|
| 6  | <p>Remove the plug from the ventilation hole.</p> <p> <b>WARNING</b></p> <p>Let the venting hole stay open during draining and filling using the dispenser, to avoid damaging vital parts in the gearbox.</p>  |  <p>xx2100002064</p>  |
| 7  | <p>Remove the protective cap from the nipple of the oil hole and connect the oil dispenser.</p>   |  <p>xx2100002093</p> |
| 8  | <p>Turn on the power supply to the robot temporarily</p>  |   |
| 9  | <p>Suck out the oil with the oil dispenser.</p> <p><i>Floor-mounted robot:</i><br/>Run axis 3 to 0° while draining, to reach all oil.</p> <p><i>Option Inverted (3317-1):</i><br/>Run axis 3 to -180° while draining, to reach all oil.</p> <p> <b>Note</b></p> <p>There will be some oil left in the gear after draining.</p> |   |
| 10 | <p> <b>WARNING</b></p> <p>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information.</p>  |   |

Continues on next page

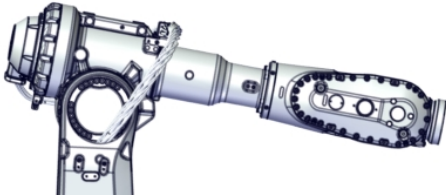
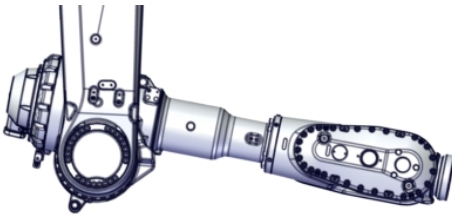



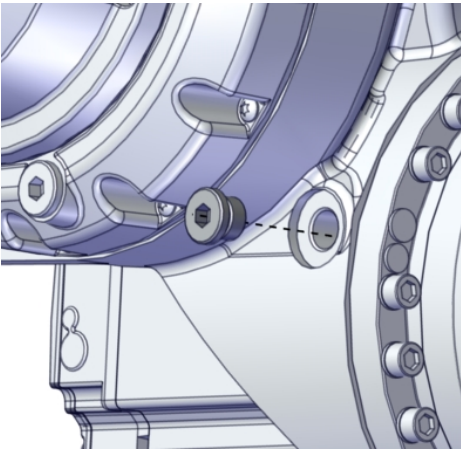
## 4 Maintenance

### 4.4.4 Changing the oil in axis-3 gearbox

*Continued*

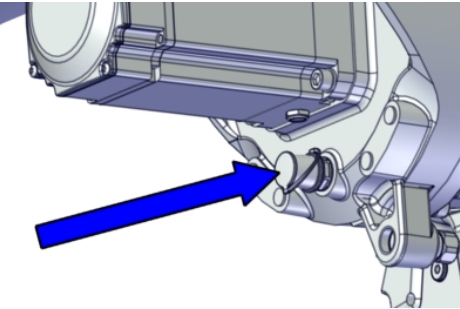


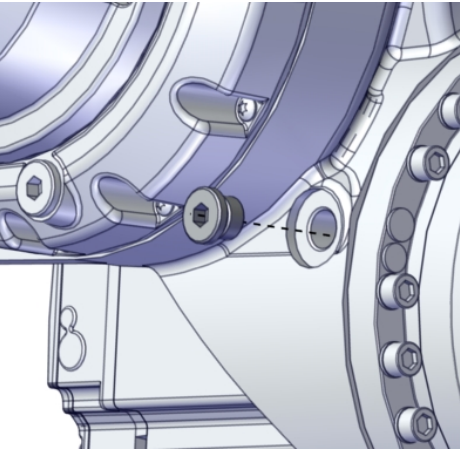

#### Filling oil into the axis-3 gearbox

Use this procedure to refill the gearbox with oil.

|   | Action  | Note   |
|---|---|--|
| 1 | <p><i>Floor-mounted robot:</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"><li>• Axis 1: no significance</li><li>• Axis 2: 0°</li><li>• Axis 3: +14°</li><li>• Axis 4: no significance</li><li>• Axis 5: no significance</li><li>• Axis 6: no significance</li></ul>                                  | <br>xx2100002068   |
| 2 | <p><i>Option Inverted (3317-1)</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"><li>• Axis 1: no significance</li><li>• Axis 2: 0°</li><li>• Axis 3: -166°</li><li>• Axis 4: no significance</li><li>• Axis 5: no significance</li><li>• Axis 6: no significance</li></ul>                             | <br>xx2100002069   |
| 3 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> <p>to the robot, before entering the safe-guarded space.</p> |  |
| 4 | <p> <b>WARNING</b></p> <p>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a>.</p>   |  |
| 5 | <p>Remove the plug from the ventilation hole.</p> <p> <b>WARNING</b></p> <p>Let the venting hole stay open during draining and filling using the dispenser, to avoid damaging vital parts in the gearbox.</p>                                    | <br>xx2100002064 |

*Continues on next page*



|    | Action  | Note  |
|----|---|---|
| 6  | Remove the protective cap from the nipple of the oil hole and connect the oil dispenser.  |  <p>xx2100002093</p>  |
| 7  | Refill the gearbox with oil.<br> <b>Note</b><br>The amount of oil to be filled depends on the amount previously being drained.   | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .  |
| 8  | Inspect the oil level at the ventilation hole (level plug).<br> <b>CAUTION</b><br>The oil level sinks when the oil fills all cavities in the gearbox. Wait until the oil stops sinking, before measuring the oil level. | More information is found in <a href="#">Inspecting the oil level in axis-3 gearbox on page 135</a> .   |
| 9  | Remove the oil dispenser.<br>Refit the protective cap on the nipple.  |   |
| 10 | Refit the oil plug with a new o-ring.   | O-ring, G 1/2": 3HAC061327-059<br>Tightening torque: 24 Nm.<br> <p>xx2100002064</p> |
| 11 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> .                                  |   |

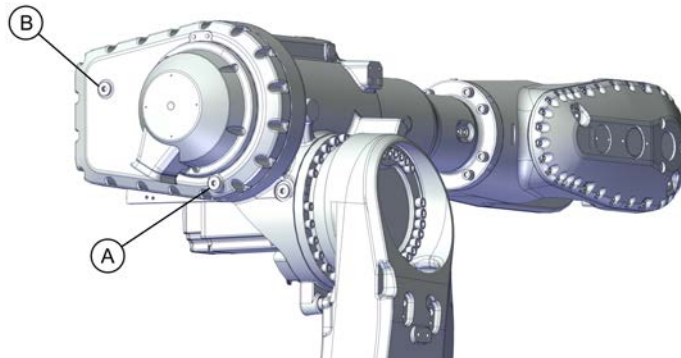
## 4 Maintenance

### 4.4.5 Changing the oil in axis-4 gearbox

### 4.4.5 Changing the oil in axis-4 gearbox

#### Location of the gearbox and oil plugs

The gearbox and its oil plugs are located as shown in the figure.



xx2100002094

|   |                                      |
|---|--------------------------------------|
| A | Oil plug for draining                |
| B | Oil plug for filling and ventilation |

#### Required tools and equipment

| Equipment             | Article number | Note  |
|-----------------------|----------------|---|
| Oil collecting vessel | -              | The capacity of the vessel must be sufficient to take the complete amount of oil.                                   |
| Oil dispenser         | -              | One example of oil dispenser can be found in section <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| Standard toolkit      | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

#### Required consumables and wear parts

| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

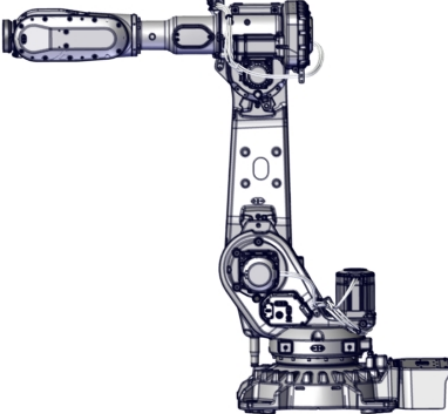



#### Required documents

| Document name  | Document number | Note |
|--|-----------------|------|
| <i>Technical reference manual - Lubrication in gearboxes</i> | 3HAC042927-001  |      |

*Continues on next page*

**Draining the axis-4 gearbox**

Use this procedure to drain the gearbox.

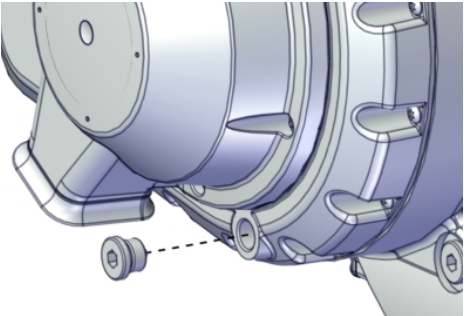

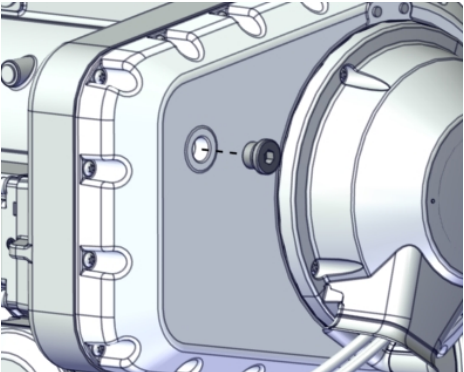

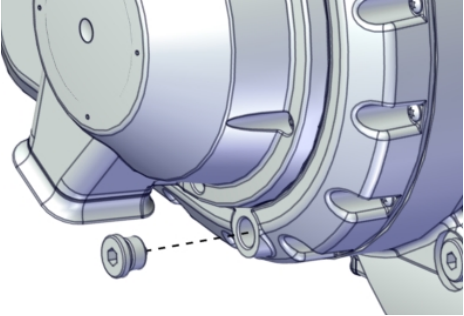
|   | Action   | Note   |
|---|--|--|
| 1 | <p><i>Floor-mounted robot:</i></p> <p>Run the robot to a position where the upper arm is horizontal.</p>   |  <p>xx2300000252</p> |
| 2 | <p><i>Option Inverted (3317-1)</i></p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: 0°</li> <li>• Axis 3: -180°</li> <li>• Axis 4: no significance</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul>   |  |
| 3 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p> |  |
| 4 | <p> <b>WARNING</b></p> <p>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a>.</p>  |  |
| 5 | <p> <b>CAUTION</b></p> <p>The gearbox can contain an excess of pressure that can be hazardous. Open the oil plug carefully in order to let the excess pressure out.</p>   |  |
| 6 | <p>Place the oil collecting vessel underneath the oil drain plug.</p>  |  |

Continues on next page

## 4 Maintenance

### 4.4.5 Changing the oil in axis-4 gearbox



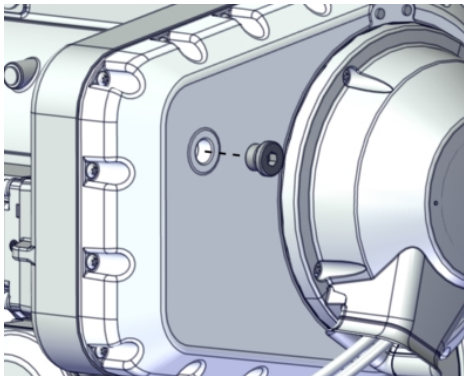


Continued

|    | Action  | Note  |
|----|---|---|
| 7  | Remove the oil plug from the drain hole and let the oil run into the vessel.  | <br>xx2100002095  |
| 8  | Remove the oil plug from the fill/level hole.<br> <b>Note</b><br>The oil plug hole is opened to speed up the drainage.   | <br>xx2100002072   |
| 9  |  <b>WARNING</b><br>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information. |   |
| 10 | Refit the oil plug for the drainage hole, with a new o-ring.  | O-ring, G 1/2": 3HAC061327-059<br>Tightening torque: 24 Nm.<br><br>xx2100002095 |

Continues on next page

## Filling oil into the axis-4 gearbox

Use this procedure to refill the gearbox with oil.

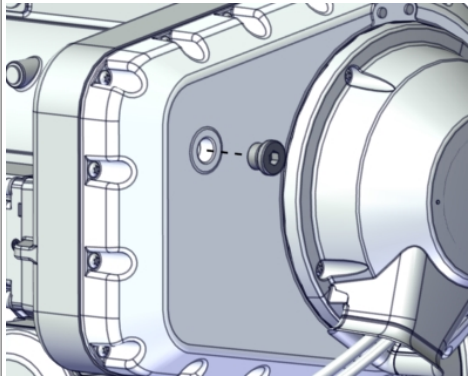

|   | Action   | Note   |
|---|--|--|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safe-guarded space. |  |
| 2 |  <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .  |  |
| 3 | Open the fill/level plug.  | <br>xx2100002072                                |
| 4 | Refill the gearbox with oil.<br> <b>Note</b><br>The amount of oil to be filled depends on the amount previously being drained.  | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .                         |
| 5 | Inspect the oil level.<br> <b>CAUTION</b><br>The oil level sinks when the oil fills all cavities in the gearbox. Wait until the oil stops sinking, before measuring the oil level.  | Required oil level is: 0-10 mm below oil plug hole<br>See <a href="#">Inspecting the oil level in axis-4 gearbox on page 139</a> . |

Continues on next page

## 4 Maintenance

### 4.4.5 Changing the oil in axis-4 gearbox

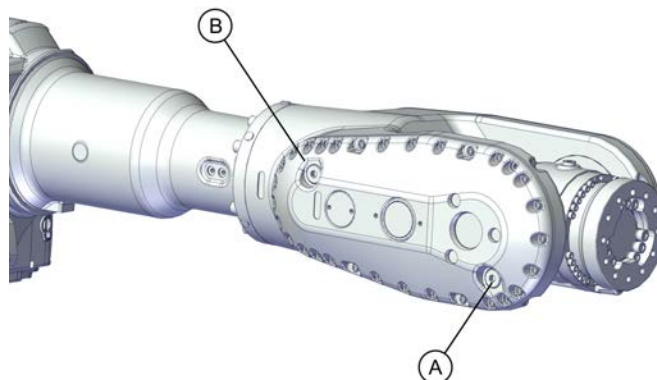
*Continued*

|   | Action   | Note   |
|---|--|--|
| 6 | Refit the oil plug with a new o-ring.  | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100002072</p> |
| 7 |  <b>DANGER</b><br><p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |  |

### 4.4.6 Changing the oil in axis-5 gearbox

#### Location of the gearbox and oil plugs

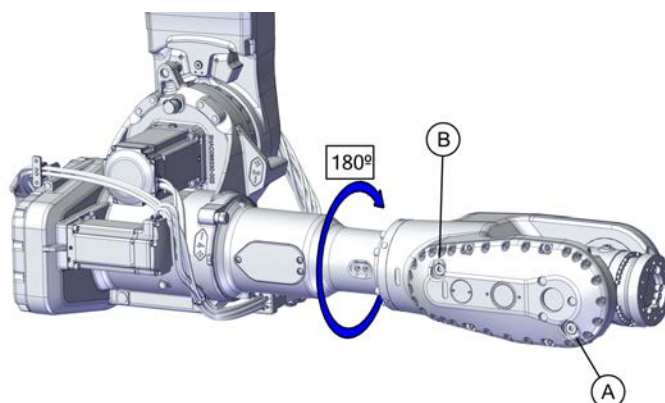
The gearbox and its oil plugs are located as shown in the figure.



xx2100002096

|   |                                      |
|---|--------------------------------------|
| A | Oil plug for draining                |
| B | Oil plug for filling and ventilation |

#### Option Inverted (3317-1)



xx2100002098

|   |                                      |
|---|--------------------------------------|
| A | Oil plug for draining                |
| B | Oil plug for filling and ventilation |

#### Required tools and equipment

| Equipment             | Article number | Note  |
|-----------------------|----------------|---|
| Oil collecting vessel | -              | The capacity of the vessel must be sufficient to take the complete amount of oil.                                   |
| Oil dispenser         | -              | One example of oil dispenser can be found in section <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| Standard toolkit      | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

*Continues on next page*

## 4 Maintenance

### 4.4.6 Changing the oil in axis-5 gearbox

*Continued*

#### Required consumables and wear parts




| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.          |

#### Required documents

| Document name  | Document number | Note |
|--|-----------------|------|
| <i>Technical reference manual - Lubrication in gearboxes</i> | 3HAC042927-001  |      |


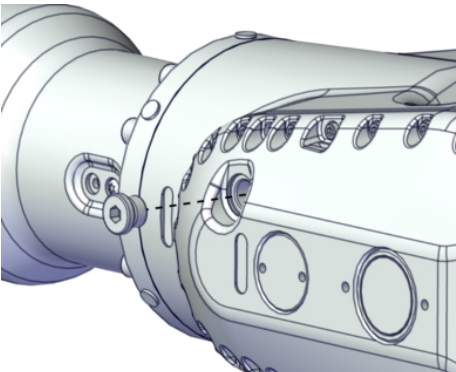
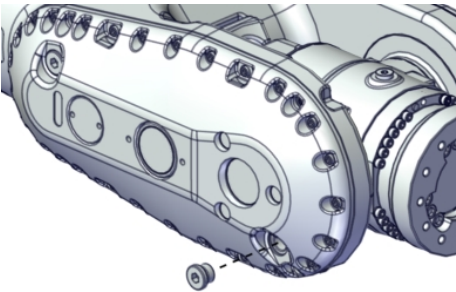

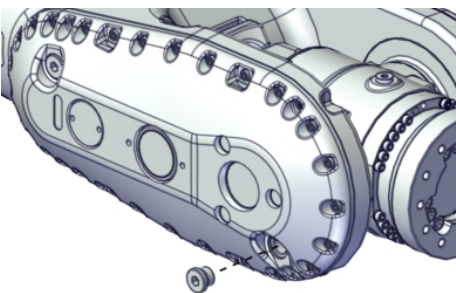
#### Draining the axis-5 gearbox

Use this procedure to drain the gearbox.

|   | Action   | Note |
|---|--|------|
| 1 | <i>Floor-mounted robot:</i><br>Jog the robot to calibration position.  |      |
| 2 | <i>Option Inverted (3317-1)</i> <ul style="list-style-type: none"><li>• Axis 1: no significance</li><li>• Axis 2: 0°</li><li>• Axis 3: 0°</li><li>• Axis 4: -180°</li><li>• Axis 5: no significance</li><li>• Axis 6: no significance</li></ul>  |      |
| 3 |  <b>DANGER</b><br><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safe-guarded space. |      |
| 4 |  <b>WARNING</b><br><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .  |      |
| 5 |  <b>CAUTION</b><br><br>The gearbox can contain an excess of pressure that can be hazardous. Open the oil plug carefully in order to let the excess pressure out.  |      |

*Continues on next page*



|    | Action   | Note   |
|----|--|--|
| 6  | <p>Remove the oil plug from the fill hole.</p> <p> <b>Note</b></p> <p>The oil plug hole is opened to speed up the drainage.</p>   |  <p>xx2100002075</p>   |
| 7  | Place the oil collecting vessel underneath the oil drain plug.   |  |
| 8  | Remove the oil plug from the drain hole and let the oil run into the vessel.   |  <p>xx2100002099</p>  |
| 9  | <p> <b>WARNING</b></p> <p>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information.</p> |  |
| 10 | Refit the oil plug for the drainage hole, with a new o-ring.   | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100002099</p> |

Continues on next page



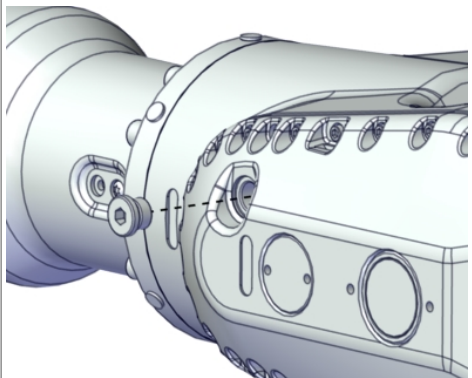


## 4 Maintenance

### 4.4.6 Changing the oil in axis-5 gearbox

*Continued*

#### Filling oil into the axis-5 gearbox

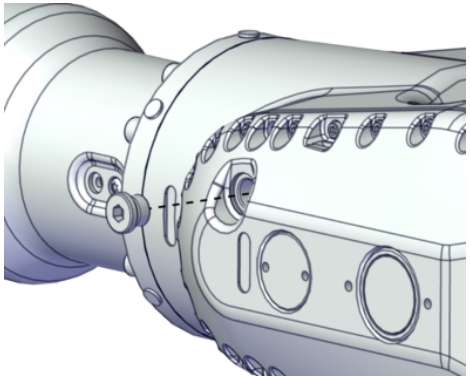

Use this procedure to refill the gearbox with oil.

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safe-guarded space.  |  |
| 2 |  <b>WARNING</b><br><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .   |  |
| 3 | Open the fill/level plug.   | <br><br>xx2100002075  |
| 4 | Refill the gearbox with oil.<br><br> <b>Note</b><br><br>The amount of oil to be filled depends on the amount previously being drained.   | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .   |
| 5 | Inspect the oil level at the oil fill/level hole (level plug).<br><br> <b>CAUTION</b><br><br>The oil level sinks when the oil fills all cavities in the gearbox. Wait until the oil stops sinking, before measuring the oil level. | Required oil level is: 0-10 mm below oil plug hole.<br><br>More information is found in <a href="#">Inspecting the oil level in axis-5 gearbox on page 142</a> . |

*Continues on next page*

### 4.4.6 Changing the oil in axis-5 gearbox

*Continued*

|   | Action   | Note   |
|---|--|--|
| 6 | Refit the oil plug with a new o-ring.  | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100002075</p> |
| 7 | <p> <b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |  |

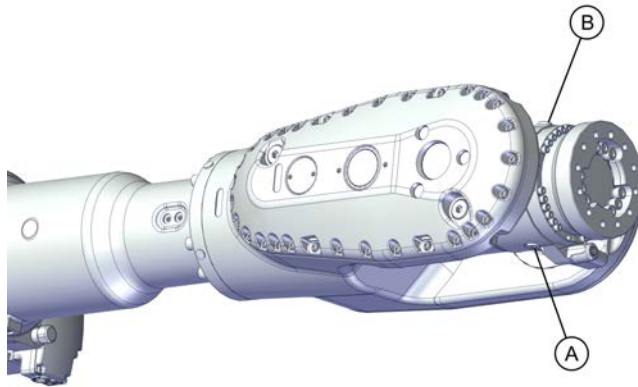
## 4 Maintenance

### 4.4.7 Changing the oil in axis-6 gearbox

### 4.4.7 Changing the oil in axis-6 gearbox

#### Location of the gearbox and oil plugs

The gearbox and its oil plugs are located as shown in the figure.



xx2100002100

|   |                                      |
|---|--------------------------------------|
| A | Oil plug for draining                |
| B | Oil plug for filling and ventilation |

#### Required tools and equipment

| Equipment             | Article number | Note  |
|-----------------------|----------------|---|
| Oil collecting vessel | -              | The capacity of the vessel must be sufficient to take the complete amount of oil.                                   |
| Oil dispenser         | -              | One example of oil dispenser can be found in section <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| Standard toolkit      | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

#### Required consumables and wear parts

| Wear part       | Article number | Note   |
|-----------------|----------------|--|
| Lubricating oil | -              | See <a href="#">Type of lubrication in gearboxes on page 148</a> . |
| O-ring, G 1/4"  | 3HAC061327-060 | Used on oil plug. Always replace when refitting oil plug.          |





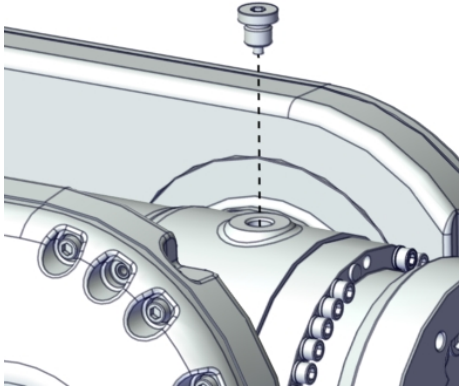
#### Required documents

| Document name  | Document number | Note |
|--|-----------------|------|
| <i>Technical reference manual - Lubrication in gearboxes</i> | 3HAC042927-001  |      |

*Continues on next page*

## Draining the axis-6 gearbox

Use this procedure to drain the gearbox.

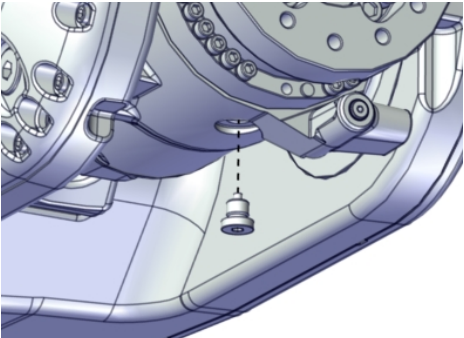

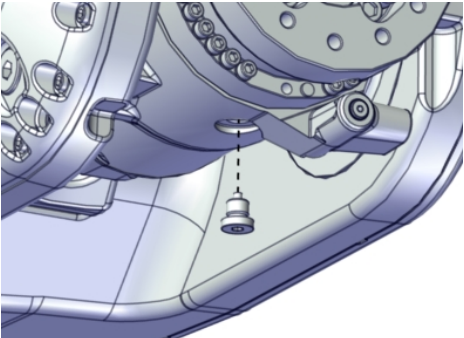
|   | Action   | Note   |
|---|--|--|
| 1 | <i>Floor-mounted robot:</i><br>Jog the robot to calibration position.  |  |
| 2 | <i>Option Inverted (3317-1)</i> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: 0°</li> <li>• Axis 3: 0°</li> <li>• Axis 4: -180°</li> <li>• Axis 5: 0°</li> <li>• Axis 6: no significance</li> </ul>  |  |
| 3 |  <b>DANGER</b><br><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safe-guarded space. |  |
| 4 |  <b>WARNING</b><br><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .  |  |
| 5 |  <b>CAUTION</b><br><br>The gearbox can contain an excess of pressure that can be hazardous. Open the oil plug carefully in order to let the excess pressure out.  |  |
| 6 | Remove the oil plug from the fill hole.<br><br> <b>Note</b><br><br>The oil plug hole is opened to speed up the drainage.  | <br>xx2100002077 |
| 7 | Place the oil collecting vessel underneath the oil drain plug.   |  |

Continues on next page

## 4 Maintenance


### 4.4.7 Changing the oil in axis-6 gearbox

Continued


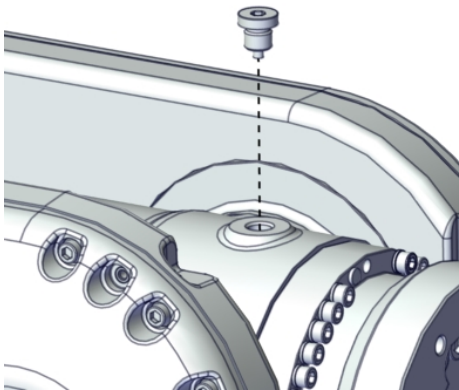


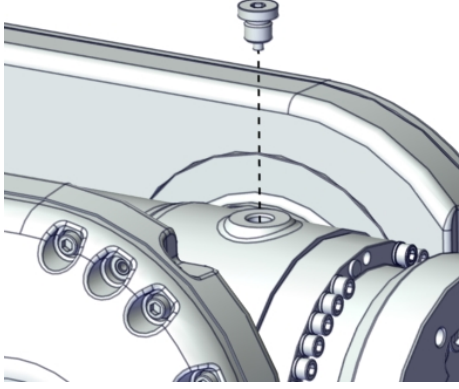
|    | Action  | Note  |
|----|---|---|
| 8  | Remove the oil plug from the drain hole and let the oil run into the vessel.  | <br>xx2100002101  |
| 9  |  <b>WARNING</b><br>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information. |   |
| 10 | Refit the oil plug for the drainage hole, with a new o-ring.  | O-ring, G 1/4": 3HAC061327-060<br>Tightening torque: 20 Nm.<br><br>xx2100002101 |

### Filling oil into the axis-6 gearbox

Use this procedure to refill the gearbox with oil.

|   | Action   | Note |
|---|--|------|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safe-guarded space. |      |

Continues on next page

|   | Action  | Note  |
|---|---|---|
| 2 |  <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .   |   |
| 3 | Open the fill plug.   | <br>xx2100002077  |
| 4 | Refill the gearbox with oil.<br> <b>Note</b><br>The amount of oil to be filled depends on the amount previously being drained.   | Type of oil and total amount is detailed in <i>Technical reference manual - Lubrication in gearboxes</i> .  |
| 5 | Check the oil level.<br> <b>CAUTION</b><br>The oil level sinks when the oil fills all cavities in the gearbox. Wait until the oil stops sinking, before measuring the oil level. | Required oil level is:<br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br>52-59 mm below oil plug hole<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID<br>46-53 mm below oil plug hole |
| 6 | Refit the oil plug with a new o-ring.   | O-ring, G 1/4": 3HAC061327-060<br>Tightening torque: 20 Nm.<br><br>xx2100002077     |


Continues on next page

## 4 Maintenance

---

### 4.4.7 Changing the oil in axis-6 gearbox

*Continued*

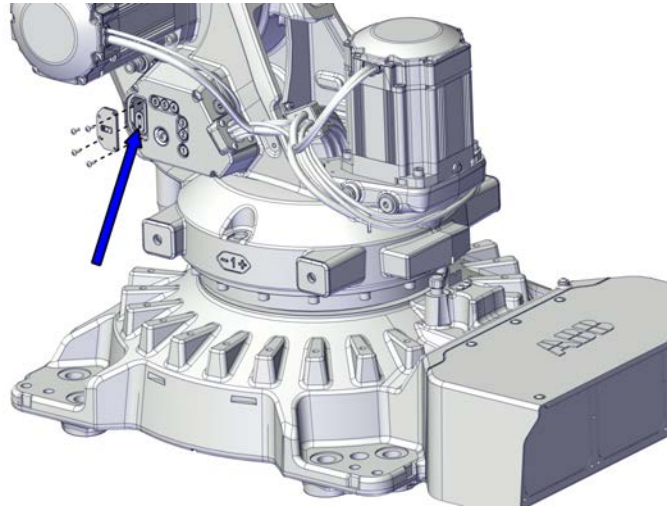
|   | Action   | Note |
|---|--|------|
| 7 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |      |



## 4.4.8 Replacing the SMB battery

### Location of the SMB battery

The SMB battery is located as shown in the figure.



xx2100002103

### Required consumables and wear parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Wear part    | Article number | Note  |
|--------------|----------------|---|
| Battery pack | 3HAC044075-001 | Battery includes protection circuits. Only replace with the specified spare part or an ABB-approved equivalent. |

### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

### Removing the battery

Use this procedure to remove the SMB battery.




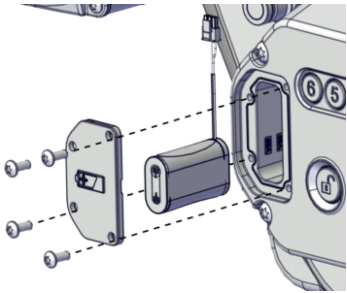

|   | Action                                     | Note  |
|---|--|---|
| 1 | Jog the robot to its calibration position. | This is done in order to facilitate updating of the revolution counter. |

*Continues on next page*

## 4 Maintenance


### 4.4.8 Replacing the SMB battery

*Continued*

|   | Action   | Note   |
|---|--|--|
| 2 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safeguarded space.  |  |
| 3 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <a href="#">The unit is sensitive to ESD on page 48</a> .                                |  |
| 4 | Remove the SMB battery cover by unscrewing the attachment screws.<br> <b>CAUTION</b><br>Clean cover from metal residues before opening. Metal residues can cause shortage on the boards which can result in hazardous failures. | <br>xx2100002131 |
| 5 | Pull out the battery and disconnect the battery cable.   |  |
| 6 | Remove the SMB battery.<br> <b>Note</b><br>Battery includes protection circuits. Only replace with a specified spare part or with an ABB-approved equivalent.   |  |



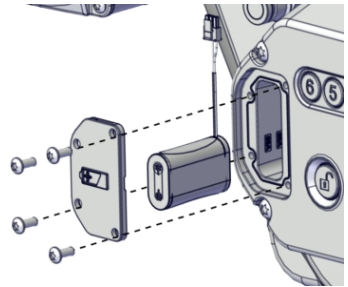

### Refitting the battery

Use this procedure to refit the SMB battery.

|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safeguarded space. |      |

*Continues on next page*

### 4.4.8 Replacing the SMB battery Continued

|   | Action  | Note  |
|---|---|---|
| 2 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <a href="#">The unit is sensitive to ESD on page 48</a> .   |   |
| 3 | Connect the battery cable and install the battery pack into the SMB/battery recess.<br> <b>Note</b><br>Make sure that the connector is assembled in the correct direction according to its keying. | Torx pan head screw: M5x12<br>Stainless steel A2-70 (4 pcs)<br>Tightening torque: 6 Nm.             |
| 4 | Secure the SMB battery cover with its attachment screws.  | <br>xx2100002131 |
| 5 | Update the revolution counters.   | See <a href="#">Updating revolution counters on page 628</a> .                                      |
| 6 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> .            |   |

## 4 Maintenance

### 4.5.1 Cleaning the IRB 5710

## 4.5 Cleaning activities

### 4.5.1 Cleaning the IRB 5710

#### General

To secure high uptime it is important that the IRB 5710 is cleaned regularly. The frequency of cleaning depends on the environment in which the manipulator works. Different cleaning methods are allowed depending on the type of protection of the IRB 5710.



#### Note

Always verify the protection type of the robot before cleaning.

#### Oil spills

##### Oil spills from gearboxes

Use the following procedure if any oil spills are detected that can be suspected to originate from a gearbox.

|   | Action   | Note  |
|---|--|---|
| 1 | Inspect that the oil level in the suspected gearbox is according to the recommendations. | See <a href="#">Inspection activities on page 114</a> |
| 2 | Write down the oil level.  |   |
| 3 | Inspect the oil level again after, for example, 6 months.                                |   |
| 4 | If the oil level is decreased, replace the gearbox.                                      |   |

##### Oil spills discolors painted surfaces

Oil spills on painted surfaces of the robot can result in discoloration.



#### Note

After all repair and maintenance work involving oil, always wipe the robot clean from all surplus oil.



#### WARNING

Turn off all electrical power supplies to the robot before starting the cleaning.

#### Special cleaning considerations

This section specifies some special considerations when cleaning the robot.

- Always use cleaning equipment as specified. Any other cleaning equipment may shorten the life of the robot.
- Always check that all protective covers are fitted to the robot before cleaning.
- Do not use compressed air to clean the robot.

*Continues on next page*

- Do not remove any covers or other protective devices before cleaning the robot.

#### Cleaning methods

This following table defines what cleaning methods are allowed for ABB manipulators depending on the protection type.

| Protection type     | Cleaning method |   |  |                                     |
|---------------------|-----------------|---|--|-------------------------------------|
|                     | Vacuum cleaner  | Wipe with cloth   | Rinse with water   | High pressure water, steam or spray |
| <b>Standard</b>     | Yes             | Yes. With mild cleaning detergent <sup>i</sup> or white spirit. | Yes. The water must contain a corrosion inhibitor and the manipulator must also be wiped with a drying cloth afterwards. | No                                  |
| <b>Foundry Plus</b> | Yes             | Yes. With mild cleaning detergent <sup>i</sup> or white spirit. | Yes. The water must contain a corrosion inhibitor.   | No                                  |

<sup>i</sup> Cleaning agent to be tested on a small surface prior usage on complete manipulator.

#### Cleaning with water

##### Instructions for rinsing with water

ABB robots with protection types *Standard* or *Foundry Plus* can be cleaned by rinsing with water (water cleaner).<sup>1</sup>

The following list defines the prerequisites:

- Spray nozzle should be used with minimum 45° spread.
- Minimum distance from nozzle to encapsulation: 0.4 m.
- Maximum water pressure at the nozzle: 700 kN/m<sup>2</sup> (7 bar)<sup>1</sup>
- Maximum flow: 20 liters/min<sup>1</sup>

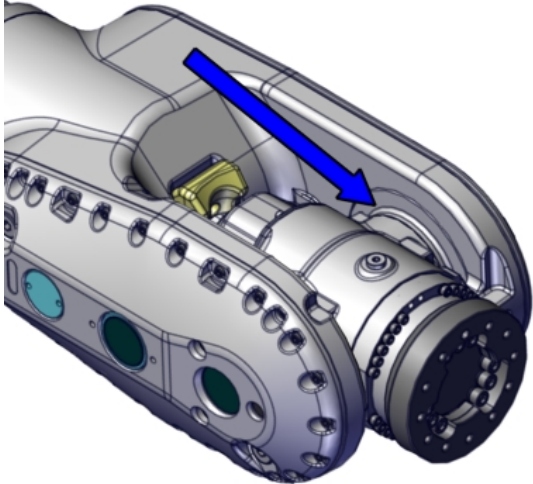
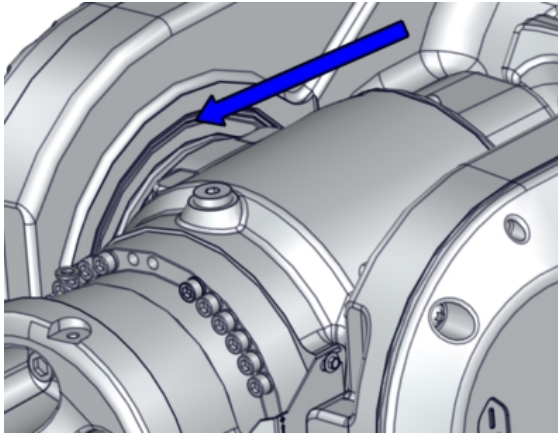
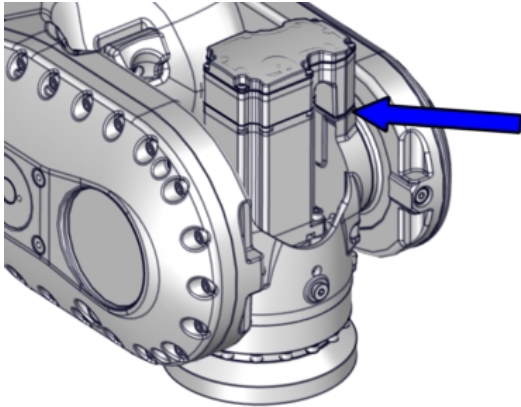
<sup>1</sup> Exceptions that can not be rinsed with water: motor cooling fans (option number 3320-1, 3321-1).

# 4 Maintenance

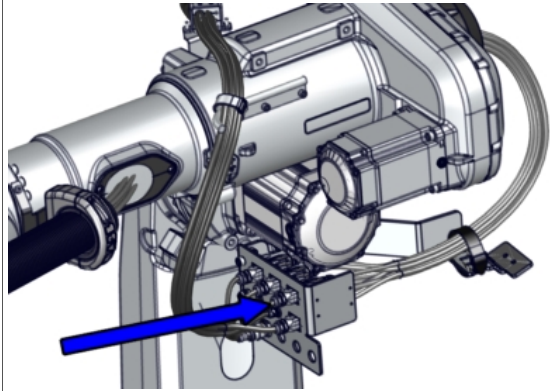
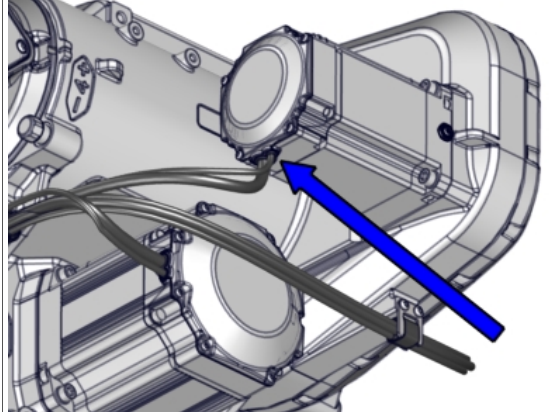
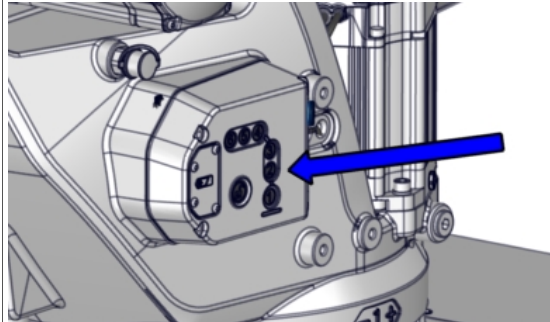
## 4.5.1 Cleaning the IRB 5710

Continued

- Never point the nozzle at the following positions (example images):

| Position            | Example of position  |
|---------------------|--|
| Joints              | <br>xx2300001071   |
| Rotational sealings | <br>xx2300001055  |
| Gaskets             | <br>xx2300001056 |

Continues on next page

| Position              | Example of position  |
|-----------------------|--|
| Connectors            |  <p>xx2300001057</p>   |
| Cable inlets          |  <p>xx2300001058</p>  |
| Brake release buttons |  <p>xx2300001059</p> |

I Typical tap water pressure and flow

## Cables

Movable cables need to be able to move freely:

- Remove waste material, such as sand, dust and chips, if it prevents cable movement.
- Clean the cables if they have a crusty surface, for example from dry release agents.

*Continues on next page*

## 4 Maintenance

---

### 4.5.1 Cleaning the IRB 5710

*Continued*

---

#### Cassette sealings

Minor seepage of grease from the seals can occur. Wipe down affected areas with a dry cloth.

---

#### Cooling fans

Inspect the air supply inlet of the the motor cooling fans. Clean to remove any contamination that could hinder the air supply.



## 5 Repair

### 5.1 Introduction

#### Structure of this chapter

This chapter describes repair activities for the IRB 5710. Each procedure contains the information required to perform the activity, for example spare parts numbers, required special tools, and materials.



#### WARNING

Repair activities not described in this chapter must only be carried out by ABB.

#### Report replaced units



#### Note

When replacing a part on the IRB 5710, report to your local ABB the serial number, the article number, and the revision of both the replaced unit and the replacement unit.

This is particularly important for safety equipment to maintain the safety integrity of the installation.

#### Safety information

Make sure to read through the chapter [Safety on page 15](#) before commencing any service work.



#### Note

If the IRB 5710 is connected to power, always make sure that the IRB 5710 is connected to protective earth and a residual current device (RCD) before starting any repair work.

For more information see:

- *Product manual - OmniCore V250XT Type B*
- *Product manual - OmniCore V400XT*

## 5 Repair

### 5.2.1 Performing a leak-down test

## 5.2 General procedures

### 5.2.1 Performing a leak-down test

#### When to perform a leak-down test


After refitting any motor and gearbox, the integrity of all seals enclosing the gearbox oil must be tested. This is done in a leak-down test.

The gearbox must be drained of oil before performing the leak-down test.

#### Required equipment

| Equipment, etc.      | Article number | Note |
|----------------------|----------------|------|
| Leak-down tester     | -              |      |
| Leak detection spray | -              |      |

#### Performing a leak-down test

|   | Action  | Note   |
|---|---|--|
| 1 | Finish the refitting procedure of the motor or gear in question, but <b>do not</b> refill the gearbox with oil before performing the leak-down test.  |  |
| 2 | Remove the upper oil plug on the gear and replace it with the leak-down tester.<br>Regulators, which are included in the leak-down test, may be required.   |  |
| 3 | Use caution, apply compressed air and raise the pressure with the knob until the correct value is shown on the manometer.<br> <b>CAUTION</b><br>The pressure must under no circumstance be higher than 0.25 bar (20-25 kPa). Also during the time when the pressure is raised. | Correct value:<br>0.2-0.25 bar (20-25 kPa)   |
| 4 | Disconnect the compressed air supply.   |  |
| 5 | Wait for approximately 8-10 minutes and make sure that no pressure loss occurs.   | If the compressed air is significantly colder or warmer than the gearbox to be tested, a slight pressure increase or decrease may occur. This is quite normal. |
| 6 | If any pressure drop occurred, then localize the leak as described in step 7.<br>If no pressure drop occurred, then remove the leak-down tester and refit the oil plug. The test is complete.   |  |
| 7 | Spray any suspected leak areas with the leak detection spray. Bubbles indicate a leak.  |  |
| 8 | When the leak has been localized, take the necessary measures to correct the leak.  |  |

## 5.2.2 Mounting instructions for bearings

### General

This section describes how to mount and grease different types of bearings on the robot.

### Equipment

| Equipment, etc. | Article number | Note   |
|-----------------|----------------|--|
| Grease          | 3HAC042536-001 | Shell Gadus S2<br>Used to grease the bearings, if not specified otherwise. |

### Assembly of all bearings


Attend to the following instructions while mounting a bearing on the robot.

|   | Action  | Note |
|---|---|------|
| 1 | To avoid contamination, let a new bearing remain in its wrapping until it is time for fitting.  |      |
| 2 | Ensure that the parts included in the bearing fitting are free from burrs, grinding waste, and other contamination. Cast components must be free of foundry sand.         |      |
| 3 | Bearing rings, inner rings, and roller elements must not be subjected to direct impact. The roller elements must not be exposed to any stresses during the assembly work. |      |

### Assembly of tapered bearings

Follow the preceding instructions for the assembly of the bearings when mounting a tapered bearing on the robot.

In addition to those instructions, the following procedure must be carried out to enable the roller elements to adjust to the correct position against the race flange.

|   | Action   | Note |
|---|--|------|
| 1 | Tension the bearing gradually until the recommended pre-tension is achieved.<br><br> <b>Note</b><br><br>The roller elements must be rotated a specified number of turns before pre-tensioning is carried out and also rotated during the pre-tensioning sequence. |      |
| 2 | Make sure the bearing is properly aligned as this will directly affect the durability of the bearing.  |      |

### Greasing of bearings



#### Note

This instruction is not valid for solid oil bearings.

*Continues on next page*

The bearings must be greased after assembly according to the following instructions:

- The bearings must not be completely filled with grease. However, if space is available beside the bearing fitting, the bearing may be totally filled with grease when mounted, as excessive grease will be pressed out from the bearing when the robot is started.
- During operation, the bearing should be filled to 70-80% of the available volume.
- Ensure that grease is handled and stored properly to avoid contamination.

Grease the different types of bearings as following description:

- *Grooved ball bearings* must be filled with grease from both sides.
- *Tapered roller bearings* and axial needle bearings must be greased in the split condition.

## 5.2.3 Mounting instructions for sealings

### General

This section describes how to mount different types of sealings.

### Equipment

| Consumable | Article number | Note           |
|------------|----------------|----------------|
| Grease     | 3HAC042536-001 | Shell Gadus S2 |

### Rotating sealings

The following procedures describe how to fit rotating sealings.



#### CAUTION

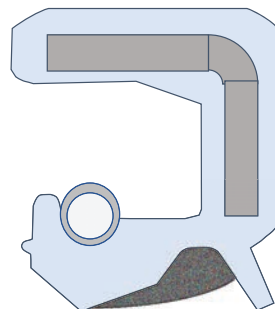
Please observe the following before commencing any assembly of sealings:

- Protect the sealing during transport and mounting, especially the main lip on radial sealings.
- Keep the sealing in its original wrappings or protect it well before actual mounting.
- The fitting of sealings and gears must be carried out on clean workbenches.
- Use a protective sleeve for the main lip during mounting, when sliding over threads, keyways or other sharp edges.
- Do not lubricate a static side of a sealing with grease, since this may result in movement of the sealing during operation.

The only exception for lubrication of static sides of a sealing, is to use P-80 rubber lubrication gel against certain aluminium surfaces. If usage of P-80 is relevant, it is stated in the repair procedures.

### Radial sealings

A radial sealing consists of a flexible rubber lip bonded to a rigid metal case. Only one side of the sealing is static with a metal insert.



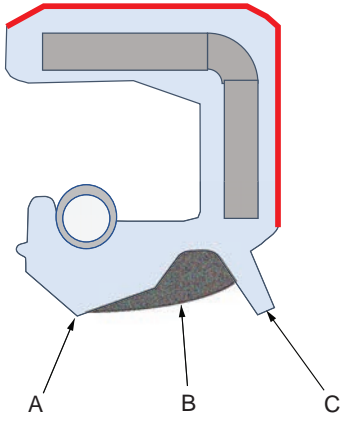

xx2300000433

*Continues on next page*

## 5 Repair

### 5.2.3 Mounting instructions for sealings

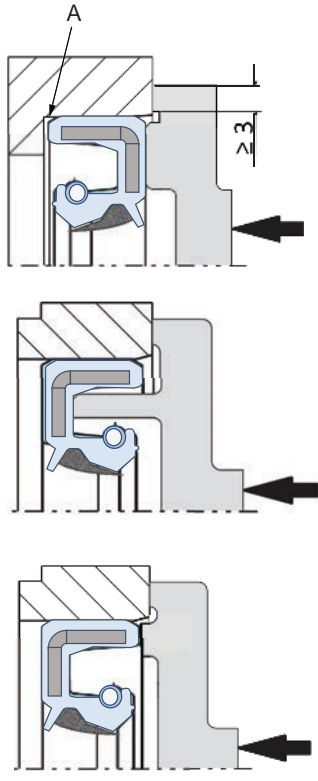
*Continued*

|   | Action  | Note  |
|---|---|---|
| 1 | Check the sealing to ensure that: <ul style="list-style-type: none"> <li>The sealing is of the correct type.</li> <li>There is no damage on the main lip.</li> </ul>  |   |
| 2 | Inspect the shaft surface before mounting. If scratches or damage are found, the shaft must be replaced since it may result in future leakage. Do not try to grind or polish the shaft surface to get rid of the defect.  |   |
| 3 | <p>Lubricate the sealing with grease just before fitting. (Not too early - there is a risk of dirt and foreign particles adhering to the sealing.)</p> <p>Fill 2/3 of the space between the dust lip and the main lip with grease. If the sealing is without dust lip, just lubricate the main lip with a thin layer of grease.</p> | <p>Article number is specified in <a href="#">Equipment on page 199</a>.</p>  <p>xx2000000071</p> <p>A Main lip<br/>B Grease<br/>C Dust lip</p> <p> <b>Note</b></p> <p>Ensure that no grease is applied to the red marked surface.</p> |

*Continues on next page*

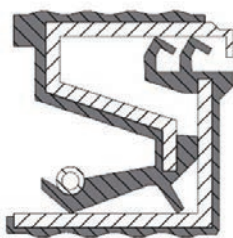
### 5.2.3 Mounting instructions for sealings

*Continued*

|   | Action  | Note  |
|---|---|---|
| 4 | Mount the sealing correctly with a mounting tool. Never hammer directly on the sealing as this may result in leakage. |  <p>xx2000000072</p> <p>A Gap</p> |

#### Cassette sealings

A cassette sealing is a fully enclosed seal with an integrated sealing system. Both sides of the cassette sealing are static with metal inserts.



xx2300000432

|   | Action  | Note |
|---|---|------|
| 1 | Check the sealing to ensure that: <ul style="list-style-type: none"> <li>The sealing is of the correct type.</li> <li>There is no damage on the sealing.</li> </ul>   |      |
| 2 | Inspect the mating surfaces on the manipulator before mounting. If scratches or damage are found, the part must be replaced since it may result in future leakage. Do not try to grind or polish the surfaces to get rid of the defect. |      |

*Continues on next page*

## 5 Repair

### 5.2.3 Mounting instructions for sealings

*Continued*

|   | Action   | Note   |
|---|--|--|
| 3 | Always install the sealing with a mounting tool specified by ABB.<br>Never hammer directly on the sealing as this may result in leakage. | See the replacement procedure for the cassette sealing, in the repair chapter. |



#### Note

A new sealing has an initial wear that can cause lubricant to seep out and in some cases produce minor residues of rubber particles.

This is normal behavior of the sealing and does not indicate a seal problem. Wipe the surrounding surfaces after initial run time.

### Flange sealings and static sealings

The following procedure describes how to fit flange sealings and static sealings.

|   | Action  |
|---|---|
| 1 | Check the flange surfaces. They must be even and free from pores.<br>It is easy to check flatness using a gauge on the fastened joint (without sealing compound).<br>If the flange surfaces are defective, the parts may not be used because leakage could occur. |
| 2 | Clean the surfaces properly in accordance with the recommendations of ABB.  |
| 3 | Distribute the sealing compound evenly over the surface.  |
| 4 | Tighten the screws evenly when fastening the flange joint.  |

### O-rings

The following procedure describes how to fit o-rings.

|   | Action  | Note   |
|---|---|--|
| 1 | Ensure that the correct o-ring size is used.  |  |
| 2 | Check the o-ring for surface defects, burrs, shape accuracy, or deformation.  | Defective o-rings, including damaged or deformed o-rings, may not be used. |
| 3 | Check the o-ring grooves and mating surfaces. They should be free of pores, contamination and obvious scratches/damage. |  |
| 4 | Lubricate the o-ring with grease.   |  |
| 5 | Tighten the screws evenly while assembling.   |  |
| 6 | Check that the o-ring is not squashed outside the o-ring groove.  |  |



## 5.2.4 Cut the paint or surface on the robot before replacing parts

## 5.2.4 Cut the paint or surface on the robot before replacing parts

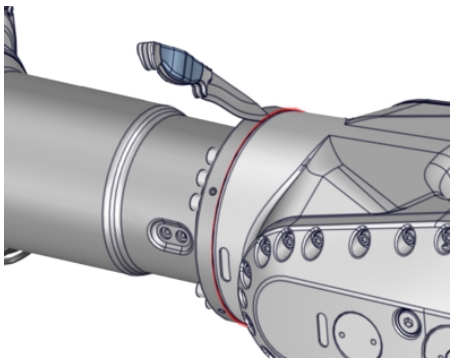
## General

Follow the procedures in this section whenever breaking the paint of the robot during replacement of parts.

## Required equipment

| Equipment                            | Spare parts    | Note       |
|--------------------------------------|----------------|------------|
| Cleaning agent                       |                | Ethanol    |
| Knife                                |                |            |
| Lint free cloth                      |                |            |
| Touch up paint Standard/Foundry Plus | 3HAC037052-001 | ABB Orange |

## Removing

|   | Action   | Description   |
|---|--|---|
| 1 | Cut the paint with a knife in the joint between the part that will be removed and the structure, to avoid that the paint cracks. | <br>xx2300000950 |
| 2 | Carefully grind the paint edge that is left on the structure to a smooth surface.  |   |

## 5 Repair

### 5.3.1 Lifting down the manipulator from inverted to floor-standing position

## 5.3 Lifting procedures

### 5.3.1 Lifting down the manipulator from inverted to floor-standing position

#### General

This section details how to lift down the robot from its inverted position, rotate it and secure it floor mounted in order to perform service procedures that require the robot to be standing on the floor.

#### Required tools and equipment

| Equipment                               | Article number | Note  |
|---|----------------|---|
| Fork lift accessory set                 | 3HAC058825-001 | Contains fork lift pockets and all required hardware for installation on frame.<br>User instructions are enclosed with the tool.      |
| Fork lift accessory set                 | 3HAC047054-003 | Contains fork lift pockets and all required hardware for installation on robot base.<br>User instructions are enclosed with the tool. |
| Fork lift truck with rotator attachment | -              | Required for rotating the robot to an inverted position.  |


#### Required documents

| Document  | Document number |
|---|-----------------|
| Directions for use - Fork lift accessory set 3HAC058825-001 | 3HAC060303-001  |
| Directions for use - Fork lift accessory set 3HAC047054-001 | 3HAC048484-002  |

#### Removing the robot from inverted position

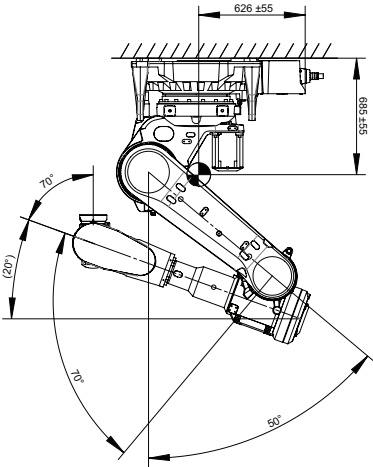



Use these procedures to lift down the robot from inverted position and rotate it to floor standing.

#### Lifting down the robot from inverted position

|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br><br>The robot must always be secured to the foundation if any kind of repair or maintenance work is to be performed.<br>For some repair work support legs are required. | Suitable screws, lightly lubricated:<br>M24 x 100 (min. 4 pcs)<br>For hole configuration, see <a href="#">Hole configuration, base on page 75</a> . |

*Continues on next page*

### 5.3.1 Lifting down the manipulator from inverted to floor-standing position Continued



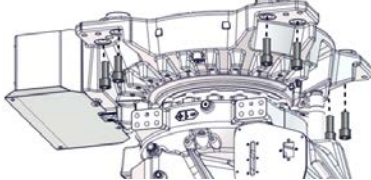
|   | Action   | Note  |
|---|--|---|
| 2 | <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: calibration position (0°)</li> <li>• Axis 2: -50°</li> <li>• Axis 3: +70°</li> <li>• Axis 4: calibration position (0°)</li> <li>• Axis 5: +70°</li> <li>• Axis 6: no significance</li> </ul>  |  <p>xx2100000976</p>                     |
| 3 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safeguarded space.</p>  |   |
| 4 | Disconnect the robot cables at the base.   |   |
| 5 | <p> <b>CAUTION</b></p> <p>The weight of the IRB 5710 robot is</p> <p>IRB 5710-110/2.3: 830 kg (<i>Inverted: 845 kg</i>)</p> <p>IRB 5710-90/2.7: 830 kg (<i>Inverted: 840 kg</i>)</p> <p>IRB 5710-90/2.3 LID: 890 kg (<i>Inverted: 905 kg</i>)</p> <p>IRB 5710-70/2.7 LID: 885 kg (<i>Inverted: 900 kg</i>)</p> <p>All lifting accessories used must be sized accordingly.</p> |   |
| 6 | <p>Install the fork lift pockets to the robot.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p>  | <p>See user instructions enclosed with the fork lift accessory set.</p> <p>Fork lift accessory set:<br/>3HAC058825-001.</p> |

Continues on next page

## 5 Repair

### 5.3.1 Lifting down the manipulator from inverted to floor-standing position

*Continued*

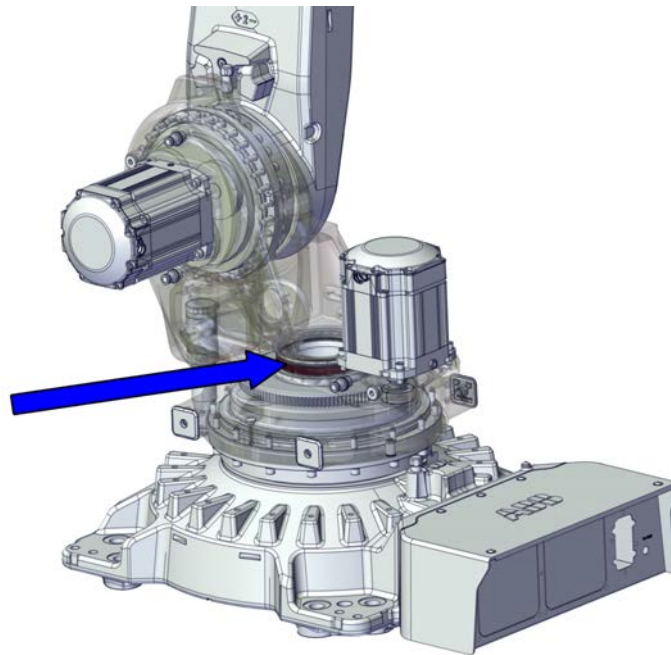
|    | Action  | Note  |
|----|---|---|
| 7  | <p>Choose one of the following lifting methods:</p> <ul style="list-style-type: none"> <li>Lifting and turning with the fork lift (rotator attachment required): <ol style="list-style-type: none"> <li>1 Insert the forks of the fork lift truck into the fork lift pockets, as far as possible.</li> <li>2 Raise the forks of the fork lift truck to make sure that the weight of the robot rests on the forks.</li> </ol> <div style="text-align: center;">  <b>Tip</b> </div> <p>Two M16 screws can be fitted to the fork lift pockets, to press the forks against the pockets and make the lift more stable.</p> </li> <li>Lifting and turning with the turning tool and overhead crane: <ol style="list-style-type: none"> <li>1 Install and use the turning tool according to enclosed user instructions.</li> </ol> <div style="text-align: center;">  <b>DANGER</b> </div> <p>Handling the tool incorrectly will cause serious injury.<br/>Read and follow enclosed user instructions for the tool.</p> </li> </ul> | <p>See user instructions enclosed with the turning tool.<br/>Lifting and turning tool: 3HAC073537-001.</p>                        |
| 8  | Remove the bolts that secure the robot to the foundation.   | <p>Quantity: 8 pcs.</p>  <p>xx1600002098</p> |
| 9  | Rotate the robot to floor standing position.  | Follow the user instructions enclosed with the turning tool.  |
| 10 | <p>Lower and secure the robot to the floor.<br/>(Or to support legs, if replacing the axis-1 gearbox.)</p> <p>The lifting accessories can be kept installed if they are not in the way for the upcoming service procedure.</p>  | Attachment screws: M24 x 100 (min. 4 pcs required to perform service)   |

## 5.4 Axes 1 and 2

### 5.4.1 Replacing the axis-1 cassette sealing

#### Location of the cassette sealing

The axis-1 cassette sealing is located as shown in the figure.



xx2100002220

#### Summary of the replacement procedure

This is a brief summary of the replacement procedure, containing the major actions to be performed.

- 1 Remove the cable harness from the base.
- 2 Remove the protection ring and protection tube from the frame.
- 3 Replace the cassette sealing.

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part       | Article number | Note | Level |
|------------------|----------------|------|-------|
| Cassette sealing | 3HAC070194-013 |      | L2    |

*Continues on next page*

## 5 Repair

### 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

#### Required service parts

| Consumable      | Article number | Note   |
|-----------------|----------------|--|
| Grease          | 3HAC042536-001 | Shell Gadus S2   |
| Rust preventive | 3HAC034903-001 | Mercasol 3110 Waxcoat. Recommended drying time is 24h.   |
| Sealant (grey)  | 3HAC026759-001 | Sikaflex 521FC.<br><i>Protection type Foundry Plus.</i><br><i>Not required for option Inverted (3317-1).</i> |
| O-ring          | 3HAB3772-57    | On axis-1 protection ring.<br><i>Not required for option Inverted (3317-1).</i>                              |
| Locking liquid  | -              | Loctite 2400 (or equivalent Loctite 243)   |


#### Required tools and equipment

| Equipment                             | Article number | Note   |
|---------------------------------------|----------------|--|
| Replacement tool for cassette sealing | 3HAC079880-001 | For removing and fitting cassette sealing on axis 1                          |
| Standard toolkit                      | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |


#### Removing the cassette sealing

Use these procedures to remove the cassette sealing.

#### Preparations before removing the cassette sealing

|   | Action  | Note |
|---|---|------|
| 1 | Jog the robot to synchronization position.  |      |
| 2 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safeguarded space. |      |

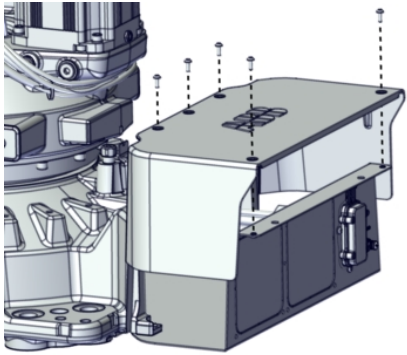
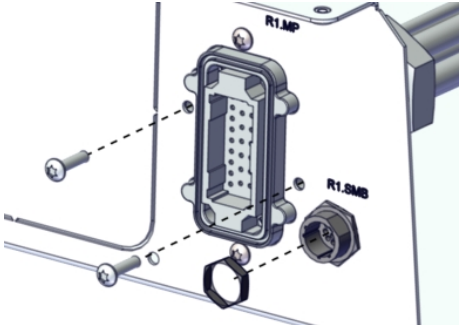
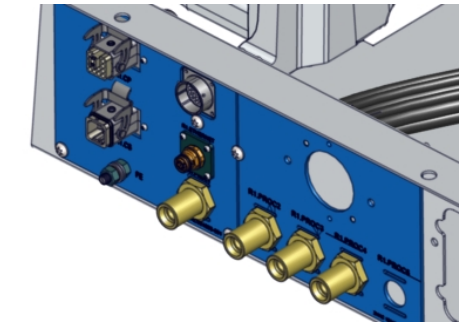
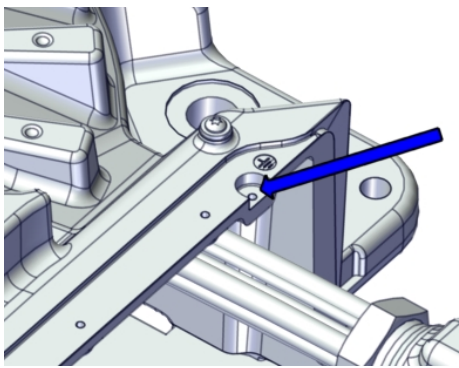
#### Preparations before removing the cable harness in the base

|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |      |

*Continues on next page*

## 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

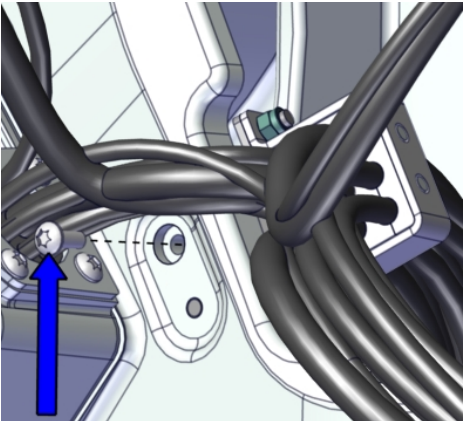
|   | Action   | Note   |
|---|--|--|
| 2 | Remove the base cover.   |  <p>xx2100000981</p>   |
| 3 | Loosen the connectors: <ul style="list-style-type: none"> <li>• R1.MP</li> <li>• R1.SMB</li> </ul> |  <p>xx2100001109</p>  |
| 4 | If used, disconnect the DressPack hoses in the base.   |  <p>xx2300001093</p> |
| 5 | Disconnect the earth cable.  |  <p>xx2100000982</p> |

*Continues on next page*

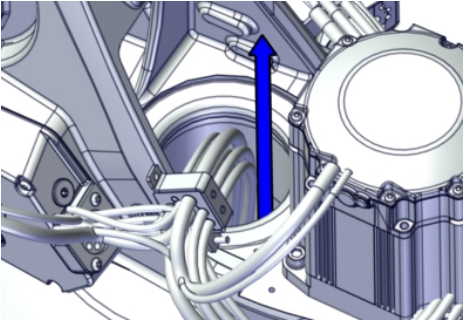
## 5 Repair

### 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

|   | Action   | Note   |
|---|--|--|
| 6 | Loosen the cable bracket from the frame by removing the screw. | <br>xx2100001108 |

#### Removing the cable harness from the base

|   | Action   | Note   |
|---|--|--|
| 1 | If equipped with DressPack, pull out the DressPack cables through the protection tube. |  |
| 2 | Pull out the robot cable harness through the protection tube.                          | <br>xx2100001111 |
| 3 | Place the cable harness safely on the frame or on the axis-2 motor.                    |  |

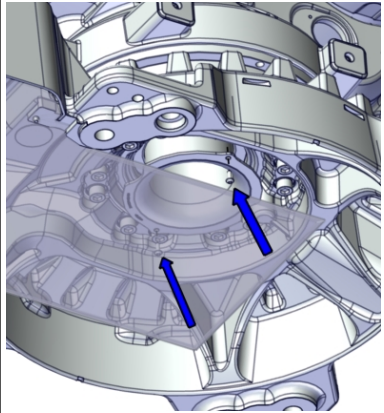
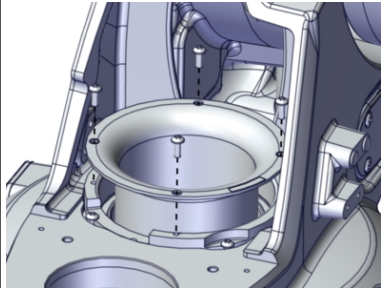
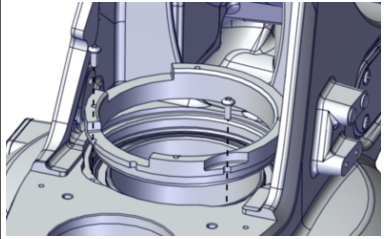
*Continues on next page*



### 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

#### Removing the protection tube

|   | Action   | Note  |
|---|--|---|
| 1 | <i>Floor-mounted robot:</i><br>Loosen the protection tube by removing the two screws underneath.<br>Let the tube slide down. | <br>xx2100002214   |
| 2 | <i>Option Inverted (3317-1):</i><br>Remove the protection tube by removing the attachment screws.                            | <br>xx2100002492  |
| 3 | <i>Option Inverted (3317-1):</i><br>Remove the adapter by removing the attachment screws.                                    | <br>xx2100002493 |

#### Removing the protection ring in the frame

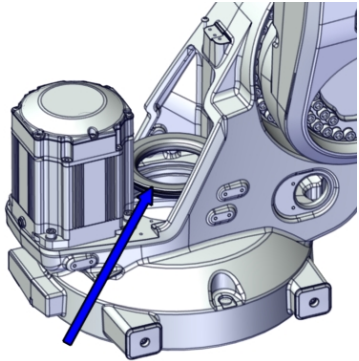
|   | Action   | Note |
|---|--|------|
| 1 | <i>Only for floor-mounted robot</i><br><i>Foundry Plus</i><br>Cut the flange sealant at the protection ring. |      |

*Continues on next page*

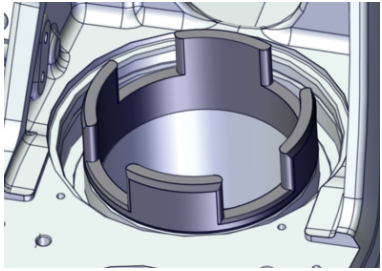
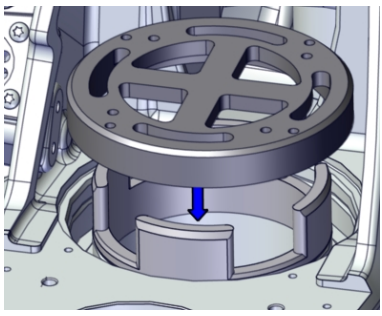
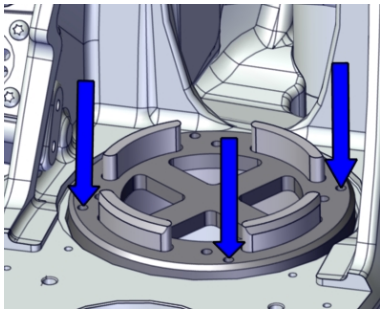
## 5 Repair

### 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

|   | Action   | Note  |
|---|--|---|
| 2 | <i>Only for floor-mounted robot</i><br>Remove the protection ring. | <br>xx2100001116 |

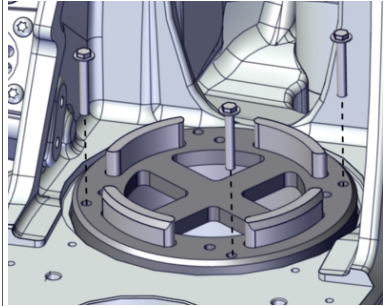
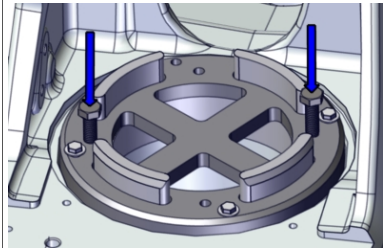
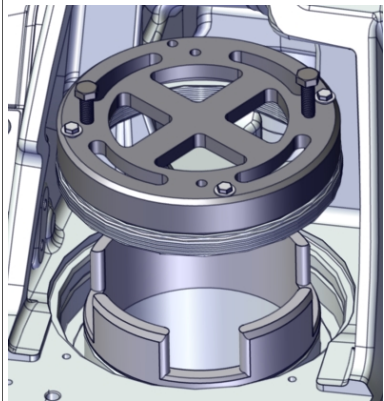
#### Removing the cassette sealing

|   | Action   | Note  |
|---|--|---|
| 1 | Fit the first part of the mounting tool to the frame.<br>Make sure the tool is centered correctly. | Replacement tool for cassette sealing: 3HAC079880-001<br><br>xx2100001188 |
| 2 | Fit the second part of the mounting tool.  | <br>xx2100002215   |
| 3 | Drill three holes in the old cassette sealing, through the holes in the tool. Use a drill 3.5 mm.  | <br>xx2100002216   |

*Continues on next page*

## 5.4.1 Replacing the axis-1 cassette sealing

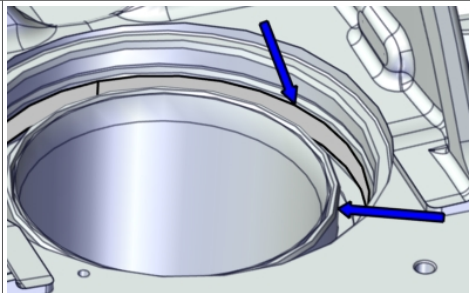
*Continued*

|   | Action  | Note   |
|---|---|--|
| 4 | Screw the three enclosed wood screws through the drilled holes and into the cassette sealing.                   | <br>xx2100002217  |
| 5 | Press out the cassette sealing with the two enclosed press out screws. Screw down the screws alternately.       | <br>xx2100002218  |
| 6 | Remove the cassette sealing and the tool. Clean the area from metal shavings with a magnet or a vacuum cleaner. | <br>xx2100002219 |

**Refitting the cassette sealing**

Use these procedures to refit the cassette sealing.

**Refitting the cassette sealing**

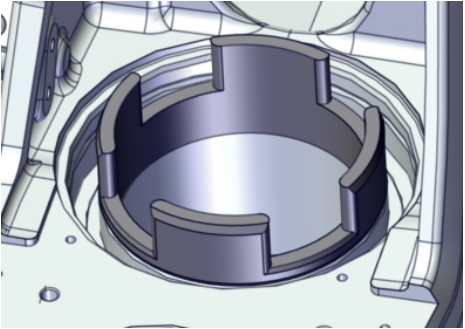
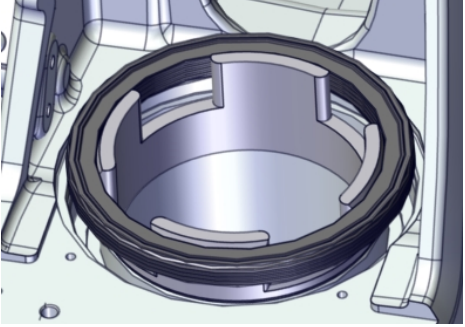
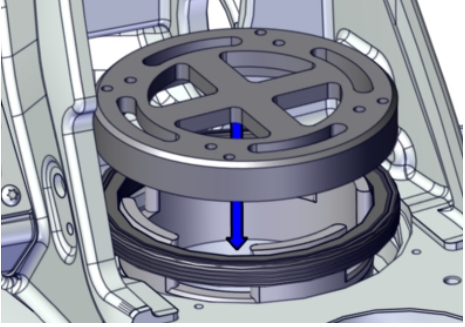
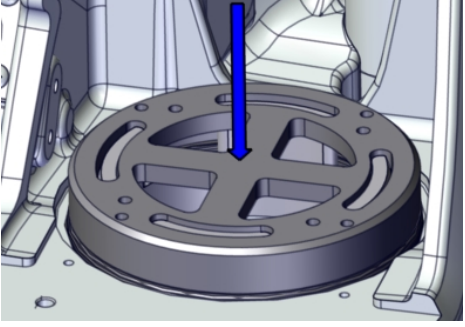
|   | Action  | Note   |
|---|---|--|
| 1 | Remove any old assembly lubricant residues or other contamination from the contact surfaces for the sealing in the frame. | <br>xx2100002377 |

*Continues on next page*

## 5 Repair

### 5.4.1 Replacing the axis-1 cassette sealing

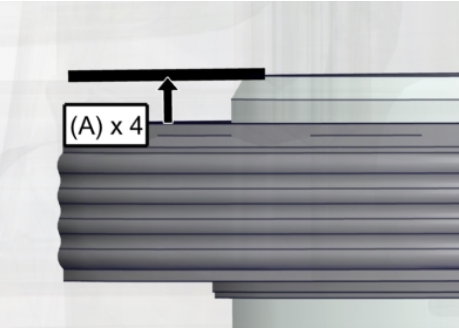
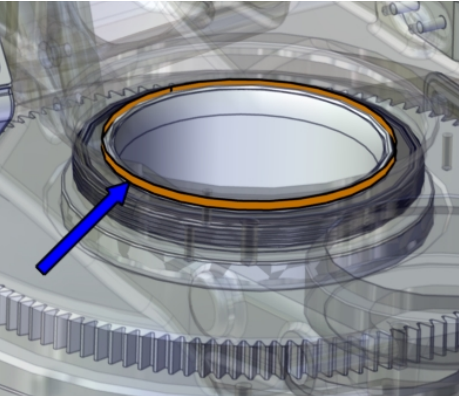
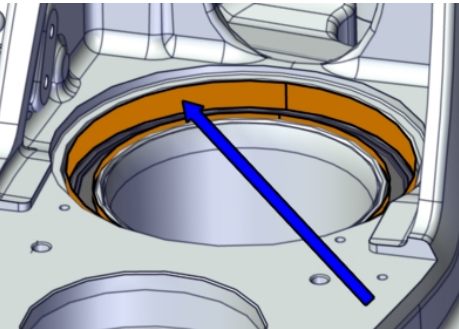
*Continued*

|   | Action   | Note  |
|---|--|---|
| 2 | Fit the first part of the mounting tool to the frame.  | <p>Replacement tool for cassette sealing: 3HAC079880-001</p>  <p>xx2100001188</p> |
| 3 | Fit the cassette sealing on the tool with the plain side facing upwards (groove downwards).  |  <p>xx2100001189</p>   |
| 4 | Fit the second part of the mounting tool on top of the sealing.  |  <p>xx2100001191</p>  |
| 5 | <p>First push down the tool by hand to guide down the sealing aligned.</p> <p>Then use a rubber mallet to knock down the tool and sealing evenly, until the sealing has reached the bottom all the way around.</p> |  <p>xx2100001192</p>  |
| 6 | Remove the mounting tool.  |   |

*Continues on next page*

## 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

|   | Action  | Note   |
|---|---|--|
| 7 | Verify that the cassette sealing is fitted evenly by measuring the distance (A) between the sealing and the axis-1 tube upper edge, at four (4) locations. The measurement is approximately 5 mm.                       |  <p>xx2100001193</p>   |
| 8 | <p><b>Protection type Foundry Plus</b></p> <p>Apply rust preventive to the outer surface of the gearbox tube and outer surface of the frame hole, all the way down to the cassette sealing, as shown in the figure.</p> | <p>Rust preventive: 3HAC034903-001 (Mercasol 3110 Waxcoat. Recommended drying time is 24h.)</p>  <p>xx2100001170</p>  <p>xx2100001172</p> |

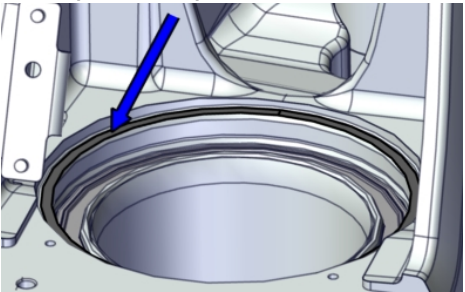
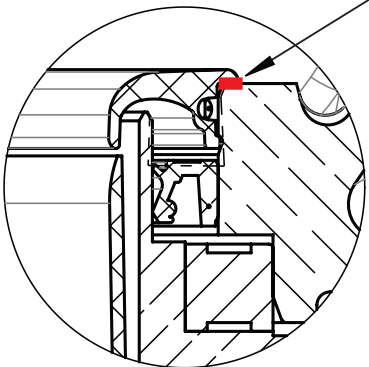
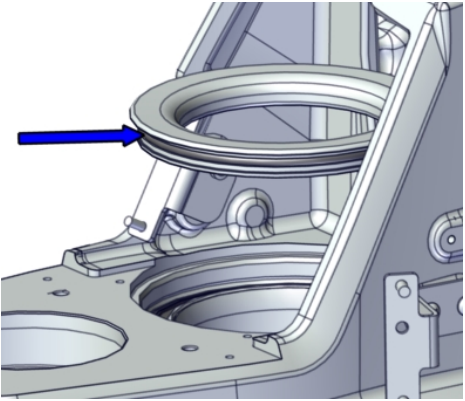
*Continues on next page*



## 5 Repair

### 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

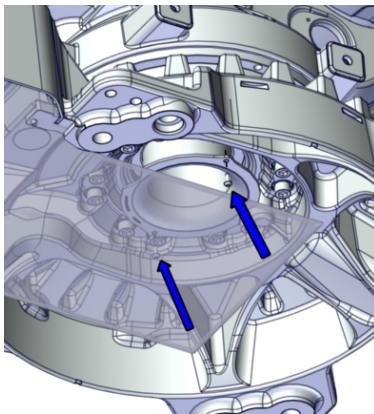
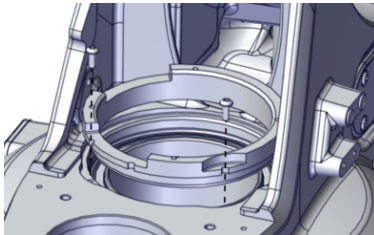
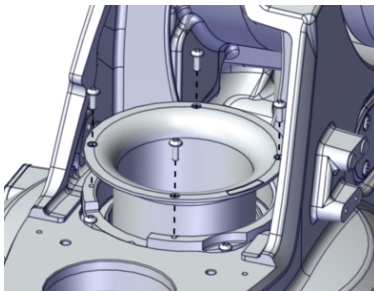
|    | Action  | Note  |
|----|---|---|
| 9  | <p><i>Only for floor-mounted robot with protection type Foundry Plus</i></p> <p>Apply sealant to the mounting surface for the protection ring.</p>  | <p>Sealant (grey): 3HAC026759-001 ( )<br/>Sikaflex 521FC.<br/><i>Protection type Foundry Plus.</i><br/><i>Not required for option Inverted (3317-1).</i></p>  <p>xx2100001173</p> |
| 10 | <p><i>Only for floor-mounted robot</i></p> <p>Refit the protection ring. Verify that the o-ring is undamaged and placed in its groove on the protection ring.<br/>Replace if damaged.<br/><i>Protection type Foundry Plus:</i><br/>Apply flange sealant under the protection ring flange.</p>  <p>xx2500000073</p> | <p>O-ring: 3HAB3772-57<br/>Sealant (grey), Sikaflex 521FC:<br/>3HAC026759-001.</p>  <p>xx2100001136</p>  |

*Continues on next page*

### 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

#### Refitting the protection tube

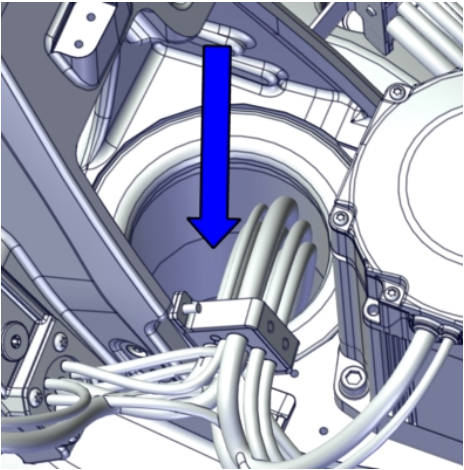
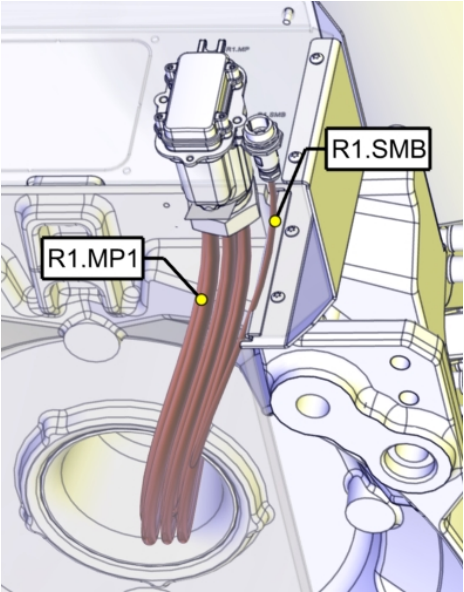
|   | Action   | Note   |
|---|--|--|
| 1 | <i>Floor-mounted robot:</i><br>Lift the protection tube and secure with the two screws from below.                               | <br>xx2100002214  |
| 2 | <i>Option Inverted (3317-1):</i><br>Refit the adapter with the attachment screws.  | <p>Torx pan head screw: M6x16 A4-80 (2 pcs)</p> <br>xx2100002493   |
| 3 | <i>Option Inverted (3317-1):</i><br>Refit the protection tube with the attachment screws.<br>Apply locking liquid on the screws. | <p>Torx pan head screw: M6x16 A4-80 (4 pcs)<br/>Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))<br/>Tightening torque: 10 Nm.</p> <br>xx2100002492 |

*Continues on next page*

5 Repair

5.4.1 Replacing the axis-1 cassette sealing  
Continued

Refitting the cable harness in the base

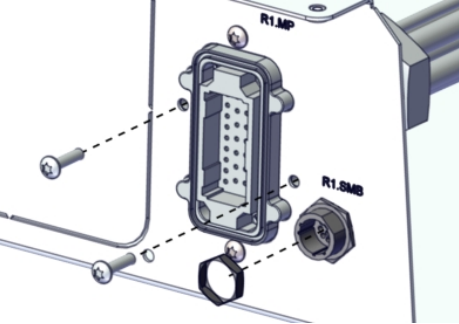
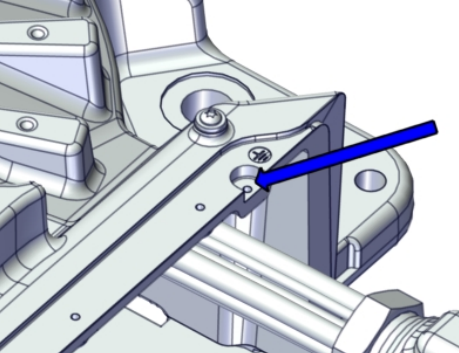
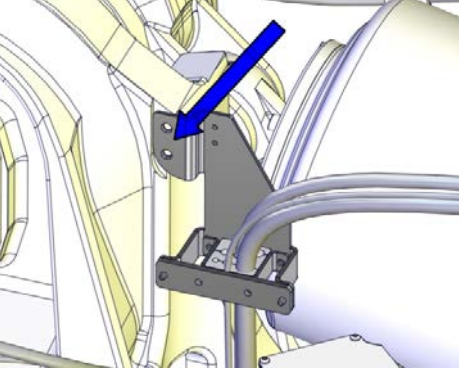
|   | Action   | Note  |
|---|--|---|
| 1 | Run the cables through the protection tube.  | <br>xx2100001216  |
| 2 | Run the cabling through the base. <ul style="list-style-type: none"><li>• Make sure that the cables are not twisted. Each cable must be in line with its position on the base plate.</li><li>• Make sure that the R1.SMB cable will run on the correct side of the R1.MP1, see the figure.</li></ul> | <br>xx1300000736 |
| 3 | Make sure that the markings on the cables are facing the base cover, when connected.   |   |

Continues on next page



### 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

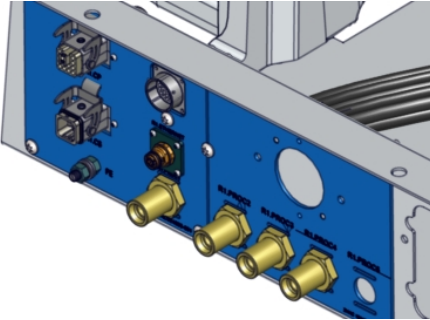
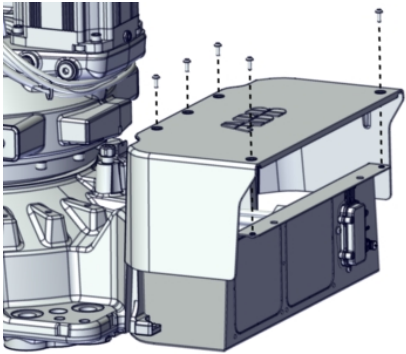
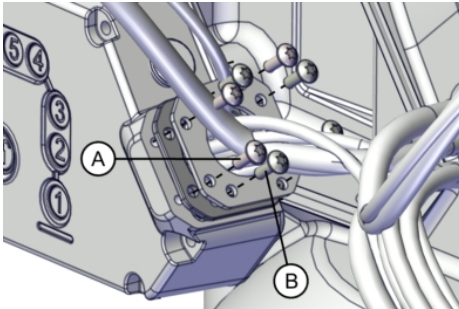
|   | Action   | Note  |
|---|--|---|
| 4 | Connect connectors R1.MP and R1.SMB.   | <p>Screw dimension for R1.MP: M6x25 A2-70<br/> Tightening torque for R1.MP: 10 Nm.<br/> Tightening torque for R1.SMB: 10 Nm.</p>  <p>xx2100001109</p> |
| 5 | Connect the earth cable.   | <p>Screw dimension: M6x16.<br/> Washer dimension: 6.4x17x3.<br/> Tightening torque: 10 Nm.</p>  <p>xx2100000982</p>                                  |
| 6 | If used, run the DressPack cables through the protection tube in the base.<br>If necessary, lubricate the cables with grease to make them run more smoothly. |   |
| 7 | If used, run the DressPack hoses through the protection tube in the base.<br>Make sure that the hoses are running correctly and are not twisted!             |   |
| 8 | If used, fit the bracket that hold the DressPack to the frame.   |  <p>xx1400000078</p>  |

*Continues on next page*

## 5 Repair

### 5.4.1 Replacing the axis-1 cassette sealing

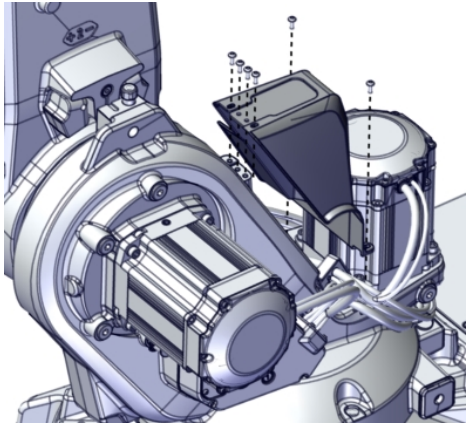
*Continued*

|    | Action  | Note   |
|----|---|--|
| 9  | If used, connect the DressPack cable package on the base plate.                                 | <br>xx2300001093   |
| 10 | Refit the base cover.   | <p>Torx pan head screw: M6x16 Stainless steel A2-70 (5 pcs)<br/>Tightening torque: 10 Nm.</p> <br>xx2100000981          |
| 11 | Fit the SMB cabling to the electronic box and refit the cable clamp to the box with the screws. | <br>xx2200001984<br><p>A Torx pan head screw: M6x16 A4-80 (4 pcs)<br/>B Torx pan head screw: M6x16 8.8-A2F (4 pcs)</p> |

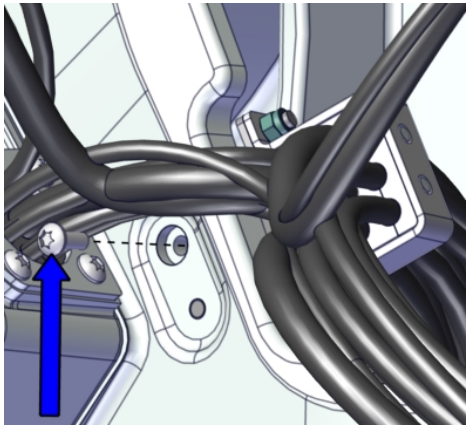

*Continues on next page*

## 5.4.1 Replacing the axis-1 cassette sealing

*Continued*

| Action   | Note   |
|--|--|
| 12 <i>Protection type Foundry Plus</i><br>Refit the axis-1 cable protection. | <br>xx2100000979 |

## Concluding procedure

| Action  | Note  |
|---|---|
| 1 Refit the cable bracket to the frame.   | <p>Torx pan head screw: M6x16 Stainless steel A2-70<br/>Tightening torque: 6 Nm.</p> <br>xx2100001108 |
| 2  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair</a> on page 107. |   |

## 5 Repair

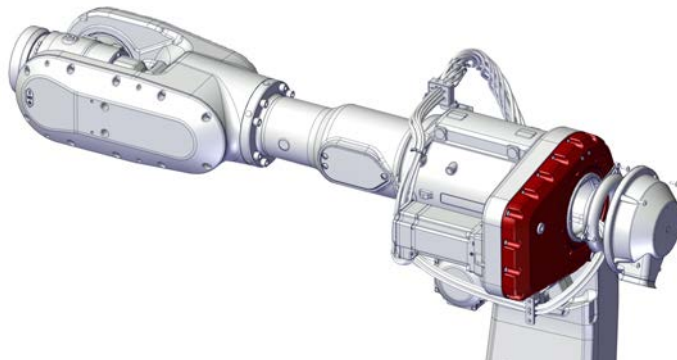
### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

## 5.5 Axes 3 and 4

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

#### Location of the arm house cover and cassette sealing

The arm house cover including the cassette sealing is located as shown in the figure.



xx2100001241

#### Summary of the replacement procedure

This is a brief summary of the replacement procedure, containing the major actions to be performed.

- 1 *Protection type Foundry Plus*: Remove the cover.
- 2 Remove the cable harness from the upper arm.
- 3 Remove the cable guide.
- 4 Replace the arm house cover including the cassette sealing.

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part                                 | Article number   | Note                                 | Level |
|--|--|--------------------------------------|-------|
| Arm house cover including cassette sealing | 3HAC073375-003 (Graphite White)<br>3HAC073375-004 (ABB Orange) | Gasket and cassette sealing included | L2    |

#### Required service parts

| Consumable     | Article number | Note                                     |
|----------------|----------------|--|
| Grease         | 3HAC042536-001 | Shell Gadus S2                           |
| Locking liquid | -              | Loctite 2400 (or equivalent Loctite 243) |

Continues on next page

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

| Consumable      | Article number | Note  |
|-----------------|----------------|---|
| Rust preventive | 3HAC034903-001 | Mercasol 3110 Waxcoat. Recommended drying time is 24h.              |
| Lubricating oil | -              | See <a href="#">Type of lubrication in gear-boxes on page 148</a> . |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.           |


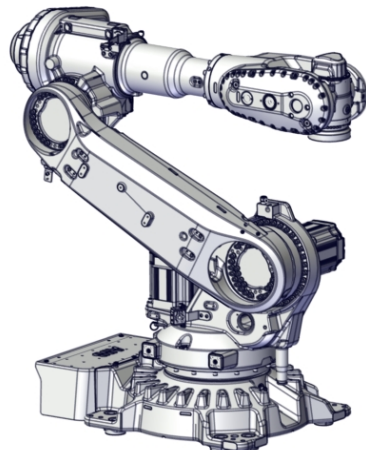
#### Required tools and equipment

| Equipment                            | Article number | Note   |
|--------------------------------------|----------------|--|
| Screw, M6 x minimum 70 mm            | -              | Used to support the arm house cover  |
| Replacement tool for arm house cover | 3HAC079878-001 | For removing and fitting the arm house cover, including the axis-4 cassette sealing. |
| Standard toolkit                     | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> .         |

#### Removing the arm house cover including the cassette sealing

Use these procedures to remove the arm house cover including the cassette sealing.

#### Preparations before removing the arm house cover


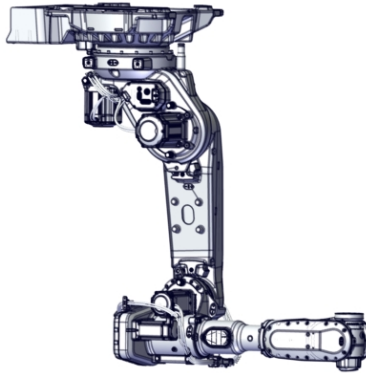

|   | Action  | Note  |
|---|---|---|
| 1 | Drain the axis-4 gearbox.   | See <a href="#">Draining the axis-4 gearbox on page 173</a> .   |
| 2 | <p>Jog the robot to the specified position:</p> <ul style="list-style-type: none"> <li>• Axis 1: 0°</li> <li>• Axis 2: -60°</li> <li>• Axis 3: +60°</li> <li>• Axis 4: 0°</li> <li>• Axis 5: +90°</li> <li>• Axis 6: no significance.</li> </ul> <p> <b>Note</b></p> <p>The specified position is a recommended position for service.</p> <p>Axis-5 must be oriented as close as possible to +90° to be able to open the axis-6 motor cover and to remove the axis-6 motor cables, and in order to avoid the spiral of the cable harness in the carrier, being unwound or placed in the wrong position.</p> <p>Depending on what tool is used, the other axes may need to be jogged to another position.</p> |  <p>xx2100002132</p> |

*Continues on next page*

## 5 Repair


### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action   | Note  |
|---|--|---|
| 3 | <p><i>Option Inverted (3317-1)</i></p> <p>Jog the robot to the specified position:</p> <ul style="list-style-type: none"> <li>• Axis 1: 0°</li> <li>• Axis 2: 0°</li> <li>• Axis 3: 0°</li> <li>• Axis 4: 0°</li> <li>• Axis 5: +90°</li> <li>• Axis 6: No significance.</li> </ul> <p> <b>Note</b></p> <p>The specified position is a recommended position for service.</p> <p>Axis-5 must be oriented as close as possible to +90° to be able to open the axis-6 motor cover and to remove the axis-6 motor cables, and in order to avoid the spiral of the cable harness in the carrier, being unwound or placed in the wrong position.</p> <p>Depending on what tool is used, the other axes may need to be jogged to another position.</p> |  <p>xx2100002138</p> |
| 4 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safeguarded space.</p>   |   |

#### Retrieving access to the wrist cabling

Use this procedure to remove the wrist cover.


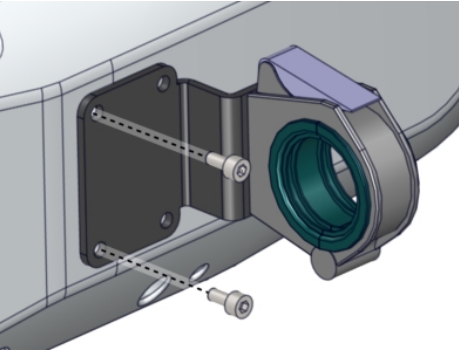
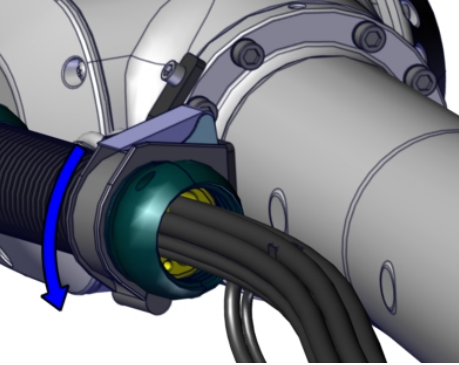
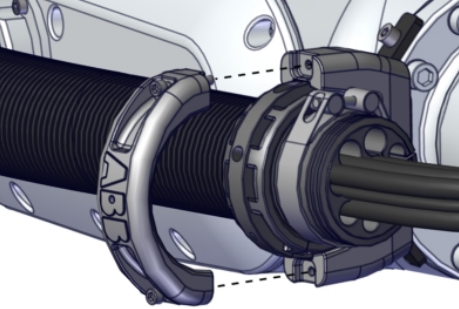
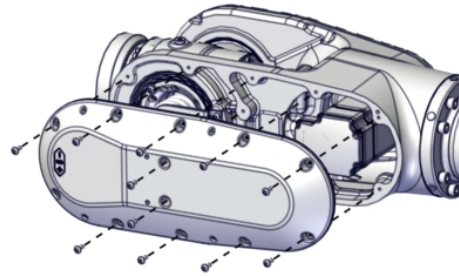
|   | Action   | Note |
|---|--|------|
| 1 | <p> <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p> |      |

*Continues on next page*



### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action   | Note  |
|---|--|---|
| 2 | <p>If DressPack MH3 is installed:<br/>Remove the wrist bracket with the complete ball joint housing still fitted, if the bracket is installed over the two wrist cover screws.</p> <p> <b>Note</b></p> <p>No need to remove the bracket if the two wrist cover screws are accessible.</p> |  <p>xx2300001366</p>  |
| 3 | <p>If DressPack is installed:<br/>Open the ball joint housing on the arm tube and remove the DressPack cable package.</p>  | <p>IRB 5710-70/2.7 LID</p>  <p>xx2100002733</p> <p>IRB 5710-90/2.3 LID:</p>  <p>xx2100002709</p> |
| 4 | Remove the wrist cover.  |  <p>xx2000000373</p>  |


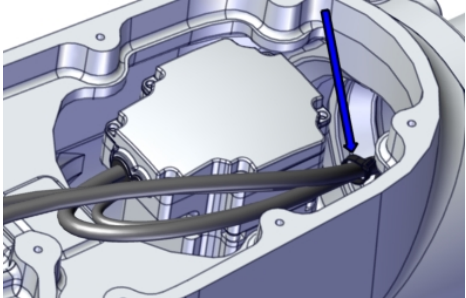
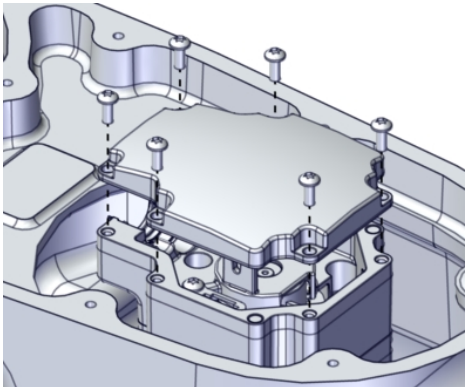
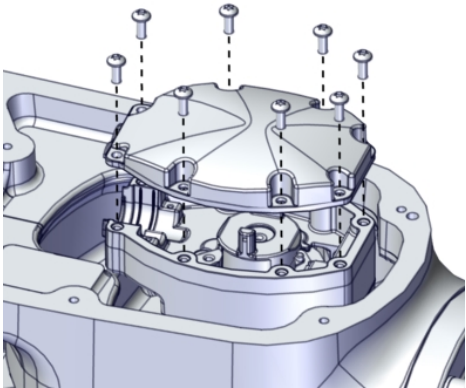
*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

#### Disconnecting the axis-5 motor cables

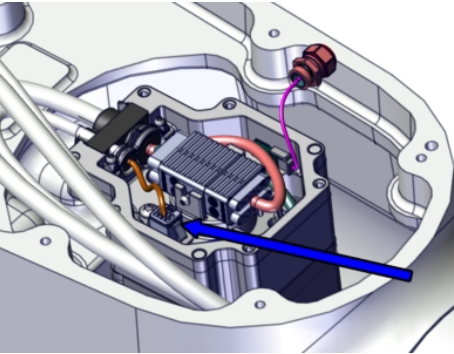
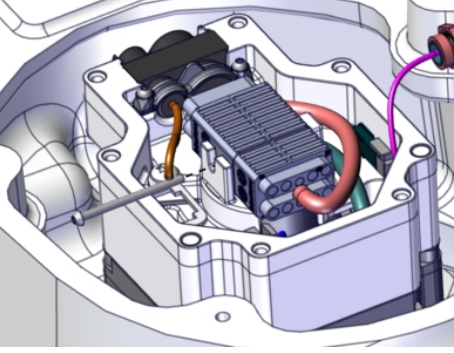
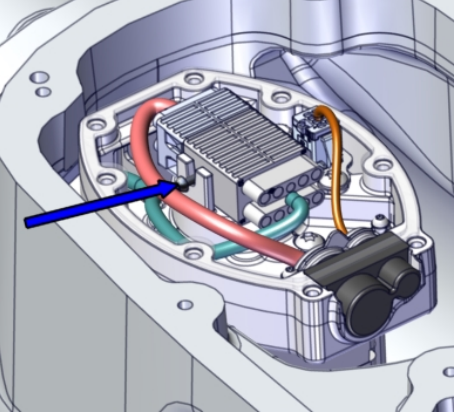
|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Cut the cable tie.  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br><br>xx2100002630  |
| 3 | Remove the motor cover by removing the screws.  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br><br>xx2100002494<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br><br>xx2100002315 |

*Continues on next page*



### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

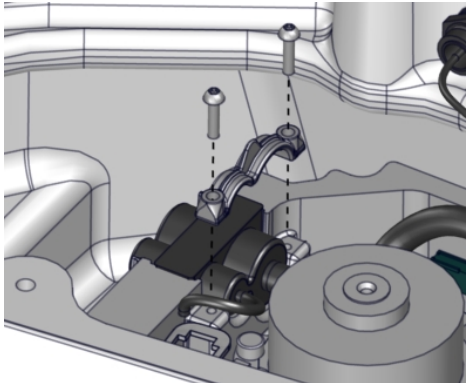
|   | Action   | Note  |
|---|--|---|
| 4 | Disconnect the signal cable connector.                                 |  <p>xx2200001977</p>  |
| 5 | Disconnect the power cable connector by removing the attachment screw. | <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2200001978</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2200001979</p> |

*Continues on next page*


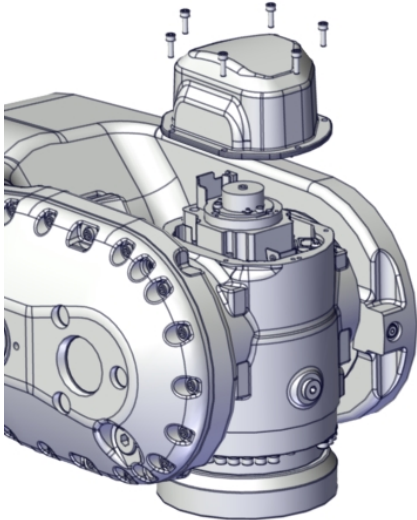
## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action   | Note   |
|---|--|--|
| 6 | Remove the cable bracket by removing the screws. | <br>xx2200001735 |
| 7 | Remove the motor cables.                         |  |

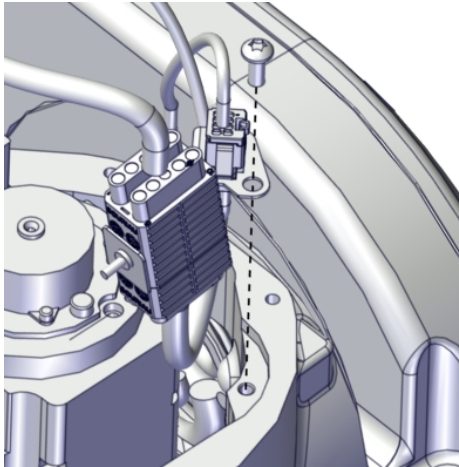
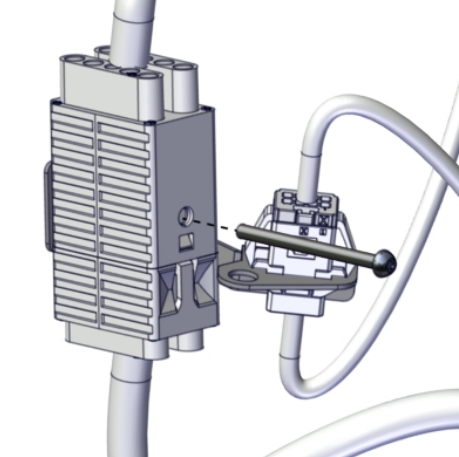
#### Disconnecting the axis-6 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Unscrew the attachment screws and remove the motor cover.   | <br>xx2000000376 |

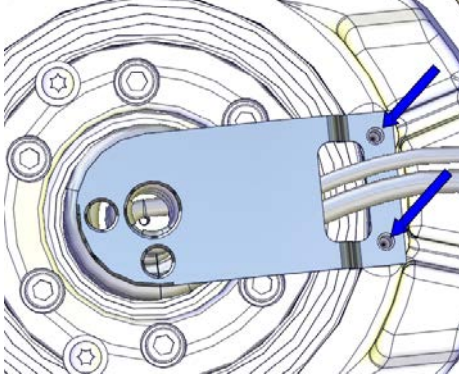
*Continues on next page*

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action                        | Note  |
|---|-------------------------------|---|
| 3 | Remove the connector bracket. |  <p>xx200000375</p>   |
| 4 | Remove the connector screw.   |  <p>xx2200001919</p> |
| 5 | Disconnect the motor cables.  |   |


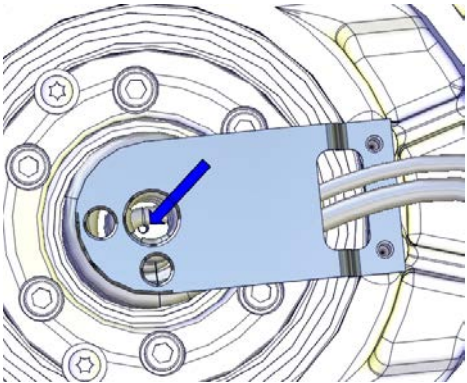

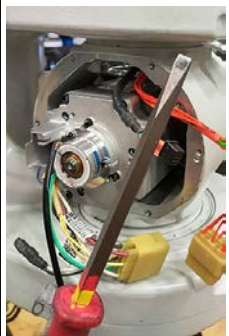



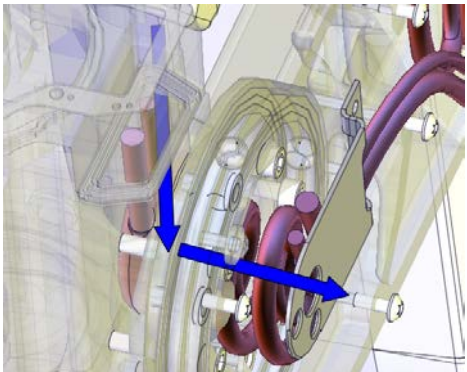
Pushing out the axis-6 motor cables

|   | Action   | Note   |
|---|--|--|
| 1 | Unscrew the attachment screws that hold the cable bracket. |  <p>xx1300000484</p> |

*Continues on next page*

5 Repair

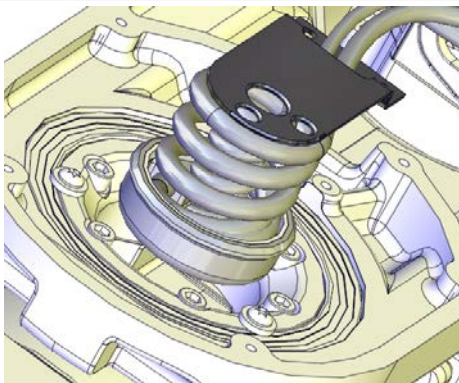
5.5.1 Replacing the arm house cover including the axis-4 cassette sealing  
Continued

| Action  | Note   |
|---|--|
| <div>2</div> <div>Unscrew the M4 screw that holds the carrier.</div> <div><div></div><div>Note</div></div> <div>The screw is located at the bottom of the carrier.</div>   | <div></div> <div>xx1300000485</div>  |
| <div>3</div> <div>Lift out the axis-6 motor cables by holding the cables with one hand at the motor and the other at the carrier.</div> <div><div></div><div>CAUTION</div></div> <div>Assist by using a flat-head screwdriver or similar to push out the carrier from the motor housing side, to avoid damaging the cables by pulling them too hard.</div> <div><div></div><div>xx2300000057</div><div></div><div>xx2300000058</div><div></div><div>xx2300000059</div><div></div><div>xx2300000060</div></div> | <div></div> <div>xx1300000666</div> |


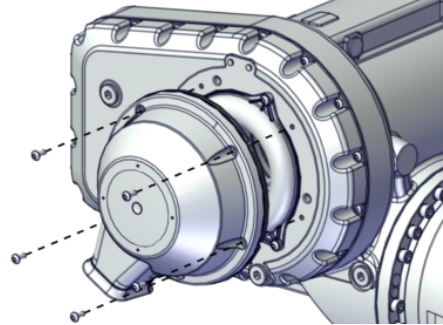
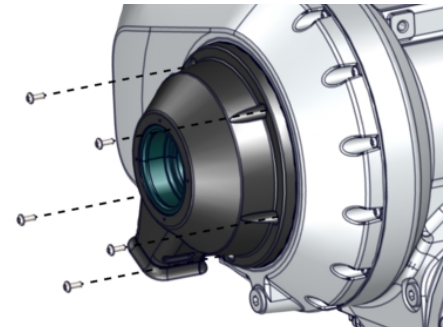
Continues on next page

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action                                  | Note   |
|---|---|--|
| 4 | Lift out the carrier from its position. |  <p>xx1300001113</p> |

#### Removing the cable harness from the wrist and upper arm

|   | Action  | Note   |
|---|---|--|
| 1 | <p><i>Foundry Plus, DressPack:</i><br/>Remove the back cover.</p> <p> <b>Note</b></p> <p>Use caution not to damage the gasket.</p> | <p><i>Protection type Foundry Plus:</i></p>  <p>xx2000000422</p> <p><i>DressPack</i></p>  <p>xx2300001040</p> |

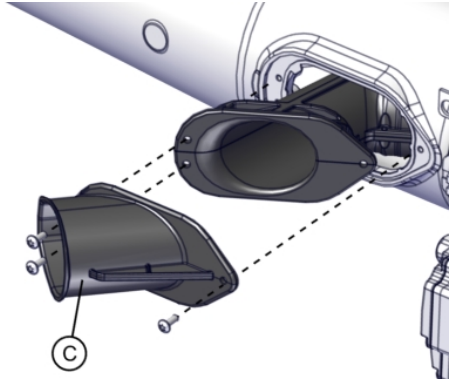
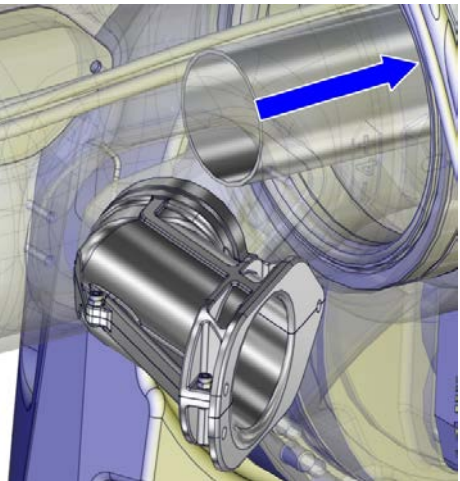


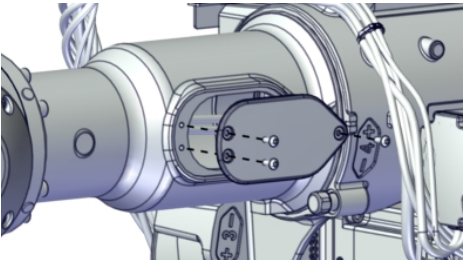
*Continues on next page*



## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing


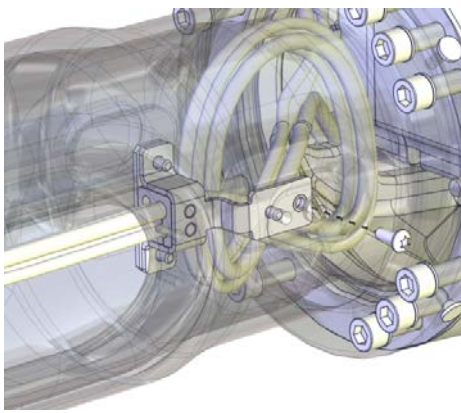
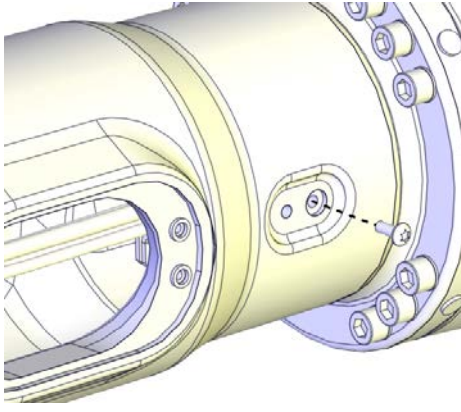
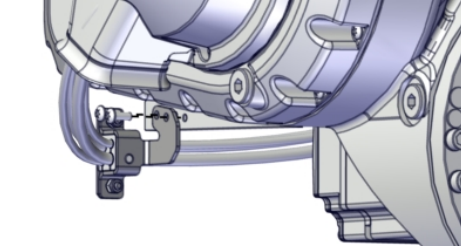
Continued

|   | Action   | Note   |
|---|--|--|
| 2 | <b>DressPack</b><br>Loosen the insert.<br>(Cable guard (C) is available for protection type Foundry Plus.)   | <br>xx2100002677   |
| 3 | <b>DressPack</b><br>Push the DressPack tube a little backwards.  | <br>xx1400000720  |
| 4 |  <b>Tip</b><br>Use tape and tie the axis-5 and axis-6 connectors and carrier into a bundle (if not already done). This is done to facilitate the removal and to avoid damaging the parts. This will also make it easier to run the cable harness through the inside of the upper arm. | <br>xx1300000668 |
| 5 | Remove the side cover on the arm tube.   | <br>xx2000000420 |

Continues on next page

## 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*


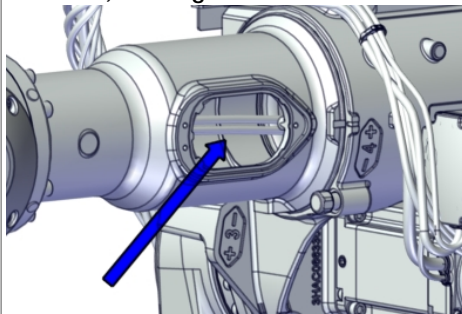
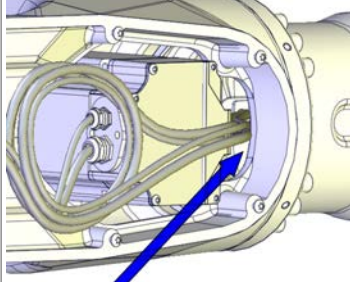


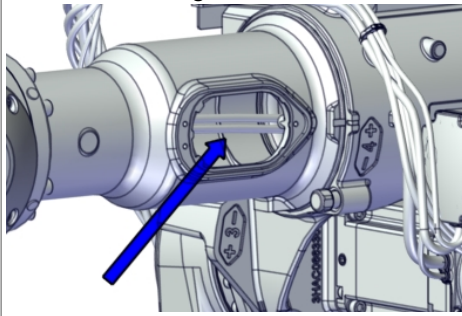
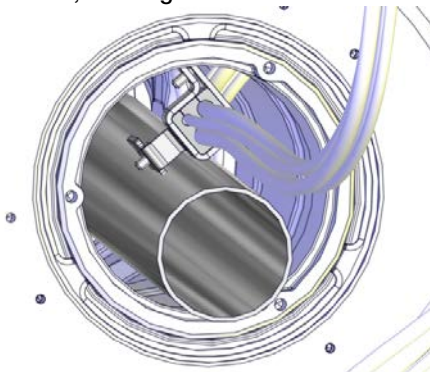
|   | Action  | Note   |
|---|---|--|
| 6 | <p>Unscrew the attachment screw that secures the axis-4 metal clamp inside the arm tube.</p> <p> <b>Note</b></p> <p>The screw is reached from outside the upper arm.</p> |  <p>xx1700000340</p>  <p>xx1700000339</p> |
| 7 | Remove the arm house metal clamp.   |  <p>xx2100002154</p>   |

*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

Continued

|   | Action  | Note   |
|---|---|--|
| 8 | <p>Remove the cable harness out from the wrist.</p> <p> <b>Tip</b></p> <p>This step is best performed by two persons working together:</p> <ul style="list-style-type: none"> <li>• Person 1: Put one hand inside the side hole and take a hold of the cable harness.</li> <li>• Person 2: Take a hold on the cable harness inside the wrist.</li> <li>• Together: Move the cable harness past the axis-5 motor and into the arm tube.</li> </ul>  | <p>Person 1, working at the side hole:</p>  <p>xx2000000416</p> <p>Person 2, working at the wrist:</p>  <p>xx1300000746</p>   |
| 9 | <p>Remove the cable harness out of the arm tube, at the back of the upper arm.</p> <p> <b>Tip</b></p> <p>This step is best performed by two persons working together:</p> <ul style="list-style-type: none"> <li>• Person 1: Put one hand inside the side hole and take a hold of the cable harness.</li> <li>• Person 2: Take a hold on the cable harness at the back of the robot.</li> <li>• Together: Move the cable harness out of the arm tube.</li> </ul> <p> <b>Note</b></p> <p>To be able to remove the cable harness with the DressPack tube fitted, the tube needs to be pulled out a little, then be placed on the lower left side in the arm tube and the bracket of the cable harness then needs to be placed on the upper right hand side.</p> | <p>Person 1, working at the side hole:</p>  <p>xx2000000416</p> <p>Person 2, working at the back:</p>  <p>xx1400002561</p> |

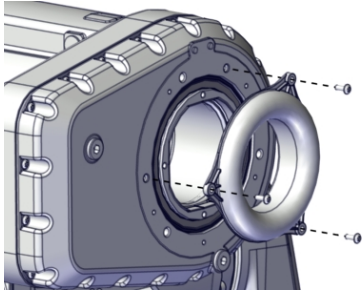
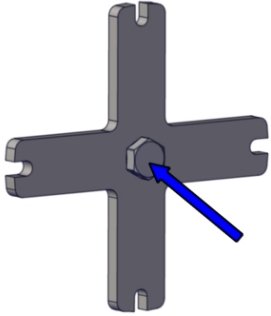
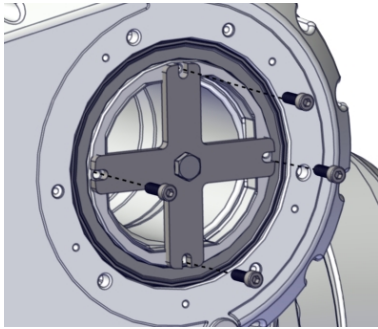
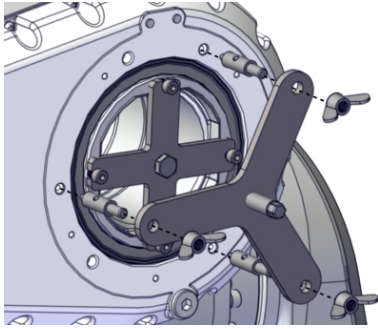
Continues on next page



### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

#### Removing the arm house cover including the cassette sealing

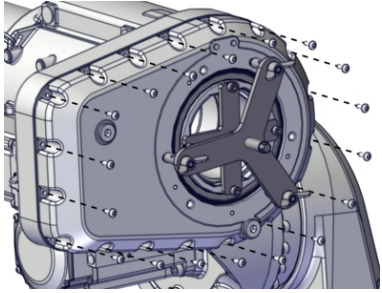
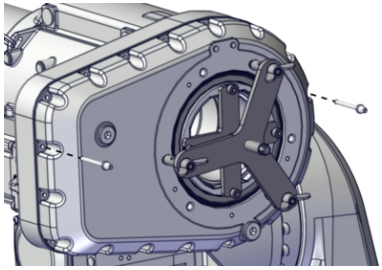



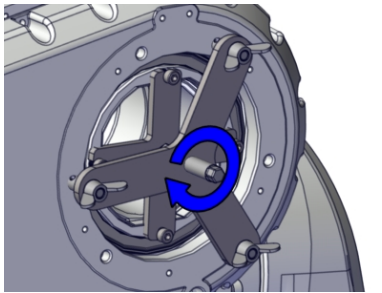
|   | Action  | Note   |
|---|---|--|
| 1 | Remove the cable guide by removing the attachment screws.   | <br>xx2100001242  |
| 2 | Prepare the removal tool by fitting the middle screw to the part of the tool designed as a cross, all the way until it bottoms. | <p>Replacement tool for arm house cover: 3HAC079878-001</p> <br>xx2100001253 |
| 3 | Fit the cross to the tube shaft with four M8 screws.  | <br>xx2100001243  |
| 4 | Fit the three armed tool part with three screws and wing nuts.  | <br>xx2100001254  |

*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing


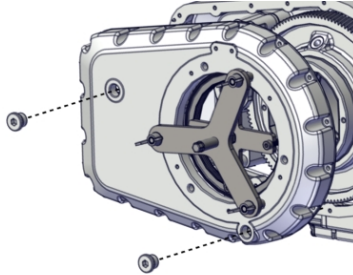
Continued

|   | Action   | Note   |
|---|--|--|
| 5 | Remove the arm house cover screws.   | <br>xx2400000151                              |
| 6 | Insert two screws M6 x minimum 70 mm on each short side, as support so that the cover doesn't fall down when pressed out.  | Screw, M6 x minimum 70 mm<br><br>xx2200001144 |
| 7 | Prepare the area beneath the cover with oil absorbing material.<br><br> <b>WARNING</b><br>Oil residues will drip out during removal.<br>Make sure that protective gear like goggles and gloves are always worn.<br><br> <b>WARNING</b><br>Handling gearbox oil involves several safety risks, see <a href="#">Gearbox lubricants (oil or grease) on page 30</a> .<br><br> <b>WARNING</b><br>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information. |  |
| 8 | Fit the M12 bolt and rotate it to press out the complete cover.  | <br>xx2100001256                            |

Continues on next page

## 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|    | Action  | Note  |
|----|---|---|
| 9  | <p>Remove the complete cover.<br/>Remove and save the oil plugs for refitting on the new cover.</p> <p> <b>WARNING</b></p> <p>Oil residues will drip out during removal.<br/>Make sure that protective gear like goggles and gloves are always worn.</p> |  <p>xx2100001286</p> |
| 10 | Remove the tool from the arm house cover. The tool on the tube shaft can stay fitted.   |   |

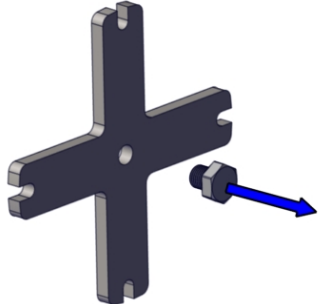


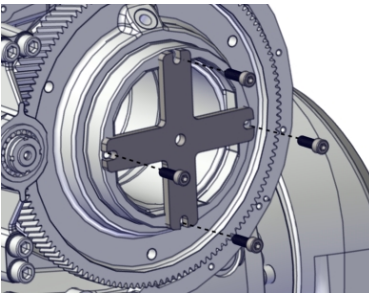
### Refitting the arm house cover including the cassette sealing

Use these procedures to refit the arm house cover including the cassette sealing.

#### Preparations before refitting the arm house cover

|   | Action                           | Note |
|---|----------------------------------|------|
| 1 | Wipe clean all contact surfaces. |      |

### Refitting the arm house cover including the cassette sealing


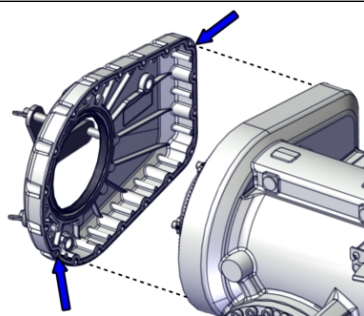
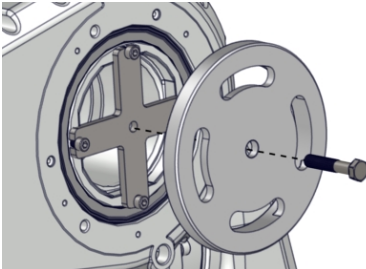
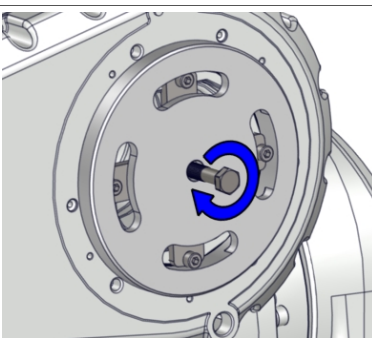
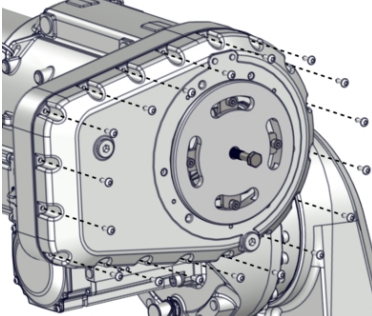
|   | Action   | Note  |
|---|--|---|
| 1 | <p>Prepare the refitting tool by removing the middle screw from the part of the tool designed as a cross.</p>  |  <p>xx2100001265</p> |
| 2 | <p>Fit the cross to the tube shaft with four M8 screws.</p> <p> <b>CAUTION</b></p> <p>Center the cross on the tube shaft, to not damage the sealing.</p> <p> <b>CAUTION</b></p> <p>Tighten the screws so that the cross bottoms firmly against the tube shaft, but make sure not to damage the cassette sealing.</p> |  <p>xx2100001264</p> |

*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

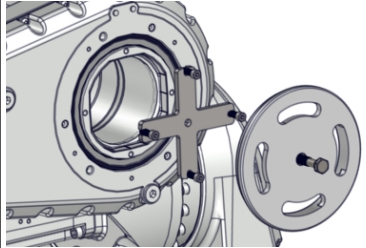
*Continued*

|   | Action   | Note   |
|---|--|--|
| 3 | <p>Fit the arm house cover to the arm house with guidance from the two guide pins in the cover.</p> <p> <b>Tip</b></p> <p>Secure the cover temporarily with two screws M6 on each short side, as support to hold the cover.</p> |  <p>xx2100001269</p>  |
| 4 | <p>Fit the press plate to the arm house cover, together with the M12 screw.</p> <p>Align the press plate holes over the four M8 screws.</p>  | <p>Use the correct press plate: 3HAC079878-010</p>  <p>xx2300001365</p>   |
| 5 | <p>Press the cover and cassette sealing into place by rotating the M12 screw.</p> <p>If used, remove the temporary support screws before pressing the cover completely into place.</p> <p>Check that the guide pins are inserted in the arm house.</p>   |  <p>xx2100001270</p>  |
| 6 | <p>Fit all attachment screws and tighten them crosswise by hand first.</p> <p>Use locking liquid.</p>  | <p>Torx pan head screw: M6x16<br/>Stainless steel A2-70<br/>Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))</p>  <p>xx2100001255</p> |
| 7 | <p>Torque tighten the attachment screws crosswise.</p> <p>Ensure gap closure between cover and arm house.</p>  | <p>Tightening torque: 10 Nm</p>  |

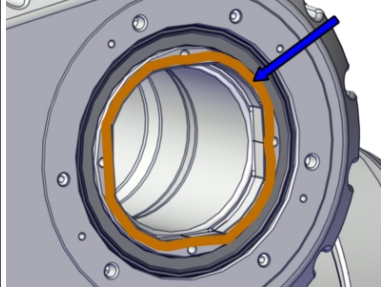
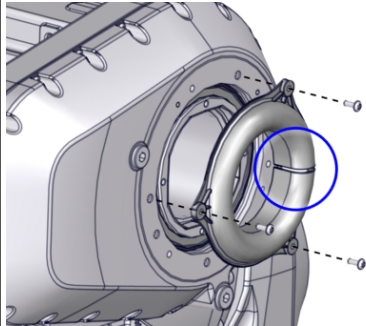
*Continues on next page*

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action                    | Note  |
|---|---------------------------|---|
| 8 | Remove the tool.          | <br>xx2300001367 |
| 9 | Perform a leak-down test. | See <a href="#">Performing a leak-down test on page 196</a> .                                       |

#### Refitting the arm house cable guide

|   | Action   | Note  |
|---|--|---|
| 1 | Apply rust preventive on the arm tube machined surface.  | <p>Rust preventive: 3HAC034903-001 (Mercasol 3110 Waxcoat. Recommended drying time is 24h.)</p> <br>xx2100001271                                  |
| 2 | <p>Fit the cable guide with attachment screws.</p> <p>Align the cable guide so that the slot is positioned at 90 degrees clockwise, as shown in the figure.</p> <p>Use locking liquid.</p> | <p>Torx pan head screw: M6x16<br/>Stainless steel A2-70</p> <p>Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))</p> <br>xx2400001803 |

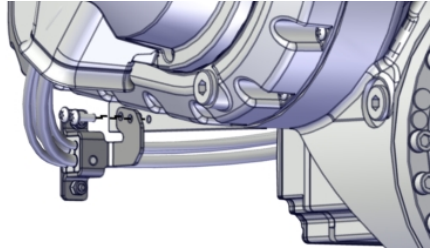


*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

Refitting the cable harness to the upper arm




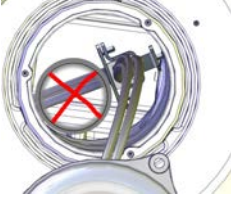
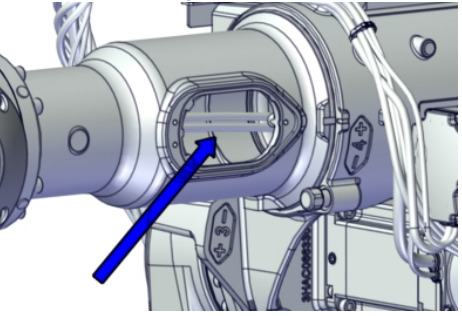
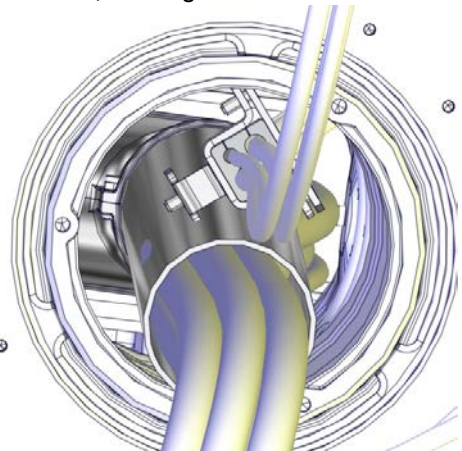
|   | Action  | Note   |
|---|---|--|
| 1 | Refit the metal clamp beneath the arm house.  | <p>Torx pan head screw: M6x16 A4-80<br/>Tightening torque: 10 Nm.</p>  <p>xx2100002154</p> |
| 2 | <p> <b>Tip</b></p> <p>Use tape and tie the axis-5 and axis-6 connectors and carrier into a bundle (if not already done). This is done to facilitate the procedure and to avoid damaging the parts during the procedure.</p> <p>This will also make it easier to run the cable harness through the inside of the robot.</p> |  <p>xx1300000668</p>  |

*Continues on next page*



## 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*


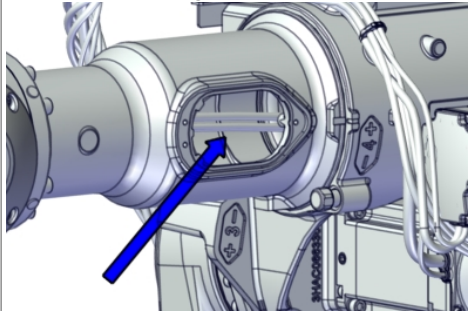
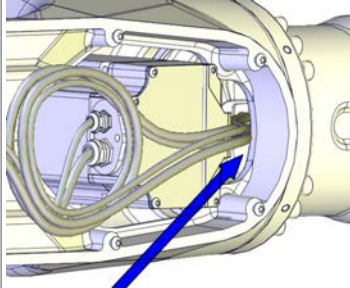
|   | Action  | Note  |
|---|---|---|
| 3 | <p>Run the cable harness through the cable guide and then into and through the upper arm tube.</p> <p> <b>Tip</b></p> <p>This step is best performed by two persons working together:</p> <ul style="list-style-type: none"> <li>• Person 1: Put one hand inside the side hole of the arm tube and take a hold of the cable harness.</li> <li>• Person 2: Take a hold on the cable harness at the back of the robot.</li> <li>• Together: Use caution and move the cable harness into the arm tube.</li> </ul> <p> <b>Note</b></p> <p>The cable harness is best placed at the upper right hand side of the DressPack tube, if used, through the arm tube.</p> <p>Do not run the cable harness into the DressPack tube!</p> <p> <b>Note</b></p> <p>Do not run the cable harness into the DressPack tube, if one is fitted!</p> <p></p> <p>xx1300000820</p> | <p>Person 1, working at the side hole:</p> <p></p> <p>xx2000000416</p> <p>Person 2, working at the back:</p> <p></p> <p>xx1400000356</p> |

*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*


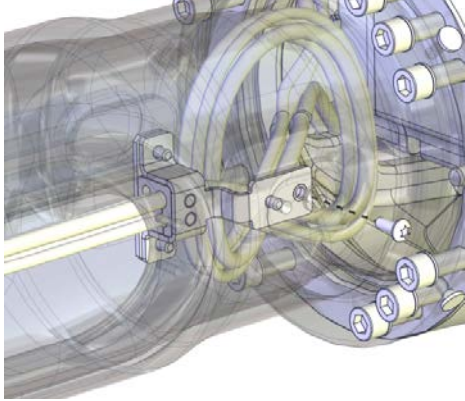
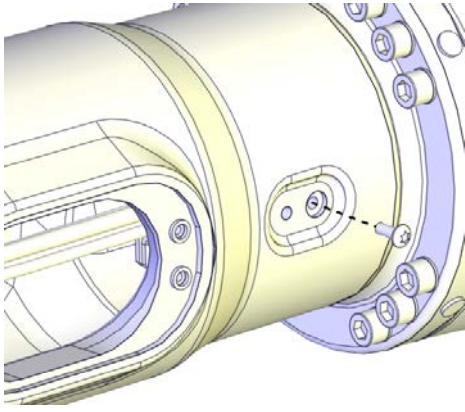

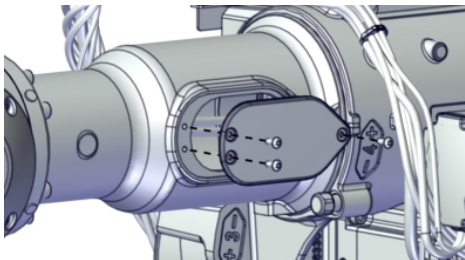
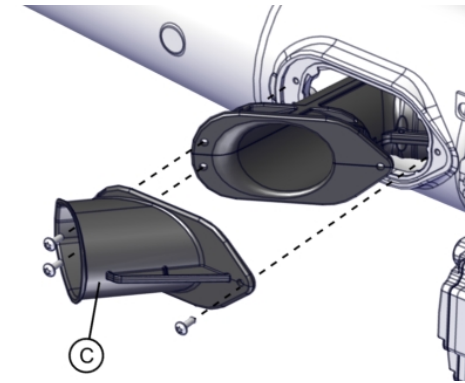
|   | Action   | Note   |
|---|--|--|
| 4 | <p>Use caution and push the cable harness into the wrist.</p> <p> <b>Tip</b></p> <p>This step is best performed by two persons working together:</p> <ul style="list-style-type: none"><li>• Person 1: Put one hand inside the side cover hole and take a hold of the cable harness.</li><li>• Person 2: Take a hold of the cable harness from inside the wrist.</li><li>• Together: Move the cable harness past the axis-5 motor and into the wrist.</li></ul> | <p>Person 1, working at the side hole:</p>  <p>xx2000000416</p> <p>Person 2, working at the wrist:</p>  <p>xx1300000746</p> |

*Continues on next page*



## 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

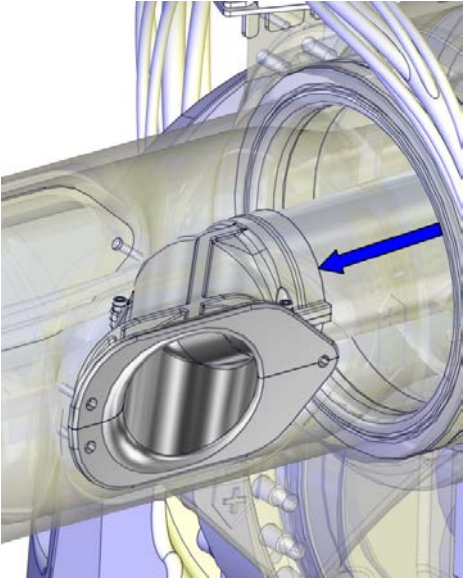

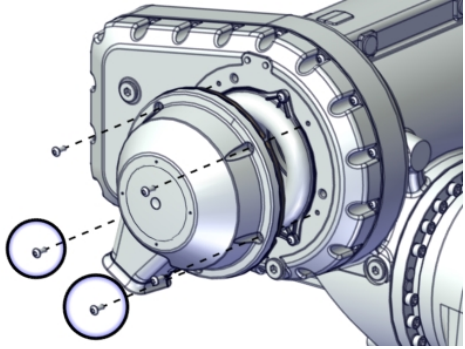
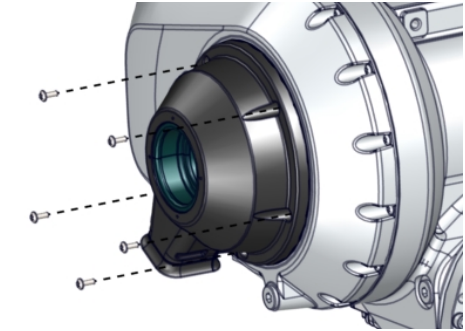
|   | Action   | Note   |
|---|--|--|
| 5 | <p>Refit the metal clamp axis-4, inside the arm tube.</p> <p> <b>Note</b></p> <p>The screw is reached from outside the upper arm.</p>   | <p>Torx pan head screw: M6x16 A4-80<br/>Tightening torque: 10 Nm.</p>  <p>xx1700000340</p>  <p>xx1700000339</p> |
| 6 | <p>Refit the side cover (if no DressPack is used).</p> <p> <b>Note</b></p> <p><i>Foundry Plus:</i></p> <ul style="list-style-type: none"> <li>• Make sure the gasket is fitted correctly on the side cover</li> <li>• Use attachment screws made of stainless steel to fit the side cover.</li> </ul> |  <p>xx2000000420</p>   |
| 7 | <p>With DressPack:</p> <p>Refit the insert that guides the DressPack cable package through the hole in the upper arm.</p> <p>(Cable guard (C) is available for Foundry cable guard.)</p>   |  <p>xx2100002677</p>   |

*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*



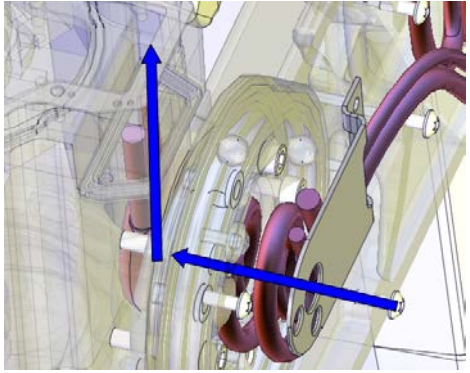
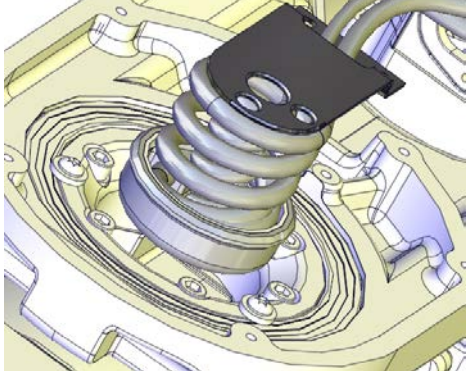


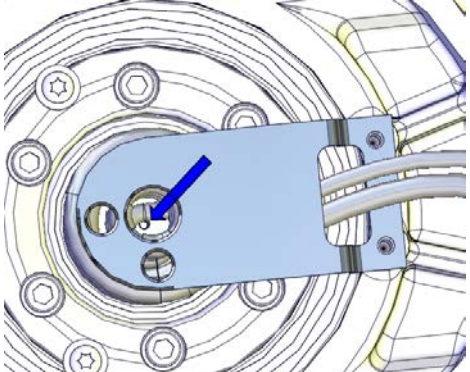
|   | Action  | Note  |
|---|---|---|
| 8 | <p>With DressPack:<br/>Refit the DressPack tube into the insert.</p>  |  <p>xx140000092</p>   |
| 9 | <p><i>DressPack or Foundry Plus:</i><br/>Refit the back cover with the attachment screws.<br/>Tighten the two screws closest to the outlet first (shown in figure), to avoid deformation.</p> <p> <b>Note</b></p> <p>With DressPack:<br/>Make sure that the tube is fitted correctly in both ends, when fitting the cover.</p> | <p>Torx pan head screw: M6x16 Stainless steel A2-70<br/>Tightening torque: 10 Nm.</p> <p><i>Foundry Plus</i></p>  <p>xx2100002636</p> <p><i>DressPack</i><br/>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p>  <p>xx2300001040</p> |

*Continues on next page*

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

#### Inserting the axis-6 motor cables

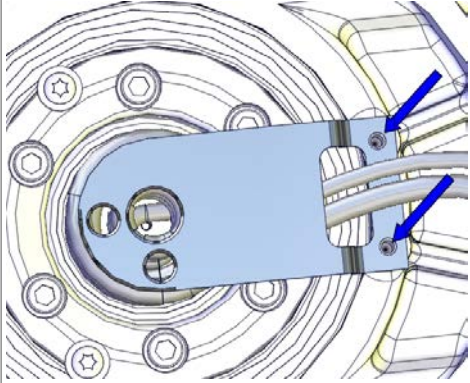
|   | Action  | Note   |
|---|---|--|
| 1 |  <b>Note</b><br>Axis 5 must be in position +90° (or as close as possible) for a correct installation of the cable harness in the wrist. If not, connect the brake release tool to the axis-5 motor connector, release the brakes and move axis 5 manually to +90°.   |  |
| 2 | Push the cable harness into the wrist recess and up into the axis-6 motor.<br><br> <b>Tip</b><br>Moisten the rubber carrier slightly with water or grease around the contact surface, to make it easier to fit into place.   | <br>xx1300000667  |
| 3 | Push the carrier carefully into position.   | <br>xx1300001113 |
| 4 | Secure the carrier with the M4x10 screw.<br><br> <b>Note</b><br>The screw is located at the bottom of the carrier.<br><br> <b>Tip</b><br>The attachment screw securing the carrier may be difficult to fit. Make sure the carrier is level and completely pressed against the bottom. | <br>xx1300000485 |

*Continues on next page*

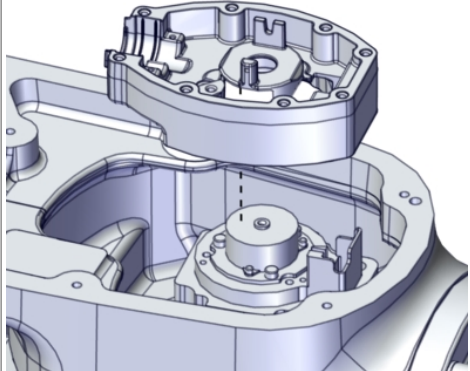
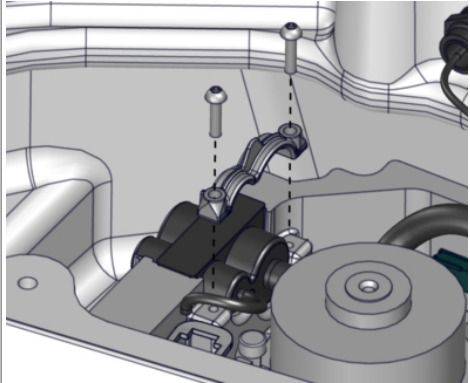
## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

| Action   | Note   |
|--|--|
| 5 Secure the cable bracket with its attachment screws. | <p>Torx pan head screw: M6x16 A4-80<br/> Tightening torque: standard torque 10 Nm<br/> (<i>Tightening torque on page 661</i>)..</p>  <p>xx1300000484</p> |

### Connecting the axis-5 motor cables


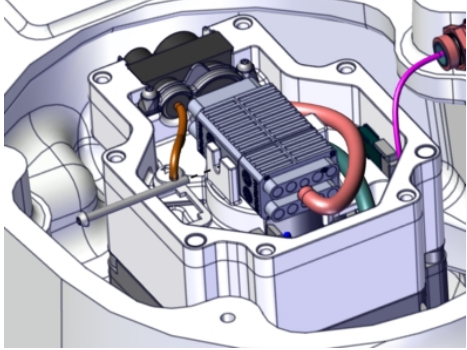
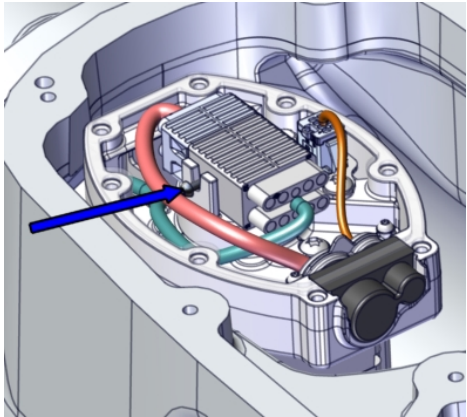
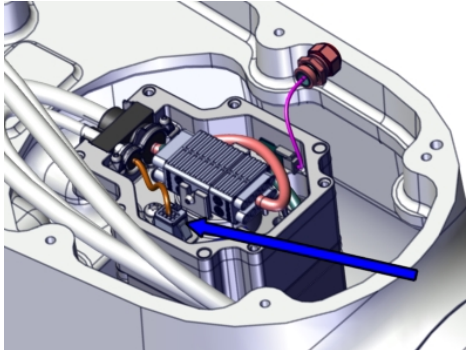
| Action  | Note   |
|---|--|
| 1 IRB 5710-90/2.7, IRB 5710-70/2.7 LID<br>Refit the connection box with the screws. |  <p>xx2100002316</p>  |
| 2 Put the motor cables in place in the opening.                                     |  |
| 3 Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001735</p> |

*Continues on next page*



## 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action   | Note  |
|---|--|---|
| 4 | <p>Connect the power cable connector and secure with a screw.<br/>Connect in accordance with the markings on the connectors.</p> <p> <b>Note</b></p> <p>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p>Tightening torque: 1 Nm<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2200001978</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2200001979</p> |
| 5 | <p>Connect the signal cable connector.<br/>Connect in accordance with the markings on the connectors.</p>  |  <p>xx2200001977</p>  |

*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

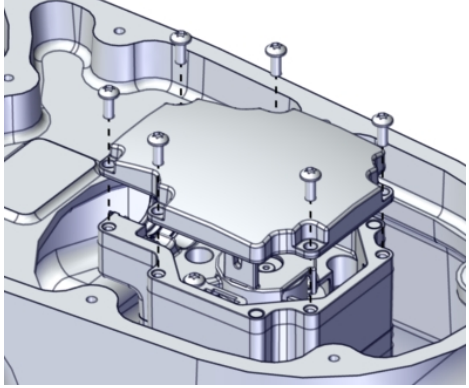
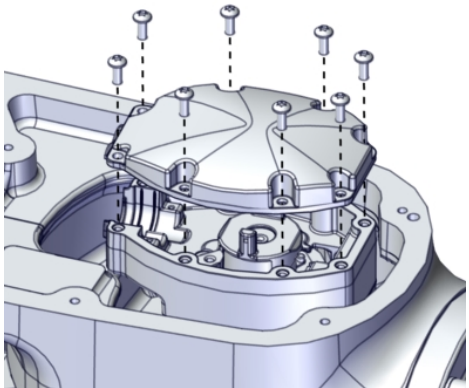
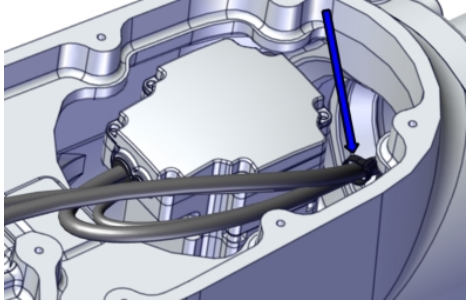
*Continued*

|   | Action   | Note  |
|---|--|---|
| 6 | Inspect the gasket.<br>Replace if damaged.   | <p>Connection box cover with gasket:<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)<br/>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br/>3HAC072861-003 (Graphite White)<br/>3HAC072861-004 (ABB Orange)</p>  <p>xx2100002317</p> |
| 7 | <p> <b>CAUTION</b></p> <p>When fitting the motor cover, make sure that none of the cables inside will be damaged.</p> |   |

*Continues on next page*

## 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action  | Note  |
|---|---|---|
| 8 | IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br>Refit the motor cover with its attachment screws.<br>Use locking liquid. | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p> <p>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p> <p>Tightening torque: 6 Nm.</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2100002494</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2100002315</p> |
| 9 | Secure the cabling with a cable strap.  | <p>Cable strap, outdoor: -</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID</p>  <p>xx2100002630</p>  |


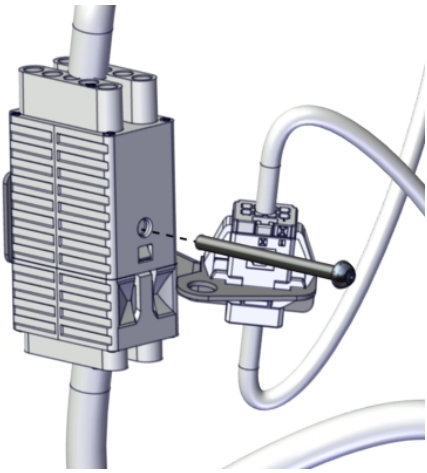
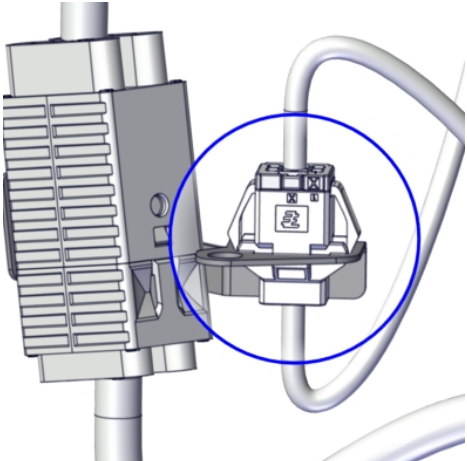
*Continues on next page*

## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

#### Connecting the axis-6 motor cables


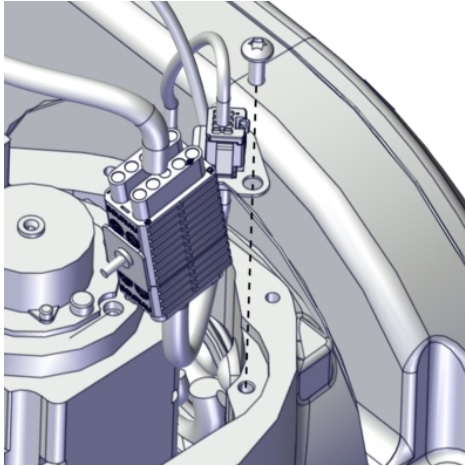


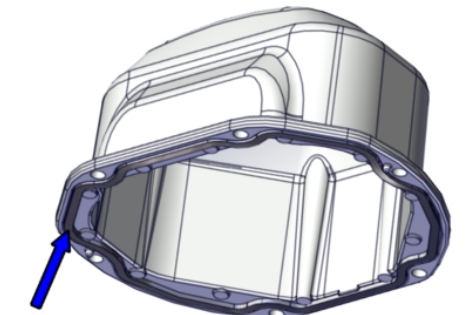

|   | Action  | Note  |
|---|---|---|
| 1 | Connect the motor cables.<br>Connect in accordance with the markings on the connectors.   |   |
| 2 | Position the power connector to the bracket with a screw.<br><br> <b>Note</b><br><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | Tightening torque: 1 Nm<br><br><br><br>xx2200001919 |
| 3 | Snap the signal connectors to each other in the bracket.  | <br><br>xx2200001920                              |

*Continues on next page*



### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

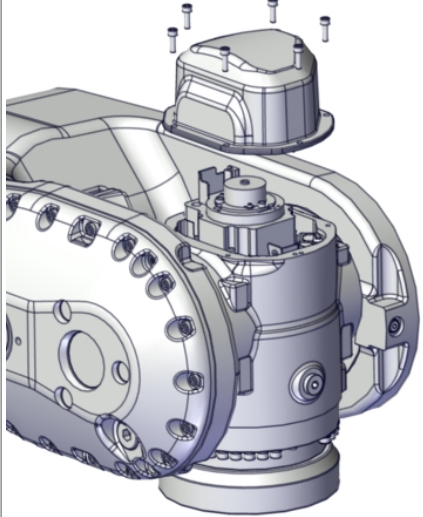
|   | Action   | Note   |
|---|--|--|
| 4 | <p>Refit the connector bracket assembly to the motor.</p> <p> <b>CAUTION</b></p> <p>The cabling is sensitive to mechanical damage. Handle it with care to avoid damage to the cabling or the connector, avoid any kind of tilt or skew.</p> | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p>  <p>xx2000000375</p> |
| 5 | <p>Verify correct cable layout as shown in the figure.</p> <p> <b>CAUTION</b></p> <p>Route the signal cabling correctly to avoid cable damage.</p>   |  <p>xx2100001293</p>  |
| 6 | <p>Inspect the gasket.<br/>Replace if damaged.</p>   | <p>Gasket, tilt housing cover: 3HAC071520-001</p>  <p>xx2100001287</p>     |
| 7 | <p> <b>CAUTION</b></p> <p>When fitting the motor cover, make sure that none of the cables inside will be damaged.</p>   |  |

*Continues on next page*

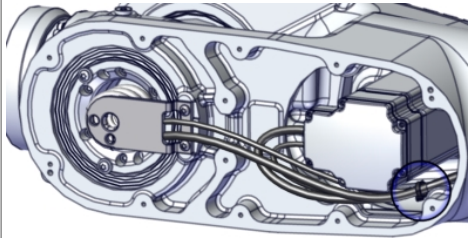
## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action                 | Note   |
|---|------------------------|--|
| 8 | Refit the motor cover. | <p>Hex socket head cap screw, M5x16 12.9<br/>Lafre 2C2B/FC6.9, 6 pcs<br/>Tightening torque: 4 Nm.</p>  <p>xx2000000376</p> |

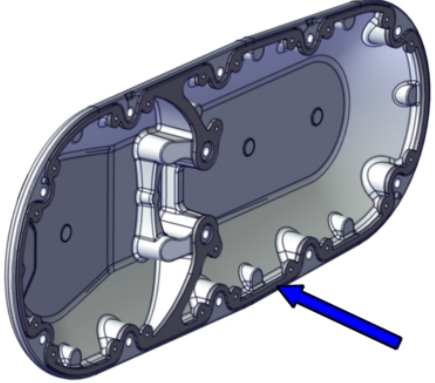
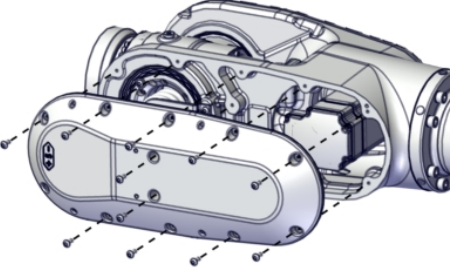
#### Refitting the wrist cover

|   | Action   | Note   |
|---|--|--|
| 1 | Make sure that the cable harness is routed and secured as shown in the figure. |  <p>xx2100002627</p> |

*Continues on next page*

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action  | Note   |
|---|---|--|
| 2 | <b>Foundry Plus:</b><br>Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | Wrist cover:<br><b>IRB 5710-110/2.3 / IRB 5710-90/2.3 LID:</b><br>3HAC073390-002 (Graphite White)<br>3HAC073390-004 (ABB Orange)<br><b>IRB 5710-90/2.7 / IRB 5710-70/2.7 LID:</b><br>3HAC070151-004 (Graphite White)<br>3HAC070151-006 (ABB Orange) <br>xx2100001407 |
| 3 | Refit the wrist cover and secure with screws.<br><b>Foundry Plus:</b><br>Fit all the screws first, then torque tighten them twice to achieve correct torque (due to compression from the gasket). | Torx pan head screw: M6x16 Stainless steel A2-70<br>Tightening torque: 10 Nm. <br>xx2000000373   |

#### Concluded refitting of the cable harness

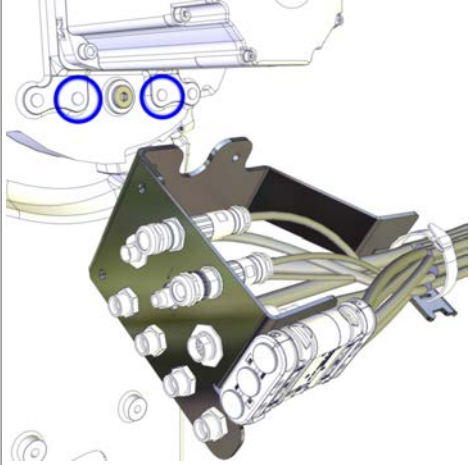
|   | Action  | Note                                      |
|---|---|---|
| 1 | If the robot is equipped with DressPack cable package:<br>Refit all parts that belong to the DressPack. | See the product manual for the DressPack. |

*Continues on next page*


## 5 Repair

### 5.5.1 Replacing the arm house cover including the axis-4 cassette sealing

*Continued*

|   | Action  | Note   |
|---|---|--|
| 2 | If the robot is equipped with DressPack cable package:<br>Refit the connection plate. | <br>xx1200001332 |

#### Concluding procedure

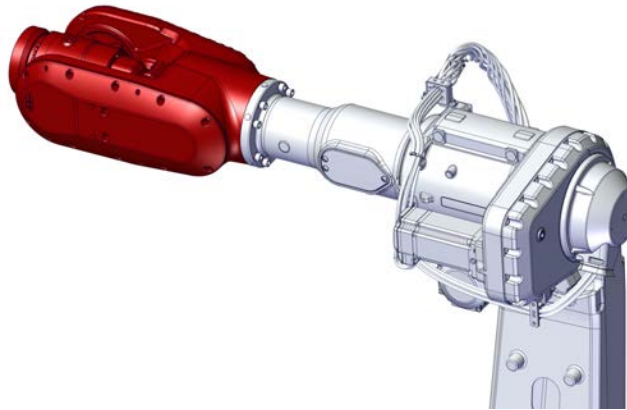
|   | Action   | Note  |
|---|--|---|
| 1 | Refill oil to the axis-4 gearbox.  | See <a href="#">Filling oil into the axis-4 gearbox on page 175</a> . |
| 2 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

## 5.6 Wrist

### 5.6.1 Replacing the wrist

#### Location of the wrist

The wrist is located as shown in the figure.



xx2100001288

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number  | Note                                 | Level |
|------------|---|--------------------------------------|-------|
| Wrist      | <b>IRB 5710-110/2.3 / IRB 5710-90/2.3 LID:</b><br>3HAC072470-002 (Graphite White)<br>3HAC072470-004 (ABB Orange)<br><b>IRB 5710-90/2.7 / IRB 5710-70/2.7 LID:</b><br>3HAC072492-002 (Graphite White)<br>3HAC072492-004 (ABB Orange) | Complete unit with motors and gears. | L2    |

*Continues on next page*

## 5 Repair

### 5.6.1 Replacing the wrist

*Continued*

#### Required tools and equipment

| Equipment   | Article number  | Note   |
|---|---|--|
| Guide pin, M12x150 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID)<br>Guide pin, M10x150 (IRB 5710-90/2.7, IRB 5710-70/2.7 LID) | 3HAC13056-2 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID)<br>3HAC15521-2 (IRB 5710-90/2.7, IRB 5710-70/2.7 LID) | Always use guide pins in pairs.  |
| Brake release tool  | 3HAC081310-001  | User instructions are enclosed with the tool.  |
| Bit holder and hexagon bit SW10   |   | Bit holder dimension: 5/16" (14x18 mm)<br>Used for screw access in narrow locations. |
| Roundsling, 1 m   | -   | Length: 1 m.   |
| Standard toolkit  | -   | Content is defined in section <a href="#">Standard toolkit on page 665</a> .         |

#### Required service parts

| Consumable                       | Article number  | Note                |
|----------------------------------|---|---------------------|
| Tilt housing cover with gasket   | 3HAC073918-003 (Graphite White)<br>3HAC073918-004 (ABB Orange)  | Replace if damaged. |
| Connection box cover with gasket | IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br>3HAC072862-003 (Graphite White)<br>3HAC072862-005 (ABB Orange)<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>3HAC072861-003 (Graphite White)<br>3HAC072861-004 (ABB Orange)   | Replace if damaged. |
| Wrist cover                      | IRB 5710-110/2.3 / IRB 5710-90/2.3 LID:<br>3HAC073390-002 (Graphite White)<br>3HAC073390-004 (ABB Orange)<br>IRB 5710-90/2.7 / IRB 5710-70/2.7 LID:<br>3HAC070151-004 (Graphite White)<br>3HAC070151-006 (ABB Orange) | Replace if damaged. |
| Cable strap, outdoor             | -   |                     |

*Continues on next page*

**Deciding calibration routine**

Decide which calibration routine to be used, based on the information in the table. Depending on which routine is chosen, action might be required prior to beginning the repair work of the robot, see the table.

|   | Action  | Note  |
|---|---|---|
| 1 | Decide which calibration routine to use for calibrating the robot. <ul style="list-style-type: none"> <li>Reference calibration. External cable packages (DressPack) and tools can stay fitted on the robot.</li> <li>Fine calibration. All external cable packages (DressPack) and tools must be removed from the robot.</li> </ul>  |   |
|   | <b>If the robot is to be calibrated with reference calibration:</b><br>Find previous reference values for the axis or create new reference values. These values are to be used after the repair procedure is completed, for calibration of the robot.<br>If no previous reference values exist, and no new reference values can be created, then reference calibration is not possible. | Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.<br>Creating new values requires possibility to move the robot.<br>Read more about reference calibration for Axis Calibration in <a href="#">Reference calibration routine on page 631</a> . |
|   | <b>If the robot is to be calibrated with fine calibration:</b><br>Remove all external cable packages (DressPack) and tools from the robot.  |   |

**Removing the wrist**

Use these procedures to remove the wrist.

**Preparations before removing the wrist**


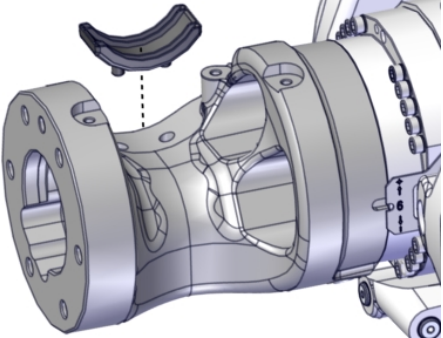
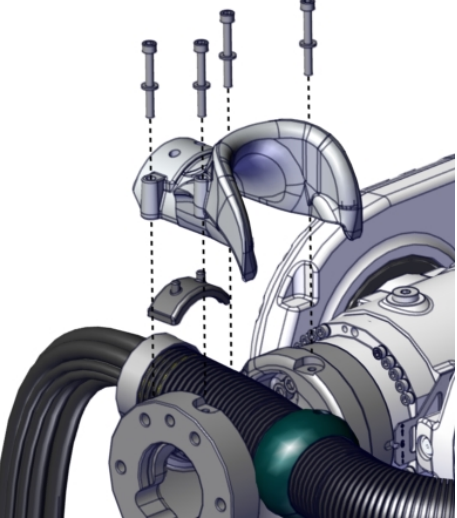
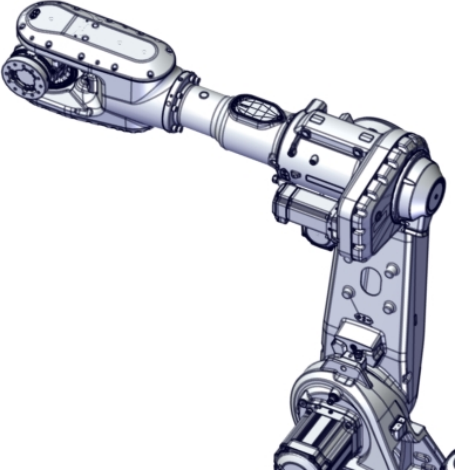

|   | Action   | Note |
|---|--|------|
| 1 | Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure. |      |
| 2 | Remove tools and other equipment fitted to the wrist.  |      |

*Continues on next page*

## 5 Repair

### 5.6.1 Replacing the wrist

*Continued*



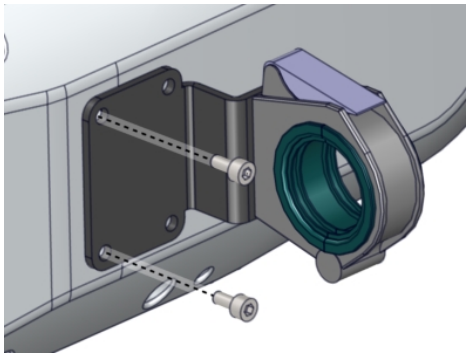
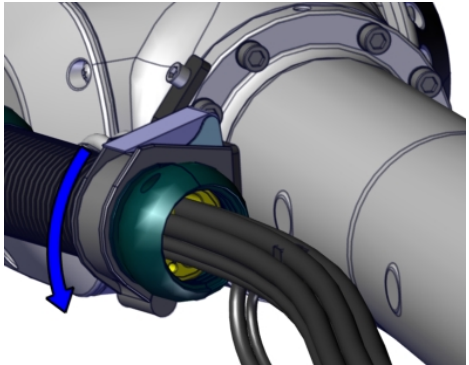
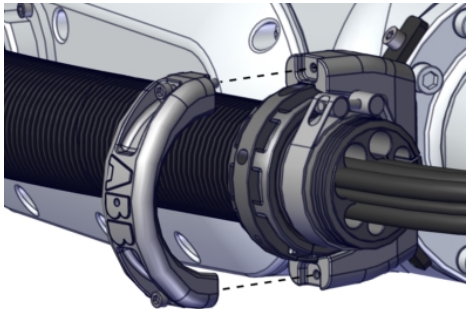
|   | Action  | Note  |
|---|---|---|
| 3 | <p>If used, open the DressPack axis-6 cable support and remove the DressPack cable package from the process turning disk.</p> <p> <b>Note</b></p> <p>Use caution not to lose the two clamp jaws on either side of the DressPack cable package.</p>  <p>xx2100002712</p> |  <p>xx2100002715</p>  |
| 4 | <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: jog axis 2 and 3 to a position where the upper arm is horizontal</li> <li>• Axis 3: jog axis 2 and 3 to a position where the upper arm is horizontal</li> <li>• Axis 4: +90°</li> <li>• Axis 5: +90°</li> <li>• Axis 6: no significance</li> </ul>  |  <p>xx2100002164</p> |
| 5 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p>  |   |

*Continues on next page*



## Retrieving access to the wrist cabling

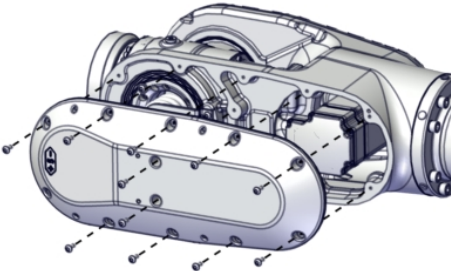
Use this procedure to remove the wrist cover.

| Action  | Note   |
|---|--|
| <p>1</p> <p> <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p>   |  |
| <p>2</p> <p>If DressPack MH3 is installed:<br/>Remove the wrist bracket with the complete ball joint housing still fitted, if the bracket is installed over the two wrist cover screws.</p> <p> <b>Note</b></p> <p>No need to remove the bracket if the two wrist cover screws are accessible.</p> |  <p>xx2300001366</p>   |
| <p>3</p> <p>If DressPack is installed:<br/>Open the ball joint housing on the arm tube and remove the DressPack cable package.</p>  | <p><b>IRB 5710-70/2.7 LID</b></p>  <p>xx2100002733</p> <p><b>IRB 5710-90/2.3 LID:</b></p>  <p>xx2100002709</p> |


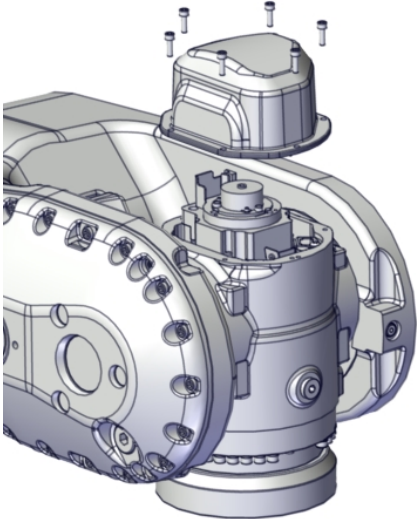
Continues on next page

5 Repair

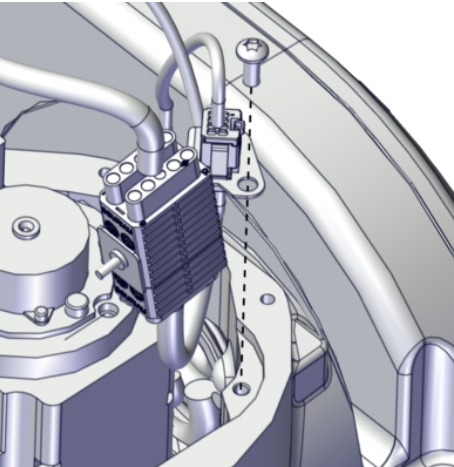
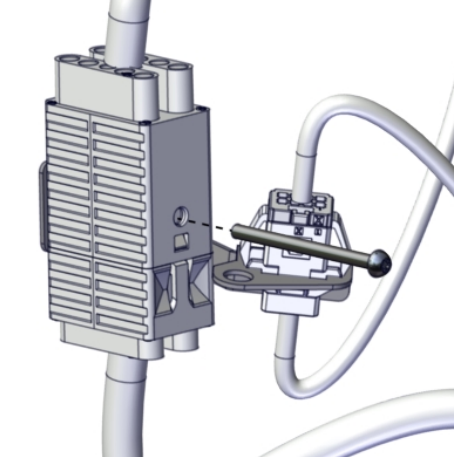
5.6.1 Replacing the wrist  
Continued

|   | Action                  | Note   |
|---|-------------------------|--|
| 4 | Remove the wrist cover. | <br>xx2000000373 |

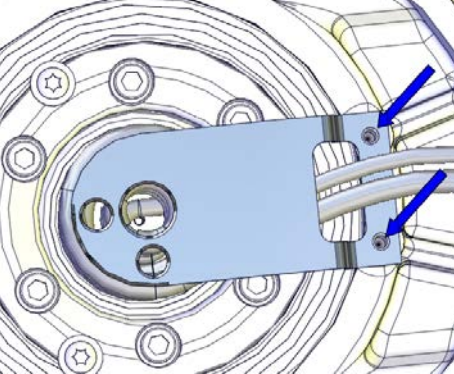
Disconnecting the axis-6 motor cables

|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |   |
| 2 | Unscrew the attachment screws and remove the motor cover.   | <br>xx2000000376 |

Continues on next page

|   | Action                        | Note  |
|---|-------------------------------|---|
| 3 | Remove the connector bracket. | <br>xx200000375   |
| 4 | Remove the connector screw.   | <br>xx2200001919 |
| 5 | Disconnect the motor cables.  |   |


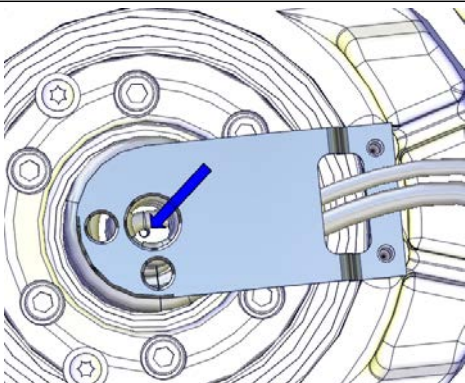

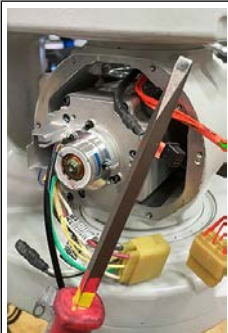



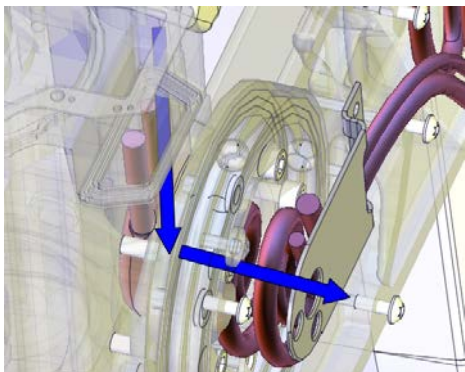
## Pushing out the axis-6 motor cables

|   | Action   | Note   |
|---|--|--|
| 1 | Unscrew the attachment screws that hold the cable bracket. | <br>xx1300000484 |

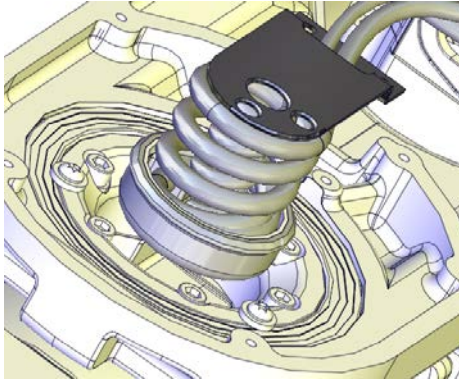
Continues on next page

5 Repair


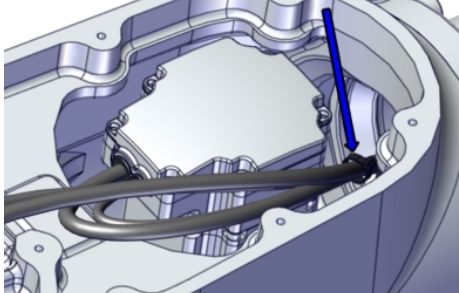
5.6.1 Replacing the wrist  
Continued

| Action   | Note   |
|--|--|
| <div>2</div> <div>Unscrew the M4 screw that holds the carrier.</div> <div><div></div><div><b>Note</b></div></div> <div>The screw is located at the bottom of the carrier.</div>   | <div></div> <div>xx1300000485</div>  |
| <div>3</div> <div>Lift out the axis-6 motor cables by holding the cables with one hand at the motor and the other at the carrier.</div> <div><div></div><div><b>CAUTION</b></div></div> <div>Assist by using a flat-head screwdriver or similar to push out the carrier from the motor housing side, to avoid damaging the cables by pulling them too hard.</div> <div><div></div><div>xx2300000057</div><div></div><div>xx2300000058</div><div></div><div>xx2300000059</div><div></div><div>xx2300000060</div></div> | <div></div> <div>xx1300000666</div> |

Continues on next page

|   | Action                                  | Note   |
|---|---|--|
| 4 | Lift out the carrier from its position. | <br>xx1300001113 |

## Disconnecting the axis-5 motor cables

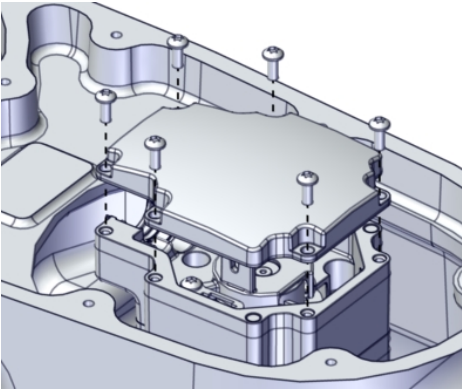
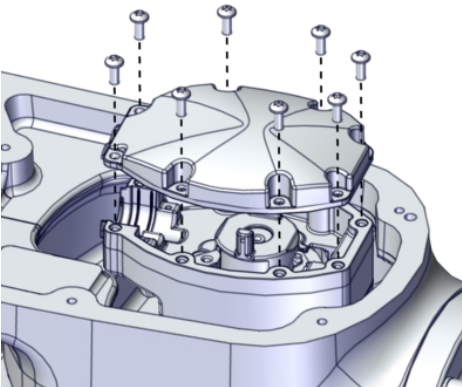
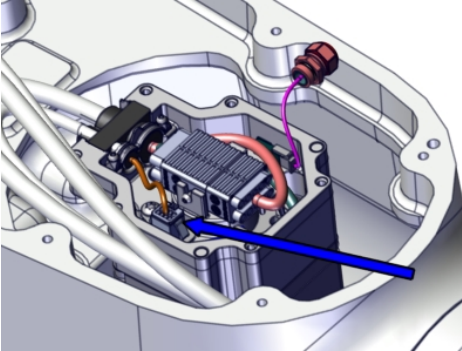
|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |   |
| 2 | Cut the cable tie.  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br><br>xx2100002630 |

*Continues on next page*

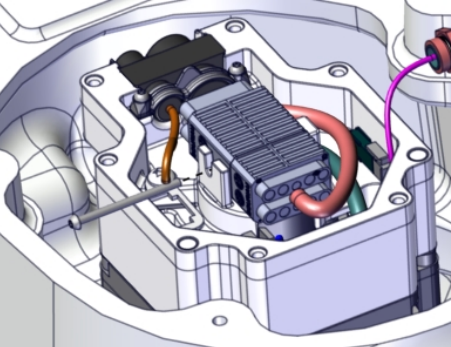
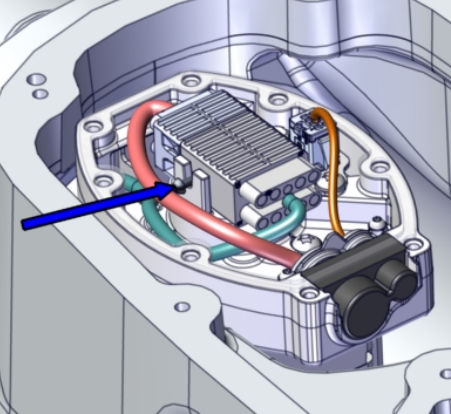
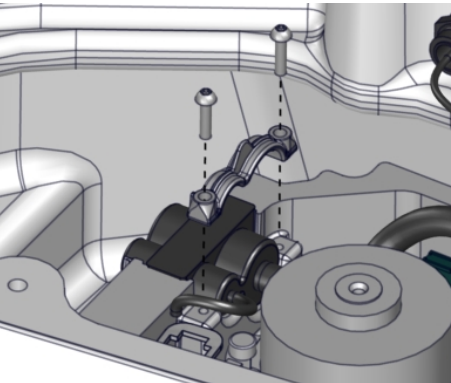


5 Repair

5.6.1 Replacing the wrist  
Continued

| Action   | Note  |
|--|---|
| 3 Remove the motor cover by removing the screws. | <div>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</div>  <div>xx2100002494</div> <div>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</div>  <div>xx2100002315</div> |
| 4 Disconnect the signal cable connector.         |  <div>xx2200001977</div>  |

Continues on next page

|   | Action   | Note  |
|---|--|---|
| 5 | Disconnect the power cable connector by removing the attachment screw. | <p data-bbox="978 309 1409 338">IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p data-bbox="978 703 1082 723">xx2200001978</p> <p data-bbox="978 734 1393 763">IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p data-bbox="978 1196 1082 1216">xx2200001979</p> |
| 6 | Remove the cable bracket by removing the screws.                       |  <p data-bbox="978 1637 1082 1657">xx2200001735</p>   |
| 7 | Remove the motor cables.   |   |



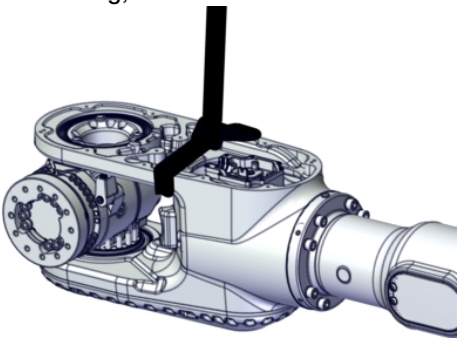
Continues on next page

## 5 Repair

### 5.6.1 Replacing the wrist

*Continued*

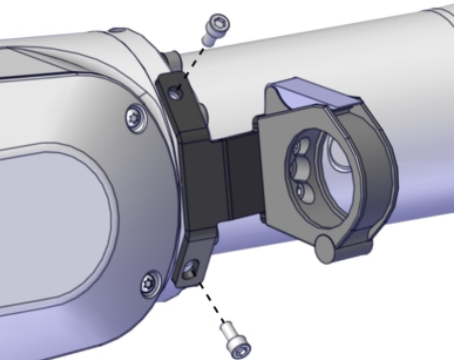
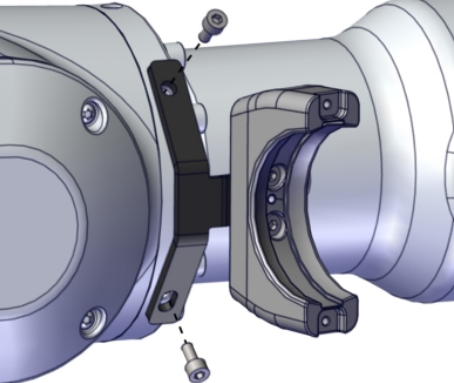
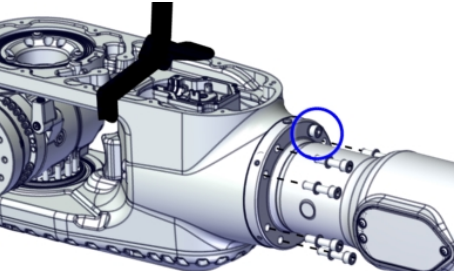
Attaching the lifting accessories to the wrist

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>CAUTION</b><br><br>The weight of the wrist is<br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID: 70 kg<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID: 40 kg<br>All lifting accessories used must be sized accordingly.  |  |
| 2 | Attach a roundsling to the wrist as shown in the figure.<br><br> <b>CAUTION</b><br><br>The roundsling placement shown in the figure keeps the wrist balanced when lifted, which reduces risk of damage or injury.<br>Do not attach the roundsling around the axis-5 gearbox! | Roundsling, 1 m<br> |
| 3 | Secure the roundsling to an overhead crane and stretch the roundsling to carry the weight of the wrist.   | xx2100001290   |

*Continues on next page*



## Removing the wrist

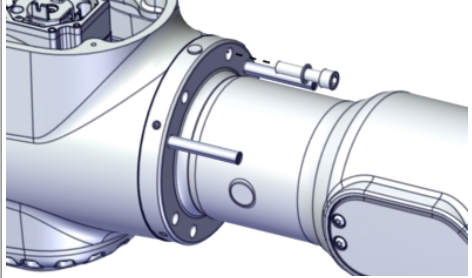

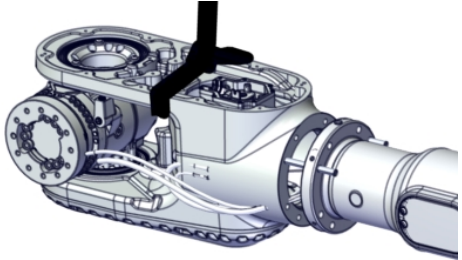
|   | Action  | Note   |
|---|---|--|
| 1 | If used, remove the bracket with the part of the ball joint housing still fitted. | <p data-bbox="975 365 1197 392">IRB 5710-70/2.7 LID</p>  <p data-bbox="975 779 1082 797">xx2100002804</p> <p data-bbox="975 815 1197 842">IRB 5710-90/2.3 LID</p>  <p data-bbox="975 1243 1082 1261">xx2100002805</p> |
| 2 | Remove all attachment screws but leave one.                                       |  <p data-bbox="975 1592 1082 1610">xx2300000017</p>  |

Continues on next page

## 5 Repair

### 5.6.1 Replacing the wrist

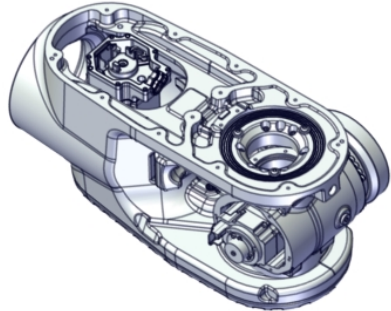
*Continued*

|   | Action  | Note  |
|---|---|---|
| 3 | Fit guide pins to the wrist unit  | : Robot.WristUnit.GuidePins.ArticleNumber   |
| 4 | Remove the remaining screw.   | Guide pin, M12x150 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID)<br>Guide pin, M10x150 (IRB 5710-90/2.7, IRB 5710-70/2.7 LID)<br><br>xx2300000018 |
| 5 | Pull out the wrist a bit and bring out the cabling from the wrist unit.<br><br> <b>CAUTION</b><br><br>Make sure that the cabling does not get damaged. | Bit holder and hexagon bit SW10<br>Bit holder dimension: 5/16" (14x18 mm)<br><br>xx2100001289  |
| 6 | Lift away the wrist.  |   |




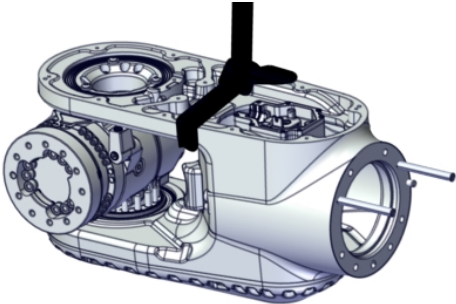
### Refitting the wrist

These procedures describes how to refit the wrist.

#### Preparations before refitting the wrist

|   | Action   | Note   |
|---|--|--|
| 1 | Wipe clean all contact surfaces.   |  |
| 2 | Prepare the new wrist spare part by removing the wrist cover and the motor covers. | <br>xx2100001292 |

*Continues on next page*

|   | Action   | Note  |
|---|--|---|
| 3 | <p>If axis 5 is not already in position <math>+90^\circ</math>, connect the brake release tool, release the brakes and move the axis manually into that position.</p> <p>Release the brakes of the axis-5 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p>   |
| 4 | <p>Attach a roundsling and guide pins to the wrist as shown in the figure.</p> <p> <b>CAUTION</b></p> <p>The roundsling placement shown in the figure keeps the wrist balanced when lifted, which reduces risk of damage or injury.</p> <p>Do not attach the roundsling around the axis-5 gearbox!</p>  | <p>Roundsling, 1 m: Length: 1 m.</p> <p>: Robot.WristUnit.GuidePins.ArticleNumber</p> <p>Guide pin, M12x150 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID)</p> <p>Guide pin, M10x150 (IRB 5710-90/2.7, IRB 5710-70/2.7 LID)</p>  <p>xx2100001291</p> |

## Refitting the wrist

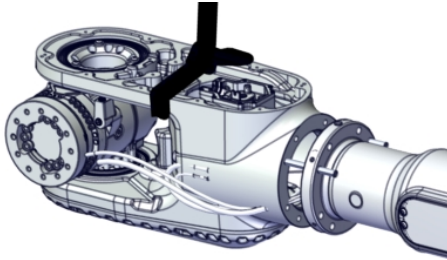
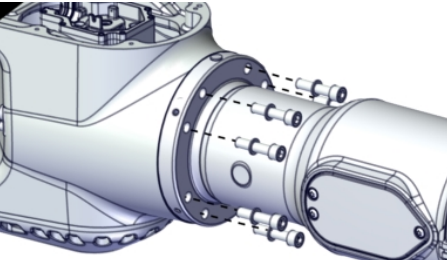
|   | Action  | Note |
|---|---|------|
| 1 | <p>Lift the wrist into mounting position and run the cabling into the wrist housing.</p> <p>Be careful not to damage any part of the cable harness.</p> |      |

Continues on next page


## 5 Repair

### 5.6.1 Replacing the wrist


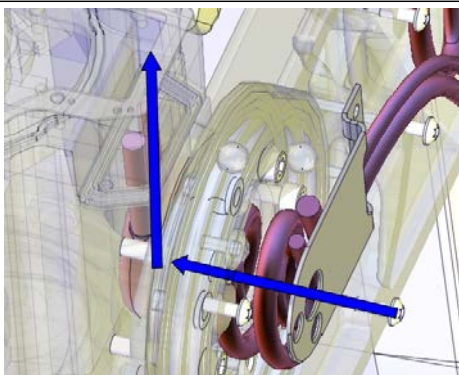
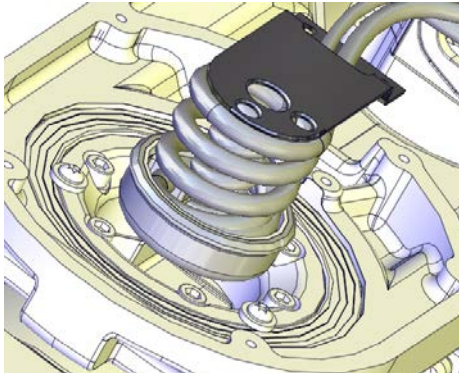


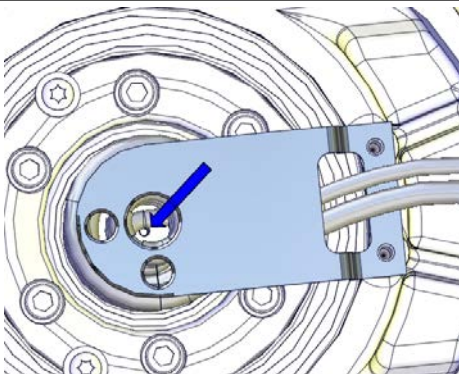
Continued

|   | Action  | Note  |
|---|---|---|
| 2 | Slide the wrist into fitting position.  |  <p>xx2100001289</p>  |
| 3 | Fit the attachment screws and washers. Then remove the guide pins and fit the remaining two screws. | <p>Hex socket head cap screw:<br/> M12x50 12.9 Gleitmo 603+Geomet 500 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID)<br/> M10x40 12.9 Gleitmo 603+Geomet 500 (IRB 5710-90/2.7, IRB 5710-70/2.7 LID)<br/> Bit holder and hexagon bit SW10<br/> Bit holder dimension: 5/16" (14x18 mm)</p>  <p>xx2300000021</p> |
| 4 | Tighten the attachment screws.  | <p>Tightening torque: standard torque 120 Nm<br/> <i>(Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws on page 662)..</i></p>   |

#### Inserting the axis-6 motor cables

|   | Action  | Note |
|---|---|------|
| 1 |  <b>Note</b><br>Axis 5 must be in position +90° (or as close as possible) for a correct installation of the cable harness in the wrist. If not, connect the brake release tool to the axis-5 motor connector, release the brakes and move axis 5 manually to +90°. |      |

Continues on next page

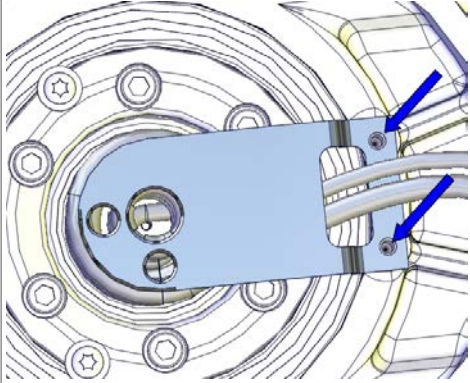
|   | Action   | Note   |
|---|--|--|
| 2 | <p>Push the cable harness into the wrist recess and up into the axis-6 motor.</p> <p> <b>Tip</b></p> <p>Moisten the rubber carrier slightly with water or grease around the contact surface, to make it easier to fit into place.</p>   |  <p>xx1300000667</p>   |
| 3 | <p>Push the carrier carefully into position.</p>   |  <p>xx1300001113</p>  |
| 4 | <p>Secure the carrier with the M4x10 screw.</p> <p> <b>Note</b></p> <p>The screw is located at the bottom of the carrier.</p> <p> <b>Tip</b></p> <p>The attachment screw securing the carrier may be difficult to fit. Make sure the carrier is level and completely pressed against the bottom.</p> |  <p>xx1300000485</p> |

Continues on next page

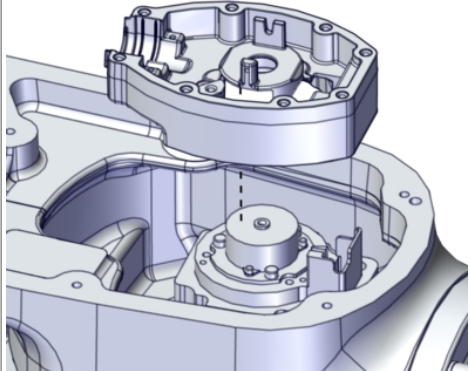
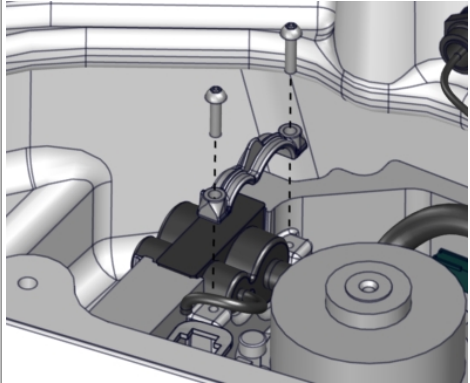
## 5 Repair

### 5.6.1 Replacing the wrist

*Continued*


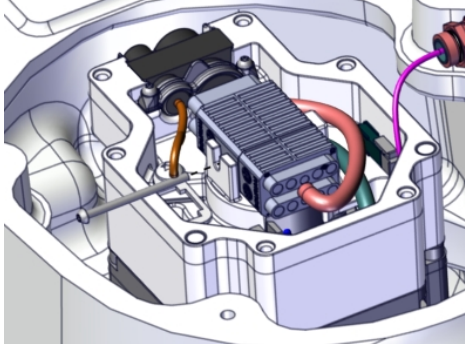
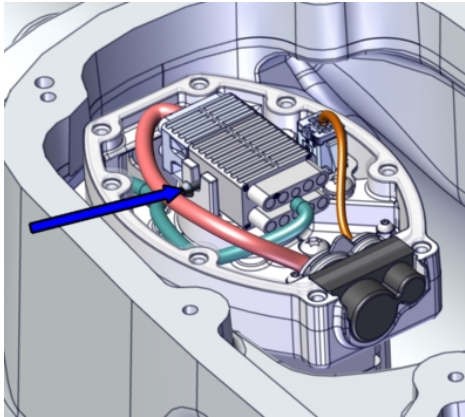
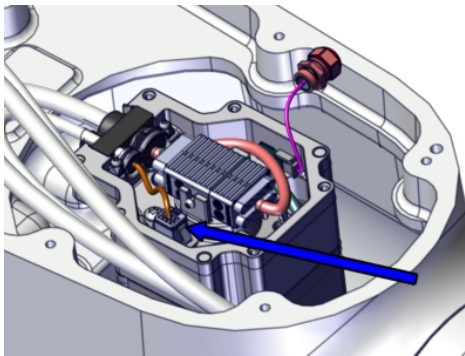
| Action   | Note   |
|--|--|
| 5 Secure the cable bracket with its attachment screws. | <p>Torx pan head screw: M6x16 A4-80<br/> Tightening torque: standard torque 10 Nm<br/> (<i><a href="#">Tightening torque on page 661</a></i>)..</p>  <p>xx1300000484</p> |

### Connecting the axis-5 motor cables

| Action  | Note   |
|---|--|
| 1 IRB 5710-90/2.7, IRB 5710-70/2.7 LID<br>Refit the connection box with the screws. |  <p>xx2100002316</p>  |
| 2 Put the motor cables in place in the opening.                                     |  |
| 3 Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001735</p> |

*Continues on next page*



|   | Action   | Note  |
|---|--|---|
| 4 | <p>Connect the power cable connector and secure with a screw.<br/>Connect in accordance with the markings on the connectors.</p> <p> <b>Note</b></p> <p>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p>Tightening torque: 1 Nm<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2200001978</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2200001979</p> |
| 5 | <p>Connect the signal cable connector.<br/>Connect in accordance with the markings on the connectors.</p>  |  <p>xx2200001977</p>  |

*Continues on next page*

## 5 Repair

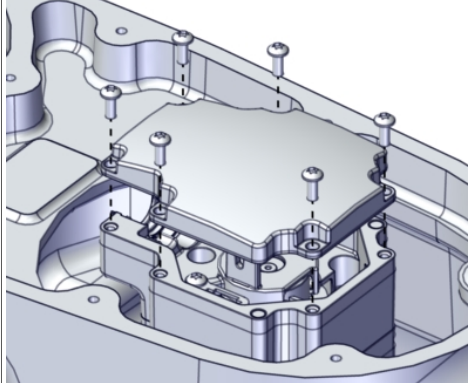
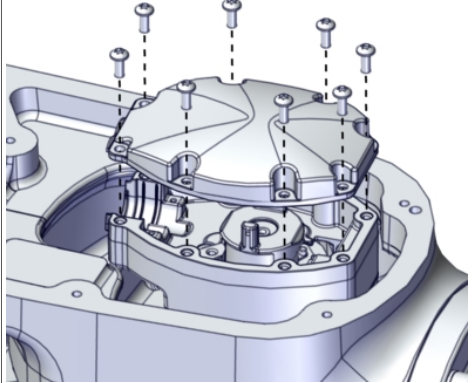
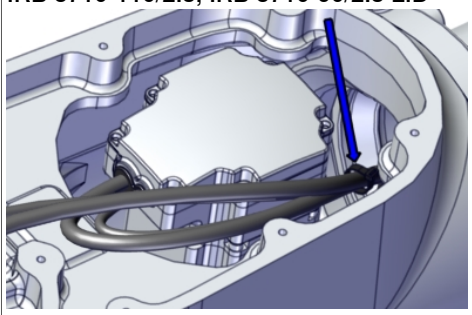
### 5.6.1 Replacing the wrist

*Continued*

|   | Action   | Note  |
|---|--|---|
| 6 | Inspect the gasket.<br>Replace if damaged.   | <p>Connection box cover with gasket:<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)<br/>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br/>3HAC072861-003 (Graphite White)<br/>3HAC072861-004 (ABB Orange)</p>  <p>xx2100002317</p> |
| 7 | <p> <b>CAUTION</b></p> <p>When fitting the motor cover, make sure that none of the cables inside will be damaged.</p> |   |

*Continues on next page*



|   | Action   | Note  |
|---|--|---|
| 8 | <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID</p> <p>Refit the motor cover with its attachment screws.</p> <p>Use locking liquid.</p> | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p> <p>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p> <p>Tightening torque: 6 Nm.</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2100002494</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2100002315</p> |
| 9 | <p>Secure the cabling with a cable strap.</p>  | <p>Cable strap, outdoor: -</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID</p>  <p>xx2100002630</p>  |


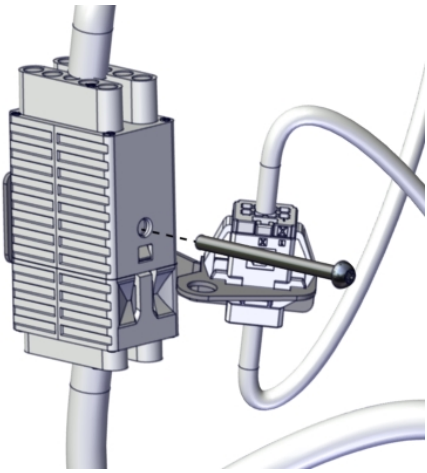
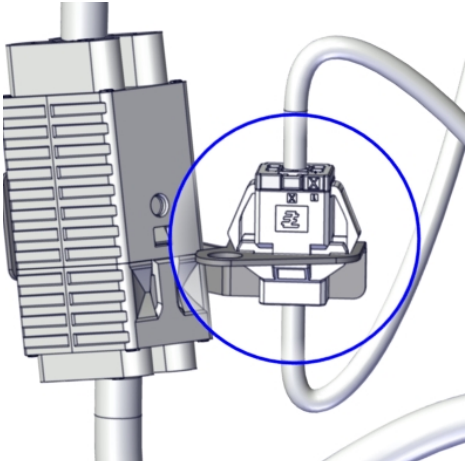
*Continues on next page*

## 5 Repair


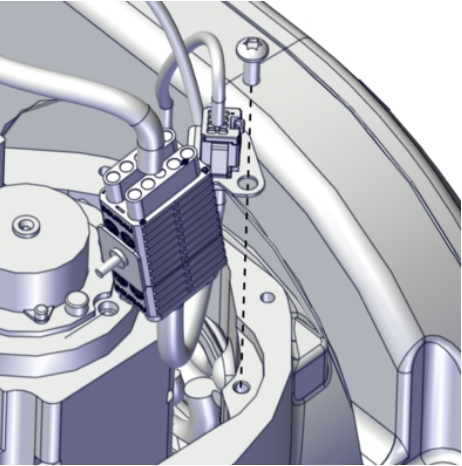


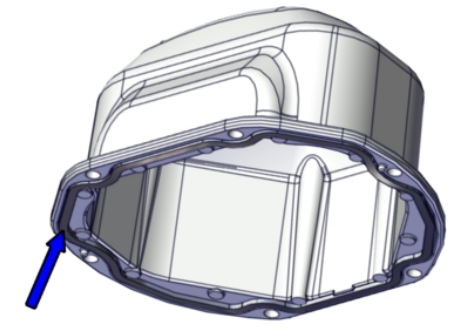

### 5.6.1 Replacing the wrist

*Continued*

#### Connecting the axis-6 motor cables

|   | Action  | Note  |
|---|---|---|
| 1 | Connect the motor cables.<br>Connect in accordance with the markings on the connectors.   |   |
| 2 | Position the power connector to the bracket with a screw.<br><br> <b>Note</b><br><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | Tightening torque: 1 Nm<br><br><br><br>xx2200001919 |
| 3 | Snap the signal connectors to each other in the bracket.  | <br><br>xx2200001920                              |

*Continues on next page*

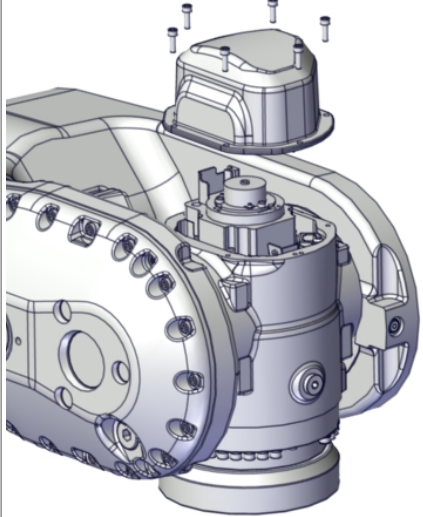
|   | Action   | Note   |
|---|--|--|
| 4 | <p>Refit the connector bracket assembly to the motor.</p> <p> <b>CAUTION</b></p> <p>The cabling is sensitive to mechanical damage. Handle it with care to avoid damage to the cabling or the connector, avoid any kind of tilt or skew.</p> | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p>  <p>xx2000000375</p> |
| 5 | <p>Verify correct cable layout as shown in the figure.</p> <p> <b>CAUTION</b></p> <p>Route the signal cabling correctly to avoid cable damage.</p>   |  <p>xx2100001293</p>  |
| 6 | <p>Inspect the gasket.<br/>Replace if damaged.</p>   | <p>Gasket, tilt housing cover: 3HAC071520-001</p>  <p>xx2100001287</p>     |
| 7 | <p> <b>CAUTION</b></p> <p>When fitting the motor cover, make sure that none of the cables inside will be damaged.</p>   |  |

*Continues on next page*

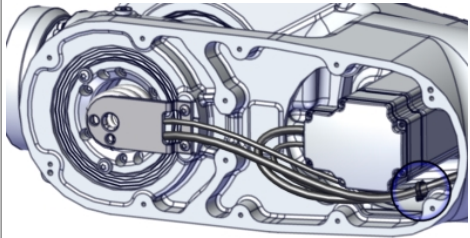
## 5 Repair

### 5.6.1 Replacing the wrist

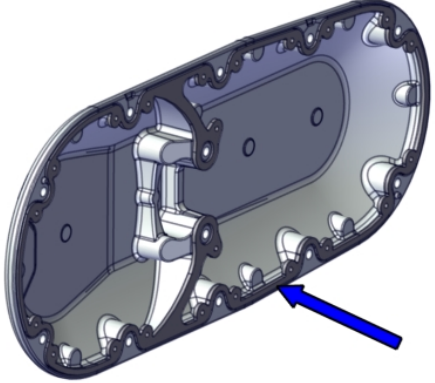
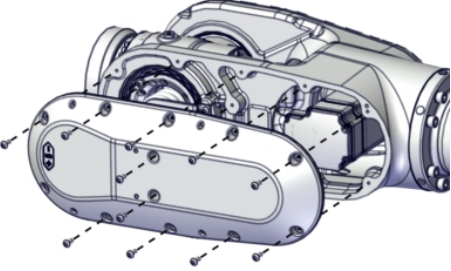
*Continued*

|   | Action                 | Note   |
|---|------------------------|--|
| 8 | Refit the motor cover. | <p>Hex socket head cap screw, M5x16 12.9<br/>Lafre 2C2B/FC6.9, 6 pcs<br/>Tightening torque: 4 Nm.</p>  <p>xx2000000376</p> |


### Refitting the wrist cover

|   | Action   | Note   |
|---|--|--|
| 1 | Make sure that the cable harness is routed and secured as shown in the figure. |  <p>xx2100002627</p> |

*Continues on next page*

| Action   | Note  |
|--|---|
| <p>2 <i>Foundry Plus:</i><br/>Inspect the gasket.<br/>Replace the complete cover if the gasket is damaged.</p>   | <p>Wrist cover:<br/>IRB 5710-110/2.3 / IRB 5710-90/2.3 LID:<br/>3HAC073390-002 (Graphite White)<br/>3HAC073390-004 (ABB Orange)<br/>IRB 5710-90/2.7 / IRB 5710-70/2.7 LID:<br/>3HAC070151-004 (Graphite White)<br/>3HAC070151-006 (ABB Orange)</p>  <p>xx2100001407</p> |
| <p>3 Refit the wrist cover and secure with screws.<br/><i>Foundry Plus:</i><br/>Fit all the screws first, then torque tighten them twice to achieve correct torque (due to compression from the gasket).</p> | <p>Torx pan head screw: M6x16 Stainless steel A2-70<br/>Tightening torque: 10 Nm.</p>  <p>xx2000000373</p>  |

#### Concluding procedure

| Action   | Note  |
|--|---|
| 1 <i>Foundry Plus:</i><br>Refit protection plugs.  |   |
| 2 If used, refit the DressPack cable package on the wrist.   | See product manual for the DressPack.         |
| 3 Calibrate the robot.   | See <a href="#">Calibration on page 621</a> . |
| <p>4  <b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |   |

## 5 Repair

---

### 5.6.2 Replacing the turning disc

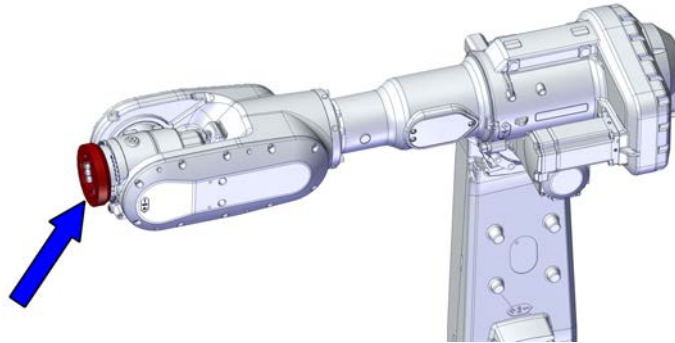
### 5.6.2 Replacing the turning disc

---

#### Location of the turning disc

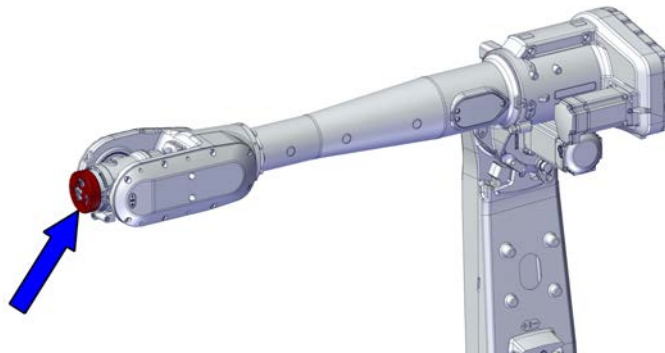
The turning disc is located as shown in the figure.

IRB 5710-110/2.3:



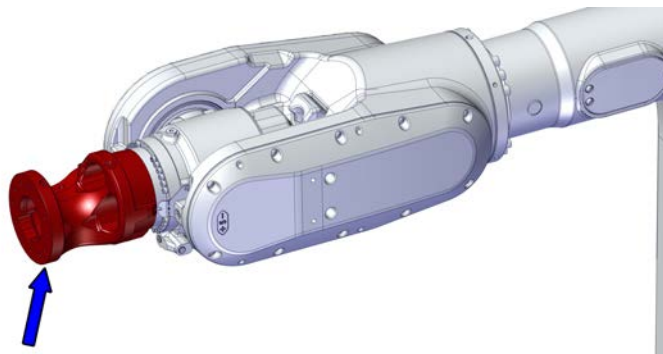
xx2100002166

IRB 5710-90/2.7:



xx2100002260

IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID:



xx2100002628

*Continues on next page*

## Required spare parts

**Note**

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part           | Article number   | Note | Level |
|----------------------|--|------|-------|
| Turning disc         | IRB 5710-110/2.3:<br>3HAC077309-002<br>IRB 5710-90/2.7:<br>3HAC077311-002              |      | L2    |
| Process turning disc | IRB 5710-90/2.3<br>LID:<br>3HAC070389-004<br>IRB 5710-70/2.7<br>LID:<br>3HAC070180-004 |      | L2    |

## Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

## Deciding calibration routine

Decide which calibration routine to be used, based on the information in the table. Depending on which routine is chosen, action might be required prior to beginning the repair work of the robot, see the table.

|   | Action   | Note  |
|---|--|---|
| 1 | <p>Decide which calibration routine to use for calibrating the robot.</p> <ul style="list-style-type: none"> <li>Reference calibration. External cable packages (DressPack) and tools can stay fitted on the robot.</li> <li>Fine calibration. All external cable packages (DressPack) and tools must be removed from the robot.</li> </ul>  |   |
|   | <p><b>If the robot is to be calibrated with reference calibration:</b></p> <p>Find previous reference values for the axis or create new reference values. These values are to be used after the repair procedure is completed, for calibration of the robot.</p> <p>If no previous reference values exist, and no new reference values can be created, then reference calibration is not possible.</p> | <p>Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.</p> <p>Creating new values requires possibility to move the robot.</p> <p>Read more about reference calibration for Axis Calibration in <a href="#">Reference calibration routine on page 631</a>.</p> |

Continues on next page



## 5 Repair

### 5.6.2 Replacing the turning disc


*Continued*

|  | Action   | Note |
|--|--|------|
|  | <b>If the robot is to be calibrated with fine calibration:</b><br>Remove all external cable packages (DressPack) and tools from the robot. |      |

#### Removing the turning disc

Use these procedures to remove the turning disc.

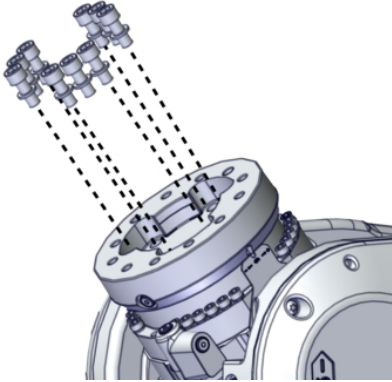
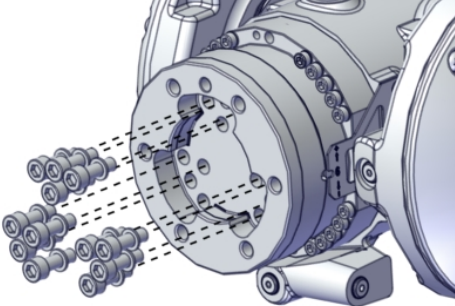
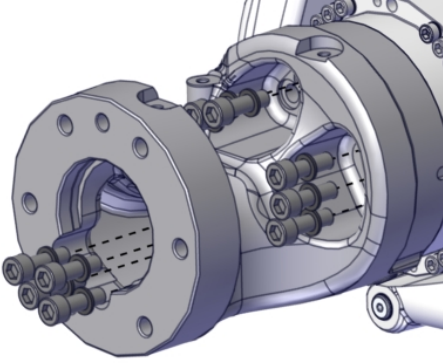
#### Preparations before removing the turning disc

|   | Action  | Note |
|---|---|------|
| 1 | Run the robot to a position most comfortable for the removal of the turning disc.<br>Jog axis 6 to synchronization position.  |      |
| 2 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> to the robot, before entering the safeguarded space. |      |
| 3 | Remove any equipment fitted to the turning disc.  |      |

*Continues on next page*



## Removing the turning disc

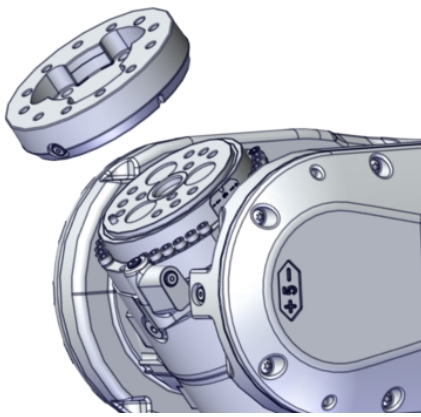
|   | Action   | Note   |
|---|--|--|
| 1 | Remove the screws and washers, that secure the turning disc. | <p data-bbox="975 365 1171 392">IRB 5710-110/2.3:</p>  <p data-bbox="975 804 1078 824">xx2100002167</p> <p data-bbox="975 835 1158 862">IRB 5710-90/2.7:</p>  <p data-bbox="975 1218 1078 1238">xx2100002265</p> <p data-bbox="975 1249 1442 1276">IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID:</p>  <p data-bbox="975 1666 1078 1686">xx2100002690</p> |

Continues on next page

## 5 Repair

### 5.6.2 Replacing the turning disc

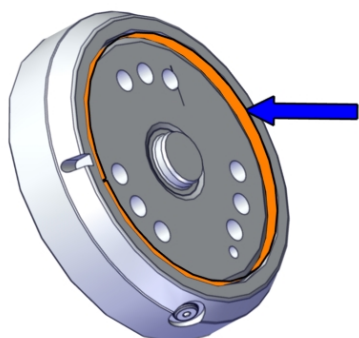
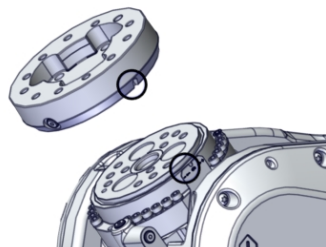
*Continued*

|   | Action                   | Note   |
|---|--------------------------|--|
| 2 | Remove the turning disc. |  <p>xx2100002168</p> |

#### Refitting the turning disc

Use these procedures to refit the turning disc.

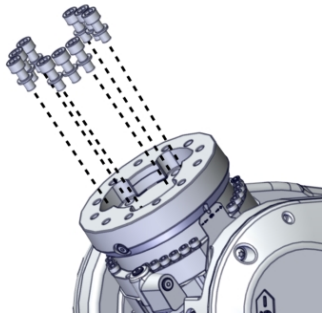
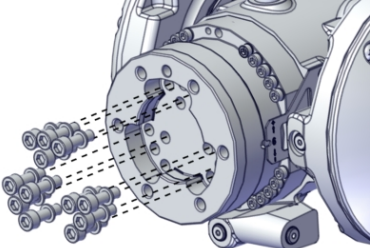
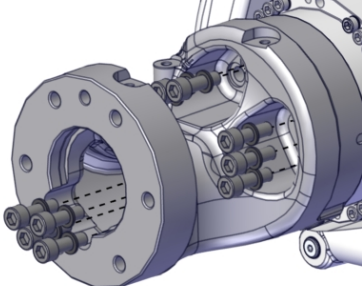
#### Refitting the turning disc

|   | Action  | Note  |
|---|---|---|
| 1 | Wipe clean the contact surfaces.  |   |
| 2 | <i>Protection type Foundry Plus:</i><br>Apply rust preventive to the surface shown in the figure. | <p>Rust preventive: 3HAC034903-001 (Mercasol 3110 Waxcoat. Recommended drying time is 24h.)</p>  <p>xx2100002232</p> |
| 3 | Fit the turning disc to the wrist.<br>Orient the disc according to the synchronization marks.     |  <p>xx2100002169</p>   |

*Continues on next page*

## 5.6.2 Replacing the turning disc

*Continued*

|   | Action  | Note  |
|---|---|---|
| 4 | Secure the turning disc with its attachment screws and washers. | <p>Hex socket head cap screw:<br/> M10x25 12.9 Gleitmo 603+Geomet 500 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID)<br/> M8x25 12.9 Gleitmo 603+Geomet 500 (IRB 5710-90/2.7, IRB 5710-70/2.7 LID)<br/> Washer:<br/> 3HAB4233-1 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID), 9 pcs<br/> IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br/> Steel 8.4x13x1.5<br/> Tightening torque: .<br/> <ul style="list-style-type: none"> <li>• M10: standard torque 70 Nm</li> <li>• M8: standard torque 35 Nm</li> </ul> IRB 5710-110/2.3:</p>  <p>xx2100002167</p> <p>IRB 5710-90/2.7:</p>  <p>xx2100002265</p> <p>IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID:</p>  <p>xx2100002690</p> |

*Continues on next page*


## 5 Repair

---

### 5.6.2 Replacing the turning disc

*Continued*

Concluding procedure

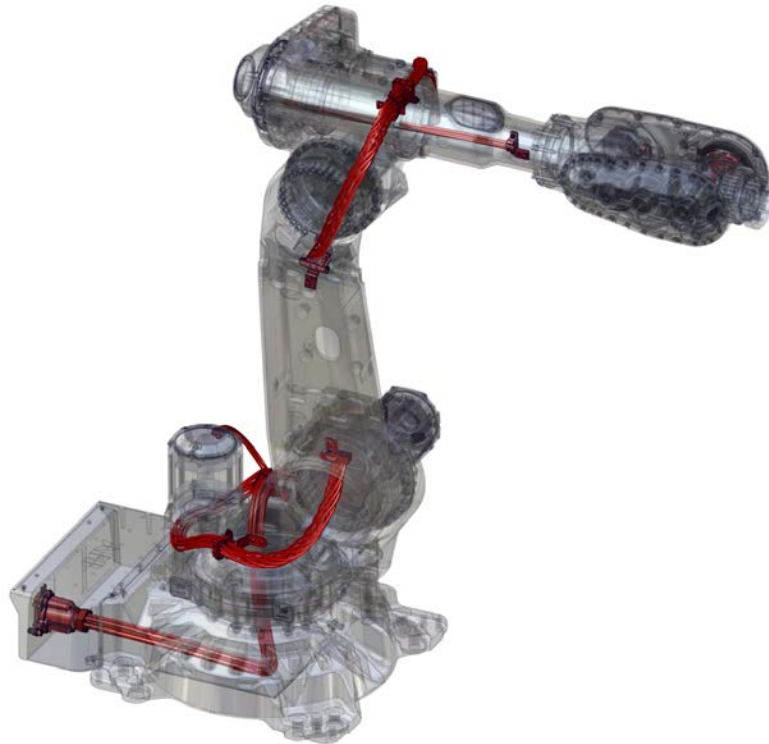
|   | Action   | Note |
|---|--|------|
| 1 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |      |

## 5.7 Electronic parts

### 5.7.1 Removing the cable harness

#### Location of the cable harness

The cable harness is located as shown in the figure.



xx2100000483

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part    | Article number | Note | Level |
|---------------|----------------|------|-------|
| Cable harness | 3HAC071396-001 |      | L2    |

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |


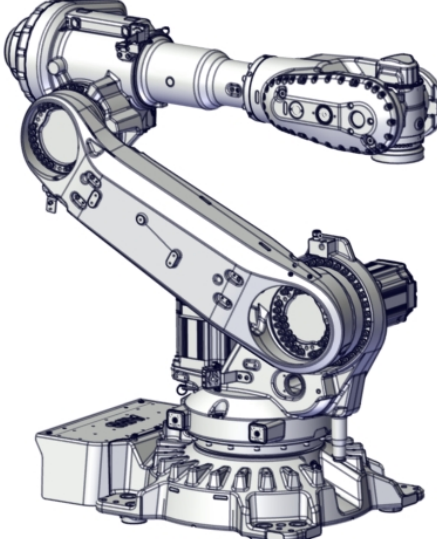

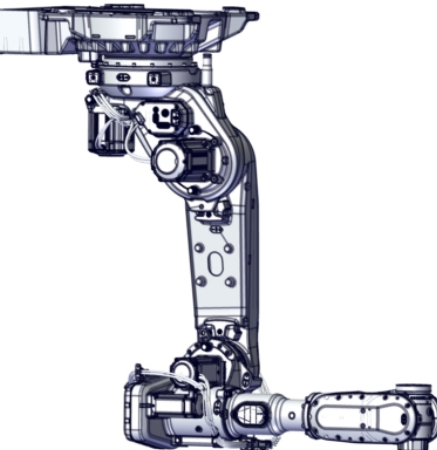

*Continues on next page*

## 5 Repair



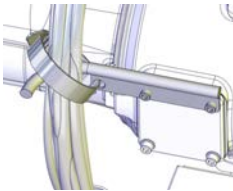
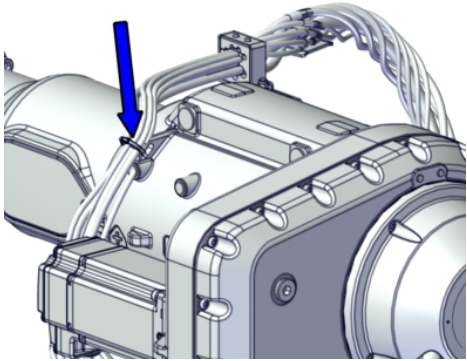
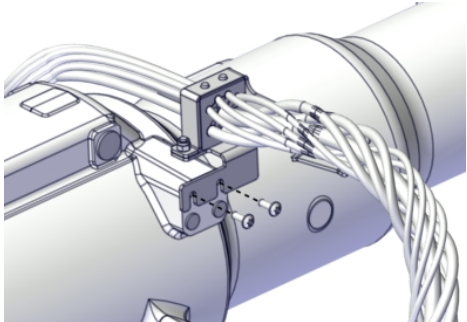
### 5.7.1 Removing the cable harness

Continued

#### Preparations before removing the cable harness

|   | Action   | Note   |
|---|--|--|
| 1 | <p><b>Floor-standing robot:</b></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: 0°</li> <li>• Axis 2: -60°</li> <li>• Axis 3: +60°</li> <li>• Axis 4: 0°</li> <li>• Axis 5: +90°</li> <li>• Axis 6: no significance.</li> </ul> <p> <b>Note</b></p> <p>The specified position is a recommended position.</p> <p>Orient axis-5 as close as possible to +90° to be able to open the axis-6 motor cover and to remove the axis-6 motor cables. The axis-5 position is also important to avoid the spiral of the cable harness in the carrier being unwound or placed in wrong position.</p> <p>Depending on what tool is used, the other axes may need to be jogged to another position.</p>              |  <p>xx2100002132</p>   |
| 2 | <p><b>Option Inverted (3317-1)</b></p> <p>Jog the robot to the specified position:</p> <ul style="list-style-type: none"> <li>• Axis 1: 0°</li> <li>• Axis 2: 0°</li> <li>• Axis 3: 0°</li> <li>• Axis 4: 0°</li> <li>• Axis 5: +90°</li> <li>• Axis 6: no significance.</li> </ul> <p> <b>Note</b></p> <p>The specified position is a recommended position.</p> <p>Orient axis-5 as close as possible to +90° to be able to open the axis-6 motor cover and to remove the axis-6 motor cables. The axis-5 position is also important to avoid the spiral of the cable harness in the carrier being unwound or placed in wrong position.</p> <p>Depending on what tool is used, the other axes may need to be jogged to another position.</p> |  <p>xx2100002138</p> |
| 3 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p>   |  |

Continues on next page


|   | Action  | Note  |
|---|---|---|
| 4 |  <b>Note</b><br>If only the manipulator harness shall be removed, the DressPack cable package can stay fitted on the process turning disk.   |   |
| 5 | Cut the cable strap at the arm house eyelet.<br> <b>Note</b><br>If DressPack is fitted, the cable fixing bracket is replaced by the cable guide. <br>xx1300001973 | <br>xx2000000415  |
| 6 | Remove the metal clamp at the arm house.  | <br>xx2100001285 |

#### Removing the cable harness - upper arm and wrist

These procedures describe how to remove the cable harness in the upper arm and wrist.

#### Retrieving access to the wrist cabling

Use this procedure to remove the wrist cover.

|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |      |


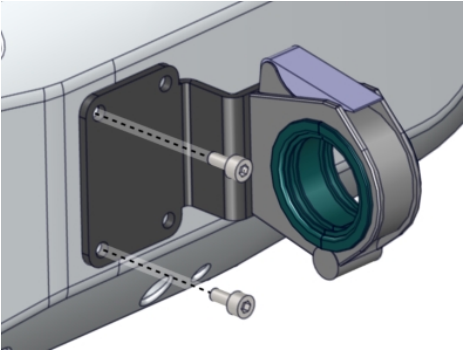
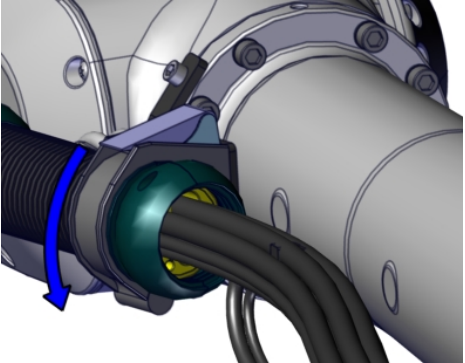
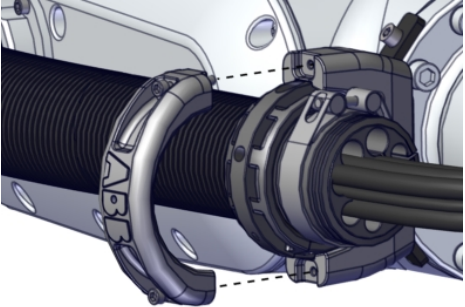
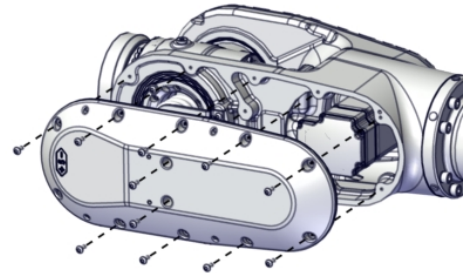
*Continues on next page*



## 5 Repair

### 5.7.1 Removing the cable harness


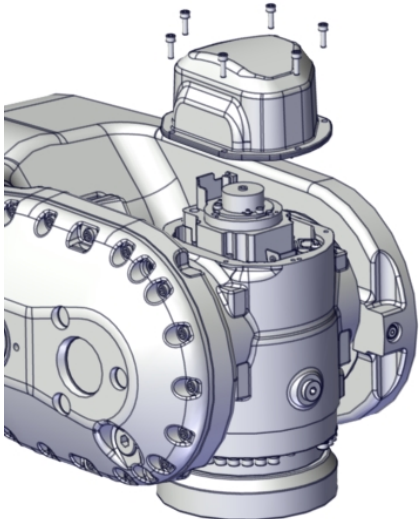
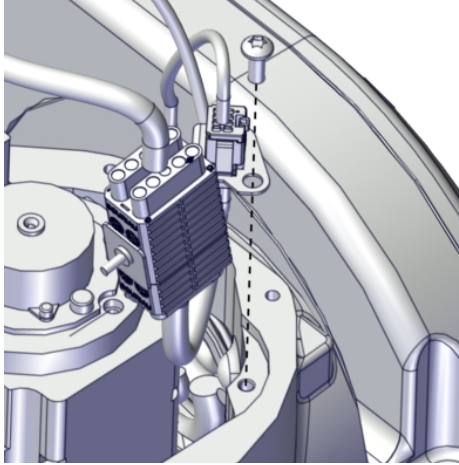
*Continued*

|   | Action  | Note  |
|---|---|---|
| 2 | <p>If DressPack MH3 is installed:</p> <p>Remove the wrist bracket with the complete ball joint housing still fitted, if the bracket is installed over the two wrist cover screws.</p> <p> <b>Note</b></p> <p>No need to remove the bracket if the two wrist cover screws are accessible.</p> |  <p>xx2300001366</p>  |
| 3 | <p>If DressPack is installed:</p> <p>Open the ball joint housing on the arm tube and remove the DressPack cable package.</p>  | <p>IRB 5710-70/2.7 LID</p>  <p>xx2100002733</p> <p>IRB 5710-90/2.3 LID:</p>  <p>xx2100002709</p> |
| 4 | <p>Remove the wrist cover.</p>  |  <p>xx2000000373</p>  |

*Continues on next page*



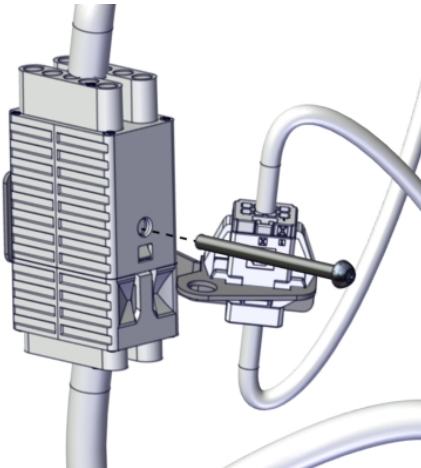
## Disconnecting the axis-6 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Unscrew the attachment screws and remove the motor cover.   | <br>xx2000000376  |
| 3 | Remove the connector bracket.   | <br>xx2000000375 |

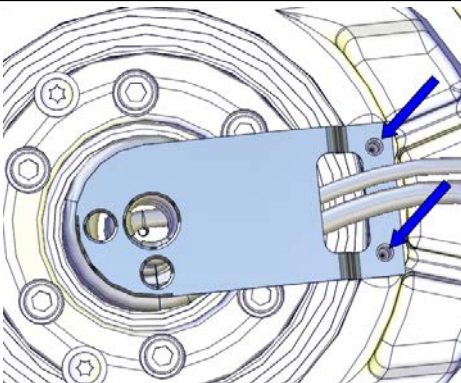

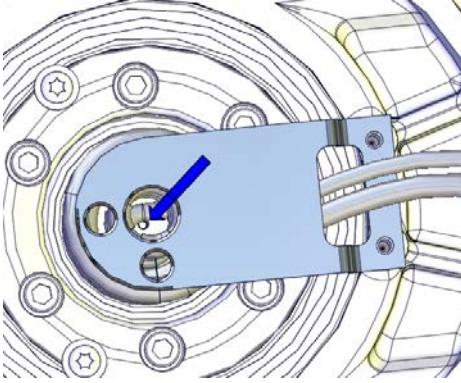
Continues on next page

5 Repair






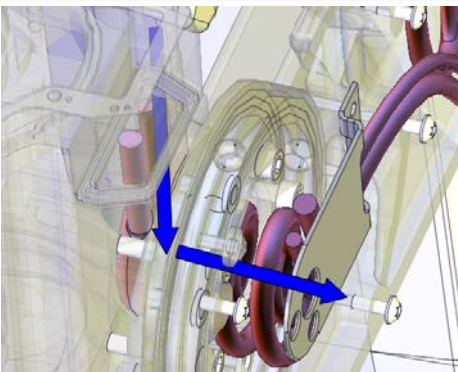
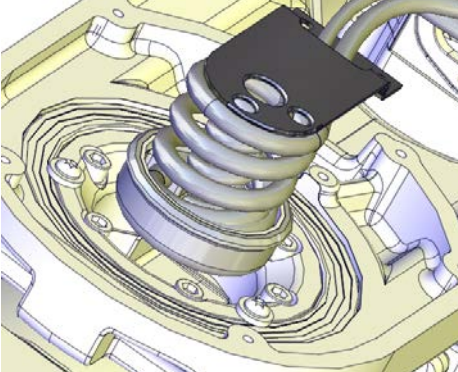
5.7.1 Removing the cable harness  
Continued

| Action |                              | Note   |
|--------|------------------------------|--|
| 4      | Remove the connector screw.  | <br>xx2200001919 |
| 5      | Disconnect the motor cables. |  |

Pushing out the axis-6 motor cables

| Action |   | Note   |
|--------|---|--|
| 1      | Unscrew the attachment screws that hold the cable bracket.  | <br>xx1300000484  |
| 2      | Unscrew the M4 screw that holds the carrier.<br> <b>Note</b><br>The screw is located at the bottom of the carrier. | <br>xx1300000485 |

Continues on next page

|   | Action   | Note   |
|---|--|--|
| 3 | <p>Lift out the axis-6 motor cables by holding the cables with one hand at the motor and the other at the carrier.</p> <p> <b>CAUTION</b></p> <p>Assist by using a flat-head screwdriver or similar to push out the carrier from the motor housing side, to avoid damaging the cables by pulling them too hard.</p> <div data-bbox="502 600 726 936"><br/>xx2300000057</div> <div data-bbox="734 600 957 936"><br/>xx2300000058</div> <div data-bbox="502 981 726 1317"><br/>xx2300000059</div> <div data-bbox="734 981 957 1317"><br/>xx2300000060</div> | <p><br/>xx1300000666</p>   |
| 4 | <p>Lift out the carrier from its position.</p>   | <p><br/>xx1300001113</p> |


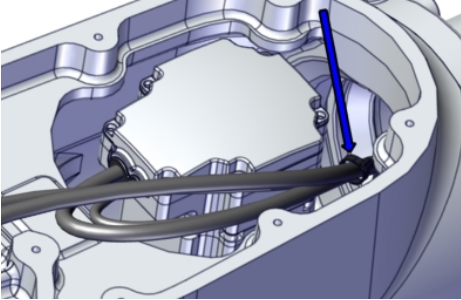
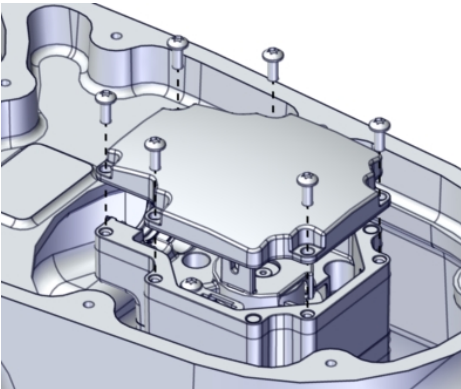
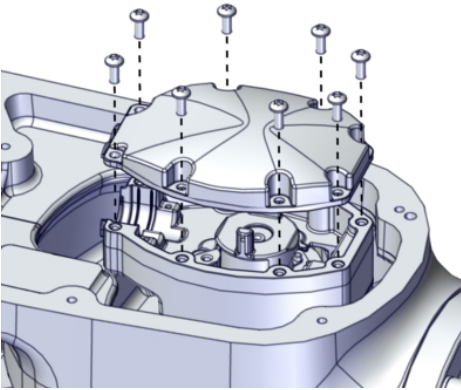
Continues on next page

# 5 Repair

## 5.7.1 Removing the cable harness

Continued

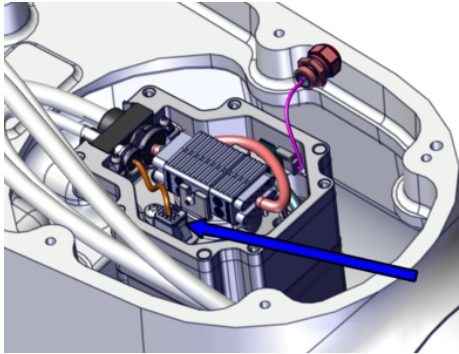
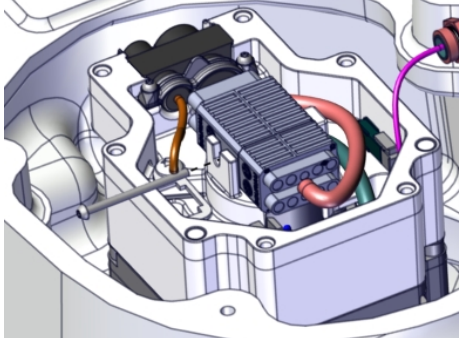
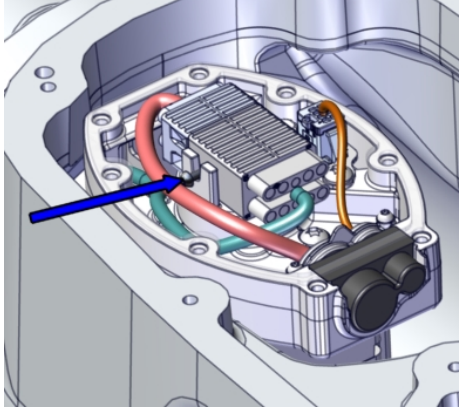
### Disconnecting the axis-5 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Cut the cable tie.  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br><br>xx2100002630  |
| 3 | Remove the motor cover by removing the screws.  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br><br>xx2100002494<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br><br>xx2100002315 |

Continues on next page

## 5.7.1 Removing the cable harness

*Continued*

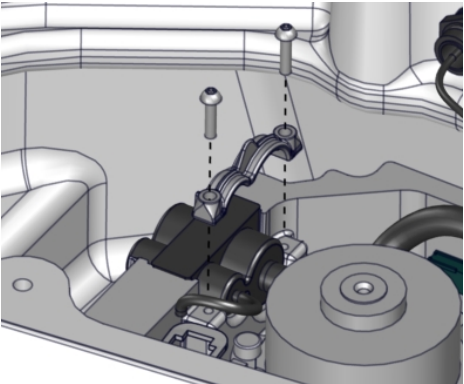
|   | Action   | Note   |
|---|--|--|
| 4 | Disconnect the signal cable connector.                                 | <br>xx2200001977   |
| 5 | Disconnect the power cable connector by removing the attachment screw. | <p data-bbox="970 725 1439 757">IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p> <br>xx2200001978<br><p data-bbox="970 1149 1439 1180">IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p> <br>xx2200001979 |

*Continues on next page*


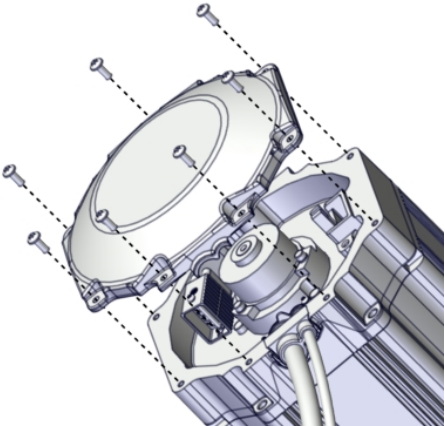


5 Repair

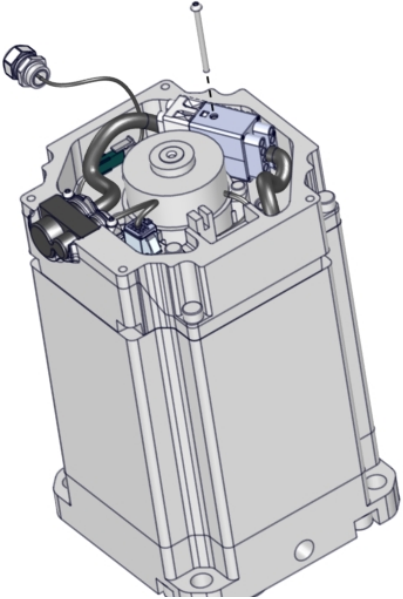
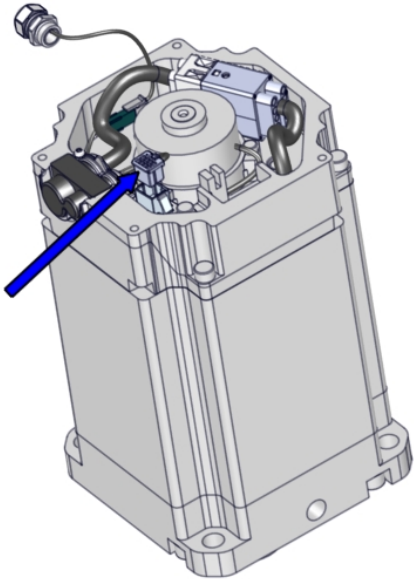
5.7.1 Removing the cable harness  
Continued

|   | Action   | Note   |
|---|--|--|
| 6 | Remove the cable bracket by removing the screws. | <br><br>xx2200001735 |
| 7 | Remove the motor cables.                         |  |

Disconnecting the axis-3 and axis-4 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Remove the motor cover by removing the screws.  | <br><br>xx2100000596 |

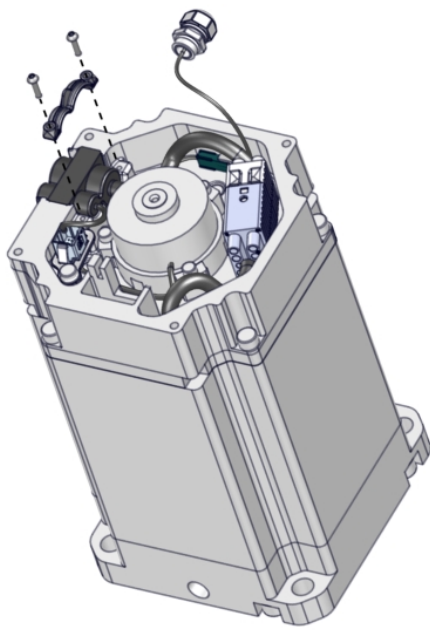
Continues on next page

|   | Action  | Note   |
|---|---|--|
| 3 | Disconnect the power cable connector by first removing the attachment screw and then parting the connector. | <br>xx2200001736  |
| 4 | Disconnect the signal cable connector by pulling it out.  | <br>xx2200001737 |


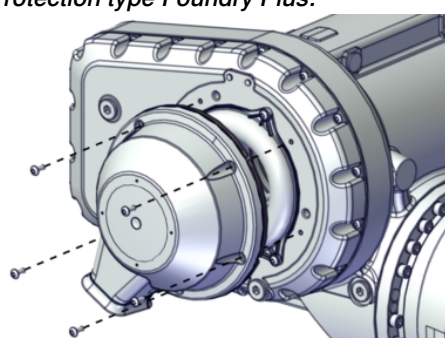
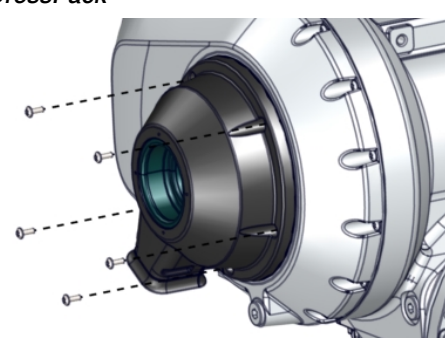
Continues on next page

5 Repair

5.7.1 Removing the cable harness  
Continued

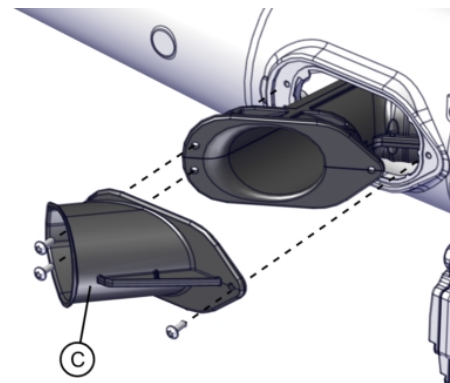
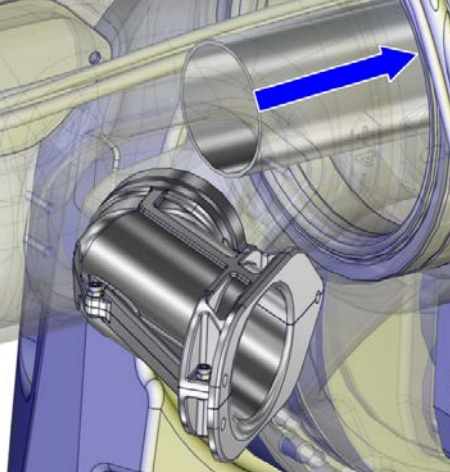


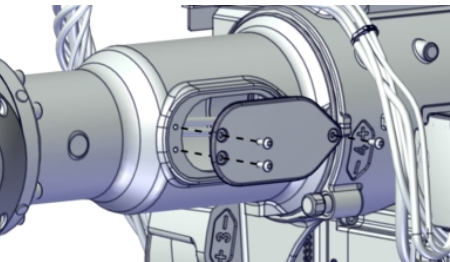
| Action   | Note   |
|--|--|
| 5 Remove the cable bracket by removing the screws. | <br><br>xx2200001738 |
| 6 Remove the motor cables from the motor.          |  |

Removing the cable harness from the wrist and upper arm

| Action  | Note   |
|---|--|
| 1 <i>Foundry Plus, DressPack:</i><br>Remove the back cover.<br><br> <b>Note</b><br>Use caution not to damage the gasket. | <i>Protection type Foundry Plus:</i><br><br>xx2000000422<br><i>DressPack</i><br><br>xx2300001040 |

Continues on next page




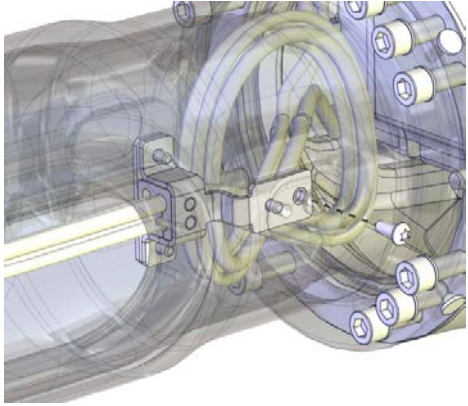
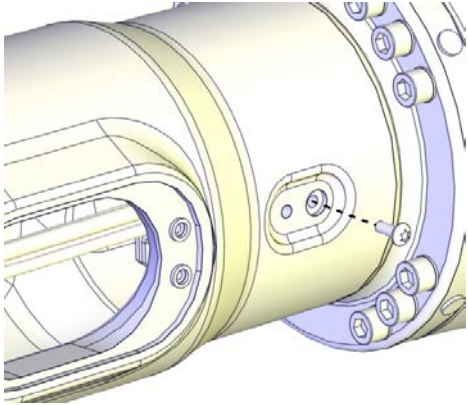
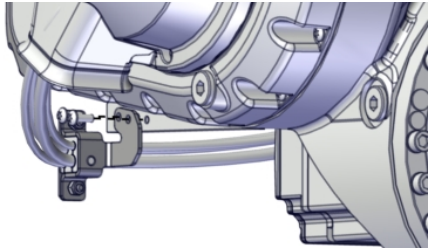
|   | Action   | Note   |
|---|--|--|
| 2 | <b>DressPack</b><br>Loosen the insert.<br>(Cable guard (C) is available for protection type Foundry Plus.)   | <br>xx2100002677   |
| 3 | <b>DressPack</b><br>Push the DressPack tube a little backwards.  | <br>xx1400000720  |
| 4 |  <b>Tip</b><br>Use tape and tie the axis-5 and axis-6 connectors and carrier into a bundle (if not already done). This is done to facilitate the removal and to avoid damaging the parts. This will also make it easier to run the cable harness through the inside of the upper arm. | <br>xx1300000668 |
| 5 | Remove the side cover on the arm tube.   | <br>xx2000000420 |

Continues on next page


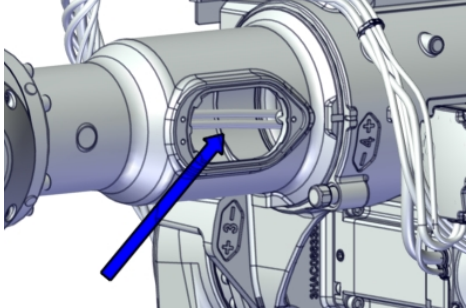
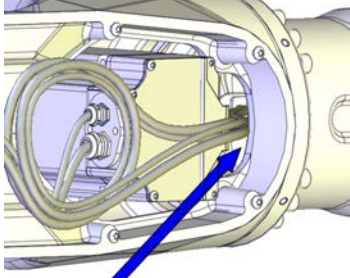


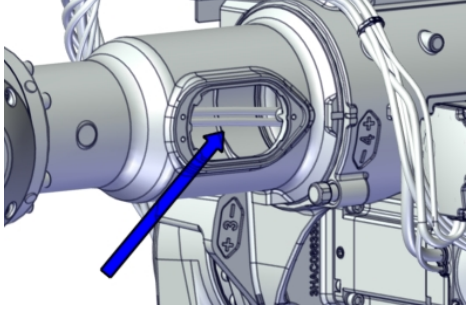
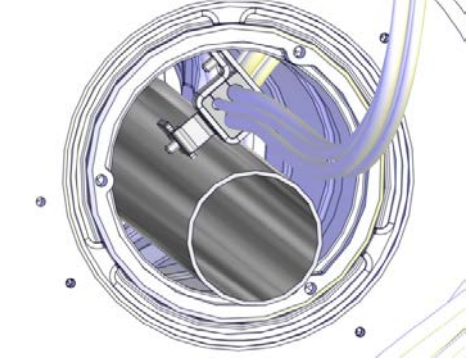
## 5 Repair

### 5.7.1 Removing the cable harness

*Continued*

|   | Action  | Note   |
|---|---|--|
| 6 | <p>Unscrew the attachment screw that secures the axis-4 metal clamp inside the arm tube.</p> <p> <b>Note</b></p> <p>The screw is reached from outside the upper arm.</p> |  <p>xx1700000340</p>  <p>xx1700000339</p> |
| 7 | Remove the arm house metal clamp.   |  <p>xx2100002154</p>   |

*Continues on next page*

|   | Action  | Note   |
|---|---|--|
| 8 | <p>Remove the cable harness out from the wrist.</p> <p> <b>Tip</b></p> <p>This step is best performed by two persons working together:</p> <ul style="list-style-type: none"> <li>• Person 1: Put one hand inside the side hole and take a hold of the cable harness.</li> <li>• Person 2: Take a hold on the cable harness inside the wrist.</li> <li>• Together: Move the cable harness past the axis-5 motor and into the arm tube.</li> </ul>  | <p>Person 1, working at the side hole:</p>  <p>xx2000000416</p> <p>Person 2, working at the wrist:</p>  <p>xx1300000746</p>   |
| 9 | <p>Remove the cable harness out of the arm tube, at the back of the upper arm.</p> <p> <b>Tip</b></p> <p>This step is best performed by two persons working together:</p> <ul style="list-style-type: none"> <li>• Person 1: Put one hand inside the side hole and take a hold of the cable harness.</li> <li>• Person 2: Take a hold on the cable harness at the back of the robot.</li> <li>• Together: Move the cable harness out of the arm tube.</li> </ul> <p> <b>Note</b></p> <p>To be able to remove the cable harness with the DressPack tube fitted, the tube needs to be pulled out a little, then be placed on the lower left side in the arm tube and the bracket of the cable harness then needs to be placed on the upper right hand side.</p> | <p>Person 1, working at the side hole:</p>  <p>xx2000000416</p> <p>Person 2, working at the back:</p>  <p>xx1400002561</p> |

Continues on next page


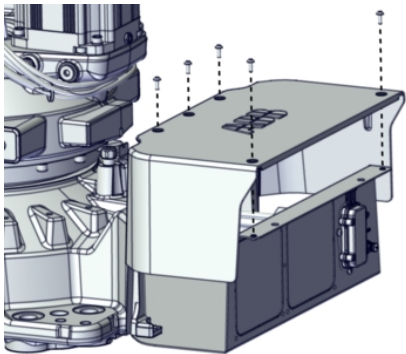
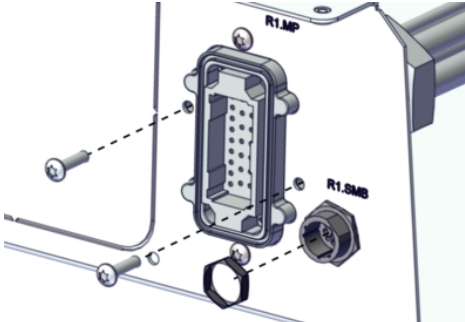
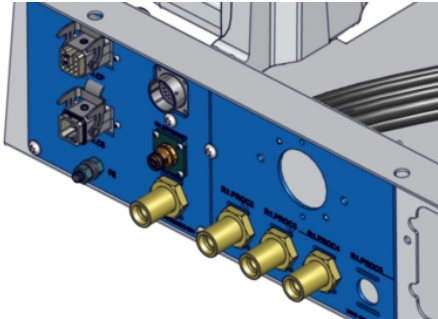
5 Repair

5.7.1 Removing the cable harness  
Continued

Removing the cable harness - base, frame and lower arm

These procedures describes how to remove the cable harness from base, frame and lower arm.

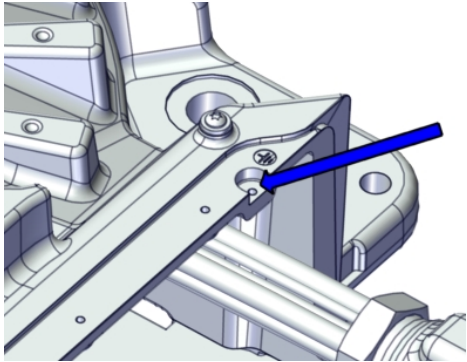
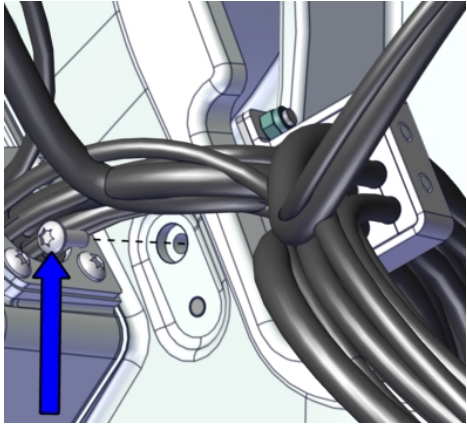
Preparations before removing the cable harness in the base

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Remove the base cover.  | <br><br>xx2100000981  |
| 3 | Loosen the connectors: <ul style="list-style-type: none"><li>• R1.MP</li><li>• R1.SMB</li></ul>   | <br><br>xx2100001109 |
| 4 | If used, disconnect the DressPack hoses in the base.  | <br><br>xx2300001093 |


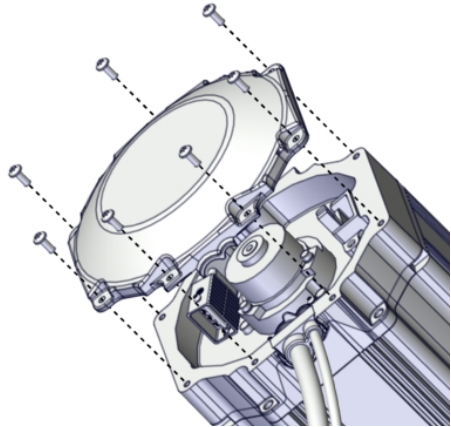
Continues on next page

### 5.7.1 Removing the cable harness

*Continued*

|   | Action   | Note  |
|---|--|---|
| 5 | Disconnect the earth cable.                                    |  <p>xx2100000982</p>  |
| 6 | Loosen the cable bracket from the frame by removing the screw. |  <p>xx2100001108</p> |

#### Disconnecting the axis-1 and axis-2 motor cables

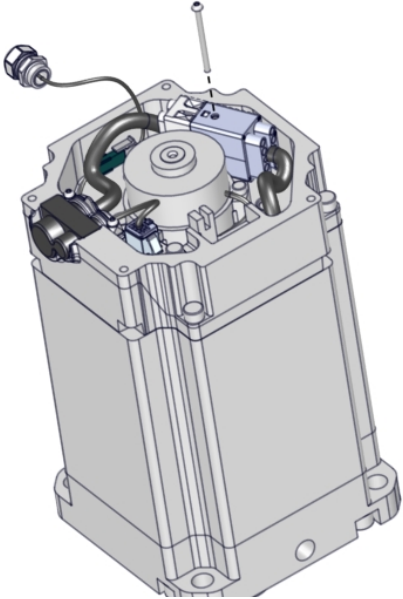
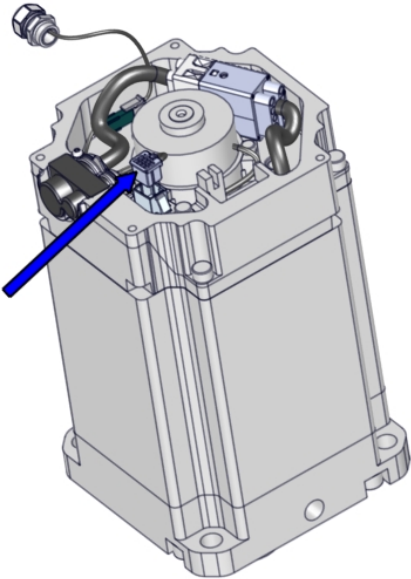
|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Remove the motor cover by removing the screws.  |  <p>xx2100000596</p> |

*Continues on next page*

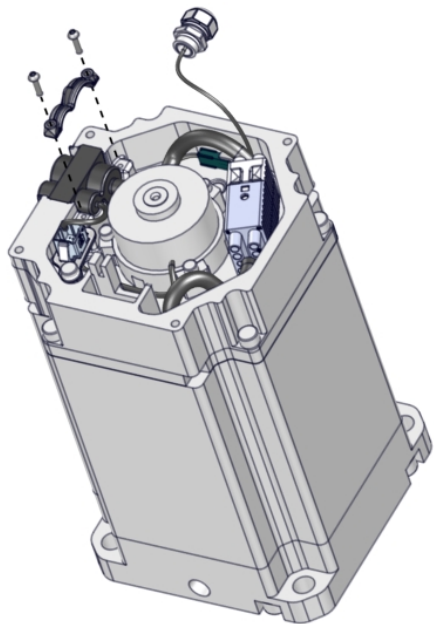


5 Repair



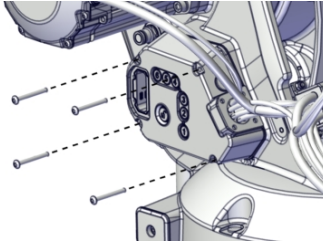
5.7.1 Removing the cable harness  
Continued

| Action  | Note  |
|---|---|
| 3 Disconnect the power cable connector by first removing the attachment screw and then parting the connector. | <br>xx2200001736  |
| 4 Disconnect the signal cable connector by pulling it out.  | <br>xx2200001737 |

Continues on next page

|   | Action   | Note   |
|---|--|--|
| 5 | Remove the cable bracket by removing the screws. | <br>xx2200001738 |
| 6 | Remove the motor cables from the motor.          |  |

## Removing the electronic box


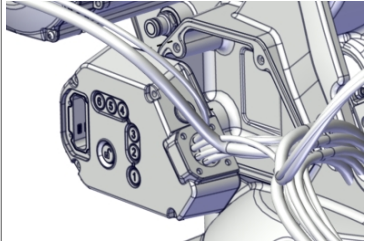
|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |   |
| 2 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |   |
| 3 | Remove the electronic box screws.  | <br>xx2100002134 |

*Continues on next page*


## 5 Repair

### 5.7.1 Removing the cable harness

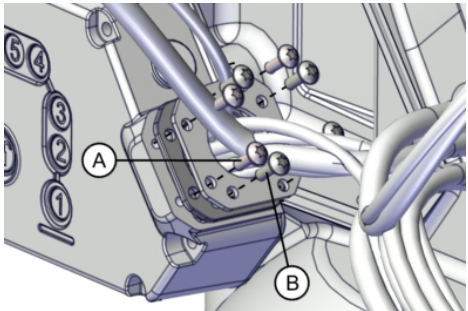
Continued

| Action   | Note  |
|--|---|
| <p>4 Remove the electronic box, including all internal equipment.</p> <p> <b>CAUTION</b></p> <p>Clean cover from metal residues before opening.<br/>Metal residues can cause shortage on the boards which can result in hazardous failures.</p> |  <p>xx2100002135</p> |

#### Disconnecting the SMB and brake release units

| Action   | Note |
|--|------|
| <p>1  <b>ELECTROSTATIC DISCHARGE (ESD)</b></p> <p>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i>.</p> |      |
| 2 Disconnect all connectors from the SMB board.  |      |
| 3 Disconnect the connectors R2.BU1 and R2.BU2 from the brake release board.  |      |

#### Removing the cable harness from the frame

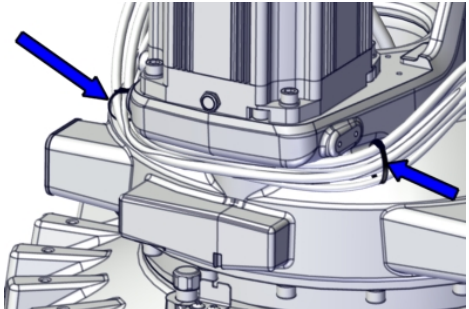
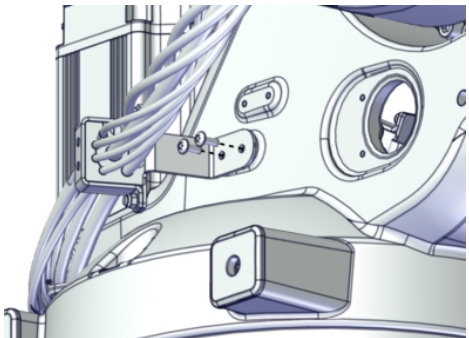
| Action   | Note  |
|--|---|
| <p>1 Remove the cable clamp from the electronic box by removing the screws and then remove the cabling from the box.</p> |  <p>xx2200001984</p> <p>A Torx pan head screw: M6x16 A4-80 (4 pcs)<br/>B Torx pan head screw: M6x16 8.8-A2F (4 pcs)</p> |

Continues on next page

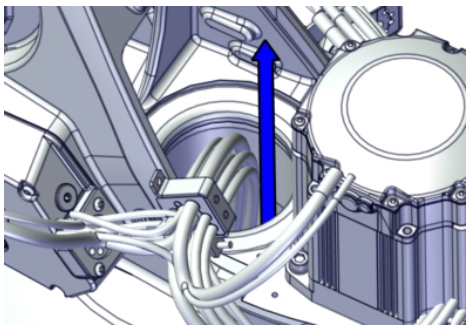


### 5.7.1 Removing the cable harness

*Continued*

|   | Action  | Note  |
|---|---|---|
| 2 | Cut the cable ties at the frame.                                | <br>xx2100002133  |
| 3 | Loosen the cable bracket from the frame by removing the screws. | <br>xx2000000442 |

#### Removing the cable harness from the base


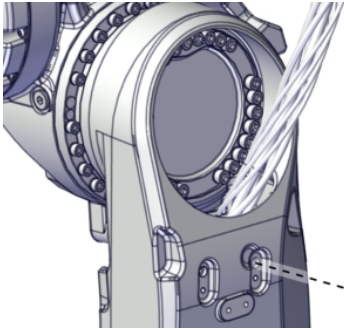
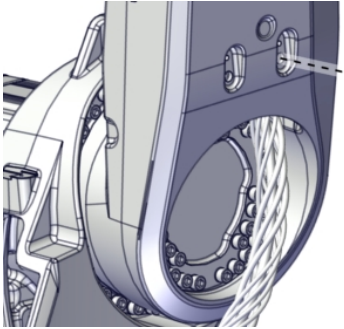
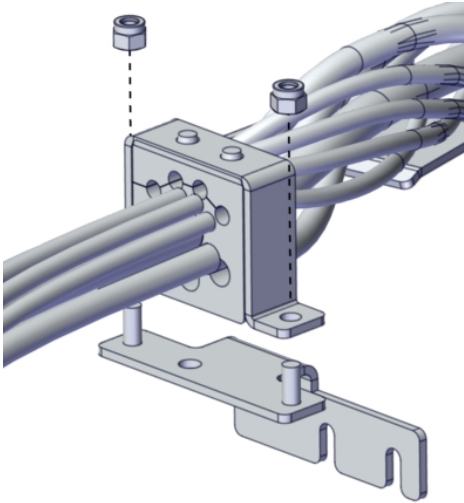
|   | Action   | Note   |
|---|--|--|
| 1 | If equipped with DressPack, pull out the DressPack cables through the protection tube. |  |
| 2 | Pull out the robot cable harness through the protection tube.                          | <br>xx2100001111 |
| 3 | Place the cable harness safely on the frame.   |  |

*Continues on next page*

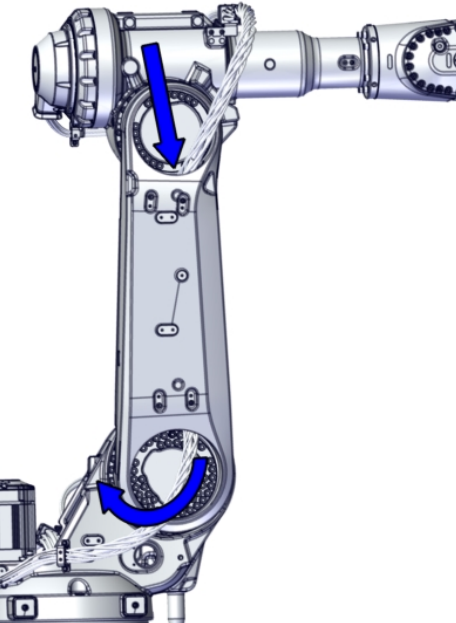
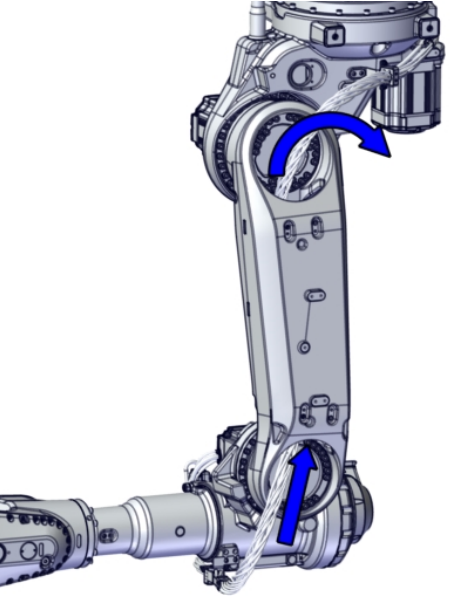
5 Repair

5.7.1 Removing the cable harness  
Continued

Removing the cable harness from the lower arm

| Action  | Note   |
|---|--|
| <div>1</div> <div>Loosen the cable clamps inside the lower arm by removing the attachment screws.</div> <div><div> <b>Note</b></div><div>The screws are reached from the outside of the lower arm.</div></div> | <div></div> <div>xx2100002182</div> <div></div> <div>xx2100002183</div> |
| <div>2</div> <div>Remove the arm house metal clamp from the harness.</div>  | <div></div> <div>xx2100002139</div>  |

Continues on next page

|   | Action   | Note  |
|---|--|---|
| 3 | Use caution and pull the cable harness out from the lower arm. | <p data-bbox="975 315 1209 342"><i>Floor-standing robot:</i></p>  <p data-bbox="975 1003 1082 1021">xx2100002144</p> <p data-bbox="975 1037 1252 1064"><i>Option Inverted (3317-1):</i></p>  <p data-bbox="975 1693 1082 1711">xx2100002140</p> |

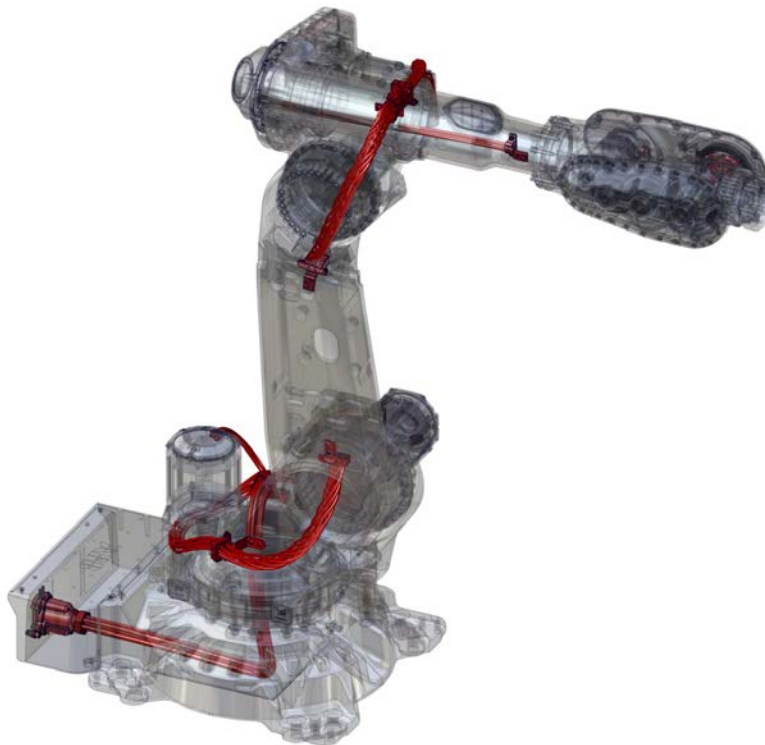
## 5 Repair

### 5.7.2 Refitting the cable harness

### 5.7.2 Refitting the cable harness

#### Location of the cable harness

The cable harness is located as shown in the figure.



xx2100000483

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part    | Article number | Note | Level |
|---------------|----------------|------|-------|
| Cable harness | 3HAC071396-001 |      | L2    |

#### Required service parts

| Consumable           | Article number | Note                                     |
|----------------------|----------------|--|
| Cable strap, outdoor | -              |  |
| Metal strap          | 3HAC033886-001 |  |
| Locking liquid       | -              | Loctite 2400 (or equivalent Loctite 243) |

*Continues on next page*

| Consumable                             | Article number  | Note   |
|--|---|--|
| Connection box cover FS180 with gasket | 3HAC072864-003 (Graphite White)<br>3HAC072864-005 (ABB Orange)<br>3HAC074336-004 (Graphite White, threaded connection)<br>3HAC074336-005 (ABB Orange, threaded connection)  | Replace if damaged.<br>A threaded connection is required for cooling fan option. |
| Connection box cover FS130 with gasket | 3HAC072863-003 (Graphite White)<br>3HAC072863-005 (ABB Orange)  | Replace if damaged.  |
| Connection box cover FS100 with gasket | 3HAC072862-003 (Graphite White)<br>3HAC072862-005 (ABB Orange)  | Replace if damaged.  |
| Tilt housing cover with gasket         | 3HAC073918-003 (Graphite White)<br>3HAC073918-004 (ABB Orange)  | Replace if damaged.  |
| Wrist cover                            | IRB 5710-110/2.3 / IRB 5710-90/2.3 LID:<br>3HAC073390-002 (Graphite White)<br>3HAC073390-004 (ABB Orange)<br>IRB 5710-90/2.7 / IRB 5710-70/2.7 LID:<br>3HAC070151-004 (Graphite White)<br>3HAC070151-006 (ABB Orange) | Replace if damaged.  |
| Gasket for cover, electronics          | 3HAC073671-001  | Replace if damaged.  |

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

#### Refitting the cable harness - base, frame and lower arm

These procedures describes how to refit the cable harness in base, frame and lower arm.

*Continues on next page*

# 5 Repair

## 5.7.2 Refitting the cable harness



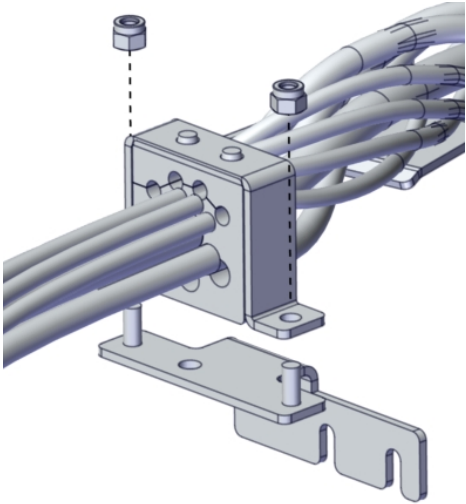
Continued

### Preparations before refitting the cable harness

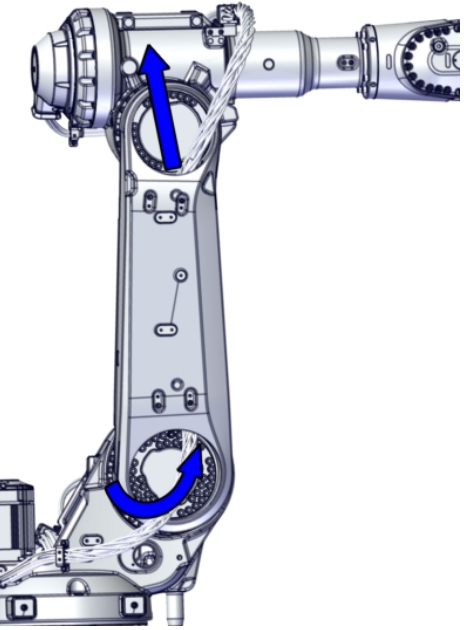
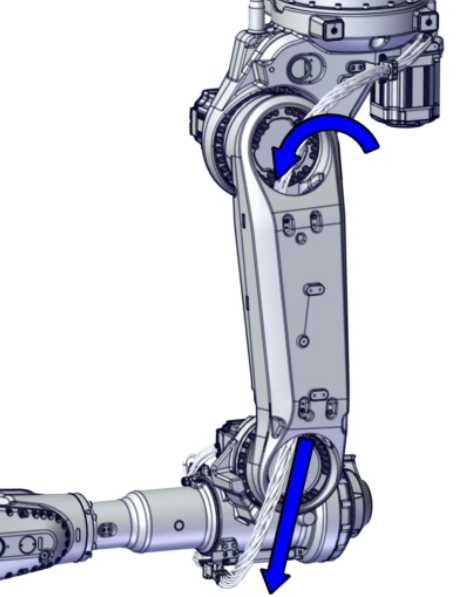
Use this procedure to understand the layout of the new cable harness spare part.

|   | Action  | Note |
|---|---|------|
| 1 | <i>Floor-standing robot:</i><br>Lay the new cable harness on the floor, and place the lower part around the manipulator to understand the layout. |      |

### Refitting the cable harness in the lower arm

|   | Action   | Note   |
|---|--|--|
| 1 |  <b>Tip</b><br><br>Use tape and tie the axis-5 and axis-6 connectors and carrier into a bundle (if not already done). This is done to facilitate the procedure and to avoid damaging the parts during the procedure.<br><br>This will also make it easier to run the cable harness through the inside of the robot. | <br><br>xx1300000668   |
| 2 | Remove the arm house metal clamp from the harness, if installed.   | <br><br>xx2100002139 |

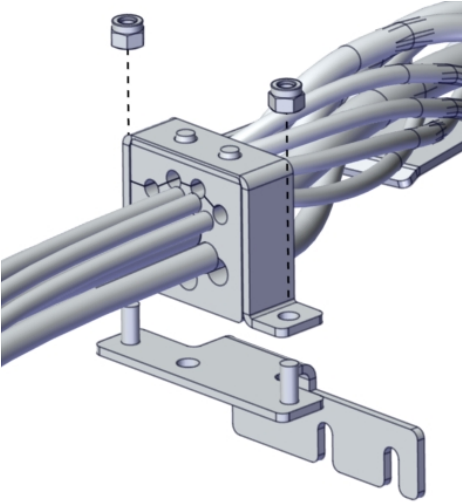
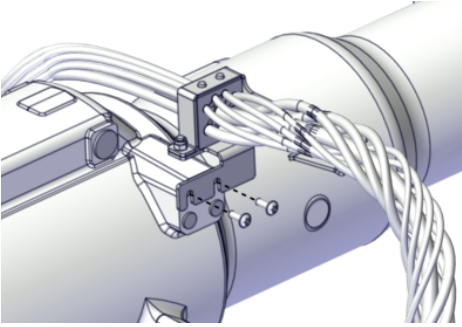
Continues on next page

|   | Action   | Note  |
|---|--|---|
| 3 | Run the upper part of the cable harness through the lower arm. | <p data-bbox="976 311 1209 344"><i>Floor-standing robot:</i></p>  <p data-bbox="976 1005 1082 1028">xx2100002184</p> <p data-bbox="976 1039 1251 1072"><i>Option Inverted (3317-1):</i></p>  <p data-bbox="976 1688 1082 1711">xx2100002185</p> |

Continues on next page



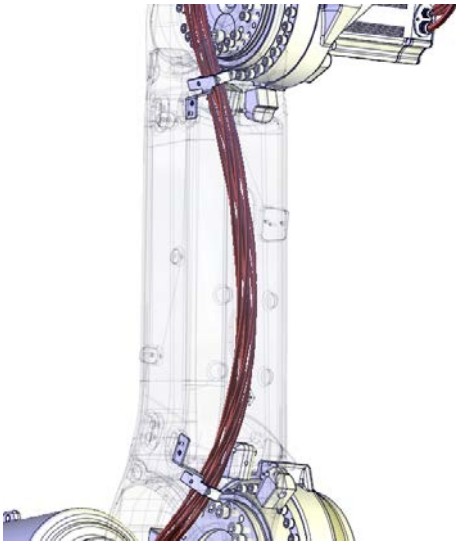
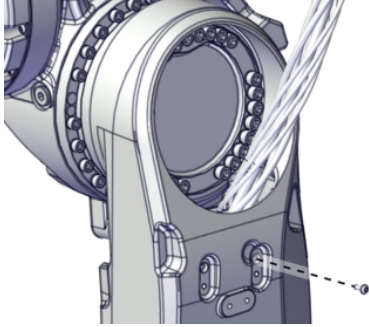
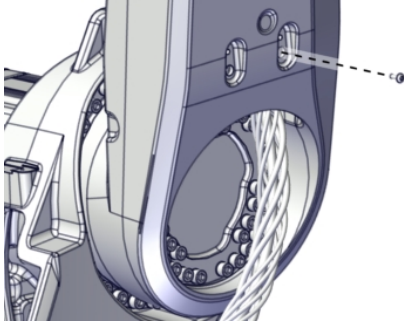
5 Repair

5.7.2 Refitting the cable harness  
Continued

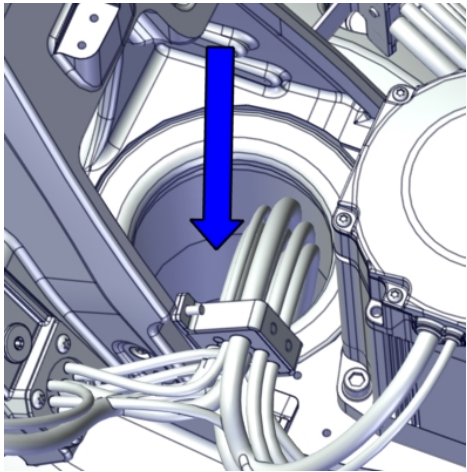
|   | Action  | Note   |
|---|---|--|
| 4 | Refit the arm house metal clamp to the harness. | <br><br>xx2100002139   |
| 5 | Refit the metal clamp to the arm house.         | Torx pan head screw: M6x16 A4-80<br>Tightening torque: 10 Nm.<br><br><br>xx2100001285 |

Continues on next page



|   | Action   | Note  |
|---|--|---|
| 6 | <p>Secure the cable clamps inside the lower arm with the attachment screws.</p> <p> <b>Note</b></p> <p>The screws are reached from the outside of the lower arm.</p> <p> <b>Note</b></p> <p>Check that the cabling will stay a little bit twisted between the cable clamps. Do not change the position of the brackets!</p>  <p>xx1300000595</p> | <p>Torx pan head screw: M6x16 A4-80<br/>Tightening torque: 6 Nm.</p>  <p>xx2100002182</p>  <p>xx2100002183</p> |

## Refitting the cable harness in the base

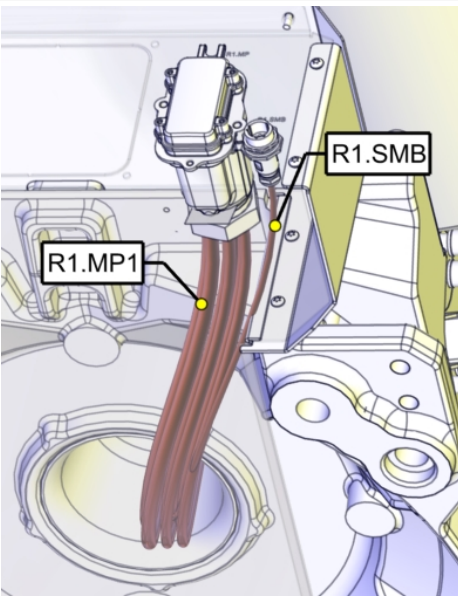
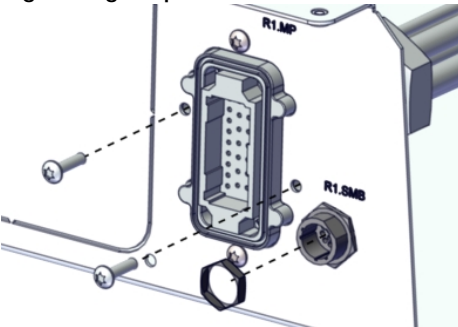
|   | Action                                      | Note   |
|---|---|--|
| 1 | Run the cables through the protection tube. |  <p>xx2100001216</p> |

Continues on next page

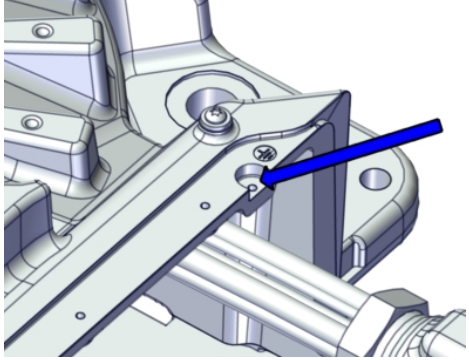
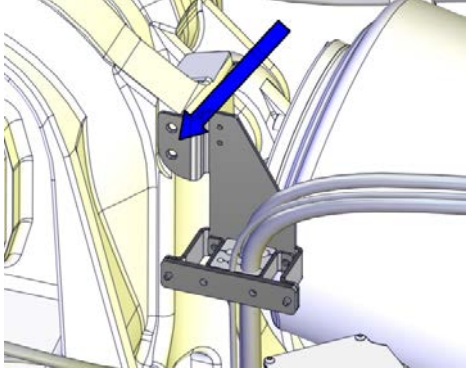
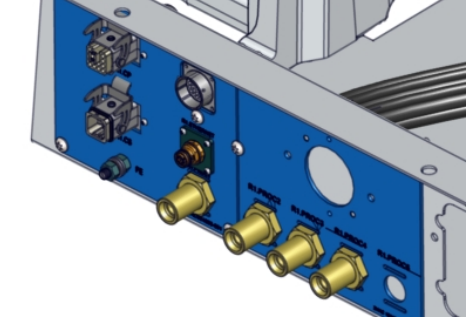
## 5 Repair

### 5.7.2 Refitting the cable harness

*Continued*

|   | Action  | Note  |
|---|---|---|
| 2 | <p>Run the cabling through the base.</p> <ul style="list-style-type: none"><li>• Make sure that the cables are not twisted. Each cable must be in line with its position on the base plate.</li><li>• Make sure that the R1.SMB cable will run on the correct side of the R1.MP1, see the figure.</li></ul> |  <p>xx1300000736</p>  |
| 3 | <p>Make sure that the markings on the cables are facing the base cover, when connected.</p>   |   |
| 4 | <p>Connect connectors R1.MP and R1.SMB.</p>   | <p>Screw dimension for R1.MP: M6x25 A4-80<br/>Tightening torque for R1.MP: 10 Nm.<br/>Tightening torque for R1.SMB: 10 Nm.</p>  <p>xx2100001109</p> |

*Continues on next page*

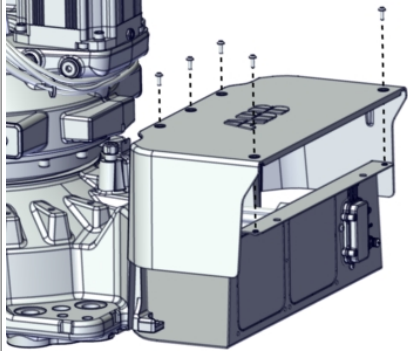
|   | Action  | Note  |
|---|---|---|
| 5 | Connect the earth cable.  | <p>Screw dimension: M6x16.<br/> Washer dimension: 6.4x17x3.<br/> Tightening torque: 10 Nm.</p>  <p>xx2100000982</p> |
| 6 | <p>If used, run the DressPack hoses through the protection tube in the base.</p> <p>Make sure that the hoses are running correctly and are not twisted!</p> |   |
| 7 | If used, fit the bracket that hold the DressPack to the frame.  |  <p>xx1400000078</p>   |
| 8 | If used, connect the DressPack cable package on the base plate.   |  <p>xx2300001093</p>  |

*Continues on next page*

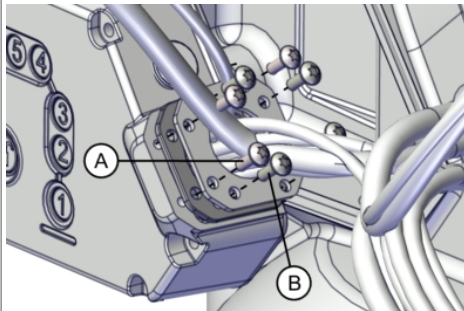
## 5 Repair

### 5.7.2 Refitting the cable harness


*Continued*

|   | Action                | Note   |
|---|-----------------------|--|
| 9 | Refit the base cover. | <p>Torx pan head screw: M6x16 Stainless steel A2-70 (5 pcs)<br/>Tightening torque: 10 Nm.</p>  <p>xx2100000981</p> |


### Refitting the SMB cabling

|   | Action  | Note   |
|---|---|--|
| 1 | Fit the SMB cabling to the electronic box and refit the cable clamp to the box with the screws. |  <p>xx2200001984</p> <p>A Torx pan head screw: M6x16 A4-80 (4 pcs)<br/>B Torx pan head screw: M6x16 8.8-A2F (4 pcs)</p> |


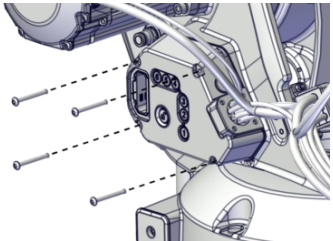
### Reconnecting the SMB and BU units

|   | Action   | Note  |
|---|--|---|
| 1 |  <p><b>ELECTROSTATIC DISCHARGE (ESD)</b></p> <p>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i>.</p> |   |
| 2 | Check the electronic box gasket. Replace if damaged.   | Gasket for cover, electronics: 3HAC073671-001 |

*Continues on next page*

|   | Action  | Note  |
|---|---|---|
| 3 | Connect all connectors to the SMB board: <ul style="list-style-type: none"> <li>• R1.SMB1-3, R1.SMB4-6 and R2.SMB</li> <li>• If cabling is used for 7th axis (option), refit the connector R1.SMB7</li> </ul> | <br>xx2100002162 |
| 4 | Connect the connectors R2.BU1 and R2.BU2 to the brake release board.  |   |

## Refitting the electronic box

|   | Action   | Note   |
|---|--|--|
| 1 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |  |
| 2 | Refit the electronic box with the attachment screws.   | Torx pan head screw: M6x60 (4 pcs)<br>Tightening torque: 10 Nm.<br><br>xx2100002134 |

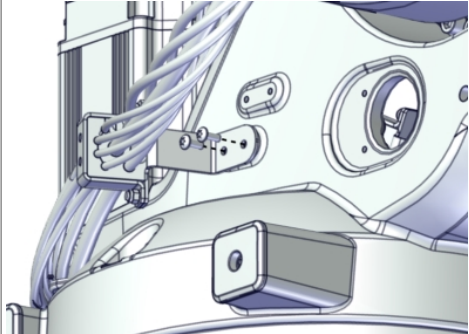
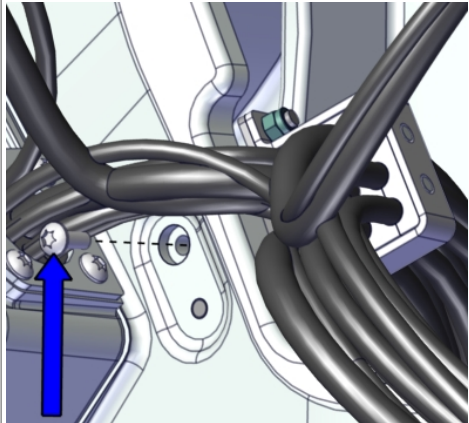
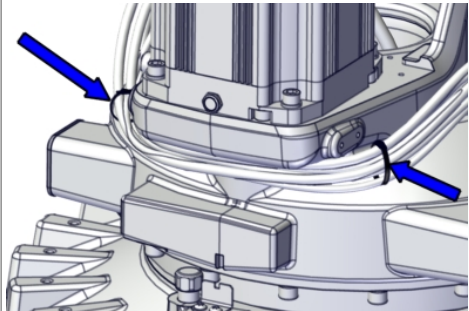
Continues on next page

## 5 Repair

### 5.7.2 Refitting the cable harness

*Continued*

#### Refitting the cable harness to the frame

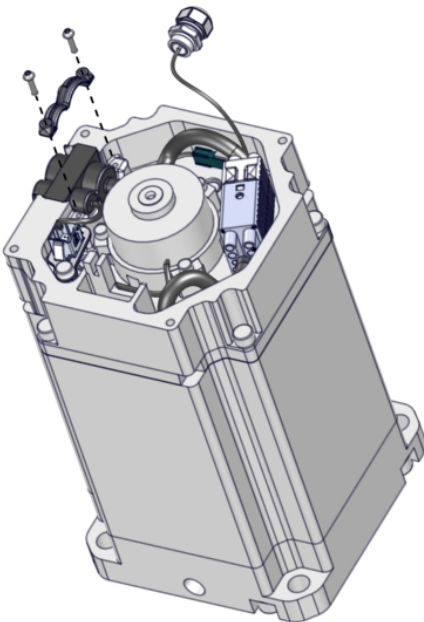


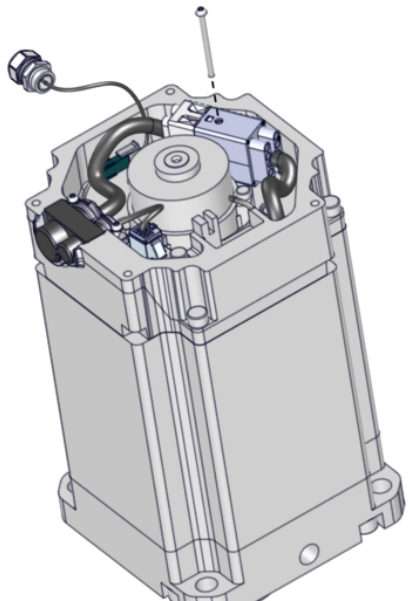
|   | Action   | Note  |
|---|--|---|
| 1 | Refit the cable brackets to the frame.           | <p>Torx pan head screw: M6x16 A4-80<br/>Tightening torque: 6 Nm.</p>  <p>xx2000000442</p>  <p>xx2100001108</p> |
| 2 | Secure the cabling to the frame with cable ties. | <p>Metal strap: 3HAC033886-001 (2 pcs)</p>  <p>xx2100002133</p>   |

#### Reconnecting the axis-1 and axis-2 motor cables

|   | Action  | Note |
|---|---|------|
| 1 | Put the motor cables in place in the opening. |      |

*Continues on next page*



|   | Action  | Note   |
|---|---|--|
| 2 | Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | Connect the motor cables.<br> <b>Note</b><br>Connect in accordance with the markings on the connectors.  |  |
| 4 | Fit a screw to the power connector.<br> <b>Note</b><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | <p>Tightening torque: 1 Nm</p>  <p>xx2200001736</p>                        |

Continues on next page

## 5 Repair

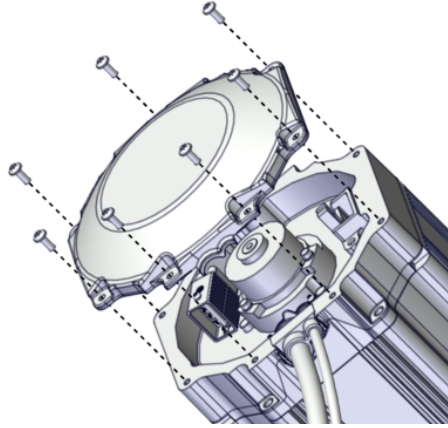
### 5.7.2 Refitting the cable harness

*Continued*

|   | Action  | Note   |
|---|---|--|
| 5 | Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <p>Axis-1 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-2 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-3 Connection box cover FS130 with gasket:<br/>3HAC072863-003 (Graphite White)<br/>3HAC072863-005 (ABB Orange)</p> <p>Axis-4 Connection box cover FS100 with gasket:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |

*Continues on next page*

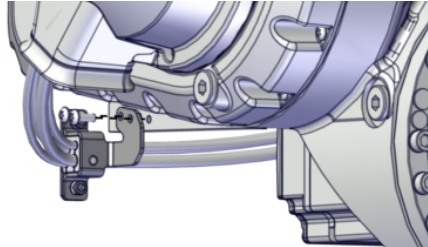




|   | Action   | Note   |
|---|--|--|
| 7 | Refit the motor cover with its attachment screws.<br>Use locking liquid. | Torx pan head screw: M5x12 Stainless steel A2-70<br>Locking liquid: Loctite 2400 (or equivalent Loctite 243)<br>Tightening torque: 6 Nm.<br><br>xx2100000596 |

### Refitting the cable harness - upper arm and wrist

These procedures describes how to refit the cable harness in upper arm and wrist.




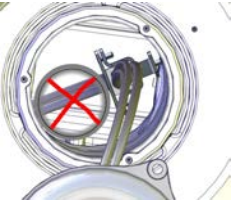
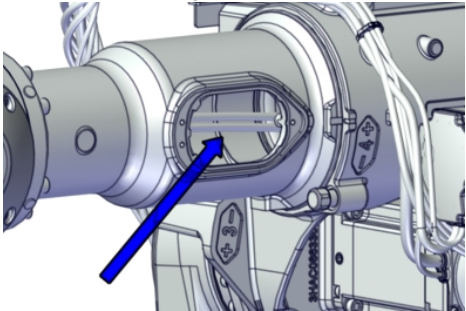
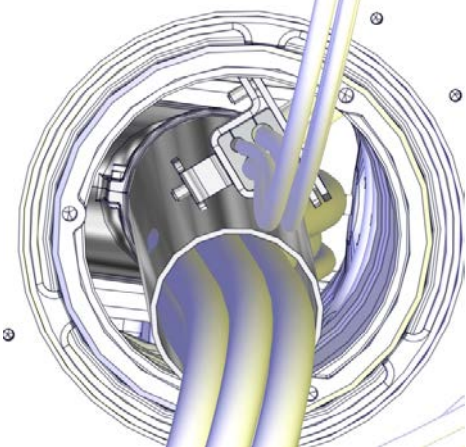
#### Refitting the cable harness to the upper arm

|   | Action   | Note   |
|---|--|--|
| 1 | Refit the metal clamp beneath the arm house.   | Torx pan head screw: M6x16 A4-80<br>Tightening torque: 10 Nm.<br><br>xx2100002154 |
| 2 |  <b>Tip</b><br>Use tape and tie the axis-5 and axis-6 connectors and carrier into a bundle (if not already done). This is done to facilitate the procedure and to avoid damaging the parts during the procedure.<br>This will also make it easier to run the cable harness through the inside of the robot. | <br>xx1300000668   |


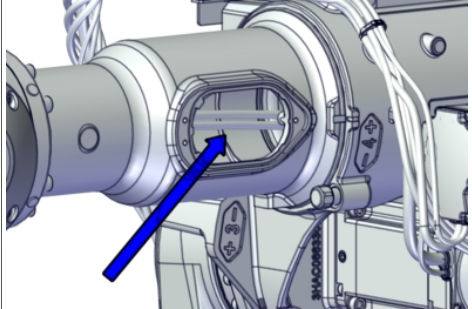
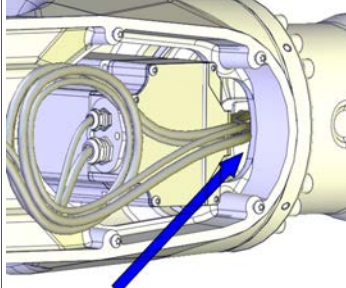
Continues on next page

5 Repair

5.7.2 Refitting the cable harness  
Continued

| Action   | Note  |
|--|---|
| <div>3</div> <div>Run the cable harness through the cable guide and then into and through the upper arm tube.</div> <div> <b>Tip</b></div> <div>This step is best performed by two persons working together:</div> <div><ul style="list-style-type: none"><li>• Person 1: Put one hand inside the side hole of the arm tube and take a hold of the cable harness.</li><li>• Person 2: Take a hold on the cable harness at the back of the robot.</li><li>• Together: Use caution and move the cable harness into the arm tube.</li></ul></div> <div> <b>Note</b></div> <div>The cable harness is best placed at the upper right hand side of the DressPack tube, if used, through the arm tube.<br/>Do not run the cable harness into the DressPack tube!</div> <div> <b>Note</b></div> <div>Do not run the cable harness into the DressPack tube, if one is fitted!</div> <div></div> <div>xx1300000820</div> | <div>Person 1, working at the side hole:</div> <div></div> <div>xx2000000416</div> <div>Person 2, working at the back:</div> <div></div> <div>xx1400000356</div> |

Continues on next page


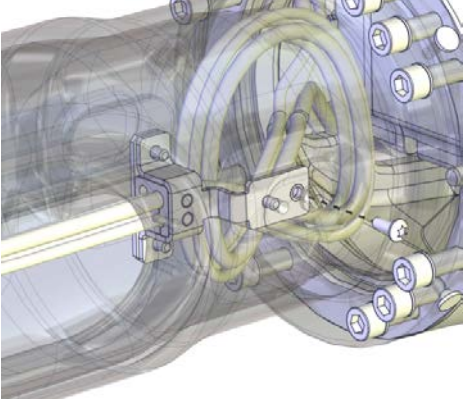
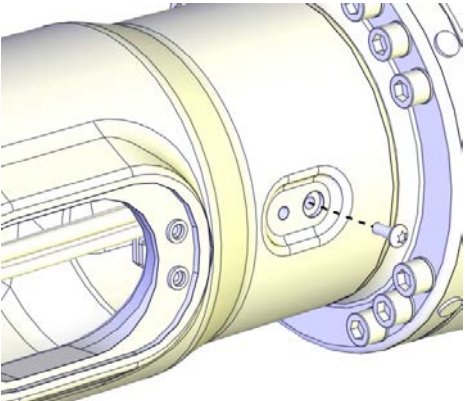

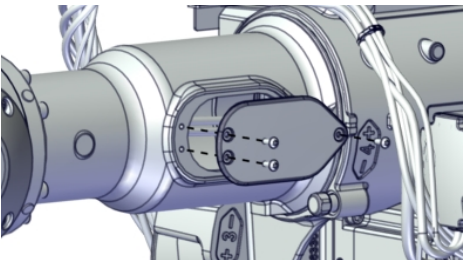
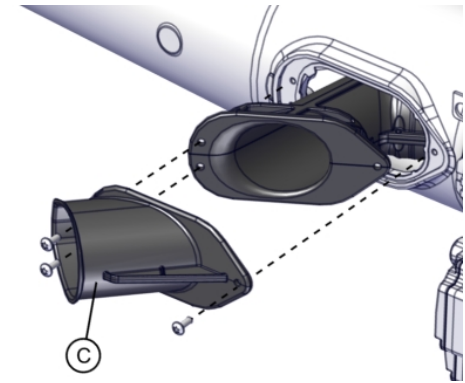
|   | Action   | Note  |
|---|--|---|
| 4 | <p data-bbox="496 311 948 367">Use caution and push the cable harness into the wrist.</p> <div data-bbox="496 383 628 456"> <b>Tip</b></div> <p data-bbox="496 472 963 528">This step is best performed by two persons working together:</p> <ul data-bbox="533 535 948 759" style="list-style-type: none"><li>• Person 1: Put one hand inside the side cover hole and take a hold of the cable harness.</li><li>• Person 2: Take a hold of the cable harness from inside the wrist.</li><li>• Together: Move the cable harness past the axis-5 motor and into the wrist.</li></ul> | <p data-bbox="968 311 1362 344">Person 1, working at the side hole:</p> <div data-bbox="968 344 1442 651"></div> <p data-bbox="968 663 1075 685">xx2000000416</p> <p data-bbox="968 696 1315 730">Person 2, working at the wrist:</p> <div data-bbox="968 730 1315 1016"></div> <p data-bbox="968 1028 1075 1050">xx1300000746</p> |

Continues on next page

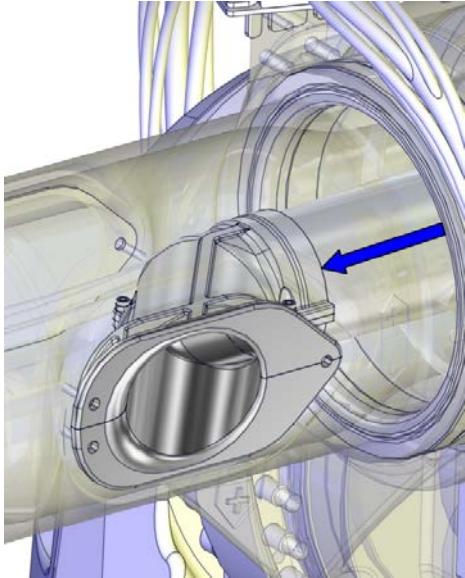

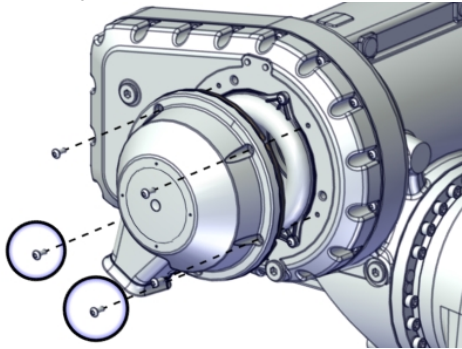
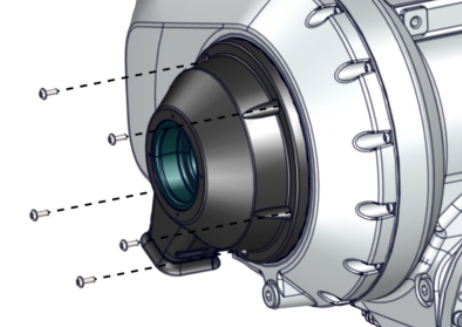
## 5 Repair

### 5.7.2 Refitting the cable harness

Continued

|   | Action   | Note   |
|---|--|--|
| 5 | <p>Refit the metal clamp axis-4, inside the arm tube.</p> <p> <b>Note</b></p> <p>The screw is reached from outside the upper arm.</p>   | <p>Torx pan head screw: M6x16 A4-80<br/>Tightening torque: 10 Nm.</p>  <p>xx1700000340</p>  <p>xx1700000339</p> |
| 6 | <p>Refit the side cover (if no DressPack is used).</p> <p> <b>Note</b></p> <p><i>Foundry Plus:</i></p> <ul style="list-style-type: none"> <li>• Make sure the gasket is fitted correctly on the side cover</li> <li>• Use attachment screws made of stainless steel to fit the side cover.</li> </ul> |  <p>xx2000000420</p>   |
| 7 | <p>With DressPack:</p> <p>Refit the insert that guides the DressPack cable package through the hole in the upper arm.</p> <p>(Cable guard (C) is available for Foundry cable guard.)</p>   |  <p>xx2100002677</p>   |

Continues on next page

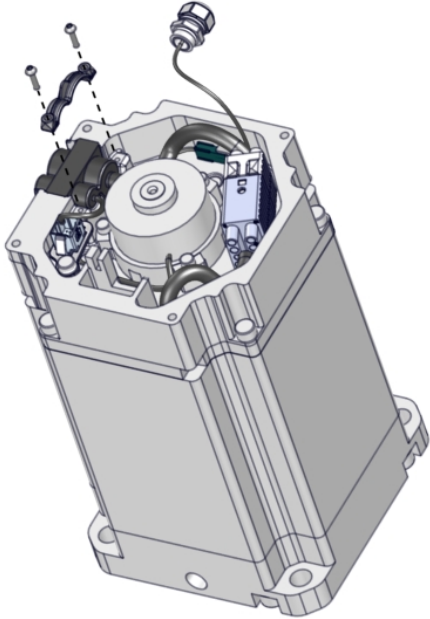

|   | Action  | Note  |
|---|---|---|
| 8 | <p>With DressPack:<br/>Refit the DressPack tube into the insert.</p>  |  <p>xx1400000092</p>  |
| 9 | <p><i>DressPack</i> or <i>Foundry Plus</i>:<br/>Refit the back cover with the attachment screws.<br/>Tighten the two screws closest to the outlet first (shown in figure), to avoid deformation.</p> <p> <b>Note</b></p> <p>With <i>DressPack</i>:<br/>Make sure that the tube is fitted correctly in both ends, when fitting the cover.</p> | <p>Torx pan head screw: M6x16 Stainless steel A2-70<br/>Tightening torque: 10 Nm.</p> <p><i>Foundry Plus</i></p>  <p>xx2100002636</p> <p><i>DressPack</i><br/>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p>  <p>xx2300001040</p> |

*Continues on next page*

5 Repair


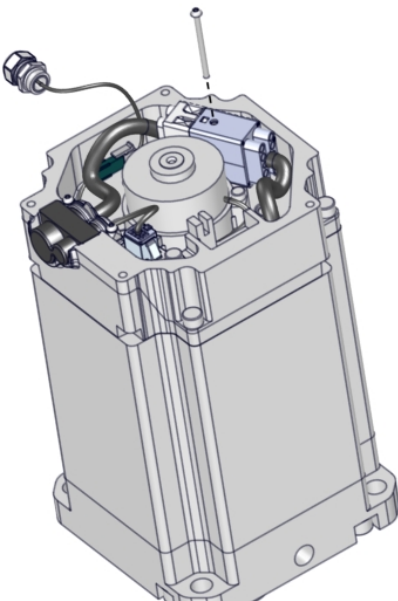
5.7.2 Refitting the cable harness  
Continued

Reconnecting the axis-3 and axis-4 motor cables

|   | Action  | Note  |
|---|---|---|
| 1 | Put the motor cables in place in the opening.   |   |
| 2 | Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | <p>Connect the motor cables.</p> <div> <b>Note</b></div> <p>Connect in accordance with the markings on the connectors.</p> |   |

Continues on next page



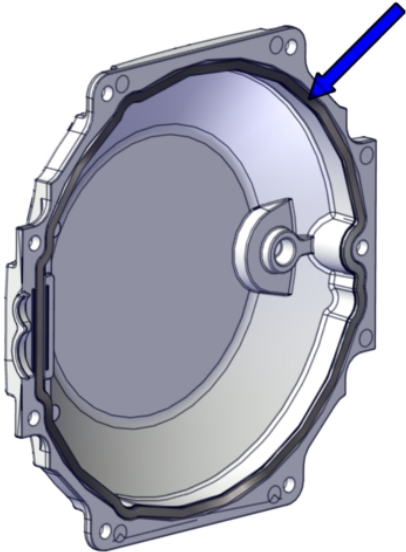

|   | Action   | Note  |
|---|--|---|
| 4 | <p data-bbox="499 309 890 342">Fit a screw to the power connector.</p> <div data-bbox="499 353 560 416"></div> <p data-bbox="587 371 646 400">Note</p> <p data-bbox="499 427 962 669">The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p data-bbox="975 309 1244 342">Tightening torque: 1 Nm</p> <div data-bbox="1002 360 1401 958"></div> <p data-bbox="975 965 1082 983">xx2200001736</p> |

Continues on next page

## 5 Repair

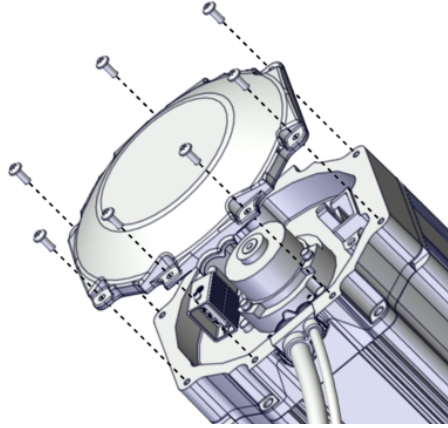
### 5.7.2 Refitting the cable harness

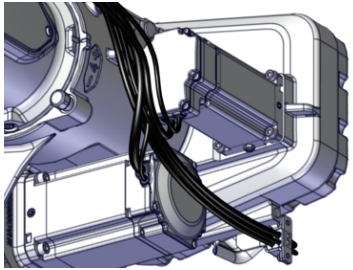
*Continued*

|   | Action   | Note  |
|---|--|---|
| 5 | <p>Inspect the gasket.<br/>Replace the complete cover if the gasket is damaged.</p>  | <p>Axis-1 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)<br/>Axis-2 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)<br/>Axis-3 Connection box cover FS130 with gasket:<br/>3HAC072863-003 (Graphite White)<br/>3HAC072863-005 (ABB Orange)<br/>Axis-4 Connection box cover FS100 with gasket:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 | <p> <b>CAUTION</b></p> <p>When fitting the motor cover, make sure that none of the cables inside will be damaged.</p> |   |

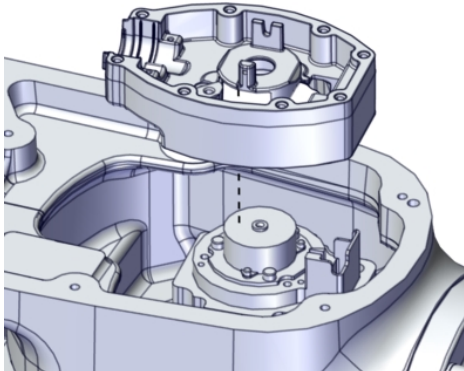
*Continues on next page*



|   | Action   | Note   |
|---|--|--|
| 7 | Refit the motor cover with its attachment screws.<br>Use locking liquid. | Torx pan head screw: M5x12 Stainless steel A2-70<br>Locking liquid: Loctite 2400 (or equivalent Loctite 243)<br>Tightening torque: 6 Nm.<br><br>xx2100000596 |

|   | Action   | Note  |
|---|--|---|
| 1 | Verify that the cables are connected and routed correctly to each motor according to the figure and according to the markings on the connectors. | <br>xx2200001116 |

#### Connecting the axis-5 motor cables

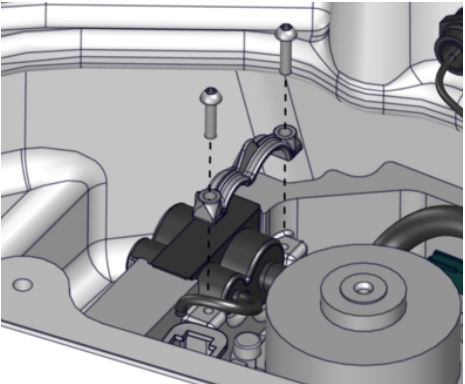

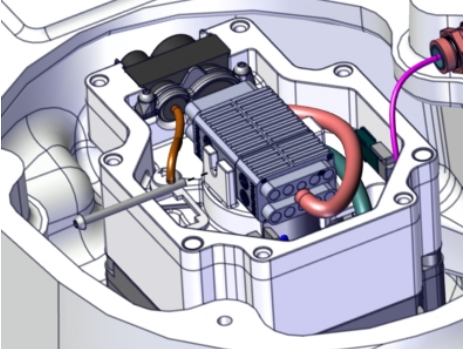
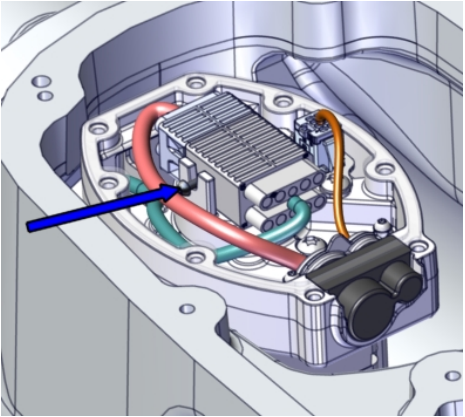
|   | Action  | Note   |
|---|---|--|
| 1 | IRB 5710-90/2.7, IRB 5710-70/2.7 LID<br>Refit the connection box with the screws. | <br>xx2100002316 |
| 2 | Put the motor cables in place in the opening.                                     |  |

*Continues on next page*

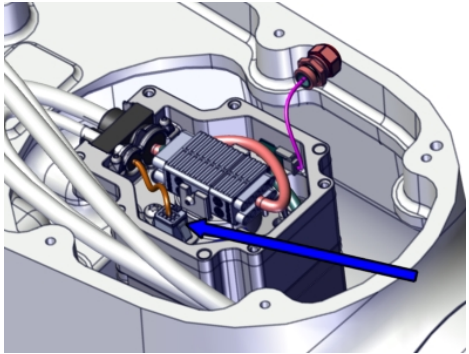
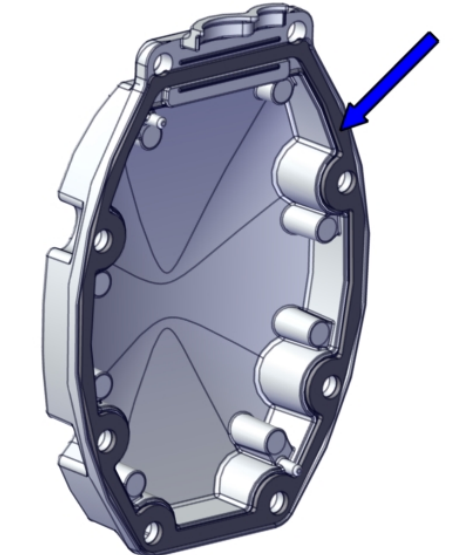

## 5 Repair

### 5.7.2 Refitting the cable harness

Continued

|   | Action   | Note  |
|---|--|---|
| 3 | Refit the cable bracket with the screws.   | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001735</p>  |
| 4 | <p>Connect the power cable connector and secure with a screw.</p> <p>Connect in accordance with the markings on the connectors.</p> <p> <b>Note</b></p> <p>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p>Tightening torque: 1 Nm<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2200001978</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2200001979</p> |

Continues on next page

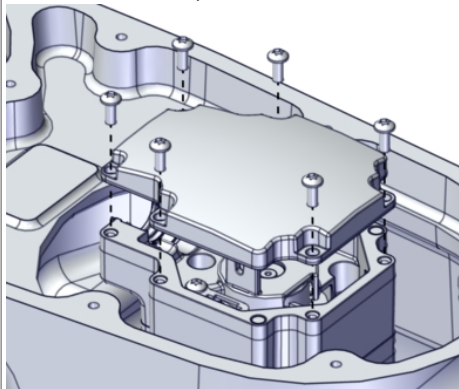
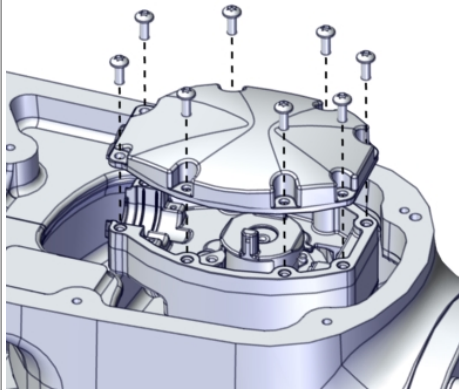
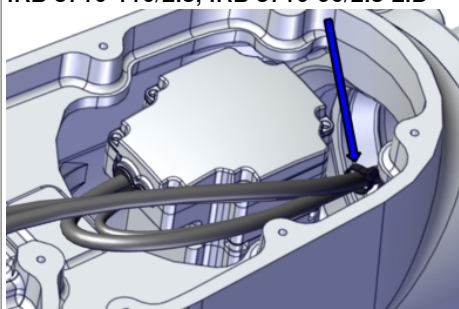
|   | Action  | Note  |
|---|---|---|
| 5 | Connect the signal cable connector.<br>Connect in accordance with the markings on the connectors.   | <br>xx2200001977  |
| 6 | Inspect the gasket.<br>Replace if damaged.  | Connection box cover with gasket:<br><b>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</b><br>3HAC072862-003 (Graphite White)<br>3HAC072862-005 (ABB Orange)<br><b>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</b><br>3HAC072861-003 (Graphite White)<br>3HAC072861-004 (ABB Orange)<br><br>xx2100002317 |
| 7 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |   |

Continues on next page

## 5 Repair



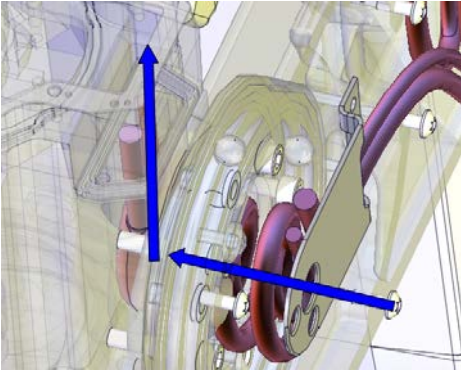
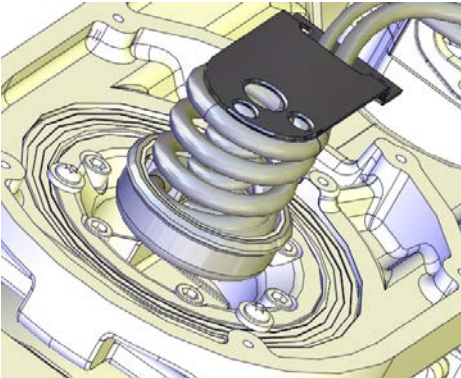


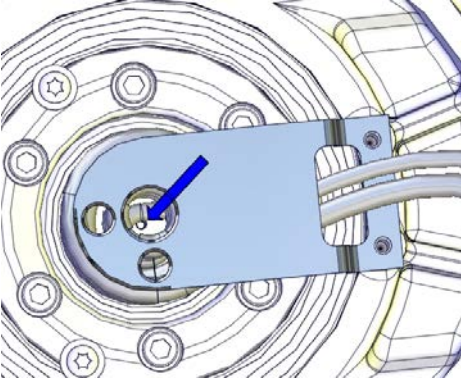
### 5.7.2 Refitting the cable harness

*Continued*

|   | Action   | Note  |
|---|--|---|
| 8 | <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID</p> <p>Refit the motor cover with its attachment screws.</p> <p>Use locking liquid.</p> | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p> <p>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p> <p>Tightening torque: 6 Nm.</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2100002494</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2100002315</p> |
| 9 | <p>Secure the cabling with a cable strap.</p>  | <p>Cable strap, outdoor: -</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID</p>  <p>xx2100002630</p>  |

*Continues on next page*

## Inserting the axis-6 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>Note</b><br>Axis 5 must be in position +90° (or as close as possible) for a correct installation of the cable harness in the wrist. If not, connect the brake release tool to the axis-5 motor connector, release the brakes and move axis 5 manually to +90°.   |  |
| 2 | Push the cable harness into the wrist recess and up into the axis-6 motor.<br><br> <b>Tip</b><br>Moisten the rubber carrier slightly with water or grease around the contact surface, to make it easier to fit into place.   | <br>xx1300000667  |
| 3 | Push the carrier carefully into position.   | <br>xx1300001113 |
| 4 | Secure the carrier with the M4x10 screw.<br><br> <b>Note</b><br>The screw is located at the bottom of the carrier.<br><br> <b>Tip</b><br>The attachment screw securing the carrier may be difficult to fit. Make sure the carrier is level and completely pressed against the bottom. | <br>xx1300000485 |

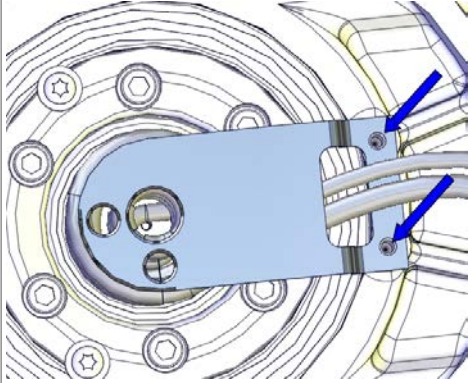
Continues on next page




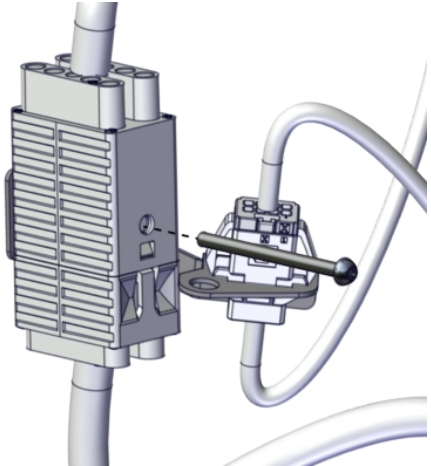
## 5 Repair

### 5.7.2 Refitting the cable harness

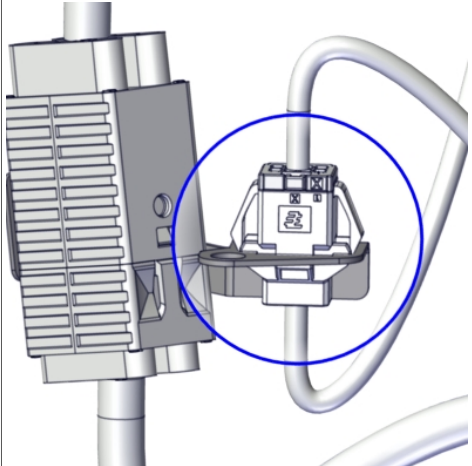

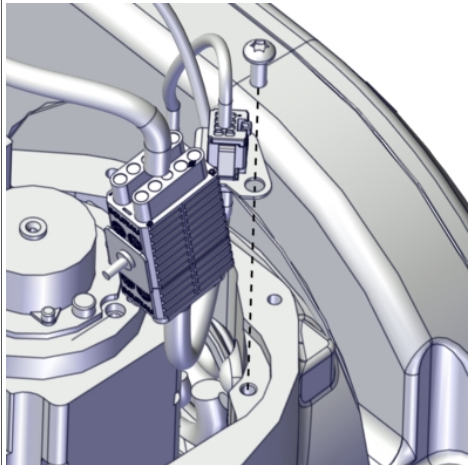


*Continued*

|   | Action   | Note   |
|---|--|--|
| 5 | Secure the cable bracket with its attachment screws. | <p>Torx pan head screw: M6x16 A4-80</p> <p>Tightening torque: standard torque 10 Nm (<a href="#">Tightening torque on page 661</a>)..</p>  <p>xx1300000484</p> |

#### Connecting the axis-6 motor cables

|   | Action  | Note  |
|---|---|---|
| 1 | Connect the motor cables.<br>Connect in accordance with the markings on the connectors.   |   |
| 2 | Position the power connector to the bracket with a screw.<br><br> <b>Note</b><br><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | <p>Tightening torque: 1 Nm</p>  <p>xx2200001919</p> |

*Continues on next page*

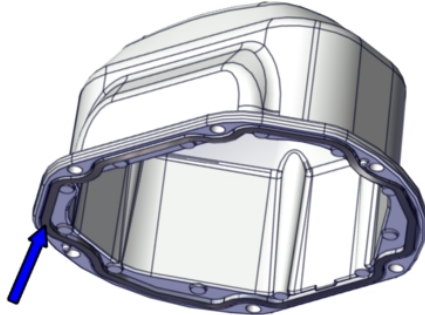

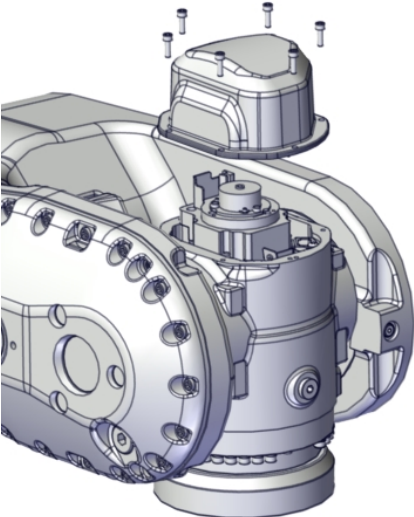
|   | Action  | Note  |
|---|---|---|
| 3 | Snap the signal connectors to each other in the bracket.  | <br>xx2200001920  |
| 4 | Refit the connector bracket assembly to the motor.<br><br> <b>CAUTION</b><br><br>The cabling is sensitive to mechanical damage. Handle it with care to avoid damage to the cabling or the connector, avoid any kind of tilt or skew. | Torx pan head screw: M5x12 Stainless steel A2-70<br><br><br>xx2000000375 |
| 5 | Verify correct cable layout as shown in the figure.<br><br> <b>CAUTION</b><br><br>Route the signal cabling correctly to avoid cable damage.  | <br>xx2100001293  |

Continues on next page

## 5 Repair

### 5.7.2 Refitting the cable harness

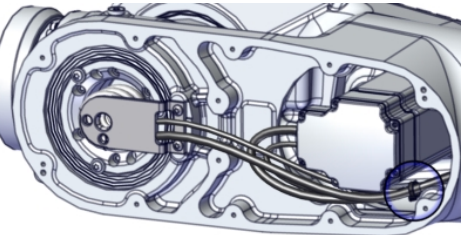
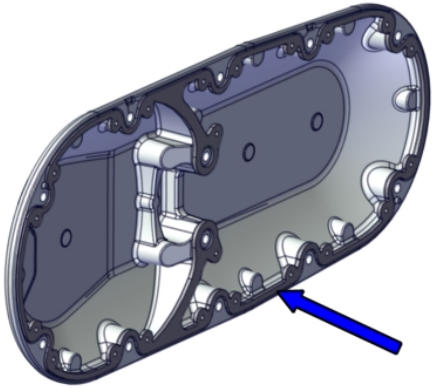
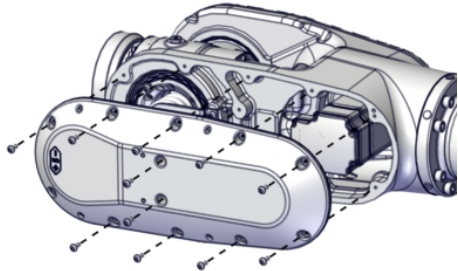
*Continued*

|   | Action  | Note   |
|---|---|--|
| 6 | Inspect the gasket.<br>Replace if damaged.  | <p>Gasket, tilt housing cover: 3HAC071520-001</p>  <p>xx2100001287</p>   |
| 7 |  <b>CAUTION</b><br><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |
| 8 | Refit the motor cover.  | <p>Hex socket head cap screw, M5x16 12.9<br/>Lafre 2C2B/FC6.9, 6 pcs<br/>Tightening torque: 4 Nm.</p>  <p>xx2000000376</p> |

*Continues on next page*



## Refitting the wrist cover

|   | Action  | Note  |
|---|---|---|
| 1 | Make sure that the cable harness is routed and secured as shown in the figure.  | <br>xx2100002627  |
| 2 | <b>Foundry Plus:</b><br>Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <b>Wrist cover:</b><br><b>IRB 5710-110/2.3 / IRB 5710-90/2.3 LID:</b><br>3HAC073390-002 (Graphite White)<br>3HAC073390-004 (ABB Orange)<br><b>IRB 5710-90/2.7 / IRB 5710-70/2.7 LID:</b><br>3HAC070151-004 (Graphite White)<br>3HAC070151-006 (ABB Orange)<br><br>xx2100001407 |
| 3 | Refit the wrist cover and secure with screws.<br><b>Foundry Plus:</b><br>Fit all the screws first, then torque tighten them twice to achieve correct torque (due to compression from the gasket). | <b>Torx pan head screw: M6x16 Stainless steel A2-70</b><br><b>Tightening torque: 10 Nm.</b><br><br>xx2000000373   |

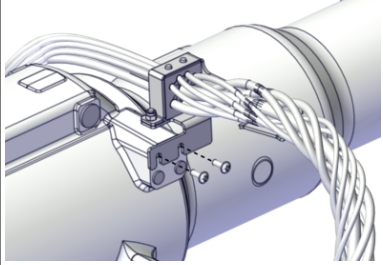
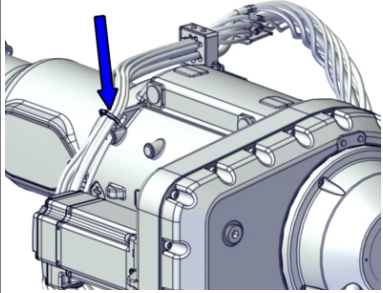

Continues on next page

## 5 Repair

### 5.7.2 Refitting the cable harness

*Continued*

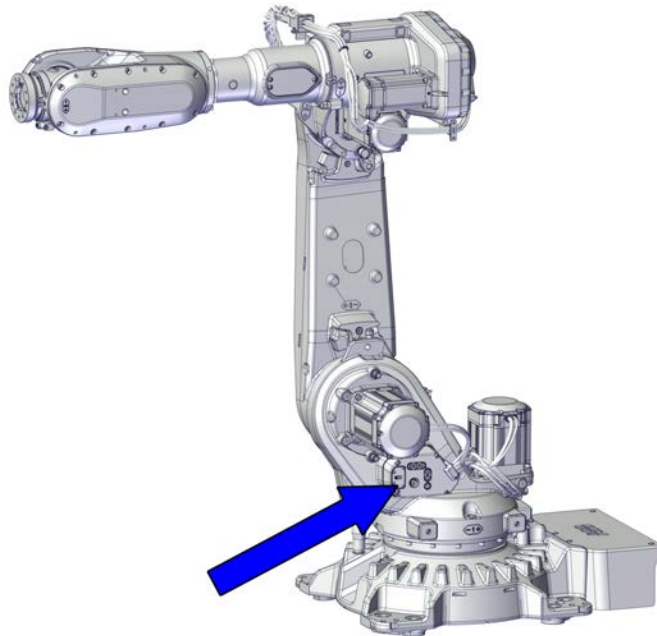
#### Concluding procedure

|   | Action   | Note   |
|---|--|--|
|   | If not already fitted, refit the metal clamp to the arm house.   | <p>Torx pan head screw: M6x16 A4-80</p> <p>Tightening torque: 10 Nm.</p>  <p>xx2100001285</p> |
| 1 | Secure the cabling to the arm house eyelet with a new cable strap.   | <p>Metal strap: 3HAC033886-001 (1 pcs)</p>  <p>xx2000000415</p>                              |
| 2 | If used, refit the DressPack cable package on the wrist.   | See product manual for the DressPack.  |
| 3 | Make an overall inspection of the installed cable harness.   | See <a href="#">Inspecting the cable harness on page 116</a> .   |
| 4 | Update the revolution counters.  | See <a href="#">Updating revolution counters on page 628</a> .   |
| 5 |  <b>DANGER</b><br><p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |  |

### 5.7.3 Replacing the brake release unit

#### Location of the brake release unit

The brake release unit is located as shown in the figure.



xx2000000232

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part         | Article number | Note | Level |
|--------------------|----------------|------|-------|
| Brake release unit | 3HAC073540-001 |      | L2    |

#### Required service parts

| Consumable                    | Article number | Note                |
|-------------------------------|----------------|---------------------|
| Gasket for cover, electronics | 3HAC073671-001 | Replace if damaged. |

#### Required tools and equipment

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

#### Removing the brake release unit

Use this procedure to remove the brake release unit.

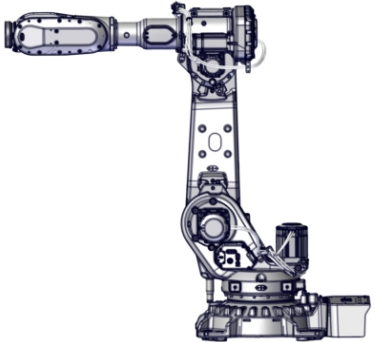

*Continues on next page*

## 5 Repair



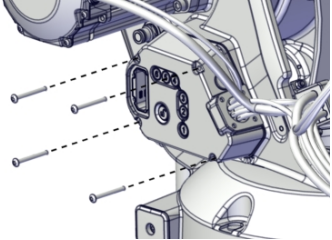
### 5.7.3 Replacing the brake release unit

*Continued*


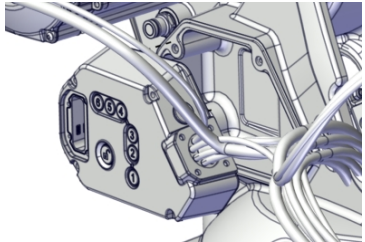
#### Preparations before removing the brake release unit

|   | Action  | Note  |
|---|---|---|
| 1 | Jog the robot to calibration position, if possible. This position facilitates updating of the revolution counters afterwards.   | <br>xx2300000252 |
| 2 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |   |



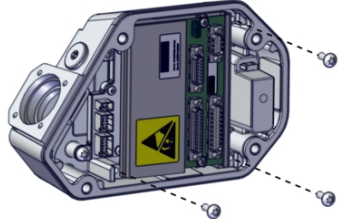
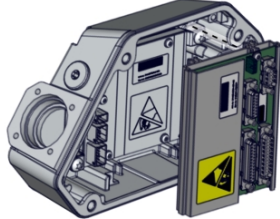
#### Removing the electronic box

|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |   |
| 2 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |   |
| 3 | Remove the electronic box screws.  | <br>xx2100002134 |


*Continues on next page*

| Action   | Note  |
|--|---|
| <p>4 Remove the electronic box, including all internal equipment.</p> <p> <b>CAUTION</b></p> <p>Clean cover from metal residues before opening.<br/>Metal residues can cause shortage on the boards which can result in hazardous failures.</p> |  <p>xx2100002135</p> |

## Disconnecting and removing the SMB unit

| Action   | Note  |
|--|---|
| <p>1  <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p>   |   |
| <p>2  <b>ELECTROSTATIC DISCHARGE (ESD)</b></p> <p>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i>.</p> |   |
| 3 Disconnect all connectors from the SMB board.  |   |
| 4 Remove the screws that secure the SMB unit.  |  <p>xx2100002159</p> |
| 5 Snap loose and remove the SMB unit.<br>Put the unit in an ESD bag.   |  <p>xx2100002160</p> |

## Disconnecting and removing the brake release unit


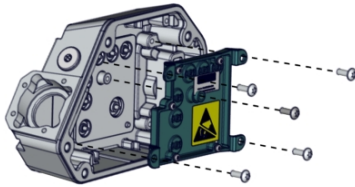
| Action   | Note |
|--|------|
| <p>1  <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p> |      |

Continues on next page

## 5 Repair

### 5.7.3 Replacing the brake release unit


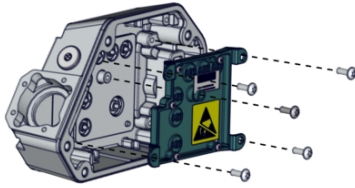
Continued

|   | Action   | Note  |
|---|--|---|
| 2 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |   |
| 3 | Disconnect the connectors R2.BU1 and R2.BU2 from the brake release board.  |   |
| 4 | Remove the brake release unit by removing the screws.<br>Put the unit in an ESD bag.   | <br>xx2100002163 |


### Refitting the brake release unit

Use this procedure to refit the brake release unit.


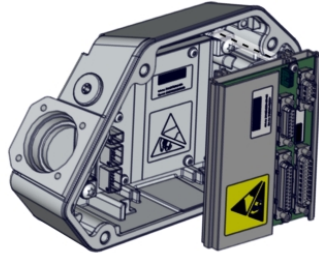
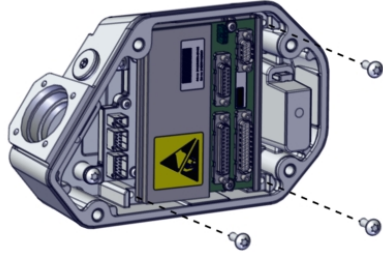

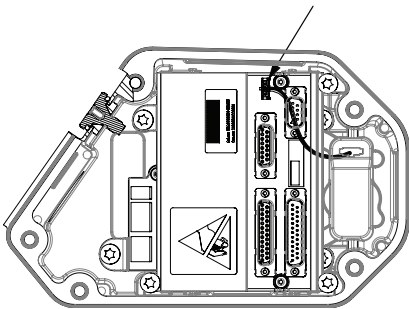
### Refitting the brake release unit

|   | Action   | Note   |
|---|--|--|
| 1 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |  |
| 2 | Fit brake release unit into the electronic box and secure with the screws.   | Torx pan head tapping screw:<br>Steel-Fe/Zn 8c M6x16<br>Tightening torque: 10 Nm.<br><br><br>xx2100002163 |

### Refitting and connecting the SMB unit

|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |      |

Continues on next page


|   | Action  | Note  |
|---|---|---|
| 2 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <a href="#">The unit is sensitive to ESD on page 48</a> .                     |   |
| 3 | Check the electronic box gasket.<br>Replace if damaged.   | Gasket for cover, electronics:<br>3HAC073671-001  |
| 4 | Fit the SMB unit into the electronic box.   | <br>xx2100002160   |
| 5 | Secure the SMB unit with the attachment screws.   | Torx pan head tapping screw: Steel-Fe/Zn 8c M6x16<br>Tightening torque: 10 Nm.<br><br>xx2100002159 |
| 6 | Connect the battery cable to the SMB unit.<br>Make sure the lock snaps into place during refitting.<br> <b>Note</b><br>Make sure that the connector is assembled in the correct direction according to its keying. | <br>xx2100002161   |

Continues on next page


## 5 Repair

### 5.7.3 Replacing the brake release unit


*Continued*

| Action |  | Note   |
|--------|--|--|
| 7      | Connect all connectors to the SMB board: <ul style="list-style-type: none"><li>• R1.SMB1-3, R1.SMB4-6 and R2.SMB</li><li>• If cabling is used for 7th axis (option), refit the connector R1.SMB7</li></ul> | <br>xx2100002162 |

#### Reconnecting the brake release unit

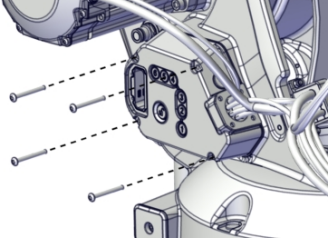
| Action |   | Note   |
|--------|---|--|
| 1      |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |  |
| 2      | Check the electronic box gasket.<br>Replace if damaged.   | Gasket for cover, electronics:<br>3HAC073671-001 |
| 3      | Reconnect the connectors R2.BU1 and R2.BU2 to the brake release board.  |  |

#### Refitting the electronic box


| Action |  | Note |
|--------|--|------|
| 1      |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |      |

*Continues on next page*



|   | Action   | Note  |
|---|--|---|
| 2 | Refit the electronic box with the attachment screws. | <p>Torx pan head screw: M6x60 (4 pcs)<br/>Tightening torque: 10 Nm.</p>  <p>xx2100002134</p> |

#### Concluding procedures

|   | Action   | Note   |
|---|--|--|
| 1 | Update the revolution counters if the battery has been disconnected.   | See <a href="#">Updating revolution counters on page 628</a> . |
| 2 |  <b>DANGER</b><br><p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |  |

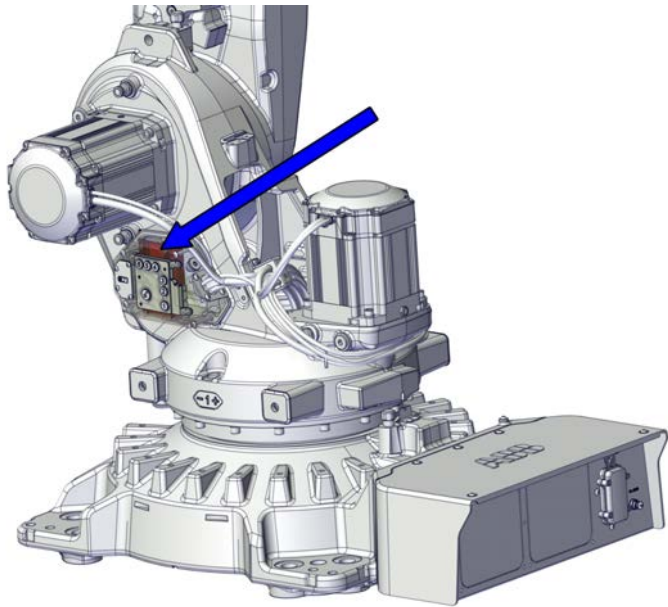
## 5 Repair

### 5.7.4 Replacing the SMB unit

### 5.7.4 Replacing the SMB unit

#### Location of the SMB unit

The SMB unit is located as shown in the figure.



xx2100002158

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part              | Article number | Note | Level |
|-------------------------|----------------|------|-------|
| Serial measurement unit | 3HAC043904-001 |      | L2    |

#### Required service parts

| Consumable                    | Article number | Note                |
|-------------------------------|----------------|---------------------|
| Gasket for cover, electronics | 3HAC073671-001 | Replace if damaged. |

#### Required tools and equipment

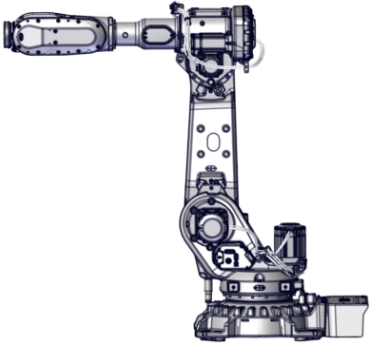

| Equipment        | Article number | Note   |
|------------------|----------------|--|
| Standard toolkit | -              | Content is defined in section <a href="#">Standard toolkit on page 665</a> . |

#### Removing the SMB unit



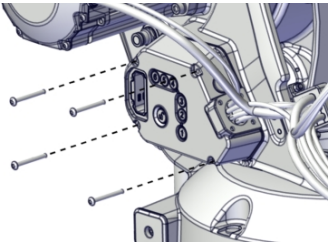
Use these procedures to disconnect and remove the SMB unit.

*Continues on next page*

## Preparations before removing the SMB unit

|   | Action  | Note  |
|---|---|---|
| 1 | Jog the robot to calibration position, if possible. This position facilitates updating of the revolution counters afterwards.   | <br>xx2300000252 |
| 2 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |   |

## Removing the electronic box


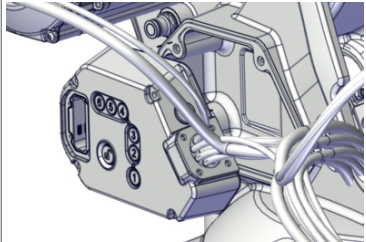
|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |   |
| 2 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |   |
| 3 | Remove the electronic box screws.  | <br>xx2100002134 |

Continues on next page



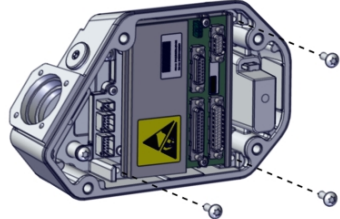
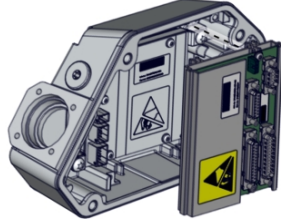
## 5 Repair

### 5.7.4 Replacing the SMB unit

*Continued*

| Action   | Note  |
|--|---|
| <p>4 Remove the electronic box, including all internal equipment.</p> <p> <b>CAUTION</b></p> <p>Clean cover from metal residues before opening.<br/>Metal residues can cause shortage on the boards which can result in hazardous failures.</p> |  <p>xx2100002135</p> |



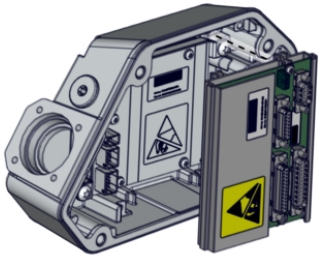
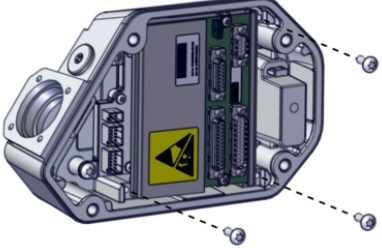
#### Disconnecting and removing the SMB unit

| Action   | Note  |
|--|---|
| <p>1  <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p>   |   |
| <p>2  <b>ELECTROSTATIC DISCHARGE (ESD)</b></p> <p>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i>.</p> |   |
| 3 Disconnect all connectors from the SMB board.  |   |
| 4 Remove the screws that secure the SMB unit.  |  <p>xx2100002159</p> |
| 5 Snap loose and remove the SMB unit.<br>Put the unit in an ESD bag.   |  <p>xx2100002160</p> |

*Continues on next page*

## Refitting the SMB unit

## Refitting and connecting the SMB unit


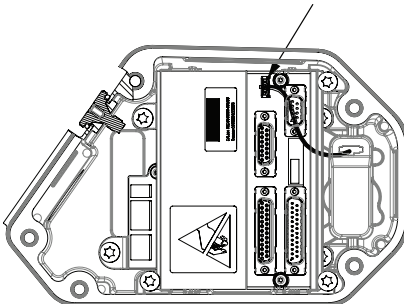

|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |   |
| 2 |  <b>ELECTROSTATIC DISCHARGE (ESD)</b><br>The unit is sensitive to ESD. Before handling the unit read the safety information in section <i>The unit is sensitive to ESD on page 48</i> . |   |
| 3 | Check the electronic box gasket.<br>Replace if damaged.  | Gasket for cover, electronics:<br>3HAC073671-001  |
| 4 | Fit the SMB unit into the electronic box.  | <br>xx2100002160  |
| 5 | Secure the SMB unit with the attachment screws.  | Torx pan head tapping screw: Steel-Fe/Zn 8c M6x16<br>Tightening torque: 10 Nm.<br><br>xx2100002159 |

Continues on next page


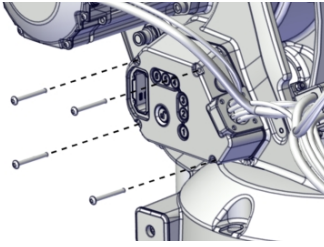
## 5 Repair

### 5.7.4 Replacing the SMB unit

*Continued*


| Action  | Note  |
|---|---|
| <p>6 Connect the battery cable to the SMB unit.<br/>Make sure the lock snaps into place during refitting.</p> <p> <b>Note</b></p> <p>Make sure that the connector is assembled in the correct direction according to its keying.</p> |  <p>xx2100002161</p>  |
| <p>7 Connect all connectors to the SMB board:</p> <ul style="list-style-type: none"> <li>• R1.SMB1-3, R1.SMB4-6 and R2.SMB</li> <li>• If cabling is used for 7th axis (option), refit the connector R1.SMB7</li> </ul>  |  <p>xx2100002162</p> |

### Refitting the electronic box

| Action  | Note  |
|---|---|
| <p>1  <b>ELECTROSTATIC DISCHARGE (ESD)</b></p> <p>The unit is sensitive to ESD. Before handling the unit read the safety information in section <a href="#">The unit is sensitive to ESD on page 48</a>.</p> |   |
| <p>2 Refit the electronic box with the attachment screws.</p>   | <p>Torx pan head screw: M6x60 (4 pcs)<br/>Tightening torque: 10 Nm.</p>  <p>xx2100002134</p> |

*Continues on next page*

## Concluding procedures

|   | Action   | Note   |
|---|--|--|
| 1 | Update the revolution counters.  | See <a href="#">Updating revolution counters on page 628</a> . |
| 2 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |  |

## 5 Repair

---

### 5.8.1 Replacing the axis-1 motor

## 5.8 Motors

### 5.8.1 Replacing the axis-1 motor

---

#### Replacing the motor on an inverted manipulator

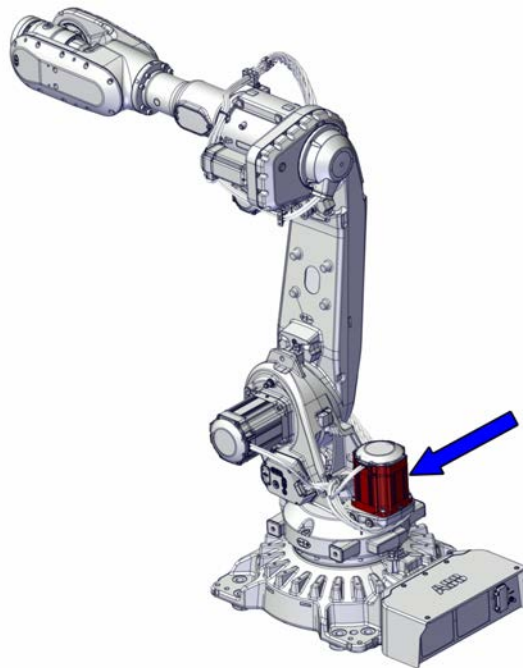
To replace the motor on an inverted manipulator, the axis-1 gearbox must be drained and a special lifting accessory must be used, according to the procedures in this section.

The alternative is to lift down the manipulator to floor-standing, see [Lifting down the manipulator from inverted to floor-standing position on page 204](#).

---

#### Location of the motor

The motor is located as shown in the figure.

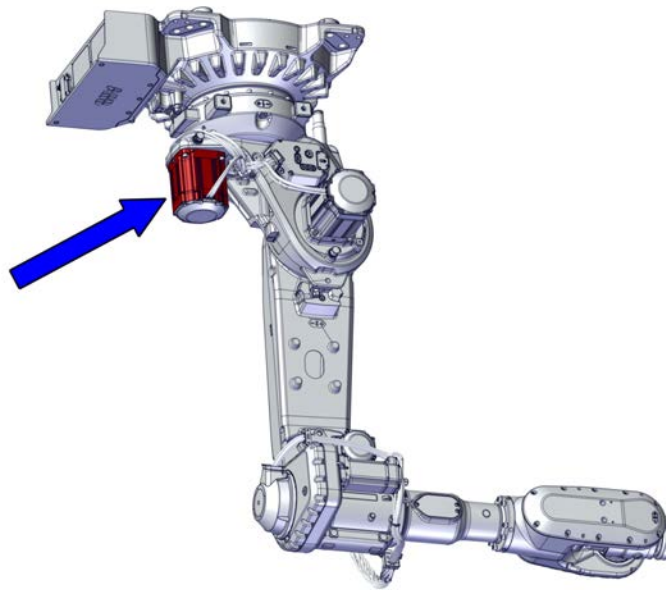


xx2000000241

*Option Inverted (3317-1)*

*Continues on next page*





xx2100002150

### Summary of the replacement procedure

This list is a brief summary of the replacement procedure, containing the major actions to be performed.

- 1 If installed in an inverted position (option 3317-1): drain the axis-1 gearbox.
- 2 Replace the motor.

### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number   | Note | Level |
|------------|--|------|-------|
| Motor unit | 3HAC072252-003<br>(Graphite White)<br>3HAC072252-004<br>(ABB Orange) |      | L2    |

### Required service parts

| Consumable     | Article number | Note         |
|----------------|----------------|--------------|
| Flange sealant | -              | Loctite 5800 |
| Cleaning agent | -              | Loctite 7200 |
| Cleaning agent | -              | Loctite 7063 |

*Continues on next page*

## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*

| Consumable                             | Article number   | Note   |
|--|--|--|
| Connection box cover FS180 with gasket | 3HAC072864-003 (Graphite White)<br>3HAC072864-005 (ABB Orange)<br>3HAC074336-004 (Graphite White, threaded connection)<br>3HAC074336-005 (ABB Orange, threaded connection) | Replace if damaged.<br>A threaded connection is required for cooling fan option. |
| Lubricating oil                        | -  | See <a href="#">Type of lubrication in gearboxes on page 148</a> .               |
| O-ring, G 1/2"                         | 3HAC061327-059   | Used on oil plug. Always replace when refitting oil plug.                        |

### Required tools and equipment

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Lifting and turning tool              | 3HAC073537-001   | Lift and rotation of inverted robot.<br>Requires fork lift accessory set 3HAC058825-001.<br>User instructions are enclosed with the tool. |
| Removal tool motor M12                | 3HAC14631-1  | Used to push out the motor, if necessary.<br>Always use removal tools in pairs.   |
| Oil dispenser                         | -  | One example of oil dispenser can be found in section <a href="#">Type of lubrication in gearboxes on page 148</a> .                       |
| Oil level gauge                       | 3HAC082693-001   | Used to inspect the oil level in the axis-1 gearbox when the manipulator is mounted inverted.<br>The tool also includes an air vent.      |
| Brake release tool                    | 3HAC081310-001   | User instructions are enclosed with the tool.   |
| Rotation tool M4                      | 3HAB7887-1   | Used to rotate the motor pinion.<br>Add screw M4.   |
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot.                   |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

*Continues on next page*

**Deciding calibration routine**


Decide which calibration routine to be used, based on the information in the table. Depending on which routine is chosen, action might be required prior to beginning the repair work of the robot, see the table.

|   | Action  | Note  |
|---|---|---|
| 1 | Decide which calibration routine to use for calibrating the robot. <ul style="list-style-type: none"> <li>Reference calibration. External cable packages (DressPack) and tools can stay fitted on the robot.</li> <li>Fine calibration. All external cable packages (DressPack) and tools must be removed from the robot.</li> </ul>  |   |
|   | <b>If the robot is to be calibrated with reference calibration:</b><br>Find previous reference values for the axis or create new reference values. These values are to be used after the repair procedure is completed, for calibration of the robot.<br>If no previous reference values exist, and no new reference values can be created, then reference calibration is not possible. | Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.<br>Creating new values requires possibility to move the robot.<br>Read more about reference calibration for Axis Calibration in <a href="#">Reference calibration routine on page 631</a> . |
|   | <b>If the robot is to be calibrated with fine calibration:</b><br>Remove all external cable packages (DressPack) and tools from the robot.  |   |

**Removing the motor**

Use these procedures to remove the motor.

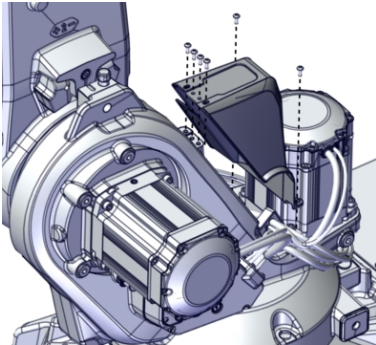
**Preparations before removing the motor**

|   | Action  | Note  |
|---|---|---|
| 1 | Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure.  |   |
| 2 | If needed, jog the robot to an appropriate working position that allows space for motor replacement.  |   |
| 3 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>electric power supply</li> <li>hydraulic pressure supply</li> <li>air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |   |
| 4 | <i>Option Inverted (3317-1)</i><br>Drain the axis-1 gearbox, if the motor is replaced on an inverted manipulator.   | See <a href="#">Inverted robot: Draining the axis-1 gearbox on page 155</a> . |


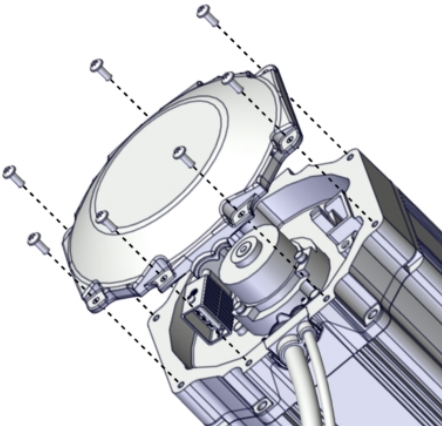
Continues on next page

5 Repair

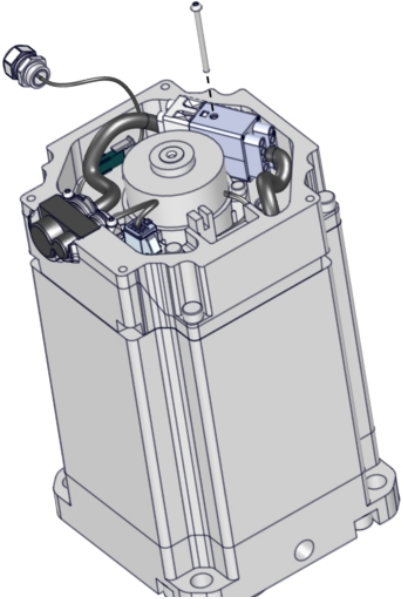
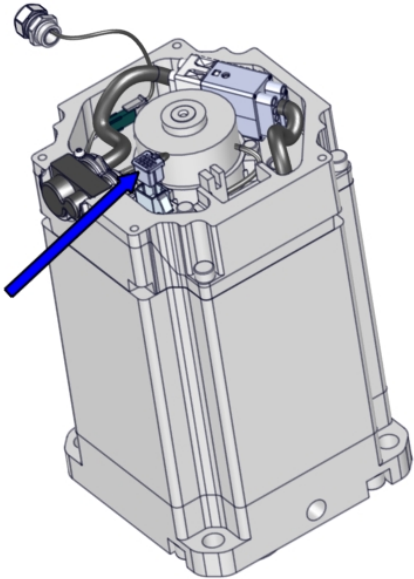
5.8.1 Replacing the axis-1 motor  
Continued

|   | Action  | Note  |
|---|---|---|
| 5 | <i>Protection type Foundry Plus</i><br>Remove the axis-1 cable protection plates by removing the attachment screws. | <br>xx2100000979 |

Floor-mounted robot: Disconnecting the axis-1 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Remove the motor cover by removing the screws.  | <br>xx2100000596 |

Continues on next page

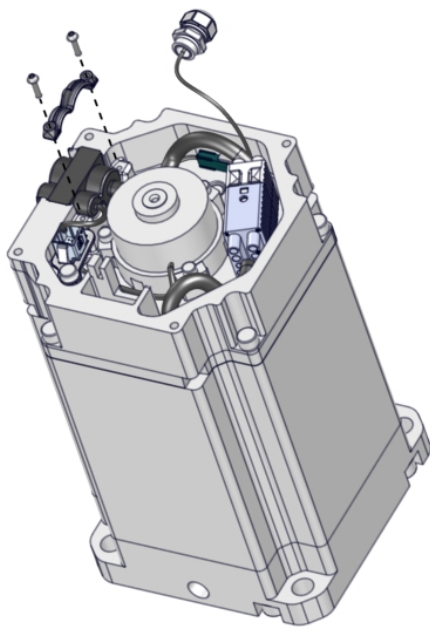
|   | Action  | Note   |
|---|---|--|
| 3 | Disconnect the power cable connector by first removing the attachment screw and then parting the connector. | <br>xx2200001736  |
| 4 | Disconnect the signal cable connector by pulling it out.  | <br>xx2200001737 |

Continues on next page


## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*

|   | Action   | Note   |
|---|--|--|
| 5 | Remove the cable bracket by removing the screws. | <br>xx2200001738 |
| 6 | Remove the motor cables from the motor.          |  |

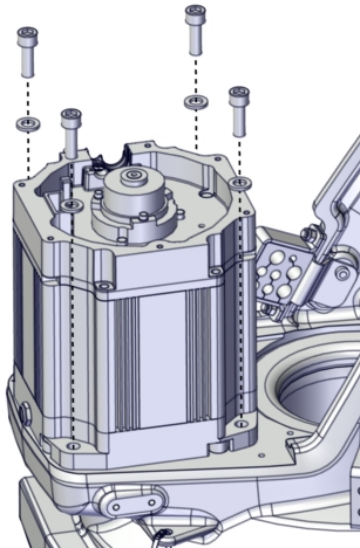
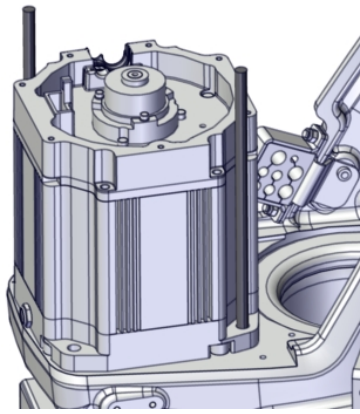
Floor-mounted robot: Removing the axis-1 motor

|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |      |

*Continues on next page*

## 5.8.1 Replacing the axis-1 motor

*Continued*






|   | Action   | Note   |
|---|--|--|
| 2 | Unscrew the attachment screws and washers.<br>Use a bits extender to reach the screws. | Bits extender: 3HAC12342-1<br><br>xx2100000503  |
| 3 | Fit guide pins in the non-threaded holes.  | Guide pin, M10x150: 3HAC15521-2<br>Always use guide pins in pairs.   |
| 4 | Fit removal tools in the threaded holes.   | Removal tool motor M12: 3HAC14631-1<br>Always use removal tools in pairs.<br><br>xx2100000504 |

*Continues on next page*

## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*

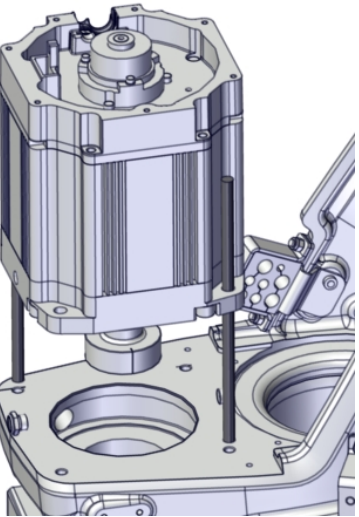
|   | Action   | Note  |
|---|--|---|
| 5 | <p>Release the brakes of the axis-1 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 6 | <p> <b>CAUTION</b></p> <p>The weight of the motor is 21 kg</p>  |   |
| 7 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |   |

*Continues on next page*



### 5.8.1 Replacing the axis-1 motor

*Continued*

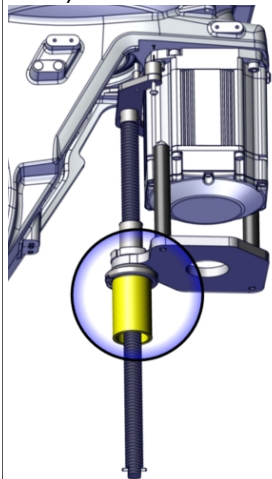
|    | Action   | Note  |
|----|--|---|
| 8  | Press the motor out of its position by using the removal tools.                    |  <p>xx2100002186</p> |
| 9  | Use caution and lift the motor straight up to get the pinion parted from the gear. |   |
| 10 | Disconnect the brake release tool.   |   |

Inverted robot: Attaching the motor lifting accessory



#### Note

This procedure is valid for inverted robots.

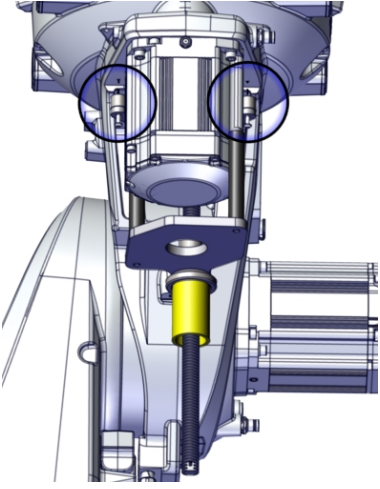
|   | Action   | Note   |
|---|--|--|
| 1 | Lower the revolving handle on the lifting accessory, to be able to fit the shelf beneath the motor while fastening the tool. | <p>Lifting accessory, motor (inverted robot): 3HAC081586-001</p>  <p>xx2100002807</p> |

*Continues on next page*

## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*

|   | Action  | Note  |
|---|---|---|
| 2 | Secure the tool to the robot frame with the attachment screws.          | <br>xx2100002808 |
| 3 | Screw the revolving handle to lift and fit the shelf against the motor. |   |

Inverted robot: Removing the axis-1 motor



#### Note

This procedure is valid for inverted robots.



#### WARNING

Oil residues will pour out during removal.

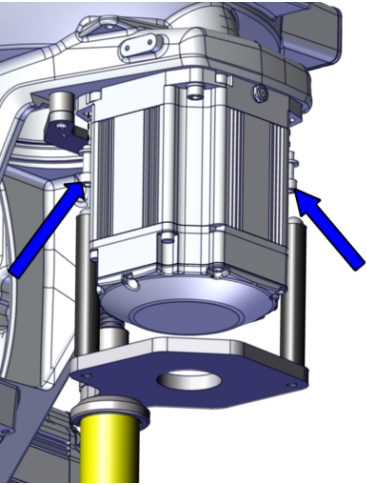

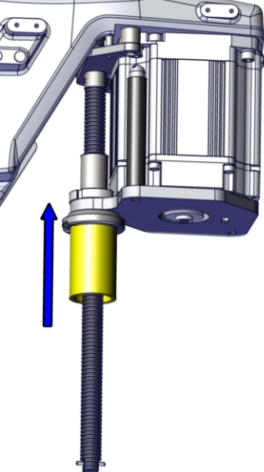
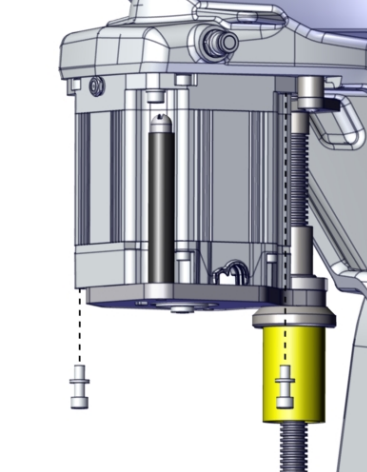
Always wear protective visor, gloves and arm protection.

Put oil absorbent cloth or paper round the motor flange and below the motor during removal.

*Continues on next page*

### 5.8.1 Replacing the axis-1 motor

*Continued*



|   | Action  | Note  |
|---|---|---|
| 1 | Remove the two shown motor screws and washers.  | <p>Bits extender, 3HAC12342-1</p>  <p>xx2100002810</p>   |
| 2 | <p>Raise the revolving handle to fit the motor on the tool shelf.</p> <p> <b>CAUTION</b></p> <p>Risk of pinching! Do not pinch the motor cabling. Route the cables throughout the motor connector hole.</p> |  <p>xx2100002809</p>                                    |
| 3 | Remove the two remaining screws holding the motor.  | <p>Bits extender, 3HAC12342-1</p>  <p>xx2100002811</p> |

*Continues on next page*

## 5 Repair

### 5.8.1 Replacing the axis-1 motor



*Continued*

|   | Action  | Note   |
|---|---|--|
| 4 |  <b>WARNING</b><br>Oil residues will pour out during removal.<br>Always wear protective visor, gloves and arm protection.<br>Put oil absorbent cloth or paper round the motor flange and below the motor during removal. |  |
| 5 | Lower the revolving handle.<br>If needed, use removal tools to help remove the motor.   | Removal tool motor M12:<br>3HAC14631-1<br>Always use removal tools in pairs. |
| 6 | Rotate the shelf to remove the motor.<br> <b>CAUTION</b><br>The weight of the motor is 21 kg   |  |
| 7 | Lift away the motor.  |  |

#### Refitting the motor

Use these procedures to refit the motor.


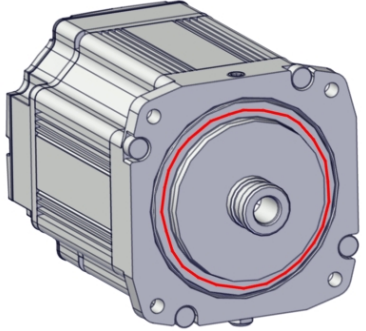
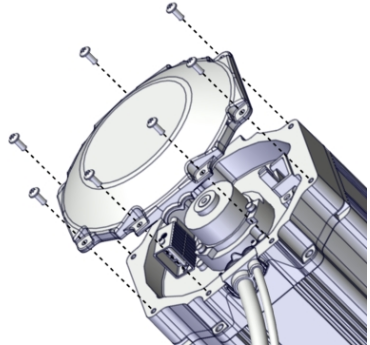
#### Preparations prior to refitting motor

|   | Action   | Note                                       |
|---|--|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |  |
| 2 | Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.<br> <b>Tip</b><br>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface. | Cleaning agent: Loctite 7200, Loctite 7063 |

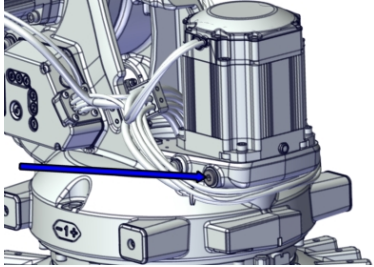
*Continues on next page*

## 5.8.1 Replacing the axis-1 motor

*Continued*

|   | Action   | Note  |
|---|--|---|
| 3 | <p>Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.</p> <p> <b>Note</b></p> <p>The purpose of the groove is to catch excess sealant. No o-ring is used.</p> | <p>Flange sealant: Loctite 5800</p>  <p>xx2100000520</p> |
| 4 | Remove the cover, if fitted to the new spare part motor.   |  <p>xx2100000596</p>                                    |

## Floor-mounted robot: Refitting the axis-1 motor

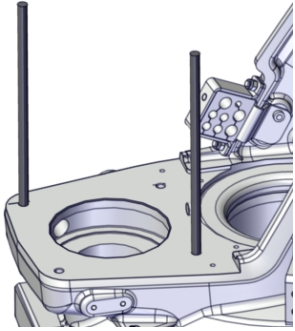



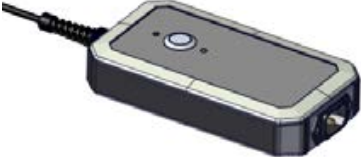

|   | Action  | Note  |
|---|---|---|
| 1 | <p>Remove the plug from the venting hole. This is done to evacuate air during refitting of the motor.</p> |  <p>xx2100001477</p> |

*Continues on next page*

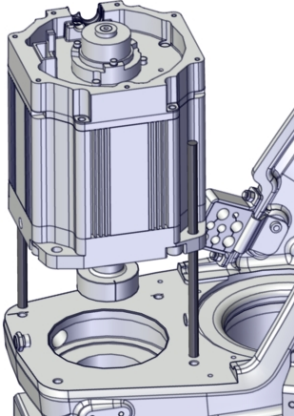
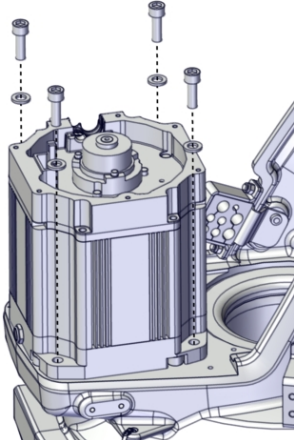
## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*

|   | Action  | Note   |
|---|---|--|
| 2 | Fit guide pins in opposite holes.   | <p>Guide pin, M10x150: 3HAC15521-2</p> <p>Always use guide pins in pairs.</p>  <p>xx2100001194</p>                    |
| 3 |  <b>CAUTION</b><br>The weight of the motor is 21 kg  |  |
| 4 | Fit the rotation tool.  | Rotation tool M4: 3HAB7887-1   |
| 5 | <p>Release the brakes on the motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 6 |  <b>CAUTION</b><br>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.   |  |

*Continues on next page*

|    | Action  | Note   |
|----|---|--|
| 7  | <p>Lower the motor into position.</p> <ul style="list-style-type: none"> <li>• Make sure that the motor pinion is properly mated to the gear in the gearbox.</li> <li>• Make sure that the motor pinion does not get damaged.</li> <li>• Make sure that the direction of the cable gland exit is facing the correct way.</li> </ul> |  <p>xx2100002186</p>  |
| 8  | <p>Secure the motor with its attachment screws and washers.</p> <p>Use a bits extender to reach the screws.</p>   | <p>Hex socket head cap screw:<br/>M10x30 12.9 Gleitmo 603+Geomet 500 (4 pcs)<br/>Bits extender: 3HAC12342-1<br/>Tightening torque: 50 Nm.</p>  <p>xx2100000503</p> |
| 9  | Disconnect the brake release tool.  |  |
| 10 | Perform a leak-down test.   | See <a href="#">Performing a leak-down test on page 196</a> .  |

Inverted robot: Attaching the motor lifting accessory



#### Note

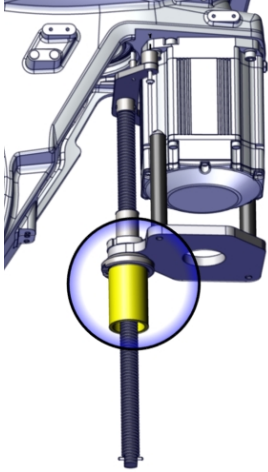
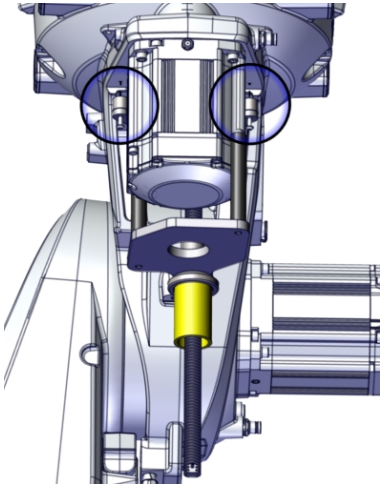
This procedure is valid for inverted robots.

*Continues on next page*


## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*




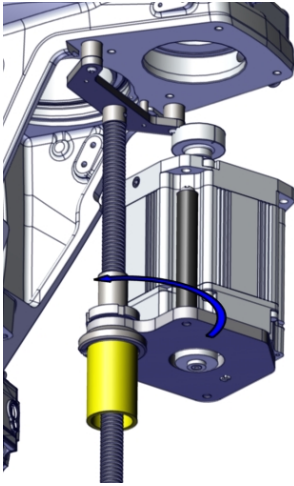
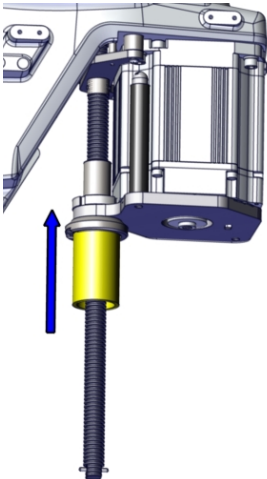
|   | Action   | Note   |
|---|--|--|
| 1 | Lower the revolving handle on the lifting accessory, to be able to fit the shelf beneath the motor while fastening the tool. | <p>Lifting accessory, motor (inverted robot): 3HAC081586-001</p>  <p>xx2100002807</p> |
| 2 | Secure the tool to the robot frame with the attachment screws.   |  <p>xx2100002808</p>   |
| 3 | Screw the revolving handle to lift and fit the shelf against the motor.  |  |

Inverted robot: Refitting the axis-1 motor

|   | Action   | Note |
|---|--|------|
| 1 |  <b>CAUTION</b><br>The weight of the motor is 21 kg |      |

*Continues on next page*



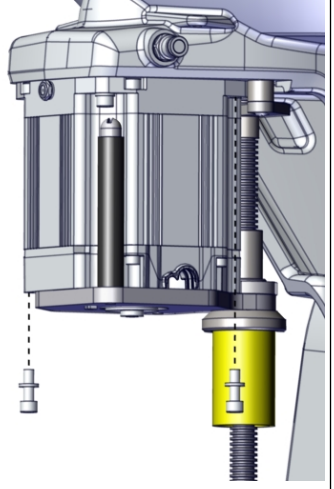
|   | Action  | Note   |
|---|---|--|
| 2 | <p>Release the brakes of the axis-1 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.<br/>Read and follow enclosed user instructions for the tool.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 3 | Fit guide pins in opposite holes.   | Guide pin, M10x150: 3HAC15521-2  |
| 4 | <p>Put the motor on the tool shelf and rotate it into position.</p> <p> <b>CAUTION</b></p> <p>Risk of pinching! Do not pinch the motor cabling. Route the cables throughout the motor connector hole.</p>   |  <p>xx2100002815</p>   |
| 5 | <p>Raise the revolving handle to assemble motor.</p> <ul style="list-style-type: none"> <li>• Make sure that the motor pinion is properly mated to the gear in the gearbox.</li> <li>• Make sure that the motor pinion does not get damaged.</li> <li>• Make sure that the direction of the cable exit is facing the correct way.</li> </ul>  |  <p>xx2100002809</p> <p>Figure 5.1:</p>   |

Continues on next page

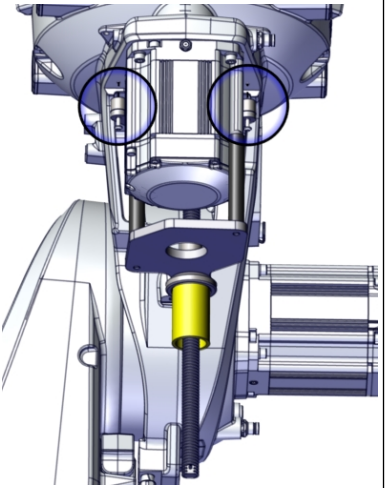
## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*

|   | Action   | Note  |
|---|--|---|
| 6 | Secure the motor with its attachment screws and washers.<br>Use a bits extender to reach the screws. | Hex socket head cap screw:<br>M10x30 12.9 Gleitmo 603+Geomet<br>500 (4 pcs)<br>Bits extender: 3HAC12342-1<br>Tightening torque: 50 Nm.<br> |
| 7 | Perform a leak-down test (if not already done).  | See <a href="#">Performing a leak-down test on page 196</a> .   |
| 8 | Disconnect the brake release tool.   |   |

### Inverted robot: Removing the motor lifting accessory

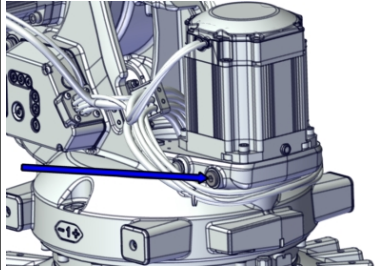
|   | Action  | Note  |
|---|---|---|
| 1 | Remove the lifting accessory by removing the attachment screws. |  |

*Continues on next page*

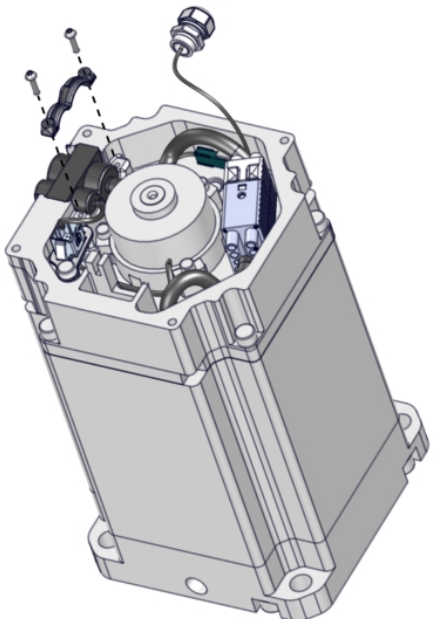

## 5.8.1 Replacing the axis-1 motor

*Continued*

## Refitting the oil plug

|   | Action                                | Note  |
|---|---------------------------------------|---|
| 1 | Refit the oil plug with a new o-ring. | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100001477</p> |

## Connecting the motor cables


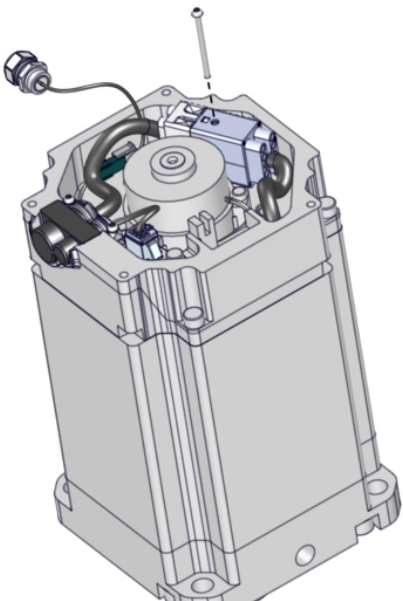
|   | Action  | Note   |
|---|---|--|
| 1 | Put the motor cables in place in the opening.   |  |
| 2 | Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | <p>Connect the motor cables.</p> <p> <b>Note</b></p> <p>Connect in accordance with the markings on the connectors.</p> |  |

*Continues on next page*


## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*

|   | Action   | Note  |
|---|--|---|
| 4 | <p>Fit a screw to the power connector.</p> <p> <b>Note</b></p> <p>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p>Tightening torque: 1 Nm</p>  <p>xx2200001736</p> |

*Continues on next page*

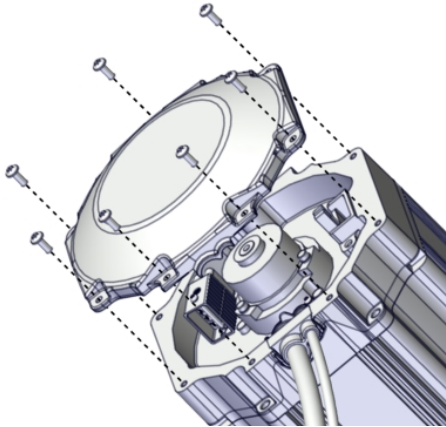
|   | Action  | Note  |
|---|---|---|
| 5 | Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <p>Axis-1 Connection box cover FS180 with gasket:<br/>           3HAC072864-003 (Graphite White)<br/>           3HAC072864-005 (ABB Orange)<br/>           3HAC074336-004 (Graphite White, threaded connection)<br/>           3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-2 Connection box cover FS180 with gasket:<br/>           3HAC072864-003 (Graphite White)<br/>           3HAC072864-005 (ABB Orange)<br/>           3HAC074336-004 (Graphite White, threaded connection)<br/>           3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-3 Connection box cover FS130 with gasket:<br/>           3HAC072863-003 (Graphite White)<br/>           3HAC072863-005 (ABB Orange)</p> <p>Axis-4 Connection box cover FS100 with gasket:<br/>           3HAC072862-003 (Graphite White)<br/>           3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |   |

*Continues on next page*

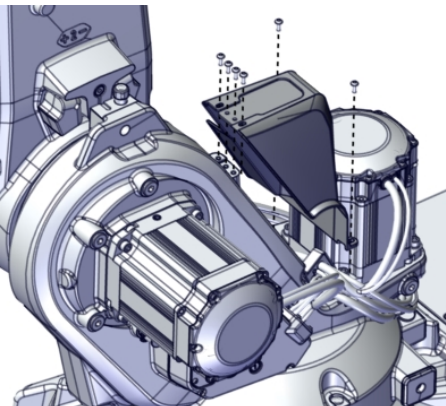
## 5 Repair

### 5.8.1 Replacing the axis-1 motor

*Continued*

|   | Action   | Note   |
|---|--|--|
| 7 | Refit the motor cover with its attachment screws.<br>Use locking liquid. | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p> <p>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p> <p>Tightening torque: 6 Nm.</p>  <p>xx2100000596</p> |





### Refitting the covers for Foundry Plus and floor mounted robots

|   | Action  | Note  |
|---|---|---|
| 1 | <i>Protection type Foundry Plus</i><br>Refit the axis-1 cable protection. | <p>Torx pan head screw: M6x16 A4-80 (4 pcs)</p> <p>Hex socket head cap screw: M10x16 stainless steel A2-70 (3 pcs)</p>  <p>xx2100000979</p> |

*Continues on next page*

## Securing an inverted robot to the foundation

Use this procedure to orient and secure the robot inverted.



|   | Action   | Note   |
|---|--|--|
| 1 | <p>Install the fork lift pockets to the robot.</p>  <b>DANGER</b><br>Handling the tool incorrectly will cause serious injury.<br>Read and follow enclosed user instructions for the tool.   | <p>See user instructions enclosed with the fork lift accessory set.<br/>           Fork lift accessory set:<br/>           3HAC058825-001.</p> |
| 2 | <p>Choose one of the following lifting methods:</p> <ul style="list-style-type: none"> <li>Lifting and turning with the fork lift (rotator attachment required):               <ol style="list-style-type: none"> <li>1 Insert the forks of the fork lift truck into the fork lift pockets, as far as possible.</li> <li>2 Raise the forks of the fork lift truck to make sure that the weight of the robot rests on the forks.</li> </ol>  <b>Tip</b><br/>           Two M16 screws can be fitted to the fork lift pockets, to press the forks against the pockets and make the lift more stable.             </li> <li>Lifting and turning with the turning tool and overhead crane:               <ol style="list-style-type: none"> <li>1 Install and use the turning tool according to enclosed user instructions.</li> </ol>  <b>DANGER</b><br/>           Handling the tool incorrectly will cause serious injury.<br/>           Read and follow enclosed user instructions for the tool.             </li> </ul> | <p>See user instructions enclosed with the turning tool.<br/>           Lifting and turning tool:<br/>           3HAC073537-001.</p>           |
| 3 | Remove the bolts that secure the robot to the foundation/support legs.   |  |
| 4 | Move the robot close to its installation location.   |  |
| 5 | <p>Rotate the robot into inverted position using the turning tool or using a fork lift truck with a rotator attachment.</p>  <b>DANGER</b><br>Make sure that there is enough space underneath the robot. See user instructions for the turning tool.  | <p>Lifting and turning tool:<br/>           3HAC073537-001<br/>           See user instructions enclosed with the turning tool.</p>            |
| 6 | Guide the robot using two attachment screws while lifting it into its mounting position.   |  |

*Continues on next page*

## 5 Repair


### 5.8.1 Replacing the axis-1 motor

*Continued*

|   | Action   | Note   |
|---|--|--|
| 7 | <p>Fit the bolts and washers in the base attachment holes.</p> <p> <b>Note</b></p> <p>Lightly lubricate screws before assembly.</p> <p> <b>CAUTION</b></p> <p>If high stress on screws are suspected, replace used screws with new ones.</p> | <p>Suitable screws, lightly lubricated: M24 x 100 (8 pcs), 8.8.</p> <p>Suitable washer: 4 mm flat washer.</p> <p>Screw tightening yield point utilization factor (<math>v</math>) (according to VDI2230): 90% (<math>v=0.9</math>).</p> <p>Tightening torque:</p> <p>550 Nm (screws lubricated with Molykote 1000)</p> <p>600-725 Nm, typical 650 Nm (screws none or lightly lubricated)</p> |
| 8 | Tighten bolts in a crosswise pattern to ensure that the base is not distorted.   |  |
| 9 | Reconnect the robot cables to the base.  |  |

#### Concluding procedure

Use this procedure for the concluding refitting.

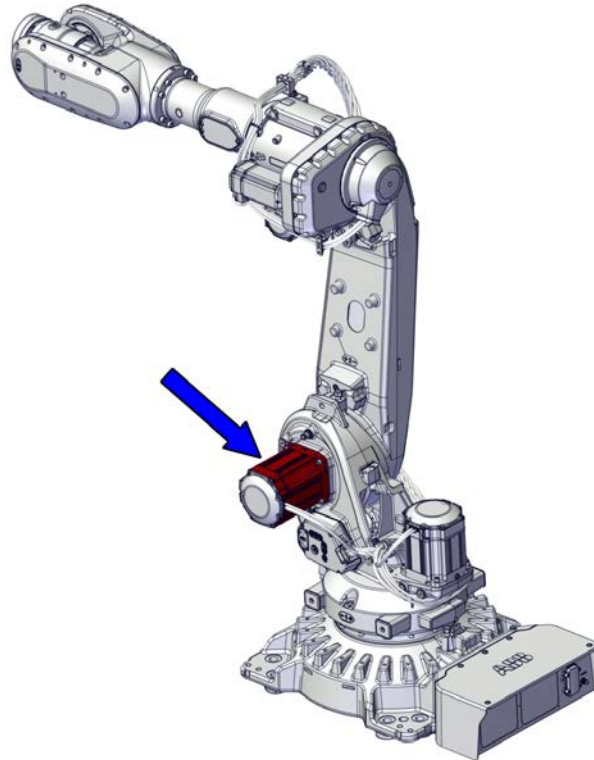
|   | Action  | Note  |
|---|---|---|
| 1 | Re-calibrate the robot.   | See <a href="#">Calibration on page 621</a> . |
| 2 | <p> <b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |   |



## 5.8.2 Replacing the axis-2 motor

### Location of the motor

The motor is located as shown in the figure.



xx2100000486

### Summary of the replacement procedure

This list is a brief summary of the replacement procedure, containing the major actions to be performed.

- 1 Drain the axis-2 gearbox.
- 2 Secure the lower arm.
- 3 Replace the motor.

### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number   | Note | Level |
|------------|--|------|-------|
| Motor unit | 3HAC072099-003<br>(Graphite White)<br>3HAC072099-004<br>(ABB Orange) |      | L2    |

*Continues on next page*

## 5 Repair

### 5.8.2 Replacing the axis-2 motor

*Continued*

#### Required service part

| Consumable                             | Article number   | Note   |
|--|--|--|
| Lubricating oil                        | -  | See <a href="#">Type of lubrication in gear-boxes on page 148</a> .              |
| Cleaning agent                         | -  | Loctite 7200   |
| Cleaning agent                         | -  | Loctite 7063   |
| Flange sealant                         | -  | Loctite 5800   |
| Connection box cover FS180 with gasket | 3HAC072864-003 (Graphite White)<br>3HAC072864-005 (ABB Orange)<br>3HAC074336-004 (Graphite White, threaded connection)<br>3HAC074336-005 (ABB Orange, threaded connection) | Replace if damaged.<br>A threaded connection is required for cooling fan option. |
| O-ring, G 1/2"                         | 3HAC061327-059   | Used on oil plug. Always replace when refitting oil plug.                        |

#### Required tools and equipment

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Lock screw, M16x120                   | -  | Used to secure lower arm.   |
| Brake release tool                    | 3HAC081310-001   | User instructions are enclosed with the tool.   |
| Bits extender                         | 3HAC12342-1  | 300 mm, bits 1/2"   |
| Guide pin, M10x150                    | 3HAC15521-2  | Always use guide pins in pairs.   |
| Removal tool motor M12                | 3HAC14631-1  | Used to push out the motor, if necessary.<br>Always use removal tools in pairs.   |
| Lifting accessory, motor              | 3HAC15534-1  | Lifting instruction 3HAC15640-2 enclosed.   |
| Lifting accessory (chain)             | 3HAC15556-1  | Lifting instruction 3HAC15880-2 enclosed.   |
| Rotation tool M4                      | 3HAB7887-1   | Used to rotate the motor pinion.<br>Add screw M4.   |
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

*Continues on next page*

**Deciding calibration routine**

Decide which calibration routine to be used, based on the information in the table. Depending on which routine is chosen, action might be required prior to beginning the repair work of the robot, see the table.

|   | Action  | Note  |
|---|---|---|
| 1 | Decide which calibration routine to use for calibrating the robot. <ul style="list-style-type: none"> <li>Reference calibration. External cable packages (DressPack) and tools can stay fitted on the robot.</li> <li>Fine calibration. All external cable packages (DressPack) and tools must be removed from the robot.</li> </ul>  |   |
|   | <b>If the robot is to be calibrated with reference calibration:</b><br>Find previous reference values for the axis or create new reference values. These values are to be used after the repair procedure is completed, for calibration of the robot.<br>If no previous reference values exist, and no new reference values can be created, then reference calibration is not possible. | Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.<br>Creating new values requires possibility to move the robot.<br>Read more about reference calibration for Axis Calibration in <a href="#">Reference calibration routine on page 631</a> . |
|   | <b>If the robot is to be calibrated with fine calibration:</b><br>Remove all external cable packages (DressPack) and tools from the robot.  |   |

**Removing the motor**

Use these procedures to remove the motor.

**Preparations before removing the motor**


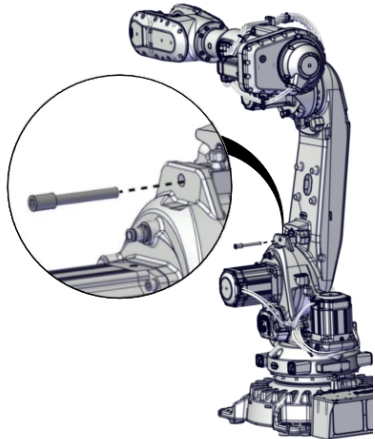

|   | Action   | Note |
|---|--|------|
| 1 | Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure. |      |
| 2 | Jog the robot to the synchronization position.   |      |

*Continues on next page*


## 5 Repair

### 5.8.2 Replacing the axis-2 motor

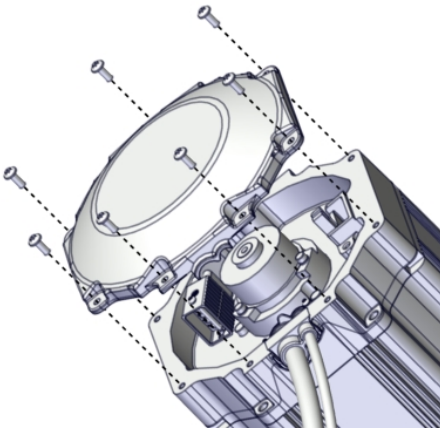
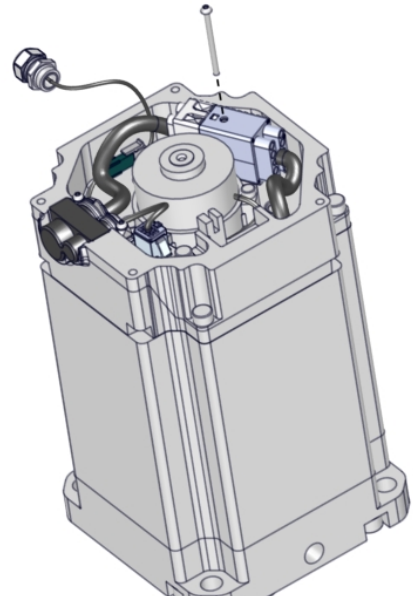
*Continued*

|   | Action  | Note   |
|---|---|--|
| 3 | <p>Insert the lock screw into the frame. If needed, adjust the position of axis-2 to make it possible to insert the lock screw.</p> <p>The lock screw is used to secure the weight of the lower arm, in order to avoid accidents or damage.</p> <p> <b>Note</b></p> <p>Tighten the lock screw manually, no tools needed.</p> | <p>Lock screw, M16x120</p>  <p>xx2100000592</p> |
| 4 | Drain the oil from the gearbox.   | See <a href="#">Changing the oil in axis-2 gearbox on page 161</a> .   |
| 5 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safeguarded space.</p>  |  |

#### Disconnecting the motor cables

|   | Action   | Note |
|---|--|------|
| 1 | <p> <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p> |      |

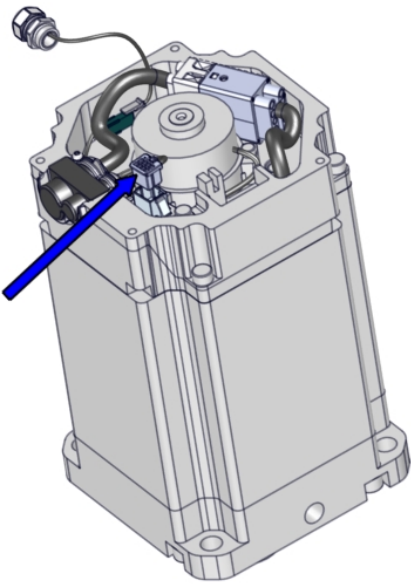
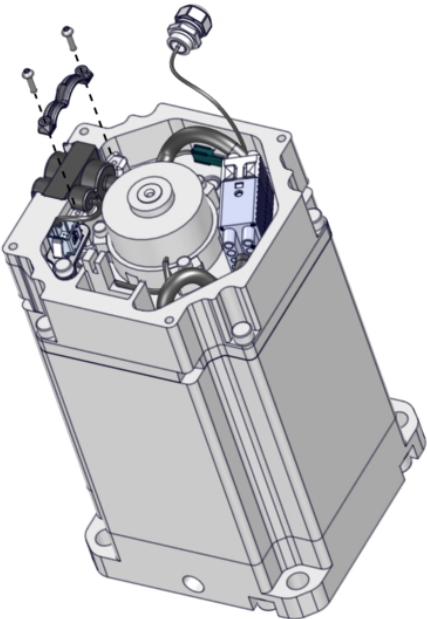
*Continues on next page*

|   | Action  | Note   |
|---|---|--|
| 2 | Remove the motor cover by removing the screws.  |  <p>Diagram illustrating the removal of the motor cover. The cover is shown being lifted away from the motor assembly, with dashed lines indicating the removal of screws. The motor assembly is shown in a perspective view.</p> <p>xx210000596</p>                                 |
| 3 | Disconnect the power cable connector by first removing the attachment screw and then parting the connector. |  <p>Diagram illustrating the disconnection of the power cable connector. The connector is shown being removed from the motor assembly, with dashed lines indicating the removal of the attachment screw. The motor assembly is shown in a perspective view.</p> <p>xx2200001736</p> |

Continues on next page

5 Repair





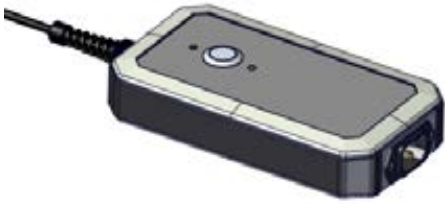
5.8.2 Replacing the axis-2 motor  
Continued

|   | Action   | Note  |
|---|--|---|
| 4 | Disconnect the signal cable connector by pulling it out. | <br><br>xx2200001737  |
| 5 | Remove the cable bracket by removing the screws.         | <br><br>xx2200001738 |
| 6 | Remove the motor cables from the motor.                  |   |

Removing the axis-2 motor

|   | Action   | Note |
|---|--|------|
| 1 | Before removing the motor, make sure that the gearbox is completely drained. |      |

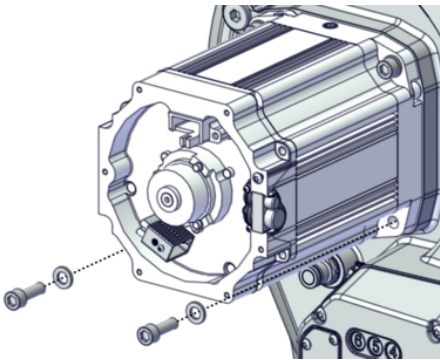

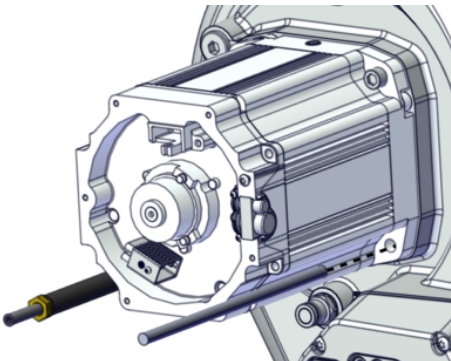
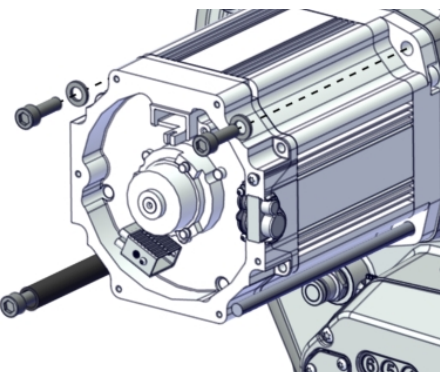
Continues on next page

|   | Action   | Note   |
|---|--|--|
| 2 | <p> <b>DANGER</b></p> <p>When releasing the holding brakes of the motor, the lower arm will be movable and may fall down if not secured. Verify that the lower arm is secured as previously described, before continuing.</p>   |  |
| 3 | <p> <b>CAUTION</b></p> <p>Releasing the brakes on the axis-2 motor results in weight transfer of upper and lower arm weight to the inserted lock screw in the lower arm or to the attached lifting accessories (whichever is used). If lifting accessories are used, verify that the lifting chains and roundslings are stretched by raising the overhead crane, before releasing the brakes.</p> <p>Release the brakes on the motor with the brake release tool, to unload the weight:</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001<br/>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |

Continues on next page


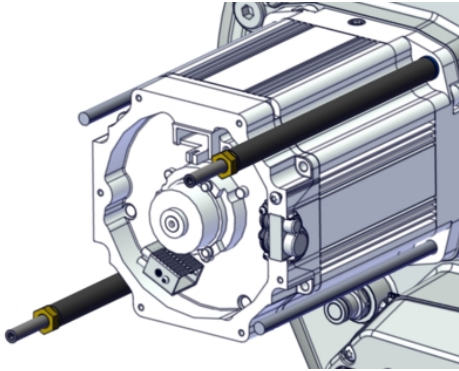


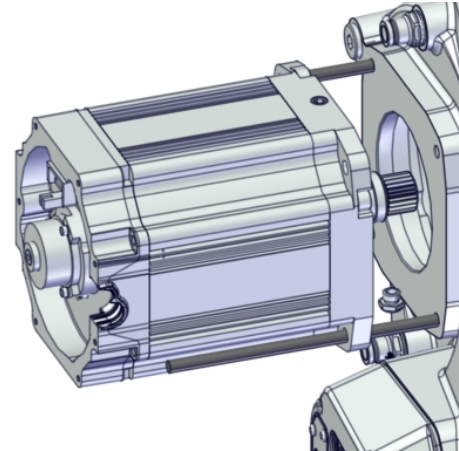
5 Repair

5.8.2 Replacing the axis-2 motor  
Continued

| Action   | Note  |
|--|---|
| 4 Remove the two lower screws.<br>Use a bits extender in order to reach the screws.  | Bits extender: 3HAC12342-1<br><br>xx2000000468  |
| 5 Fit a guide pin in the non-threaded hole.<br>Fit a removal tool in the threaded hole.<br><br> <b>Tip</b><br><br>Lubricate the guide pins with some grease to make the motor slide better. | Guide pin, M10x150: 3HAC15521-2<br>Removal tool motor M12: 3HAC14631-1<br><br>xx2000000456 |
| 6 Remove the remaining two screws.   | Bits extender: 3HAC12342-1<br><br>xx2200001150  |

Continues on next page




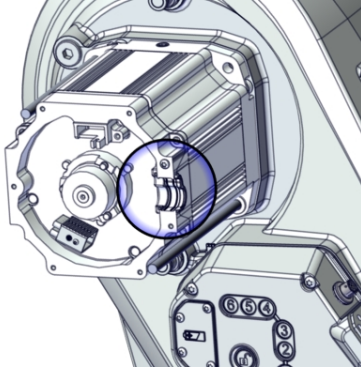
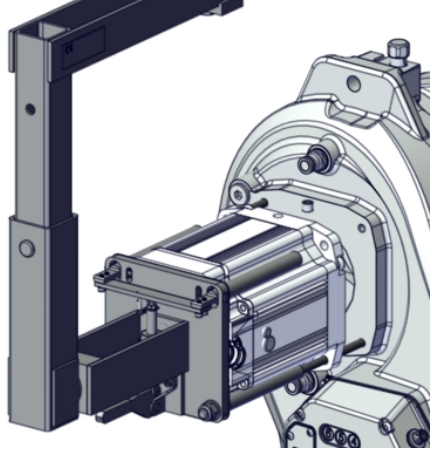
|    | Action   | Note  |
|----|--|---|
| 7  | <p>Fit a guide pin in the non-threaded hole.<br/>Fit a removal tool in the threaded hole.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the motor slide better.</p> | <p>Guide pin, M10x150: 3HAC15521-2<br/>Removal tool motor M12: 3HAC14631-1</p>  <p>xx2300000043</p> |
| 8  | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gear-box, the gears may be damaged if excessive force is used.</p>  |   |
| 9  | <p>Activate the brake release tool again (release the brakes).</p>   | <p>The power is only applied for 180 seconds after activation.</p>  |
| 10 | <p>Press the motor out of its position by using the removal tools.<br/>Remove the removal tools.</p>   | <p>Used to push out the motor, if necessary.<br/>Always use removal tools in pairs.</p>   |
| 11 | <p> <b>CAUTION</b></p> <p>The weight of the motor is 25 kg<br/>All lifting accessories used must be sized accordingly.</p>  |   |
| 12 | <p>Carefully lift the motor out on the guide pins, in order to get the pinion away from the gear and let it rest on the guide pins.</p>  |  <p>xx20000000457</p>   |
| 13 | <p>Disconnect the brake release tool.</p>  |   |
| 14 | <p>Fasten the lifting accessory. Attach the lifting chain to the accessory and an overhead crane.</p>  | <p>Lifting accessory, motor: 3HAC15534-1<br/>Lifting accessory (chain): 3HAC15556-1</p>   |

*Continues on next page*

## 5 Repair

### 5.8.2 Replacing the axis-2 motor



*Continued*

| Action  | Note   |
|---|--|
| <p>15 Remove the motor by sliding it out on the guide pins and lift it off.</p> <p> <b>Tip</b></p> <p>Make a note in which direction the cable gland hole is facing. The motor shall be refitted in the same position.</p>  <p>xx2100000595</p> |  <p>xx2000000455</p> <p>Make sure the pinion is not damaged.</p> |


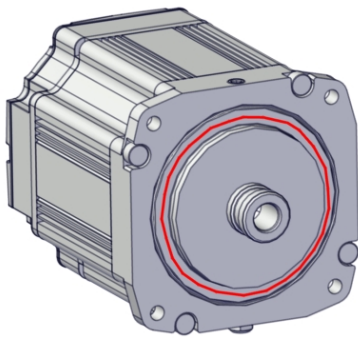
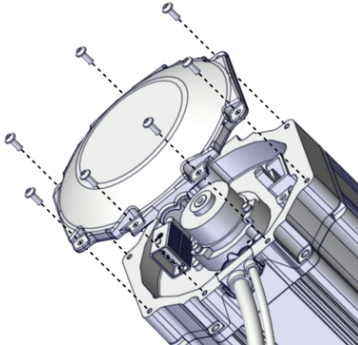
### Refitting the motor

Use these procedures to refit the axis-2 motor.

#### Preparations prior to refitting motor

| Action  | Note  |
|---|---|
| <p>1  <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p>  |   |
| <p>2 Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.</p> <p> <b>Tip</b></p> <p>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface.</p> | <p>Cleaning agent: Loctite 7200, Loctite 7063</p> |

*Continues on next page*

|   | Action   | Note  |
|---|--|---|
| 3 | <p>Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.</p> <p> <b>Note</b></p> <p>The purpose of the groove is to catch excess sealant. No o-ring is used.</p> | <p>Flange sealant: Loctite 5800</p>  <p>xx2100000520</p> |
| 4 | <p>Remove the cover, if fitted to the new spare part motor.</p>  |  <p>xx2100000596</p>                                    |

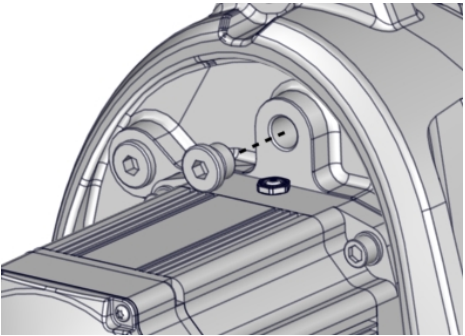
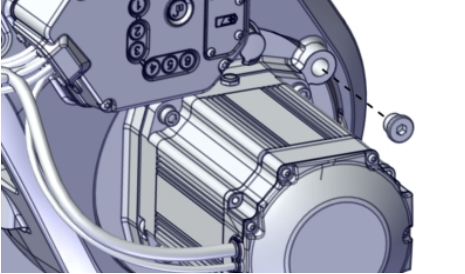
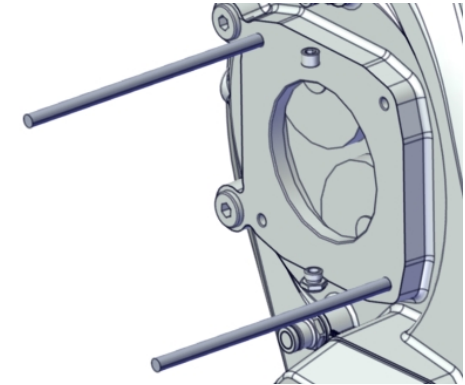

Continues on next page

## 5 Repair

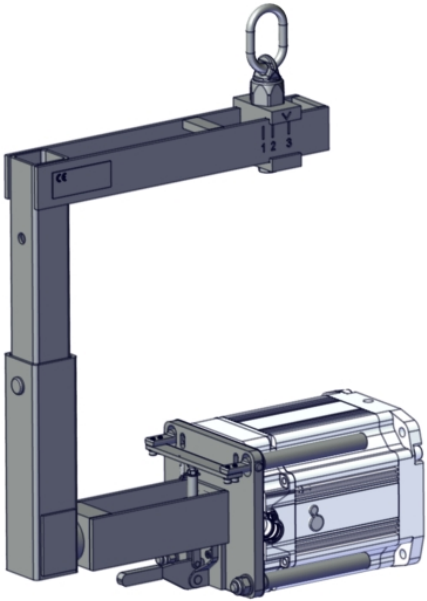

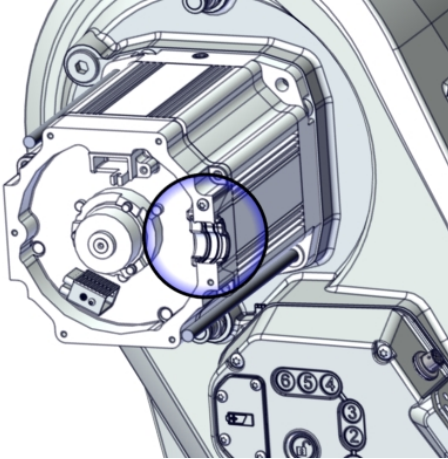
### 5.8.2 Replacing the axis-2 motor

*Continued*

#### Refitting the axis-2 motor

|   | Action  | Note   |
|---|---|--|
| 1 | Remove the plug from the venting hole.<br>This is done to evacuate air during refitting of the motor.   | <br>xx2300000002<br><i>Option Inverted (3317-1)</i><br><br>xx2100002061 |
| 2 | Fit guide pins in opposite holes.   | Guide pin, M10x150: 3HAC15521-2<br>Always use guide pins in pairs.<br><br>xx2100000593   |
| 3 |  <b>CAUTION</b><br>The weight of the motor is 25 kg<br>All lifting accessories used must be sized accordingly. |  |

*Continues on next page*

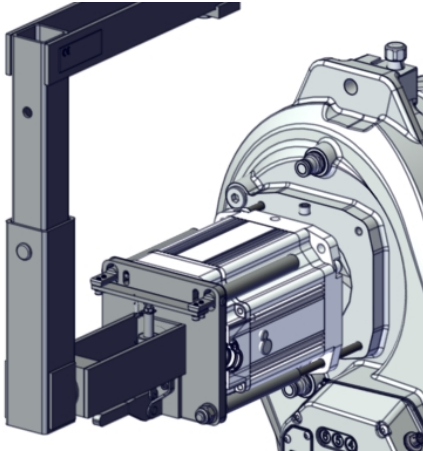
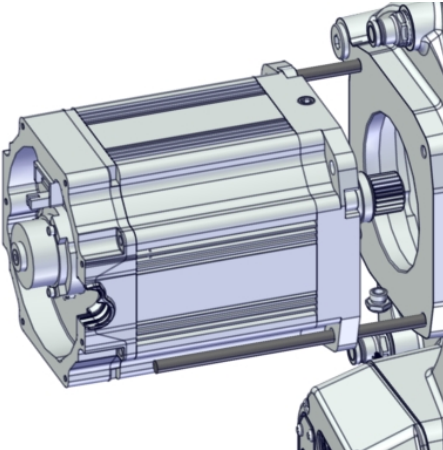
|   | Action  | Note  |
|---|---|---|
| 4 | Apply the lifting accessory.  | <p data-bbox="975 309 1414 376">Lifting accessory, motor: 3HAC15534-1<br/>Lifting accessory (chain): 3HAC15556-1</p>  <p data-bbox="975 1010 1078 1025">xx2100000594</p> |
| 5 | <p data-bbox="502 1059 560 1120"></p> <p data-bbox="587 1077 644 1104"><b>Note</b></p> <p data-bbox="496 1133 914 1189">Make sure the cable gland opening is turned the correct way.</p> |  <p data-bbox="975 1525 1078 1541">xx2100000595</p>   |

Continues on next page



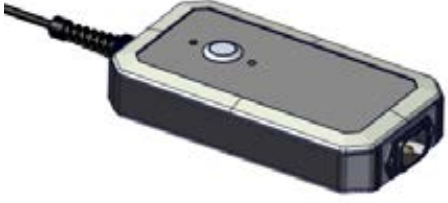

## 5 Repair

### 5.8.2 Replacing the axis-2 motor

*Continued*

|   | Action   | Note  |
|---|--|---|
| 6 | Lift the motor and put it on the guide pins as close as possible to its final position without pushing the motor pinion into the gear. |  <p>xx2000000455</p>  |
| 7 | Remove the lifting accessory and allow the motor to rest on the guide pins.  |  <p>xx2000000457</p> |

*Continues on next page*

|    | Action   | Note  |
|----|--|---|
| 8  | <p>Release the brakes of the axis-2 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 9  | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |   |
| 10 | <p>Apply the rotation tool.</p> <p>Use caution and fit the motor in its final position while at the same time rotating the motor pinion slightly using the rotation tool.</p> <ul style="list-style-type: none"> <li>• Make sure that the motor pinion is properly mated to the gear of the gearbox.</li> <li>• Make sure that the motor pinion does not get damaged.</li> <li>• Make sure that the direction of the cable exit is facing the correct way.</li> </ul>  | <p>Rotation tool M4: 3HAB7887-1</p>   |

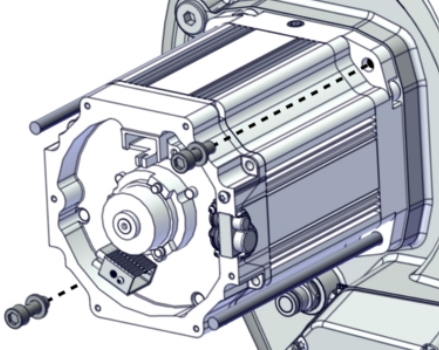
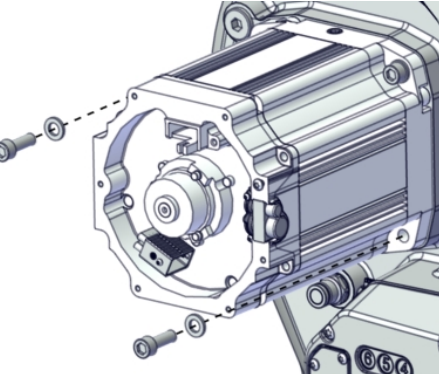
Continues on next page



## 5 Repair

### 5.8.2 Replacing the axis-2 motor

*Continued*

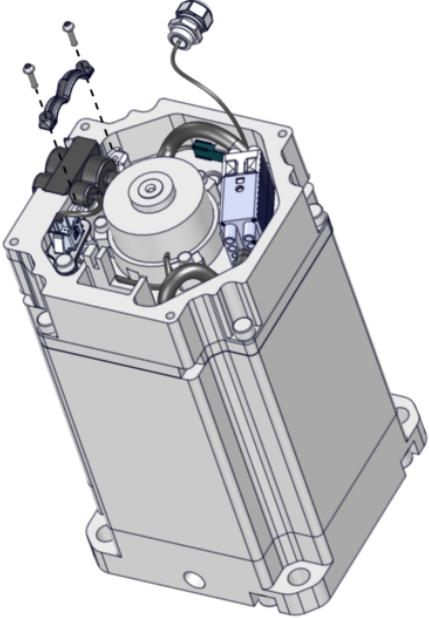


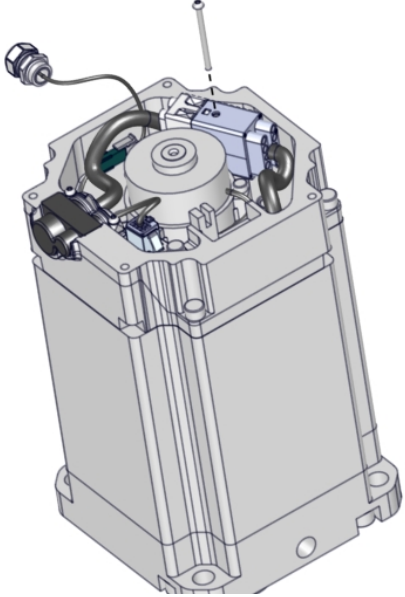
|    | Action   | Note   |
|----|--|--|
| 11 | Fit two of the attachment screws and washers.<br>Use a bits extender in order to reach the screws. | <p>Hex socket head cap screw: M10x30 12.9<br/>Gleitmo 603+Geomet 500 (2 pcs)<br/>Bits extender: 3HAC12342-1</p>  <p>xx2000000467</p> |
| 12 | Remove the guide pins and refit the remaining attachment screws.                                   | <p>Hex socket head cap screw: M10x30 12.9<br/>Gleitmo 603+Geomet 500 (2 pcs)</p>  <p>xx2300000044</p>                               |
| 13 | Tighten the screws.  | Tightening torque: 50 Nm.  |
| 14 | Disconnect the brake release tool.   |  |
| 15 | Perform a leak-down test.  | See <a href="#">Performing a leak-down test on page 196</a> .  |

#### Connecting the motor cables

|   | Action  | Note |
|---|---|------|
| 1 | Put the motor cables in place in the opening. |      |

*Continues on next page*



|   | Action  | Note   |
|---|---|--|
| 2 | Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | Connect the motor cables.<br> <b>Note</b><br>Connect in accordance with the markings on the connectors.  |  |
| 4 | Fit a screw to the power connector.<br> <b>Note</b><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | <p>Tightening torque: 1 Nm</p>  <p>xx2200001736</p>                        |

Continues on next page

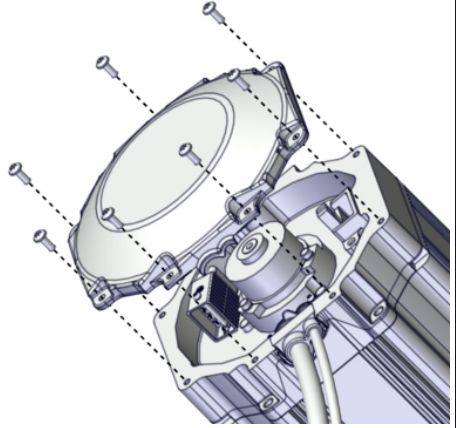
## 5 Repair

### 5.8.2 Replacing the axis-2 motor

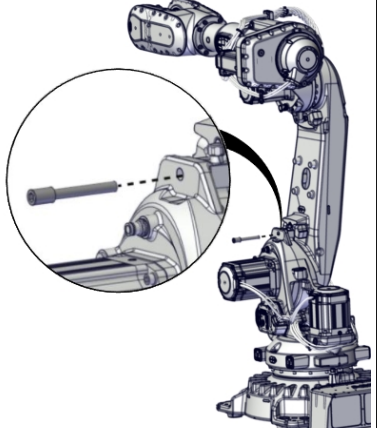

*Continued*

|   | Action   | Note  |
|---|--|---|
| 5 | <p>Inspect the gasket.<br/>Replace the complete cover if the gasket is damaged.</p>  | <p>Axis-1 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)<br/>Axis-2 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)<br/>Axis-3 Connection box cover FS130 with gasket:<br/>3HAC072863-003 (Graphite White)<br/>3HAC072863-005 (ABB Orange)<br/>Axis-4 Connection box cover FS100 with gasket:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 | <p> <b>CAUTION</b></p> <p>When fitting the motor cover, make sure that none of the cables inside will be damaged.</p> |   |

*Continues on next page*

|   | Action  | Note   |
|---|---|--|
| 7 | <p>Refit the motor cover with its attachment screws.</p> <p>Use locking liquid.</p> | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p> <p>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p> <p>Tightening torque: 6 Nm.</p>  <p>xx2100000596</p> |

#### Concluding procedure

|   | Action   | Note  |
|---|--|---|
| 1 | Use caution and jog axis-2 a little to facilitate the removal of the lock screw that secures the lower arm.  |   |
| 2 | Remove the lock screw.   |  <p>xx2100000592</p> |
| 3 | Refill the gearbox with oil.   | See <a href="#">Filling oil into the axis-2 gearbox on page 164</a> .                                     |
| 4 | Re-calibrate the robot.  | See <a href="#">Calibration on page 621</a> .   |
| 5 |  <p><b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |   |

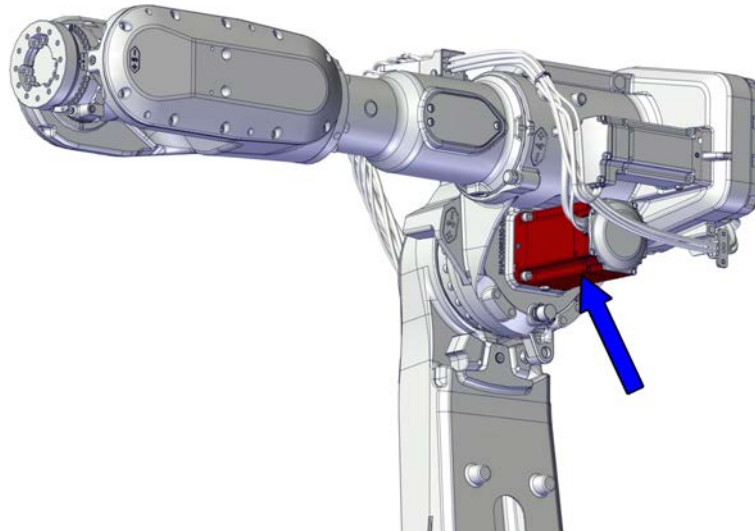
## 5 Repair

### 5.8.3 Replacing the axis-3 motor

### 5.8.3 Replacing the axis-3 motor

#### Location of the motor

The motor is located as shown in the figure.



xx2100000487

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number   | Note | Level |
|------------|--|------|-------|
| Motor unit | 3HAC072174-003<br>(Graphite White)<br>3HAC072174-004<br>(ABB Orange) |      | L2    |

#### Required service parts

| Consumable                             | Article number   | Note  |
|--|--|---|
| Lubricating oil                        | -  | See <a href="#">Type of lubrication in gear-boxes on page 148</a> . |
| Cleaning agent                         | -  | Loctite 7200  |
| Cleaning agent                         | -  | Loctite 7063  |
| Flange sealant                         | -  | Loctite 5800  |
| Connection box cover FS130 with gasket | 3HAC072863-003<br>(Graphite White)<br>3HAC072863-005<br>(ABB Orange) | Replace if damaged.   |

*Continues on next page*

| Consumable     | Article number | Note  |
|----------------|----------------|---|
| O-ring, G 1/2" | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug. |

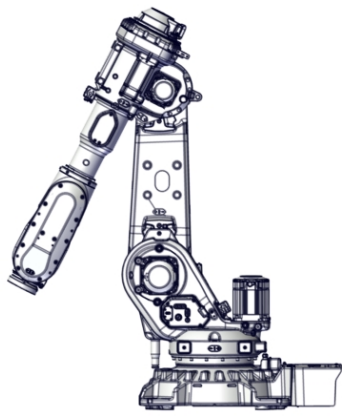
### Required tools and equipment

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Brake release tool                    | 3HAC081310-001   | User instructions are enclosed with the tool.   |
| Rotation tool M4                      | 3HAB7887-1   | Used to rotate the motor pinion. Add screw M4.  |
| Guide pin, M10x150                    | 3HAC15521-2  | Always use guide pins in pairs.   |
| Bits extender                         | 3HAC12342-1  | 300 mm, bits 1/2"   |
| Removal tool motor M12                | 3HAC14631-1  | Used to push out the motor, if necessary.<br>Always use removal tools in pairs.   |
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

### Removing the motor

Use these procedures to remove the motor.

#### Preparations before removing the motor

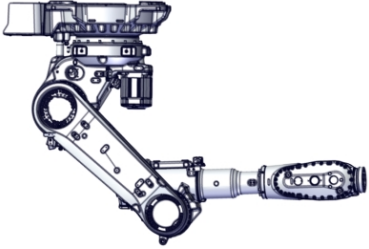

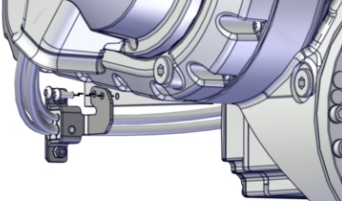
|   | Action  | Note  |
|---|---|---|
| 1 | Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure.  |   |
| 2 | Drain the axis-3 gearbox.   | See <a href="#">Draining the axis-3 gearbox on page 168</a> .   |
| 3 | <b>Floor-mounted robot:</b><br>Unload the upper arm using one of these methods: <ul style="list-style-type: none"> <li>• Use caution and jog axis-3 to maximum + position. Release the brakes and let the upper arm rest against the axis-3 damper. Position shown in figure.</li> <li>• Robot in synchronization position: use a fork lift to rest the upper arm onto.</li> <li>• Robot in synchronization position: use lifting slings and an overhead crane to rest the upper arm onto.</li> </ul> | <br>xx2100002187 |

Continues on next page


## 5 Repair

### 5.8.3 Replacing the axis-3 motor

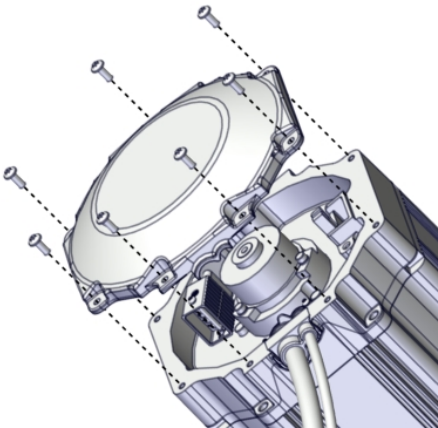
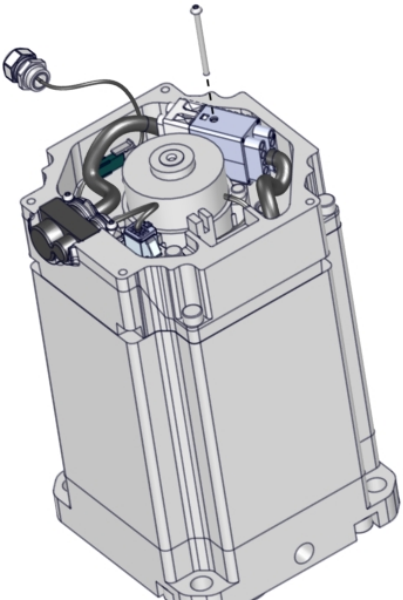
Continued

|   | Action  | Note  |
|---|---|---|
| 4 | <p><i>Option Inverted (3317-1)</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: position that allows best possible access to fit the lifting accessories to the upper arm (170° shown in figure)</li> <li>• Axis 2: -47°</li> <li>• Axis 3: -135° (upper arm horizontal)</li> <li>• Axis 4: 0°</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul> <p>Unload the weight of the upper arm using one of these methods:</p> <ul style="list-style-type: none"> <li>• Use a fork lift to rest the upper arm onto.</li> <li>• Use lifting slings and an overhead crane to rest the upper arm onto.</li> </ul> |  <p>xx2100002137</p>   |
| 5 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safeguarded space.</p>   |   |
| 6 | Remove the cable bracket underneath the arm house.  |  <p>xx2100002154</p> |

#### Disconnecting the motor cables

|   | Action   | Note |
|---|--|------|
| 1 | <p> <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p> |      |

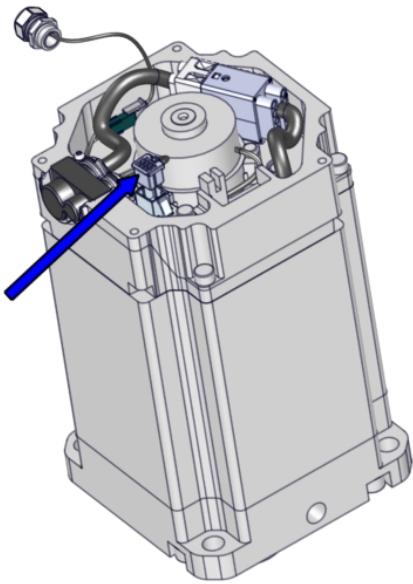
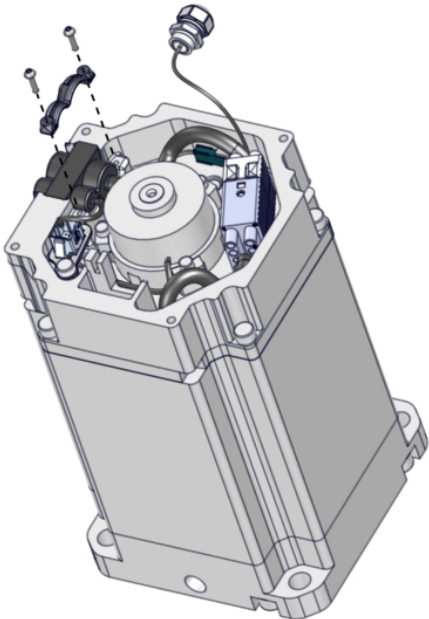
Continues on next page

|   | Action  | Note   |
|---|---|--|
| 2 | Remove the motor cover by removing the screws.  | <br>xx210000596    |
| 3 | Disconnect the power cable connector by first removing the attachment screw and then parting the connector. | <br>xx2200001736 |

Continues on next page

5 Repair

5.8.3 Replacing the axis-3 motor  
Continued





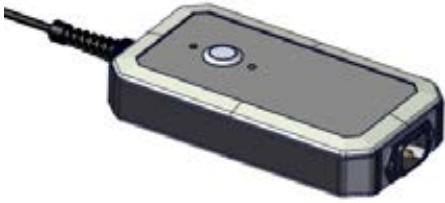
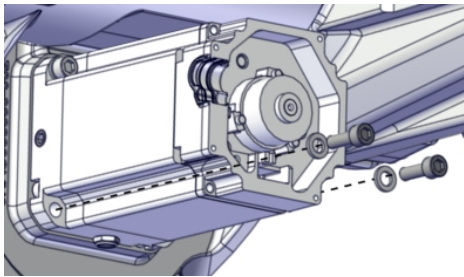
|   | Action   | Note  |
|---|--|---|
| 4 | Disconnect the signal cable connector by pulling it out. | <br><br>xx2200001737  |
| 5 | Remove the cable bracket by removing the screws.         | <br><br>xx2200001738 |
| 6 | Remove the motor cables from the motor.                  |   |

Removing the axis-3 motor

|   | Action   | Note |
|---|--|------|
| 1 | Before removing the motor, make sure that the gearbox is completely drained. |      |

Continues on next page




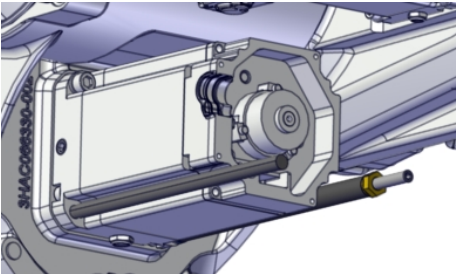
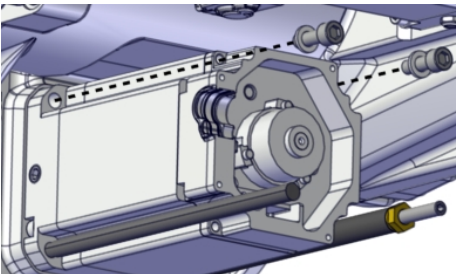



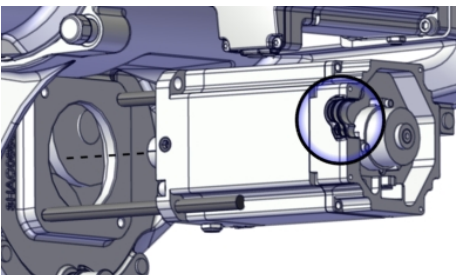
|   | Action   | Note   |
|---|--|--|
| 2 | <p> <b>DANGER</b></p> <p>When releasing the holding brakes of the motor, the upper arm will be movable and falls down if not secured. Verify that the upper arm is secured as previously described, before continuing.</p>  |  |
| 3 | <p>Release the brakes on the motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>CAUTION</b></p> <p>Releasing the brakes on the axis-3 motor results in weight transfer of upper arm weight. Verify that the upper arm rests against the mechanical stop or installed lifting accessories, before releasing the brakes.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001<br/>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 4 | <p>Remove the two lower screws.</p> <p>Use a bits extender in order to reach the screws.</p>   | <p>Bits extender: 3HAC12342-1</p>  <p>xx2300000045</p>   |

Continues on next page

## 5 Repair

### 5.8.3 Replacing the axis-3 motor

Continued




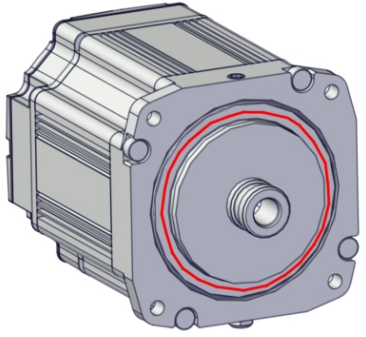
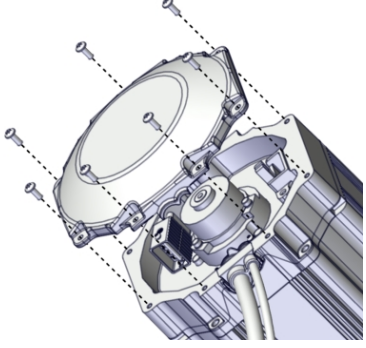
|    | Action   | Note  |
|----|--|---|
| 5  | <p>Fit a guide pin in the non-threaded hole.<br/>Fit a removal tool in the threaded hole.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the motor slide better.</p>                         | <p>Guide pin, M10x150: 3HAC15521-2<br/>Removal tool motor M12: 3HAC14631-1</p>  <p>xx2100002148</p> |
| 6  | <p>Remove the remaining two screws.</p>  |  <p>xx2300000046</p>  |
| 7  | <p>Fit a guide pin in the non-threaded hole.<br/>Fit a removal tool in the threaded hole.</p>  | <p>Guide pin, M10x150: 3HAC15521-2<br/>Removal tool motor M12: 3HAC14631-1</p>  |
| 8  | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gear-box, the gears may be damaged if excessive force is used.</p>  |   |
| 9  | <p>Activate the brake release tool again (release the brakes).</p>   | <p>The power is only applied for 180 seconds after activation.</p>  |
| 10 | <p>Press the motor out of its position by using the removal tools.<br/>Remove the removal tools.</p>   | <p>Used to push out the motor, if necessary.<br/>Always use removal tools in pairs.</p>   |
| 11 | <p> <b>CAUTION</b></p> <p>The weight of the motor is 13 kg</p>  |   |
| 12 | <p>Remove the motor by sliding it out on the guide pins and lift it off.</p> <p> <b>Tip</b></p> <p>Make a note in which direction the cable gland hole is facing. The motor shall be refitted in the same position.</p> |  <p>xx2100002149</p> <p>Make sure the pinion is not damaged.</p>                                  |

Continues on next page

## Refitting the motor

Use these procedures to refit the motor.

## Preparations prior to refitting motor

|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |   |
| 2 | Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.<br><br> <b>Tip</b><br>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface. | Cleaning agent: Loctite 7200, Loctite 7063  |
| 3 | Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.<br><br> <b>Note</b><br>The purpose of the groove is to catch excess sealant. No o-ring is used.  | Flange sealant: Loctite 5800<br><br><br><br>xx2100000520 |
| 4 | Remove the cover, if fitted to the new spare part motor.   | <br><br>xx2100000596                                     |

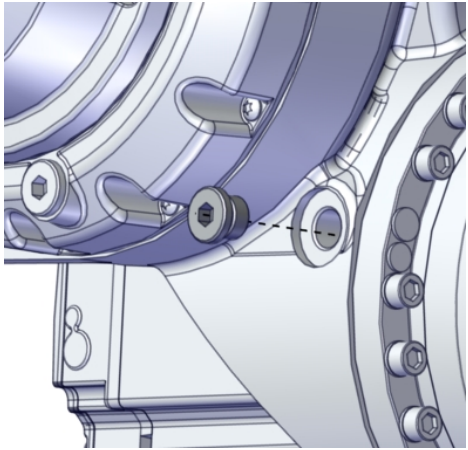
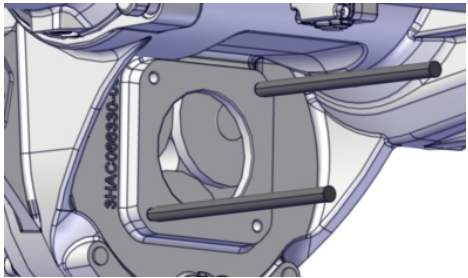


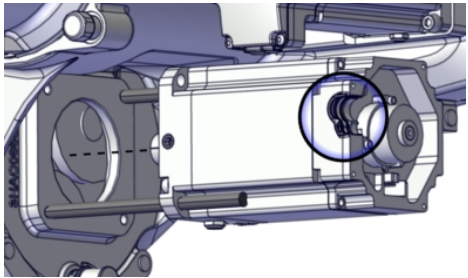
Continues on next page

## 5 Repair



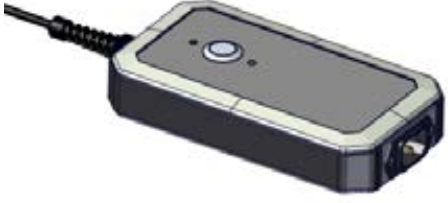

### 5.8.3 Replacing the axis-3 motor

*Continued*

#### Refitting the axis-3 motor

|   | Action  | Note  |
|---|---|---|
| 1 | Remove the plug from the venting hole.<br>This is done to evacuate air during refitting of the motor.   | <br>xx2100002064  |
| 2 | Fit guide pins in opposite holes.   | Guide pin, M10x150: 3HAC15521-2<br>Always use guide pins in pairs.<br><br>xx2100002151 |
| 3 |  <b>CAUTION</b><br>The weight of the motor is 13 kg  |   |
| 4 | Lift the motor and put it on the guide pins as close as possible to its final position without pushing the motor pinion into the gear.<br> <b>Note</b><br>Make sure the cable gland opening is turned the correct way. | <br>xx2100002149  |

*Continues on next page*

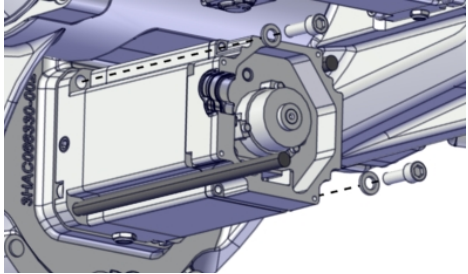
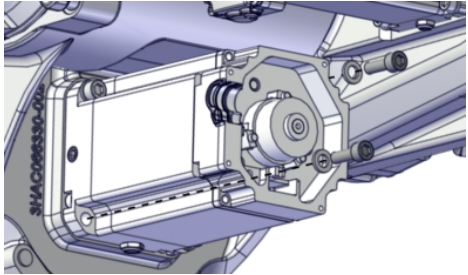
|   | Action   | Note  |
|---|--|---|
| 5 | <p>Release the brakes of the axis-3 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 6 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |   |
| 7 | <p>Apply the rotation tool.</p> <p>Use caution and fit the motor in its final position while at the same time rotating the motor pinion slightly using the rotation tool.</p> <ul style="list-style-type: none"> <li>• Make sure that the motor pinion is properly mated to the gear of the gearbox.</li> <li>• Make sure that the motor pinion does not get damaged.</li> <li>• Make sure that the direction of the cable exit is facing the correct way.</li> </ul>  | <p>Rotation tool M4: 3HAB7887-1</p>   |

Continues on next page

## 5 Repair

### 5.8.3 Replacing the axis-3 motor

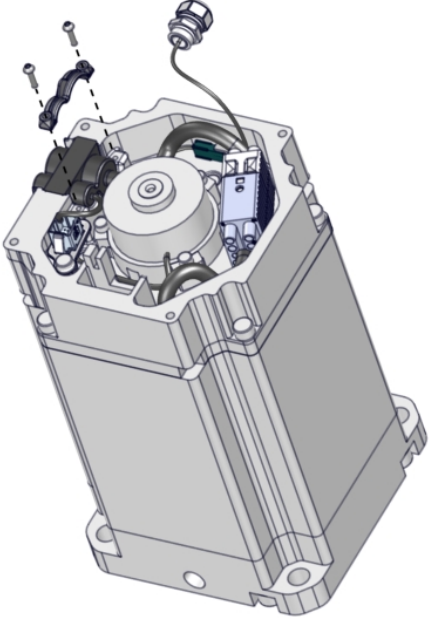


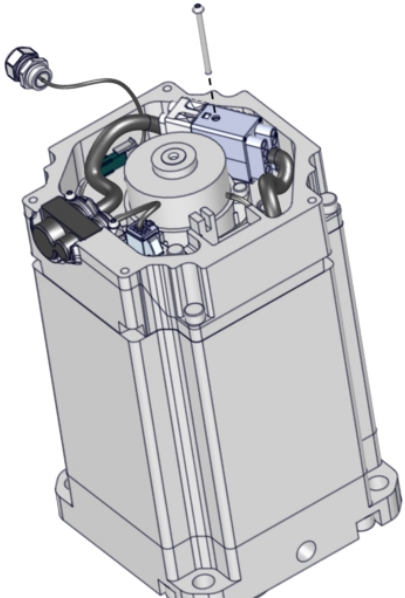
*Continued*

|    | Action   | Note   |
|----|--|--|
| 8  | Fit two of the attachment screws and washers.<br>Use a bits extender in order to reach the screws. | Hex socket head cap screw: M10x30 12.9<br>Gleitmo 603+Geomet 500 (2 pcs)<br>Bits extender: 3HAC12342-1<br><br>xx2100002152 |
| 9  | Remove the guide pins and replace with the remaining attachment screws.                            | Hex socket head cap screw: M10x30 12.9<br>Gleitmo 603+Geomet 500 (2 pcs)<br><br>xx2100002153                              |
| 10 | Tighten the screws.  | Tightening torque: 50 Nm.  |
| 11 | Disconnect the brake release tool.   |  |
| 12 | Perform a leak-down test.  | See <a href="#">Performing a leak-down test on page 196</a> .  |

#### Connecting the motor cables

|   | Action  | Note |
|---|---|------|
| 1 | Put the motor cables in place in the opening. |      |

*Continues on next page*

|   | Action   | Note   |
|---|--|--|
| 2 | Refit the cable bracket with the screws.   | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | <p>Connect the motor cables.</p> <p> <b>Note</b></p> <p>Connect in accordance with the markings on the connectors.</p>  |  |
| 4 | <p>Fit a screw to the power connector.</p> <p> <b>Note</b></p> <p>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p>Tightening torque: 1 Nm</p>  <p>xx2200001736</p>                        |

Continues on next page



## 5 Repair

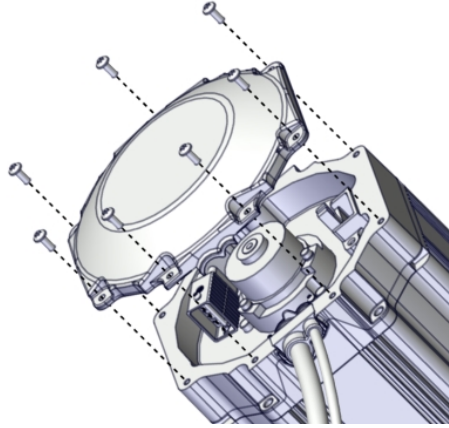
### 5.8.3 Replacing the axis-3 motor

*Continued*

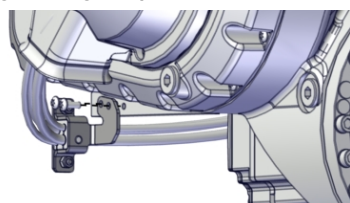
|   | Action  | Note   |
|---|---|--|
| 5 | Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <p>Axis-1 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-2 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-3 Connection box cover FS130 with gasket:<br/>3HAC072863-003 (Graphite White)<br/>3HAC072863-005 (ABB Orange)</p> <p>Axis-4 Connection box cover FS100 with gasket:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |

*Continues on next page*



|   | Action   | Note   |
|---|--|--|
| 7 | Refit the motor cover with its attachment screws.<br>Use locking liquid. | <p>Torx pan head screw: M5x12 Stainless steel A2-70<br/>           Locking liquid: Loctite 2400 (or equivalent Loctite 243)<br/>           Tightening torque: 6 Nm.</p>  <p>xx2100000596</p> |

## Concluding procedure

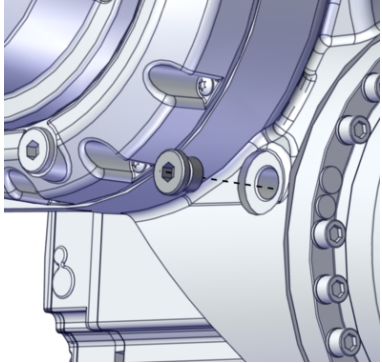

|   | Action   | Note   |
|---|--|--|
| 1 | Remove the equipment used to unload the upper arm. |  |
| 2 | Refit the metal clamp beneath the arm house.       | <p>Torx pan head screw: M6x16 A4-80<br/>           Tightening torque: 10 Nm.</p>  <p>xx2100002154</p> |
| 3 | Refill the gearbox with oil.                       | See <a href="#">Filling oil into the axis-3 gearbox on page 170</a> .  |

Continues on next page

## 5 Repair

### 5.8.3 Replacing the axis-3 motor

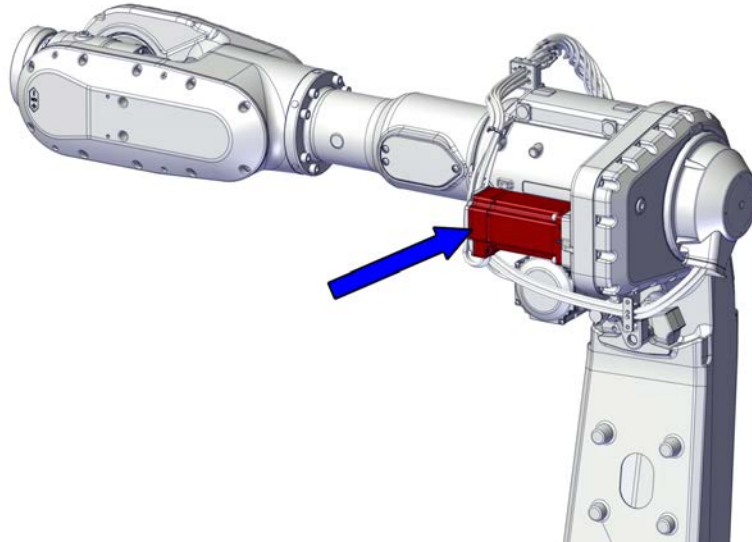
*Continued*

|   | Action   | Note  |
|---|--|---|
| 4 | Refit the oil plug with a new o-ring.  | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100002064</p> |
| 5 | Re-calibrate the robot.  | See <a href="#">Calibration on page 621</a> .   |
| 6 |  <b>DANGER</b><br><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

## 5.8.4 Replacing the axis-4 motor

### Location of the motor

The motor is located as shown in the figure.



xx2100000488

### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number  | Note | Level |
|------------|---|------|-------|
| Motor unit | <b>IRB 5710-110/2.3,<br/>IRB 5710-90/2.3</b><br><b>LID:</b><br>3HAC072255-003<br>(Graphite White)<br>3HAC072255-004<br>(ABB Orange)<br><b>IRB 5710-90/2.7,<br/>IRB 5710-70/2.7</b><br><b>LID:</b><br>3HAC070735-003<br>(Graphite White)<br>3HAC070735-004<br>(ABB Orange) |      | L2    |

### Required service parts

| Consumable     | Article number | Note         |
|----------------|----------------|--------------|
| Cleaning agent | -              | Loctite 7200 |

*Continues on next page*

## 5 Repair

### 5.8.4 Replacing the axis-4 motor

*Continued*

| Consumable                             | Article number   | Note                |
|--|--|---------------------|
| Cleaning agent                         | -  | Loctite 7063        |
| Flange sealant                         | -  | Loctite 5800        |
| Connection box cover FS100 with gasket | 3HAC072862-003 (Graphite White)<br>3HAC072862-005 (ABB Orange) | Replace if damaged. |

#### Required tools and equipment

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Brake release tool                    | 3HAC081310-001   | User instructions are enclosed with the tool.   |
| Guide pin, M8x150                     | 3HAC15520-2  | Always use guide pins in pairs.   |
| Bits extender                         | 3HAC12342-1  | 300 mm, bits 1/2"   |
| Removal tool motor M10                | 3HAC14972-1  | Used to push out the motor, if necessary.   |
| Rotation tool M4                      | 3HAB7887-1   | Used to rotate the motor pinion. Add screw M4.  |
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

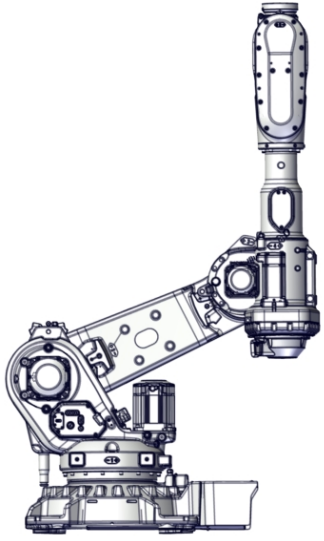
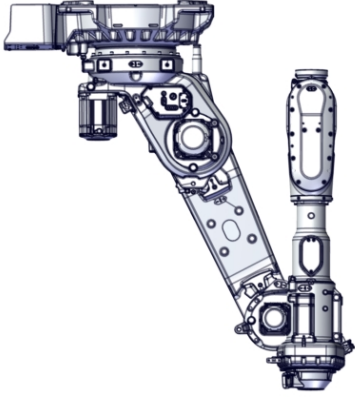

#### Removing the motor

Use these procedures to remove the motor.

#### Preparations before removing the motor

|   | Action   | Note |
|---|--|------|
| 1 | Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure. |      |

*Continues on next page*


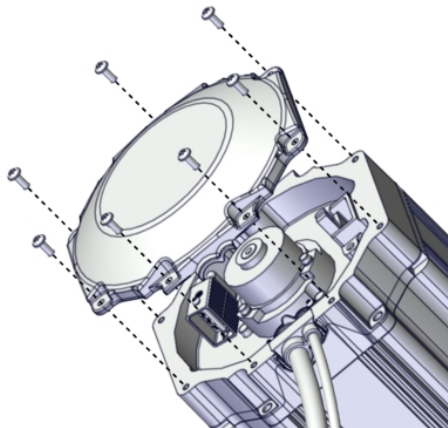
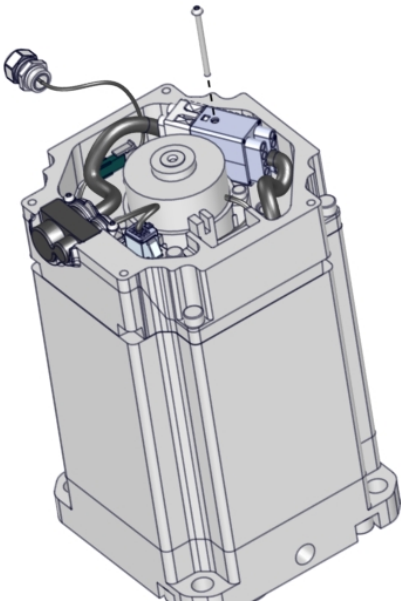
|   | Action   | Note   |
|---|--|--|
| 2 | <p><b>Floor-mounted robot:</b></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: -65°</li> <li>• Axis 3: upper arm pointing straight up (if possible).</li> <li>• Axis 4: no significance</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul> <p>With the robot in this position, there is no need to drain oil from the axis-4 gearbox when the motor is replaced.</p>                   |  <p>xx2100002188</p>  |
| 3 | <p><b>Option Inverted (3317-1)</b></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: approximately +30°</li> <li>• Axis 3: upper arm pointing straight up (if possible).</li> <li>• Axis 4: no significance</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul> <p>With the robot in this position, there is no need to drain oil from the axis-4 gearbox when the motor is replaced.</p> |  <p>xx2100002200</p> |
| 4 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safeguarded space.</p>  |  |
| 5 | If there is no space to position the upper arm pointed straight up, drain the axis-4 gearbox.  | See <a href="#">Draining the axis-4 gearbox on page 173</a> .  |

Continues on next page

5 Repair

5.8.4 Replacing the axis-4 motor  
Continued

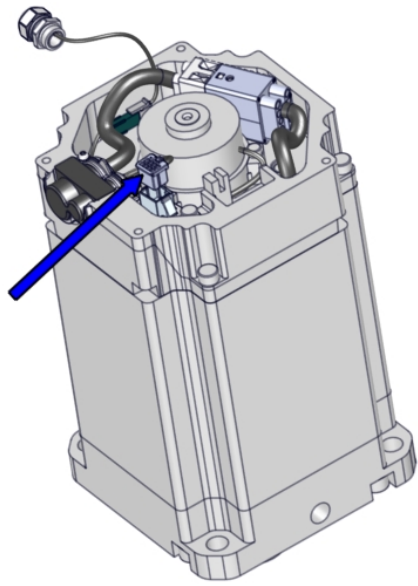
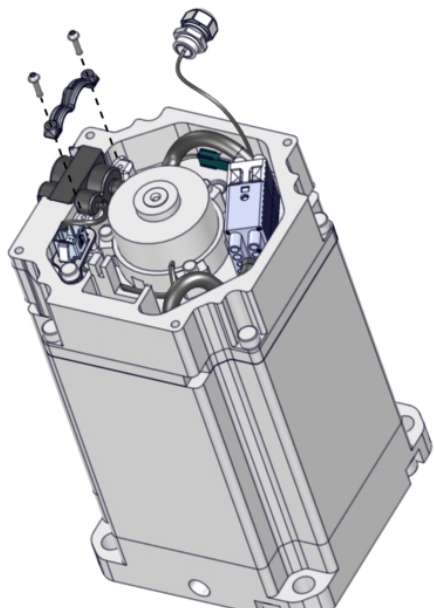
Disconnecting the motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Remove the motor cover by removing the screws.  | <br><br>xx2100000596  |
| 3 | Disconnect the power cable connector by first removing the attachment screw and then parting the connector.   | <br><br>xx2200001736 |


Continues on next page

## 5.8.4 Replacing the axis-4 motor

*Continued*

|   | Action   | Note  |
|---|--|---|
| 4 | Disconnect the signal cable connector by pulling it out. |  <p>xx2200001737</p> |
| 5 | Remove the cable bracket by removing the screws.         |  <p>xx2200001738</p> |
| 6 | Remove the motor cables from the motor.                  |   |

## Removing the axis-4 motor

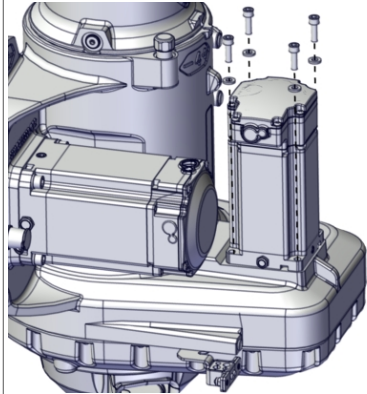
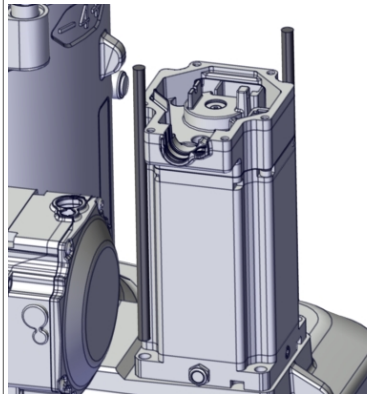
|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |      |

*Continues on next page*

## 5 Repair




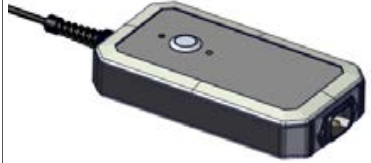


### 5.8.4 Replacing the axis-4 motor

*Continued*

|   | Action                                    | Note   |
|---|---|--|
| 2 | Remove the motor attachment screws.       | <br>xx2100002155                                    |
| 3 | Fit guide pins in the non-threaded holes. | Guide pin, M8x150: 3HAC15520-2<br><br>xx2100002156 |
| 4 | Fit removal tools in the threaded holes.  | Removal tool motor M10:<br>3HAC14972-1   |

*Continues on next page*



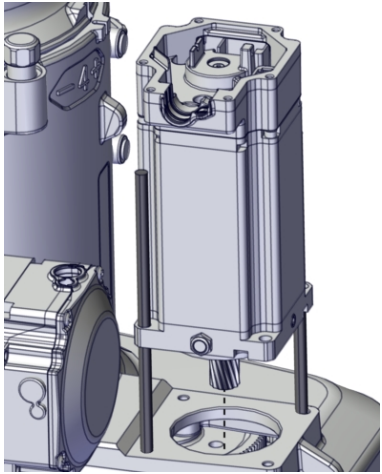
|   | Action  | Note   |
|---|---|--|
| 5 | <p>Release the brakes on the motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>CAUTION</b></p> <p>Releasing the brakes on the axis-4 motor may cause axis-4 to move unexpectedly.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 6 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>  |  |
| 7 | <p>Press the motor out of its position by using the removal tools.</p>  |  |
| 8 | <p> <b>CAUTION</b></p> <p>The weight of the motor is 7 kg</p>  |  |

Continues on next page

## 5 Repair

### 5.8.4 Replacing the axis-4 motor




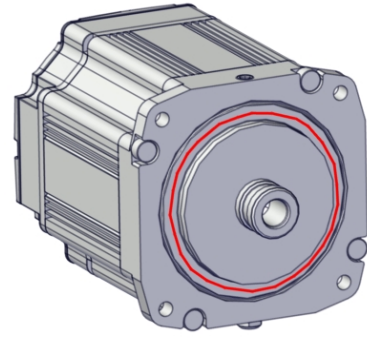
*Continued*

|   | Action  | Note  |
|---|---|---|
| 9 | Remove the motor by lifting it straight out. Make sure the pinion is not damaged. | <br>xx2100002157 |

### Refitting the motor

Use these procedures to refit the motor.

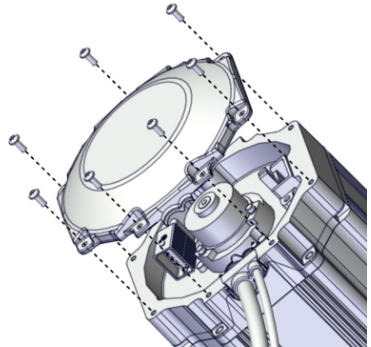
#### Preparations prior to refitting motor

|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |   |
| 2 | Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.<br><br> <b>Tip</b><br>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface. | Cleaning agent: Loctite 7200, Loctite 7063  |
| 3 | Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.<br><br> <b>Note</b><br>The purpose of the groove is to catch excess sealant. No o-ring is used.  | Flange sealant: Loctite 5800<br><br><br>xx2100000520 |

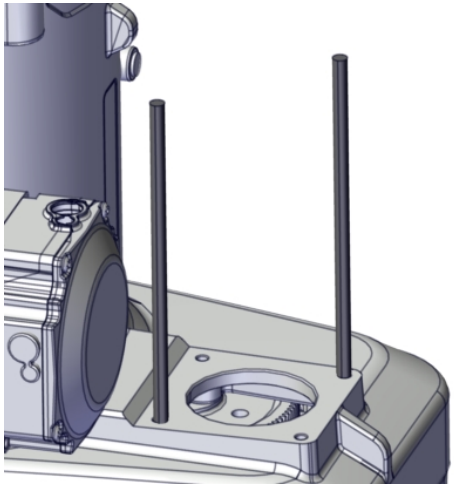

*Continues on next page*

### 5.8.4 Replacing the axis-4 motor

*Continued*

|   | Action   | Note  |
|---|--|---|
| 4 | Remove the cover, if fitted to the new spare part motor. | <br>xx2100000596 |

#### Refitting the axis-4 motor



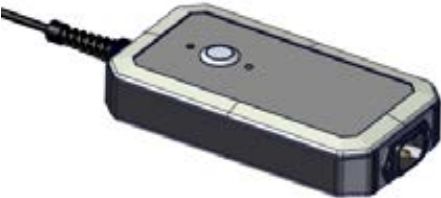

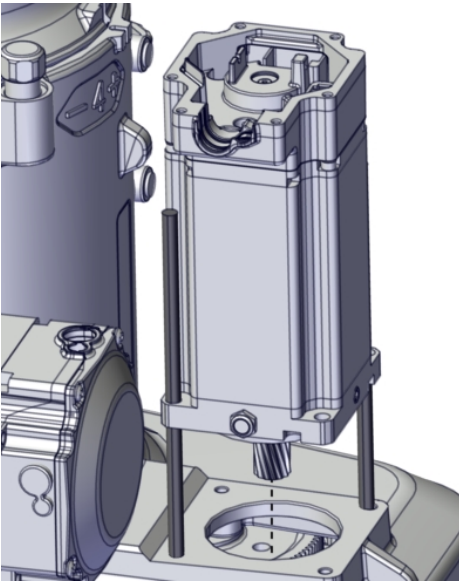

|   | Action  | Note  |
|---|---|---|
| 1 | Fit guide pins in opposite holes.   | Guide pin, M8x150: 3HAC15520-2<br>Always use guide pins in pairs. <br>xx2100002201 |
| 2 |  <b>CAUTION</b><br>The weight of the motor is 7 kg |   |
| 3 | Apply the rotation tool.  | Rotation tool M4: 3HAB7887-1  |

*Continues on next page*

## 5 Repair

### 5.8.4 Replacing the axis-4 motor

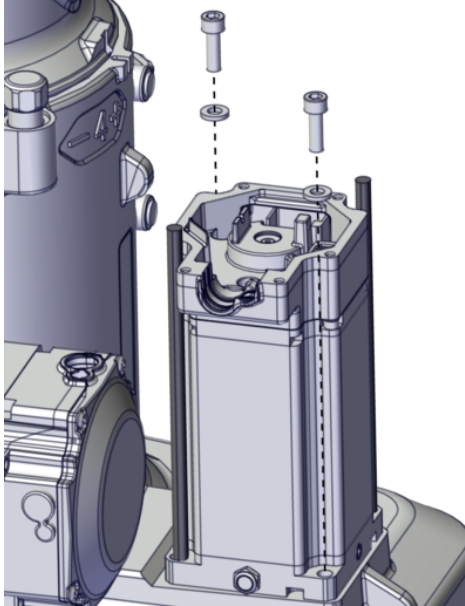
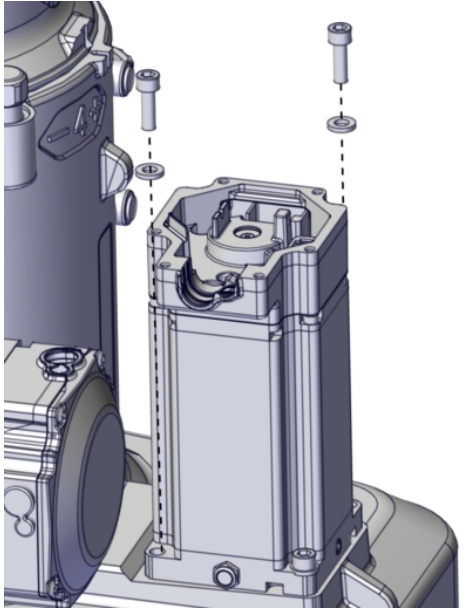
Continued

|   | Action   | Note  |
|---|--|---|
| 4 | <p>Release the brakes of the axis-4 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 5 | <p>Lift the motor and put it on the guide pins as close as possible to its final position without pushing the motor pinion into the gear.</p> <p>Use caution and fit the motor in its final position while at the same time rotating the motor pinion slightly using the rotation tool.</p> <ul style="list-style-type: none"> <li>• Make sure that the motor pinion is properly mated to the gear of the gearbox.</li> <li>• Make sure that the motor pinion does not get damaged.</li> <li>• Make sure that the direction of the cable exit is facing the correct way.</li> </ul> <p> <b>Note</b></p> <p>Make sure the cable gland opening is turned the correct way.</p>   |  <p>xx2100002157</p>  |
| 6 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |   |

Continues on next page

## 5.8.4 Replacing the axis-4 motor

*Continued*

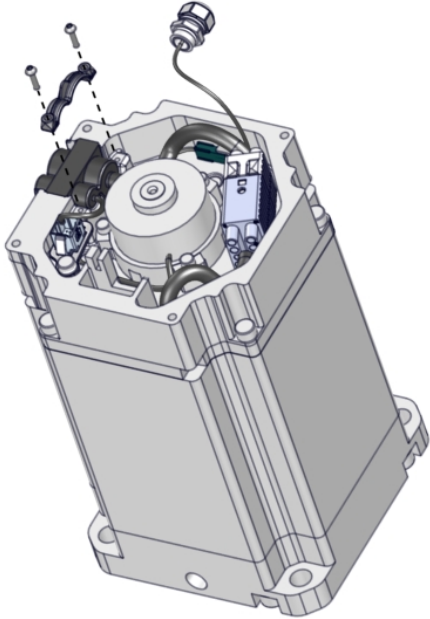

|    | Action   | Note   |
|----|--|--|
| 7  | Fit two of the attachment screws and washers.<br>Use a bits extender in order to reach the screws. | Hex socket head cap screw: M8x25 12.9<br>Gleitmo 603+Geomet 500 (2 pcs)<br>Bits extender: 3HAC12342-1<br><br>xx2100002212 |
| 8  | Remove the guide pins and replace with the remaining attachment screws.                            | Hex socket head cap screw: M8x25 12.9<br>Gleitmo 603+Geomet 500 (2 pcs)<br><br>xx2100002213                              |
| 9  | Tighten the screws.  | Tightening torque: 24 Nm.  |
| 10 | Disconnect the brake release tool.   |  |
| 11 | Perform a leak-down test.  | See <a href="#">Performing a leak-down test on page 196</a> .  |

*Continues on next page*


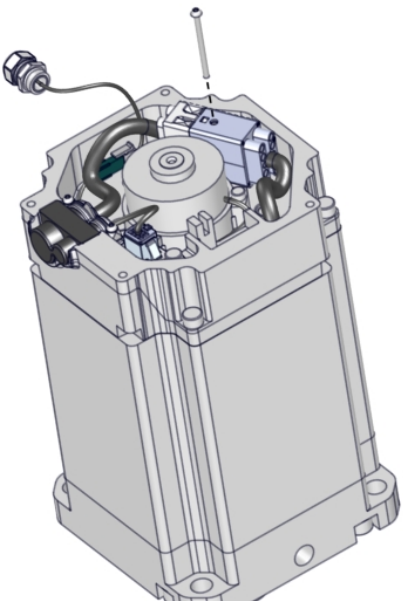
# 5 Repair

## 5.8.4 Replacing the axis-4 motor Continued

### Connecting the motor cables

|   | Action  | Note  |
|---|---|---|
| 1 | Put the motor cables in place in the opening.   |   |
| 2 | Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | <p>Connect the motor cables.</p> <div> <b>Note</b></div> <p>Connect in accordance with the markings on the connectors.</p> |   |

Continues on next page

|   | Action   | Note  |
|---|--|---|
| 4 | <p data-bbox="499 315 890 342">Fit a screw to the power connector.</p> <div data-bbox="499 360 560 416"></div> <p data-bbox="587 376 646 400">Note</p> <p data-bbox="499 432 962 672">The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p data-bbox="975 315 1244 342">Tightening torque: 1 Nm</p> <div data-bbox="1002 360 1406 958"></div> <p data-bbox="975 969 1082 985">xx2200001736</p> |

Continues on next page

## 5 Repair

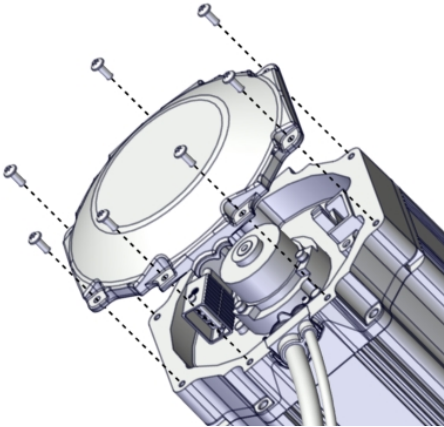
### 5.8.4 Replacing the axis-4 motor

*Continued*


|   | Action  | Note   |
|---|---|--|
| 5 | Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <p>Axis-1 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-2 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-3 Connection box cover FS130 with gasket:<br/>3HAC072863-003 (Graphite White)<br/>3HAC072863-005 (ABB Orange)</p> <p>Axis-4 Connection box cover FS100 with gasket:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |

*Continues on next page*



|   | Action  | Note   |
|---|---|--|
| 7 | <p>Refit the motor cover with its attachment screws.</p> <p>Use locking liquid.</p> | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p> <p>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p> <p>Tightening torque: 6 Nm.</p>  <p>xx2100000596</p> |

## Concluding procedure

|   | Action   | Note  |
|---|--|---|
| 1 | Refill the gearbox with oil, if drained.   | See <a href="#">Filling oil into the axis-4 gearbox on page 175</a> . |
| 2 | Re-calibrate the robot.  | See <a href="#">Calibration on page 621</a> .                         |
| 3 |  <p><b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |   |

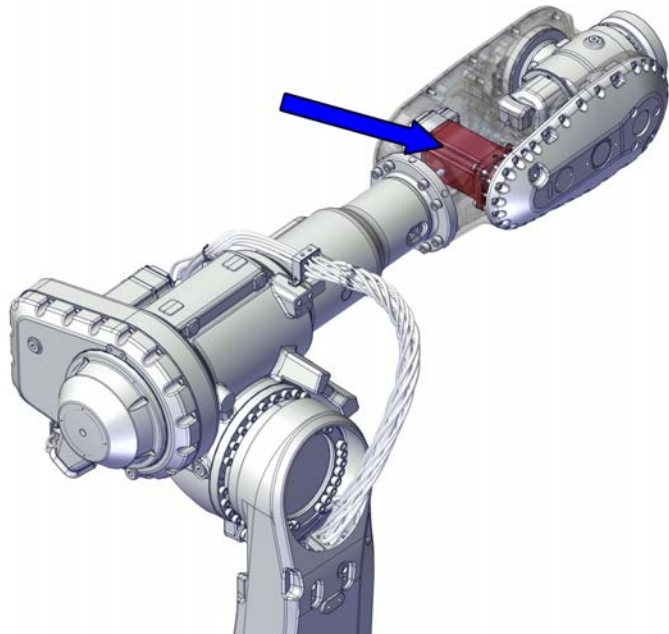
5 Repair

5.8.5 Replacing the axis-5 motor

5.8.5 Replacing the axis-5 motor

Location of the motor

The motor is located as shown in the figure.



xx2100000489

Required spare parts



Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number  | Note | Level |
|------------|---|------|-------|
| Motor unit | IRB 5710-110/2.3,<br>IRB 5710-90/2.3<br>LID:<br>3HAC070735-005<br>IRB 5710-90/2.7,<br>IRB 5710-70/2.7<br>LID:<br>3HAC071189-003 |      | L2    |

Required service parts

| Consumable     | Article number | Note         |
|----------------|----------------|--------------|
| Cleaning agent | -              | Loctite 7200 |
| Cleaning agent | -              | Loctite 7063 |
| Flange sealant | -              | Loctite 5800 |

Continues on next page

| Consumable                        | Article number  | Note                |
|-----------------------------------|---|---------------------|
| Connection box MT080X with gasket | IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>3HAC072859-003 (Graphite White)<br>3HAC072859-004 (ABB Orange)   | Replace if damaged. |
| Connection box cover with gasket  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br>3HAC072862-003 (Graphite White)<br>3HAC072862-005 (ABB Orange)<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>3HAC072861-003 (Graphite White)<br>3HAC072861-004 (ABB Orange) | Replace if damaged. |
| Cable strap, outdoor              | -   |                     |

## Required tools and equipment

| Equipment  | Article number   | Note  |
|--|--|---|
| Brake release tool   | 3HAC081310-001   | User instructions are enclosed with the tool.   |
| IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br>Guide pin, M8x150<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>Guide pin, M6x150          | IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br>3HAC15520-2<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>3HAC080345-001 | Always use guide pins in pairs.   |
| Bits extender  | 3HAC12342-1  | 300 mm, bits 1/2"   |
| IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br>Removal tool motor M10<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>Removal tool motor M8 | IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br>3HAC14972-1<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>3HAC080346-001 | Used to push out the motor, if necessary.   |
| Rotation tool M4   | 3HAB7887-1   | Used to rotate the motor pinion. Add screw M4.  |
| Calibration toolbox, Axis Calibration  | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6)   | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit   | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

## Removing the motor

Use these procedures to remove the motor.

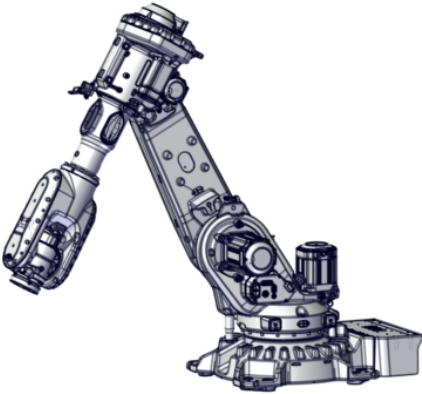
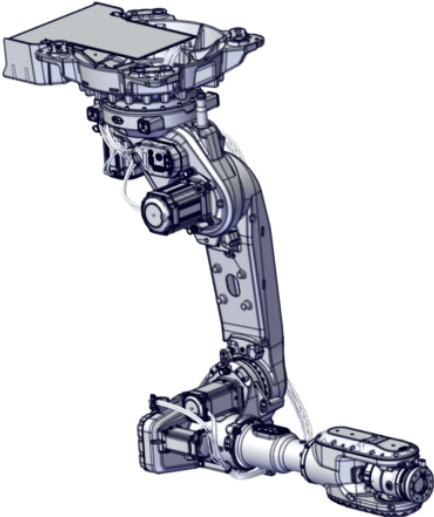

*Continues on next page*

## 5 Repair

### 5.8.5 Replacing the axis-5 motor

*Continued*



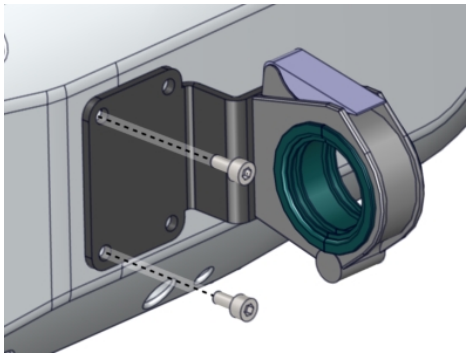
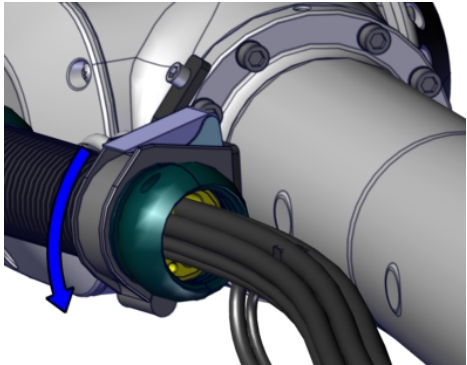
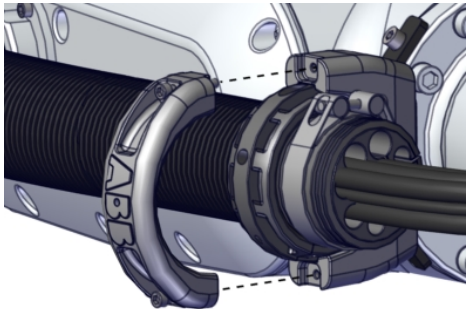
#### Preparations before removing the axis-5 motor

|   | Action   | Note  |
|---|--|---|
| 1 | Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure.   |   |
| 2 | <p><i>Floor-mounted robot:</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: suitable working position to replace axis-5 motor (for example: +25°)</li> <li>• Axis 3: suitable working position to replace axis-5 motor (for example: +35°)</li> <li>• Axis 4: +90°</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul> <p>With the robot in this position, there is no need to drain oil from the axis-5 gearbox when the motor is replaced.</p> |  <p>xx2100002202</p>  |
| 3 | <p><i>Option Inverted (3317-1)</i></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: 0°</li> <li>• Axis 3: suitable working position to replace axis-5 motor (for example: +0°)</li> <li>• Axis 4: -90°</li> <li>• Axis 5: no significance</li> <li>• Axis 6: no significance</li> </ul> <p>With the robot in this position, there is no need to drain oil from the axis-5 gearbox when the motor is replaced.</p>   |  <p>xx2100002203</p> |
| 4 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p>   |   |

*Continues on next page*

## Retrieving access to the wrist cabling

Use this procedure to remove the wrist cover.

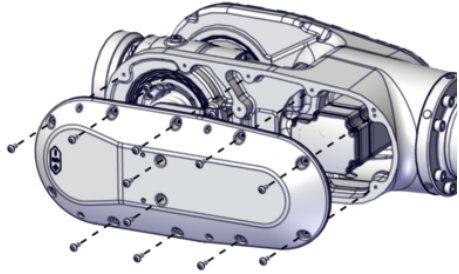
| Action  | Note   |
|---|--|
| <p>1</p>  <p><b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p>   |  |
| <p>2</p> <p>If DressPack MH3 is installed:<br/>Remove the wrist bracket with the complete ball joint housing still fitted, if the bracket is installed over the two wrist cover screws.</p>  <p><b>Note</b></p> <p>No need to remove the bracket if the two wrist cover screws are accessible.</p> |  <p>xx2300001366</p>   |
| <p>3</p> <p>If DressPack is installed:<br/>Open the ball joint housing on the arm tube and remove the DressPack cable package.</p>  | <p>IRB 5710-70/2.7 LID</p>  <p>xx2100002733</p> <p>IRB 5710-90/2.3 LID:</p>  <p>xx2100002709</p> |

Continues on next page


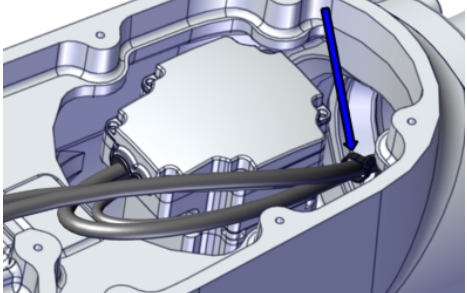
## 5 Repair

### 5.8.5 Replacing the axis-5 motor

*Continued*

|   | Action                  | Note   |
|---|-------------------------|--|
| 4 | Remove the wrist cover. | <br>xx2000000373 |

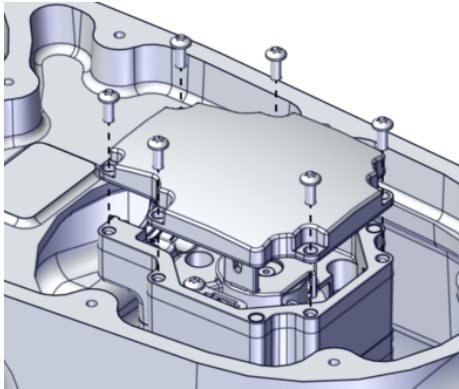
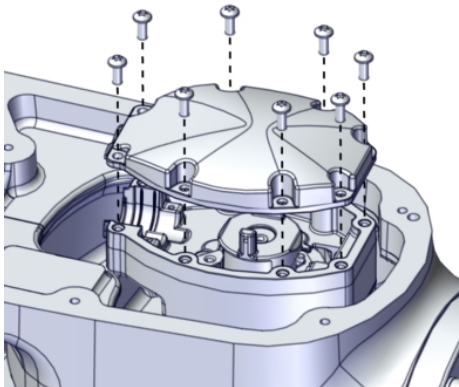
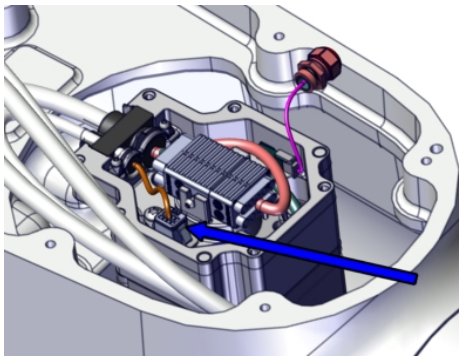
#### Disconnecting the axis-5 motor cables

|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |   |
| 2 | Cut the cable tie.  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br><br>xx2100002630 |

*Continues on next page*

## 5.8.5 Replacing the axis-5 motor

*Continued*

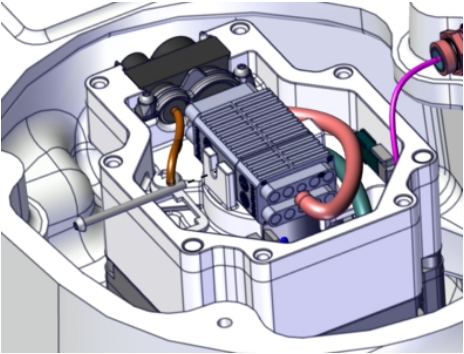
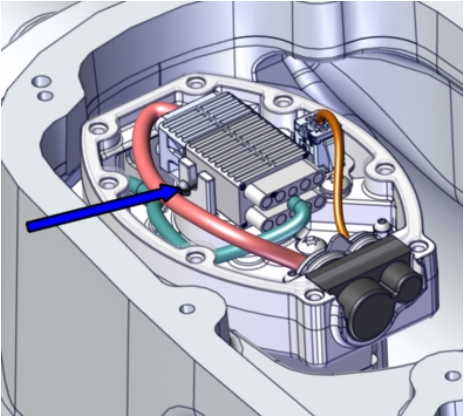
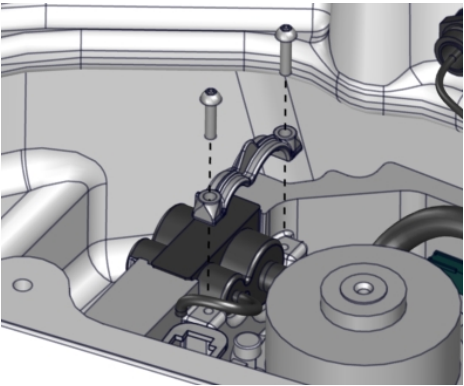
| Action   | Note  |
|--|---|
| 3 Remove the motor cover by removing the screws. | <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2100002494</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2100002315</p> |
| 4 Disconnect the signal cable connector.         |  <p>xx2200001977</p>  |

*Continues on next page*




5 Repair

5.8.5 Replacing the axis-5 motor  
Continued

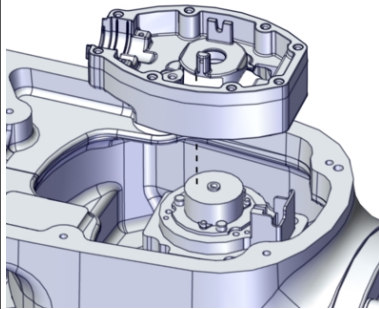
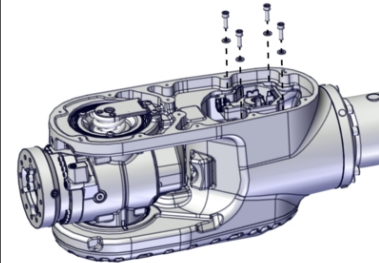
| Action   | Note   |
|--|--|
| 5 Disconnect the power cable connector by removing the attachment screw. | <div>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br/></div> <div>xx2200001978<br/>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br/></div> <div>xx2200001979</div> |
| 6 Remove the cable bracket by removing the screws.                       | <br>xx2200001735   |
| 7 Remove the motor cables.   |  |

Removing the axis-5 motor

| Action  | Note |
|---|------|
| 1  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |      |

Continues on next page





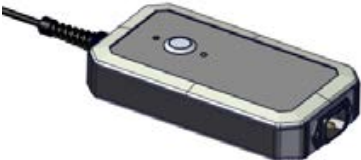


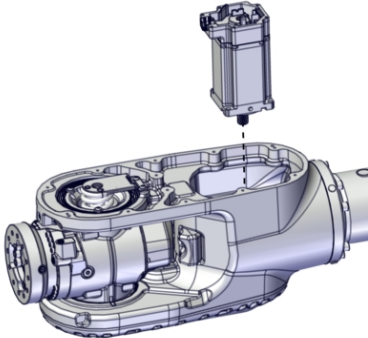
|   | Action  | Note   |
|---|---|--|
| 2 | IRB 5710-90/2.7, IRB 5710-70/2.7 LID<br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br>Remove the connection box. | <br>xx2100002316  |
| 3 | Unscrew the attachment screws that secure the motor, using a bits extender.                                 | Bits extender: 3HAC12342-1<br><br>xx2100002204   |
| 4 | Fit guide pins in the non-threaded holes.   | : Robot.Motors.Axis5.GuidePin.Art-<br>icleNumber<br><b>IRB 5710-110/2.3, IRB 5710-90/2.3</b><br><b>LID:</b><br>Guide pin, M8x150<br><b>IRB 5710-90/2.7, IRB 5710-70/2.7</b><br><b>LID:</b><br>Guide pin, M6x150  |
| 5 | Fit removal tools in the threaded holes.  | <b>IRB 5710-110/2.3, IRB 5710-90/2.3</b><br><b>LID:</b><br>Removal tool motor M10<br><b>IRB 5710-90/2.7, IRB 5710-70/2.7</b><br><b>LID:</b><br>Removal tool motor M8<br><b>IRB 5710-110/2.3, IRB 5710-90/2.3</b><br><b>LID:</b><br>3HAC14972-1<br><b>IRB 5710-90/2.7, IRB 5710-70/2.7</b><br><b>LID:</b><br>3HAC080346-001 |

*Continues on next page*

## 5 Repair

### 5.8.5 Replacing the axis-5 motor

*Continued*




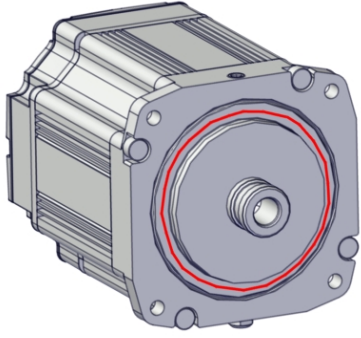
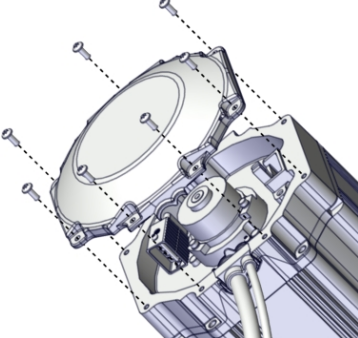
|    | Action  | Note   |
|----|---|--|
| 6  | <p>Release the brakes on the motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 7  | <p> <b>CAUTION</b></p> <p>The weight of the motor is<br/>           IRB 5710-110/2.3, IRB 5710-90/2.3 LID: 6 kg<br/>           IRB 5710-90/2.7, IRB 5710-70/2.7 LID: 4 kg</p>  |  |
| 8  | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>  |  |
| 9  | Press the motor out of its position by using the removal tools.   | Used to push out the motor, if necessary.  |
| 10 | <p>Remove the motor by carefully lifting it straight out/straight up.</p> <p>Make sure the pinion is not damaged.</p>   |  <p>xx2100002205</p>  |

### Refitting the motor

Use these procedures to refit the motor.

*Continues on next page*

## Preparations prior to refitting motor

|   | Action   | Note   |
|---|--|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |  |
| 2 | Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.<br><br> <b>Tip</b><br>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface. | Cleaning agent: Loctite 7200, Loctite 7063   |
| 3 | Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.<br><br> <b>Note</b><br>The purpose of the groove is to catch excess sealant. No o-ring is used.   | Flange sealant: Loctite 5800<br><br><br>xx2100000520 |
| 4 | Remove the cover, if fitted to the new spare part motor.   | <br>xx2100000596                                    |




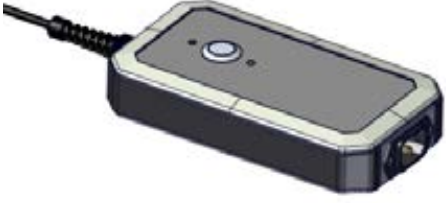

Continues on next page

## 5 Repair

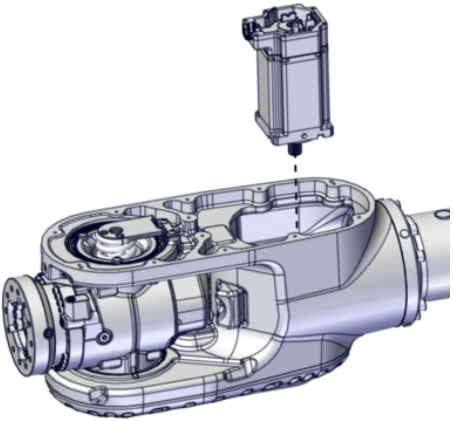
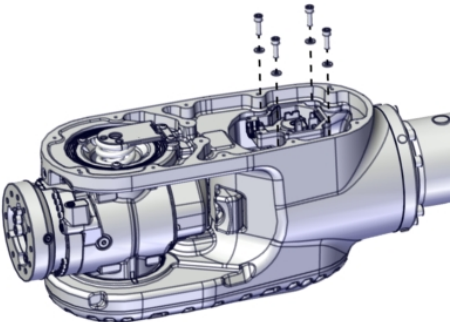
### 5.8.5 Replacing the axis-5 motor

*Continued*

#### Refitting the axis-5 motor

|   | Action  | Note  |
|---|---|---|
| 1 | Apply two guide pins in opposite holes.   | IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br>Guide pin, M8x150<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>Guide pin, M6x150<br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br>3HAC15520-2<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br>3HAC080345-001 |
| 2 |  <b>CAUTION</b><br><br>Whenever parting/mating motor and gear-box, the gears may be damaged if excessive force is used.  |   |
| 3 | Apply the rotation tool and use it to rotate the pinion when mating it into the gear.   | Rotation tool M4: 3HAB7887-1  |
| 4 | Release the brakes on the motor with the brake release tool. <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> The power for brake release is only applied for 180 seconds after activation.<br><br> <b>DANGER</b><br><br>Handling the tool incorrectly will cause serious injury.<br>Read and follow enclosed user instructions for the tool.<br><br> <b>WARNING</b><br><br>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk. | Brake release tool: 3HAC081310-001<br>User instructions are enclosed with the tool. <br><br>xx2100000666  |
| 5 |  <b>CAUTION</b><br><br>The weight of the motor is<br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID: 6 kg<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID: 4 kg   |   |

*Continues on next page*

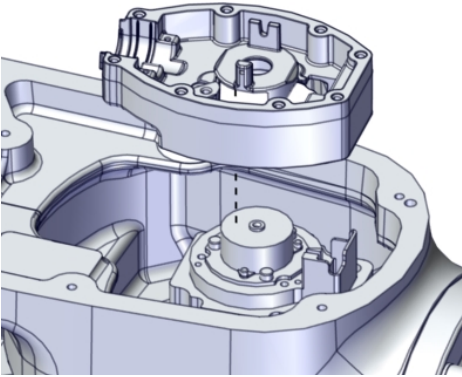
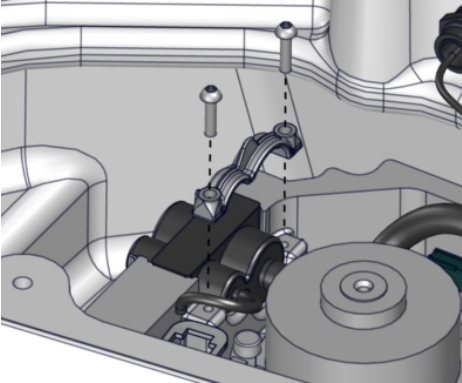
|    | Action  | Note   |
|----|---|--|
| 6  | <p>Use caution and lower the motor into position on the guide pins, while at the same time rotating the motor pinion slightly.</p> <p>Make sure that:</p> <ul style="list-style-type: none"> <li>the motor pinion is properly mated to the gear of the gearbox.</li> <li>the motor pinion does not get damaged.</li> <li>the direction of the cable exit is facing the same way as before removal.</li> </ul> | <p>Rotation tool M4, 3HAB7887-1</p>  <p>xx2100002205</p>   |
| 7  | Remove the guide pins.  |  |
| 8  | Secure the motor with its attachment screws and washers.  | <p>Hex socket head cap screw: (4)<br/> <b>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</b><br/> M8x25 12.9 Gleitmo 603+Geomet 500<br/> <b>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</b><br/> M6x25 12.9 Gleitmo 603+Geomet 500<br/> Tightening torque: 24 Nm.</p>  <p>xx2100002204</p> |
| 9  | Perform a leak-down test.   | See <a href="#">Performing a leak-down test on page 196</a> .  |
| 10 | Disconnect the brake release tool.  |  |

*Continues on next page*


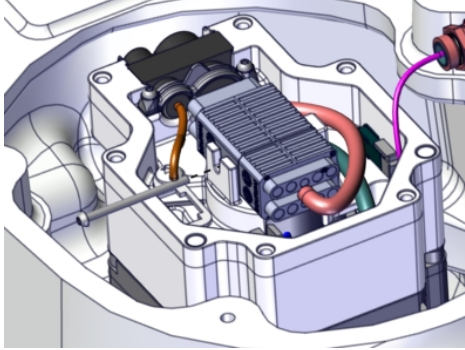
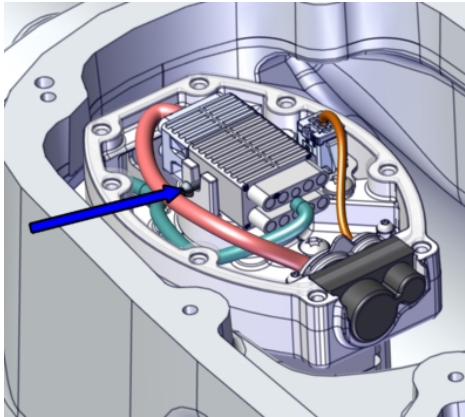
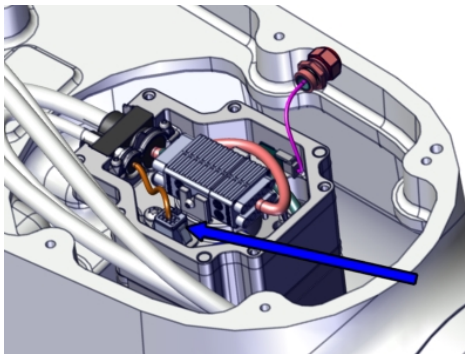
5 Repair

5.8.5 Replacing the axis-5 motor  
Continued

Connecting the axis-5 motor cables

|   | Action  | Note  |
|---|---|---|
| 1 | IRB 5710-90/2.7, IRB 5710-70/2.7 LID<br>Refit the connection box with the screws. | <br>xx2100002316  |
| 2 | Put the motor cables in place in the opening.                                     |   |
| 3 | Refit the cable bracket with the screws.  | Torx pan head screw: M3x12 Stainless steel A2-70<br><br>xx2200001735 |

Continues on next page

|   | Action   | Note  |
|---|--|---|
| 4 | <p>Connect the power cable connector and secure with a screw.<br/>Connect in accordance with the markings on the connectors.</p> <p> <b>Note</b></p> <p>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p>Tightening torque: 1 Nm<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2200001978</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2200001979</p> |
| 5 | <p>Connect the signal cable connector.<br/>Connect in accordance with the markings on the connectors.</p>  |  <p>xx2200001977</p>  |

Continues on next page

## 5 Repair

### 5.8.5 Replacing the axis-5 motor

*Continued*

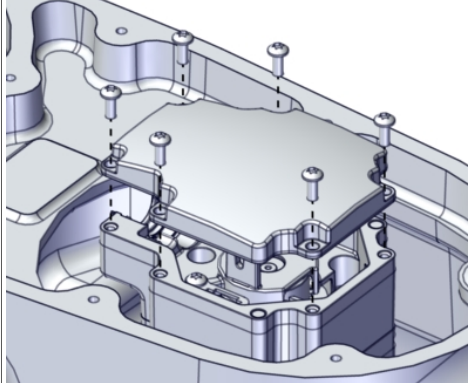
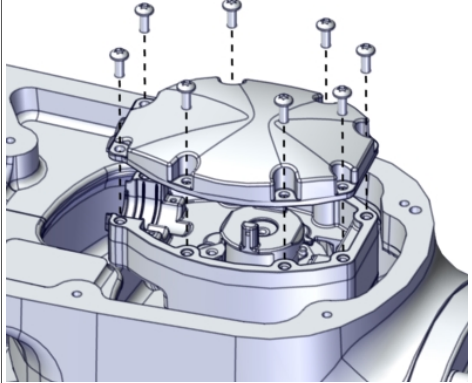
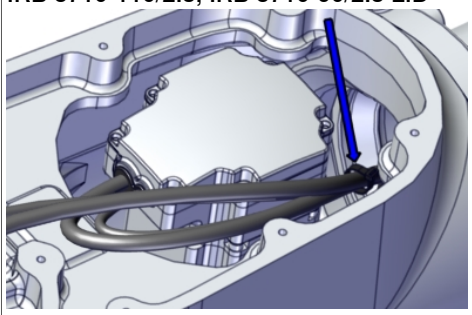
|   | Action  | Note  |
|---|---|---|
| 6 | Inspect the gasket.<br>Replace if damaged.  | <p>Connection box cover with gasket:<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)<br/>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br/>3HAC072861-003 (Graphite White)<br/>3HAC072861-004 (ABB Orange)</p>  <p>xx2100002317</p> |
| 7 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |   |

*Continues on next page*



## 5.8.5 Replacing the axis-5 motor

*Continued*

|   | Action  | Note  |
|---|---|---|
| 8 | IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br>Refit the motor cover with its attachment screws.<br>Use locking liquid. | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p> <p>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p> <p>Tightening torque: 6 Nm.</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2100002494</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2100002315</p> |
| 9 | Secure the cabling with a cable strap.  | <p>Cable strap, outdoor: -</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID</p>  <p>xx2100002630</p>  |

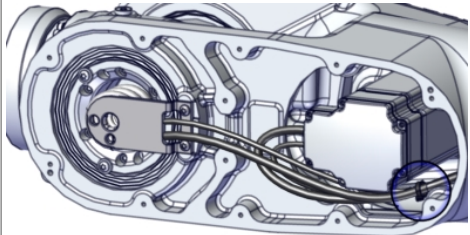
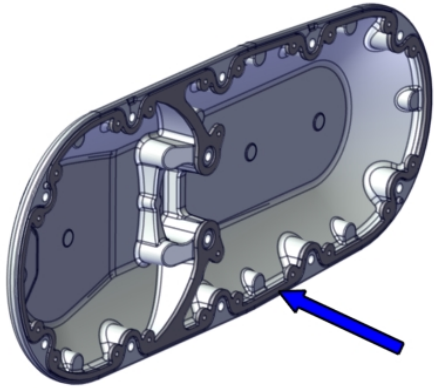
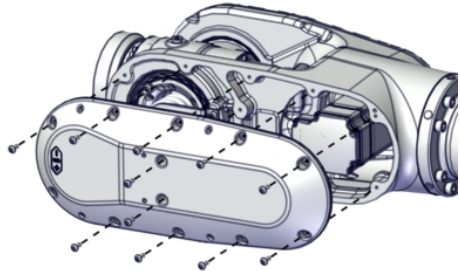
*Continues on next page*

## 5 Repair

### 5.8.5 Replacing the axis-5 motor

*Continued*


#### Refitting the wrist cover

|   | Action  | Note  |
|---|---|---|
| 1 | Make sure that the cable harness is routed and secured as shown in the figure.  | <br><br>xx2100002627  |
| 2 | <b>Foundry Plus:</b><br>Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <b>Wrist cover:</b><br><b>IRB 5710-110/2.3 / IRB 5710-90/2.3 LID:</b><br>3HAC073390-002 (Graphite White)<br>3HAC073390-004 (ABB Orange)<br><b>IRB 5710-90/2.7 / IRB 5710-70/2.7 LID:</b><br>3HAC070151-004 (Graphite White)<br>3HAC070151-006 (ABB Orange)<br><br><br><br>xx2100001407 |
| 3 | Refit the wrist cover and secure with screws.<br><b>Foundry Plus:</b><br>Fit all the screws first, then torque tighten them twice to achieve correct torque (due to compression from the gasket). | <b>Torx pan head screw: M6x16 Stainless steel A2-70</b><br><b>Tightening torque: 10 Nm.</b><br><br><br><br>xx2000000373   |

#### Concluding procedure

|   | Action   | Note                                  |
|---|--|---------------------------------------|
| 1 | If used, refit the DressPack cable package on the wrist. | See product manual for the DressPack. |

*Continues on next page*

|   | Action   | Note  |
|---|--|---|
| 2 | Refill the gearbox with oil, if drained.   | See <a href="#">Filling oil into the axis-5 gearbox on page 180</a> . |
| 3 | Re-calibrate the robot.  | See <a href="#">Calibration on page 621</a> .                         |
| 4 |  <b>DANGER</b><br><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

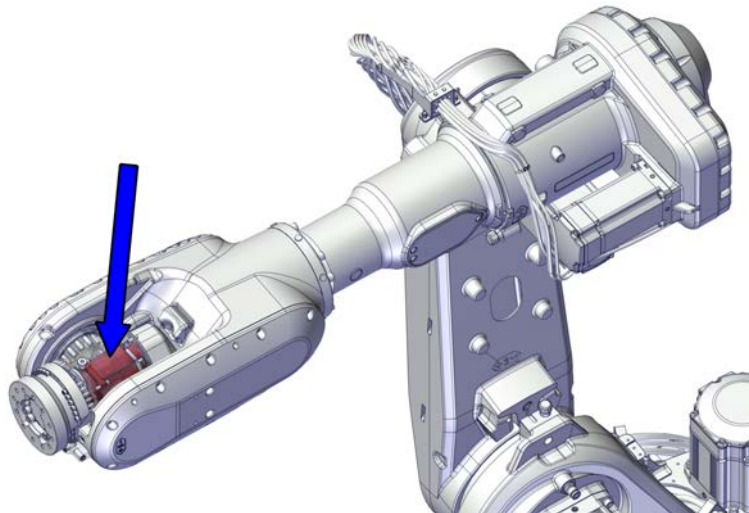
## 5 Repair

### 5.8.6 Replacing the axis-6 motor

### 5.8.6 Replacing the axis-6 motor

#### Location of the motor

The motor is located as shown in the figure.



xx2100000490

#### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number  | Note | Level |
|------------|---|------|-------|
| Motor unit | IRB 5710-110/2.3,<br>IRB 5710-90/2.3<br>LID:<br>3HAC070736-003<br>IRB 5710-90/2.7,<br>IRB 5710-70/2.7<br>LID:<br>3HAC071191-003 |      | L2    |

#### Required service parts

| Consumable                     | Article number   | Note                |
|--------------------------------|--|---------------------|
| Cleaning agent                 | -  | Loctite 7200        |
| Cleaning agent                 | -  | Loctite 7063        |
| Flange sealant                 | -  | Loctite 5800        |
| Tilt housing cover with gasket | 3HAC073918-003<br>(Graphite White)<br>3HAC073918-004<br>(ABB Orange) | Replace if damaged. |

*Continues on next page*

| Consumable                 | Article number | Note                |
|----------------------------|----------------|---------------------|
| Gasket, tilt housing cover | 3HAC071520-001 | Replace if damaged. |

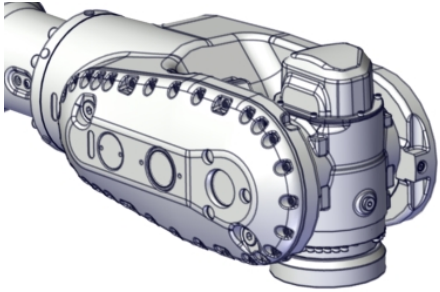

### Required tools and equipment

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Brake release tool                    | 3HAC081310-001   | User instructions are enclosed with the tool.   |
| Removal tool motor M8                 | 3HAC080346-001   | Used to push out the motor, if necessary.   |
| Guide pin, M6x150                     | 3HAC080345-001   | Always use guide pins in pairs.   |
| Rotation tool M3                      | 3HAB7887-1   | Used to rotate the motor pinion. Add screw M3.  |
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

### Removing the motor

Use these procedures to remove the motor.

### Preparations before removing the axis-6 motor


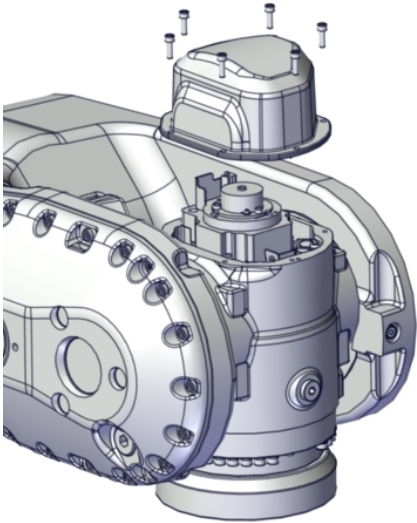
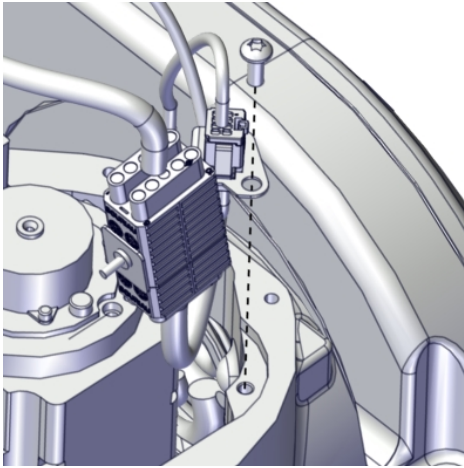
|   | Action   | Note   |
|---|--|--|
| 1 | Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure.   |  |
| 2 | Jog the robot to a position where axis 5 can be positioned with the axis-6 motor pointing straight up at an acceptable working position.<br><br>With axis 5 in this position it is possible to replace the axis-6 motor without draining the oil from the axis-6 gearbox.  | <br>xx2000000374 |
| 3 |  <b>DANGER</b><br><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safe-guarded space. |  |

Continues on next page

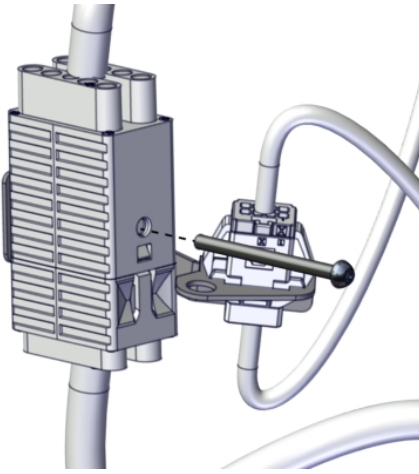
5 Repair

5.8.6 Replacing the axis-6 motor  
Continued

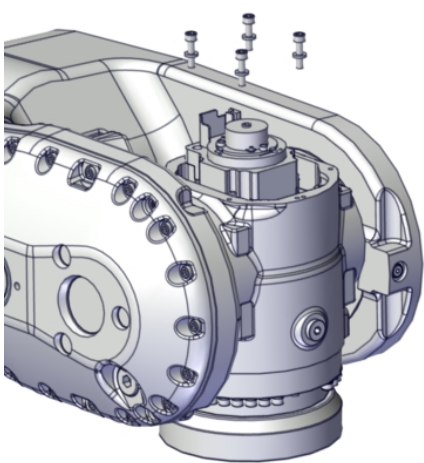
Disconnecting the axis-6 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Unscrew the attachment screws and remove the motor cover.   | <br><br>xx2000000376  |
| 3 | Remove the connector bracket.   | <br><br>xx2000000375 |

Continues on next page

|   | Action                       | Note  |
|---|------------------------------|---|
| 4 | Remove the connector screw.  |  <p>xx2200001919</p> |
| 5 | Disconnect the motor cables. |   |

## Removing the axis-6 motor






|   | Action                                    | Note  |
|---|---|---|
| 1 | Unscrew the motor attachment screws.      |  <p>xx2000000377</p> |
| 2 | Fit guide pins in the non-threaded holes. | Guide pin, M6x150   |
| 3 | Fit removal tools in the threaded holes.  | Removal tool motor M8:<br>3HAC080346-001  |

*Continues on next page*

## 5 Repair

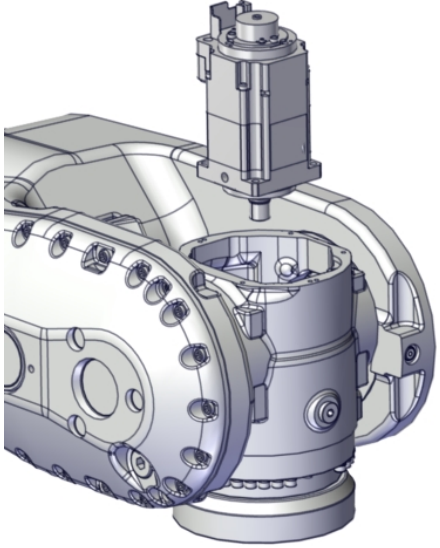
### 5.8.6 Replacing the axis-6 motor

*Continued*

|   | Action   | Note   |
|---|--|--|
| 4 | <p>Release the brakes on the axis-6 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001<br/>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 5 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gear-box, the gears may be damaged if excessive force is used.</p>  |  |
| 6 | <p>Press the motor out of its position by using the removal tools.</p>   | <p>Used to push out the motor, if necessary.</p>   |
| 7 | <p> <b>CAUTION</b></p> <p>The weight of the motor is 4 kg</p>   |  |

*Continues on next page*





|   | Action   | Note   |
|---|--|--|
| 8 | <p>Remove the motor by lifting it straight up from the gear.</p> <p>Make sure the motor pinion is not damaged!</p> |  <p>xx2000000378</p> |
| 9 | Disconnect the brake release tool.   |  |

### Refitting the motor

Use these procedures to refit the motor.

#### Preparations prior to refitting motor


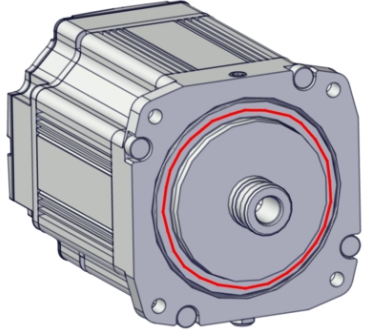
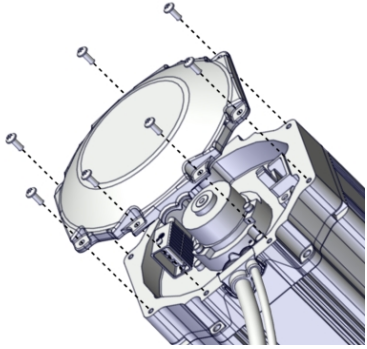
|   | Action  | Note                                       |
|---|---|--|
| 1 |  <p><b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p>  |  |
| 2 | <p>Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.</p>  <p><b>Tip</b></p> <p>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface.</p> | Cleaning agent: Loctite 7200, Loctite 7063 |

*Continues on next page*


## 5 Repair

### 5.8.6 Replacing the axis-6 motor



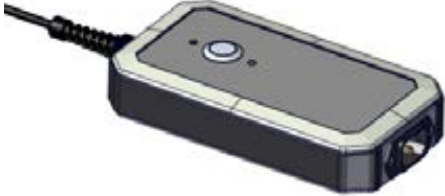

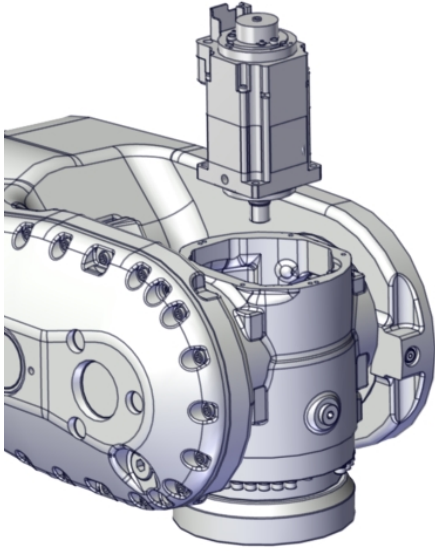
*Continued*

|   | Action   | Note  |
|---|--|---|
| 3 | <p>Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.</p> <p> <b>Note</b></p> <p>The purpose of the groove is to catch excess sealant. No o-ring is used.</p> | <p>Flange sealant: Loctite 5800</p>  <p>xx2100000520</p> |
| 4 | <p>Remove the cover, if fitted to the new spare part motor.</p>  |  <p>xx2100000596</p>                                    |

### Refitting the axis-6 motor

|   | Action   | Note                     |
|---|--|--------------------------|
| 1 | <p>Apply two guide pins in opposite holes.</p>   | <p>Guide pin, M6x150</p> |
| 2 | <p> <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p> |                          |

*Continues on next page*

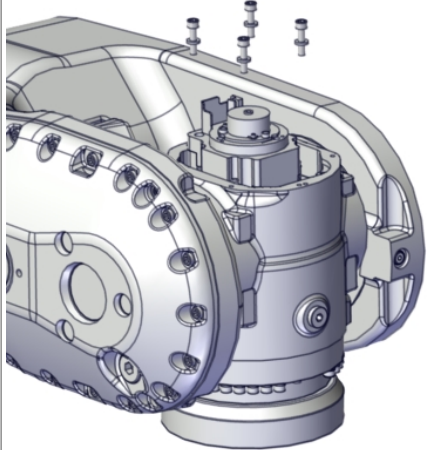
|   | Action   | Note  |
|---|--|---|
| 3 | <p>Release the brakes on the axis-6 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 4 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |   |
| 5 | <p>Use caution and lower the motor into position on the guide pins, while at the same time rotating the motor pinion slightly.</p> <p>Make sure that:</p> <ul style="list-style-type: none"> <li>• the motor pinion is properly mated to the gear of the gearbox.</li> <li>• the motor pinion does not get damaged.</li> </ul>   | <p>Rotation tool M3, 3HAB7887-1</p>  <p>xx2000000378</p>  |
| 6 | Remove the guide pins.   |   |

Continues on next page

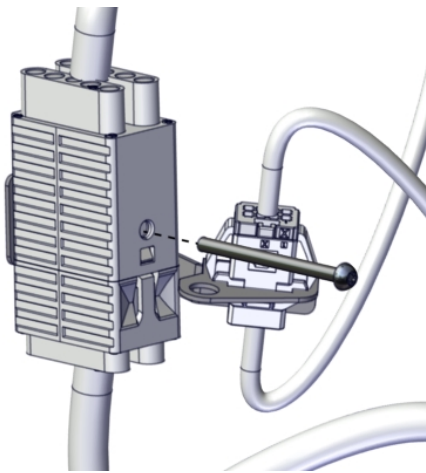
## 5 Repair

### 5.8.6 Replacing the axis-6 motor

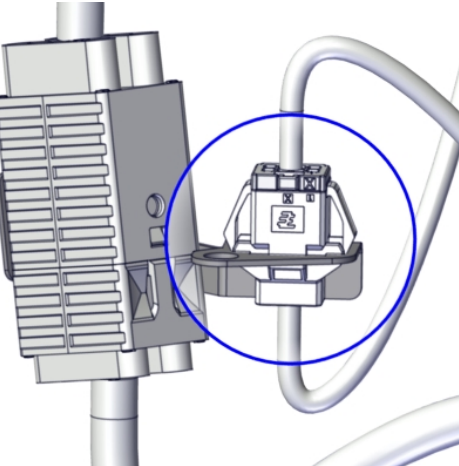

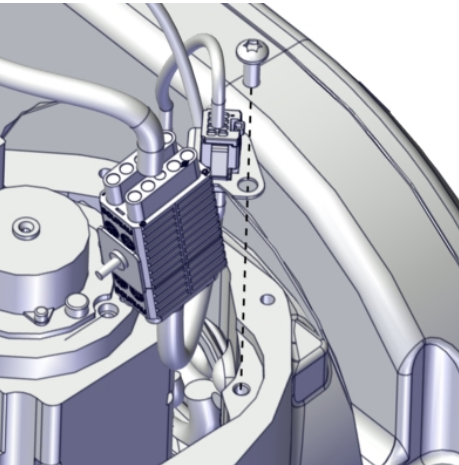


*Continued*

|   | Action                                       | Note  |
|---|--|---|
| 7 | Secure the motor with its attachment screws. | <p>Hex socket head cap screw: M6x25 12.9<br/>Gleitmo 603+Geomet 500 (4 pcs)<br/>Tightening torque: 10 Nm</p>  <p>xx2000000377</p> |
| 8 | Perform a leak-down test.                    | See <a href="#">Performing a leak-down test on page 196</a> .   |

#### Connecting the axis-6 motor cables

|   | Action   | Note   |
|---|--|--|
| 1 | Connect the motor cables.<br>Connect in accordance with the markings on the connectors.  |  |
| 2 | <p>Position the power connector to the bracket with a screw.</p> <div data-bbox="470 1294 528 1352"></div> <p><b>Note</b></p> <p>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms.</p> | <p>Tightening torque: 1 Nm</p>  <p>xx22000001919</p> |

*Continues on next page*

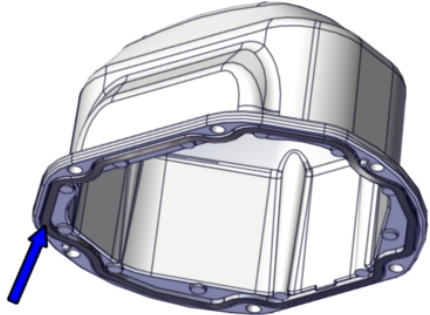

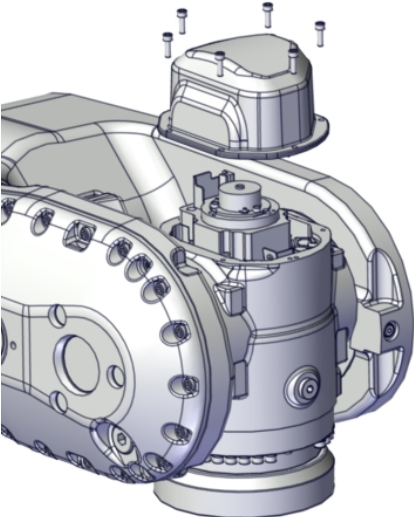
|   | Action  | Note  |
|---|---|---|
| 3 | Snap the signal connectors to each other in the bracket.  | <br>xx2200001920  |
| 4 | Refit the connector bracket assembly to the motor.<br><br> <b>CAUTION</b><br><br>The cabling is sensitive to mechanical damage. Handle it with care to avoid damage to the cabling or the connector, avoid any kind of tilt or skew. | Torx pan head screw: M5x12 Stainless steel A2-70<br><br><br>xx2000000375 |
| 5 | Verify correct cable layout as shown in the figure.<br><br> <b>CAUTION</b><br><br>Route the signal cabling correctly to avoid cable damage.  | <br>xx2100001293  |

Continues on next page

## 5 Repair

### 5.8.6 Replacing the axis-6 motor


*Continued*

|   | Action  | Note   |
|---|---|--|
| 6 | Inspect the gasket.<br>Replace if damaged.  | Gasket, tilt housing cover: 3HAC071520-001<br><br>xx2100001287   |
| 7 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |
| 8 | Refit the motor cover.  | Hex socket head cap screw, M5x16 12.9<br>Lafre 2C2B/FC6.9, 6 pcs<br>Tightening torque: 4 Nm.<br><br>xx2000000376 |

#### Concluding procedure

|   | Action   | Note  |
|---|--|---|
| 1 | If used, refit the DressPack cable package on the wrist. | See product manual for the DressPack.         |
| 2 | Re-calibrate the robot.                                  | See <a href="#">Calibration on page 621</a> . |

*Continues on next page*

|   | Action   | Note |
|---|--|------|
| 3 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |      |

## 5 Repair

---

### 5.9.1 Replacing the axis-1 gearbox

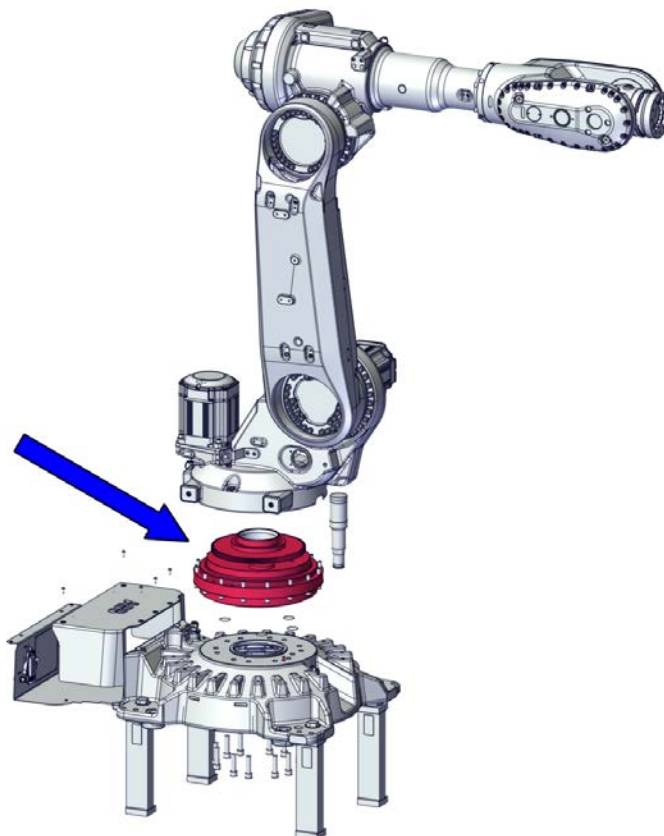
## 5.9 Gears

### 5.9.1 Replacing the axis-1 gearbox

---

#### Location of the gearbox

The gearbox is located as shown in the figure.



xx2000000403

---

#### Summary of the replacement procedure

This is a brief summary of the replacement procedure, containing the major actions to be performed.

- 1 If installed in an inverted position (option 3317-1): Lift down the manipulator to floor standing.
- 2 Secure the manipulator on top of four support legs.
- 3 Drain the axis-1 gearbox.
- 4 Remove the cabling from the base.
- 5 Remove the axis-1 motor.
- 6 Remove the upper arm, lower arm and frame (complete manipulator excluding the base and axis-1 gearbox) as an assembly.
- 7 Replace the axis-1 gearbox. The axis-1 cassette sealing must also be replaced.

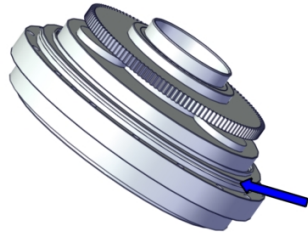
*Continues on next page*



## Required spare parts

**Note**

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number   | Note   | Level |
|------------|--|--|-------|
| Gearbox    | 3HAC072003-003<br>(Graphite White)<br>3HAC072003-005<br>(ABB Orange) | Includes o-ring 3HAB3772-93<br><br>xx2100001132 | L2    |

## Required service parts

| Consumable                             | Article number   | Note   |
|--|--|--|
| Cassette sealing                       | 3HAC070194-013   |  |
| Rust preventive                        | 3HAC034903-001   | Mercasol 3110 Waxcoat. Recommended drying time is 24h.   |
| Grease                                 | 3HAC042536-001   | Shell Gadus S2   |
| Cleaning agent                         | -  | Loctite 7200   |
| Cleaning agent                         | -  | Loctite 7063   |
| Flange sealant                         | -  | Loctite 5800   |
| O-ring                                 | 3HAB3772-93  | On gearbox.<br>Included in gearbox spare part, but replace if damaged.                                       |
| Connection box cover FS180 with gasket | 3HAC072864-003<br>(Graphite White)<br>3HAC072864-005<br>(ABB Orange)<br>3HAC074336-004<br>(Graphite White, threaded connection)<br>3HAC074336-005<br>(ABB Orange, threaded connection) | Replace if damaged.<br>A threaded connection is required for cooling fan option.                             |
| Flange sealant                         | -  | Loctite 574 (or equivalent)  |
| Sealant (grey)                         | 3HAC026759-001   | Sikaflex 521FC.<br><i>Protection type Foundry Plus.</i><br><i>Not required for option Inverted (3317-1).</i> |
| Locking liquid                         | -  | Loctite 2400 (or equivalent Loctite 243)   |

Continues on next page

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

| Consumable      | Article number | Note  |
|-----------------|----------------|---|
| Flange sealant  | -              | Loctite 5800  |
| O-ring          | 3HAC061327-033 | 4 pcs.<br><i>Not required for option Inverted (3317-1).</i>                     |
| O-ring          | 3HAB3772-150   | On base.<br><i>Option Inverted (3317-1)</i>                                     |
| O-ring          | 3HAB3772-57    | On axis-1 protection ring.<br><i>Not required for option Inverted (3317-1).</i> |
| Lubricating oil | -              | See <a href="#">Type of lubrication in gear-boxes on page 148</a> .             |
| O-ring, G 1/2"  | 3HAC061327-059 | Used on oil plug. Always replace when refitting oil plug.                       |

### Required tools and equipment

| Equipment                       | Article number | Note  |
|---------------------------------|----------------|---|
| Lifting accessory set           | 3HAC15607-1    | Lift of floor standing robot.   |
| Lifting and turning tool        | 3HAC073537-001 | Lift and rotation of inverted robot.<br>Requires fork lift accessory set 3HAC058825-001.<br>User instructions are enclosed with the tool. |
| Fork lift accessory set         | 3HAC058825-001 | Contains fork lift pockets and all required hardware for installation on frame.<br>User instructions are enclosed with the tool.          |
| Support legs                    | 3HAC15535-1    |   |
| Guide pin, M12x150              | 3HAC13056-2    | Always use guide pins in pairs.   |
| Lifting eye                     | 3HAC16131-1    | M12, 2 pcs  |
| Lifting adapter                 | 3HAC081565-001 | Adapter for lifting axis-1 gearbox, 2 pcs   |
| Fender washer                   | -              | Outer diameter: minimum 26 mm, maximum 30 mm, hole diameter: 13 mm, thickness: 3 mm.  |
| Lifting accessory (chain)       | 3HAC15556-1    | Lifting instruction 3HAC15880-2 enclosed.   |
| Brake release tool              | 3HAC081310-001 | User instructions are enclosed with the tool.   |
| Bits extender                   | 3HAC12342-1    | 300 mm, bits 1/2"   |
| Bit holder and hexagon bit SW10 |                | Bit holder dimension: 5/16" (14x18 mm)<br>Used for screw access in narrow locations.  |
| Rotation tool M4                | 3HAB7887-1     | Used to rotate the motor pinion.<br>Add screw M4.   |

*Continues on next page*

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Replacement tool for cassette sealing | 3HAC079880-001   | For removing and fitting cassette sealing on axis 1   |
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

## Required documents

| Document   | Document number |
|--|-----------------|
| <i>Technical reference manual - Lubrication in gearboxes</i>             | 3HAC042927-001  |
| Directions for use - Lifting and rotating accessory for IRB 5710/IRB5720 | 3HAC073537-003  |
| Directions for use - Fork lift accessory set 3HAC058825-001              | 3HAC060303-001  |

| Document   | Document number |
|--|-----------------|
| Directions for use - Lifting and rotating accessory for IRB 5710/IRB5720 | 3HAC073537-003  |
| Directions for use - Fork lift accessory set 3HAC058825-001              | 3HAC060303-001  |

## Deciding calibration routine

Decide which calibration routine to be used, based on the information in the table. Depending on which routine is chosen, action might be required prior to beginning the repair work of the robot, see the table.

|   | Action  | Note  |
|---|---|---|
| 1 | Decide which calibration routine to use for calibrating the robot. <ul style="list-style-type: none"> <li>Reference calibration. External cable packages (DressPack) and tools can stay fitted on the robot.</li> <li>Fine calibration. All external cable packages (DressPack) and tools must be removed from the robot.</li> </ul>  |   |
|   | <b>If the robot is to be calibrated with reference calibration:</b><br>Find previous reference values for the axis or create new reference values. These values are to be used after the repair procedure is completed, for calibration of the robot.<br><br>If no previous reference values exist, and no new reference values can be created, then reference calibration is not possible. | Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.<br><br>Creating new values requires possibility to move the robot.<br><br>Read more about reference calibration for Axis Calibration in <a href="#">Reference calibration routine on page 631</a> . |

Continues on next page

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

| Action  | Note |
|---|------|
| If the robot is to be calibrated with fine calibration:<br>Remove all external cable packages (DressPack) and tools from the robot. |      |

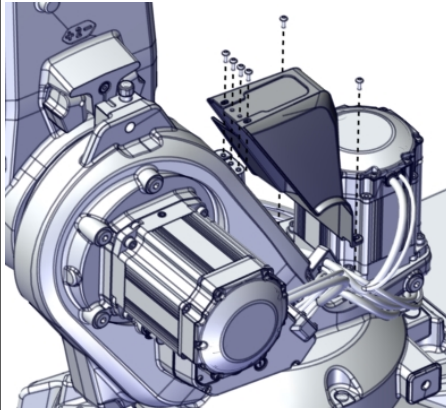
#### Removing the gearbox

These procedures describe how to remove the gearbox.

#### Removing tools and equipment from the turning disc

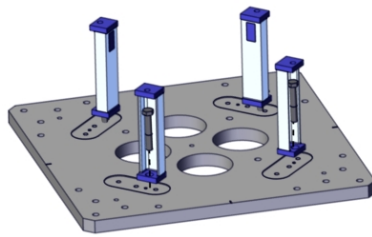
|   | Action  | Note  |
|---|---|---|
| 1 | Remove any payload, tools or other equipment fitted on the turning disc.<br>DressPack can stay fitted for the time being. | This is done to achieve the best stability of the arm assembly, when removing and lifting it, and when it is resting by itself after removal. |

#### Removing the covers for Foundry Plus and floor mounted robots

| Action   | Note  |
|--|---|
| 1 <i>Protection type Foundry Plus</i><br>Remove the axis-1 cable protection. | <br>xx2100000979 |


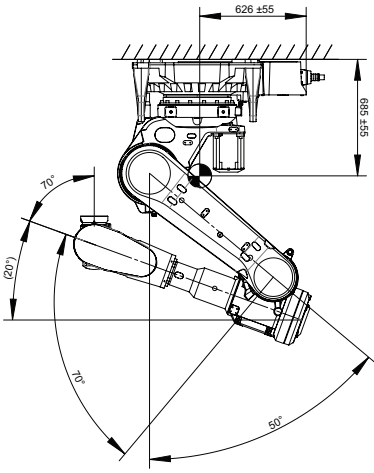


#### Preparing an installation area for an inverted robot

An inverted robot must be taken down and installed standing on the floor for replacement of the axis-1 gearbox. Use this procedure to prepare the installation area for the robot.

| Action   | Note  |
|--|---|
| 1 Secure four support legs to the foundation using the same hole pattern as to secure the base to the foundation.<br>For hole configuration, see <a href="#">Hole configuration, base on page 75</a> . | Support legs: 3HAC15535-1<br>Tightening torque: 550 Nm<br><br>xx2100001114 |

*Continues on next page*

## Lifting down the robot from inverted position




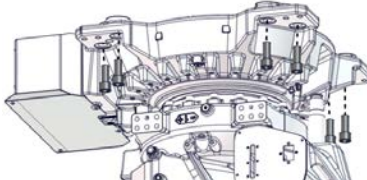
|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br>The robot must always be secured to the foundation if any kind of repair or maintenance work is to be performed.<br>For some repair work support legs are required.  | Suitable screws, lightly lubricated:<br>M24 x 100 (min. 4 pcs)<br>For hole configuration, see <a href="#">Hole configuration, base on page 75</a> . |
| 2 | Jog the robot into position: <ul style="list-style-type: none"> <li>• Axis 1: calibration position (0°)</li> <li>• Axis 2: -50°</li> <li>• Axis 3: +70°</li> <li>• Axis 4: calibration position (0°)</li> <li>• Axis 5: +70°</li> <li>• Axis 6: no significance</li> </ul>  | <br>xx2100000976  |
| 3 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space.   |   |
| 4 | Disconnect the robot cables at the base.  |   |
| 5 |  <b>CAUTION</b><br>The weight of the IRB 5710 robot is<br>IRB 5710-110/2.3: 830 kg ( <i>Inverted: 845 kg</i> )<br>IRB 5710-90/2.7: 830 kg ( <i>Inverted: 840 kg</i> )<br>IRB 5710-90/2.3 LID: 890 kg ( <i>Inverted: 905 kg</i> )<br>IRB 5710-70/2.7 LID: 885 kg ( <i>Inverted: 900 kg</i> )<br>All lifting accessories used must be sized accordingly. |   |

Continues on next page

## 5 Repair

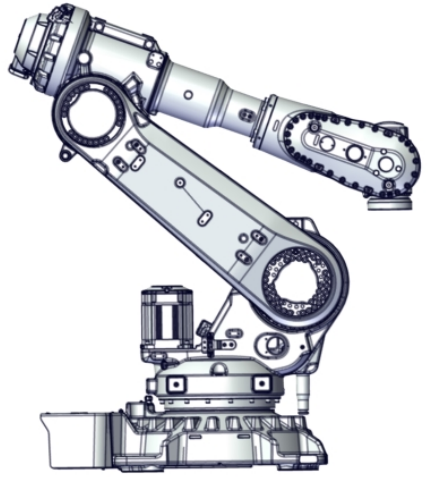

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

|    | Action  | Note  |
|----|---|---|
| 6  | <p>Install the fork lift pockets to the robot.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p>   | <p>See user instructions enclosed with the fork lift accessory set.</p> <p>Fork lift accessory set: 3HAC058825-001.</p>           |
| 7  | <p>Choose one of the following lifting methods:</p> <ul style="list-style-type: none"> <li>Lifting and turning with the fork lift (rotator attachment required): <ol style="list-style-type: none"> <li>1 Insert the forks of the fork lift truck into the fork lift pockets, as far as possible.</li> <li>2 Raise the forks of the fork lift truck to make sure that the weight of the robot rests on the forks.</li> </ol> <p> <b>Tip</b></p> <p>Two M16 screws can be fitted to the fork lift pockets, to press the forks against the pockets and make the lift more stable.</p> </li> <li>Lifting and turning with the turning tool and overhead crane: <ol style="list-style-type: none"> <li>1 Install and use the turning tool according to enclosed user instructions.</li> </ol> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> </li> </ul> | <p>See user instructions enclosed with the turning tool.</p> <p>Lifting and turning tool: 3HAC073537-001.</p>                     |
| 8  | <p>Remove the bolts that secure the robot to the foundation.</p>  | <p>Quantity: 8 pcs.</p>  <p>xx1600002098</p> |
| 9  | <p>Rotate the robot to floor standing position.</p>   | <p>Follow the user instructions enclosed with the turning tool.</p>   |
| 10 | <p>Lower and secure the robot to the floor.<br/>(Or to support legs, if replacing the axis-1 gearbox.)</p> <p>The lifting accessories can be kept installed if they are not in the way for the upcoming service procedure.</p>  | <p>Attachment screws: M24 x 100 (min. 4 pcs required to perform service)</p>  |



*Continues on next page*

## Position for the floor mounted robot

|   | Action   | Note   |
|---|--|--|
| 1 | Turn on the power to the robot temporarily.  |  |
| 2 | Jog the robot into position: <ul style="list-style-type: none"> <li>• Axis 1: 0°</li> <li>• Axis 2: -50°</li> <li>• Axis 3: +70°</li> <li>• Axis 4: 0°</li> <li>• Axis 5: +70°</li> <li>• Axis 6: no significance.</li> </ul>  | <br>xx2100000977 |
| 3 |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |  |

## Attaching the lifting accessories to the arm system

This procedure is mainly meant for the floor mounted robot. The inverted robot can use the already mounted lifting accessories.

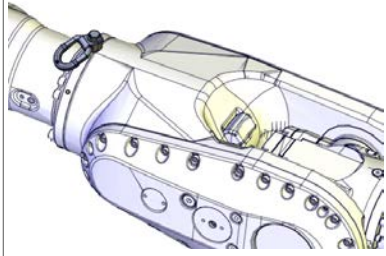

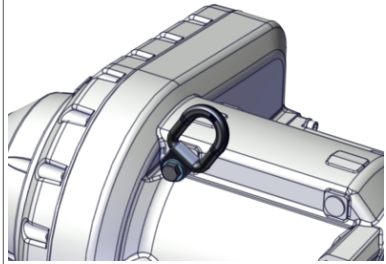
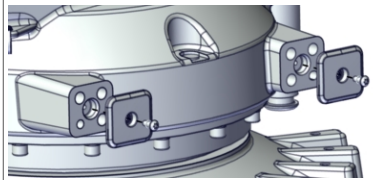
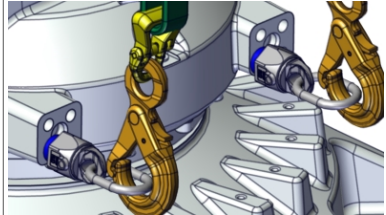
|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.   |      |
| 2 |  <b>CAUTION</b><br>The weight of the IRB 5710 robot is<br>IRB 5710-110/2.3: 830 kg ( <i>Inverted: 845 kg</i> )<br>IRB 5710-90/2.7: 830 kg ( <i>Inverted: 840 kg</i> )<br>IRB 5710-90/2.3 LID: 890 kg ( <i>Inverted: 905 kg</i> )<br>IRB 5710-70/2.7 LID: 885 kg ( <i>Inverted: 900 kg</i> )<br>All lifting accessories used must be sized accordingly. |      |

Continues on next page

## 5 Repair

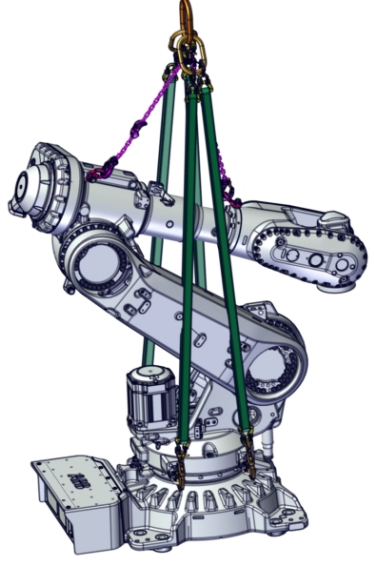
### 5.9.1 Replacing the axis-1 gearbox

*Continued*


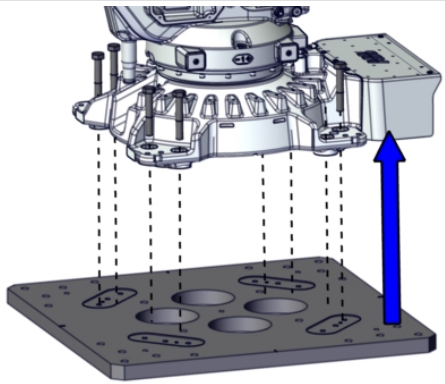
|   | Action  | Note  |
|---|---|---|
| 3 | Fit a lifting eye to the wrist.   | <p>Lifting eye: 3HAC16131-1</p>  <p>xx1200001133</p>   |
| 4 | <p>Fit a lifting eye to the arm house, with a fender washer underneath.</p>  <p>xx1400002196</p> | <p>Lifting eye: 3HAC16131-1</p> <p>Fender washer. Outer diameter: minimum 26 mm, maximum 30 mm, hole diameter: 13 mm, thickness: 3 mm.</p>  <p>xx2100002146</p> |
| 5 | Remove the fork lift protection covers on both sides of the robot frame (4 pcs).  |  <p>xx2100001409</p>   |
| 6 | <p>Insert the lifting eyes to the fork lift attachment holes.</p> <p>Use the lower attachment holes.</p>  | <p>Lifting accessory set: 3HAC15607-1</p>  <p>xx2100001165</p>   |

*Continues on next page*



|   | Action   | Note  |
|---|--|---|
| 7 | <p>Attach the lifting accessories to the robot.</p> <p>The back and front chains are only used as precaution for any movement of the robot during the lift. They do not need to be strained.</p> |  <p>xx2100001140</p> |

## Fitting support legs under the floor mounted robot

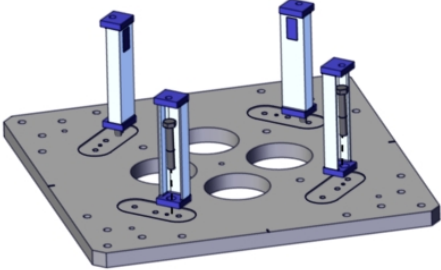
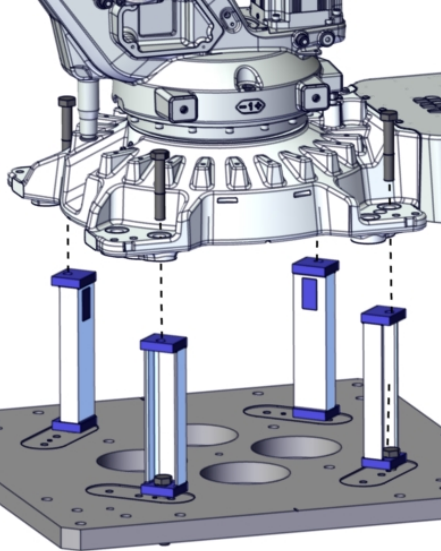
|   | Action   | Note   |
|---|--|--|
| 1 | <p> <b>CAUTION</b></p> <p>The weight of the IRB 5710 robot is<br/>           IRB 5710-110/2.3: 830 kg (<i>Inverted: 845 kg</i>)<br/>           IRB 5710-90/2.7: 830 kg (<i>Inverted: 840 kg</i>)<br/>           IRB 5710-90/2.3 LID: 890 kg (<i>Inverted: 905 kg</i>)<br/>           IRB 5710-70/2.7 LID: 885 kg (<i>Inverted: 900 kg</i>)<br/>           All lifting accessories used must be sized accordingly.</p> |  |
| 2 | <p>Unscrew the attachment screws from the foundation and lift away the robot to be able to fit the four support legs to the foundation.</p>  |  <p>xx2100001115</p> |

Continues on next page

## 5 Repair


### 5.9.1 Replacing the axis-1 gearbox

*Continued*

| Action  | Note  |
|---|---|
| 3 Secure the support legs to the foundation using the same holes as to secure the base. | <p>Support legs: 3HAC15535-1<br/>Tightening torque: 550 Nm</p>  <p>xx2100001114</p> |
| 4 Lower the robot to the support legs and secure.                                       |  <p>xx2100001113</p>   |

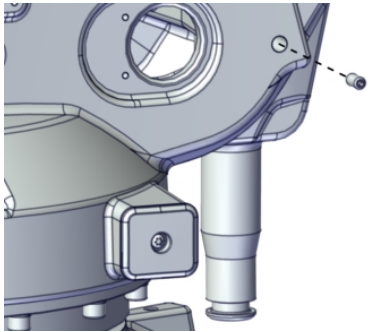


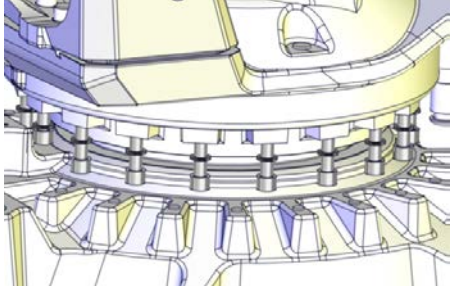
#### Preparations before removing the axis-1 gearbox

Use this procedure to do the necessary preparations, before removing the gearbox.


| Action   | Note |
|--|------|
| 1 Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure.   |      |
| <p>2  <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p> |      |

*Continues on next page*

### 5.9.1 Replacing the axis-1 gearbox Continued

| Action  | Note  |
|---|---|
| <p>3 Hold the mechanical stop pin in a firm grip, and remove it by unscrewing the set screw.</p>  |  <p>xx2100001410</p>  |
| <p>4 Begin draining the axis-1 gearbox.</p> <p> <b>Note</b></p> <p>There will be some oil left in the gear after draining.</p>   | <p>See <a href="#">Floor-mounted robot: Draining the axis-1 gearbox on page 151</a>.</p>  |
| <p>5 Loosen the attachment screws as far as it is possible at this point.</p> <p> <b>Note</b></p> <p>It will not be possible to remove the screws completely at this point.</p> | <p>Bit holder and hexagon bit SW10<br/>Bit holder dimension: 5/16" (14x18 mm)</p>  <p>xx1400002169</p> |

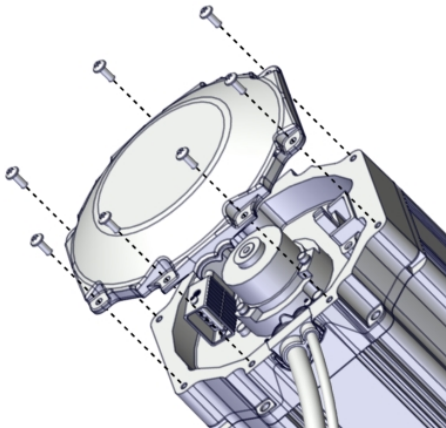
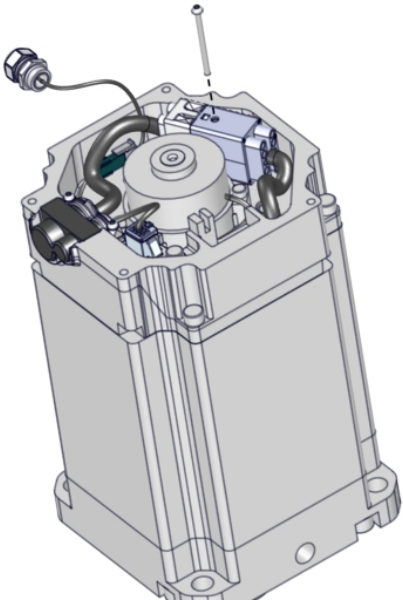
#### Disconnecting the axis-1 motor cables

| Action   | Note |
|--|------|
| <p>1  <b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p> |      |

Continues on next page

5 Repair

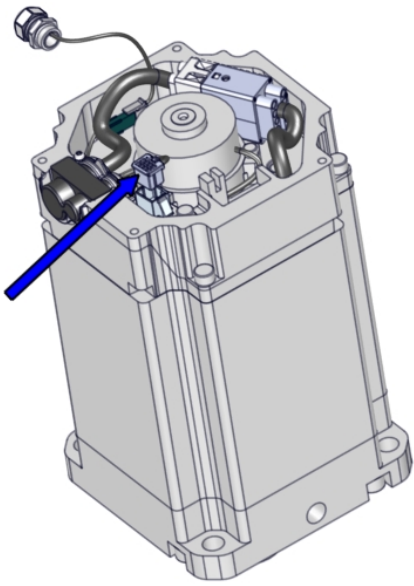
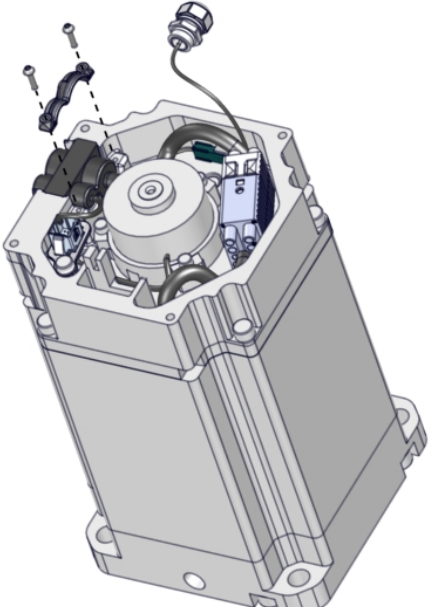
5.9.1 Replacing the axis-1 gearbox  
Continued

| Action |   | Note  |
|--------|---|---|
| 2      | Remove the motor cover by removing the screws.  | <br>xx2100000596  |
| 3      | Disconnect the power cable connector by first removing the attachment screw and then parting the connector. | <br>xx2200001736 |


Continues on next page

## 5.9.1 Replacing the axis-1 gearbox

*Continued*

|   | Action   | Note  |
|---|--|---|
| 4 | Disconnect the signal cable connector by pulling it out. |  <p>xx2200001737</p> |
| 5 | Remove the cable bracket by removing the screws.         |  <p>xx2200001738</p> |
| 6 | Remove the motor cables from the motor.                  |   |

## Removing the axis-1 motor

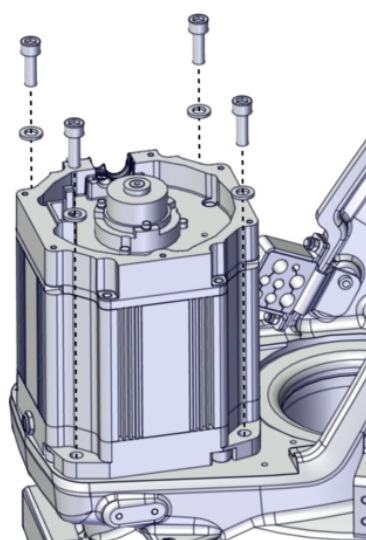
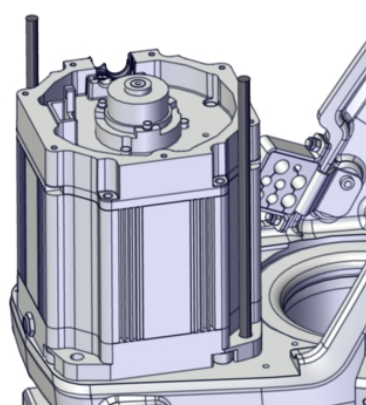
|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |      |

*Continues on next page*



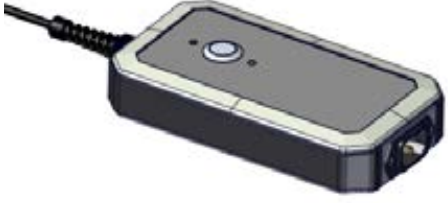


## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

|   | Action   | Note   |
|---|--|--|
| 2 | Unscrew the attachment screws and washers.<br>Use a bits extender to reach the screws. | Bits extender: 3HAC12342-1<br><br>xx2100000503  |
| 3 | Fit guide pins in the non-threaded holes.  | Guide pin, M10x150: 3HAC15521-2<br>Always use guide pins in pairs.   |
| 4 | Fit removal tools in the threaded holes.   | Removal tool motor M12: 3HAC14631-1<br>Always use removal tools in pairs.<br><br>xx2100000504 |

*Continues on next page*

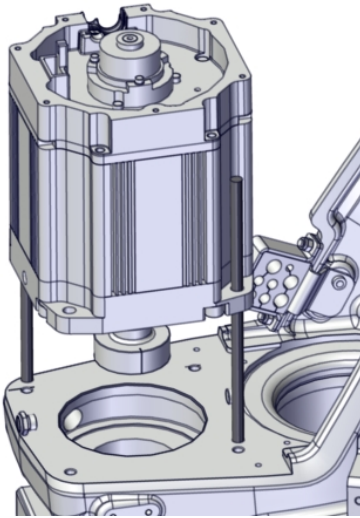
|   | Action   | Note   |
|---|--|--|
| 5 | <p>Release the brakes of the axis-1 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx210000666</p> |
| 6 | <p> <b>CAUTION</b></p> <p>The weight of the motor is 21 kg</p>  |  |
| 7 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |  |

Continues on next page


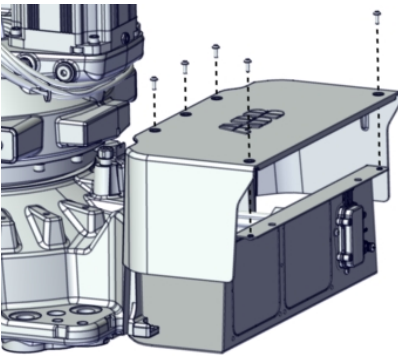
## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

|    | Action   | Note   |
|----|--|--|
| 8  | Press the motor out of its position by using the removal tools.                    |  <p data-bbox="943 864 1050 882">xx2100002186</p> |
| 9  | Use caution and lift the motor straight up to get the pinion parted from the gear. |  |
| 10 | Disconnect the brake release tool.   |  |

Preparations before removing the cable harness in the base

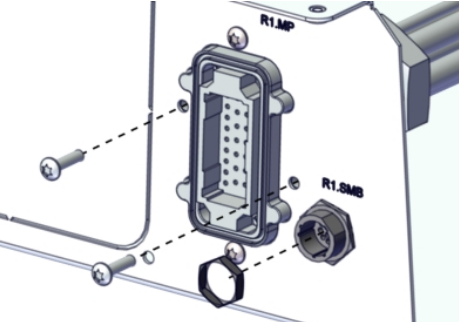
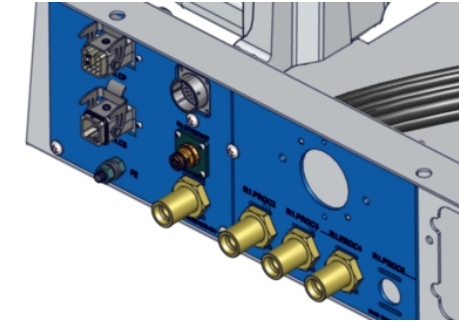
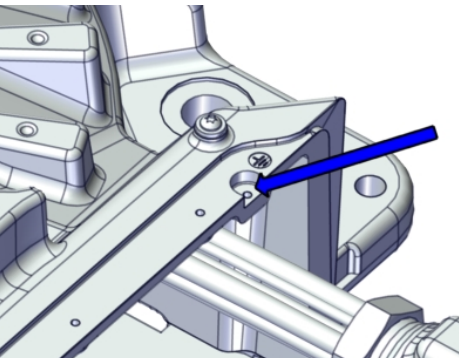
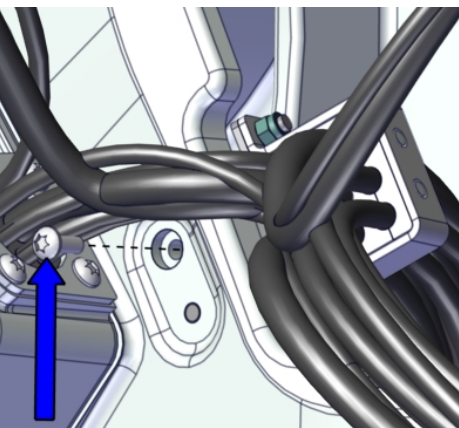
|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |   |
| 2 | Remove the base cover.  |  <p data-bbox="943 1644 1050 1662">xx2100000981</p> |

*Continues on next page*



## 5.9.1 Replacing the axis-1 gearbox

*Continued*

|   | Action  | Note   |
|---|---|--|
| 3 | Loosen the connectors: <ul style="list-style-type: none"><li>• R1.MP</li><li>• R1.SMB</li></ul> | <br>xx2100001109   |
| 4 | If used, disconnect the DressPack hoses in the base.  | <br>xx2300001093  |
| 5 | Disconnect the earth cable.   | <br>xx2100000982 |
| 6 | Loosen the cable bracket from the frame by removing the screw.                                  | <br>xx2100001108 |

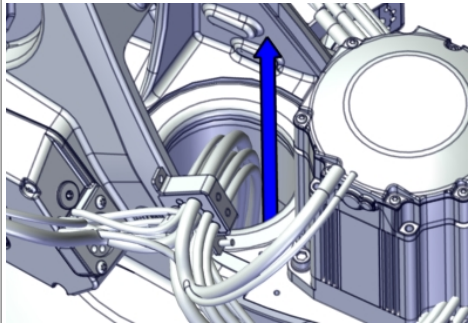
*Continues on next page*

## 5 Repair

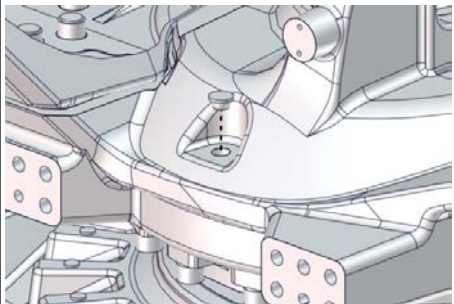
### 5.9.1 Replacing the axis-1 gearbox

*Continued*


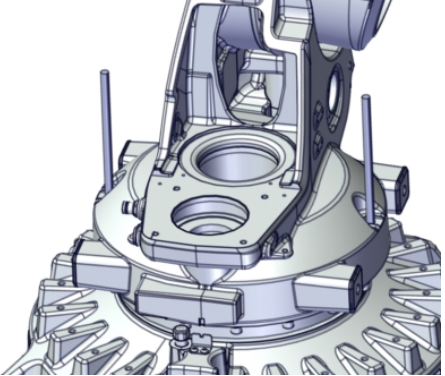
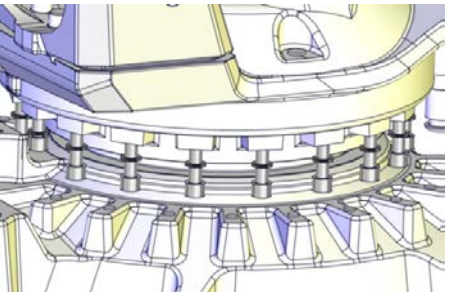

Removing the cable harness from the base

|   | Action   | Note   |
|---|--|--|
| 1 | If equipped with DressPack, pull out the DressPack cables through the protection tube. |  |
| 2 | Pull out the robot cable harness through the protection tube.                          | <br>xx2100001111 |
| 3 | Place the cable harness safely on the frame or on the axis-2 motor.                    |  |

Lifting away the complete arm system

|   | Action  | Note   |
|---|---|--|
| 1 | Check that the axis-1 gearbox is drained and then remove the draining equipment.                |  |
| 2 | Raise the overhead crane to stretch all lifting accessories.                                    |  |
| 3 | Remove the two protection plugs or screws located on opposite sides of each other in the frame. | <br>xx1700000320 |



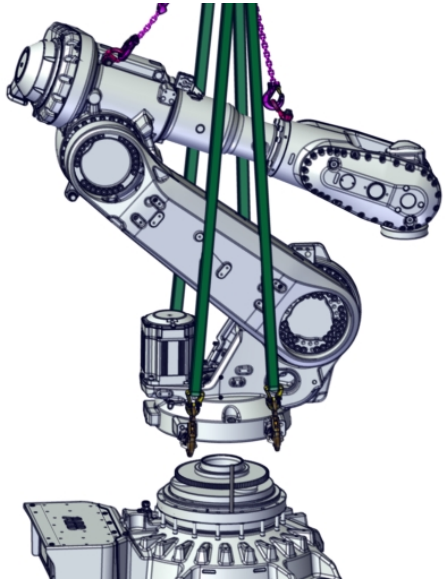

*Continues on next page*

|   | Action  | Note   |
|---|---|--|
| 4 | <p>Install guide pins to the frame.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the frame slide better.</p>                                | <p>Guide pin, M12x150 / Guide pin, M12x250:<br/>3HAC13056-2 / Guide pin, M12x250</p> <p>Always use guide pins in pairs.</p>  <p>xx2200001980</p> |
| 5 | <p>Verify that all attachment screws are loosened from the frame.</p>   |  <p>xx1400002169</p>  |
| 6 | <p> <b>CAUTION</b></p> <p>The weight of the complete arm system is 546-616 kg (depending on robot variant)</p> <p>All lifting accessories must be sized accordingly.</p> |  |

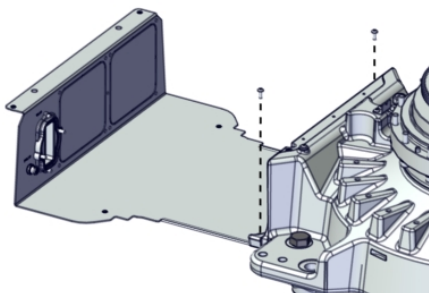
## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

| Action  | Note   |
|---|--|
| <p>7 Lift away the complete arm system.</p> <p> <b>CAUTION</b></p> <p>When the arm system has left the guide pins it can move. Use caution in order to avoid injury or damage!</p> <p> <b>Note</b></p> <p>There will be some oil spill!</p> |  <p>xx2100001411</p> |
| 8 Put down the arm system on the floor.   |  |
| <p>9  <b>DANGER</b></p> <p>When the complete arm system is removed and resting by itself on the floor, make sure it is resting completely stable before removing the lifting accessories. Do not change the position of the axes from the position described earlier.</p>  |  |


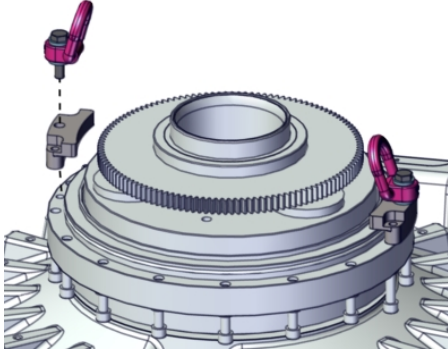

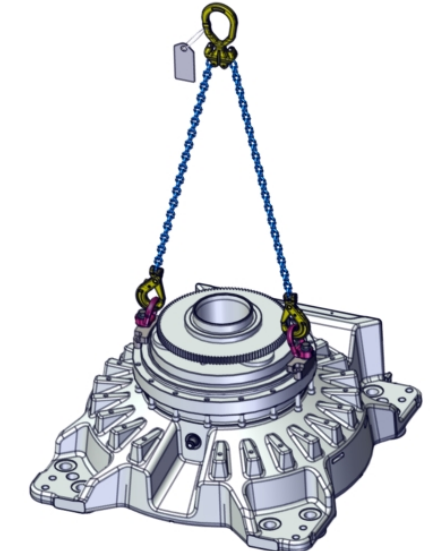
### Removing the axis-1 gearbox

| Action   | Note   |
|--|--|
| <p>1 Remove the bottom plate by removing the two small screws and pulling the plate out.</p> |  <p>xx2000000411</p> |

*Continues on next page*

### 5.9.1 Replacing the axis-1 gearbox

*Continued*


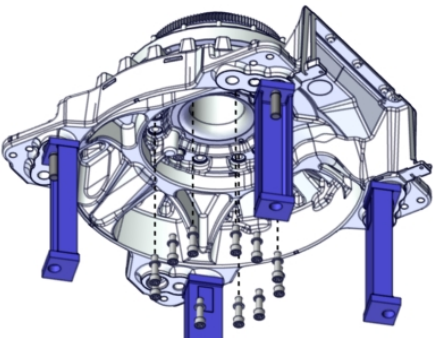
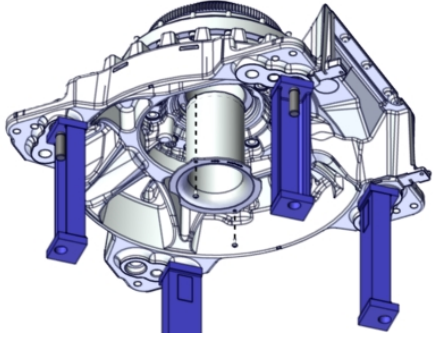
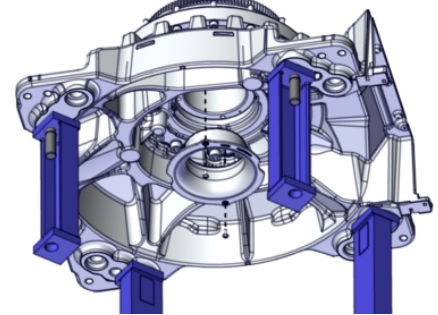

|   | Action  | Note  |
|---|---|---|
| 2 | <p>Fit the lifting accessories in opposite holes in the gearbox.</p> <p> <b>CAUTION</b></p> <p>Leave a couple of millimeters of space between the lifting adapter and the surface of the gearbox. This is done in order not to damage the surface of the gearbox which is a sealing surface.</p> | <p>Lifting adapter: 3HAC081565-001<br/>Lifting eye: 3HAC16131-1<br/>M12, 2 pcs</p>  <p>xx2100002817</p> |
| 3 | <p> <b>CAUTION</b></p> <p>The weight of the gearbox is 97 kg<br/>All lifting accessories used must be sized accordingly.</p>   |   |
| 4 | <p>Attach the lifting accessory.</p>  | <p>Lifting accessory (chain): 3HAC15556-1</p>  <p>xx2100002818</p>                                    |

*Continues on next page*

## 5 Repair




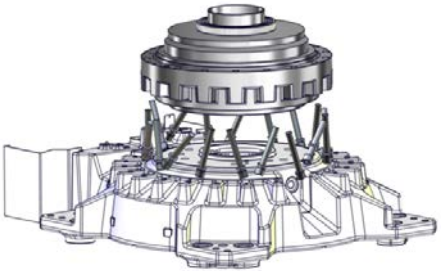
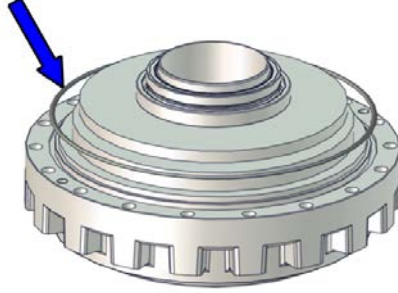
### 5.9.1 Replacing the axis-1 gearbox

*Continued*

|   | Action   | Note  |
|---|--|---|
| 5 | <p>Remove the gearbox attachment screws, from underneath the base.</p> <p> <b>Tip</b></p> <p>This procedure is best performed by two persons working together:</p> <ul style="list-style-type: none"> <li>• one underneath the robot base making sure that the bit is being fitted into the screw head holes, all the way until they reach the bottom</li> <li>• one using the torque wrench, loosening the screws from beside the base.</li> </ul> |  <p>xx2000000412</p>  |
| 6 | <p>Remove the protection tube from the base by removing the two attachment screws and pulling the tube downwards.</p>  |  <p>xx2100001112</p> <p><i>Option Inverted (3317-1)</i></p>  <p>xx2100001138</p> |
| 7 | <p> <b>CAUTION</b></p> <p>The weight of the gearbox is 97 kg<br/>All lifting accessories used must be sized accordingly.</p>  |   |

*Continues on next page*




|   | Action  | Note   |
|---|---|--|
| 8 | <p>Lift away the gearbox.</p> <p> <b>WARNING</b></p> <p>Approximately 0.5 l of oil residues will drip out during lifting of the gearbox.</p> <p>Make sure that protective gear like goggles and gloves are always worn.</p> <p> <b>WARNING</b></p> <p>Used oil is hazardous material and must be disposed of in a safe way. See <a href="#">Decommissioning on page 653</a> for more information.</p> <p> <b>Tip</b></p> <p>If the screws need to be protected from falling down on a dirty floor, they can be secured with nuts on the upper side of the gearbox.</p> |  <p>xx1700000566</p>   |
| 9 | <p>Remove the old o-ring to use it as aid in holding the screws during fitting of the new gearbox.</p> <p>A new o-ring is fitted on the new gearbox.</p>  |  <p>xx1700001378</p> |

### Refitting the gearbox

These procedures describe how to refit the axis-1 gearbox.

#### Preparations before refitting the axis-1 gearbox

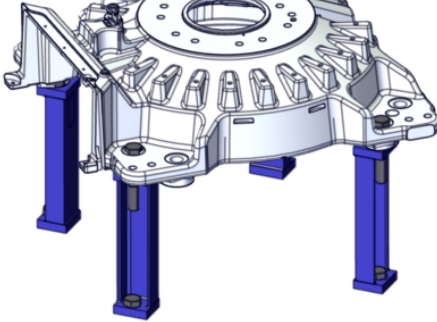
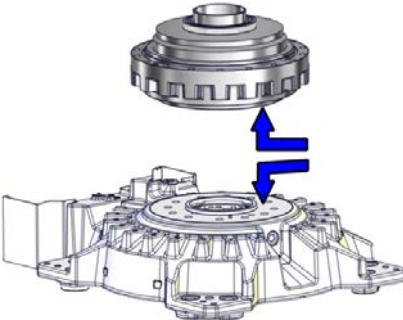
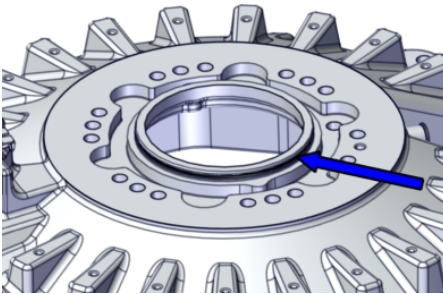
|   | Action   | Note |
|---|--|------|
| 1 | <p> <b>CAUTION</b></p> <p>The weight of the base is 170 kg</p> <p>All lifting accessories used must be sized accordingly.</p> |      |

Continues on next page

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

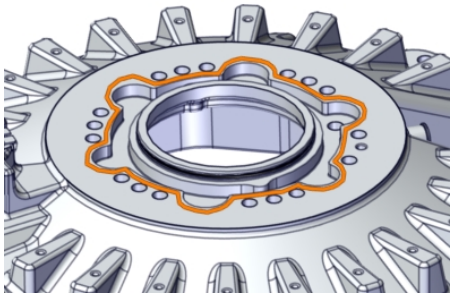

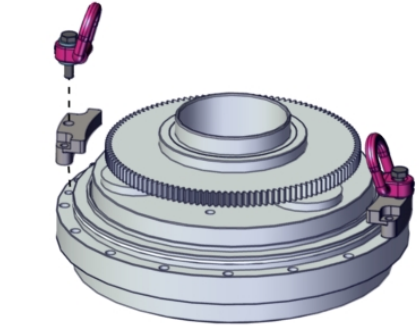

|   | Action  | Note   |
|---|---|--|
| 2 | If not already done, fit and secure the four support legs to the foundation. Then lift up and secure the base on top of the legs.             | <p>Support legs: 3HAC15535-1.<br/>Tightening torque: 550 Nm</p>  <p>xx2100001135</p>               |
| 3 | Wipe the contact surfaces between gearbox and base clean from any contamination.  | <p>Cleaning agent: Isopropanol</p>  <p>xx1700000567</p>   |
| 4 | <p><i>Option Inverted (3317-1)</i></p> <p>Replace the o-ring on the base with a new. Lubricate with some grease and fit it in the groove.</p> | <p>O-ring: 3HAB3772-150 ().<br/>Grease, Shell Gadus S2: 3HAC042536-001.</p>  <p>xx2100001195</p> |

*Continues on next page*



### 5.9.1 Replacing the axis-1 gearbox

*Continued*


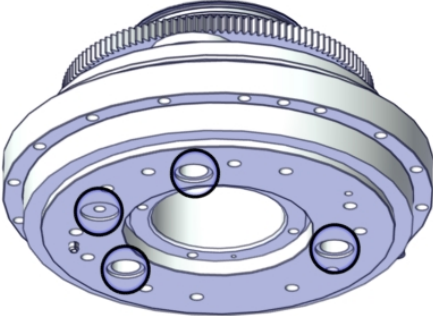
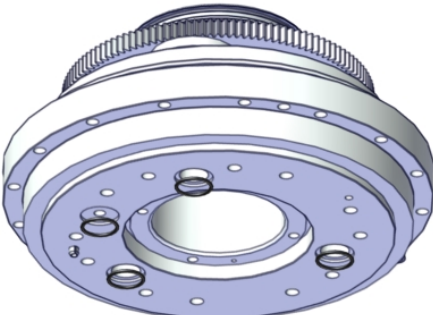
|   | Action  | Note   |
|---|---|--|
| 5 | <p><i>Option Inverted (3317-1)</i><br/>Apply flange sealant to the mounting interface on the base, outside of the groove.</p>   | <p>Flange sealant: Loctite 574 (or equivalent) (-).</p>  <p>xx2100001196</p>                             |
| 6 | <p>Fit the lifting accessories in opposite holes in the gearbox.</p> <p> <b>CAUTION</b></p> <p>Leave a couple of millimeters of space between the lifting adapter and the surface of the gearbox. This is done in order not to damage the surface of the gearbox which is a sealing surface.</p> | <p>Lifting adapter: 3HAC081565-001<br/>Lifting eye: 3HAC16131-1<br/>M12, 2 pcs</p>  <p>xx2100002819</p> |
| 7 | <p> <b>CAUTION</b></p> <p>The weight of the gearbox is 97 kg<br/>All lifting accessories used must be sized accordingly.</p>   |  |

*Continues on next page*

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

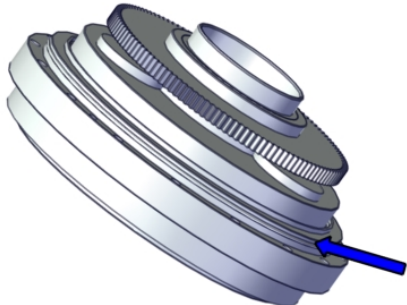
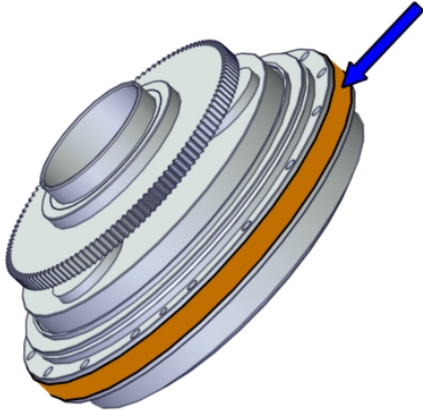
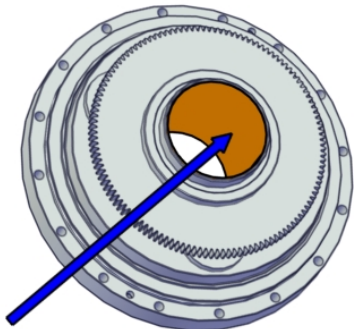
*Continued*

|    | Action   | Note   |
|----|--|--|
| 8  | Attach the lifting accessory and lift the gearbox.   | <p>Lifting accessory (chain): 3HAC15556-1</p>  <p>xx2100002820</p>                                     |
| 9  | Wipe clean the o-ring grooves for the small o-rings beneath the gearbox.   |  <p>xx2100001008</p>   |
| 10 | <p>Clean the new o-rings, lubricate them with some grease and fit them in their grooves in the gearbox.</p> <p><i>Not required for option Inverted (3317-1).</i></p> | <p>O-ring: 3HAC061327-033 (32x4).<br/>Grease, Shell Gadus S2: 3HAC042536-001.</p>  <p>xx2000000413</p> |

*Continues on next page*

## 5.9.1 Replacing the axis-1 gearbox

*Continued*


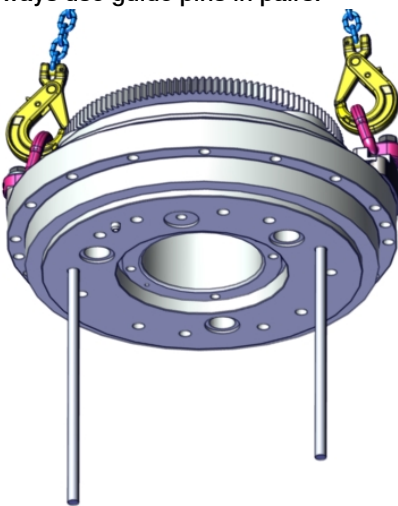
| Action  | Note  |
|---|---|
| <p>11 Check the o-ring and lubricate.<br/>Replace if damaged.</p>   | <p>O-ring: 3HAB3772-93<br/>Grease, Shell Gadus S2: 3HAC042536-001.</p>  <p>xx2100001132</p>                            |
| <p>12 Apply rust preventive to the gearbox surface shown in the figures.</p>  | <p>Rust preventive: 3HAC034903-001 (Mercasol 3110 Waxcoat. Recommended drying time is 24h.)</p>  <p>xx2100001117</p>   |
| <p>13 Wipe clean the inner surfaces of the hole in axis-1 gearbox.<br/><i>Protection type Foundry Plus:</i><br/>Apply rust preventive to the inner surface of the hole, as shown in the figure.</p> | <p>Rust preventive: 3HAC034903-001 (Mercasol 3110 Waxcoat. Recommended drying time is 24h.)</p>  <p>xx2100001169</p> |

*Continues on next page*




## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

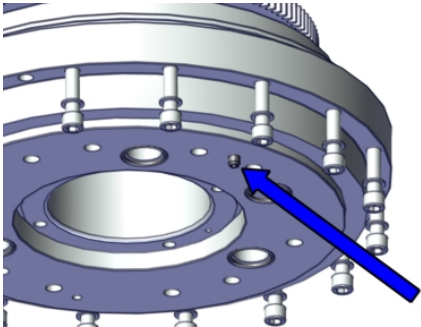

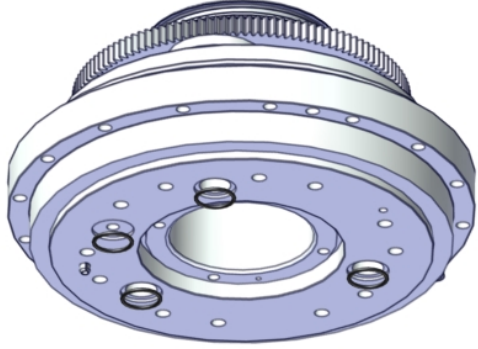
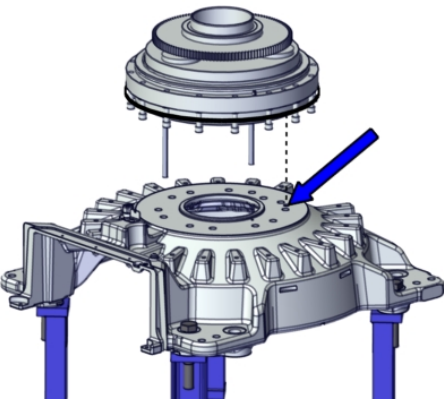
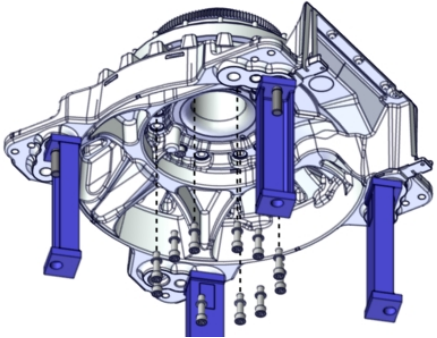
*Continued*

| Action   | Note  |
|--|---|
| <p>14 Fit guide pins in opposite holes in the gearbox.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the gearbox/gear slide better.</p> | <p>Guide pin, M16x200: 3HAC13120-3<br/>Always use guide pins in pairs.</p>  <p>xx2100002821</p> |

### Refitting the axis-1 gearbox to the base

| Action   | Note  |
|--|---|
| <p>1 Before the gearbox is being fitted, place the old o-ring around the gearbox and insert the attachment screws and washers inside the o-ring and into the attachment holes. The o-ring locks the screws in place.</p> <p> <b>Note</b></p> <p>Do not use the new o-ring!</p> <p> <b>Tip</b></p> <p>Another way to secure the screws is to use nuts on the upper side of the gearbox.</p> | <p>Hex socket head cap screw: M12x60 12.9<br/>Gleitmo 603+Geomet 500 (16 pcs)<br/>Washer: Steel 13x19x1.5 (16 pcs)<br/>If the attachment screws and washers are not fitted like this at this point, they must be fitted by rotating axis 1 to get access at the mechanical stop pin location, one at a time.</p>  <p>xx1400002176</p> |

*Continues on next page*


|   | Action   | Note  |
|---|--|---|
| 2 | Verify that the locating pin in the gearbox will match the hole in the base.   |  <p>xx2100001167</p>  |
| 3 | <p>Lower the gearbox against the base with guidance from the guide pins and locating pin.</p> <p> <b>Note</b></p> <p>Verify that the small o-rings underneath the gearbox, stays fitted correctly when the gearbox is being fitted.</p> <p><i>Not required for option Inverted (3317-1).</i></p>  <p>xx2000000413</p> |  <p>xx2100001134</p>   |
| 4 | Lower the lifting accessory so that the chain is no longer stretched.  |   |
| 5 | Fit the attachment screws that secure the gearbox to the base, from underneath.  | <p>Attachment screws: M16x60 12.9 Gleitmo 603+Geomet 500 (12 pcs).</p>  <p>xx2000000412</p> |
| 6 | Remove the guide pins and fit the two remaining screws.  |   |

Continues on next page

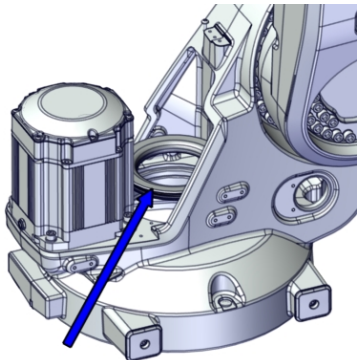
## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

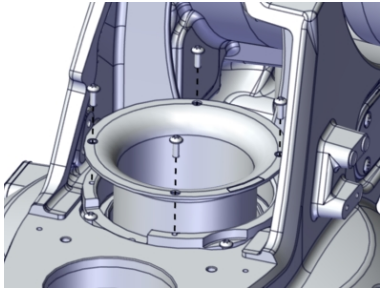
*Continued*

|   | Action  | Note                       |
|---|---|----------------------------|
| 7 | Secure the attachment screws cross-wise.<br><br> <b>Tip</b><br><br>This procedure is best performed by two persons working together: <ul style="list-style-type: none"> <li>• one underneath the robot base making sure that the bit is being fitted into the screw head holes, all the way until they reach the bottom</li> <li>• one using the torque wrench, tightening the screws from beside the base.</li> </ul> | Tightening torque: 300 Nm. |
| 8 | If the cassette sealing is fitted to the gearbox, remove it with a puller tool and proceed with following procedures.<br><br>If the cassette sealing is fitted inside the frame, proceed with following procedures.   |                            |

#### Removing the protection ring in the frame

|   | Action   | Note  |
|---|--|---|
| 1 | <i>Only for floor-mounted robot Foundry Plus</i><br>Cut the flange sealant at the protection ring. |   |
| 2 | <i>Only for floor-mounted robot</i><br>Remove the protection ring.                                 | <br>xx2100001116 |

#### Removing the protection tube

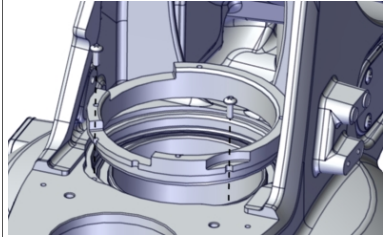
|   | Action  | Note  |
|---|---|---|
| 1 | <i>Option Inverted (3317-1):</i><br>Remove the protection tube by removing the attachment screws. | <br>xx2100002492 |

*Continues on next page*

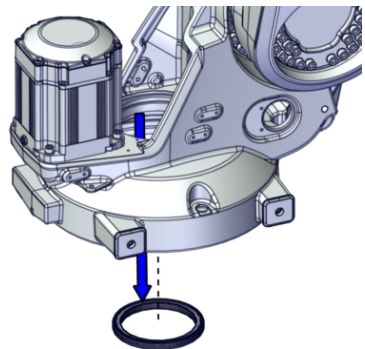


### 5.9.1 Replacing the axis-1 gearbox

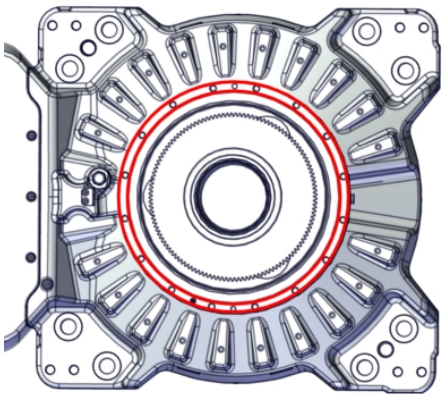
*Continued*

|   | Action  | Note  |
|---|---|---|
| 2 | <i>Option Inverted (3317-1):</i><br>Remove the adapter by removing the attachment screws. | <br>xx2100002493 |

#### Removing the cassette sealing

|   | Action   | Note   |
|---|--|--|
| 1 | Remove the cassette sealing by knocking it down through the frame. | <br>xx2100002309 |

#### Preparations before refitting the arm system


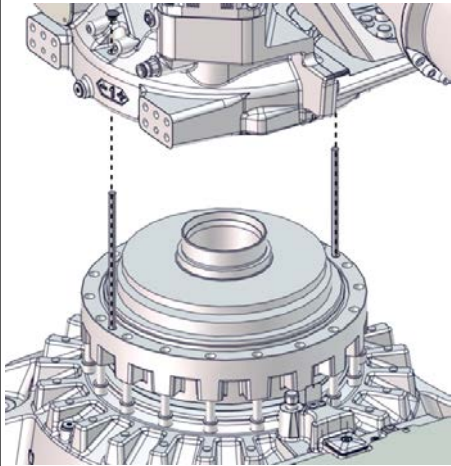
|   | Action   | Note   |
|---|--|--|
| 1 | Wipe clean the contact surfaces from any contamination.  |  |
| 2 | <i>Protection type Foundry Plus:</i><br>Apply flange sealant to the mounting interface on the gearbox, both inside and outside of the screw holes. | Flange sealant: Loctite 5800<br><br>xx2100002225 |
| 3 | Apply some grease on: <ul style="list-style-type: none"> <li>the edge around the gearbox.</li> </ul>   |  |

*Continues on next page*


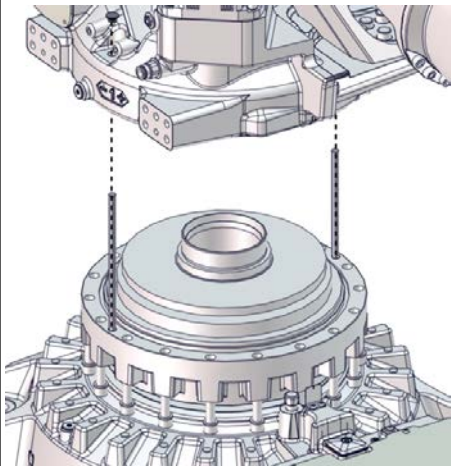
## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*


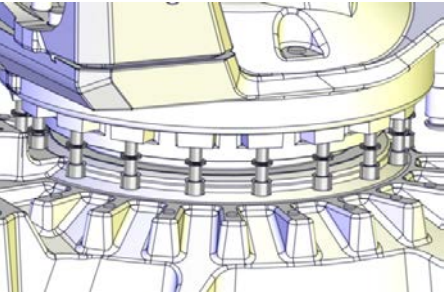

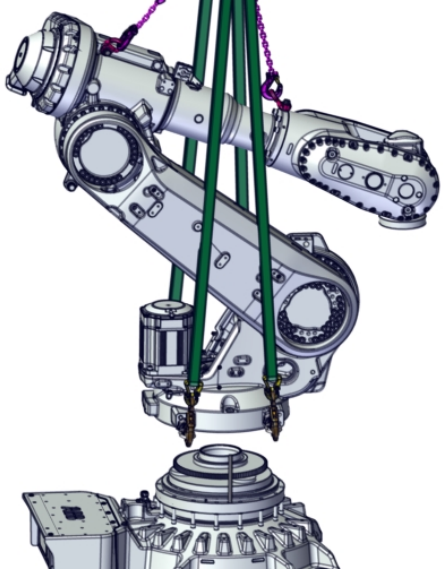


| Action  | Note   |
|---|--|
| <p>4 Apply guide pins in the guide pin holes in the gearbox.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the frame slide better.</p> | <p>Guide pin, M12x150 / Guide pin, M12x250: 3HAC13056-2 / Guide pin, M12x250</p> <p>Always use guide pins in pairs.</p>  <p>xx1700000329</p> |

### Refitting the arm system

| Action  | Note   |
|---|--|
| <p>1  <b>CAUTION</b></p> <p>The weight of the complete arm system is 546-616 kg (depending on robot variant)</p> <p>All lifting accessories must be sized accordingly.</p> |  |
| 2 Make sure that all lifting accessories still is fitted correctly on the arm system.   | See <a href="#">Attaching the lifting accessories to the arm system</a> .                                |
| 3 Lift the arm system up, to be able to reach the contact surfaces underneath the frame.  |  |
| 4 Wipe clean the contact surfaces from any remaining contamination.   |  |
| 5 Lift the arm system to mounting position, verify that the hole pattern match and that the guide pins are installed in the correct holes.  |  <p>xx1700000329</p> |

*Continues on next page*



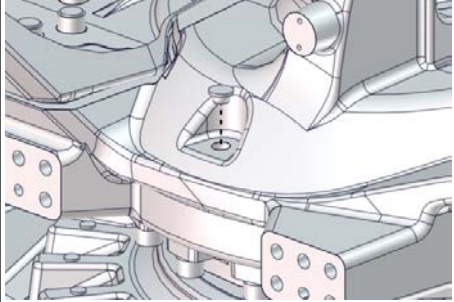
|    | Action   | Note   |
|----|--|--|
| 6  | <p>Remove the big o-ring that holds the attachment screws in the temporary position and let them drop down on the base.</p> <p> <b>Note</b></p> <p>Make sure that none of the screws or washers are missing and that they are in correct position.</p>  |  <p>xx1400002169</p>   |
| 7  | <p>Lift the complete arm system and lower it slowly down over the guide pins, until it is possible to insert the attachment screws manually.</p> <p> <b>CAUTION</b></p> <p>Do not lower the arm system completely at this stage! The attachment screws must be fitted in two steps. If not, the complete arm system will risk resting on the attachment screws in the wrong position!</p> |  <p>xx2100001411</p>  |
| 8  | <p>Fit the attachment screws manually as far as possible. Lower the complete arm system slowly in steps, until all attachment screws no longer can reach the base, when the arm system is lowered all the way down.</p>  | <p>Hex socket head cap screw: M12x60 12.9<br/>Gleitmo 603+Geomet 500 (16 pcs)</p>  |
| 9  | <p>Make sure that the complete arm system is lowered all the way down.</p>   |  |
| 10 | <p> <b>Note</b></p> <p>The attachment screw at the axis-1 synchronization plate can not be reached to be secured at this stage. Make sure it is still in its place and will not be damaged in the continued procedure.</p>  |  |
| 11 | <p>Secure all screws now possible to reach.</p> <p> <b>Note</b></p> <p>A bits holder is needed to be able to reach the attachment screws.</p>   | <p>Bit holder and hexagon bit SW10<br/>Bit holder dimension: 5/16" (14x18 mm)<br/>Tightening torque: standard torque 120 Nm (<i>Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws on page 662.</i>)</p> |

Continues on next page

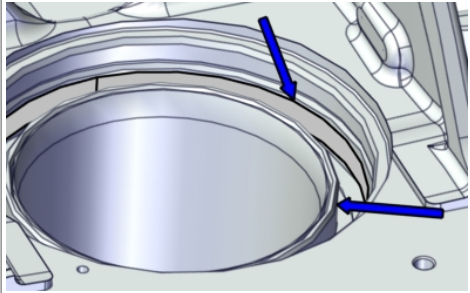
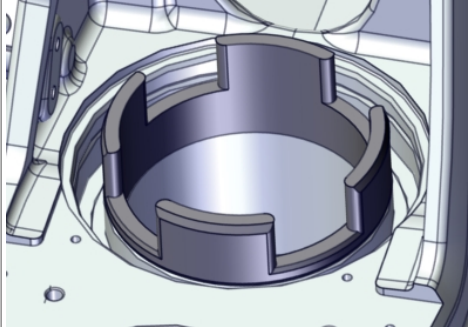
## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

| Action  | Note   |
|---|--|
| 12 If required, manually rotate axis-1 to a position where the remaining attachment screw at the axis-1 synchronization plate can be secured. |  |
| 13 Remove the guide pins and refit the two plastic protection plugs.  |  <p>xx1700000320</p> |

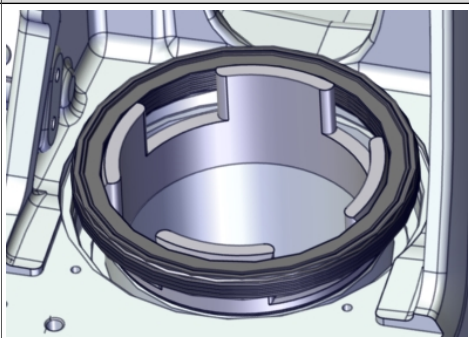
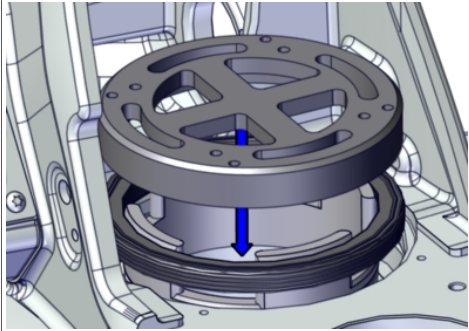
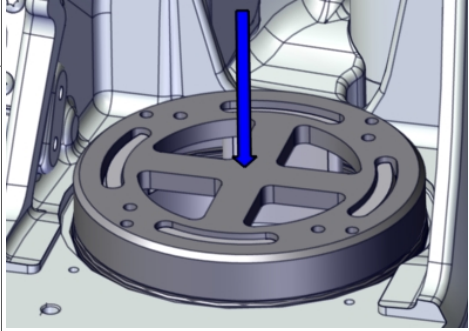
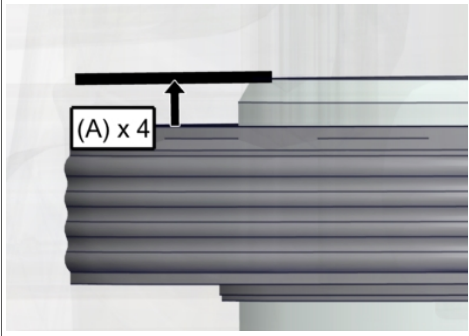
### Refitting the cassette sealing

| Action  | Note  |
|---|---|
| 1 Remove any old assembly lubricant residues or other contamination from the contact surfaces for the sealing in the frame. |  <p>xx2100002377</p>   |
| 2 Fit the first part of the mounting tool to the frame.   | <p>Replacement tool for cassette sealing:<br/>3HAC079880-001</p>  <p>xx2100001188</p> |

*Continues on next page*

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

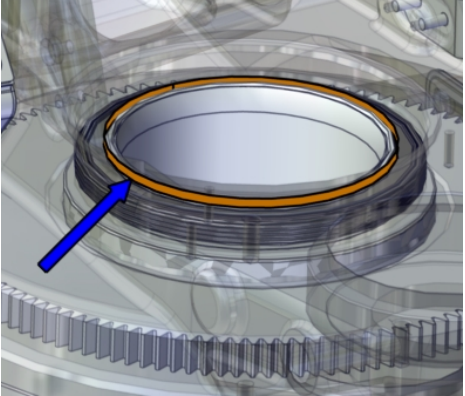
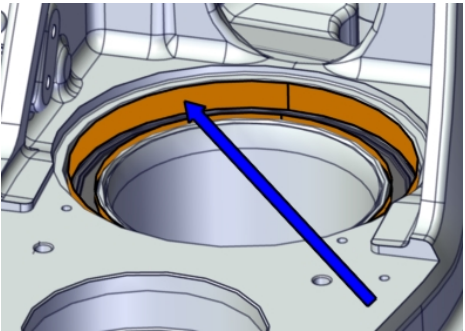
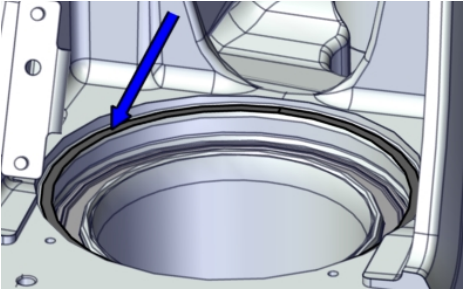
|   | Action   | Note   |
|---|--|--|
| 3 | Fit the cassette sealing on the tool with the plain side facing upwards (groove downwards).  |  <p>xx2100001189</p>   |
| 4 | Fit the second part of the mounting tool on top of the sealing.  |  <p>xx2100001191</p>  |
| 5 | <p>First push down the tool by hand to guide down the sealing aligned.</p> <p>Then use a rubber mallet to knock down the tool and sealing evenly, until the sealing has reached the bottom all the way around.</p> |  <p>xx2100001192</p> |
| 6 | Remove the mounting tool.  |  |
| 7 | Verify that the cassette sealing is fitted evenly by measuring the distance (A) between the sealing and the axis-1 tube upper edge, at four (4) locations. The measurement is approximately 5 mm.                  |  <p>xx2100001193</p> |

*Continues on next page*

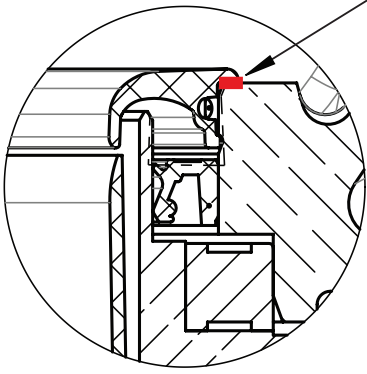
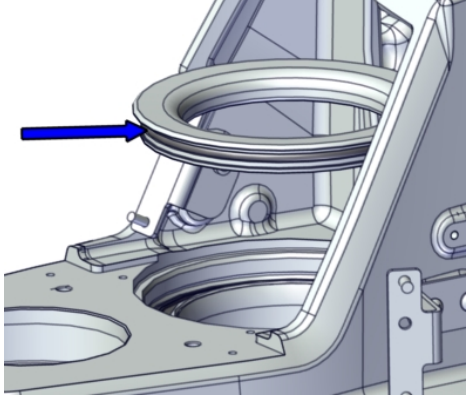
## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox


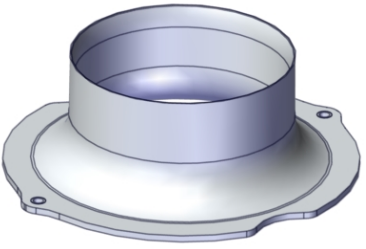
*Continued*

|   | Action  | Note   |
|---|---|--|
| 8 | <p><b>Protection type Foundry Plus</b></p> <p>Apply rust preventive to the outer surface of the gearbox tube and outer surface of the frame hole, all the way down to the cassette sealing, as shown in the figure.</p> | <p>Rust preventive: 3HAC034903-001 (Mercasol 3110 Waxcoat. Recommended drying time is 24h.)</p>  <p>xx2100001170</p>  <p>xx2100001172</p> |
| 9 | <p><b>Only for floor-mounted robot with protection type Foundry Plus</b></p> <p>Apply sealant to the mounting surface for the protection ring.</p>  | <p>Sealant (grey): 3HAC026759-001 ( ) Sikaflex 521FC.</p> <p><b>Protection type Foundry Plus.</b></p> <p><b>Not required for option Inverted (3317-1).</b></p>  <p>xx2100001173</p>  |

*Continues on next page*

| Action  | Note   |
|---|--|
| <p>10 <i>Only for floor-mounted robot</i><br/> Refit the protection ring. Verify that the o-ring is undamaged and placed in its groove on the protection ring.<br/> Replace if damaged.<br/> <i>Protection type Foundry Plus:</i><br/> Apply flange sealant under the protection ring flange.</p>  <p>xx2500000073</p> | <p>O-ring: 3HAB3772-57<br/> Sealant (grey), Sikaflex 521FC: 3HAC026759-001.</p>  <p>xx2100001136</p> |

#### Refitting the protection tube

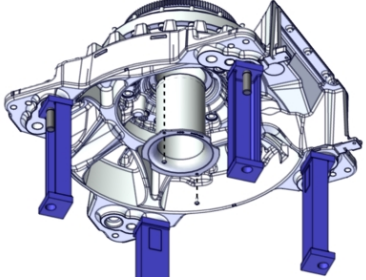
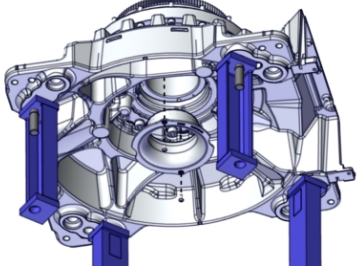
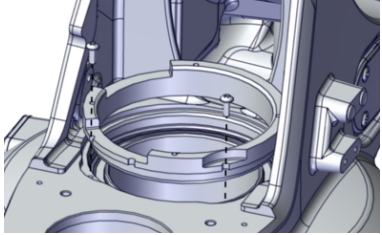
| Action  | Note  |
|---|---|
| <p>1 Check the protection tube for damages.<br/> Replace if damaged.</p>        |  <p>xx1700001374</p> <p><i>Option Inverted (3317-1):</i></p>  <p>xx2100001168</p> |
| <p>2 Wipe the surfaces of the protection tube clean from any contamination.</p> |   |

*Continues on next page*

## 5 Repair

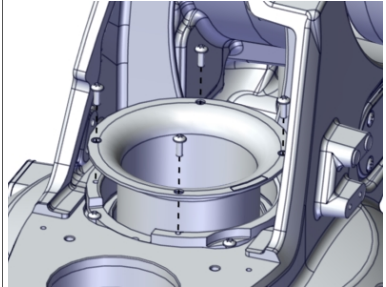
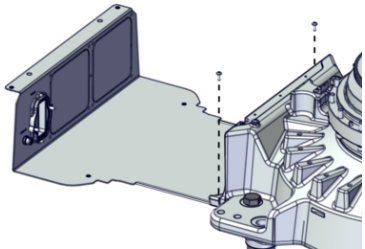
### 5.9.1 Replacing the axis-1 gearbox

*Continued*



|   | Action   | Note   |
|---|--|--|
| 3 | <p>Refit the protection tube to the base. Secure with the attachment screws.</p> <p><i>Option Inverted (3317-1):</i><br/>Apply locking liquid on the screws.</p> | <p>Torx pan head screw: M6x16<br/>Stainless steel A2-70 (2 pcs).<br/>Tightening torque: 10 Nm.</p>  <p>xx2100001112</p> <p><i>Option Inverted (3317-1)</i></p>  <p>xx2100001138</p> <p>Locking liquid: Loctite 2400 (or equivalent Loctite 243)</p> |
| 4 | <p><i>Option Inverted (3317-1):</i><br/>Refit the adapter with the attachment screws.</p>  | <p>Torx pan head screw: M6x16 A4-80 (2 pcs)</p>  <p>xx2100002493</p>  |

*Continues on next page*



|   | Action  | Note   |
|---|---|--|
| 5 | <p><i>Option Inverted (3317-1):</i><br/> Refit the protection tube with the attachment screws.<br/> Apply locking liquid on the screws.</p> | <p>Torx pan head screw: M6x16 A4-80 (4 pcs)<br/> Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))<br/> Tightening torque: 10 Nm.</p>  <p>xx2100002492</p> |
| 6 | <p>Refit the back plate and secure with two screws.</p>   | <p>Tightening torque: 10 Nm<br/> Torx pan head screw: M6x16<br/> Stainless steel A2-70 (2 pcs)</p>  <p>xx2000000411</p>  |

#### Preparations prior to refitting motor


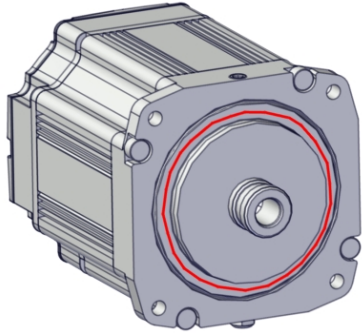
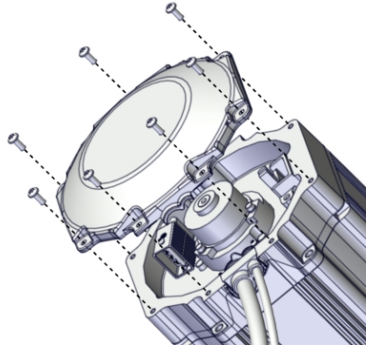
|   | Action  | Note  |
|---|---|---|
| 1 |  <b>DANGER</b><br><p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p>  |   |
| 2 | <p>Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.</p>  <b>Tip</b><br><p>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface.</p> | <p>Cleaning agent: Loctite 7200, Loctite 7063</p> |

*Continues on next page*

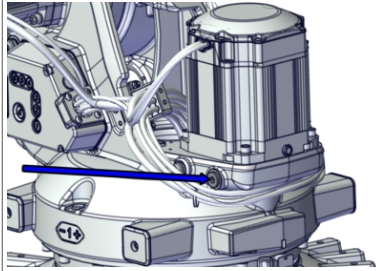
## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

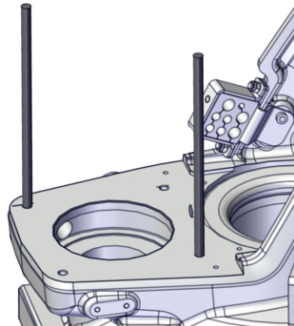





|   | Action   | Note  |
|---|--|---|
| 3 | <p>Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.</p> <p> <b>Note</b></p> <p>The purpose of the groove is to catch excess sealant. No o-ring is used.</p> | <p>Flange sealant: Loctite 5800</p>  <p>xx2100000520</p> |
| 4 | <p>Remove the cover, if fitted to the new spare part motor.</p>  |  <p>xx2100000596</p>                                    |

#### Floor-mounted robot: Refitting the axis-1 motor

|   | Action  | Note  |
|---|---|---|
| 1 | <p>Remove the plug from the venting hole. This is done to evacuate air during refitting of the motor.</p> |  <p>xx2100001477</p> |

*Continues on next page*



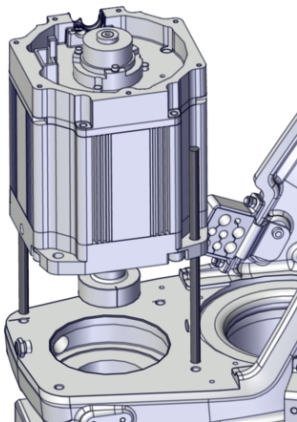
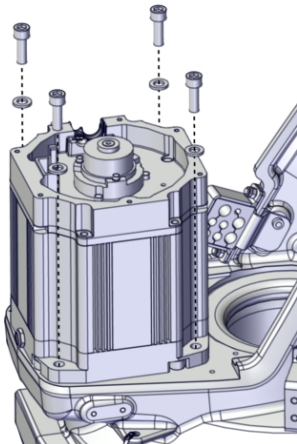
|   | Action  | Note   |
|---|---|--|
| 2 | Fit guide pins in opposite holes.   | <p>Guide pin, M10x150: 3HAC15521-2</p> <p>Always use guide pins in pairs.</p>  <p>xx2100001194</p>                    |
| 3 |  <b>CAUTION</b><br>The weight of the motor is 21 kg  |  |
| 4 | Fit the rotation tool.  | Rotation tool M4: 3HAB7887-1   |
| 5 | <p>Release the brakes on the motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 6 |  <b>CAUTION</b><br>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.   |  |

*Continues on next page*

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

|    | Action  | Note   |
|----|---|--|
| 7  | <p>Lower the motor into position.</p> <ul style="list-style-type: none"> <li>• Make sure that the motor pinion is properly mated to the gear in the gearbox.</li> <li>• Make sure that the motor pinion does not get damaged.</li> <li>• Make sure that the direction of the cable gland exit is facing the correct way.</li> </ul> |  <p>xx2100002186</p>  |
| 8  | <p>Secure the motor with its attachment screws and washers.<br/>Use a bits extender to reach the screws.</p>  | <p>Hex socket head cap screw:<br/>M10x30 12.9 Gleitmo 603+Geomet 500 (4 pcs)<br/>Bits extender: 3HAC12342-1<br/>Tightening torque: 50 Nm.</p>  <p>xx2100000503</p> |
| 9  | Disconnect the brake release tool.  |  |
| 10 | Perform a leak-down test.   | See <a href="#">Performing a leak-down test on page 196</a> .  |

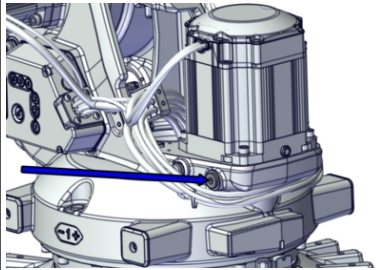
#### Refilling oil in the gearbox

|   | Action   | Note   |
|---|--|--|
| 1 | <p>Refill oil in the gearbox.<br/><i>Option Inverted (3317-1):</i><br/>Because of the risk of getting air bubbles into axis-1 gear in inverted position when filling oil, it is recommended to fill the gearbox with oil before lifting up the robot to inverted position.</p> | See <a href="#">Changing the oil in axis-1 gearbox on page 150</a> . |

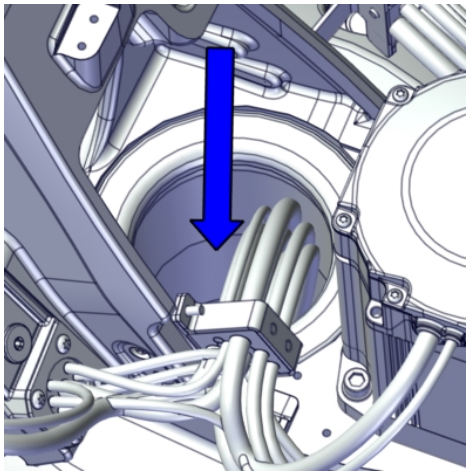
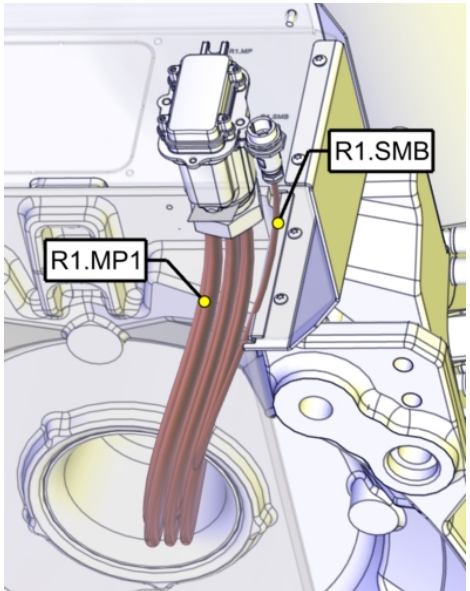
*Continues on next page*

## 5.9.1 Replacing the axis-1 gearbox

*Continued*

|   | Action                                | Note  |
|---|---------------------------------------|---|
| 2 | Refit the oil plug with a new o-ring. | <p>O-ring, G 1/2": 3HAC061327-059<br/>Tightening torque: 24 Nm.</p>  <p>xx2100001477</p> |

## Refitting the cable harness in the base

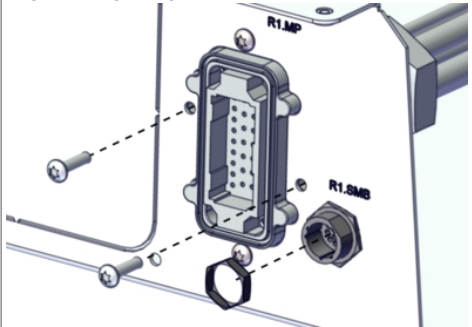
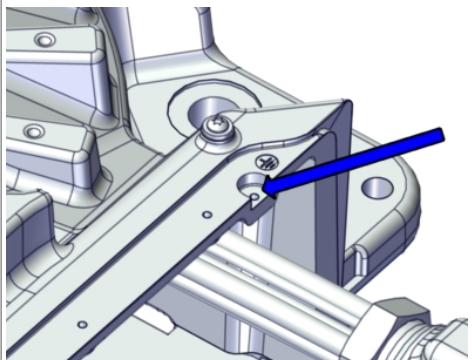
|   | Action   | Note   |
|---|--|--|
| 1 | Run the cables through the protection tube.  |  <p>xx2100001216</p>  |
| 2 | <p>Run the cabling through the base.</p> <ul style="list-style-type: none"> <li>Make sure that the cables are not twisted. Each cable must be in line with its position on the base plate.</li> <li>Make sure that the R1.SMB cable will run on the correct side of the R1.MP1, see the figure.</li> </ul> |  <p>xx1300000736</p> |

*Continues on next page*

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

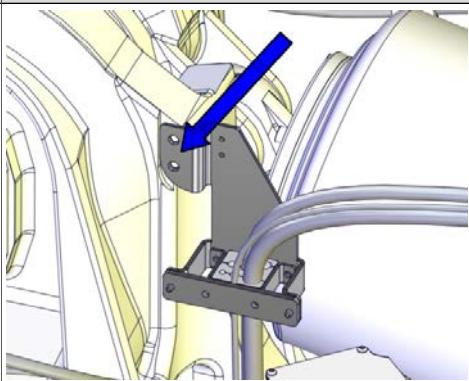
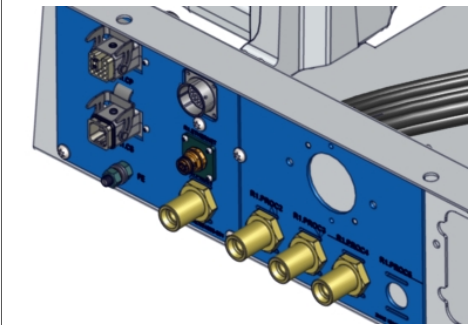
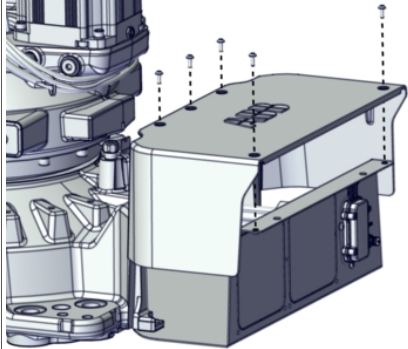
*Continued*

|   | Action   | Note  |
|---|--|---|
| 3 | Make sure that the markings on the cables are facing the base cover, when connected.   |   |
| 4 | Connect connectors R1.MP and R1.SMB.   | <p>Screw dimension for R1.MP: M6x25 A2-70<br/>Tightening torque for R1.MP: 10 Nm.<br/>Tightening torque for R1.SMB: 10 Nm.</p>  <p>xx2100001109</p> |
| 5 | Connect the earth cable.   | <p>Screw dimension: M6x16.<br/>Washer dimension: 6.4x17x3.<br/>Tightening torque: 10 Nm.</p>  <p>xx2100000982</p>                                  |
| 6 | If used, run the DressPack cables through the protection tube in the base.<br>If necessary, lubricate the cables with grease to make them run more smoothly. |   |
| 7 | If used, run the DressPack hoses through the protection tube in the base.<br>Make sure that the hoses are running correctly and are not twisted!             |   |

*Continues on next page*

## 5.9.1 Replacing the axis-1 gearbox

*Continued*

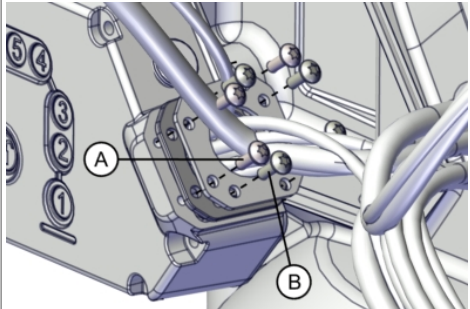
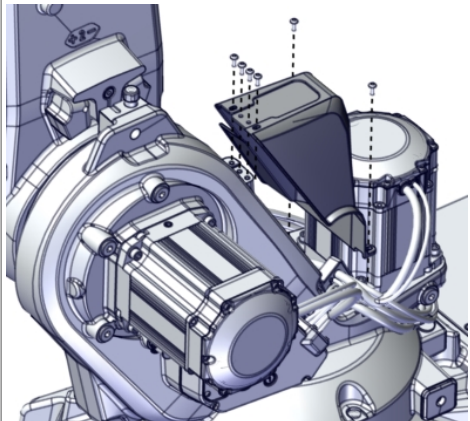
|    | Action  | Note   |
|----|---|--|
| 8  | If used, fit the bracket that hold the DressPack to the frame.  | <br>xx140000078  |
| 9  | If used, connect the DressPack cable package on the base plate. | <br>xx2300001093  |
| 10 | Refit the base cover.   | <p>Torx pan head screw: M6x16 Stainless steel A2-70 (5 pcs)<br/>Tightening torque: 10 Nm.</p> <br>xx2100000981 |

*Continues on next page*

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

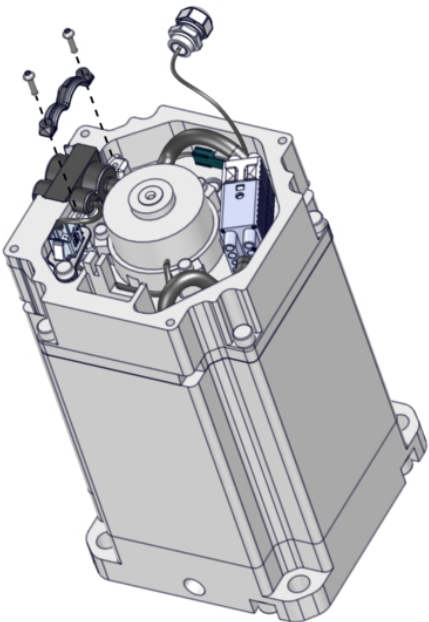


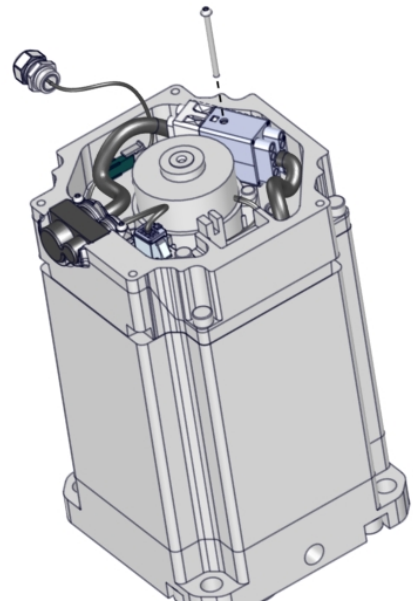
| Action |   | Note   |
|--------|---|--|
| 11     | Fit the SMB cabling to the electronic box and refit the cable clamp to the box with the screws. | <br>xx2200001984<br><b>A</b> Torx pan head screw: M6x16 A4-80 (4 pcs)<br><b>B</b> Torx pan head screw: M6x16 8.8-A2F (4 pcs) |
| 12     | <i>Protection type Foundry Plus</i><br>Refit the axis-1 cable protection.                       | <br>xx2100000979  |

#### Connecting the axis-1 motor cables

| Action |   | Note |
|--------|---|------|
| 1      | Put the motor cables in place in the opening. |      |

*Continues on next page*



|   | Action  | Note   |
|---|---|--|
| 2 | Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | Connect the motor cables.<br> <b>Note</b><br>Connect in accordance with the markings on the connectors.  |  |
| 4 | Fit a screw to the power connector.<br> <b>Note</b><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | <p>Tightening torque: 1 Nm</p>  <p>xx2200001736</p>                        |

Continues on next page

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

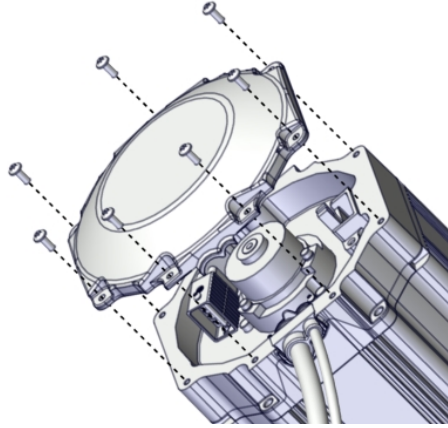
|   | Action  | Note   |
|---|---|--|
| 5 | Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <p>Axis-1 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-2 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-3 Connection box cover FS130 with gasket:<br/>3HAC072863-003 (Graphite White)<br/>3HAC072863-005 (ABB Orange)</p> <p>Axis-4 Connection box cover FS100 with gasket:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |

*Continues on next page*

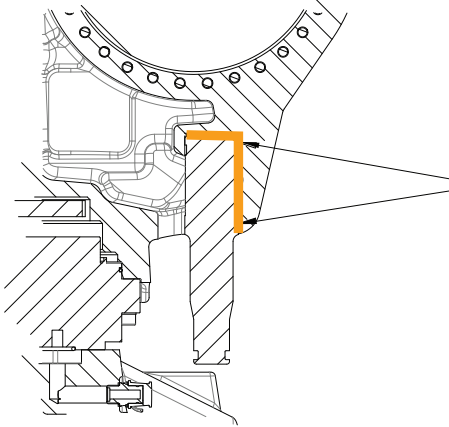


### 5.9.1 Replacing the axis-1 gearbox

*Continued*

|   | Action   | Note   |
|---|--|--|
| 7 | Refit the motor cover with its attachment screws.<br>Use locking liquid. | Torx pan head screw: M5x12 Stainless steel A2-70<br>Locking liquid: Loctite 2400 (or equivalent Loctite 243)<br>Tightening torque: 6 Nm.<br><br>xx2100000596 |

#### Refitting the mechanical stop



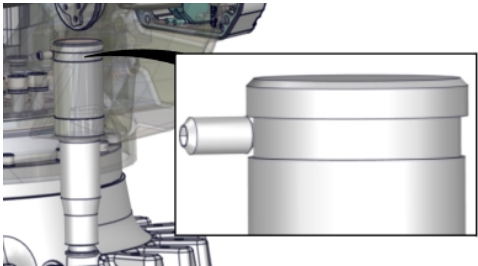
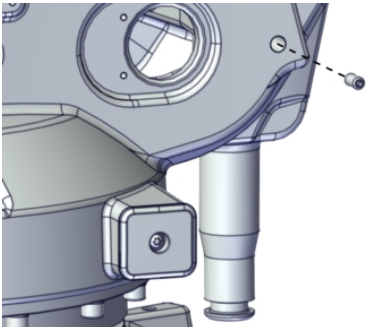
|   | Action  | Note  |
|---|---|---|
| 1 | <i>Protection type Foundry Plus</i><br>Clean and apply rust preventive on the surfaces shown in the figure, on stop pin and in the hole as shown in the figure. | Rust preventive: 3HAC034903-001 (Mecasol 3110 Waxcoat. Recommended drying time is 24h.)<br><br>xx2100001139 |

*Continues on next page*

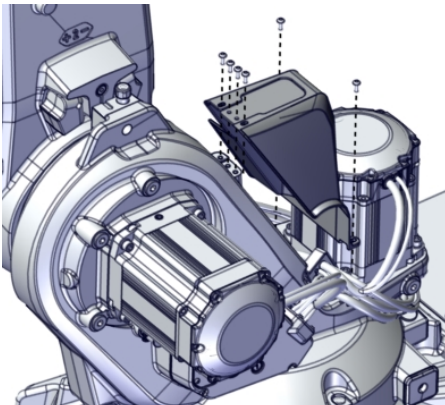
## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*


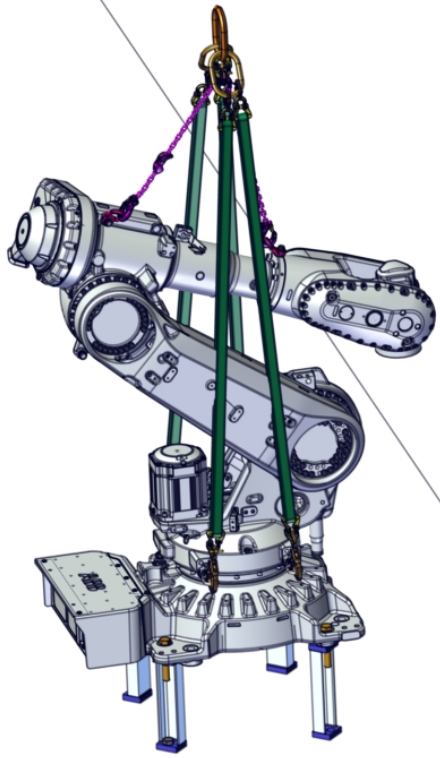
| Action   | Note  |
|--|---|
| <p>2 Refit the mechanical stop pin and secure it with the attachment screw.<br/>Apply locking liquid on the screw.</p> <p> <b>Note</b></p> <p>Do not overtighten the attachment screw, use specified tightening torque.</p> <p> <b>CAUTION</b></p> <ol style="list-style-type: none"> <li>1 Push the stop pin all the way up against the frame, and only tighten slightly by hand.</li> <li>2 Feel that the stop pin can move some millimeters in vertical direction. This verifies that the screw is inserted in the groove, and not against the flange.</li> <li>3 Tighten the screw with tightening torque.</li> </ol>  <p>xx2200001500</p> | <p>Hex socket screw with cup: M10x20 Stainless Steel<br/>Locking liquid: Loctite 2400 (or equivalent Loctite 243)<br/>Tightening torque: 10 Nm</p>  <p>xx2100001410</p> |

### Refitting the covers for Foundry Plus and floor mounted robots

| Action  | Note   |
|---|--|
| <p>1 <i>Protection type Foundry Plus</i><br/>Refit the axis-1 cable protection.</p> | <p>Torx pan head screw: M6x16 A4-80 (4 pcs)<br/>Hex socket head cap screw: M10x16 stainless steel A2-70 (3 pcs)</p>  <p>xx2100000979</p> |

*Continues on next page*

## Securing the floor mounted robot to the foundation

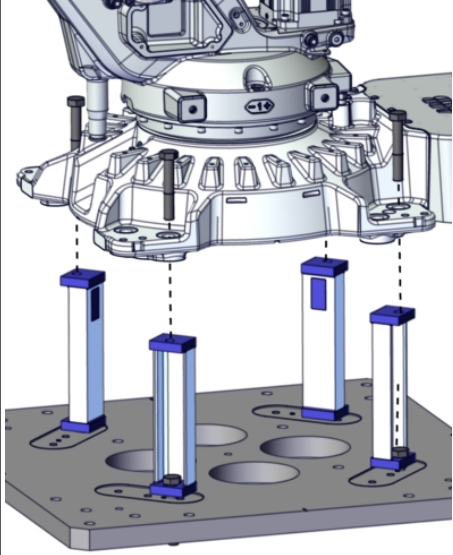
|   | Action   | Note  |
|---|--|---|
| 1 | <p> <b>CAUTION</b></p> <p>The weight of the IRB 5710 robot is<br/>           IRB 5710-110/2.3: 830 kg (<i>Inverted: 845 kg</i>)<br/>           IRB 5710-90/2.7: 830 kg (<i>Inverted: 840 kg</i>)<br/>           IRB 5710-90/2.3 LID: 890 kg (<i>Inverted: 905 kg</i>)<br/>           IRB 5710-70/2.7 LID: 885 kg (<i>Inverted: 900 kg</i>)<br/>           All lifting accessories used must be sized accordingly.</p> |   |
| 2 | Attach the lifting accessories to the robot, if removed.   | <p>Lifting accessory set: 3HAC15607-1<br/>           See <a href="#">Attaching the lifting accessories to the arm system on page 465</a>.</p>  <p>xx2100002226</p> |
| 3 | Stretch the lifting accessories enough to secure the robot, but without taking the full weight of the robot.   |   |

Continues on next page

## 5 Repair


### 5.9.1 Replacing the axis-1 gearbox

*Continued*






|   | Action   | Note  |
|---|--|---|
| 4 | Unscrew the screws that secure the base to the support legs and lift up the robot. |  <p>xx2100001113</p>  |
| 5 | Remove the support legs.   |   |
| 6 | Lower the robot to the foundation.   |   |
| 7 | Secure the robot to the foundation.  | <p>M24 x 100 (8 pcs)<br/> 550 Nm (screws lubricated with Molykote 1000)<br/> 600-725 Nm, typical 650 Nm (screws none or lightly lubricated)</p> |

#### Securing an inverted robot to the foundation

Use this procedure to orient and secure the robot inverted.

|   | Action  | Note   |
|---|---|--|
| 1 | <p>Install the fork lift pockets to the robot.</p>  <p><b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> | <p>See user instructions enclosed with the fork lift accessory set.</p> <p>Fork lift accessory set:<br/> 3HAC058825-001.</p> |

*Continues on next page*

|   | Action  | Note   |
|---|---|--|
| 2 | <p>Choose one of the following lifting methods:</p> <ul style="list-style-type: none"> <li>Lifting and turning with the fork lift (rotator attachment required): <ol style="list-style-type: none"> <li>Insert the forks of the fork lift truck into the fork lift pockets, as far as possible.</li> <li>Raise the forks of the fork lift truck to make sure that the weight of the robot rests on the forks.</li> </ol> <div>  <b>Tip</b> </div> <p>Two M16 screws can be fitted to the fork lift pockets, to press the forks against the pockets and make the lift more stable.</p> </li> <li>Lifting and turning with the turning tool and overhead crane: <ol style="list-style-type: none"> <li>Install and use the turning tool according to enclosed user instructions.</li> </ol> <div>  <b>DANGER</b> </div> <p>Handling the tool incorrectly will cause serious injury.<br/>Read and follow enclosed user instructions for the tool.</p> </li> </ul> |  |
| 3 | Remove the bolts that secure the robot to the foundation/support legs.  |  |
| 4 | Move the robot close to its installation location.  |  |
| 5 | <p>Rotate the robot into inverted position using the turning tool or using a fork lift truck with a rotator attachment.</p> <div>  <b>DANGER</b> </div> <p>Make sure that there is enough space underneath the robot. See user instructions for the turning tool.</p>  | <p>Lifting and turning tool:<br/>3HAC073537-001</p> <p>See user instructions enclosed with the turning tool.</p>   |
| 6 | Guide the robot using two attachment screws while lifting it into its mounting position.  |  |
| 7 | <p>Fit the bolts and washers in the base attachment holes.</p> <div>  <b>Note</b> </div> <p>Lightly lubricate screws before assembly.</p> <div>  <b>CAUTION</b> </div> <p>If high stress on screws are suspected, replace used screws with new ones.</p>  | <p>Suitable screws, lightly lubricated:<br/>M24 x 100 (8 pcs), 8.8.</p> <p>Suitable washer: 4 mm flat washer.</p> <p>Screw tightening yield point utilization factor (v) (according to VDI2230): 90% (v=0.9).</p> <p>Tightening torque:<br/>550 Nm (screws lubricated with Molykote 1000)<br/>600-725 Nm, typical 650 Nm (screws none or lightly lubricated)</p> |

Continues on next page

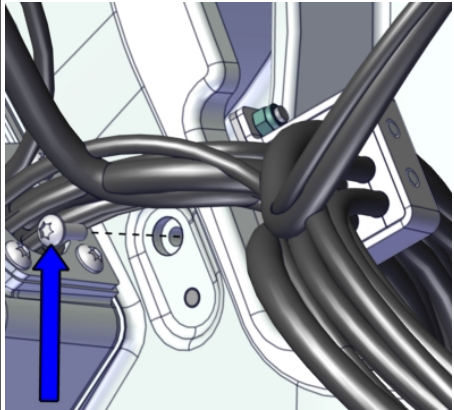
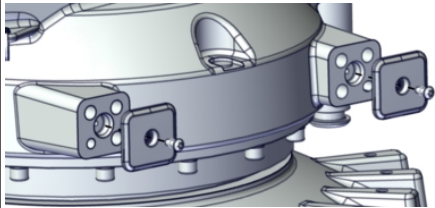

## 5 Repair

### 5.9.1 Replacing the axis-1 gearbox

*Continued*

|   | Action   | Note |
|---|--|------|
| 8 | Tighten bolts in a crosswise pattern to ensure that the base is not distorted. |      |
| 9 | Reconnect the robot cables to the base.  |      |

#### Concluding procedure

|   | Action   | Note   |
|---|--|--|
| 1 | Refit the cable bracket on the frame.  | <br>xx2100001108                               |
| 2 | Remove the lifting accessories.  |  |
| 3 | Refit the fork lift protection covers with screws and washers.   | Tightening torque: 10 Nm<br><br>xx2100001409 |
| 4 | Calibrate the robot.   | See <a href="#">Calibration on page 621</a> .  |
| 5 |  <b>DANGER</b><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |  |

## 5.9.2 Replacing the axis-2 gearbox

### Space required nearby robot

This section describes how to replace the gearbox without needing to remove the cable harness and DressPack cable package (if installed) from the robot.

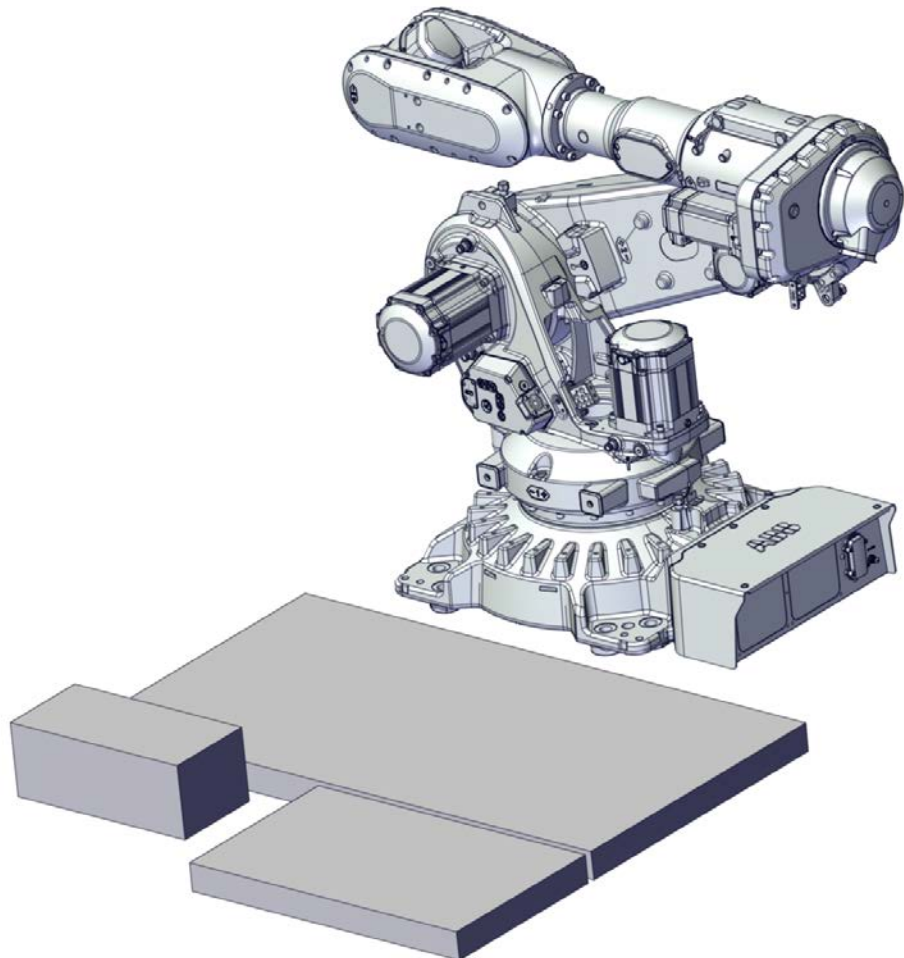
The described procedure requires free space on the floor nearby the robot. There should be enough space to place foam boards, pallets or similar protective material nearby the robot.

If needed, run axis-1 into a position that gives the required space. The figure shows an example.



### **DANGER**

The base shall be fitted to the foundation when performing this procedure!



xx2000000441

*Continues on next page*



## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

*Continued*

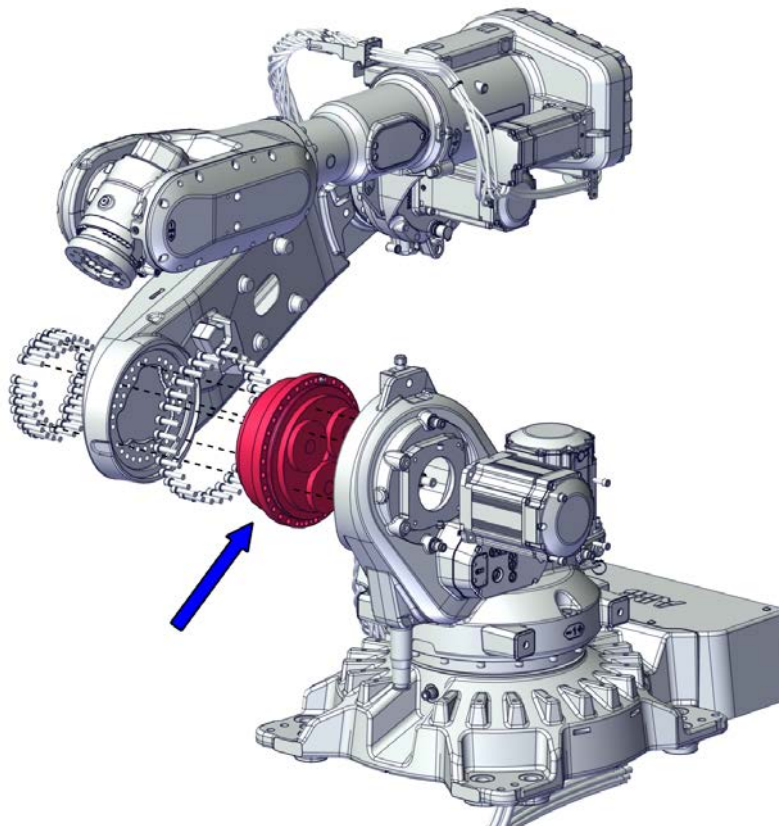


#### Note

Keeping the cable harness and DressPack fitted on the robot during gearbox replacement is only a recommendation. If it is not possible to put the lower and upper arm close enough to the robot, the cable harness and DressPack in the base and in the frame must be removed first.

#### Location of the gearbox

The gearbox is located as shown in the figure.



xx2000000450

#### Summary of the replacement procedure

This is a brief summary of the replacement procedure, containing the major actions to be performed.

- 1 If installed in an inverted position (option 3317-1): Lift down the robot to floor standing and secure to the foundation.
- 2 Drain the axis-2 gearbox.
- 3 Loosen the cabling brackets inside the lower arm and on the frame.
- 4 Remove the upper and lower arm mounted together, as an assembly.
- 5 Remove the axis-2 motor.
- 6 Replace the axis-2 gearbox.

*Continues on next page*



## Required spare parts

**Note**

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number   | Note            | Level |
|------------|--|-----------------|-------|
| Gearbox    | 3HAC072004-003<br>(Graphite White)<br>3HAC072004-005<br>(ABB Orange) | Includes o-ring | L2    |

## Required tools and equipment

| Equipment                               | Article number               | Note  |
|---|------------------------------|---|
| Lifting and turning tool                | 3HAC073537-001               | Lift and rotation of inverted robot.<br>Requires fork lift accessory set 3HAC058825-001.<br>User instructions are enclosed with the tool. |
| Lifting eye                             | 3HAC16131-1                  | M12, 2 pcs  |
| Lifting shackle                         | -                            | SA-10-8-NA1   |
| Fender washer                           | -                            | Outer diameter: minimum 26 mm, maximum 30 mm, hole diameter: 13 mm, thickness: 3 mm.  |
| Lifting accessory (chain)               | 3HAC15556-1                  | Lifting instruction 3HAC15880-2 enclosed.   |
| Roundsling, 1.5 m                       | -                            | Length: 1.5 m.  |
| Roundsling, 1 m                         | -                            | Length: 1 m.  |
| Brake release tool                      | 3HAC081310-001               | User instructions are enclosed with the tool.   |
| Bits extender                           | 3HAC12342-1                  | 300 mm, bits 1/2"   |
| Removal tool motor M12                  | 3HAC14631-1                  | Used to push out the motor, if necessary.<br>Always use removal tools in pairs.   |
| Lifting accessory, motor                | 3HAC15534-1                  | Lifting instruction 3HAC15640-2 enclosed.   |
| Guide pin, M10x150                      | 3HAC15521-2                  | Always use guide pins in pairs.   |
| Guide pin, M12x150 / Guide pin, M12x200 | 3HAC13056-2 /<br>3HAC13056-3 | Always use guide pins in pairs.   |
| Screws M10x60, fully threaded           | -                            | Used to push out the gearbox, if necessary.   |
| Lifting accessory for gear              | 3HAC081585-001               | For lifting the gearbox   |
| Rotation tool M4                        | 3HAB7887-1                   | Used to rotate the motor pinion.<br>Add screw M4.   |

Continues on next page

## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

*Continued*

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Adjustment tool for gear              | 3HAC080331-001   | Used to rotate the gear for matching hole pattern with frame.   |
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

#### Required service parts

| Consumable                             | Article number   | Note   |
|--|--|--|
| Grease                                 | 3HAC042536-001   | Shell Gadus S2   |
| Rust preventive                        | 3HAC034903-001   | Mercasol 3110 Waxcoat. Recommended drying time is 24h.                           |
| Cleaning agent                         | -  | Loctite 7200   |
| Cleaning agent                         | -  | Loctite 7063   |
| Flange sealant                         | -  | Loctite 5800   |
| O-ring                                 | 3HAC061327-066   | Replace if damaged.  |
| Connection box cover FS180 with gasket | 3HAC072864-003 (Graphite White)<br>3HAC072864-005 (ABB Orange)<br>3HAC074336-004 (Graphite White, threaded connection)<br>3HAC074336-005 (ABB Orange, threaded connection) | Replace if damaged.<br>A threaded connection is required for cooling fan option. |
| Lubricating oil                        | -  | See <a href="#">Type of lubrication in gear-boxes on page 148</a> .              |
| O-ring, G 1/2"                         | 3HAC061327-059   | Used on oil plug. Always replace when refitting oil plug.                        |

#### Deciding calibration routine

Decide which calibration routine to be used, based on the information in the table. Depending on which routine is chosen, action might be required prior to beginning the repair work of the robot, see the table.

|   | Action  | Note |
|---|---|------|
| 1 | Decide which calibration routine to use for calibrating the robot. <ul style="list-style-type: none"><li>Reference calibration. External cable packages (DressPack) and tools can stay fitted on the robot.</li><li>Fine calibration. All external cable packages (DressPack) and tools must be removed from the robot.</li></ul> |      |

*Continues on next page*

| Action   | Note  |
|--|---|
| <p><b>If the robot is to be calibrated with reference calibration:</b></p> <p>Find previous reference values for the axis or create new reference values. These values are to be used after the repair procedure is completed, for calibration of the robot.</p> <p>If no previous reference values exist, and no new reference values can be created, then reference calibration is not possible.</p> | <p>Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.</p> <p>Creating new values requires possibility to move the robot.</p> <p>Read more about reference calibration for Axis Calibration in <a href="#">Reference calibration routine on page 631</a>.</p> |
| <p><b>If the robot is to be calibrated with fine calibration:</b></p> <p>Remove all external cable packages (DressPack) and tools from the robot.</p>  |   |

### Removing the gearbox

Use these procedures to remove the gearbox.




#### CAUTION

When performing these procedures, the cable harness will still be fitted or partly fitted to the robot. Use extreme caution not to cause any damage to the cable harness.

### Removing tools and equipment from the turning disc

|   | Action   | Note   |
|---|--|--|
| 1 | <p>Remove any payload, tools or other equipment fitted on the turning disc.</p> <p>DressPack can stay fitted for the time being.</p> | <p>This is done to achieve the best stability of the arm assembly, when removing and lifting it, and when it is resting by itself after removal.</p> |

### Lifting down the robot from inverted position

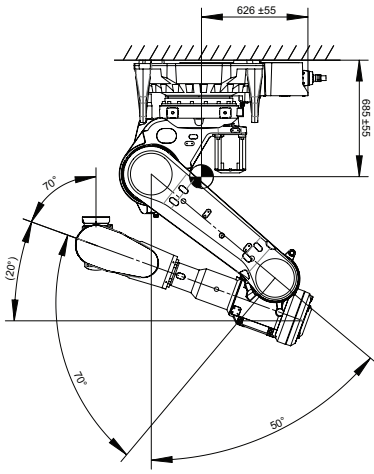



|   | Action  | Note   |
|---|---|--|
| 1 |  <p><b>DANGER</b></p> <p>The robot must always be secured to the foundation if any kind of repair or maintenance work is to be performed.</p> <p>For some repair work support legs are required.</p> | <p>Suitable screws, lightly lubricated: M24 x 100 (min. 4 pcs)</p> <p>For hole configuration, see <a href="#">Hole configuration, base on page 75</a>.</p> |

Continues on next page



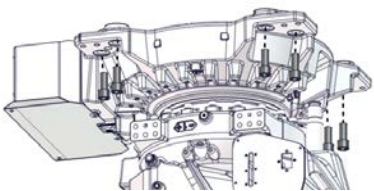
## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

Continued

|   | Action   | Note  |
|---|--|---|
| 2 | <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: calibration position (0°)</li> <li>• Axis 2: -50°</li> <li>• Axis 3: +70°</li> <li>• Axis 4: calibration position (0°)</li> <li>• Axis 5: +70°</li> <li>• Axis 6: no significance</li> </ul>  |  <p>xx2100000976</p>                     |
| 3 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safeguarded space.</p>  |   |
| 4 | Disconnect the robot cables at the base.   |   |
| 5 | <p> <b>CAUTION</b></p> <p>The weight of the IRB 5710 robot is</p> <p>IRB 5710-110/2.3: 830 kg (<i>Inverted: 845 kg</i>)</p> <p>IRB 5710-90/2.7: 830 kg (<i>Inverted: 840 kg</i>)</p> <p>IRB 5710-90/2.3 LID: 890 kg (<i>Inverted: 905 kg</i>)</p> <p>IRB 5710-70/2.7 LID: 885 kg (<i>Inverted: 900 kg</i>)</p> <p>All lifting accessories used must be sized accordingly.</p> |   |
| 6 | <p>Install the fork lift pockets to the robot.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p>  | <p>See user instructions enclosed with the fork lift accessory set.</p> <p>Fork lift accessory set:<br/>3HAC058825-001.</p> |

Continues on next page

|    | Action   | Note  |
|----|--|---|
| 7  | <p>Choose one of the following lifting methods:</p> <ul style="list-style-type: none"> <li>Lifting and turning with the fork lift (rotator attachment required): <ol style="list-style-type: none"> <li>1 Insert the forks of the fork lift truck into the fork lift pockets, as far as possible.</li> <li>2 Raise the forks of the fork lift truck to make sure that the weight of the robot rests on the forks.</li> </ol> <p> <b>Tip</b></p> <p>Two M16 screws can be fitted to the fork lift pockets, to press the forks against the pockets and make the lift more stable.</p> </li> <li>Lifting and turning with the turning tool and overhead crane: <ol style="list-style-type: none"> <li>1 Install and use the turning tool according to enclosed user instructions.</li> </ol> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> </li> </ul> | <p>See user instructions enclosed with the turning tool.</p> <p>Lifting and turning tool: 3HAC073537-001.</p>                     |
| 8  | Remove the bolts that secure the robot to the foundation.  | <p>Quantity: 8 pcs.</p>  <p>xx1600002098</p> |
| 9  | Rotate the robot to floor standing position.   | Follow the user instructions enclosed with the turning tool.  |
| 10 | <p>Lower and secure the robot to the floor. (Or to support legs, if replacing the axis-1 gearbox.)</p> <p>The lifting accessories can be kept installed if they are not in the way for the upcoming service procedure.</p>   | Attachment screws: M24 x 100 (min. 4 pcs required to perform service)   |

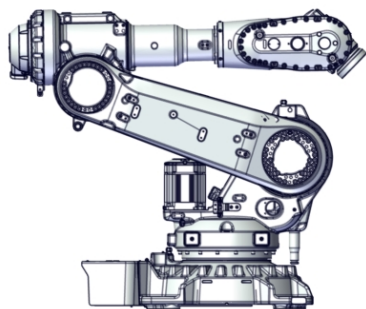

Continues on next page

## 5 Repair


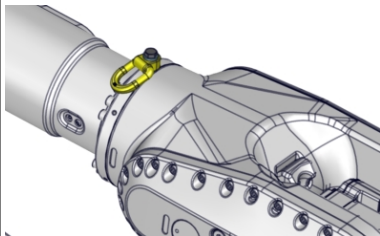
### 5.9.2 Replacing the axis-2 gearbox

*Continued*

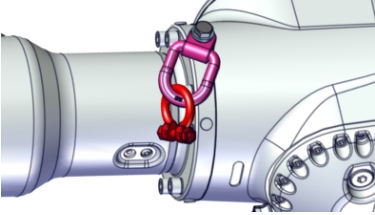
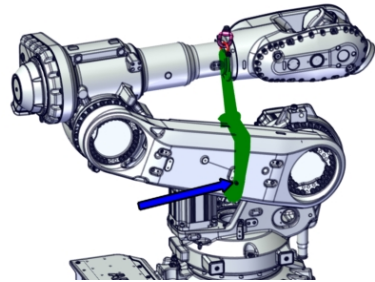
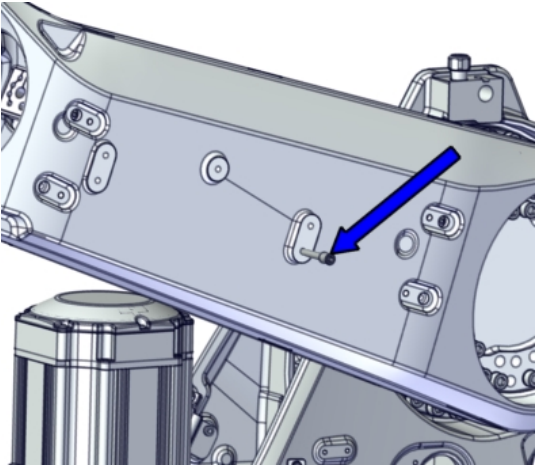
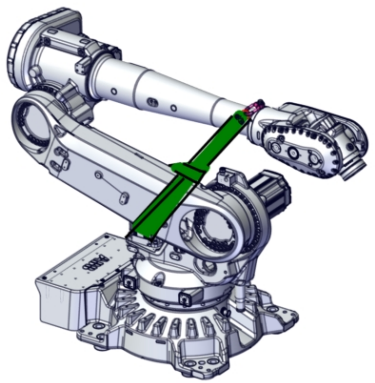

#### Preparations before removing the gearbox

|   | Action  | Note  |
|---|---|---|
| 1 | <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: 0°</li> <li>• Axis 2: -70°</li> <li>• Axis 3: +70° (approximately)</li> <li>• Axis 4: 0°</li> <li>• Axis 5: -45°</li> <li>• Axis 6: +90° (if DressPack is installed)</li> </ul>  |  <p>xx2000000449</p> |
| 2 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safeguarded space.</p> |   |
| 3 | Begin draining the gearbox.   | See <a href="#">Draining the axis-2 gearbox on page 162</a> .   |

#### Attaching lifting accessories to the lower and upper arm

|   | Action  | Note  |
|---|---|---|
| 1 | <p> <b>CAUTION</b></p> <p>The weight of the complete upper and lower arm together is</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID: 345 kg</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID: 295 kg</p> <p>All lifting accessories used must be sized accordingly.</p> |   |
| 2 | Fit a lifting eye to the wrist.   | <p>Lifting eye: 3HAC16131-1</p>  <p>xx2200001522</p> |

*Continues on next page*


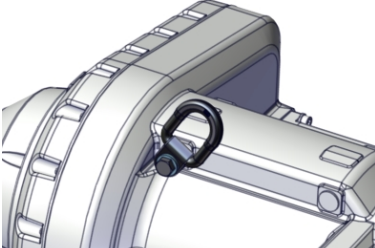
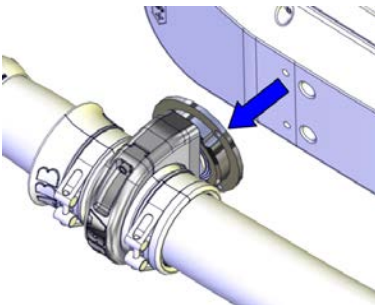
|   | Action   | Note  |
|---|--|---|
| 3 | Fit a lifting shackle in the wrist lifting eye.  | <p>Lifting shackle: SA-10-8-NA1</p>  <p>xx2100001414</p>                                       |
| 4 | Run a roundsling around the lower arm.<br>If DressPack cable package is installed: place the roundsling beneath the ball joint housing on the outside of the lower arm instead.  | <p>Roundsling, 1.5 m<br/><i>IRB 5710-110/2.3, IRB 5710-90/2.3 LID</i></p>  <p>xx2100001415</p> |
| 5 | <p>Attach the roundsling to the shackle on the wrist.<br/>If there is a risk that the roundsling will slide (depends on robot variant), insert a M12x50 securing screw, not more than 10-15 mm, into the screw hole shown in the figure.<br/>If DressPack cable package is installed: use the ball joint housing instead, in the same way.</p>  <p>xx2100001412</p> | <p><i>IRB 5710-90/2.7, IRB 5710-70/2.7 LID</i></p>  <p>xx2100001469</p>                      |
| 6 | <p>Stretch the roundsling between the wrist and the lower arm by slowly jogging the axis-3.</p> <p> <b>Note</b></p> <p>Make sure the roundsling is stretched, in order to carry the weight of the lower arm.</p>  |   |

*Continues on next page*

## 5 Repair

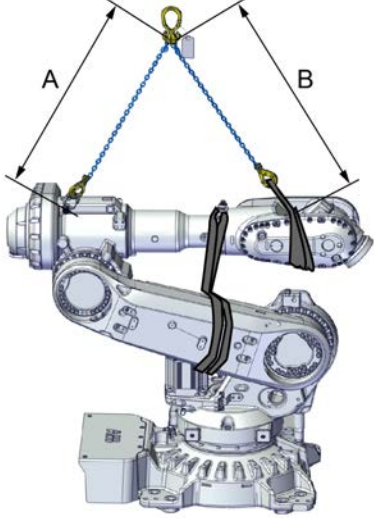
### 5.9.2 Replacing the axis-2 gearbox

*Continued*

|    | Action  | Note  |
|----|---|---|
| 7  |  <b>DANGER</b><br>Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safeguarded space. |   |
| 8  | Fit a lifting eye in the arm house, with a fender washer underneath.  | Lifting eye: 3HAC16131-1<br>Fender washer: Outer diameter: minimum 26 mm, maximum 30 mm, hole diameter: 13 mm, thickness: 3 mm.<br><br>xx2100002146 |
| 9  | If the robot is equipped with DressPack, unscrew the attachment screws of the bracket that holds the ball joint housings on the wrist. The DressPack can stay fitted in the ball joint housing.   | <br>xx1400000355   |
| 10 | Move the DressPack cable package over to the other side of where the lifting accessory will be attached to the shackle on the arm house.  |   |

*Continues on next page*



|    | Action  | Note  |
|----|---|---|
| 11 | <p>Attach the Lifting accessory (chain) to an overhead crane (or similar), then to the lifting eye in the arm house and to a roundsling run through the wrist.</p> <p>Adjust the chain lengths to make the lift as level as possible.</p> | <p>Lifting accessory (chain):<br/>3HAC15556-1</p> <p>Roundsling, 1 m</p>  <p>xx2000000452</p> <p>A 1,250 mm<br/>B 1,400 mm</p> |
| 12 | <p>Raise the overhead crane to stretch the chains and roundslings.</p> <p>Verify that the roundsling between the wrist and the lower arm is stretched.</p>  |   |

Center of gravity of upper and lower arm assembly

Loosening the cable brackets

Use this procedure to lift the lower and upper arm mounted together, with the cable harness and DressPack kept installed in the base and in the frame.



#### Note

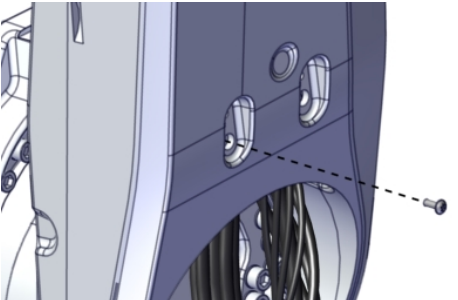
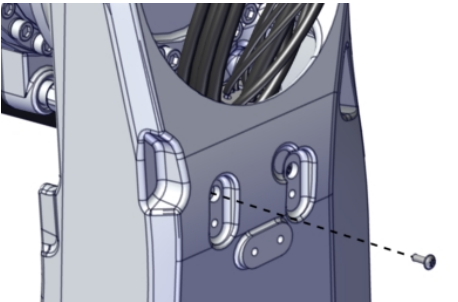
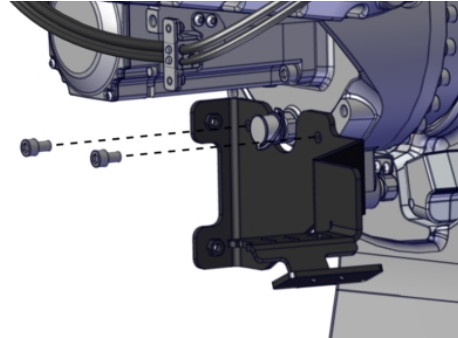
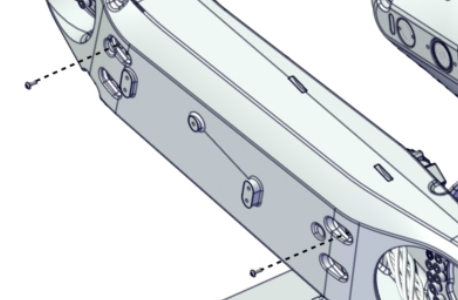
Keeping the cable harness and DressPack fitted on the robot during gearbox replacement is only a recommendation. If it is not possible to put the lower and upper arm close enough to the robot, the cable harness and DressPack in the base and in the frame must be removed first.

Continues on next page

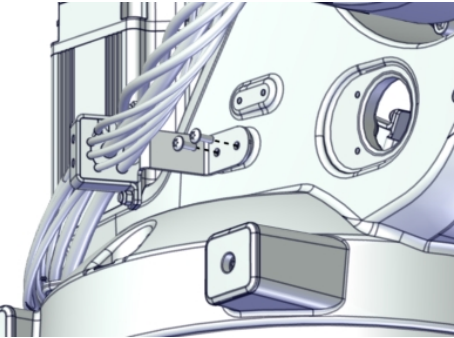
## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

*Continued*


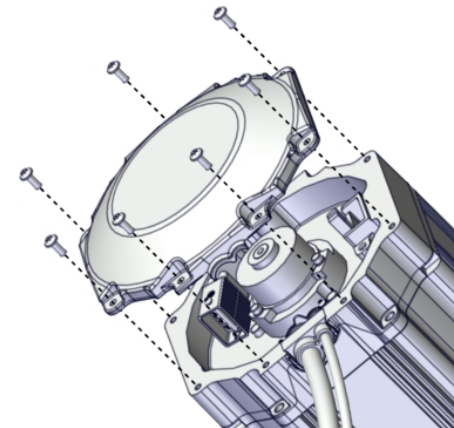
|   | Action  | Note   |
|---|---|--|
| 1 | If robot is equipped with DressPack:<br>Remove the cable brackets inside the lower arm, by removing the attachment screws.  | <br>xx2100002702<br><br>xx2100002701 |
| 2 | If robot is equipped with DressPack:<br>Remove the mounting plate from the arm house.   | <br>xx2100002578   |
| 3 | Unscrew the attachment screws that secure the axis-2 lower arm metal clamp and the axis-3 lower arm metal clamp located on the inside of the lower arm by removing the attachment screws. | <br>xx2100001104   |

*Continues on next page*

|   | Action  | Note  |
|---|---|---|
| 4 | Loosen the cable bracket from the frame by removing the nuts.<br>Let it hang loose. | <br>xx200000442 |

### Disconnecting the axis-2 motor cables

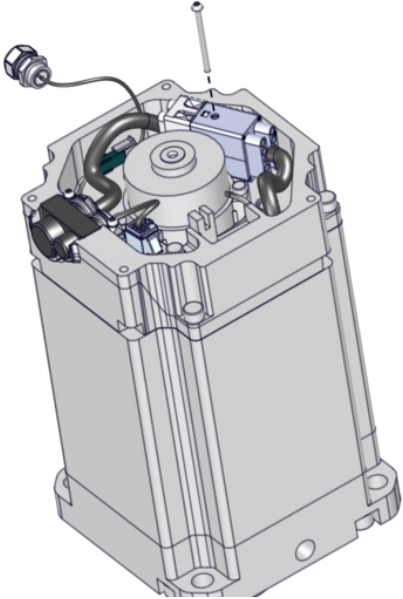
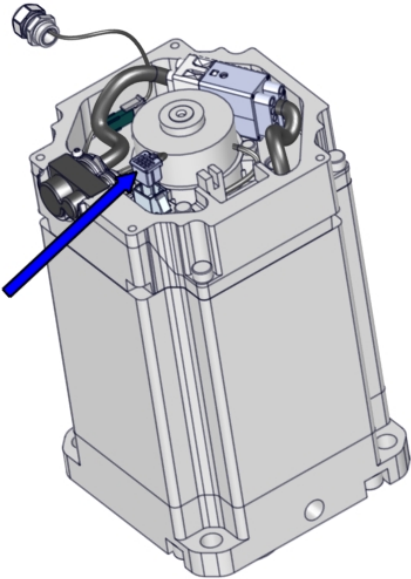
Use this procedure to disconnect the motor cables.

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Remove the motor cover by removing the screws.  | <br>xx2100000596 |

*Continues on next page*

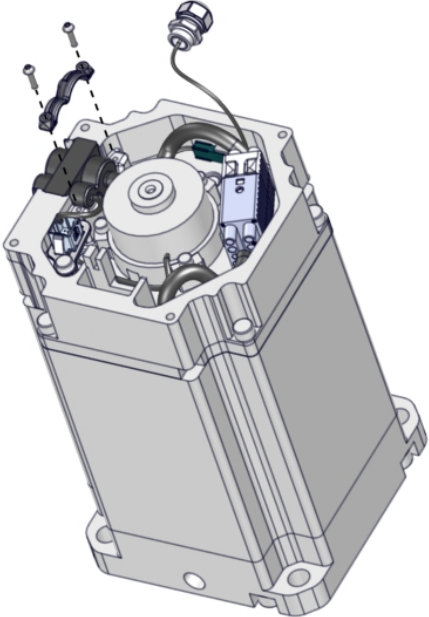
5 Repair

5.9.2 Replacing the axis-2 gearbox  
Continued


| Action  | Note  |
|---|---|
| 3 Disconnect the power cable connector by first removing the attachment screw and then parting the connector. | <br>xx2200001736  |
| 4 Disconnect the signal cable connector by pulling it out.  | <br>xx2200001737 |

Continues on next page

5.9.2 Replacing the axis-2 gearbox  
*Continued*

|   | Action   | Note   |
|---|--|--|
| 5 | Remove the cable bracket by removing the screws. |  <p>xx2200001738</p> |
| 6 | Remove the motor cables from the motor.          |  |

## Removing the axis-2 motor





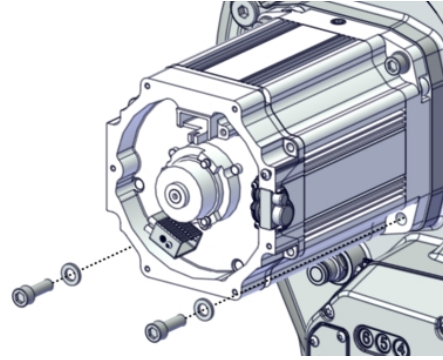
|   | Action  | Note |
|---|---|------|
| 1 | Before removing the motor, make sure that the gearbox is completely drained.  |      |
| 2 |  <b>DANGER</b><br>When releasing the holding brakes of the motor, the lower arm will be movable and may fall down if not secured. Verify that the lower arm is secured as previously described, before continuing. |      |

*Continues on next page*


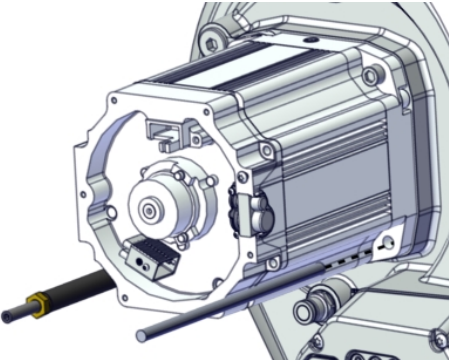
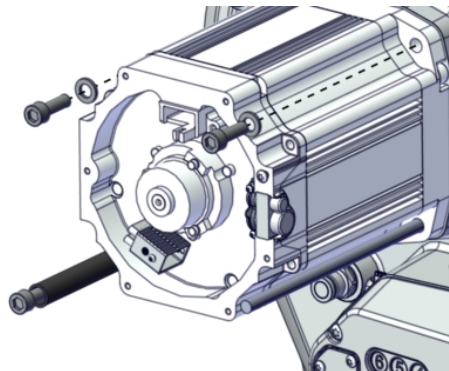

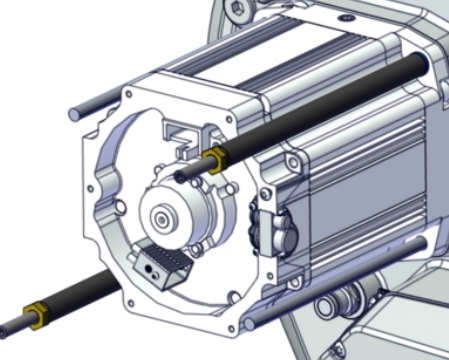

## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

Continued

|   | Action  | Note   |
|---|---|--|
| 3 | <p> <b>CAUTION</b></p> <p>Releasing the brakes on the axis-2 motor results in weight transfer of upper and lower arm weight to the inserted lock screw in the lower arm or to the attached lifting accessories (whichever is used). If lifting accessories are used, verify that the lifting chains and roundslings are stretched by raising the overhead crane, before releasing the brakes.</p> <p>Release the brakes on the motor with the brake release tool, to unload the weight:</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001<br/>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 4 | <p>Remove the two lower screws.</p> <p>Use a bits extender in order to reach the screws.</p>  | <p>Bits extender: 3HAC12342-1</p>  <p>xx2000000468</p>   |

Continues on next page

|   | Action   | Note  |
|---|--|---|
| 5 | <p>Fit a guide pin in the non-threaded hole.<br/>Fit a removal tool in the threaded hole.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the motor slide better.</p>   | <p>Guide pin, M10x150: 3HAC15521-2<br/>Removal tool motor M12: 3HAC14631-1</p>  <p>xx2000000456</p>   |
| 6 | <p>Remove the remaining two screws.</p>  | <p>Bits extender: 3HAC12342-1</p>  <p>xx2200001150</p>   |
| 7 | <p>Fit a guide pin in the non-threaded hole.<br/>Fit a removal tool in the threaded hole.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the motor slide better.</p> | <p>Guide pin, M10x150: 3HAC15521-2<br/>Removal tool motor M12: 3HAC14631-1</p>  <p>xx2300000043</p> |
| 8 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |   |
| 9 | <p>Activate the brake release tool again (release the brakes).</p>   | <p>The power is only applied for 180 seconds after activation.</p>  |


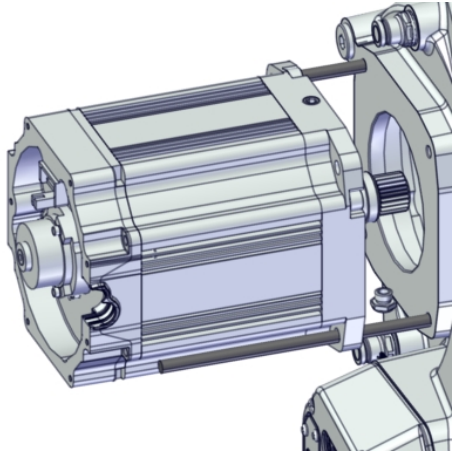

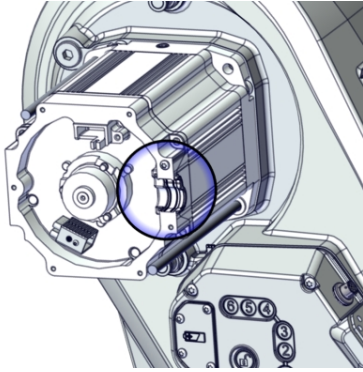
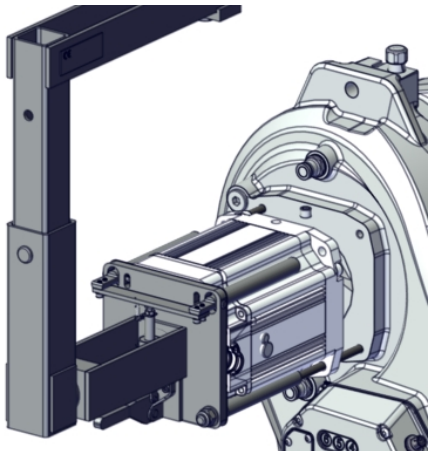
*Continues on next page*



## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

Continued



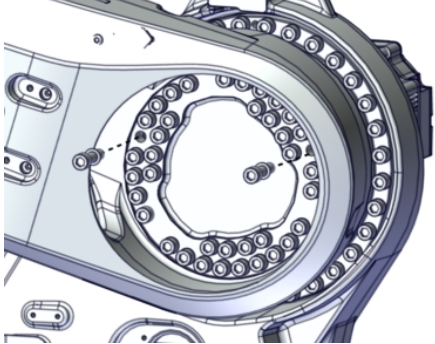
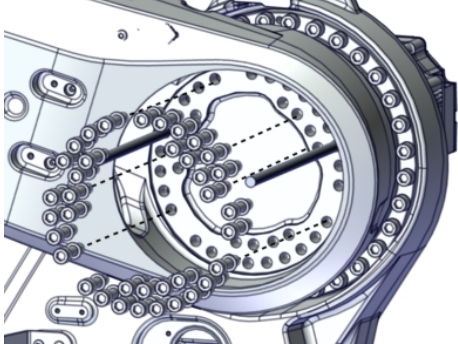
|    | Action  | Note   |
|----|---|--|
| 10 | Press the motor out of its position by using the removal tools.<br>Remove the removal tools.  | Used to push out the motor, if necessary.<br>Always use removal tools in pairs.  |
| 11 |  <b>CAUTION</b><br>The weight of the motor is 25 kg<br>All lifting accessories used must be sized accordingly.   |  |
| 12 | Carefully lift the motor out on the guide pins, in order to get the pinion away from the gear and let it rest on the guide pins.  | <br>xx2000000457  |
| 13 | Disconnect the brake release tool.  |  |
| 14 | Fasten the lifting accessory. Attach the lifting chain to the accessory and an overhead crane.  | Lifting accessory, motor: 3HAC15534-1<br>Lifting accessory (chain): 3HAC15556-1  |
| 15 | Remove the motor by sliding it out on the guide pins and lift it off.<br><br> <b>Tip</b><br>Make a note in which direction the cable gland hole is facing. The motor shall be refitted in the same position. <br>xx2100000595 | <br>xx2000000455<br>Make sure the pinion is not damaged. |

Continues on next page



## Removing and lifting away the lower and upper arms un-separated (Step 1)

Use this procedure for the first step of removing and lifting away the lower and upper arm un-separated.

|   | Action  | Note  |
|---|---|---|
| 1 | <p>Remove two attachment screws in opposite holes and replace them with guide pins.</p> <p> <b>Tip</b></p> <p>Use different lengths on the guide pins to simplify guidance.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the lower arm slide better.</p> | <p>Guide pin, M12x150 / Guide pin, M12x200: 3HAC13056-2 / 3HAC13056-3</p> <p>Always use guide pins in pairs.</p>  <p>xx2000000458</p> |
| 2 | <p>Remove all but one of the remaining attachment screws that secure the lower arm to the axis-2 gearbox.</p>   |  <p>xx2000000459</p>   |

Continues on next page


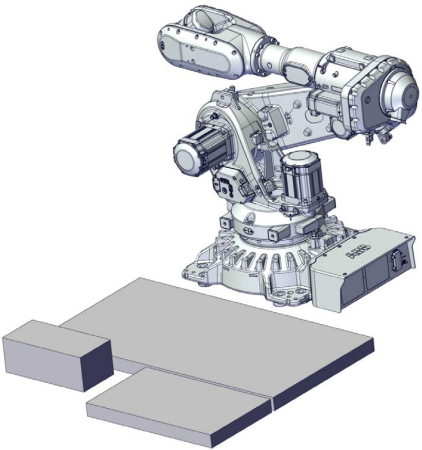

## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox


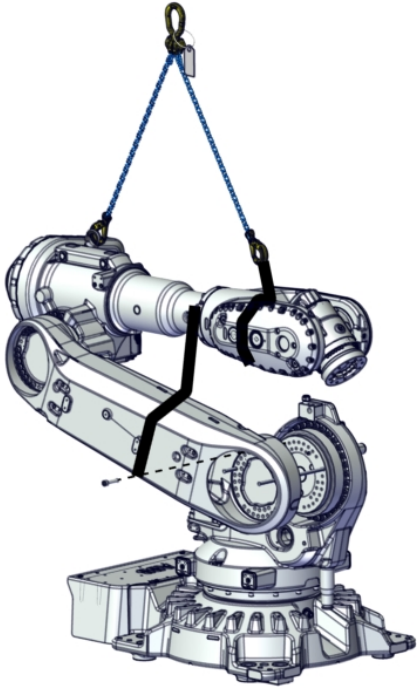

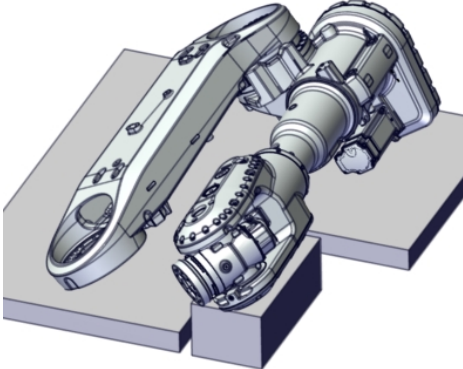
*Continued*

Removing and lifting away the lower and upper arms un-separated (Step 2)

Use this procedure for the second step to remove and lift the lower and upper arm un-separated.

|   | Action   | Note   |
|---|--|--|
| 1 | <p>Put two foam boards, pallets or similar protective material on the floor, somewhere close to the robot.</p> <p>Put one higher foam block as protection for the wrist.</p> <p>If needed, move axis-1 into a position that gives the required space.</p> <p> <b>Note</b></p> <p>Keeping the cable harness and DressPack fitted on the robot during gearbox replacement is only a recommendation. If it is not possible to put the lower and upper arm close enough to the robot, the cable harness and DressPack in the base and in the frame must be removed first.</p> |  <p>xx2000000441</p> |
| 2 | <p> <b>CAUTION</b></p> <p>The weight of the complete upper and lower arm together is</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID: 345 kg</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID: 295 kg</p> <p>All lifting accessories used must be sized accordingly.</p>   |  |

*Continues on next page*

|   | Action   | Note   |
|---|--|--|
| 3 | <p>Remove the remaining screw and slowly lift away the lower and upper arm together. Let the cabling run in the lower arm. Make sure not to stretch any cabling!</p> <p> <b>CAUTION</b></p> <p>Use extreme caution when lifting away the arms. The cable harness is still partly connected.</p> | <p>Image does not show the installed cable harness.</p>  <p>xx2000000460</p> |
| 4 | <p>Lift the arm system and lay it down safely on the boards.</p> <p>Use a higher block as support under the wrist unit when the arms are put down on the boards.</p> <p> <b>CAUTION</b></p> <p>Check that the cable bracket underneath the arm housing is not damaged.</p>                    |  <p>xx2100001103</p>   |




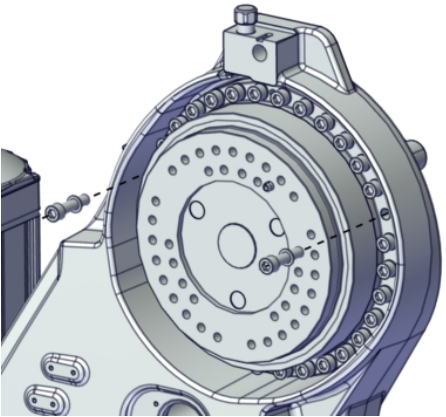
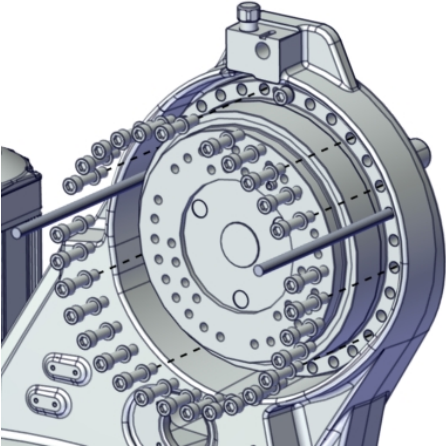

*Continues on next page*

## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

*Continued*

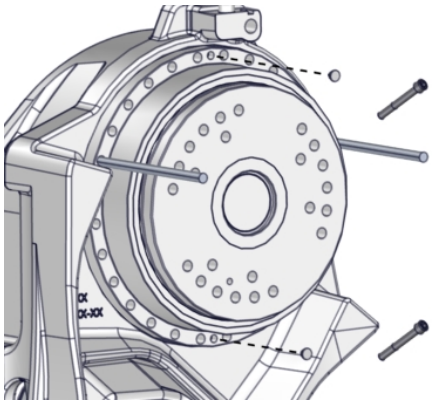

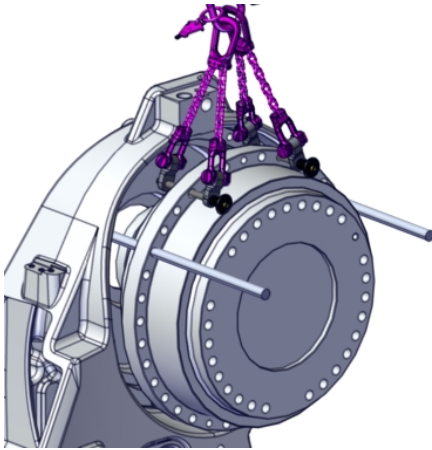
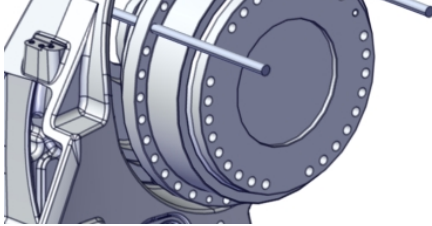
#### Removing the axis-2 gearbox

|   | Action   | Note  |
|---|--|---|
| 1 | <p>Remove two attachment screws from opposite positions and replace them with guide pins.</p> <p> <b>CAUTION</b></p> <p>Use stoppers on the guide pins.</p> <p> <b>Tip</b></p> <p>Use different lengths on the guide pins to simplify guidance.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the lower arm slide better.</p> | <p>Guide pin, M12x150 / Guide pin, M12x200: 3HAC13056-2 / 3HAC13056-3</p> <p>Always use guide pins in pairs.</p>  <p>xx2000000464</p> |
| 2 | <p>Leave one of the upper attachment screws and remove the rest. The remaining screw is used to prevent the gearbox from falling down.</p>   |  <p>xx2000000465</p>   |
| 3 | <p> <b>CAUTION</b></p> <p>The weight of the gearbox is 56 kg</p> <p>All lifting accessories used must be sized accordingly.</p>   |   |
| 4 | <p>Remove the remaining screw left in the gearbox.</p>   |   |

*Continues on next page*

### 5.9.2 Replacing the axis-2 gearbox


*Continued*

|   | Action  | Note   |
|---|---|--|
| 5 | Remove the two protection plugs and use removal tools to press the gearbox out of position.   | Screws M10x60, fully threaded: -<br><br>xx2300000159 |
| 6 | Use caution and let the gearbox slide out on the guide pins.<br> <b>CAUTION</b><br>Use stoppers on the guide pins. | Lifting accessory for gear: 3HAC081585-001<br>      |
| 7 | Attach the lifting accessory to the gearbox.  | <br>xx2100002414                                   |
| 8 | Remove the stoppers from the guide pins and remove the gearbox.   |  |

#### Refitting the gearbox

Use these procedures to refit the gearbox.

#### Preparations before refitting the axis-2 gearbox

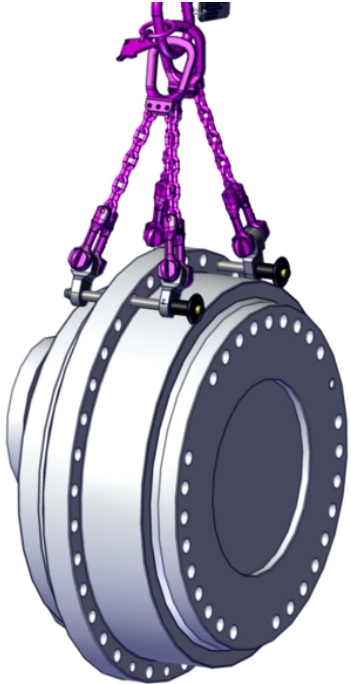

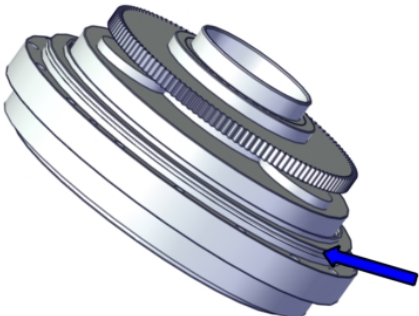
|   | Action  | Note |
|---|---|------|
| 1 |  <b>CAUTION</b><br>The weight of the gearbox is 56 kg<br>All lifting accessories used must be sized accordingly. |      |

*Continues on next page*

## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

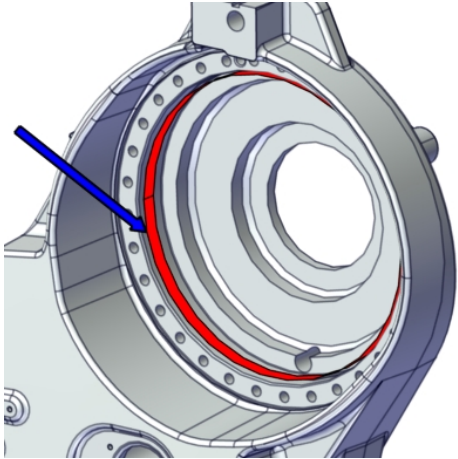
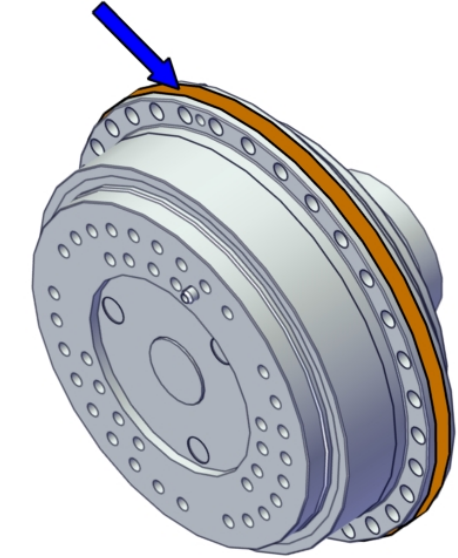
*Continued*

|   | Action  | Note   |
|---|---|--|
| 2 | Apply the lifting accessory to the gearbox.   | <p>Lifting accessory for gear: 3HAC081585-001</p>  <p>xx2100002416</p> |
| 3 | Lift the gearbox so that it rests on its side.  |  |
| 4 | <p>Wipe clean the contact surfaces on both the gearbox and the frame from any contamination.</p> <p> <b>Note</b></p> <p>Also wipe clean the o-ring groove.</p> | <p>Cleaning agent: Isopropanol</p>   |
| 5 | <p>Check the o-ring.</p> <p>Replace if damaged.</p>   | <p>O-ring: 3HAC061327-066</p>  <p>xx2100001132</p>                     |

*Continues on next page*


### 5.9.2 Replacing the axis-2 gearbox

*Continued*

|   | Action   | Note  |
|---|--|---|
| 6 | Lubricate the contact surface (where the o-ring is seated) on the gearbox with grease. | Grease, Shell Gadus S2: 3HAC042536-001.<br><br>xx2100002792   |
| 7 | Apply rust preventive to the gearbox surface shown in the figures.                     | Rust preventive: 3HAC034903-001 (Mercialsol 3110 Waxcoat. Recommended drying time is 24h.)<br><br>xx2100001105 |

#### Refitting the axis-2 gearbox

Use this procedure to refit the gearbox.

|   | Action  | Note |
|---|---|------|
| 1 |  <b>CAUTION</b><br>The weight of the gearbox is 56 kg<br>All lifting accessories used must be sized accordingly. |      |



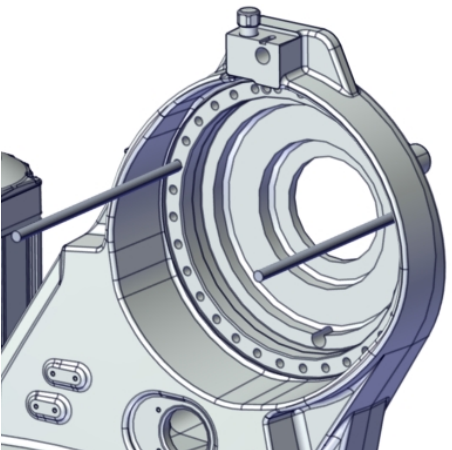

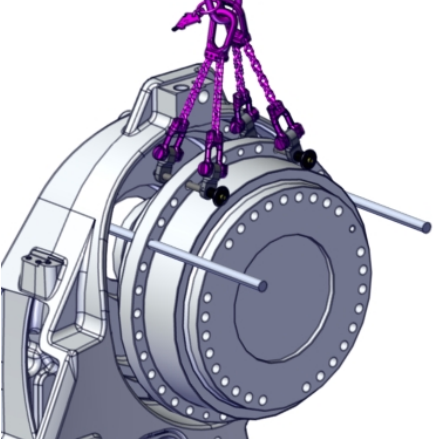

*Continues on next page*



## 5 Repair

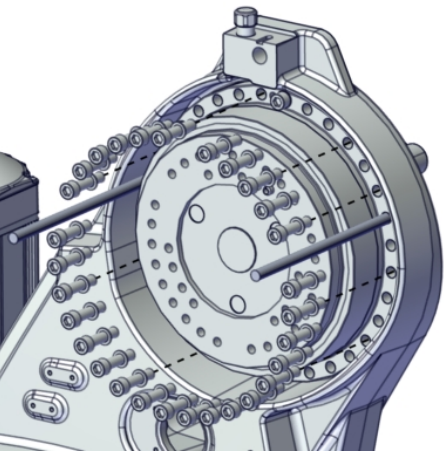
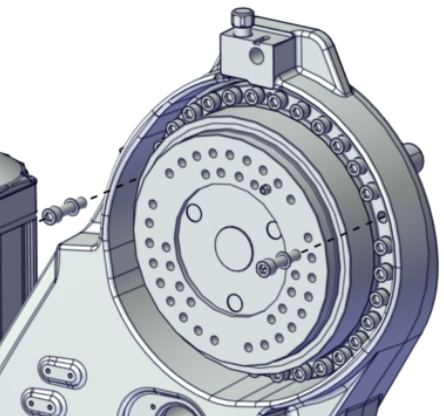
### 5.9.2 Replacing the axis-2 gearbox

*Continued*

|   | Action  | Note  |
|---|---|---|
| 2 | <p>Fit two guide pins in opposite holes.</p> <p> <b>Tip</b></p> <p>Use different lengths on the guide pins to simplify guidance.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the gearbox/gear slide better.</p> | <p>Guide pin, M12x150 / Guide pin, M12x200: 3HAC13056-2 / 3HAC13056-3</p> <p>Always use guide pins in pairs.</p>  <p>xx2000000466</p> |
| 3 | <p>Lift the gearbox and let it rest on the guide pins.</p> <p> <b>CAUTION</b></p> <p>Use stoppers on the guide pins.</p>  |  <p>xx2100002414</p>   |
| 4 | <p>Remove the lifting accessory.</p> <p> <b>DANGER</b></p> <p>There is a risk that the gearbox may glide out and fall down if it is too far out to on the guide pins and no stoppers are used.</p>   |   |

*Continues on next page*



|   | Action   | Note   |
|---|--|--|
| 5 | Slide the gearbox into position and fit the attachment screws and washers. | <p data-bbox="976 311 1436 367">Hex socket head cap screw: M12x50 12.9 Gleitmo 603+Geomet 500 (32 pcs ).</p>  <p data-bbox="976 846 1078 864">xx2000000465</p> |
| 6 | Remove the guide pins and fit the remaining attachment screws and washers. |  <p data-bbox="976 1328 1078 1346">xx2000000464</p>   |
| 7 | Tighten the attachment screws.   | <p data-bbox="976 1375 1436 1482">Tightening torque: standard torque 120 Nm (<i>Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws on page 662</i>)..</p>  |

Continues on next page



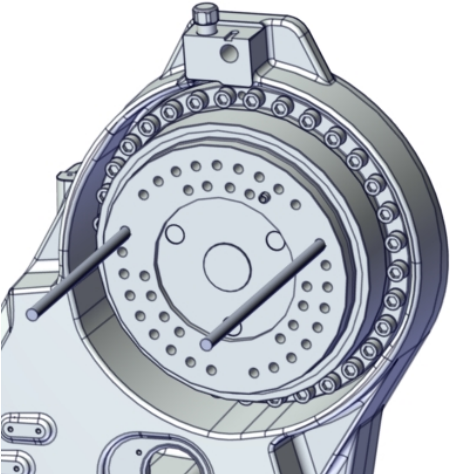

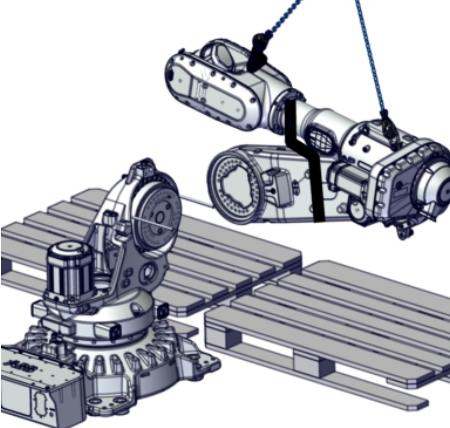
## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox


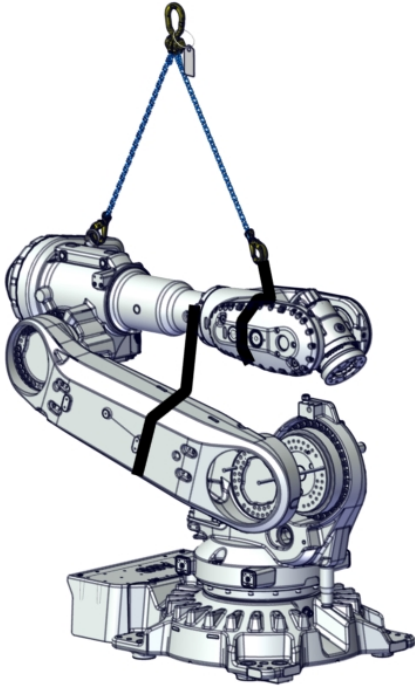
*Continued*

Lifting back and refitting the lower and upper arm

Use this procedure to lift back and refit the lower and upper arm mounted together.

|   | Action   | Note  |
|---|--|---|
| 1 | <p>Fit two guide pins in opposite holes in the axis-2 gearbox.</p> <p> <b>Tip</b></p> <p>Use different lengths on the guide pins to simplify guidance.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the lower arm slide better.</p> | <p>Guide pin, M12x150 / Guide pin, M12x200: 3HAC13056-2 / 3HAC13056-3</p> <p>Always use guide pins in pairs.</p>  <p>xx2100001217</p> |
| 2 | <p> <b>CAUTION</b></p> <p>The weight of the complete upper and lower arm together is</p> <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID: 345 kg</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID: 295 kg</p> <p>All lifting accessories used must be sized accordingly.</p>  |   |
| 3 | <p>Attach the lifting accessories to the arm assembly, if not already fitted.</p>  |   |
| 4 | <p>Use caution and slowly lift the lower and upper arm together.</p> <p>Make sure:</p> <ul style="list-style-type: none"> <li>• not to stretch any of the cables</li> <li>• the arm assembly is level when lifted.</li> </ul>  |  <p>xx2100001106</p>  |

*Continues on next page*

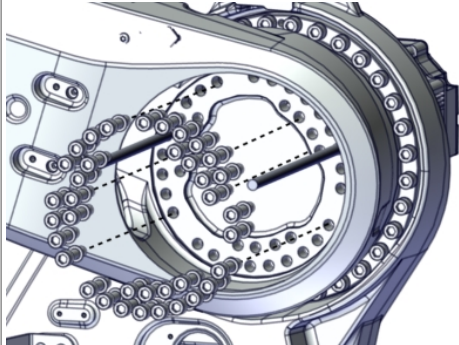
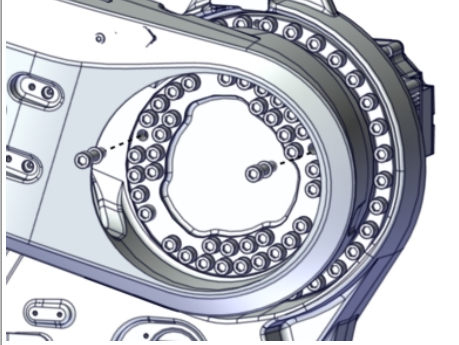
|   | Action  | Note   |
|---|---|--|
| 5 | <p>Guide the lower arm onto the guide pins and check if the hole pattern between the gearbox and the lower arm matches.</p> <p>If the hole pattern does not match, use the adjustment tool in the axis-2 gear and rotate until a matching hole pattern is achieved.</p>  <p>xx1300000819</p> | <p>Adjustment tool for gear: 3HAC080331-001</p>  |
| 6 | <p>Slide the arms into position on the guide pins.</p>  |  <p>xx2100001107</p> |

Continues on next page



## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox


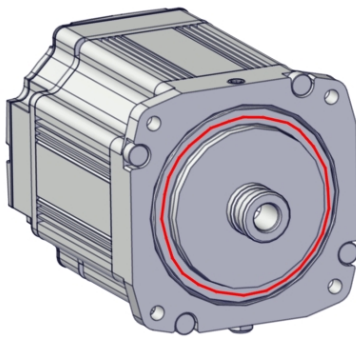
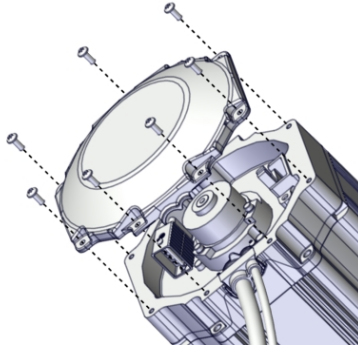
Continued

|    | Action  | Note  |
|----|---|---|
| 7  | Fit all now accessible attachment screws and washers.                                   | <p>Screws: M12x40 12.9 Gleitmo 603+Geomet 500 (39 pcs)</p>  <p>xx2000000459</p>       |
| 8  | Remove the two guide pins and replace with the remaining attachment screws and washers. | <p>Screws: M12x40 12.9 Gleitmo 603+Geomet 500</p>  <p>xx2000000458</p>               |
| 9  | Tighten the attachment screws.  | <p>Tightening torque: standard torque 300 Nm (<i>Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws on page 662</i>).</p> |
| 10 | Remove the lifting accessories.   |   |

#### Preparations prior to refitting motor

|   | Action  | Note  |
|---|---|---|
| 1 |  <p><b>DANGER</b></p> <p>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.</p>  |   |
| 2 | <p>Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.</p>  <p><b>Tip</b></p> <p>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface.</p> | <p>Cleaning agent: Loctite 7200, Loctite 7063</p> |

Continues on next page

|   | Action   | Note  |
|---|--|---|
| 3 | <p>Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.</p> <p> <b>Note</b></p> <p>The purpose of the groove is to catch excess sealant. No o-ring is used.</p> | <p>Flange sealant: Loctite 5800</p>  <p>xx2100000520</p> |
| 4 | <p>Remove the cover, if fitted to the new spare part motor.</p>  |  <p>xx2100000596</p>                                    |

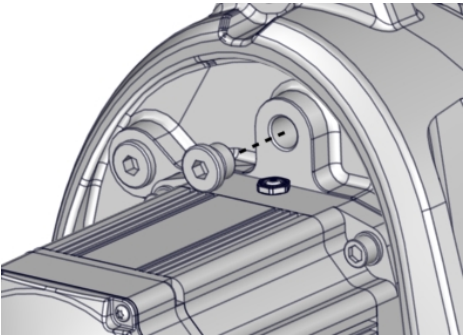
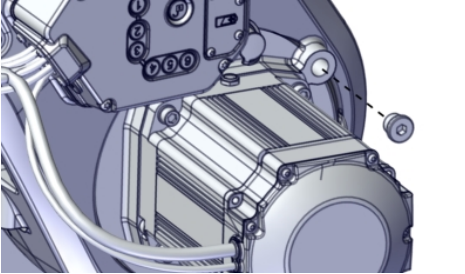
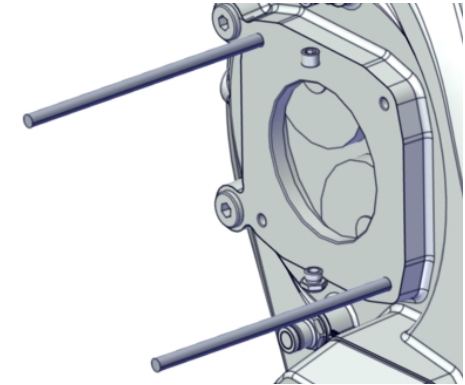

Continues on next page

## 5 Repair

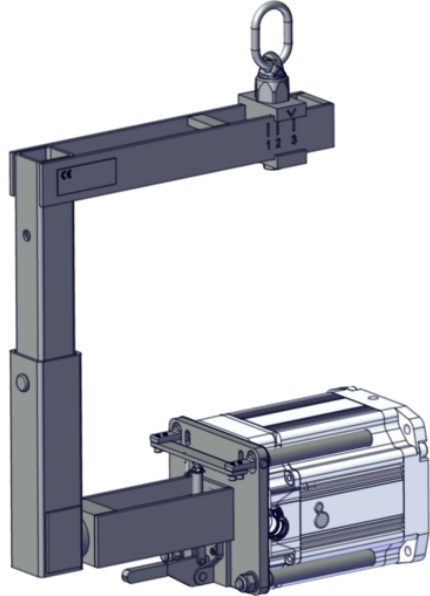

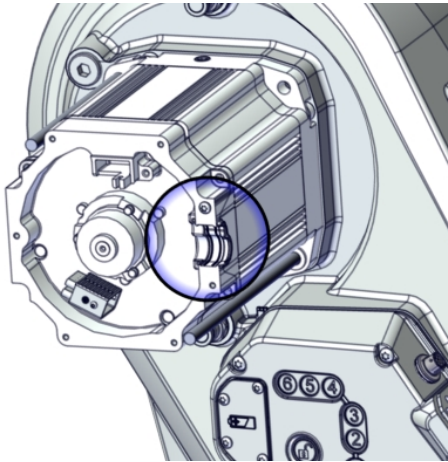
### 5.9.2 Replacing the axis-2 gearbox

*Continued*

#### Refitting the axis-2 motor

|   | Action  | Note  |
|---|---|---|
| 1 | <p>Remove the plug from the venting hole.<br/>This is done to evacuate air during refitting of the motor.</p>   |  <p>xx2300000002</p> <p><i>Option Inverted (3317-1)</i></p>  <p>xx2100002061</p> |
| 2 | <p>Fit guide pins in opposite holes.</p>  | <p>Guide pin, M10x150: 3HAC15521-2<br/>Always use guide pins in pairs.</p>  <p>xx2100000593</p>   |
| 3 | <p> <b>CAUTION</b></p> <p>The weight of the motor is 25 kg<br/>All lifting accessories used must be sized accordingly.</p> |   |

*Continues on next page*

|   | Action  | Note   |
|---|---|--|
| 4 | Apply the lifting accessory.  | <p>Lifting accessory, motor: 3HAC15534-1<br/>Lifting accessory (chain): 3HAC15556-1</p>  <p>xx2100000594</p> |
| 5 |  <b>Note</b><br>Make sure the cable gland opening is turned the correct way. |  <p>xx2100000595</p>   |

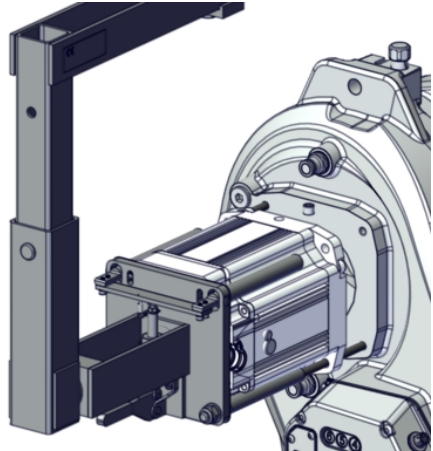
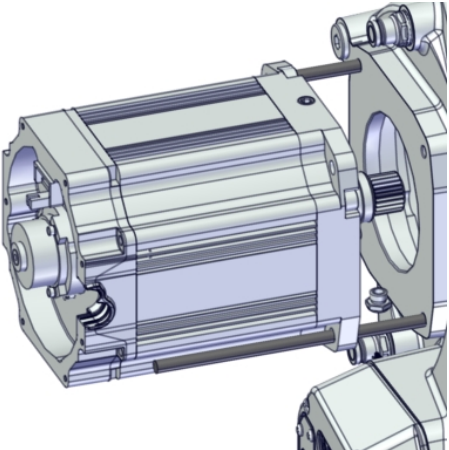
Continues on next page



## 5 Repair



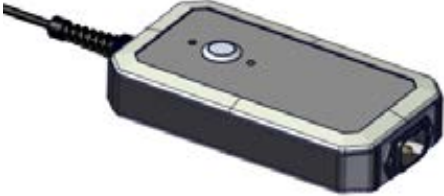

### 5.9.2 Replacing the axis-2 gearbox

*Continued*

|   | Action   | Note  |
|---|--|---|
| 6 | Lift the motor and put it on the guide pins as close as possible to its final position without pushing the motor pinion into the gear. | <br>xx2000000455  |
| 7 | Remove the lifting accessory and allow the motor to rest on the guide pins.  | <br>xx2000000457 |

*Continues on next page*



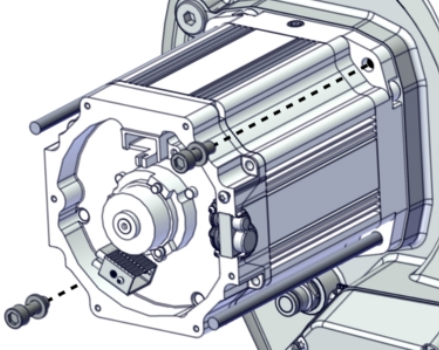
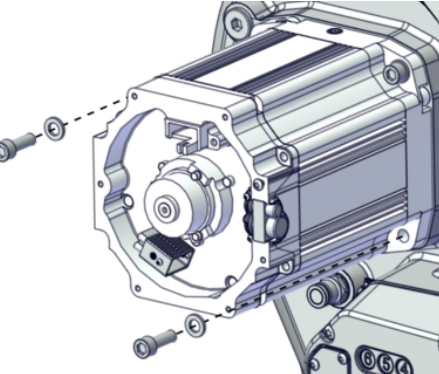
|    | Action   | Note  |
|----|--|---|
| 8  | <p>Release the brakes of the axis-2 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 9  | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |   |
| 10 | <p>Apply the rotation tool.</p> <p>Use caution and fit the motor in its final position while at the same time rotating the motor pinion slightly using the rotation tool.</p> <ul style="list-style-type: none"> <li>• Make sure that the motor pinion is properly mated to the gear of the gearbox.</li> <li>• Make sure that the motor pinion does not get damaged.</li> <li>• Make sure that the direction of the cable exit is facing the correct way.</li> </ul>  | <p>Rotation tool M4: 3HAB7887-1</p>   |

Continues on next page

## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

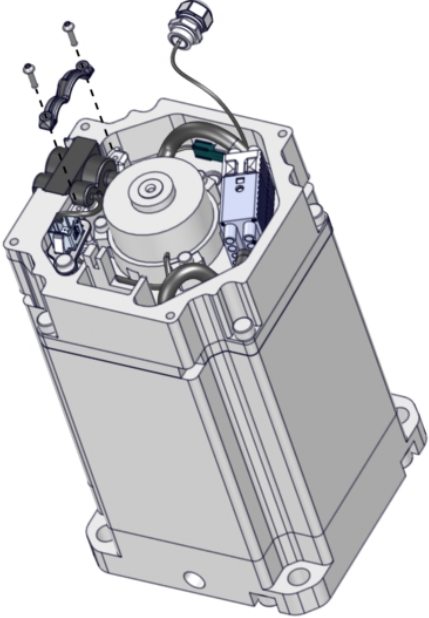


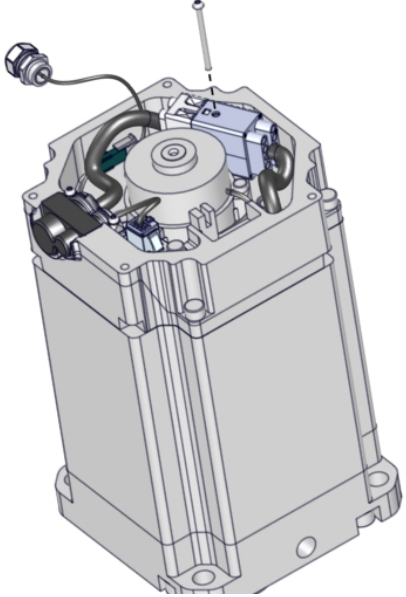
*Continued*

|    | Action   | Note   |
|----|--|--|
| 11 | Fit two of the attachment screws and washers.<br>Use a bits extender in order to reach the screws. | <p>Hex socket head cap screw: M10x30 12.9<br/>Gleitmo 603+Geomet 500 (2 pcs)<br/>Bits extender: 3HAC12342-1</p>  <p>xx2000000467</p> |
| 12 | Remove the guide pins and refit the remaining attachment screws.                                   | <p>Hex socket head cap screw: M10x30 12.9<br/>Gleitmo 603+Geomet 500 (2 pcs)</p>  <p>xx2300000044</p>                               |
| 13 | Tighten the screws.  | Tightening torque: 50 Nm.  |
| 14 | Disconnect the brake release tool.   |  |
| 15 | Perform a leak-down test.  | See <a href="#">Performing a leak-down test on page 196</a> .  |

#### Connecting the axis-2 motor cables

|   | Action  | Note |
|---|---|------|
| 1 | Put the motor cables in place in the opening. |      |

*Continues on next page*

|   | Action  | Note   |
|---|---|--|
| 2 | Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | Connect the motor cables.<br> <b>Note</b><br>Connect in accordance with the markings on the connectors.  |  |
| 4 | Fit a screw to the power connector.<br> <b>Note</b><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | <p>Tightening torque: 1 Nm</p>  <p>xx2200001736</p>                        |

Continues on next page

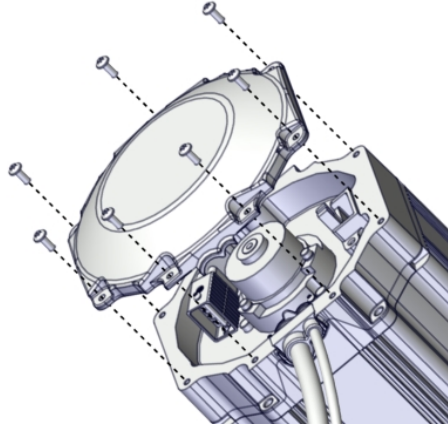
## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

*Continued*

|   | Action  | Note   |
|---|---|--|
| 5 | Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <p>Axis-1 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-2 Connection box cover FS180 with gasket:<br/>3HAC072864-003 (Graphite White)<br/>3HAC072864-005 (ABB Orange)<br/>3HAC074336-004 (Graphite White, threaded connection)<br/>3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-3 Connection box cover FS130 with gasket:<br/>3HAC072863-003 (Graphite White)<br/>3HAC072863-005 (ABB Orange)</p> <p>Axis-4 Connection box cover FS100 with gasket:<br/>3HAC072862-003 (Graphite White)<br/>3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |

*Continues on next page*

|   | Action   | Note   |
|---|--|--|
| 7 | Refit the motor cover with its attachment screws.<br>Use locking liquid. | <p>Torx pan head screw: M5x12 Stainless steel A2-70<br/>Locking liquid: Loctite 2400 (or equivalent Loctite 243)<br/>Tightening torque: 6 Nm.</p>  <p>xx2100000596</p> |

## Refitting the cabling

Use this procedure to refit the cabling.



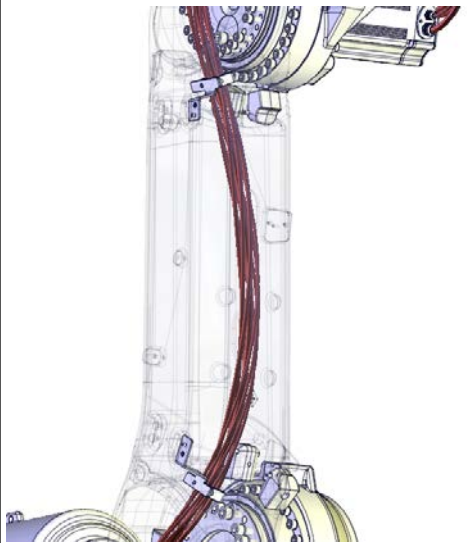
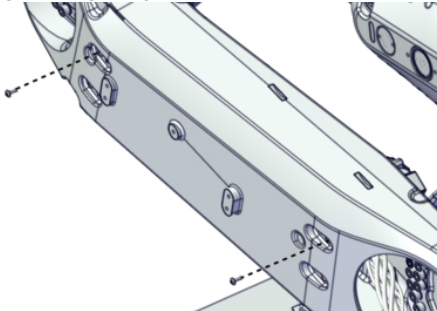
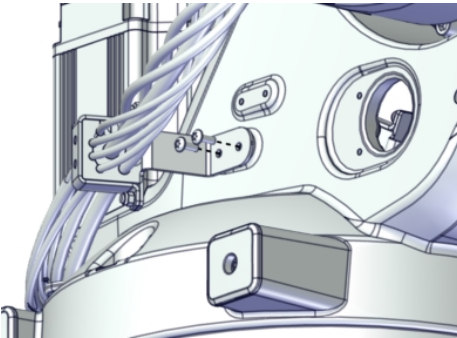
|   | Action   | Note |
|---|--|------|
| 1 | Use caution and push the cable harness into the lower arm. |      |

*Continues on next page*

## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

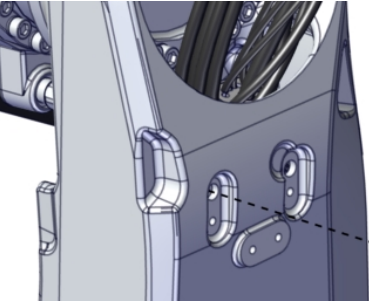
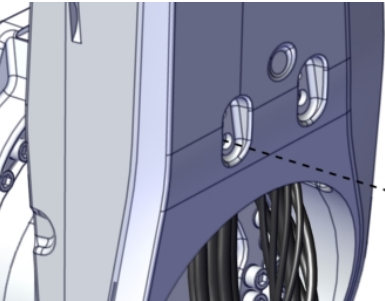
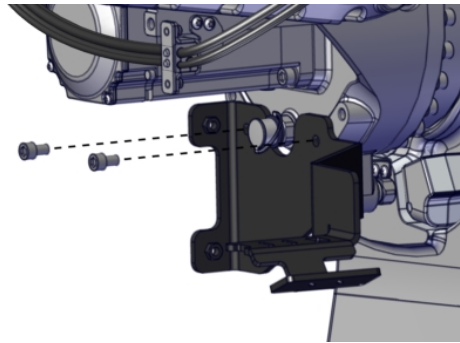
*Continued*

|   | Action   | Note  |
|---|--|---|
| 2 | <p>Secure the upper and lower cable clamps inside the lower arm with the attachment screws.</p> <p> <b>Note</b></p> <p>The screws are reached from the outside of the lower arm.</p> <p> <b>Note</b></p> <p>Check that the cabling will stay a little bit twisted between the cable clamps. Do not change the position of the brackets!</p>  <p>xx1300000595</p> | <p>Torx pan head screw: M6x16 A4-80<br/>Tightening torque: 6 Nm.</p>  <p>xx2100001104</p>   |
| 3 | <p>Refit the cable bracket on the frame.</p>   | <p>Torx pan head screw: M6x16 A4-80<br/>Tightening torque: 6 Nm.</p>  <p>xx2000000442</p> |

*Continues on next page*

## 5.9.2 Replacing the axis-2 gearbox

*Continued*

|   | Action  | Note   |
|---|---|--|
| 4 | <p>If robot is equipped with DressPack.<br/>Fit the upper and lower bracket on the inside of the lower arm with attachment screws.<br/>Use locking liquid.<br/>The dress pack cables between the upper and lower bracket may not be twisted more than 1/2 turn.</p> | <p>See product manual for the DressPack. For article number see <a href="#">References on page 10</a>.<br/>Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))</p>  <p>xx2100002701</p>  <p>xx2100002702</p> <p>Torx pan head screw: M6x16 Stainless steel A2-70 (2 pcs)</p> |
| 5 | <p>If robot is equipped with DressPack.<br/>Fit the mounting plate to the arm house.<br/>Use locking liquid.</p>  | <p>Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))</p>  <p>xx2100002578</p> <p>Hex socket head cap screw: M10x16 8.8-A3F (2 pcs)</p>  |

*Continues on next page*





## 5 Repair

### 5.9.2 Replacing the axis-2 gearbox

*Continued*



#### Securing an inverted robot to the foundation

Use this procedure to orient and secure the robot inverted.


|   | Action  | Note  |
|---|---|---|
| 1 | <p>Install the fork lift pockets to the robot.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p>   | <p>See user instructions enclosed with the fork lift accessory set.</p> <p>Fork lift accessory set:<br/>3HAC058825-001.</p> |
| 2 | <p>Choose one of the following lifting methods:</p> <ul style="list-style-type: none"><li>Lifting and turning with the fork lift (rotator attachment required):<ol style="list-style-type: none"><li>1 Insert the forks of the fork lift truck into the fork lift pockets, as far as possible.</li><li>2 Raise the forks of the fork lift truck to make sure that the weight of the robot rests on the forks.</li></ol><p> <b>Tip</b></p><p>Two M16 screws can be fitted to the fork lift pockets, to press the forks against the pockets and make the lift more stable.</p></li><li>Lifting and turning with the turning tool and overhead crane:<ol style="list-style-type: none"><li>1 Install and use the turning tool according to enclosed user instructions.</li></ol><p> <b>DANGER</b></p><p>Handling the tool incorrectly will cause serious injury.</p><p>Read and follow enclosed user instructions for the tool.</p></li></ul> | <p>See user instructions enclosed with the turning tool.</p> <p>Lifting and turning tool:<br/>3HAC073537-001.</p>           |
| 3 | <p>Remove the bolts that secure the robot to the foundation/support legs.</p>   |   |
| 4 | <p>Move the robot close to its installation location.</p>   |   |
| 5 | <p>Rotate the robot into inverted position using the turning tool or using a fork lift truck with a rotator attachment.</p> <p> <b>DANGER</b></p> <p>Make sure that there is enough space underneath the robot. See user instructions for the turning tool.</p>  | <p>Lifting and turning tool:<br/>3HAC073537-001</p> <p>See user instructions enclosed with the turning tool.</p>            |
| 6 | <p>Guide the robot using two attachment screws while lifting it into its mounting position.</p>   |   |

*Continues on next page*



|   | Action   | Note   |
|---|--|--|
| 7 | <p>Fit the bolts and washers in the base attachment holes.</p> <p> <b>Note</b></p> <p>Lightly lubricate screws before assembly.</p> <p> <b>CAUTION</b></p> <p>If high stress on screws are suspected, replace used screws with new ones.</p> | <p>Suitable screws, lightly lubricated: M24 x 100 (8 pcs), 8.8.</p> <p>Suitable washer: 4 mm flat washer.</p> <p>Screw tightening yield point utilization factor (<math>v</math>) (according to VDI2230): 90% (<math>v=0.9</math>).</p> <p>Tightening torque:</p> <p>550 Nm (screws lubricated with Molykote 1000)</p> <p>600-725 Nm, typical 650 Nm (screws none or lightly lubricated)</p> |
| 8 | Tighten bolts in a crosswise pattern to ensure that the base is not distorted.   |  |
| 9 | Reconnect the robot cables to the base.  |  |

## Concluding procedure

|   | Action   | Note  |
|---|--|---|
| 1 | If the robot is equipped with DressPack, refit the brackets of the ball joint housings on the wrist.   |   |
| 2 | Refill oil to the axis-2 gearbox.  | See <a href="#">Filling oil into the axis-2 gearbox on page 164</a> . |
| 3 | Calibrate the robot.   | See <a href="#">Calibration on page 621</a> .                         |
| 4 | <p> <b>DANGER</b></p> <p>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a>.</p> |   |

## 5 Repair

---

### 5.9.3 Replacing the axis-3 gearbox

### 5.9.3 Replacing the axis-3 gearbox

---

#### Keeping the cabling installed during gearbox replacement

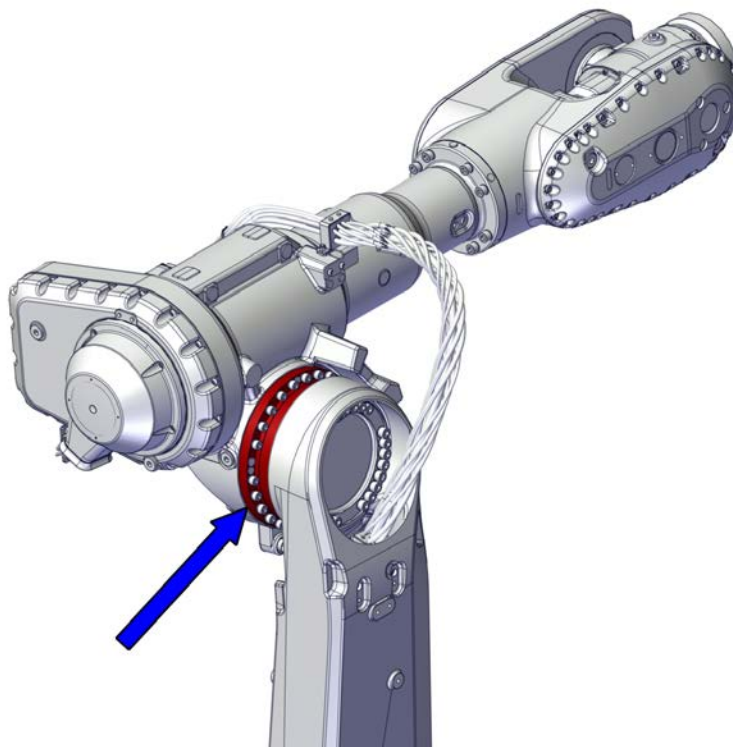
For floor-mounted manipulators the cable harness and DressPack cable package (if installed) can be kept installed on the robot, if there is enough free space on the floor to put down the upper arm next to the manipulator. There should be enough space to place two pallets in a row.

For inverted manipulators, the cable harness and DressPack cable package must be removed from the upper arm.

---

#### Location of the gearbox

The gearbox is located as shown in the figure.



xx2100000484

---

#### Summary of the replacement procedure

This is a brief summary of the replacement procedure, containing the major actions to be performed.

- 1 Drain the axis-3 gearbox.
- 2 Remove the axis-3 motor.
- 3 If needed, remove the cable harness from the upper arm (if the manipulator is inverted or if there is not enough free space for the upper arm on the floor next to the manipulator).
- 4 Remove the upper arm and place on a prepared service area.
- 5 Replace the axis-3 gearbox.

*Continues on next page*

## Required spare parts



## Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number   | Note            | Level |
|------------|--|-----------------|-------|
| Gearbox    | 3HAC072170-003<br>(Graphite White)<br>3HAC072170-005<br>(ABB Orange) | Includes o-ring | L2    |

## Required service parts

| Consumable     | Article number | Note                |
|----------------|----------------|---------------------|
| Cleaning agent | -              | Loctite 7200        |
| Cleaning agent | -              | Loctite 7063        |
| Flange sealant | -              | Loctite 5800        |
| O-ring         | 3HAC062327-062 | Replace if damaged. |

## Required tools and equipment

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Lifting eye                           | 3HAC16131-1  | M12, 2 pcs  |
| Fender washer                         | -  | Outer diameter: minimum 26 mm, maximum 30 mm, hole diameter: 13 mm, thickness: 3 mm.                                    |
| Roundsling, 1.5 m                     | -  | Length: 1.5 m.  |
| Lifting accessory (chain)             | 3HAC15556-1  | Lifting instruction 3HAC15880-2 enclosed.   |
| Brake release tool                    | 3HAC081310-001   | User instructions are enclosed with the tool.   |
| Bits extender                         | 3HAC12342-1  | 300 mm, bits 1/2"   |
| Guide pin, M10x150                    | 3HAC15521-2  | Always use guide pins in pairs.   |
| Lifting accessory for gear            | 3HAC081585-001   | For lifting the gearbox   |
| Screws M8x75, fully threaded          | -  | Used to push out the gearbox, if necessary.   |
| Adjustment tool for gear              | 3HAC080331-001   | Used to rotate the gear for matching hole pattern with frame.   |
| Calibration toolbox, Axis Calibration | 3HAC074564-001<br>(axes 1, 2, 3 and 4)<br>3HAC074119-001<br>(axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

Continues on next page

## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

*Continued*

#### Deciding calibration routine

Decide which calibration routine to be used, based on the information in the table. Depending on which routine is chosen, action might be required prior to beginning the repair work of the robot, see the table.

|   | Action  | Note  |
|---|---|---|
| 1 | Decide which calibration routine to use for calibrating the robot. <ul style="list-style-type: none"><li>Reference calibration. External cable packages (DressPack) and tools can stay fitted on the robot.</li><li>Fine calibration. All external cable packages (DressPack) and tools must be removed from the robot.</li></ul>   |   |
|   | <b>If the robot is to be calibrated with reference calibration:</b><br>Find previous reference values for the axis or create new reference values. These values are to be used after the repair procedure is completed, for calibration of the robot.<br>If no previous reference values exist, and no new reference values can be created, then reference calibration is not possible. | Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.<br>Creating new values requires possibility to move the robot.<br>Read more about reference calibration for Axis Calibration in <a href="#">Reference calibration routine on page 631</a> . |
|   | <b>If the robot is to be calibrated with fine calibration:</b><br>Remove all external cable packages (DressPack) and tools from the robot.  |   |

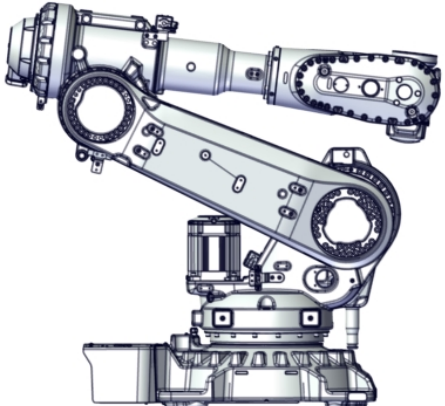
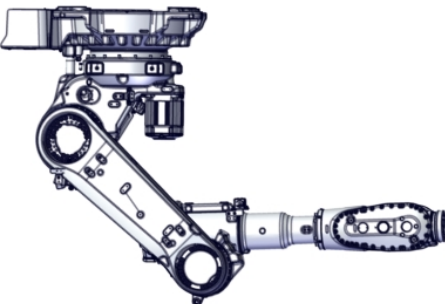

#### Removing the gearbox

Use these procedures to remove the gearbox.

#### Preparations before removing the axis-3 gearbox

|   | Action   | Note  |
|---|--|---|
| 1 | Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure. |   |
| 2 | Drain the axis-3 gearbox.  | See <a href="#">Draining the axis-3 gearbox on page 168</a> . |

*Continues on next page*


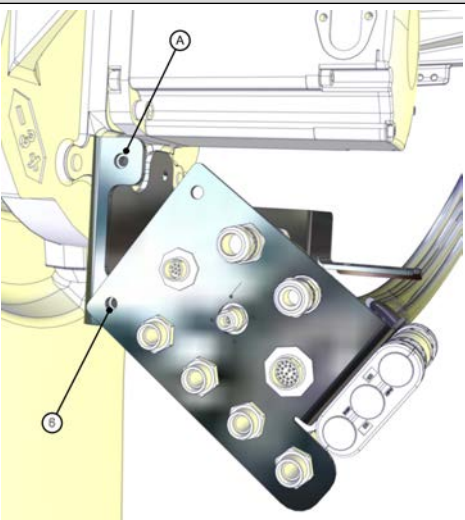
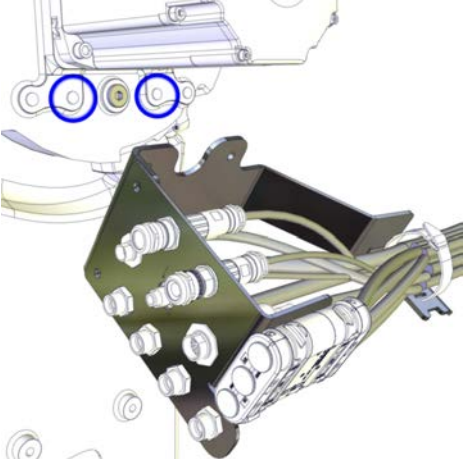
|   | Action  | Note  |
|---|---|---|
| 3 | <p><b>Floor-mounted robot:</b></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: no significance</li> <li>• Axis 2: <math>-65^{\circ}</math></li> <li>• Axis 3: maximum position in positive direction, upper arm resting against the mechanical stop (approximately <math>+70^{\circ}</math>)</li> <li>• Axis 4: <math>0^{\circ}</math></li> <li>• Axis 5: <math>+90^{\circ}</math></li> <li>• Axis 6: <math>0^{\circ}</math></li> </ul>  | <p>If needed, run the axis-1 into a position that gives the required space (space to place two pallets in a row) at the right-hand side of the robot, as seen from behind.</p>  <p>xx2100001218</p> |
| 4 | <p><b>Option Inverted (3317-1)</b></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"> <li>• Axis 1: position that allows best possible access to fit the lifting accessories to the upper arm (<math>170^{\circ}</math> shown in figure)</li> <li>• Axis 2: <math>-47^{\circ}</math></li> <li>• Axis 3: <math>-135^{\circ}</math> (upper arm horizontal)</li> <li>• Axis 4: <math>0^{\circ}</math></li> <li>• Axis 5: <math>+90^{\circ}</math></li> <li>• Axis 6: <math>0^{\circ}</math></li> </ul> |  <p>xx2100002137</p>   |
| 5 |  <p><b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> <p>to the robot, before entering the safe-guarded space.</p>  |   |

Continues on next page

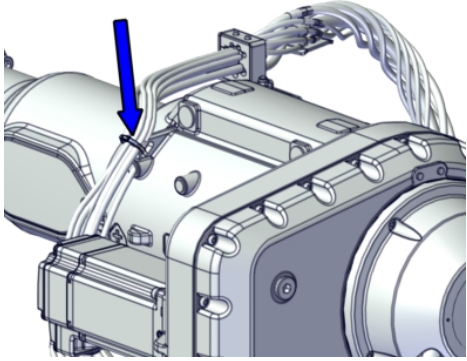
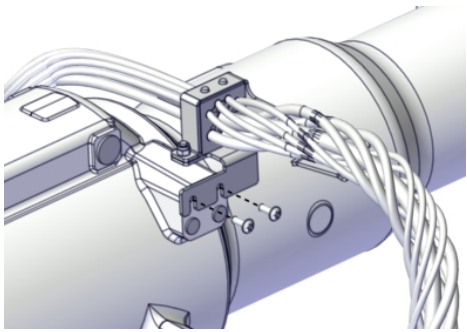
## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

Continued



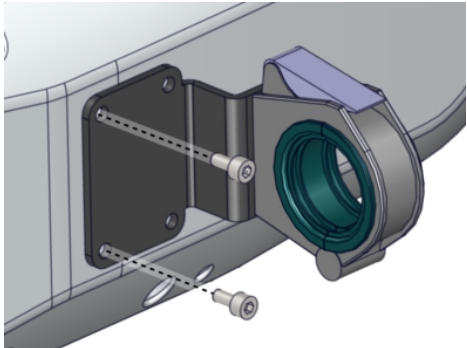
|   | Action  | Note  |
|---|---|---|
| 6 | <p>If robot is equipped with DressPack:<br/>Unscrew the uppermost attachment screw that holds the bracket of the DressPack cable package, and let it "fall down". See figure!</p> <p> <b>Note</b></p> <p>It is not needed to disconnect the lower end connectors of the DressPack (as the figure shows). Connectors are only hidden to get a better view of which screw to be removed.</p> |  <p>xx1200001331</p> <p>A Attachment screw to be removed<br/>B Attachment screw not to be removed</p> |
| 7 | <p>If robot is equipped with DressPack:<br/>Unscrew the two attachment screws that holds the bracket of the DressPack cable package (if one is fitted), and let it hang down together with the rest of the DressPack cable package.</p>   |  <p>xx1200001332</p>   |
| 8 | <p>Choose to remove the cabling from the upper arm, if any of following circumstances is true:</p> <ul style="list-style-type: none"> <li>There is not enough free space to put down the upper arm next to the floor-mounted manipulator.</li> <li>The manipulator is inverted.</li> </ul> <p>How to remove the cabling is described in following procedures. Skip them if the cabling can be kept installed.</p>   |   |

Continues on next page

| Action  | Note  |
|---|---|
| 9 If cabling needs to be removed:<br>Cut the cable tie at the eyelet on top of the arm house. | <br>xx2000000415  |
| 10 If cabling needs to be removed:<br>Remove the metal clamp on top of the arm house.         | <br>xx2100001285 |

If cabling needs to be removed: Retrieving access to the wrist cabling

Use this procedure to remove the wrist cover.

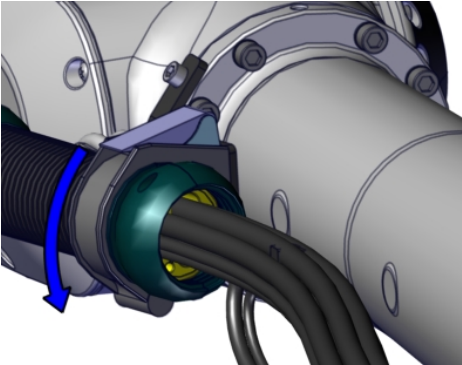
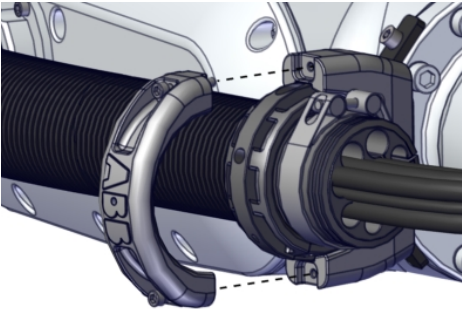
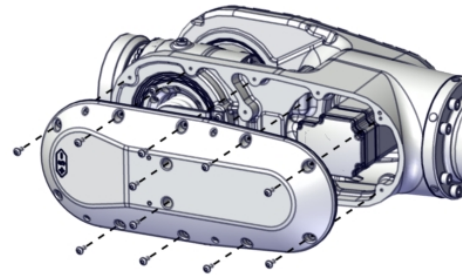
| Action   | Note   |
|--|--|
| 1  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.  |  |
| 2 If DressPack MH3 is installed:<br>Remove the wrist bracket with the complete ball joint housing still fitted, if the bracket is installed over the two wrist cover screws.<br> <b>Note</b><br>No need to remove the bracket if the two wrist cover screws are accessible. | <br>xx2300001366 |

Continues on next page




5 Repair

5.9.3 Replacing the axis-3 gearbox  
Continued

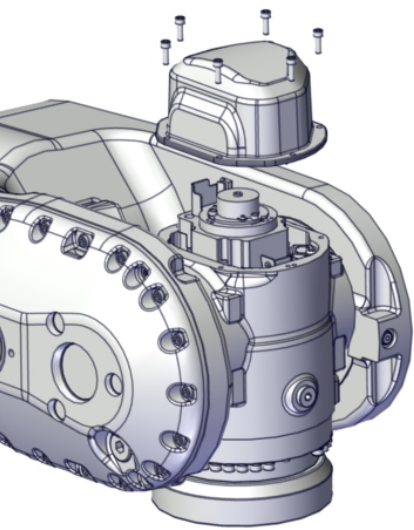
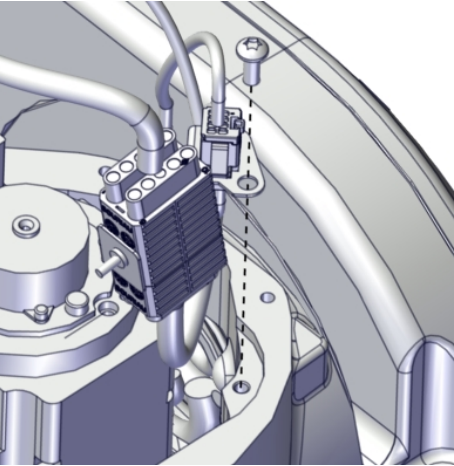
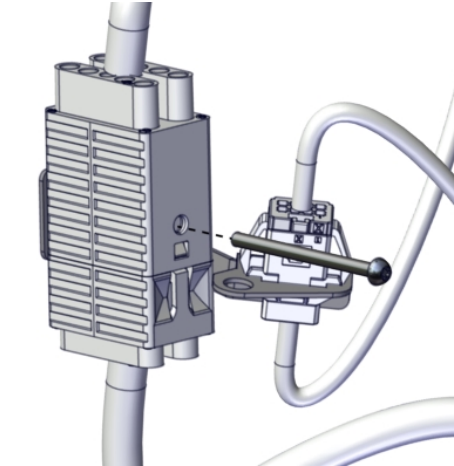
|   | Action  | Note  |
|---|---|---|
| 3 | If DressPack is installed:<br>Open the ball joint housing on the arm tube and remove the DressPack cable package. | <p>IRB 5710-70/2.7 LID</p>  <p>xx2100002733</p> <p>IRB 5710-90/2.3 LID:</p>  <p>xx2100002709</p> |
| 4 | Remove the wrist cover.   |  <p>xx2000000373</p>  |

If cabling needs to be removed: Disconnecting and pulling out the axis-6 motor cables

|   | Action  | Note |
|---|---|------|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |      |

Continues on next page

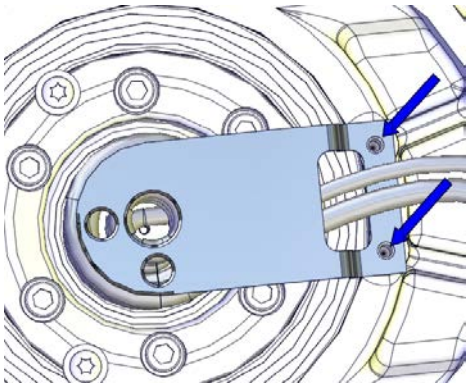

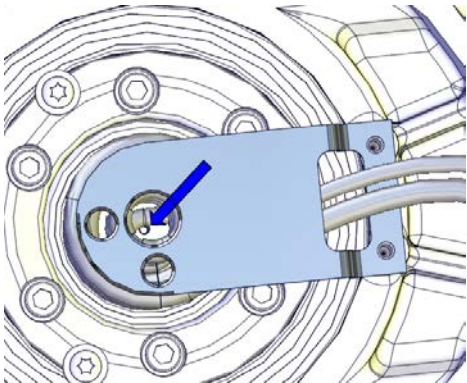


|   | Action  | Note   |
|---|---|--|
| 2 | Unscrew the attachment screws and remove the motor cover. | <br>xx2000000376   |
| 3 | Remove the connector bracket.                             | <br>xx2000000375  |
| 4 | Remove the connector screw.                               | <br>xx2200001919 |
| 5 | Disconnect the motor cables.                              |  |

Continues on next page

5 Repair






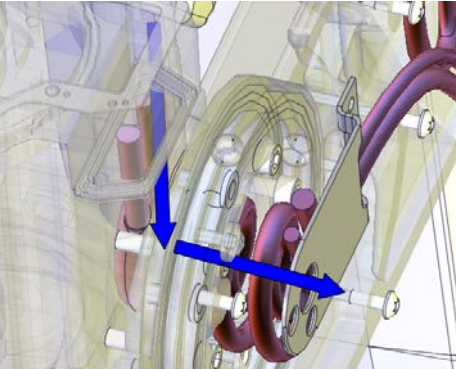
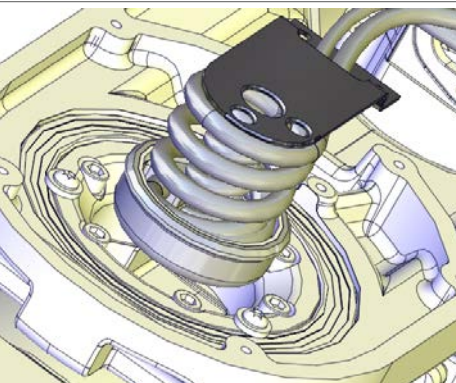
5.9.3 Replacing the axis-3 gearbox  
Continued

|   | Action  | Note  |
|---|---|---|
| 1 | Unscrew the attachment screws that hold the cable bracket.  | <br>xx1300000484  |
| 2 | Unscrew the M4 screw that holds the carrier.<br><div> <b>Note</b><br/>The screw is located at the bottom of the carrier.</div> | <br>xx1300000485 |

Continues on next page

## 5.9.3 Replacing the axis-3 gearbox

*Continued*

|   | Action   | Note   |
|---|--|--|
| 3 | <p>Lift out the axis-6 motor cables by holding the cables with one hand at the motor and the other at the carrier.</p> <p> <b>CAUTION</b></p> <p>Assist by using a flat-head screwdriver or similar to push out the carrier from the motor housing side, to avoid damaging the cables by pulling them too hard.</p> <div data-bbox="502 604 726 936">  <p>xx2300000057</p> </div> <div data-bbox="734 604 957 936">  <p>xx2300000058</p> </div> <div data-bbox="502 985 726 1317">  <p>xx2300000059</p> </div> <div data-bbox="734 985 957 1317">  <p>xx2300000060</p> </div> |  <p>xx1300000666</p>   |
| 4 | Lift out the carrier from its position.  |  <p>xx1300001113</p> |


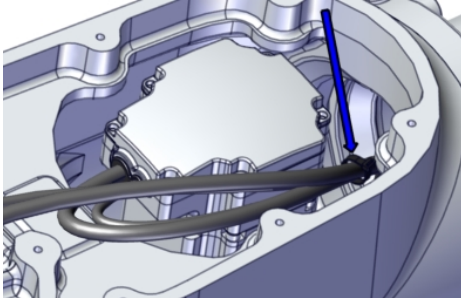
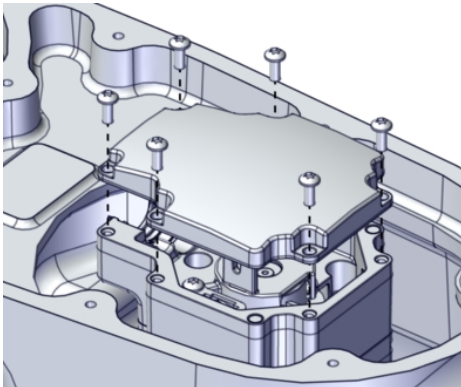
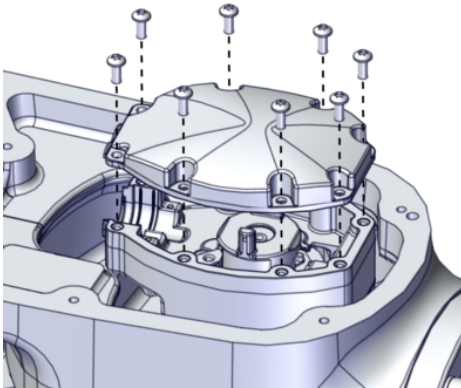
*Continues on next page*

## 5 Repair

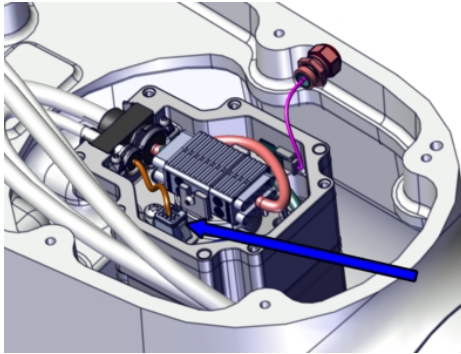
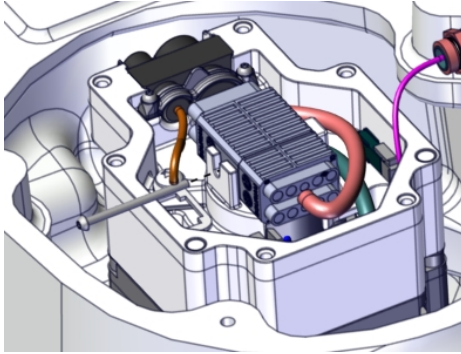
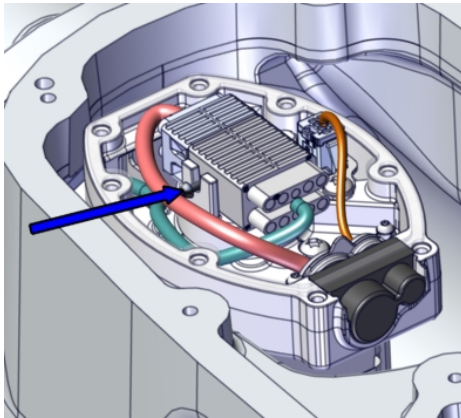
### 5.9.3 Replacing the axis-3 gearbox

*Continued*

If cabling needs to be removed: Disconnecting the axis-5 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Cut the cable tie.  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID<br><br>xx2100002630  |
| 3 | Remove the motor cover by removing the screws.  | IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br><br>xx2100002494<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br><br>xx2100002315 |

*Continues on next page*

|   | Action   | Note   |
|---|--|--|
| 4 | Disconnect the signal cable connector.                                 | <br>xx2200001977   |
| 5 | Disconnect the power cable connector by removing the attachment screw. | <p data-bbox="970 725 1406 752">IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p> <br>xx2200001978<br><p data-bbox="970 1149 1390 1176">IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p> <br>xx2200001979 |

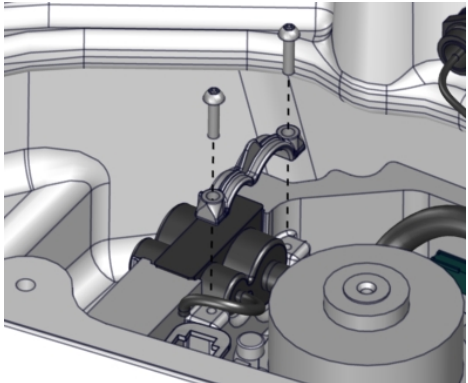
Continues on next page




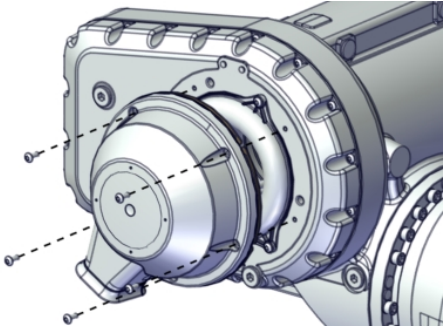
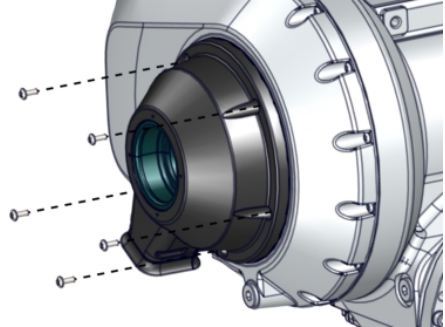
## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

*Continued*

|   | Action   | Note   |
|---|--|--|
| 6 | Remove the cable bracket by removing the screws. | <br>xx2200001735 |
| 7 | Remove the motor cables.                         |  |

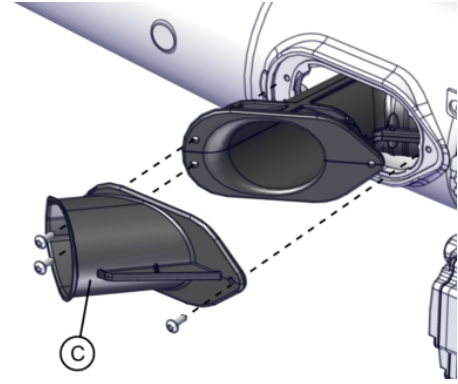
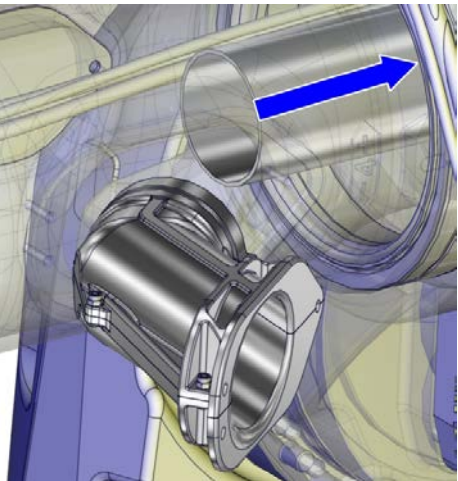


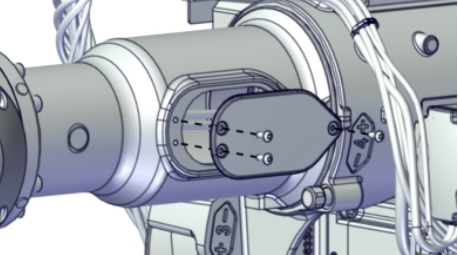
If cabling needs to be removed: Removing the cable harness - wrist and upper arm

|   | Action  | Note  |
|---|---|---|
| 1 | <p><i>Foundry Plus, DressPack:</i><br/>Remove the back cover.</p> <p> <b>Note</b><br/>Use caution not to damage the gasket.</p> | <p><i>Protection type Foundry Plus:</i></p> <br>xx2000000422<br><p><i>DressPack</i></p> <br>xx2300001040 |

*Continues on next page*

### 5.9.3 Replacing the axis-3 gearbox

*Continued*


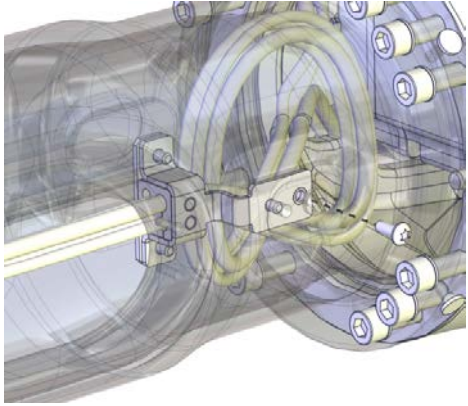
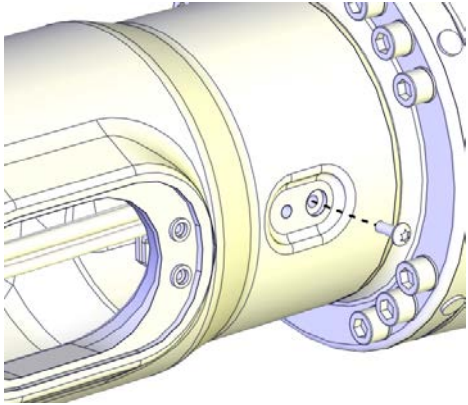
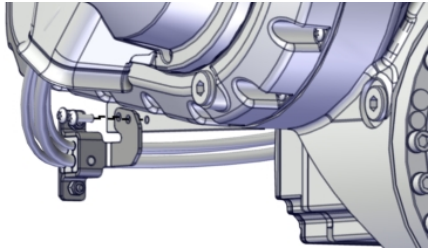
|   | Action   | Note   |
|---|--|--|
| 2 | <b>DressPack</b><br>Loosen the insert.<br>(Cable guard (C) is available for protection type Foundry Plus.)   |  <p>xx2100002677</p>   |
| 3 | <b>DressPack</b><br>Push the DressPack tube a little backwards.  |  <p>xx1400000720</p>  |
| 4 |  <b>Tip</b><br>Use tape and tie the axis-5 and axis-6 connectors and carrier into a bundle (if not already done). This is done to facilitate the removal and to avoid damaging the parts. This will also make it easier to run the cable harness through the inside of the upper arm. |  <p>xx1300000668</p> |
| 5 | Remove the side cover on the arm tube.   |  <p>xx2000000420</p> |

*Continues on next page*

## 5 Repair


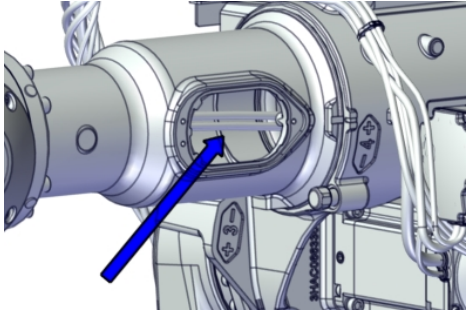
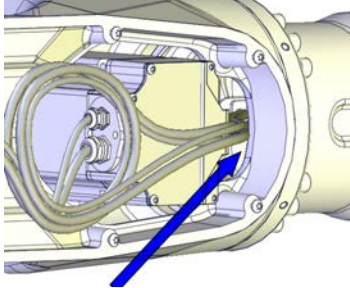


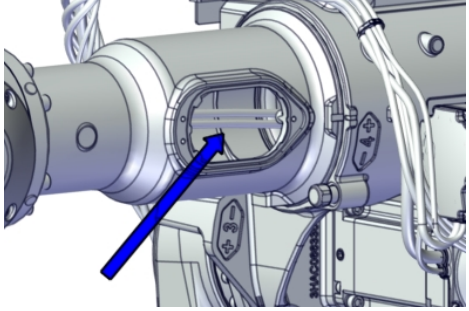
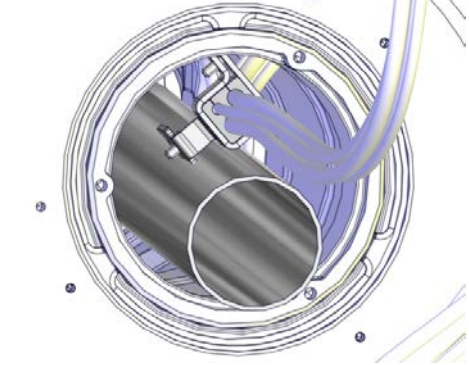
### 5.9.3 Replacing the axis-3 gearbox

*Continued*

|   | Action  | Note   |
|---|---|--|
| 6 | <p>Unscrew the attachment screw that secures the axis-4 metal clamp inside the arm tube.</p> <p> <b>Note</b></p> <p>The screw is reached from outside the upper arm.</p> |  <p>xx1700000340</p>  <p>xx1700000339</p> |
| 7 | Remove the arm house metal clamp.   |  <p>xx2100002154</p>   |

*Continues on next page*



|   | Action  | Note   |
|---|---|--|
| 8 | <p>Remove the cable harness out from the wrist.</p> <p> <b>Tip</b></p> <p>This step is best performed by two persons working together:</p> <ul style="list-style-type: none"> <li>• Person 1: Put one hand inside the side hole and take a hold of the cable harness.</li> <li>• Person 2: Take a hold on the cable harness inside the wrist.</li> <li>• Together: Move the cable harness past the axis-5 motor and into the arm tube.</li> </ul>  | <p>Person 1, working at the side hole:</p>  <p>xx2000000416</p> <p>Person 2, working at the wrist:</p>  <p>xx1300000746</p>   |
| 9 | <p>Remove the cable harness out of the arm tube, at the back of the upper arm.</p> <p> <b>Tip</b></p> <p>This step is best performed by two persons working together:</p> <ul style="list-style-type: none"> <li>• Person 1: Put one hand inside the side hole and take a hold of the cable harness.</li> <li>• Person 2: Take a hold on the cable harness at the back of the robot.</li> <li>• Together: Move the cable harness out of the arm tube.</li> </ul> <p> <b>Note</b></p> <p>To be able to remove the cable harness with the DressPack tube fitted, the tube needs to be pulled out a little, then be placed on the lower left side in the arm tube and the bracket of the cable harness then needs to be placed on the upper right hand side.</p> | <p>Person 1, working at the side hole:</p>  <p>xx2000000416</p> <p>Person 2, working at the back:</p>  <p>xx1400002561</p> |



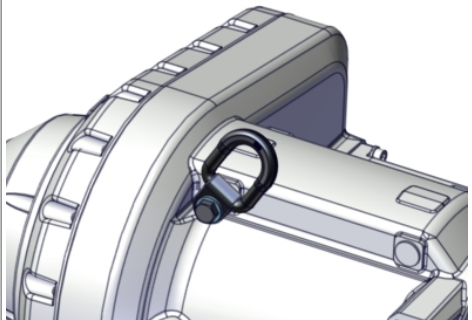
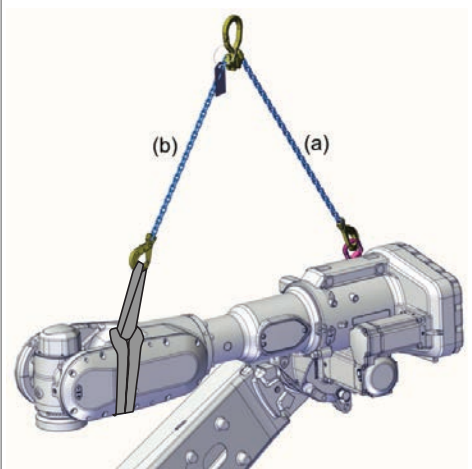
Continues on next page

## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

*Continued*


Attaching the lifting accessories to the upper arm

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>CAUTION</b><br>The weight of the complete upper arm (including the wrist) is<br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID: 260 kg<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID: 210 kg<br>All lifting accessories used must be sized accordingly. |  |
| 2 | Fit a lifting eye in the arm house, with a fender washer underneath.<br><br>xx1400002196  | Lifting eye: 3HAC16131-1<br>Fender washer: Outer diameter: minimum 26 mm, maximum 30 mm, hole diameter: 13 mm, thickness: 3 mm.<br><br>xx2100002146                         |
| 3 | Attach the Lifting accessory (chain) to an overhead crane (or similar), then to the lifting eye in the arm house and to a roundsling run through the wrist.<br>Adjust the chain lengths to make the lift as level as possible.  | Lifting accessory (chain): 3HAC15556-1<br>Roundsling, 1.5 m<br><br>xx2100002145 <ul style="list-style-type: none"> <li>• (a): 1,200 mm</li> <li>• (b): 1,420 mm</li> </ul> |
| 4 | Raise the lifting accessories to take the weight of the upper arm.  |  |


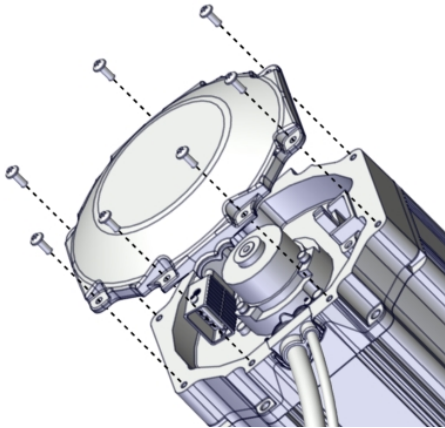
*Continues on next page*

### 5.9.3 Replacing the axis-3 gearbox

*Continued*

|   | Action  | Note  |
|---|---|---|
| 5 | In case of necessary adjustments, use the shortening loops on the lifting accessory (chain) to find the level position. |  <p>xx1400002197</p> |

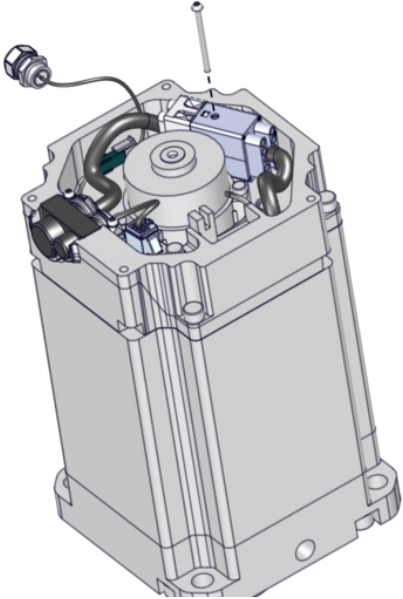
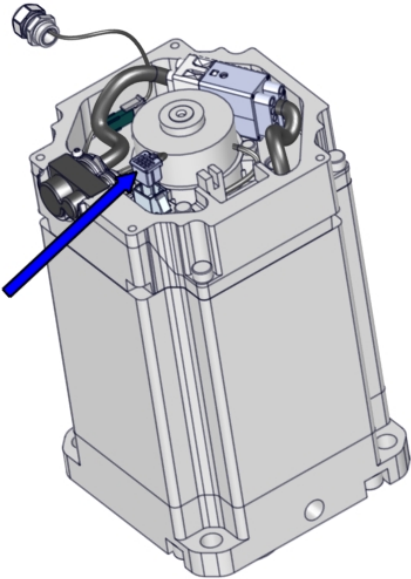
#### Disconnecting the axis-3 and axis-4 motor cables

|   | Action  | Note   |
|---|---|--|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 | Remove the motor cover by removing the screws.  |  <p>xx2100000596</p> |

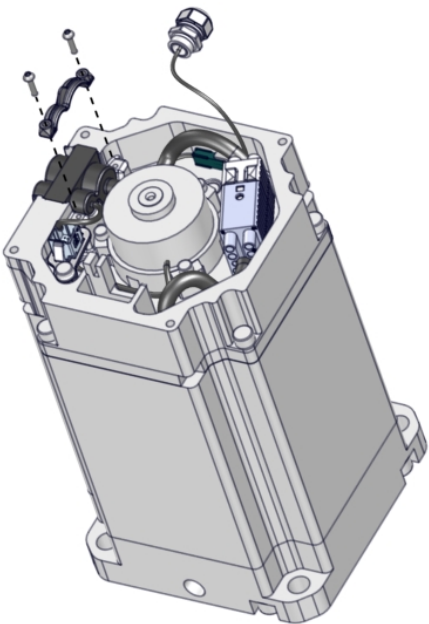
*Continues on next page*

5 Repair


5.9.3 Replacing the axis-3 gearbox  
Continued

| Action   | Note  |
|--|---|
| 3<br>Disconnect the power cable connector by first removing the attachment screw and then parting the connector. | <br>xx2200001736  |
| 4<br>Disconnect the signal cable connector by pulling it out.  | <br>xx2200001737 |

Continues on next page

|   | Action   | Note   |
|---|--|--|
| 5 | Remove the cable bracket by removing the screws. |  <p>xx2200001738</p> |
| 6 | Remove the motor cables from the motor.          |  |

## Removing the axis-3 motor




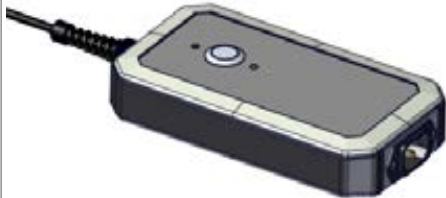
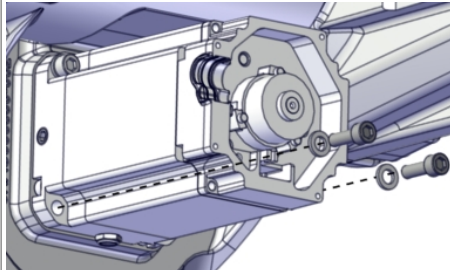
|   | Action   | Note |
|---|--|------|
| 1 | Before removing the motor, make sure that the gearbox is completely drained.   |      |
| 2 |  <b>DANGER</b><br>When releasing the holding brakes of the motor, the upper arm will be movable and falls down if not secured. Verify that the upper arm is secured as previously described, before continuing. |      |

Continues on next page


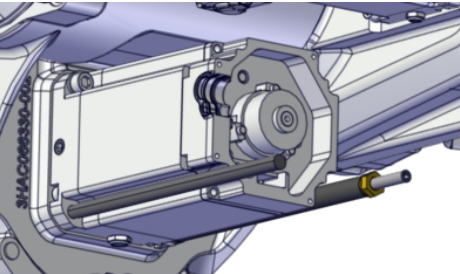
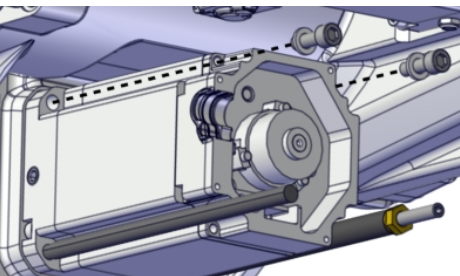



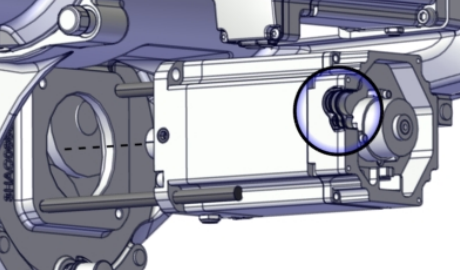
## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

Continued

|   | Action   | Note  |
|---|--|---|
| 3 | <p>Release the brakes on the motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>CAUTION</b></p> <p>Releasing the brakes on the axis-3 motor results in weight transfer of upper arm weight. Verify that the upper arm rests against the mechanical stop or installed lifting accessories, before releasing the brakes.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 4 | <p>Remove the two lower screws.</p> <p>Use a bits extender in order to reach the screws.</p>   | <p>Bits extender: 3HAC12342-1</p>  <p>xx2300000045</p>  |

Continues on next page

|    | Action  | Note   |
|----|---|--|
| 5  | Fit a guide pin in the non-threaded hole.<br>Fit a removal tool in the threaded hole.<br><br> <b>Tip</b><br><br>Lubricate the guide pins with some grease to make the motor slide better.                          | Guide pin, M10x150: 3HAC15521-2<br>Removal tool motor M12: 3HAC14631-1<br><br><br><br>xx2100002148 |
| 6  | Remove the remaining two screws.  | <br><br>xx2300000046   |
| 7  | Fit a guide pin in the non-threaded hole.<br>Fit a removal tool in the threaded hole.   | Guide pin, M10x150: 3HAC15521-2<br>Removal tool motor M12: 3HAC14631-1   |
| 8  |  <b>CAUTION</b><br><br>Whenever parting/mating motor and gear-box, the gears may be damaged if excessive force is used.  |  |
| 9  | Activate the brake release tool again (release the brakes).   | The power is only applied for 180 seconds after activation.  |
| 10 | Press the motor out of its position by using the removal tools.<br>Remove the removal tools.  | Used to push out the motor, if necessary.<br>Always use removal tools in pairs.  |
| 11 |  <b>CAUTION</b><br><br>The weight of the motor is 13 kg  |  |
| 12 | Remove the motor by sliding it out on the guide pins and lift it off.<br><br> <b>Tip</b><br><br>Make a note in which direction the cable gland hole is facing. The motor shall be refitted in the same position. | <br><br>xx2100002149<br><br><b>Make sure the pinion is not damaged.</b>                          |

Continues on next page



## 5 Repair


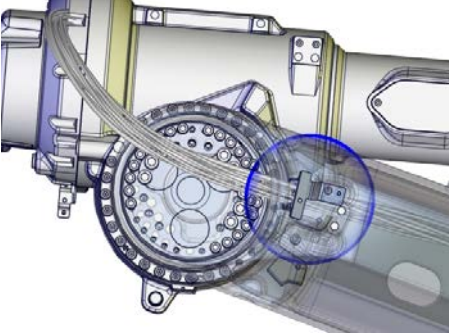
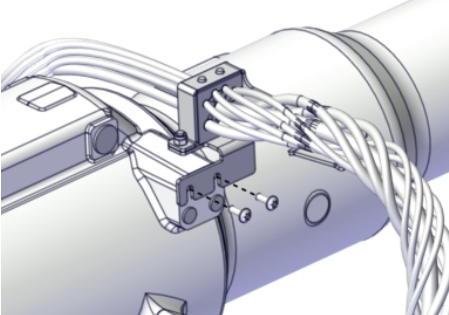
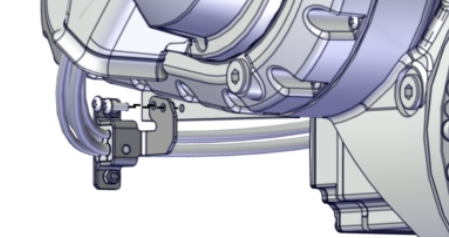
### 5.9.3 Replacing the axis-3 gearbox

*Continued*

Floor-mounted robot: Keeping cabling installed in upper arm - loosening the cable brackets

This procedure is valid if wanting to keep the cabling installed in the upper arm, when removing the upper arm from the robot. If this is not possible due to lack of space where to put the upper arm, the cable harness must be removed from the upper arm, see [Removing the cable harness - upper arm and wrist on page 289](#).

Use this procedure to loosen required cable brackets of the robot cable harness, in order to get the longest possible length of the cable harness between the lower and upper arm.


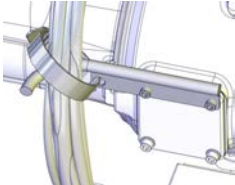
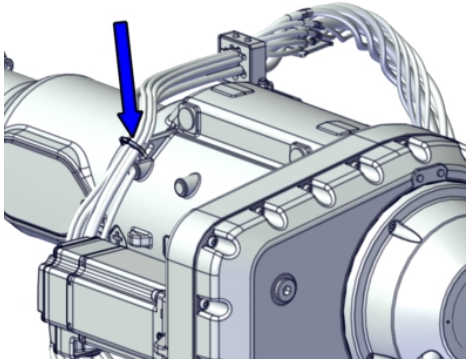
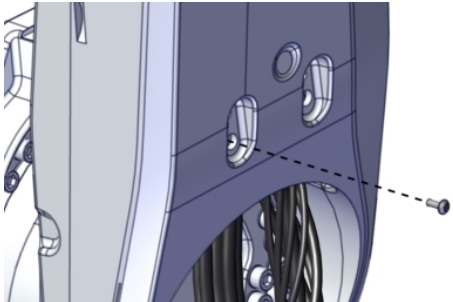
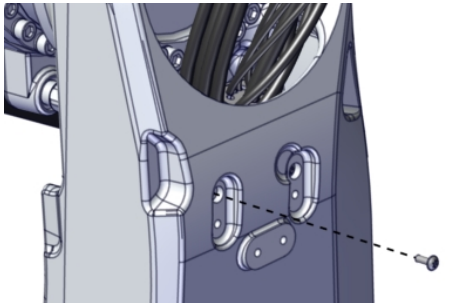
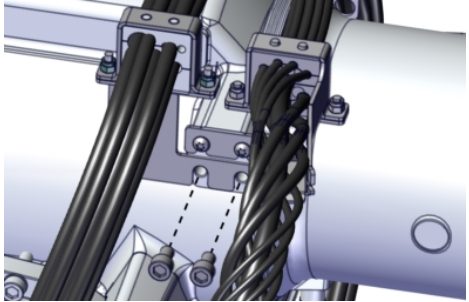
|   | Action  | Note   |
|---|---|--|
| 1 | <p>Unscrew the attachment screws that hold the axis-3 lower arm metal clamp (the one closest to the axis-3 gearbox) located on the inside of the lower arm.</p> <p> <b>Note</b></p> <p>The screw is reached from the outside of the lower arm!</p> |  <p>xx1800000042</p>   |
| 2 | <p>Remove the metal clamp on top of the arm house.</p>  |  <p>xx2100001285</p> |
| 3 | <p>Remove the arm house metal clamp.</p>  |  <p>xx2100002154</p> |

*Continues on next page*



## 5.9.3 Replacing the axis-3 gearbox

*Continued*

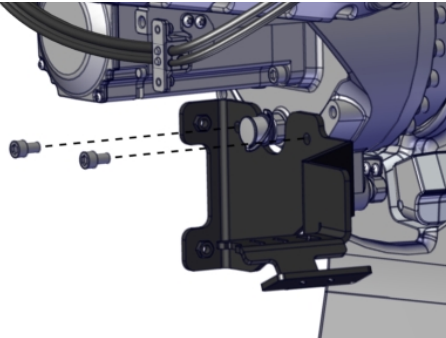
|   | Action   | Note   |
|---|--|--|
| 4 | <p>Cut the cable tie at the eyelet on top of the arm house.</p> <p> <b>Note</b></p> <p>If DressPack is fitted, the cable fixing bracket is replaced by the cable guide.</p>  <p>xx1300001973</p> |  <p>xx2000000415</p>   |
| 5 | <p>If robot is equipped with DressPack:<br/>Remove the cable brackets inside the lower arm, by removing the attachment screws.</p>   |  <p>xx2100002702</p>  <p>xx2100002701</p> |
| 6 | <p>Remove the cable bracket on top of the arm house, by removing the attachment screws.</p>  |  <p>xx2100002703</p>   |

*Continues on next page*

## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

*Continued*


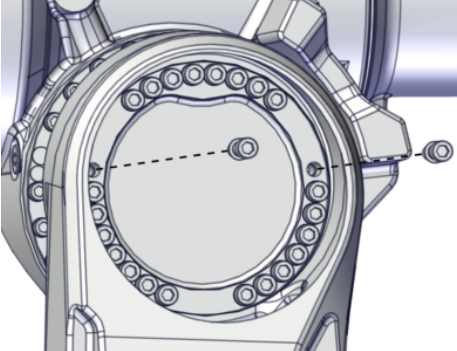
|   | Action   | Note   |
|---|--|--|
| 7 | If robot is equipped with DressPack:<br>Remove the mounting plate from the arm house.  |  <p>xx2100002578</p> |
| 8 | If the robot is equipped with DressPack:<br>Lift the DressPack cable package at the arm house up and put the cable bracket on the cable guide where the velcro strap normally is fitted. Secure the temporary position with a velcro strap or similar, to ensure it will not fall down or damage anything. |  |

Inverted robot: Removing the cable harness from the upper arm and wrist

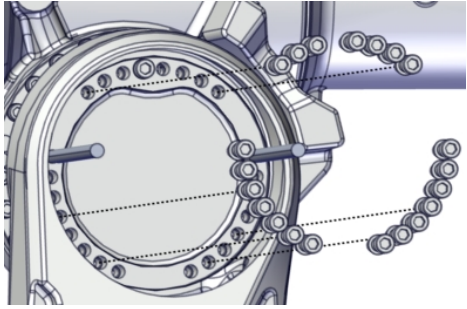
The upper arm cabling can stay fitted, if the distance between the axis-3 rotation centre and the floor does not exceed 2.1 m. If the distance exceeds 2.1 m, the cabling in the upper arm and the wrist must be removed.

Removal of the cabling in the upper arm and wrist is described in [Removing the cable harness - upper arm and wrist on page 289](#).



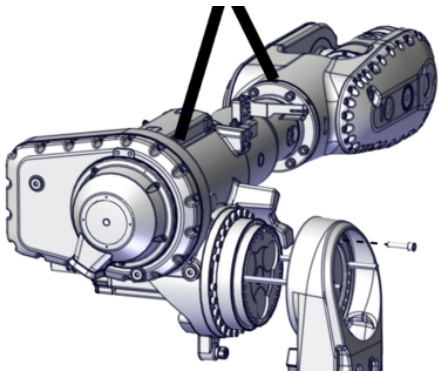

Preparations before removing the upper arm

|   | Action   | Note  |
|---|--|---|
| 1 | <p>Remove two attachment screws in opposite holes and replace them with guide pins.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the upper arm slide better.</p> | <p>Guide pin, M12x150: 3HAC13056-2<br/>Always use guide pins in pairs.</p>  <p>xx2000000392</p> |

*Continues on next page*

| Action  | Note   |
|---|--|
| 2 Leave one of the remaining attachment screws fitted, remove the other screws. | <br>xx2000000393 |

## Removing the upper arm

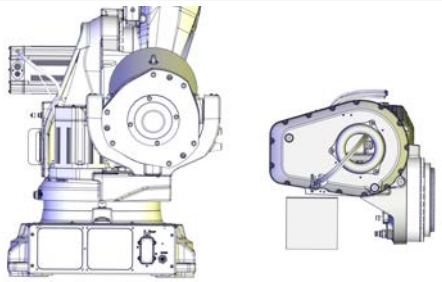
| Action  | Note   |
|---|--|
| 1  <b>Note</b><br>Make sure the lift is done completely leveled! In case of necessary adjustments, use the shortening loops on the lifting accessory (chain), and make sure to place the chain the right way through the loops.  | <br>xx1400002197 |
| 2 Remove the remaining attachment screw and let the upper arm slide out from the lower arm with support from the guide pins.  | <br>xx2000000394 |
| 3 Lift the upper arm and place it on the prepared area.<br> <b>CAUTION</b><br><i>Only valid when the upper arm is removed due to replacement of the axis-3 gearbox:</i><br>If the cable harness is still fitted or partly fitted, use caution when lifting the upper arm over to the other side of the robot, in order not to cause any damage to the cable harness. |  |

Continues on next page

## 5 Repair

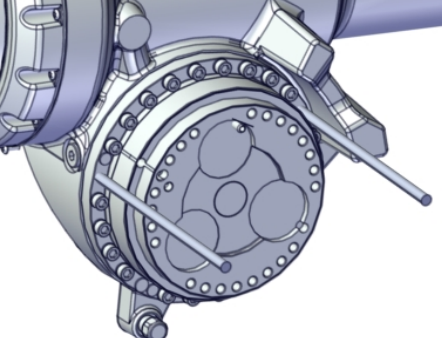
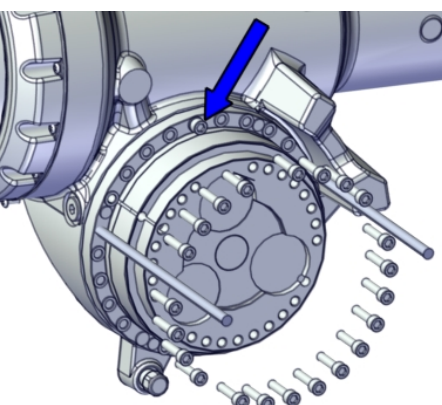
### 5.9.3 Replacing the axis-3 gearbox

*Continued*

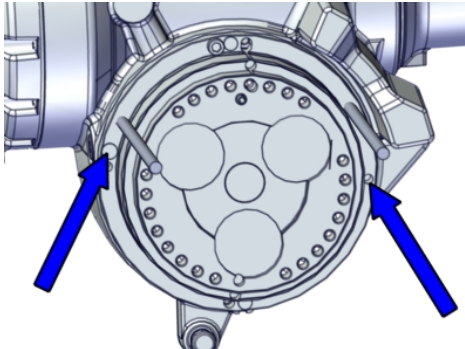


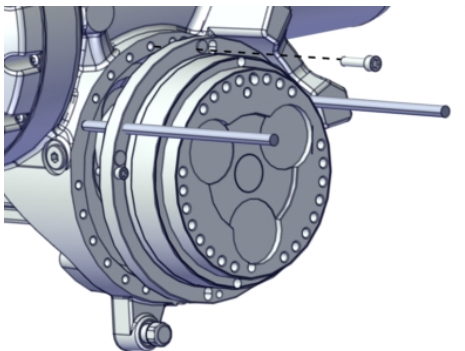

|   | Action  | Note   |
|---|---|--|
| 4 | <p><i>This step is only valid when the upper arm is removed due to replacement of the axis-3 gearbox:</i></p> <p>Place pieces of wood (or similar) under arm house and wrist. Lower the upper arm, and let the upper arm rest as shown in the figure.</p> <p>This is done in order to keep the axis-3 gearbox in a vertical position and to get the best position to replace the axis-3 gearbox, if applicable.</p> |  <p>xx1300000553</p> |

### Removing the axis-3 gearbox

Use this procedure to remove the gearbox.

|   | Action  | Note   |
|---|---|--|
| 1 | <p>Remove two attachment screws in opposite holes and replace them with guide pins.</p> <div data-bbox="475 891 539 958"> </div> <p><b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the gearbox slide better.</p> | <p>Guide pin, M10x150: 3HAC15521-2<br/>Always use guide pins in pairs.</p>  <p>xx2100001222</p> |
| 2 | <p>Remove all but one of the remaining attachment screws and washers.</p>   |  <p>xx2100001223</p>   |

*Continues on next page*

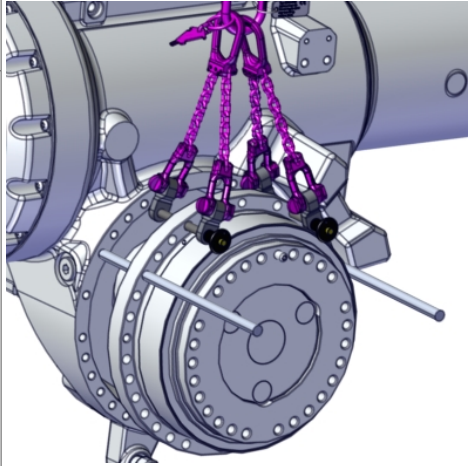
|   | Action  | Note  |
|---|---|---|
| 3 | Fit two fully threaded screws in the press out holes.   | <p>Screws M8x75, fully threaded: -</p>  <p>xx2100001224</p> |
| 4 | <p> <b>Note</b></p> <p>There will be some oil spill when the gearbox is removed. Put some oil absorbent cloth or paper below the gearbox.</p>  |   |
| 5 | <p>Remove the remaining attachment screw and loosen the gearbox with help of the removal tools.</p> <p>Only pull out the gearbox a little bit on the guide pins.</p> <p> <b>DANGER</b></p> <p>There is a risk that the gearbox may glide out and fall down if it is too far out to on the guide pins and no stoppers are used.</p> |  <p>xx2100001236</p>                                       |
| 6 | <p> <b>CAUTION</b></p> <p>The weight of the gearbox is 36 kg</p> <p>All lifting accessories used must be sized accordingly.</p>  |   |

Continues on next page

## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox


*Continued*

|   | Action  | Note   |
|---|---|--|
| 7 | Apply the lifting accessory to the gearbox.   | Lifting accessory for gear: 3HAC081585-001   |
| 8 | With the gearbox attached to the lifting accessory, remove the gearbox by letting it slide out on the guide pins. | <br>xx2100002460 |
| 9 | Remove the gearbox.   |  |

#### Refitting the gearbox

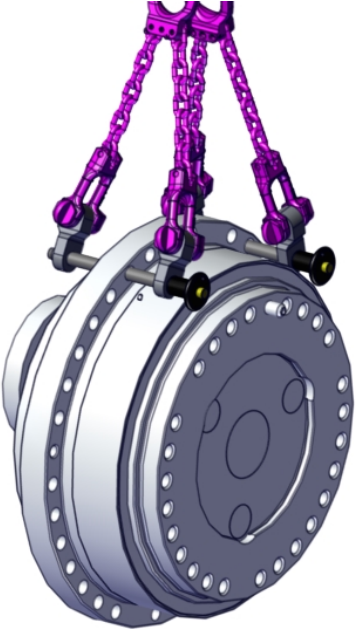
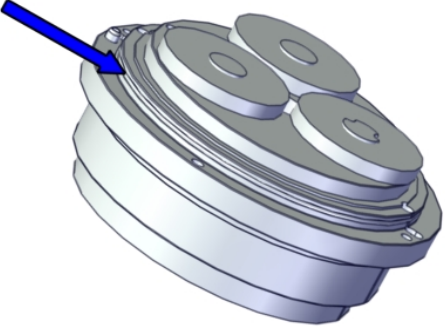
Use these procedures to refit the axis-3 gearbox.

#### Preparations before refitting the axis-3 gearbox

|   | Action  | Note |
|---|---|------|
| 1 |  <b>CAUTION</b><br>The weight of the gearbox is 36 kg<br>All lifting accessories used must be sized accordingly. |      |

*Continues on next page*



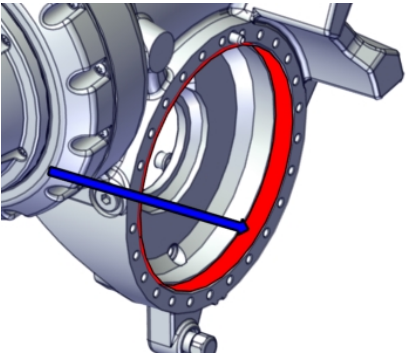
|   | Action  | Note   |
|---|---|--|
| 2 | Apply the lifting accessory to the gearbox.   | <p data-bbox="976 311 1433 367">Lifting accessory for gear: 3HAC081585-001</p>  <p data-bbox="976 1037 1078 1059">xx2100002461</p> |
| 3 | Lift the gearbox so that it rests on its side.  |  |
| 4 | Wipe clean the contact surfaces of both the gearbox and the upper arm from any contamination. | <p data-bbox="976 1131 1289 1153">Cleaning agent: Isopropanol</p>  |
| 5 | Check the o-ring.<br>Replace if damaged.  | <p data-bbox="976 1232 1252 1254">O-ring: 3HAC062327-062</p>  <p data-bbox="976 1619 1078 1641">xx2100001237</p>                   |

Continues on next page



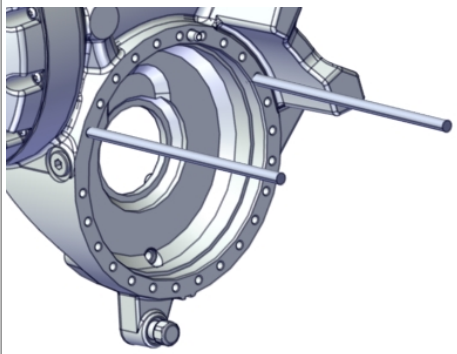
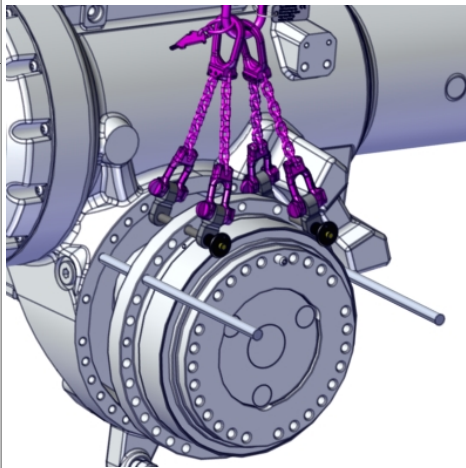

## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

*Continued*

|   | Action  | Note  |
|---|---|---|
| 6 | Lubricate the contact surface inside the upper arm with grease. | <p>Grease, Shell Gadus S2: 3HAC042536-001.</p>  <p>xx2100002775</p> |

### Refitting the axis-3 gearbox

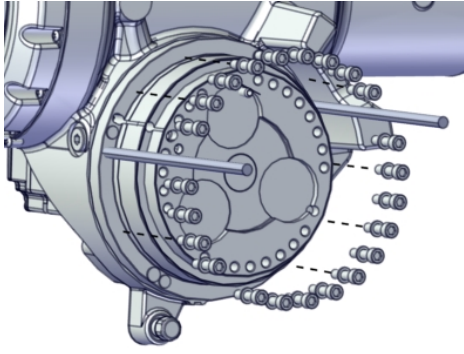
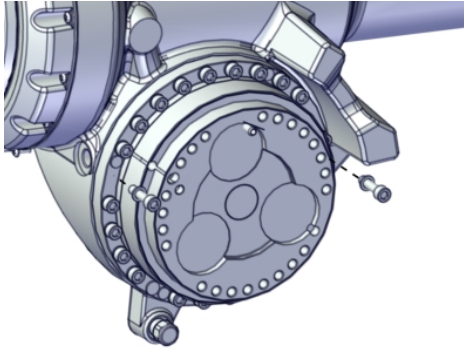
|   | Action   | Note  |
|---|--|---|
| 1 | <p>Fit two guide pins in opposite holes.</p> <p> <b>Tip</b></p> <p>Use different lengths on the guide pins to simplify guidance.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the lower arm slide better.</p> | <p>Guide pin, M10x150: 3HAC15521-2</p> <p>Always use guide pins in pairs.</p>  <p>xx2100001238</p> |
| 2 | Lift the gearbox and let it rest on the guide pins.  |  <p>xx2100002460</p>  |
| 3 | <p>Remove the lifting accessory.</p> <p> <b>DANGER</b></p> <p>There is a risk that the gearbox may glide out and fall down if it is too far out to on the guide pins and no stoppers are used.</p>  |   |

*Continues on next page*


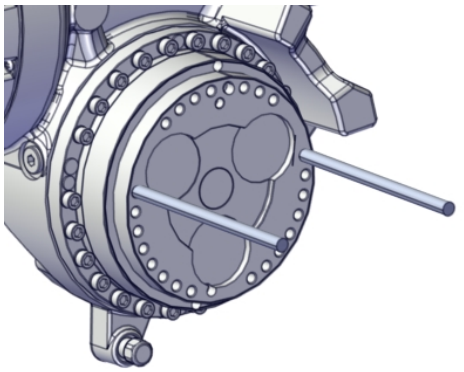


### 5.9.3 Replacing the axis-3 gearbox

*Continued*

| Action   | Note  |
|--|---|
| 4 Slide the gearbox into position and fit the attachment screws and washers. | <p>Hex socket head cap screw : M10x40 12.9 Gleitmo 603+Geomet 500 (25 pcs ).</p>  <p>xx2100001239</p> |
| 5 Remove the guide pins and fit the remaining attachment screws and washers. |  <p>xx2100001240</p>   |
| 6 Tighten the attachment screws.   | <p>Tightening torque: standard torque 70 Nm (<i>Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws on page 662</i>).</p>                  |

#### Preparations before refitting the upper arm

| Action  | Note  |
|---|---|
| 1 Wipe clean all contact surfaces.  |   |
| <p>2 Fit two guide pins in opposite M12 holes in the axis-3 gearbox.</p> <p> <b>Tip</b></p> <p>Lubricate the guide pins with some grease to make the upper arm slide better.</p> | <p>Guide pin, M12x150: 3HAC13056-2<br/>Always use guide pins in pairs.</p>  <p>xx2000000396</p> |



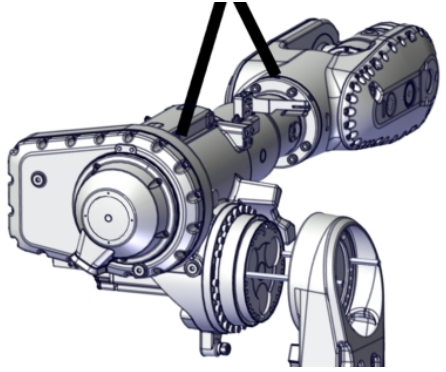
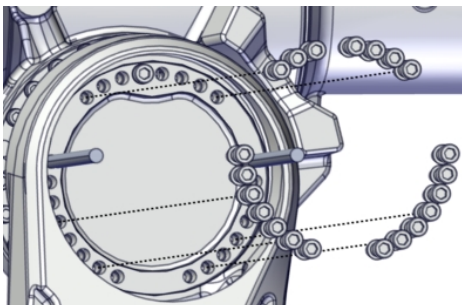
*Continues on next page*

## 5 Repair

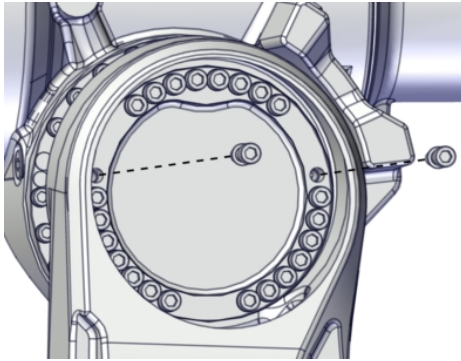
### 5.9.3 Replacing the axis-3 gearbox

*Continued*




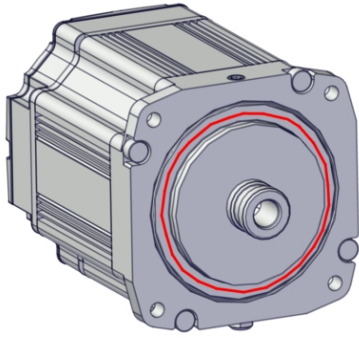
#### Securing the upper arm

|   | Action   | Note  |
|---|--|---|
| 1 |  <b>CAUTION</b><br>The weight of the complete upper arm (including the wrist) is<br>IRB 5710-110/2.3, IRB 5710-90/2.3 LID: 260 kg<br>IRB 5710-90/2.7, IRB 5710-70/2.7 LID: 210 kg<br>All lifting accessories used must be sized accordingly.              |   |
| 2 | Attach the lifting accessories, if not already fitted.   | See <a href="#">Attaching the lifting accessories to the upper arm on page 572</a> .  |
| 3 | Lift the upper arm to mounting position.   |   |
| 4 | Use the adjustment tool to rotate the axis-3 gearbox and find the correct position for the guide pins in the lower arm.<br>Fit the upper arm to the lower arm.<br><br> <b>CAUTION</b><br>Do not damage the cabling with the guide pins during refitting. | Adjustment tool for gear: 3HAC080331-001<br><br><br>xx2000000395   |
| 5 | Insert all but two of the screws and washers.  | Hex socket head cap screw: M12x40 12.9<br>Gleitmo 603+Geomet 500 (24 pcs).<br>Washer: Steel 13x19x1.5 (24 pcs).<br><br><br>xx2000000393 |

*Continues on next page*

|   | Action  | Note  |
|---|---|---|
| 6 | Remove the guide pins and fit the two remaining screws and washers. | <br>xx2000000392  |
| 7 | Tighten the attachment screws.                                      | Tightening torque: standard torque 120 Nm ( <i>Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws on page 662</i> ).. |

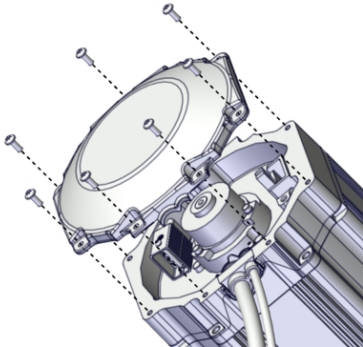
## Preparations prior to refitting motor

|   | Action   | Note  |
|---|--|---|
| 1 |  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off.   |   |
| 2 | Remove any old paint or flange sealant residues or other contamination from the contact surfaces on both the motor and the mating parts.<br><br> <b>Tip</b><br>Remove flange sealant residues with Loctite 7200. Then use Loctite 7063 for cleaning the mating surface. | Cleaning agent: Loctite 7200, Loctite 7063  |
| 3 | Apply a continuous bead of flange sealant, 1-2 mm wide, inside of the groove on the motor contact surface.<br><br> <b>Note</b><br>The purpose of the groove is to catch excess sealant. No o-ring is used.  | Flange sealant: Loctite 5800<br><br><br>xx2100000520 |

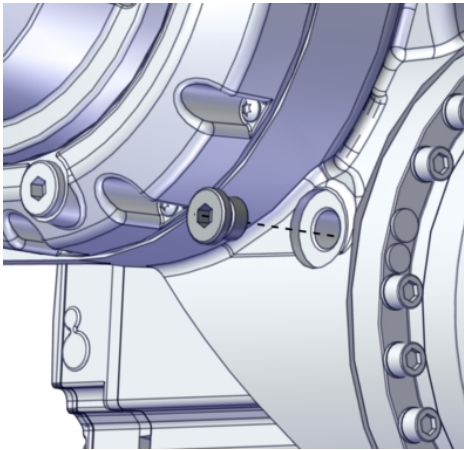
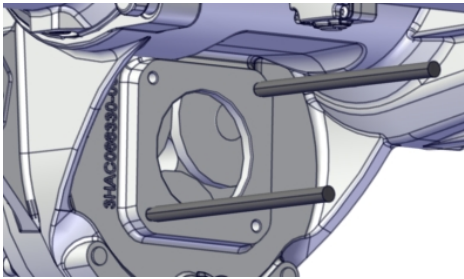

Continues on next page

5 Repair


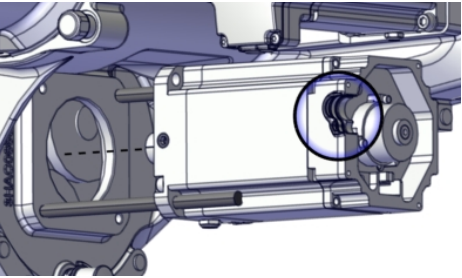


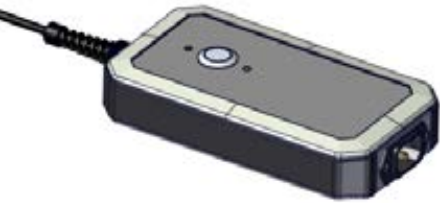

5.9.3 Replacing the axis-3 gearbox  
Continued

|   | Action   | Note  |
|---|--|---|
| 4 | Remove the cover, if fitted to the new spare part motor. | <br><br>xx2100000596 |

Refitting the axis-3 motor

|   | Action   | Note   |
|---|--|--|
| 1 | Remove the plug from the venting hole.<br>This is done to evacuate air during refitting of the motor.                                  | <br><br>xx2100002064  |
| 2 | Fit guide pins in opposite holes.  | Guide pin, M10x150: 3HAC15521-2<br>Always use guide pins in pairs.<br><br><br>xx2100002151 |
| 3 |  <b>CAUTION</b><br>The weight of the motor is 13 kg |  |

Continues on next page

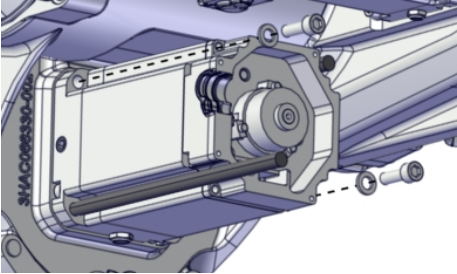
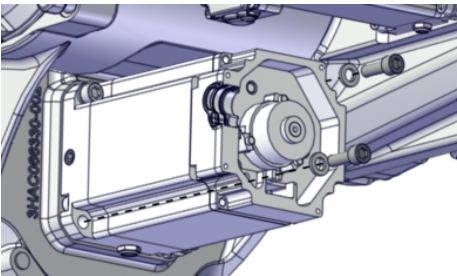
|   | Action  | Note  |
|---|---|---|
| 4 | <p>Lift the motor and put it on the guide pins as close as possible to its final position without pushing the motor pinion into the gear.</p> <p> <b>Note</b></p> <p>Make sure the cable gland opening is turned the correct way.</p>  |  <p>xx2100002149</p>  |
| 5 | <p>Release the brakes of the axis-3 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001</p> <p>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 6 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>  |   |
| 7 | <p>Apply the rotation tool.</p> <p>Use caution and fit the motor in its final position while at the same time rotating the motor pinion slightly using the rotation tool.</p> <ul style="list-style-type: none"> <li>• Make sure that the motor pinion is properly mated to the gear of the gearbox.</li> <li>• Make sure that the motor pinion does not get damaged.</li> <li>• Make sure that the direction of the cable exit is facing the correct way.</li> </ul>   | <p>Rotation tool M4: 3HAB7887-1</p>   |

*Continues on next page*

## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

*Continued*

|    | Action   | Note  |
|----|--|---|
| 8  | Fit two of the attachment screws and washers.<br>Use a bits extender in order to reach the screws. | Hex socket head cap screw: M10x30 12.9 Gleitmo 603+Geomet 500 (2 pcs)<br>Bits extender: 3HAC12342-1<br><br>xx2100002152 |
| 9  | Remove the guide pins and replace with the remaining attachment screws.                            | Hex socket head cap screw: M10x30 12.9 Gleitmo 603+Geomet 500 (2 pcs)<br><br>xx2100002153                              |
| 10 | Tighten the screws.  | Tightening torque: 50 Nm.   |
| 11 | Disconnect the brake release tool.   |   |
| 12 | Perform a leak-down test.  | See <a href="#">Performing a leak-down test on page 196</a> .   |

#### Refitting cable brackets

This procedure is valid if the cabling has been kept installed in the upper arm, when removing the upper arm from the robot. If the cable harness in the upper arm instead has been removed completely, see [Refitting the cable harness - upper arm and wrist on page 323](#).

Use this procedure to refit the cable brackets.


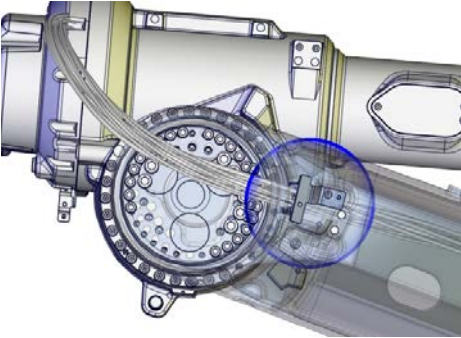
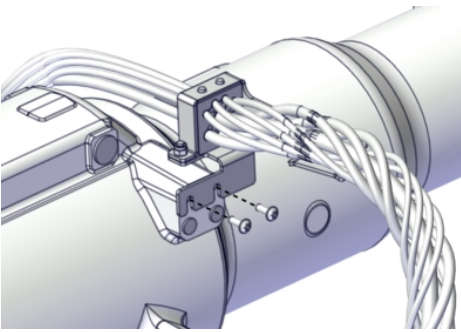
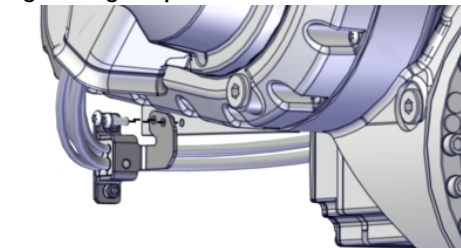

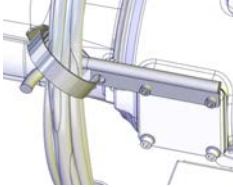
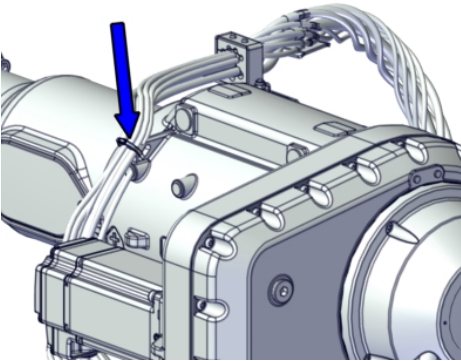
|   | Action  | Note |
|---|---|------|
| 1 | Remove the lifting accessories.   |      |
| 2 | Move the cable harness and DressPack back to the correct side of the robot. |      |

*Continues on next page*



### 5.9.3 Replacing the axis-3 gearbox

*Continued*

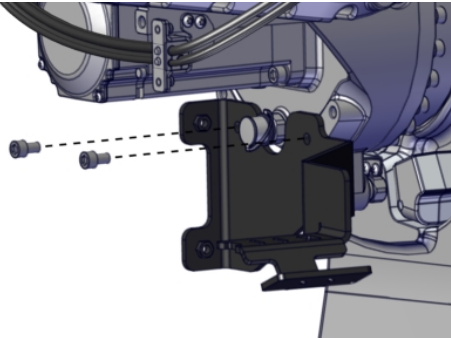
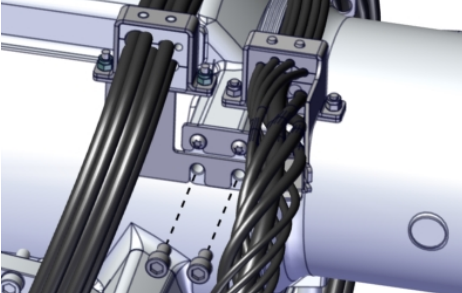
|   | Action   | Note   |
|---|--|--|
| 3 | <p>Refit the axis-3 lower arm metal clamp (the one closest to the axis-3 gearbox) located on the inside of the lower arm.</p> <p> <b>Note</b></p> <p>The screw is reached from the outside of the lower arm!</p>  |  <p>xx1800000042</p>   |
| 4 | <p>Refit the metal clamp on top of the arm house.</p>  | <p>Torx pan head screw: M6x16 Stainless steel A2-70<br/>Tightening torque: 10 Nm.</p>  <p>xx2100001285</p>  |
| 5 | <p>Refit the metal clamp beneath the arm house.</p>  | <p>Torx pan head screw: M6x16 Stainless steel A2-70<br/>Tightening torque: 10 Nm.</p>  <p>xx2100002154</p> |
| 6 | <p>Secure the cable harness to the arm house eyelet with a cable tie.</p> <p> <b>Note</b></p> <p>If DressPack is fitted, the cable fixing bracket is replaced by the cable guide.</p>  <p>xx1300001973</p> |  <p>xx2000000415</p>   |

*Continues on next page*

## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

*Continued*

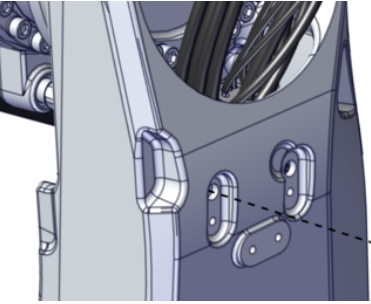
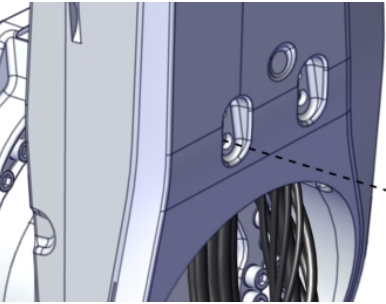
|   | Action   | Note   |
|---|--|--|
| 7 | <p>If robot is equipped with DressPack.<br/>Fit the mounting plate to the arm house.<br/>Use locking liquid.</p>   | <p>Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))</p>  <p>xx2100002578</p> <p>Hex socket head cap screw: M10x16 8.8-A3F (2 pcs)</p>  |
| 8 | <p>If robot is equipped with DressPack.<br/>Fit the cable package bracket to the arm house with the attachment screws.<br/>Twist the dress pack cables between the upper and lower arm according to the picture.</p>  <p>xx1900001684</p> | <p>Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))</p>  <p>xx2100002703</p> <p>Hex socket head cap screw: M10x16 8.8-A3F (2 pcs)</p> |

*Continues on next page*



## 5.9.3 Replacing the axis-3 gearbox

*Continued*

|   | Action  | Note   |
|---|---|--|
| 9 | <p>If robot is equipped with DressPack.<br/>Fit the upper and lower bracket on the inside of the lower arm with attachment screws.<br/>Use locking liquid.<br/>The dress pack cables between the upper and lower bracket may not be twisted more than 1/2 turn.</p> | <p>See product manual for the DressPack. For article number see <a href="#">References on page 10</a>.<br/>Locking liquid: - (Loctite 2400 (or equivalent Loctite 243))</p>  <p>xx2100002701</p>  <p>xx2100002702</p> <p>Torx pan head screw: M6x16 Stainless steel A2-70 (2 pcs)</p> |

## Connecting the axis-3 motor cables

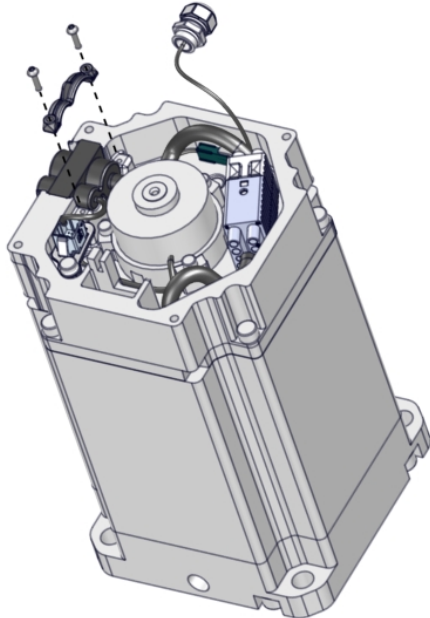


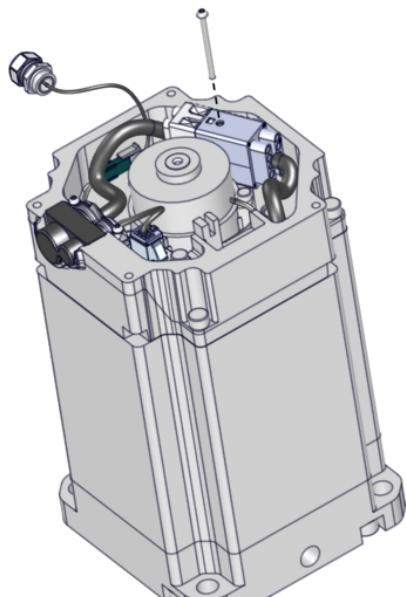
Use this procedure to connect the motor cables.

|   | Action  | Note |
|---|---|------|
| 1 | Put the motor cables in place in the opening. |      |

*Continues on next page*

5 Repair

5.9.3 Replacing the axis-3 gearbox  
Continued

|   | Action  | Note   |
|---|---|--|
| 2 | Refit the cable bracket with the screws.  | <p>Torx pan head screw: M3x12 Stainless steel A2-70</p>  <p>xx2200001738</p> |
| 3 | Connect the motor cables.<br> <b>Note</b><br>Connect in accordance with the markings on the connectors.  |  |
| 4 | Fit a screw to the power connector.<br> <b>Note</b><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | <p>Tightening torque: 1 Nm</p>  <p>xx2200001736</p>                        |

Continues on next page

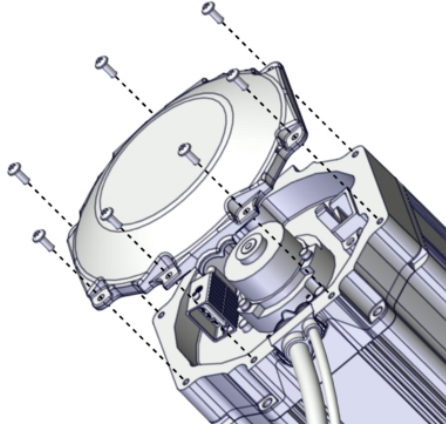
|   | Action  | Note  |
|---|---|---|
| 5 | Inspect the gasket.<br>Replace the complete cover if the gasket is damaged.   | <p>Axis-1 Connection box cover FS180 with gasket:<br/>           3HAC072864-003 (Graphite White)<br/>           3HAC072864-005 (ABB Orange)<br/>           3HAC074336-004 (Graphite White, threaded connection)<br/>           3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-2 Connection box cover FS180 with gasket:<br/>           3HAC072864-003 (Graphite White)<br/>           3HAC072864-005 (ABB Orange)<br/>           3HAC074336-004 (Graphite White, threaded connection)<br/>           3HAC074336-005 (ABB Orange, threaded connection)</p> <p>Axis-3 Connection box cover FS130 with gasket:<br/>           3HAC072863-003 (Graphite White)<br/>           3HAC072863-005 (ABB Orange)</p> <p>Axis-4 Connection box cover FS100 with gasket:<br/>           3HAC072862-003 (Graphite White)<br/>           3HAC072862-005 (ABB Orange)</p>  <p>xx2100000600</p> |
| 6 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |   |

Continues on next page

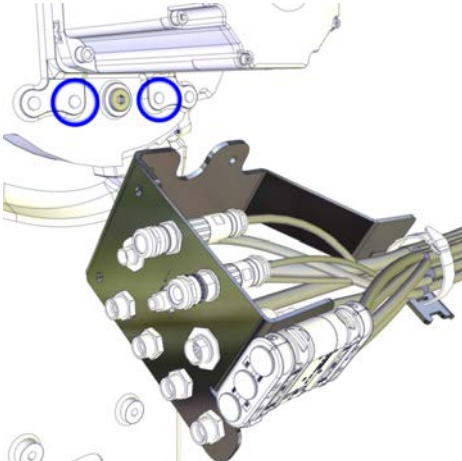
## 5 Repair

### 5.9.3 Replacing the axis-3 gearbox

*Continued*

|   | Action   | Note   |
|---|--|--|
| 7 | Refit the motor cover with its attachment screws.<br>Use locking liquid. | <p>Torx pan head screw: M5x12 Stainless steel A2-70<br/>Locking liquid: Loctite 2400 (or equivalent Loctite 243)<br/>Tightening torque: 6 Nm.</p>  <p>xx2100000596</p> |


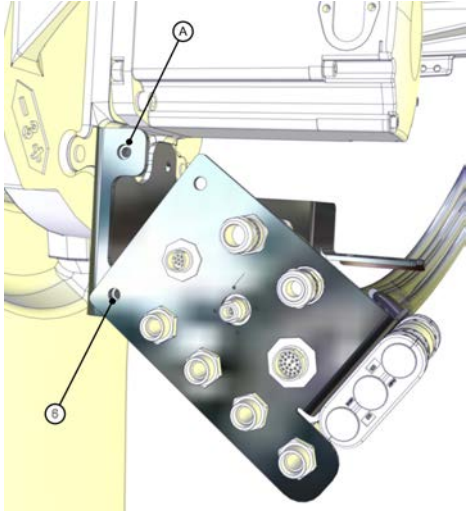
### Refitting DressPack cable packages

|   | Action   | Note   |
|---|--|--|
| 1 | Fit the bracket of the DressPack cable package (if one is fitted) under the arm house with its screws. |  <p>xx1200001332</p> |

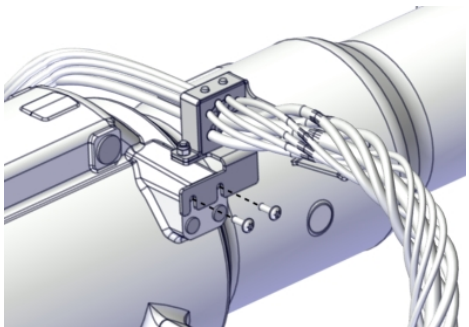
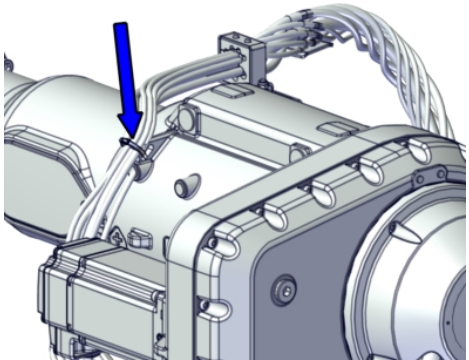
*Continues on next page*

## 5.9.3 Replacing the axis-3 gearbox

*Continued*

| Action   | Note  |
|--|---|
| <p>2 Secure the bracket of the DressPack cable package (if one is fitted) with its attachment screws.</p> <p> <b>Note</b></p> <p>It is not needed to disconnect the lower end of the DressPack as the figure shows. Connectors are only hidden here to get a better view of which screw to refit.</p> |  <p>xx1200001331</p> <p>A Removed screw.<br/>B Screw unscrewed but not removed.</p> |

## Concluding procedures

| Action   | Note   |
|--|--|
| <p>1 If cabling has been removed:<br/>Refit the metal clamp on top of the arm house.</p>                     | <p>Torx pan head screw: M6x16 Stainless steel A2-70<br/>Tightening torque: 10 Nm.</p>  <p>xx2100001285</p> |
| <p>2 If cabling has been removed:<br/>Secure the cable harness to the arm house eyelet with a cable tie.</p> | <p>Cable ties</p>  <p>xx2000000415</p>   |


*Continues on next page*

## 5 Repair

---

### 5.9.3 Replacing the axis-3 gearbox

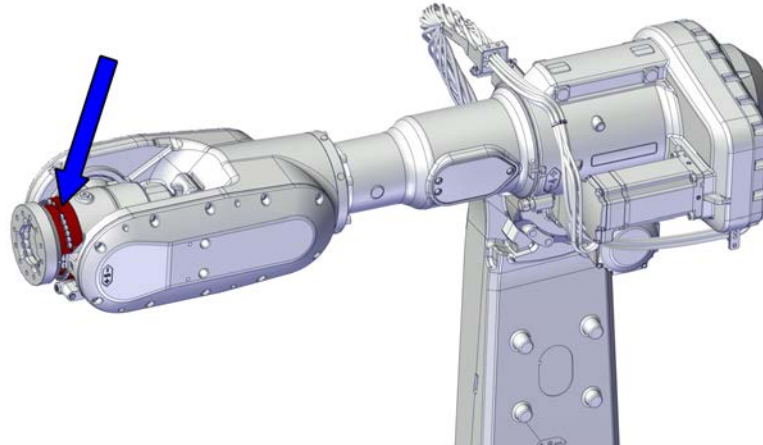
*Continued*

|   | Action   | Note  |
|---|--|---|
| 3 | Refill oil in the gearbox.   | See <a href="#">Filling oil into the axis-3 gearbox on page 170</a> . |
| 4 | Calibrate the robot.   | See <a href="#">Calibration on page 621</a> .                         |
| 5 |  <b>DANGER</b><br><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

## 5.9.4 Replacing the axis-6 gearbox

### Location of the gearbox

The gearbox is located as shown in the figure.



xx2100000485

### Required spare parts



#### Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 5710 via myABB Business Portal, [www.abb.com/myABB](http://www.abb.com/myABB).

| Spare part | Article number  | Note            | Level |
|------------|---|-----------------|-------|
| Gearbox    | IRB 5710-110/2.3,<br>IRB 5710-90/2.3<br>LID:<br>3HAC072405-003<br>(Graphite White)<br>3HAC072405-004<br>(ABB Orange)<br>IRB 5710-90/2.7,<br>IRB 5710-70/2.7<br>LID:<br>3HAC072452-003<br>(Graphite White)<br>3HAC072452-004<br>(ABB Orange) | Includes o-ring | L2    |

### Required service parts

| Consumable                  | Article number | Note   |
|-----------------------------|----------------|--|
| P-80 rubber lubrication gel | 3HAC074427-001 | P-80 Emulsion IFC                                      |
| Flange sealant              | -              | Loctite 5800   |
| Rust preventive             | 3HAC034903-001 | Mercasol 3110 Waxcoat. Recommended drying time is 24h. |

*Continues on next page*

## 5 Repair

### 5.9.4 Replacing the axis-6 gearbox

*Continued*

| Consumable                 | Article number | Note  |
|----------------------------|----------------|---|
| Lubricating oil            | -              | See <a href="#">Type of lubrication in gear-boxes on page 148</a> . |
| O-ring                     | 3HAC061327-070 | Used on gearbox.<br>Replace if damaged.                             |
| Gasket, tilt housing cover | 3HAC071520-001 | Replace if damaged.   |
| O-ring, G 1/4"             | 3HAC061327-060 | Used on oil plug. Always replace when refitting oil plug.           |

#### Required tools and equipment

| Equipment                             | Article number   | Note  |
|---------------------------------------|--|---|
| Guide pin, M6x150                     | 3HAC080345-001   | Always use guide pins in pairs.   |
| Brake release tool                    | 3HAC081310-001   | User instructions are enclosed with the tool.   |
| Rotation tool M3                      | 3HAB7887-1   | Used to rotate the motor pinion.<br>Add screw M3.   |
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |
| Standard toolkit                      | -  | Content is defined in section <a href="#">Standard toolkit on page 665</a> .  |

#### Deciding calibration routine

Decide which calibration routine to be used, based on the information in the table. Depending on which routine is chosen, action might be required prior to beginning the repair work of the robot, see the table.

|   | Action  | Note  |
|---|---|---|
| 1 | Decide which calibration routine to use for calibrating the robot. <ul style="list-style-type: none"><li>Reference calibration. External cable packages (DressPack) and tools can stay fitted on the robot.</li><li>Fine calibration. All external cable packages (DressPack) and tools must be removed from the robot.</li></ul>   |   |
|   | <b>If the robot is to be calibrated with reference calibration:</b><br>Find previous reference values for the axis or create new reference values. These values are to be used after the repair procedure is completed, for calibration of the robot.<br>If no previous reference values exist, and no new reference values can be created, then reference calibration is not possible. | Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.<br>Creating new values requires possibility to move the robot.<br>Read more about reference calibration for Axis Calibration in <a href="#">Reference calibration routine on page 631</a> . |

*Continues on next page*



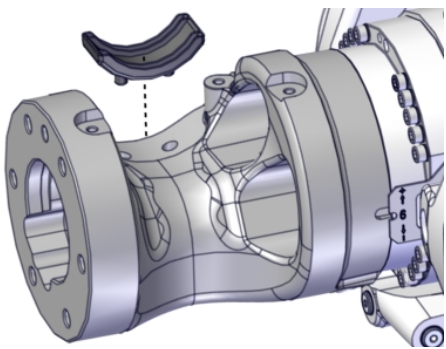
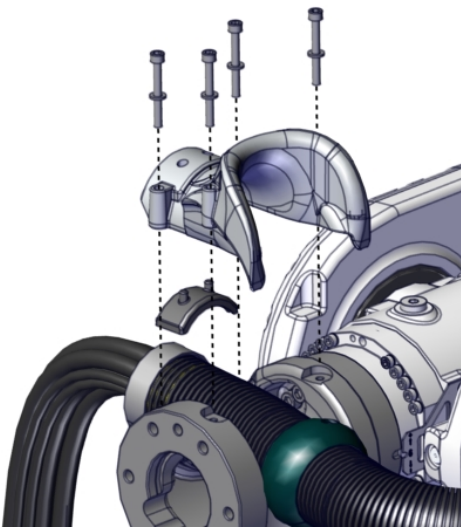


| Action   | Note |
|--|------|
| <b>If the robot is to be calibrated with fine calibration:</b><br>Remove all external cable packages (DressPack) and tools from the robot. |      |

### Removing the gearbox

Use these procedures to remove the axis-6 gearbox.

#### Preparations before removing the axis-6 gearbox


| Action  | Note  |
|---|---|
| 1 Decide which calibration routine to use, and take actions accordingly prior to beginning the repair procedure.  |   |
| 2 <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <b>DANGER</b><br/><br/> Turn off all: <ul style="list-style-type: none"> <li>• electric power supply</li> <li>• hydraulic pressure supply</li> <li>• air pressure supply</li> </ul> to the robot, before entering the safe-guarded space. </div> </div>  |   |
| 3 Drain the gearbox.  | See <a href="#">Draining the axis-6 gearbox on page 183</a> . |
| 4 Remove all equipment fitted on the turning disc.  |   |
| 5 If used, open the DressPack axis-6 cable support and remove the DressPack cable package from the process turning disk.<br><br><div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <b>Note</b><br/><br/> Use caution not to lose the two clamp jaws on either side of the DressPack cable package. </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div> |   |

Continues on next page

## 5 Repair

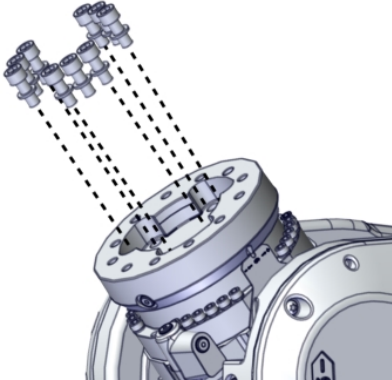
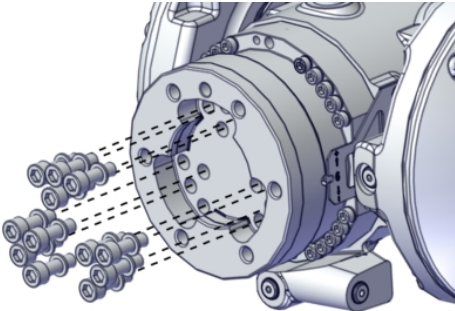
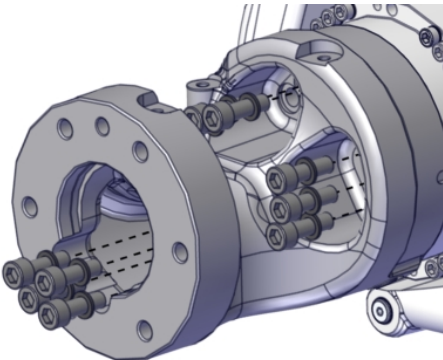
### 5.9.4 Replacing the axis-6 gearbox

*Continued*

|   | Action  | Note |
|---|---|------|
| 6 | <p><b>Floor-mounted robot:</b></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"><li>• Axis 1 = no significance</li><li>• Axis 2 = suitable working position to replace axis-6 gearbox (for example: +25°)</li><li>• Axis 3 = suitable working position to replace axis-6 gearbox (for example: +20°)</li><li>• Axis 4 = 0°</li><li>• Axis 5 = -55°</li><li>• Axis 6 = 0°</li></ul> |      |
| 7 | <p><b>Option Inverted (3317-1)</b></p> <p>Jog the robot into position:</p> <ul style="list-style-type: none"><li>• Axis 1 = no significance</li><li>• Axis 2 = suitable working position to replace axis-6 gearbox</li><li>• Axis 3 = suitable working position to replace axis-6 gearbox</li><li>• Axis 4 = 0°</li><li>• Axis 5 = +55°</li><li>• Axis 6 = 0°</li></ul>                                     |      |
| 8 | <p> <b>DANGER</b></p> <p>Turn off all:</p> <ul style="list-style-type: none"><li>• electric power supply</li><li>• hydraulic pressure supply</li><li>• air pressure supply</li></ul> <p>to the robot, before entering the safe-guarded space.</p>  |      |

*Continues on next page*

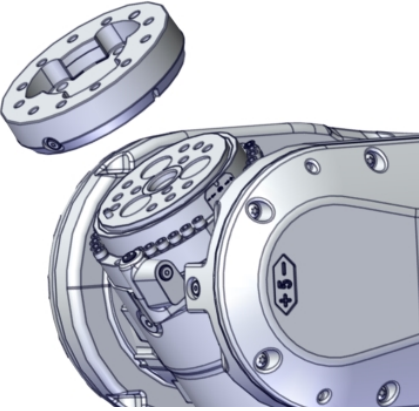
## Removing the turning disc

|   | Action   | Note   |
|---|--|--|
| 1 | Remove the screws and washers, that secure the turning disc. | <p data-bbox="975 367 1171 394">IRB 5710-110/2.3:</p>  <p data-bbox="975 804 1078 824">xx2100002167</p> <p data-bbox="975 837 1158 864">IRB 5710-90/2.7:</p>  <p data-bbox="975 1218 1078 1238">xx2100002265</p> <p data-bbox="975 1252 1437 1279">IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID:</p>  <p data-bbox="975 1671 1078 1691">xx2100002690</p> |


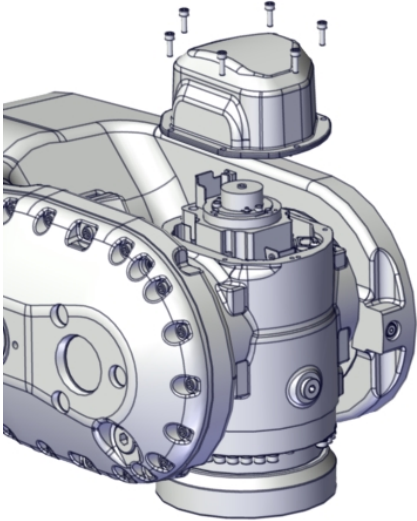
Continues on next page

5 Repair

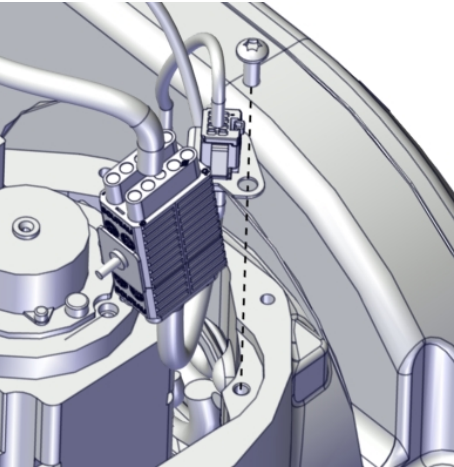
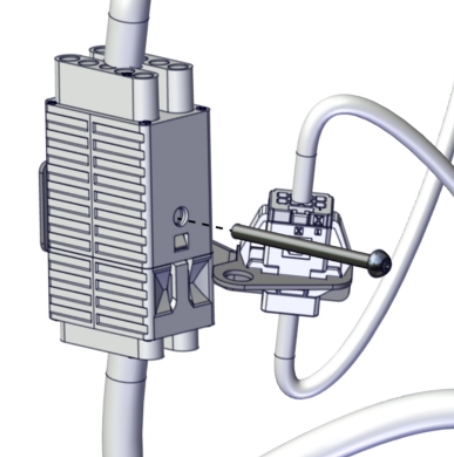
5.9.4 Replacing the axis-6 gearbox  
Continued

| Action                     | Note   |
|----------------------------|--|
| 2 Remove the turning disc. | <br>xx2100002168 |

Disconnecting the axis-6 motor cables

| Action  | Note   |
|---|--|
| 1  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 Unscrew the attachment screws and remove the motor cover.   | <br>xx2000000376 |

Continues on next page

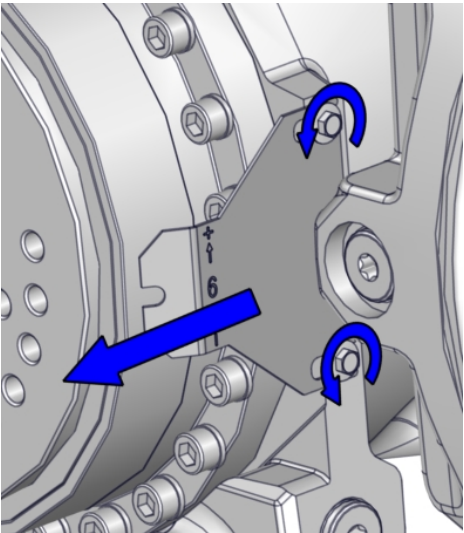
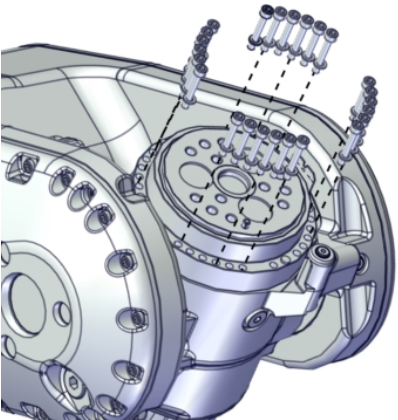
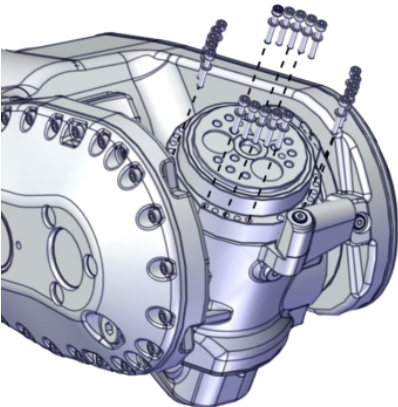
|   | Action                        | Note  |
|---|-------------------------------|---|
| 3 | Remove the connector bracket. |  <p>xx2000000375</p>  |
| 4 | Remove the connector screw.   |  <p>xx2200001919</p> |
| 5 | Disconnect the motor cables.  |   |

Continues on next page

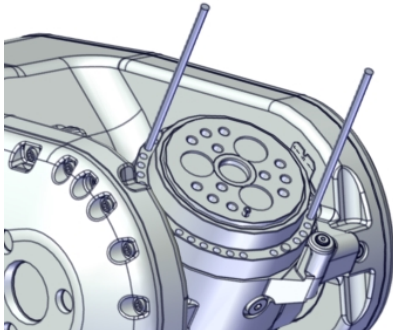




5 Repair

5.9.4 Replacing the axis-6 gearbox  
Continued

Removing the axis-6 gearbox

| Action  | Note   |
|---|--|
| 1 Remove the axis-6 synchronization plate.                      | <br>xx2300001096   |
| 2 Unscrew the attachment screws that secure the axis-6 gearbox. | <p>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p> <br>xx2100002227<br><p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p> <br>xx2100002231 |

Continues on next page

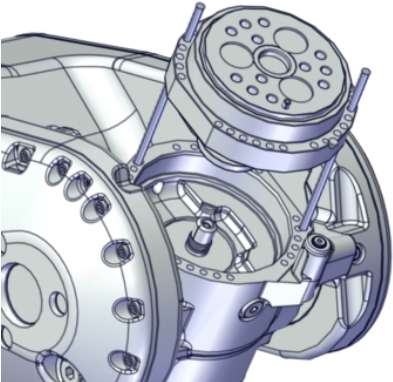
|   | Action   | Note  |
|---|--|---|
| 3 | Fit guide pins.  | <p>Guide pin, M6x150: 3HAC080345-001<br/>Always use guide pins in pairs.</p>  <p>xx2100002228</p>                 |
| 4 | <p>Release the brakes on the axis-6 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.</p> <p>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001<br/>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |
| 5 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p>   |   |

Continues on next page



5 Repair


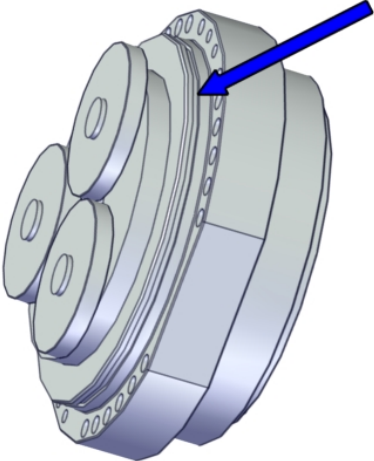
5.9.4 Replacing the axis-6 gearbox  
Continued

| Action  | Note   |
|---|--|
| 6 Remove the gearbox.<br>If required fit two attachment screws and press out the gearbox. | <br>xx2100002259 |

Refitting the gearbox

Use these procedures to refit the gearbox.

Preparations before refitting the axis-6 gearbox

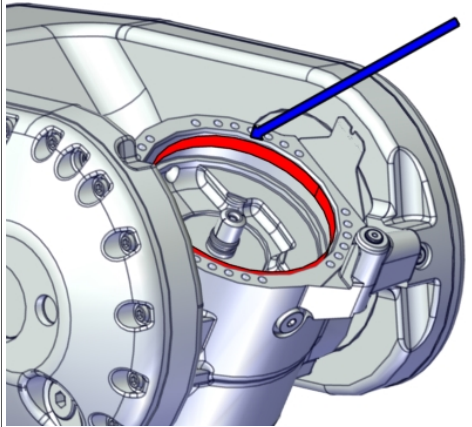
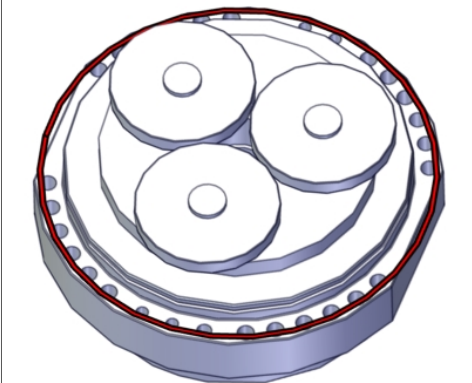
| Action  | Note   |
|---|--|
| 1  <b>DANGER</b><br>Make sure that all supplies for electrical power, hydraulic pressure, and air pressure are turned off. |  |
| 2 Wipe clean the contact surfaces of both gearbox and wrist from any contamination.   | Cleaning agent: Isopropanol  |
| 3 Check the o-ring.<br>Replace if damaged.  | O-ring: 3HAC061327-070<br><br>xx2100002258 |

Continues on next page




### 5.9.4 Replacing the axis-6 gearbox

*Continued*

|   | Action   | Note  |
|---|--|---|
| 4 | Lubricate the contact surface inside the wrist with grease.  | <p>P-80 rubber lubrication gel: 3HAC074427-001</p>  <p>xx2100002791</p> |
| 5 | <p><i>Protection type Foundry Plus:</i><br/>Apply flange sealant on the surface shown in the figure.</p> | <p>Flange sealant: Loctite 5800</p>  <p>xx2100002233</p>               |

#### Refitting the axis-6 gearbox

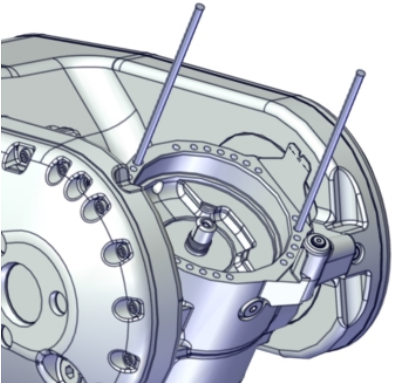


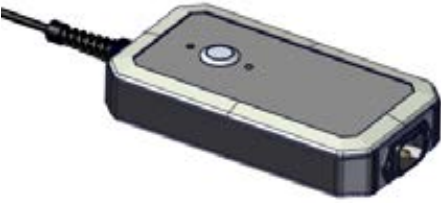
|   | Action   | Note |
|---|--|------|
| 1 | <p> <b>CAUTION</b></p> <p>Whenever parting/mating motor and gearbox, the gears may be damaged if excessive force is used.</p> |      |

*Continues on next page*



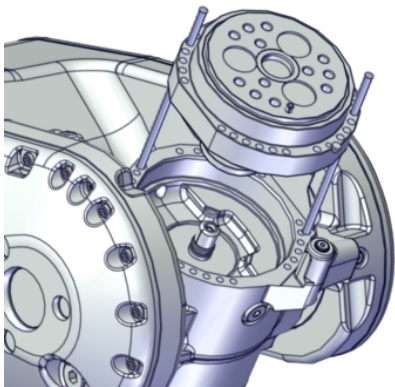
## 5 Repair

### 5.9.4 Replacing the axis-6 gearbox

*Continued*

|   | Action  | Note   |
|---|---|--|
| 2 | Fit guide pins.   | <p>Guide pin, M6x150: 3HAC080345-001<br/>Always use guide pins in pairs.</p>  <p>xx2200001237</p>                  |
| 3 | Apply the rotation tool to the motor.   | Rotation tool M3: 3HAB7887-1   |
| 4 | <p>Release the brakes on the axis-6 motor with the brake release tool.</p> <ol style="list-style-type: none"> <li>1 Turn off the brake release tool.</li> <li>2 Connect the tool to the motor power connector (MP).</li> <li>3 Release the brakes by turning on the brake release tool and pressing the brake release button on the tool.</li> </ol> <p>The power for brake release is only applied for 180 seconds after activation.</p> <p> <b>DANGER</b></p> <p>Handling the tool incorrectly will cause serious injury.<br/>Read and follow enclosed user instructions for the tool.</p> <p> <b>WARNING</b></p> <p>Electrical damage to the motor may occur if 24V is supplied to the motor connector for more than 30 seconds. Use the specified brake release tool to eliminate the risk.</p> | <p>Brake release tool: 3HAC081310-001<br/>User instructions are enclosed with the tool.</p>  <p>xx2100000666</p> |

*Continues on next page*

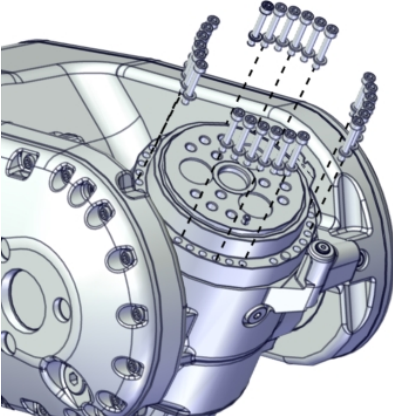
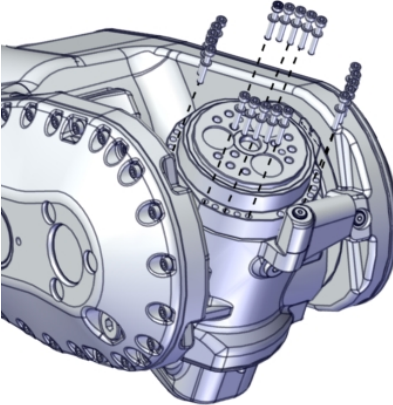
|   | Action  | Note   |
|---|---|--|
| 5 | <p>Fit the gearbox while at the same time rotating the motor pinion slightly using the rotation tool.</p> <p>Make sure that the motor pinion is properly mated to the gear of the gearbox.</p> <p> <b>CAUTION</b></p> <p>Be careful not to damage motor pinion or gears!</p> <p> <b>Tip</b></p> <p>Verify that the oil plug is removed so the air can be pressed out during fitting of the gearbox.</p> |  <p>xx2100002259</p> |

Continues on next page

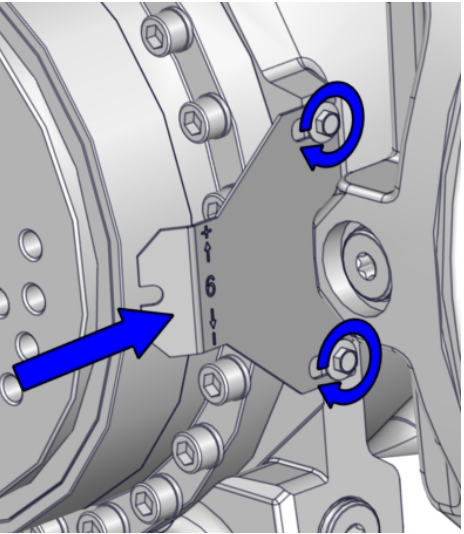
## 5 Repair

### 5.9.4 Replacing the axis-6 gearbox


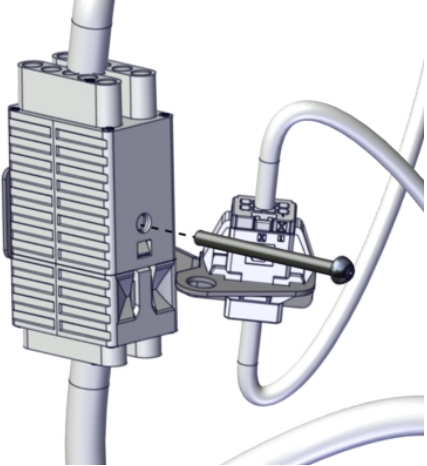
*Continued*

|   | Action   | Note   |
|---|--|--|
| 6 | Secure the gearbox with its attachment screws. | <p>Hex socket head cap screw:<br/>M6x40 12.9 Gleitmo 603+Geomet 500 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID)<br/>M5x35 12.9 Lafre 2C2B/FC6.9 (IRB 5710-90/2.7, IRB 5710-70/2.7 LID)<br/>Washer:<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:<br/>3HAC045621-001, 24 pcs<br/>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br/>3HAC045621-002, 20 pcs<br/>Tightening torque:<br/>• M6: standard torque 14 Nm<br/>• M5: standard torque 8 Nm<br/>IRB 5710-110/2.3, IRB 5710-90/2.3 LID:</p>  <p>xx2100002227</p> <p>IRB 5710-90/2.7, IRB 5710-70/2.7 LID:</p>  <p>xx2100002231</p> |
| 7 | Disconnect the brake release tool.             |  |
| 8 | Perform a leak-down test.                      | See <a href="#">Performing a leak-down test on page 196</a> .  |

*Continues on next page*

|   | Action                                  | Note   |
|---|---|--|
| 9 | Refit the axis-6 synchronization plate. |  <p>xx2300001097</p> |

## Connecting the axis-6 motor cables

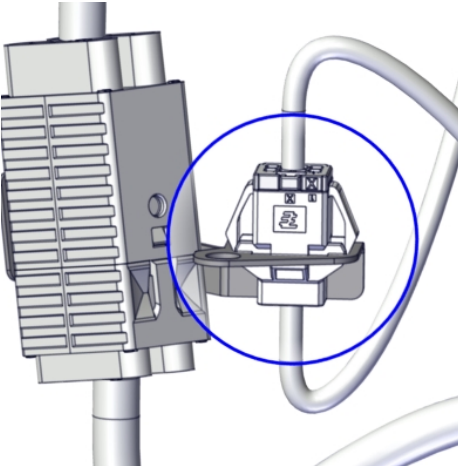

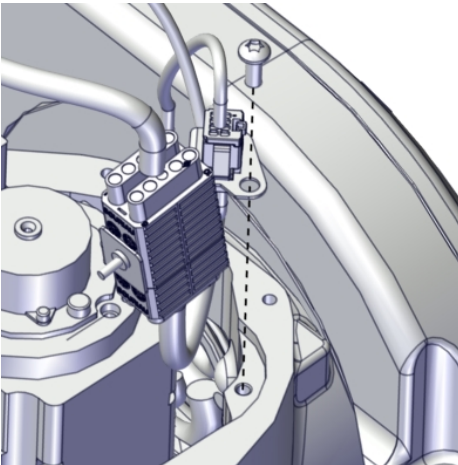


|   | Action  | Note   |
|---|---|--|
| 1 | Connect the motor cables.<br>Connect in accordance with the markings on the connectors.   |  |
| 2 | Position the power connector to the bracket with a screw.<br><br> <b>Note</b><br><br>The purpose of the screw is to secure the mating of the connectors and the positioning of the connector in the connection box. It is normal that the connector can be moved back and forth after the screw has been tightened according to the torque specification and, in some connection boxes, that the screw is not even fully inserted when it bottoms. | Tightening torque: 1 Nm<br><br> <p>xx2200001919</p> |

Continues on next page

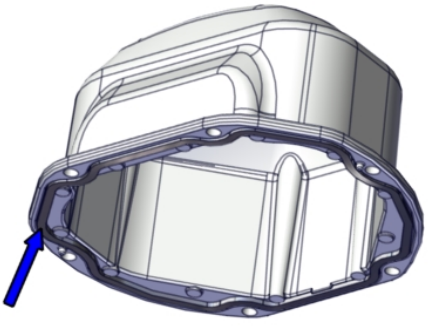

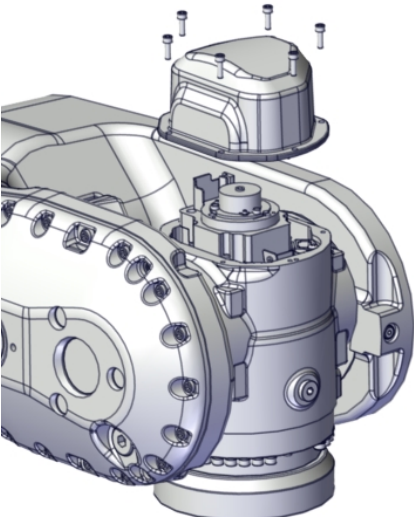
## 5 Repair

### 5.9.4 Replacing the axis-6 gearbox

Continued

|   | Action   | Note  |
|---|--|---|
| 3 | Snap the signal connectors to each other in the bracket.   | <br>xx2200001920  |
| 4 | <p>Refit the connector bracket assembly to the motor.</p> <p> <b>CAUTION</b></p> <p>The cabling is sensitive to mechanical damage. Handle it with care to avoid damage to the cabling or the connector, avoid any kind of tilt or skew.</p> | <p>Torx pan head screw: M5x12 Stainless steel A2-70</p> <br>xx2000000375 |
| 5 | <p>Verify correct cable layout as shown in the figure.</p> <p> <b>CAUTION</b></p> <p>Route the signal cabling correctly to avoid cable damage.</p>  | <br>xx2100001293  |

Continues on next page

|   | Action  | Note   |
|---|---|--|
| 6 | Inspect the gasket.<br>Replace if damaged.  | Gasket, tilt housing cover: 3HAC071520-001<br><br>xx2100001287   |
| 7 |  <b>CAUTION</b><br>When fitting the motor cover, make sure that none of the cables inside will be damaged. |  |
| 8 | Refit the motor cover.  | Hex socket head cap screw, M5x16 12.9<br>Lafre 2C2B/FC6.9, 6 pcs<br>Tightening torque: 4 Nm.<br><br>xx2000000376 |

## Refitting the turning disc

|   | Action                           | Note |
|---|----------------------------------|------|
| 1 | Wipe clean the contact surfaces. |      |

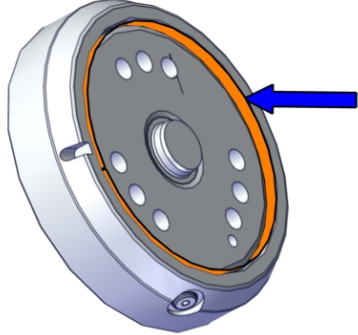
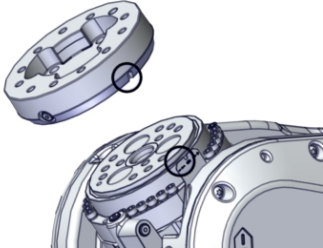
Continues on next page



## 5 Repair

### 5.9.4 Replacing the axis-6 gearbox

*Continued*

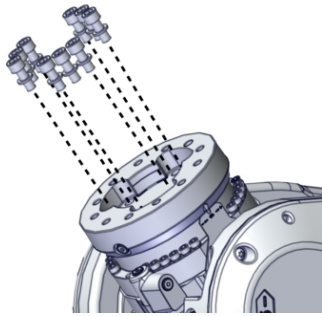
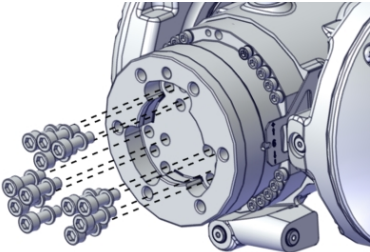
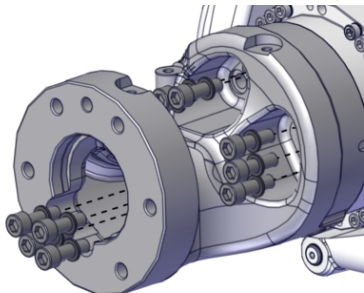
|   | Action   | Note  |
|---|--|---|
| 2 | <b>Protection type Foundry Plus:</b><br>Apply rust preventive to the surface shown in the figure.    | <b>Rust preventive:</b> 3HAC034903-001 ( Mercasol 3110 Waxcoat. Recommended drying time is 24h.)<br><br>xx2100002232 |
| 3 | <b>Fit the turning disc to the wrist.</b><br>Orient the disc according to the synchronization marks. | <br>xx2100002169  |

*Continues on next page*



## 5.9.4 Replacing the axis-6 gearbox

*Continued*

|   | Action  | Note  |
|---|---|---|
| 4 | Secure the turning disc with its attachment screws and washers. | <p>Hex socket head cap screw:<br/> M10x25 12.9 Gleitmo 603+Geomet 500 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID)<br/> M8x25 12.9 Gleitmo 603+Geomet 500 (IRB 5710-90/2.7, IRB 5710-70/2.7 LID)<br/> Washer:<br/> 3HAB4233-1 (IRB 5710-110/2.3, IRB 5710-90/2.3 LID), 9 pcs<br/> IRB 5710-90/2.7, IRB 5710-70/2.7 LID:<br/> Steel 8.4x13x1.5<br/> Tightening torque: .<br/> <ul style="list-style-type: none"> <li>• M10: standard torque 70 Nm</li> <li>• M8: standard torque 35 Nm</li> </ul> IRB 5710-110/2.3:</p>  <p>xx2100002167</p> <p>IRB 5710-90/2.7:</p>  <p>xx2100002265</p> <p>IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID:</p>  <p>xx2100002690</p> |

*Continues on next page*


## 5 Repair

---

### 5.9.4 Replacing the axis-6 gearbox

*Continued*

Concluding procedure

|   | Action   | Note  |
|---|--|---|
| 1 | Jog axis-5 to horizontal position.   |   |
| 2 | Refill oil in the gearbox.   | See <a href="#">Filling oil into the axis-6 gearbox on page 184</a> . |
| 3 | Calibrate the robot.   | See <a href="#">Calibration on page 621</a> .                         |
| 4 |  <b>DANGER</b><br><br>Make sure all safety requirements are met when performing the first test run. See <a href="#">Test run after installation, maintenance, or repair on page 107</a> . |   |

## 6 Calibration

### 6.1 Introduction to calibration

#### 6.1.1 Introduction and calibration terminology

##### Calibration information

This chapter includes general information about the recommended calibration methods and also the detailed procedures for updating the revolution counters, checking the calibration position etc.

Detailed instructions of how to perform Axis Calibration are given on the FlexPendant during the calibration procedure. To prepare calibration with Axis Calibration method, see [Calibrating with Axis Calibration method on page 630](#).

##### Calibration terminology

| Term                      | Definition  |
|---------------------------|---|
| Calibration method        | A collective term for several methods that might be available for calibrating the ABB robot. Each method contains calibration routines.   |
| Synchronization position  | Known position of the complete robot where the angle of each axis can be checked against visual synchronization marks.  |
| Calibration position      | Known position of the complete robot that is used for calibration of the robot.   |
| Standard calibration      | A generic term for all calibration methods that aim to move the robot to calibration position.  |
| Fine calibration          | A calibration routine that generates a new zero position of the robot.  |
| Reference calibration     | <p>A calibration routine that in the first step generates a reference to current zero position of the robot. The same calibration routine can later on be used to recalibrate the robot back to the same position as when the reference was stored.</p> <p>This routine is more flexible compared to fine calibration and is used when tools and process equipment are installed.</p> <p>Requires that a reference is created before being used for recalibrating the robot.</p> <p>Requires that the robot is dressed with the same tools and process equipment during calibration as during creation of the reference values.</p> |
| Update revolution counter | A calibration routine to make a rough calibration of each manipulator axis.   |
| Synchronization mark      | Visual marks on the robot axes. When marks are aligned, the robot is in synchronization position.   |

## 6 Calibration

### 6.1.2 Calibration methods

### 6.1.2 Calibration methods

#### Overview

This section specifies the different types of calibration and the calibration methods that are supplied by ABB.

#### Types of calibration

| Type of calibration                      | Description  | Calibration method |
|--|--|--------------------|
| Standard calibration                     | The calibrated robot is positioned at calibration position.<br>Standard calibration data is found on the SMB (serial measurement board) or EIB in the robot.   | Axis Calibration   |
| Absolute accuracy calibration (optional) | Based on standard calibration, and besides positioning the robot at synchronization position, the Absolute accuracy calibration also compensates for: <ul style="list-style-type: none"><li>Mechanical tolerances in the robot structure</li><li>Deflection due to load</li></ul> Absolute accuracy calibration focuses on positioning accuracy in the Cartesian coordinate system for the robot.<br>Absolute accuracy calibration data is found on the serial measurement board (SMB) or other robot memory.<br>A robot calibrated with Absolute accuracy has the option information printed on its name plate (OmniCore).<br>To regain 100% Absolute accuracy performance, the robot must be recalibrated for absolute accuracy after repair or maintenance that affects the mechanical structure. | CalibWare          |

#### Brief description of calibration methods

##### Axis Calibration method

Axis Calibration is a standard calibration method for calibration of IRB 5710. It is the recommended method in order to achieve proper performance.

The following routines are available for the Axis Calibration method:

- Fine calibration
- Update revolution counters
- Reference calibration

The calibration equipment for Axis Calibration is delivered as a toolkit.

An introduction to the calibration method is given in this manual, see [Calibrating with Axis Calibration method on page 630](#).

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.

*Continues on next page*

#### CalibWare - Absolute Accuracy calibration

The CalibWare tool guides through the calibration process and calculates new compensation parameters. This is further detailed in the *Application manual - CalibWare Field*.

If a service operation is done to a robot with the option Absolute Accuracy, a new absolute accuracy calibration is required in order to establish full performance. For most cases after replacements that do not include taking apart the robot structure, standard calibration is sufficient.

The Absolute Accuracy option varies according to the robot mounting position. This is printed on the robot name plate for each robot. The robot must be in the correct mounting position when it is recalibrated for absolute accuracy.

---

#### References

Article numbers for the calibration tools are listed in the section [Special tools on page 666](#).

#### 6.1.3 When to calibrate

---

##### When to calibrate

The system must be calibrated if any of the following situations occur.

##### The resolver values are changed

If resolver values are changed, the robot must be re-calibrated using the calibration methods supplied by ABB. Calibrate the robot carefully with standard calibration, according to information in this manual.

If the robot has *absolute accuracy* calibration, it is also recommended, but not always necessary to calibrate for new absolute accuracy.

The resolver values will change when parts affecting the calibration position are replaced on the robot, for example motors or parts of the transmission.

##### The revolution counter memory is lost

If the revolution counter memory is lost, the counters must be updated. See [Updating revolution counters on page 628](#). This will occur when:

- The battery is discharged
- A resolver error occurs
- The signal between a resolver and measurement board is interrupted
- A robot axis is moved with the control system disconnected

The revolution counters must also be updated after the robot and controller are connected at the first installation.

##### The robot is rebuilt

If the robot is rebuilt, for example, after a crash or when the reachability of a robot is changed, it needs to be re-calibrated for new resolver values.

If the robot has *absolute accuracy* calibration, it needs to be calibrated for new absolute accuracy.

##### Robot is not floor mounted

The original calibration data delivered with the robot is generated when the robot is floor mounted. If the robot is not floor mounted, then the robot accuracy could be affected. The robot needs to be calibrated after it is mounted.

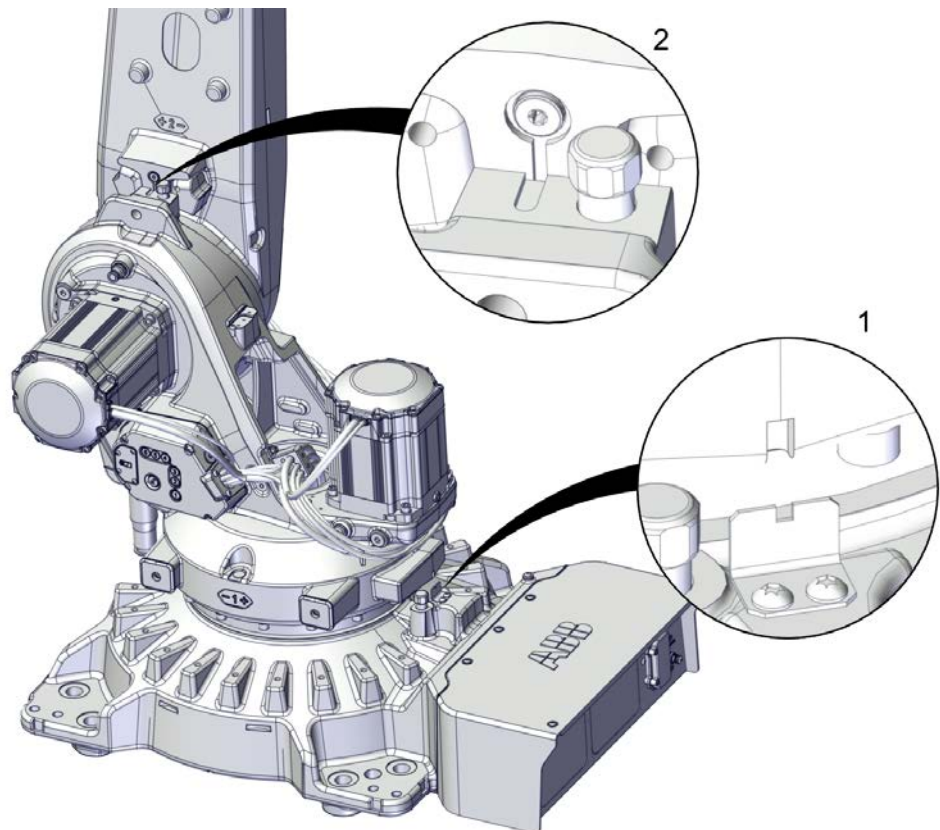
## 6.2 Synchronization marks and axis movement directions

### 6.2.1 Synchronization marks and synchronization position for axes

#### Introduction

This section shows the position of the synchronization marks and the synchronization position for each axis.

#### Synchronization marks, IRB 5710, IRB 5720



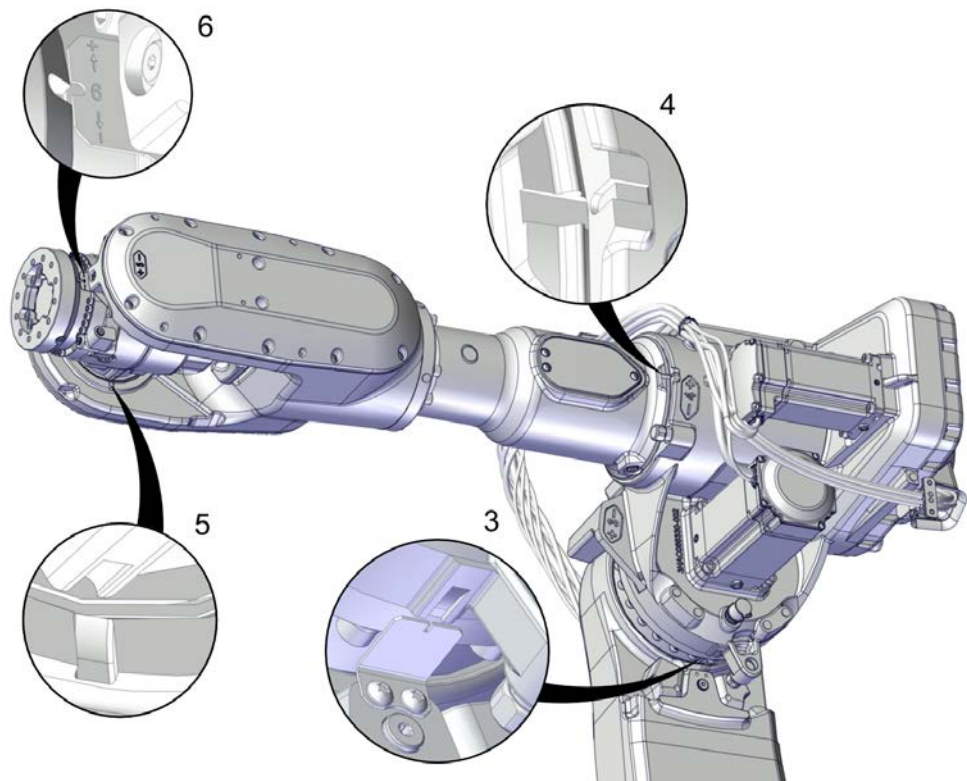
xx2100002319

*Continues on next page*

## 6 Calibration

### 6.2.1 Synchronization marks and synchronization position for axes

*Continued*



xx2100002318



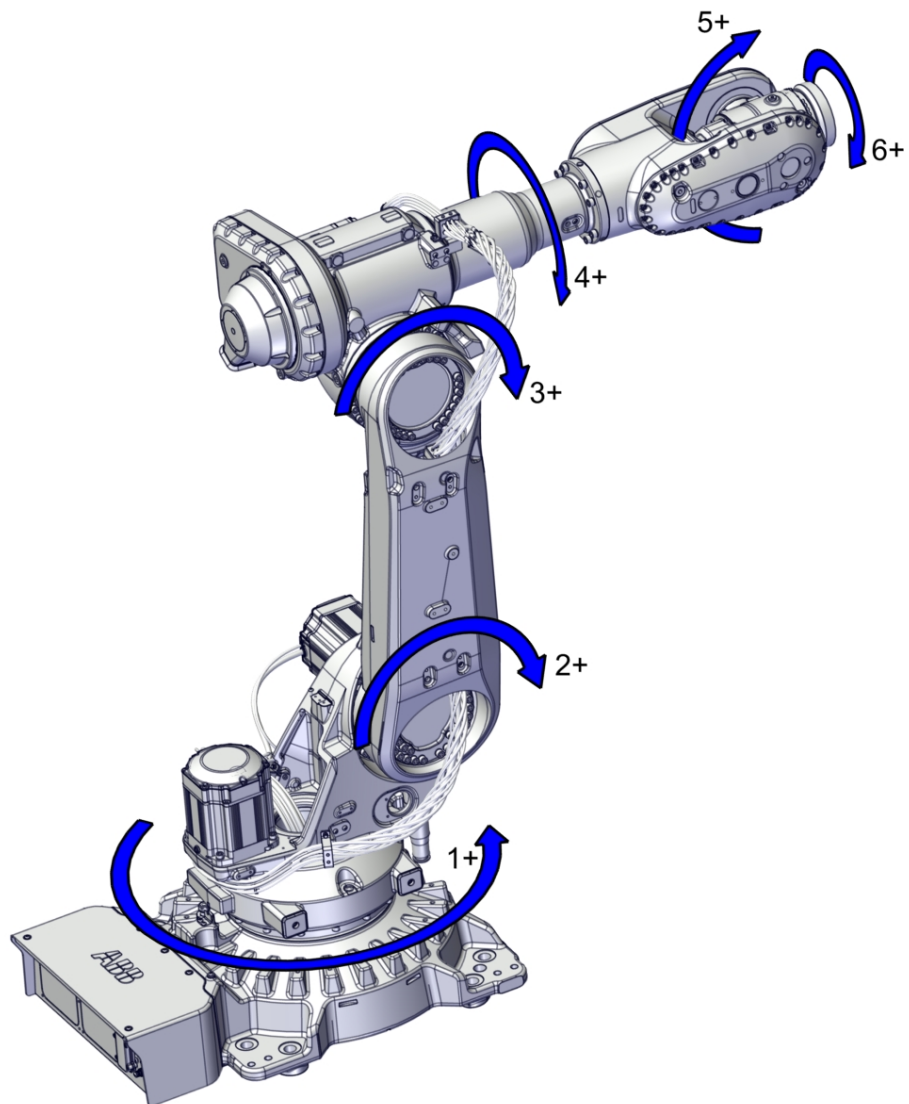
## 6.2.2 Calibration movement directions for all axes

### Overview

When calibrating, the axis must consistently be run towards the calibration position in the same direction in order to avoid position errors caused by backlash in gears and so on. Positive directions are shown in the graphic below.

Calibration service routines will handle the calibration movements automatically and these might be different from the positive directions shown below.

### Manual movement directions



xx2100002527

## 6 Calibration

### 6.3.1 Updating revolution counters on OmniCore robots

## 6.3 Updating revolution counters

### 6.3.1 Updating revolution counters on OmniCore robots

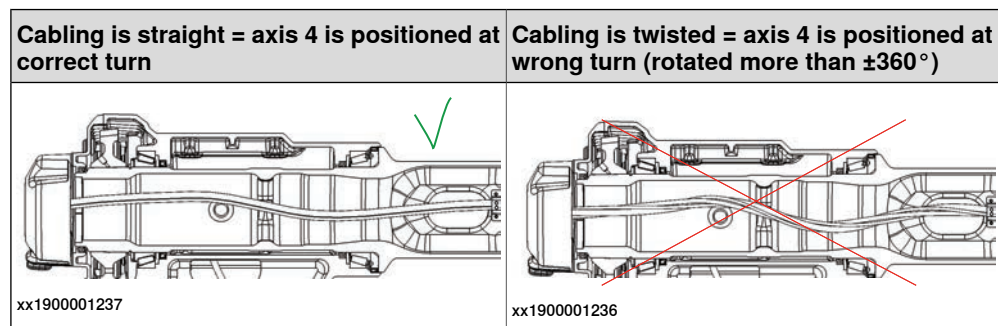
#### Introduction

This section describes how to do a rough calibration of each manipulator axis by updating the revolution counter for each axis, using the FlexPendant.

#### Mandatory check of cable harness prior to revolution counter update or calibration

Before updating the revolution counter or performing calibration, the status of the cable harness in the tubular shaft must be checked. There is a possibility that axis 4 has been rotated more than  $\pm 360^\circ$  and therefore is positioned incorrectly (at wrong turn), causing the cable harness inside the tubular shaft to be twisted, which can damage the cabling.

Check the cable harness using a flashlight into the tubular shaft. Check that the cable harness is not twisted inside the tubular shaft.



#### Step 1 - Manually running the manipulator to the synchronization position

Use this procedure to manually run the manipulator to the synchronization position.


|   | Action   | Note  |
|---|--|---|
| 1 | Select axis-by-axis motion mode.                             |   |
| 2 | Jog the manipulator to align the synchronization marks.      | See <a href="#">Synchronization marks and synchronization position for axes on page 625</a> . |
| 3 | When all axes are positioned, update the revolution counter. | <a href="#">Step 2 - Updating the revolution counter with the FlexPendant on page 628</a> .   |

#### Step 2 - Updating the revolution counter with the FlexPendant

Use this procedure to update the revolution counter with the FlexPendant (OmniCore).

|   | Action  |
|---|---|
| 1 | On the start screen, tap <b>Calibrate</b> .<br>The calibration summary page for the mechanical unit is displayed. |
| 2 | In the <b>Calibration Methods</b> menu, select <b>Revolution Counters</b> .                                       |
| 3 | In the <b>Selection</b> column select the axes for which revolution counters need to be updated.                  |

*Continues on next page*

|   | Action   |
|---|--|
| 4 | <b>Tap Update.</b><br>A dialog box is displayed warning that the updating operation cannot be undone.  |
| 5 | Tap <b>OK</b> to update the revolution counter.  |
| 6 |  <b>CAUTION</b><br><br>If a revolution counter is incorrectly updated, it will cause incorrect manipulator positioning, which in turn may cause damage or injury!<br>Check the synchronization position very carefully after each update. See <a href="#">Checking the synchronization position on page 644</a> . |

## 6 Calibration

---

### 6.4.1 Description of Axis Calibration

## 6.4 Calibrating with Axis Calibration method

### 6.4.1 Description of Axis Calibration

---

#### Instructions for Axis Calibration procedure given on the FlexPendant

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.

This manual contains a brief description of the method, additional information to the information given on the FlexPendant, article number for the tools and images of where to fit the calibration tools on the robot.

---

#### Overview of the Axis Calibration procedure

The Axis Calibration procedure applies to all axes, and is performed on one axis at the time. The robot axes are both manually and automatically moved into position, as instructed on the FlexPendant.

A fixed calibration pin/bushing is installed on each robot axis at delivery.

The Axis Calibration procedure described roughly:

- 1 A removable calibration tool is inserted by the operator into a calibration bushing on the axis chosen for calibration, according to instructions on the FlexPendant.



#### WARNING

Calibrating the robot with Axis Calibration requires special calibration tools from ABB. Using other pins in the calibration bushings may cause severe damage to the robot and/or personnel.



#### WARNING

The calibration tool must be fully inserted into the calibration bushing, until the steel spring ring snaps into place.

- 2 During the calibration procedure, RobotWare moves the robot axis chosen for calibration so that the calibration tools get into contact. RobotWare records values of the axis position and repeats the coming-in-contact procedure several times to get an exact value of the axis position.



#### WARNING

Risk of pinching! The contact force for large robots can be up to 150 kg. Keep a safe distance to the robot.

- 3 The axis position is stored in RobotWare with an active choice from the operator.

*Continues on next page*

---

**Routines in the calibration procedure**

The following routines are available in the Axis Calibration procedure, given at the beginning of the procedure on the FlexPendant.

**Fine calibration routine**

Choose this routine to calibrate the robot when there are no tools, process cabling or equipment fitted to the robot.

**Reference calibration routine**

Choose this routine to create reference values and to calibrate the robot when the robot is dressed with tools, process cabling or other equipment.

**Note**

When calibrating the robot with the reference calibration routine, the robot must be dressed with the same tools, process cabling and any other equipment as when the reference values were created.

**Note**

When using reference calibration with some tools, typically large or flexible tools, oscillations in the robot can cause issues leading to failure of the calibration.

If calibrating the robot with reference calibration there must be reference values created before repair is made to the robot, if values are not already available. Creating new values requires possibility to move the robot. The reference values contain positions of all axes, torque of axes and technical data about the tool installed. A benefit with reference calibration is that the current state of the robot is stored and not the state when the robot left the ABB factory. The reference value will be named according to tool name, date etc.

Follow the instructions given in the reference calibration routine on the FlexPendant to create reference values.

When reference calibration is performed, the robot is restored to the status given by the reference values.

**Update revolution counters**

Choose this routine to make a rough calibration of each manipulator axis by updating the revolution counter for each axis, using the FlexPendant.

**Validation**

In the mentioned routines, it is also possible to validate the calibration data.

---

**Position of robot axes**

The robot axes should be positioned close to 0 degrees before commencing the calibration program. The axis chosen for calibration is then automatically run by the calibration program to its exact calibration position during the calibration procedure.

It is possible to position some of the other axes in positions different from 0 degrees. Information about which axes are allowed to be jogged is given on the FlexPendant.

*Continues on next page*

## 6 Calibration

### 6.4.1 Description of Axis Calibration

*Continued*

These axes are marked with **Unrestricted** in the FlexPendant window. Also the following table shows the dependencies between the axes.

Requirements for axis positioning during calibration

| Required position of axis | Axis to calibrate  |        |        |        |        |        |
|---------------------------|--|--------|--------|--------|--------|--------|
|                           | Axis 1   | Axis 2 | Axis 3 | Axis 4 | Axis 5 | Axis 6 |
| Axis 1                    | -  | *      | *      | *      | *      | *      |
| Axis 2                    | 0  | -      | 0      | *      | *      | *      |
| Axis 3                    | 0  | 0      | -      | *      | *      | *      |
| Axis 4                    | *  | *      | *      | -      | *      | *      |
| Axis 5                    | *  | *      | *      | *      | -      | *      |
| Axis 6                    | *  | *      | *      | *      | *      | -      |
| -                         | Axis to be calibrated  |        |        |        |        |        |
| *                         | Unrestricted. Axis is allowed to be jogged to other position than 0 degrees. |        |        |        |        |        |
| 0                         | Axis must be put in position 0 degrees.                                      |        |        |        |        |        |

#### System containing SafeMove

SafeMove will lose its synchronization to the controller if a new calibration is done. New calibration values have to be downloaded to SafeMove, and a new SafeMove calibration has to be done. Make sure that the user rights admit to change the safety settings and to synchronize SafeMove.

#### How to calibrate an inverted robot


The IRB 5710 is calibrated inverted in factory, prior to shipping. To recalibrate an inverted robot, use either fine calibration or reference calibration routine.

6.4.2 Calibration tools for Axis Calibration

Calibration tool set

The calibration tools used for Axis Calibration are designed to meet requirements for calibration performance, durability and safety in case of accidental damage.

The calibration tool will eventually break from fatigue after longer period of use and then needs to be replaced. There is no risk for bad calibrations as long as the calibration tool is in one piece.

**WARNING**


Calibrating the robot with Axis Calibration requires special calibration tools from ABB. Using other pins in the calibration bushings may cause severe damage to the robot and/or personnel.

| Equipment, etc.                       | Article number   | Note  |
|---------------------------------------|--|---|
| Calibration toolbox, Axis Calibration | 3HAC074564-001<br>(axes 1, 2, 3 and 4)<br>3HAC074119-001<br>(axes 5 and 6) | Delivered as a set of calibration tools.<br>Required if Axis Calibration is the valid calibration method for the robot. |

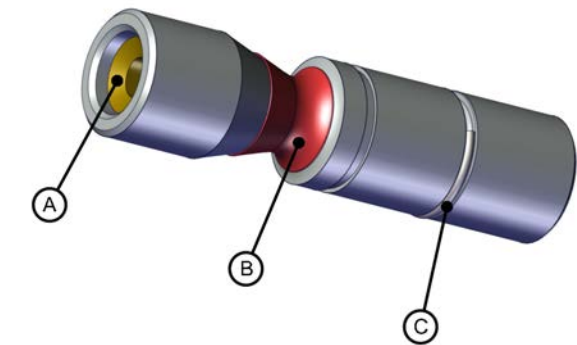
Examining the calibration tool

Check prior to usage

Before using the calibration tool, make sure that the tube insert, the plastic protection and the steel spring ring are present.

**WARNING**

If any part is missing or damaged, the tool must be replaced immediately.



xx1500001914

|   |                    |
|---|--------------------|
| A | Tube insert        |
| B | Plastic protection |
| C | Steel spring ring  |

*Continues on next page*

# 6 Calibration

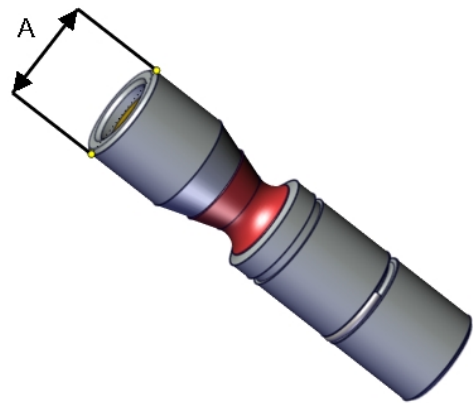
## 6.4.2 Calibration tools for Axis Calibration

Continued

### Periodic check of the calibration tool

If including the calibration tool in a local periodic check system, the following measures should be checked.

- Outer diameter within Ø12g4 mm, Ø8g4 mm or Ø6g5 mm (depending on calibration tool size).
- Straightness within 0.005 mm.



xx1500000951

|   |                |
|---|----------------|
| A | Outer diameter |
|---|----------------|


### Identifying the calibrating tools

It is possible to make the calibration tool identifiable with, for example, an RFID chip. The procedure of how to install an RFID chip is described below.



#### Note

The tool identifier is NOT delivered from ABB, it is a customized solution.

|   | Action   | Note |
|---|--|------|
| 1 | <p>It is possible to use any RFID solution, with the correct dimensions. ABB has verified function on some suppliers fulfilling the requirements of NFC compatible devices (13.56 Mhz) according to ISO 14443 or ISO 15693.</p> <div> <b>Note</b></div> <p>The maximum dimensions on the RFID chip must not exceed Ø7.9 mm x 8.0 mm, Ø5.9 mm x 8.0 mm or Ø3.9 mm x 8.0 mm (depending on calibration tool size).</p> |      |
| 2 | <p>There is a cavity on one end of the calibration tool in which the RFID chip can be installed.</p> <p>Install the RFID chip according to supplier instructions.</p> <p>Install the chip in flush with the tool end.</p>  |      |



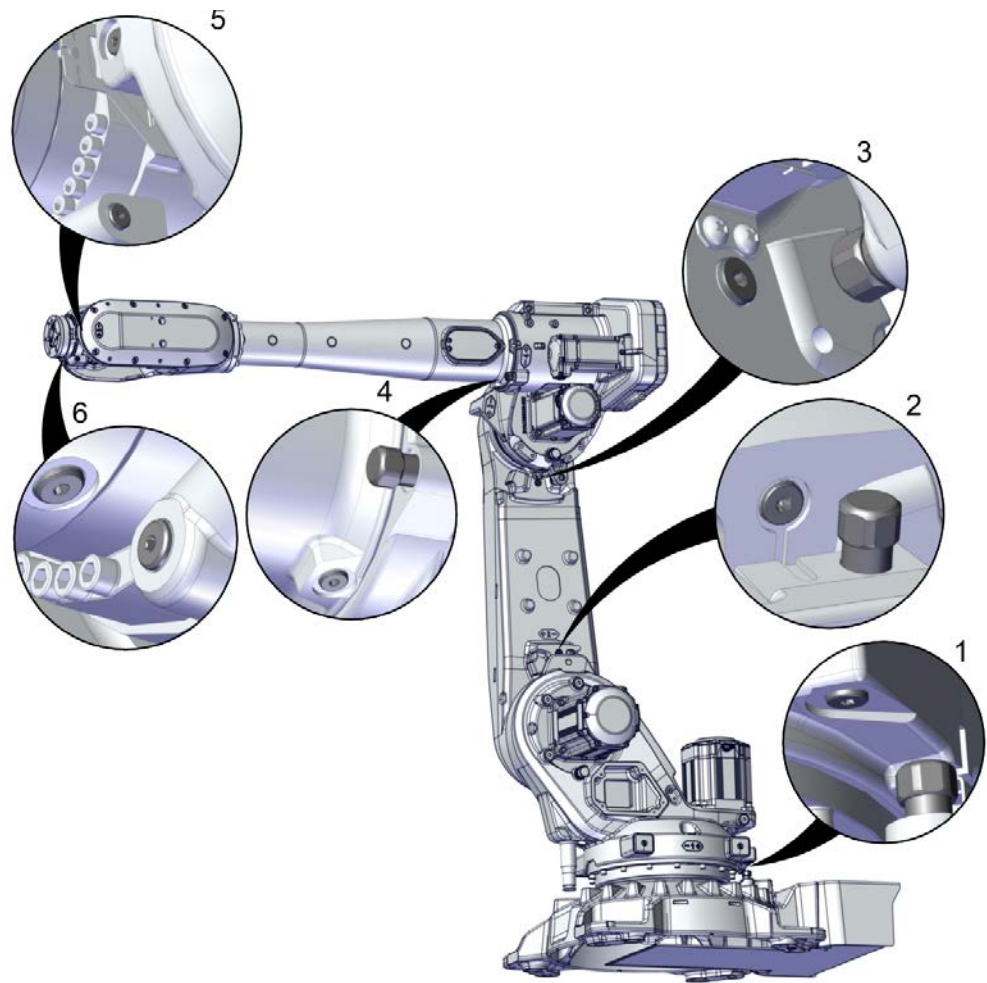
### 6.4.3 Installation locations for the calibration tools

#### Location of fixed calibration items

This section shows how the robot is equipped with items for installation of calibration tools for Axis Calibration (fixed calibration pins and/or bushings). Installed calibration tools are not shown.

A fixed calibration pin and a bushing for the movable calibration tool are located on each axis as follows.

If there is not enough space on an axis to install a fixed calibration pin, the axis is equipped with two bushings instead, for installation of two calibration tools when calibration is carried out. This is shown in the figure.



xx2100002320

*Continues on next page*

## 6 Calibration

---

### 6.4.3 Installation locations for the calibration tools

*Continued*

---

#### Spare parts

When calibration is not being performed, a protective cover and an o-ring should always be installed on the fixed calibration pin as well as a protective plug, included a sealing, in the bushing. Replace damaged parts with new.

| Spare part                    | Article number   | Note   |
|-------------------------------|--|--|
| Protection cover and plug set | 3HAC064875-001<br>(axes 1, 2, 3 and 4)<br>3HAC059487-001<br>(axes 5 and 6) | Contains replacement calibration pin covers and protective plugs for the bushings. |

## 6.4.4 Axis Calibration - Running the calibration procedure

### Required tools

The calibration tools used for Axis Calibration are designed to meet requirements for calibration performance, durability and safety in case of accidental damage.



#### WARNING

Calibrating the robot with Axis Calibration requires special calibration tools from ABB. Using other pins in the calibration holes may cause severe damage to the robot and/or personnel.

| Equipment, etc.                       | Article number   | Note   |
|---------------------------------------|--|--|
| Calibration toolbox, Axis Calibration | 3HAC074564-001 (axes 1, 2, 3 and 4)<br>3HAC074119-001 (axes 5 and 6) | Delivered as a set of calibration tools. Required if Axis Calibration is the valid calibration method for the robot. |

### Required consumables

| Consumable  | Article number | Note |
|-------------|----------------|------|
| Clean cloth | -              |      |

### Spare parts

| Spare part                    | Article number   | Note   |
|-------------------------------|--|--|
| Protection cover and plug set | 3HAC064875-001 (axes 1, 2, 3 and 4)<br>3HAC059487-001 (axes 5 and 6) | Contains replacement calibration pin covers and protective plugs for the bushings. |

### Overview of the calibration procedure on the FlexPendant

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.

Use the following list to learn about the calibration procedure before running the RobotWare program on the FlexPendant. It gives you a brief overview of the calibration procedure.

After the calibration method has been started on the FlexPendant, the following sequence will be run.

- 1 Choose calibration routine. The routines are described in [Routines in the calibration procedure on page 631](#).
- 2 Choose which axis/axes to calibrate.
- 3 The robot moves to synchronization position.
- 4 Validate the synchronization marks.
- 5 The robot moves to preparation position.
- 6 Remove the protective cover from the fixed pin and the protection plug from the bushing, if any, and install the calibration tool.

*Continues on next page*

## 6 Calibration

### 6.4.4 Axis Calibration - Running the calibration procedure



*Continued*

- 7 The robot performs a measurement sequence by rotating the axis back and forth.
- 8 Remove the calibration tool and reinstall the protective cover on the fixed pin and the protection plug in the bushing, if any.
- 9 The robot moves to verify that the calibration tool is removed.
- 10 Choose whether to save the calibration data or not.

Calibration of the robot is not finished until the calibration data is saved, as last step of the calibration procedure.


#### Preparation prior to calibration

The calibration procedure is described in the FlexPendant while conducting it.

|   | Action   | Note               |
|---|--|--------------------|
| 1 |  <b>DANGER</b><br><br>While conducting the calibration, the robot needs to be connected to power.<br><br>Make sure that the robot's working area is empty, as the robot can make unpredictable movements. |                    |
| 2 | Wipe the calibration tool clean.<br><br> <b>Note</b><br><br>The calibration method is exact. Dust, dirt or color flakes will affect the calibration value.  | Use a clean cloth. |

#### Starting the calibration procedure

Use this procedure to start the Axis Calibration routine on the FlexPendant.

|   | Action   | Note   |
|---|--|--|
| 1 | Tap the calibration icon and enter the calibration main page.  |  |
| 2 | All mechanical units connected to the system are shown with their calibration status.<br>Tap the mechanical unit in question.<br><br> <b>Note</b><br><br>For RobotWare 7, the mechanical unit page is displayed only if there is more than one mechanical unit available. |  |
| 3 | The calibration method used at ABB factory for each axis is shown, as well as calibration method used for the robot during last field calibration.   | The FlexPendant will give all information needed to proceed with Axis Calibration. |
| 4 | <b>Valid for RobotWare 7</b><br>Tap <b>Calibration Methods</b> on the right pane and then tap <b>Calibration</b> . The software will automatically call for the procedure for the valid calibration method.  |  |

*Continues on next page*

#### 6.4.4 Axis Calibration - Running the calibration procedure

*Continued*

|   | Action  | Note  |
|---|---|---|
| 5 | Follow the instructions given on the FlexPendant. | A brief overview of the sequence that will be run on the FlexPendant is given in <a href="#">Overview of the calibration procedure on the FlexPendant on page 637</a> . |

#### Restarting an interrupted calibration procedure

If the Axis Calibration procedure is interrupted before the calibration is finished, the RobotWare program needs to be started again. Use this procedure to take required action.

| Situation  | Action   |
|--|--|
| The three-position enabling device on the FlexPendant has been released during robot movement. | Press and hold the three-position enabling device and press <b>Play</b> .  |
| The RobotWare program is terminated with <b>PP to Main</b> .                                   | Remove the calibration tool, if it is installed, and restart the calibration procedure from the beginning. See <i>Starting the calibration procedure</i> .<br><br>If the calibration tool is in contact the robot axis needs to be jogged in order to release the calibration tool. Jogging the axis in wrong direction will cause the calibration tool to break. Directions of axis movement is shown in <a href="#">Calibration movement directions for all axes on page 627</a> |

#### Axis Calibration with SafeMove option

To be able to run Axis Calibration, SafeMove needs to be unsynchronized. The Axis Calibration routine recognizes if the robot is equipped with SafeMove and will force SafeMove to unsynchronize automatically.

However, SafeMove may generate other warning messages anytime during the Axis Calibration routine. When a warning message is displayed, tap **Acknowledge** to confirm the unsynchronized state and continue Axis Calibration procedure.



#### CAUTION

SafeMove must be synchronized after the calibration is completed.

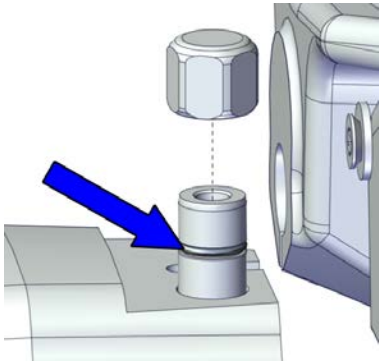
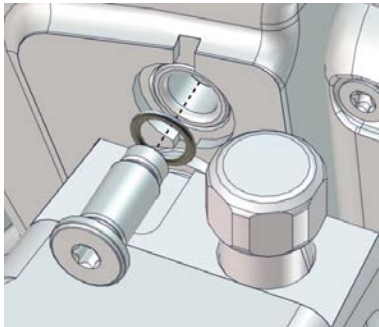
*Continues on next page*

## 6 Calibration

### 6.4.4 Axis Calibration - Running the calibration procedure

*Continued*

#### After calibration

|   | Action  | Note   |
|---|---|--|
| 1 | Check the o-ring on the fixed calibration pin.<br>Replace if damaged or missing.  |  <p>xx1600002102</p> <p>Protection cover and plug set: .<br/>3HAC064875-001 (axes 1, 2, 3 and 4)<br/>3HAC059487-001 (axes 5 and 6)</p>  |
| 2 | Reinstall the protective cover on the fixed calibration pin on each axis, directly after the axis has been calibrated.<br>Replace the cover with new spare part, if missing or damaged.   |  |
| 3 | Reinstall the protective plug and sealing in the bushing on each axis, directly after the axis has been calibrated. Ensure that the sealing is not damaged.<br>Replace the plug and the sealing with new spare part, if missing or damaged. |  <p>xx1500000952</p> <p>Protection cover and plug set: .<br/>3HAC064875-001 (axes 1, 2, 3 and 4)<br/>3HAC059487-001 (axes 5 and 6)</p> |

## 6.4.5 Reference calibration

### Brief introduction to Reference Calibration

Reference calibration is a faster method compared to Fine calibration, as it refers to a previously made calibration.

- 1 Create a backup of the current robot system.
- 2 Check that the active calibration offset values corresponds to the values on the calibration label (located on the lower arm or the base).
- 3 Jog the manipulator so that all axes are in zero position (ex use `MoveAbsJ` instruction). Check that all axis scales are aligned with calibration marks.
- 4 If the scales differ from calibration marks it might depend on wrong turns of the revolution counters. Make a marker line on the corresponding axis to be able to validate the result of the calibration. If more than one motor revolutions are wrong, the calibration will fail.
- 5 Use a verification position. This is especially recommended if all axes were not aligned with the synchronization marks (step 3). Reuse an existing position that is suitable and accurate so it can be used to validate the repair. Use a position where a deviation in axis calibration gives a big deviation in positioning. Note! Check the position after each repair in one axis.
- 6 Use Reference calibration to save reference values for all axes that is to be replaced. Make sure that the values are saved in RobotStudio or FTP program. The files are located in "Active system folder name/HOME/RefCalibFiles".
- 7 Perform the repair.
- 8 Make sure that the tooling and process equipment are the same as when creating the reference. Use Reference calibration to update the system with new calibration offset value for the repaired axis.
- 9 Check the position against the verification position (step 5).
- 10 Proceed with the repair of the next axis, if necessary, and repeat (step 8-9) for every axis.
- 11 (For system containing SafeMove) Download new calibration values to SafeMove. Use Visual SafeMove in RobotStudio.
- 12 (For system containing SafeMove) Synchronize SafeMove to activate SafeMove.
- 13 Perform test run.
- 14 Update the calibration label with new resolver values (calibration values).

### Manual tuning of calibration offset

Manual tuning of calibration offset is normally not needed, but can be useful in some situations. The requirement to do manual tuning is that there is a known accurate position, that worked accurately before the repair (step 5, see [Brief introduction to Reference Calibration on page 641](#)).

Example "Adjust axis 4":

- 1 Create a backup.

*Continues on next page*

## 6 Calibration

---

### 6.4.5 Reference calibration

*Continued*

- 2 Run the manipulator to the verification position. (The manipulator position is now deviating from the verification position.)
- 3 Read and note current axis 4 value in degrees (example: 96.3 degrees).
- 4 Manually jog, only axis 4, so that the manipulator is correctly positioned to the verification position.
- 5 Read and note current axis 4 value in degrees (example: 94.2 degrees).
- 6 Move the manipulator to its calibration position.
- 7 Calculate the angle difference (ie  $96.3 - 94.2 = 2.1$  degrees).
- 8 Manually jog axis 4 the calculated angle difference (-2.1). NOTE! The direction +/- shall be the same direction as the direction used when axis 4 was manually jogged to coincide with the verification process. In the example -2.1 degrees.
- 9 Make a new manual fine calibration of axis 4 with axis in -2.1 degrees position.
- 10 Check again against the verification position.
- 11 Repeat the manual tuning if needed.
- 12 Create a new reference if the intention is to use the reference in the future.



## 6.5 Verifying the calibration

### Introduction

Always verify the results after calibrating *any* robot axis to verify that all calibration positions are correct.

### Verifying the calibration

Use this procedure to verify the calibration result.

|   | Action   | Note  |
|---|--|---|
| 1 | Run the calibration home position program twice.<br>Do not change the position of the robot axes after running the program!  | See <a href="#">Checking the synchronization position on page 644</a> .   |
| 2 | Adjust the <i>synchronization marks</i> when the calibration is done, if necessary.  | This is detailed in section <a href="#">Synchronization marks and synchronization position for axes on page 625</a> . |
| 3 | Write down the values on a new label and stick it on top of the calibration label.<br>The label is located on the lower arm. |   |

## 6 Calibration

---

### 6.6 Checking the synchronization position

## 6.6 Checking the synchronization position

---

### Introduction

Check the synchronization position of the robot before beginning any programming of the robot system. This may be done:

- Using a `MoveAbsJ` instruction with argument zero on all axes.
- Using the **Jog** window on the FlexPendant.

*Continues on next page*

## 6.6.1 Checking the synchronization position on OmniCore robots

## 6.6.1 Checking the synchronization position on OmniCore robots

## Using a MoveAbsJ instruction

Use this procedure to create a program that runs all the robot axes to their synchronization position.

|   | Action   | Note   |
|---|--|--|
| 1 | Tap <b>Code</b> .  |  |
| 2 | Create a new program.  |  |
| 3 | Use <b>MoveAbsJ</b> in the <b>Add Instruction</b> menu.  |  |
| 4 | Create the following program:<br><pre>MoveAbsJ [[0,0,0,0,0,0],           [9E9,9E9,9E9,9E9,9E9,9E9]] \NoEOffs, v1000, fine, tool0</pre> |  |
| 5 | Run the program in manual mode.  |  |
| 6 | Check that the synchronization marks for the axes align correctly. If they do not, update the revolution counters.                     | See <a href="#">Synchronization marks and synchronization position for axes on page 625</a> and <a href="#">Updating revolution counters on page 628</a> . |

## Using the jogging window

Use this procedure to jog the robot to the synchronization position of all axes.

|   | Action   | Note   |
|---|--|--|
| 1 | Tap <b>Jog</b> .   |  |
| 2 | From the <b>Mechanical unit</b> list select a mechanical unit.   |  |
| 3 | From the <b>Motion mode</b> section, select an axis-set that need to be jogged.<br>For example, to jog axis 2, select the axis set <b>Axis 1-3</b> . |  |
| 4 | Follow the screen instruction on joystick movements to understand the direction of the axis that you want to move and move the joystick.             |  |
| 5 | Manually run the robots axes to a position where the axis position value read on the FlexPendant, is equal to zero.                                  |  |
| 6 | Check that the synchronization marks for the axes align correctly. If they do not, update the revolution counters.                                   | See <a href="#">Synchronization marks and synchronization position for axes on page 625</a> and <a href="#">Updating revolution counters on page 628</a> . |

**This page is intentionally left blank**

## 7 Troubleshooting

### 7.1 Introduction to troubleshooting

#### Introduction

The product manual and the circuit diagram contains information that can be good when troubleshooting.

For OmniCore, all event logs from the software can be seen on the FlexPendant, or in *Technical reference manual - Event logs for RobotWare 7*.

Make sure to read through the section [Safety on page 15](#) before starting.

#### Troubleshooting strategies

- 1 Isolate the fault to pinpoint the cause of the problem from consequential problems.
- 2 Divide the fault chain in two.
- 3 Check communication parameters and cables.
- 4 Check that the software version is compatible with the hardware.

#### Work systematically

- 1 Take a look around to make sure that all screws, connectors, and cables are secured, and that the robot and other parts are clean, not damaged, and correctly fitted.
- 2 Replace one thing at a time.
- 3 Do not replace units randomly.
- 4 Make sure that there are no loose screws, turnings, or other unexpected parts remaining after work has been performed.
- 5 When the work is completed, verify that the safety functions are working as intended.

#### Keep a track of history

- Make a historical fault log to keep track of problems over time.
- Consult those working with the robot when the problem occurred.

#### Basic scenarios

What to look for during troubleshooting depends on when the fault occurred. Was the robot recently installed or was it recently repaired? The following table gives hints on what to look for in specific situations.

|                                       |  |
|---------------------------------------|--|
| The robot has recently been installed | Check: <ul style="list-style-type: none"> <li>• the configuration files</li> <li>• connectors</li> <li>• options and their configuration</li> <li>• changes in the robot working space/movements.</li> </ul> |
|---------------------------------------|--|

*Continues on next page*

## 7 Troubleshooting

---

### 7.1 Introduction to troubleshooting

*Continued*

|   |   |
|---|---|
| The robot has recently been repaired  | Check: <ul style="list-style-type: none"><li>• all connections to the replaced part</li><li>• power supplies</li><li>• that the correct part has been fitted</li><li>• the last repair documents.</li></ul> |
| The robot recently had a software upgrade   | Check: <ul style="list-style-type: none"><li>• software versions</li><li>• compatibilities between hardware and software</li><li>• options and their configuration</li></ul>                                |
| The robot has recently been moved from one site to another (an already working robot) | Check: <ul style="list-style-type: none"><li>• connections</li><li>• software versions</li></ul>  |

## 7.2 Oil and grease stains on motors and gearboxes

### Description

The area surrounding the motor or gearbox shows signs of oil leaks. This can be at the base, closest to the mating surface, or at the furthest end of the motor at the resolver.

### Consequences

Besides the dirty appearance, in most cases there are no serious consequences if the leaked amount of oil is very small.


### Possible causes

The symptom can be caused by:

- Leakage of rust preventives or mounting grease. This should be wiped off.
- Leaking sealing between gearbox and motor.
- Gearbox overfilled with oil.
- Gearbox oil too hot.

### Recommended actions

The following actions are recommended:

|   | Action   | Information   |
|---|--|---|
| 1 |  <b>CAUTION</b><br>Allow hot parts to cool down.  |   |
| 2 | Wipe off the oil or grease, see <a href="#">Cleaning the IRB 5710 on page 190</a> .<br>Monitor the robot over time to see if new oil or grease occurs.   | If the oil spill is small, this step is sufficient.   |
| 3 | Check the gearbox oil level.   |   |
| 4 | Too hot gearbox oil may be caused by: <ul style="list-style-type: none"> <li>• Incorrect oil quality or level.</li> <li>• The robot work cycle runs a specific axis too hard. Investigate whether it is possible to program small "cooling periods" into the application.</li> <li>• Overpressure created inside gearbox.</li> </ul> | Robots performing certain, extremely heavy duty work cycles may be fitted with vented oil plugs. These are not fitted to normal duty robots, but can be purchased from your local ABB representative. |
| 5 | Inspect all sealings and gaskets between motor and gearbox. Replace broken parts.  |   |

## 7 Troubleshooting

### 7.3 Mechanical noise or dissonance

### 7.3 Mechanical noise or dissonance

#### Description

Mechanical noise or dissonance that has not been observed before can indicate problems in bearings, motors, gearboxes, or similar. Be observant of changes over time.

A faulty bearing often emits scraping, grinding, or clicking noises shortly before failing.

#### Consequences

Failing bearings cause the path accuracy to become inconsistent, and in severe cases, the joint can seize completely.

#### Possible causes

The symptom can be caused by:


- Worn bearings.
- Contaminations have entered the bearing grooves.
- Loss of lubrication in bearings.
- Loose heat sinks, fans, or metal parts.

If the noise is emitted from a gearbox, the following can also apply:

- Overheating.

#### Recommended actions

The following actions are recommended:

|   | Action  | Information |
|---|---|-------------|
| 1 |  <b>CAUTION</b><br>Allow hot parts to cool down. |             |
| 2 | Verify that the service is done according to the maintenance schedule.  |             |
| 3 | If a bearing is emitting the noise, determine which one and make sure that it has sufficient lubrication.                           |             |
| 4 | If possible, disassemble the joint and measure the clearance.   |             |
| 5 | Bearings inside motors are not to be replaced individually, but the complete motor is replaced.                                     |             |
| 6 | Make sure the bearings are fitted correctly.  |             |
| 7 | Tighten the screws if a heat sink, fan, or metal sheet is loose.  |             |



## 7.4 Troubleshooting too hot gearboxes

### Description

The robot reports event message 50263 *Duty factor is too high*.

### Consequences

The gearboxes become hot enough to cause burns when touched.  
The expected lifetime of the gearbox can be reduced.

### Possible causes

The symptom can be caused by:

- Incorrectly defined ambient temperature for the robot.
- Too high duty cycles, with intensive motion (high average speed and/or high average torque and/or short wait time).
- Incorrectly defined payloads.

### Recommended actions

The following actions are recommended:

|   | Action  | Information  |
|---|---|--|
| 1 | Run the add-in Mechanical Analysis in RobotStudio to get additional insights and recommendations. | The Gearbox Heat Estimation tool helps to estimate heat problems in the gearboxes.   |
| 2 | Verify that the maximum ambient temperature is correctly defined.                                 | The system parameters are configured in RobotStudio.<br><br>Topic <i>Motion</i> , type <i>Motion System</i> , parameter <i>Max Ambient Temperature Robot</i> . |
| 3 | Consider if the movement can be modified to reduce the average speed on the affected axis.        | The average speed has highest contribution to the gearbox temperature, but the average torque also contributes.  |
| 4 | Install a motor cooling fan on the affected axis.   | If cooling fans are added, RobotWare 7.17 or later is required to enable SIS to supervise the temperature.   |

## 7 Troubleshooting

---

### 7.5 Manipulator collapses on power down

### 7.5 Manipulator collapses on power down

---

#### Description

The manipulator is able to work correctly while Motors ON is active, but when Motors OFF is active, one or more axes drops or collapses under its own weight. The holding brakes (normally one in each motor), is not able to hold the weight of the manipulator arm.

---

#### Consequences

For a heavy robot, the collapse can cause severe injury to personnel working in the area or severe damage to the robot and/or surrounding equipment.  
For a small robot, the collapse can cause injury to personnel working close to the robot or damage to the robot and/or surrounding equipment.

---

#### Possible causes

The symptom can be caused by:

- Faulty brake.
- Faulty power supply to the brake.

---

#### Recommended actions

The following actions are recommended:

|   | Action   | Information   |
|---|--|---|
| 1 | Determine which motor(s) causes the robot to collapse.   |   |
| 2 | Check the brake power supply to the collapsing motor during the Motors OFF state.              | See the circuit diagram.  |
| 3 | Remove the resolver or resolver cover of the motor to see if there are any signs of oil leaks. | If found faulty, the motor must be replaced as a complete unit. |
| 4 | Remove the motor from the gearbox to inspect it from the drive side.                           | If found faulty, the motor must be replaced as a complete unit. |

## 8 Decommissioning

### 8.1 Introduction to decommissioning

---

#### Introduction

This section contains information to consider when taking a product, robot or controller, out of operation.

It deals with how to handle potentially dangerous components and potentially hazardous materials.



#### Note

The decommissioning process shall be preceded by a risk assessment.

---

#### Disposal of materials used in the robot

All used grease/oils and dead batteries **must** be disposed of in accordance with the current legislation of the country in which the robot and the control unit are installed.

If the robot or the control unit is partially or completely disposed of, the various parts **must** be grouped together according to their nature (which is all iron together and all plastic together), and disposed of accordingly. These parts **must** also be disposed of in accordance with the current legislation of the country in which the robot and control unit are installed.

See also [Environmental information on page 654](#).

---

#### Transportation

Prepare the robot or parts before transport, this to avoid hazards.

# 8 Decommissioning

## 8.2 Environmental information

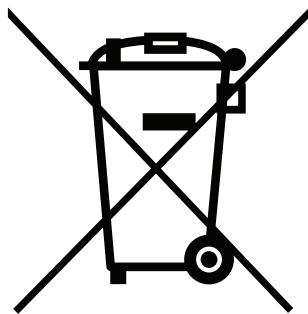
### 8.2 Environmental information

#### Introduction

ABB robots contain components in different materials. During decommissioning, all materials shall be dismantled, recycled, or reused responsibly, according to the relevant laws and industrial standards. Robots or parts that can be reused or upcycled helps to reduce the usage of natural resources.

#### Disposal symbol

The following symbol indicates that the product must not be disposed of as common garbage. Handle each product according to local regulations for the respective content (see table below).



xx1800000058

#### Materials used in the product

The table specifies some of the materials in the product and their respective use throughout the product.

Dispose components properly according to local regulations to prevent health or environmental hazards.

| Material               | Example application   |
|------------------------|---|
| Aluminium              | Wrist house, tilt house, covers, connection box, motor housing                          |
| Batteries, Lithium     | Serial measurement board  |
| Brass, zink alloys     | Calibration protection cap and plug and couplings, connectors and nuts in cable harness |
| Cast iron/nodular iron | Structural parts (base, frame, lower arm, arm house, tube shaft, process turning disc)  |
| Circuit boards         | Serial measurement unit, brake release unit   |
| Copper                 | Cables, motor wiring, pins, sockets   |
| Dysprosium             | Motor magnets   |
| Lithium                | Battery   |
| Neodymium              | Motor magnets   |

*Continues on next page*

| Material   | Example application  |
|--|--|
| Nickel   | Coating of turning disc, calibration caps, quick coupling, connectors, pins, sockets |
| Oil, grease  | Gearboxes  |
| Steel  | Turning disc, gears, shafts, bearings, motors, brackets, screws, washers             |
| Thermo plastics (ETFE, PA, PC, PE, PET, POM, PP, PVC, TPE) | Protection tubes, protection covers, plugs, cable jackets, cable filler, connectors  |
| Thermo setting polymers (CR, Epoxy, FKM, NBR, PUR)         | Motor winding, cable jackets, hoses, clamps, dampers, o-rings, sealings, gaskets     |

---

**Oil and grease**

Where possible, arrange for oil and grease to be recycled. Dispose of via an authorized person/contractor in accordance with local regulations. Do not dispose of oil and grease near lakes, ponds, ditches, down drains, or onto soil. Incineration must be carried out under controlled conditions in accordance with local regulations.

Also note that:

- Spills can form a film on water surfaces causing damage to organisms. Oxygen transfer could also be impaired.
- Spillage can penetrate the soil causing ground water contamination.

## 8 Decommissioning

---

### 8.3 Scrapping of robot

### 8.3 Scrapping of robot



#### Note

The decommissioning process shall be preceded by a risk assessment.

---

#### Important when scrapping the robot



#### DANGER

The risk assessment should consider hazards arising in the decommissioning, such as, but not limited to:

- Always remove all batteries. If a battery is exposed to heat, for example from a blow torch, it will explode.
- Always remove all oil/grease in gearboxes. If exposed to heat, for example from a blow torch, the oil/grease will catch fire.
- When motors are removed from the robot, the robot will collapse if it is not properly supported before the motor is removed.
- A used robot does not have the same performance as on delivery. Springs, brakes, bearings, and other parts might be worn or broken.

## 9 Reference information

### 9.1 Introduction

---

**General**

This chapter includes general information, complementing the more specific information in the different procedures in the manual.

## 9 Reference information

### 9.2 Applicable standards

### 9.2 Applicable standards

#### General

The product is compliant with ISO 10218-1:2011, *Robots for industrial environments - Safety requirements - Part 1 Robots*, and applicable parts in the normative references, as referred to from ISO 10218-1:2011. In case of deviation from ISO 10218-1:2011, these are listed in the declaration of incorporation. The declaration of incorporation is part of the delivery.

#### Robot standards

| Standard | Description  |
|----------|--|
| ISO 9283 | Manipulating industrial robots – Performance criteria and related test methods |
| ISO 9787 | Robots and robotic devices – Coordinate systems and motion nomenclatures       |
| ISO 9946 | Manipulating industrial robots – Presentation of characteristics               |

#### Other standards used in design

| Standard                              | Description   |
|---------------------------------------|---|
| IEC 60204-1                           | Safety of machinery - Electrical equipment of machines - Part 1: General requirements, normative reference from ISO 10218-1                           |
| IEC 61000-6-2                         | Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments                                     |
| IEC 61000-6-4                         | Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments                                     |
| ISO 13849-1:2006                      | Safety of machinery - Safety related parts of control systems - Part 1: General principles for design, normative reference from ISO 10218-1           |
| UL 1740 (option)<br>CSA Z434 (option) | Standards For Safety - Robots and Robotic Equipment<br>Industrial robots and robot Systems - General safety requirements<br>Valid for USA and Canada. |



## 9.3 Unit conversion

### Converter table

Use the following table to convert units used in this manual.

| Quantity | Units |              |          |
|----------|-------|--------------|----------|
| Length   | 1 m   | 3.28 ft.     | 39.37 in |
| Weight   | 1 kg  | 2.21 lb.     |          |
| Weight   | 1 g   | 0.035 ounces |          |
| Pressure | 1 bar | 100 kPa      | 14.5 psi |
| Force    | 1 N   | 0.225 lbf    |          |
| Moment   | 1 Nm  | 0.738 lbf-ft |          |
| Volume   | 1 L   | 0.264 US gal |          |

## 9 Reference information

### 9.4 Screw joints

### 9.4 Screw joints

#### General

This section describes how to tighten the various types of screw joints on ABB robots.

The instructions and torque values are valid for screw joints comprised of metallic materials and do *not* apply to soft or brittle materials.

#### UNBRAKO screws

UNBRAKO is a special type of screw recommended by ABB for certain screw joints. It features special surface treatment (Gleitmo as described below) and is extremely resistant to fatigue.

Whenever used, this is specified in the instructions, and in such cases, *no other type of replacement screw* is allowed. Using other types of screws will void any warranty and may potentially cause serious damage or injury.

#### Gleitmo treated screws

Gleitmo is a special surface treatment to reduce the friction when tightening the screw joint. It is recommended by ABB for M6-M20 screw joints. Screws treated with Gleitmo may be reused 3-4 times before the coating disappears. After this the screw must be discarded and replaced with a new one.

When handling screws treated with Gleitmo, protective gloves of nitrile rubber type should be used.

Generally, screws are lubricated with *Gleitmo 603* mixed with *Geomet 500* or *Geomet 702* in proportion 1:3. *Geomet* thickness varies according to screw dimensions, refer to the following.

| Dimension                         | Lubricant                       | Geomet thickness |
|-----------------------------------|---------------------------------|------------------|
| M6-M20 (any length except M20x60) | <i>Gleitmo 603 + Geomet 500</i> | 3-5 µm           |
| M6-M20 (any length except M20x60) | <i>Gleitmo 603 + Geomet 720</i> | 3-5 µm           |
| M20x60                            | <i>Gleitmo 603 + Geomet 500</i> | 8-12 µm          |
| M20x60                            | <i>Gleitmo 603 + Geomet 720</i> | 6-10 µm          |

#### Stainless steel screws

Stainless steel screws should be secured by hand at least 2 turns before using an electric screwdriver.

#### Screws lubricated in other ways

Screws lubricated with Molykote 1000 or Molykote P1900 should *only* be used when specified in the repair, maintenance or installation procedure descriptions.

In such cases, proceed as follows:

- 1 Apply lubricant to the screw thread.
- 2 Apply lubricant between the plain washer and screw head.

*Continues on next page*

- 3 Screw dimensions of M8 or larger must be tightened with a torque wrench. Screw dimensions of M6 or smaller may be tightened without a torque wrench if this is done by trained and qualified personnel.

| Lubricant                                     | Article number |
|---|----------------|
| Molykote 1000 (molybdenum disulphide grease)  | 3HAC042472-001 |
| Molykote P1900 (molybdenum disulphide grease) | 3HAC070875-001 |

### Tightening torque

Before tightening any screw, note the following:

- Determine whether a **standard** tightening torque or **special** torque is to be applied. The **standard torques** are specified in the following tables. Any **special torques** are specified in the repair, maintenance or installation procedure descriptions. **Any special torque specified overrides the standard torque!**
- Use the *correct tightening torque* for each type of screw joint.
- Only use *correctly calibrated* torque keys.
- *Always tighten the joint by hand*, and never use pneumatic tools.
- Use the *correct tightening technique*, that is *do not* jerk. Tighten the screw in a slow, flowing motion.
- Maximum allowed total deviation from the specified value is 10%!

#### Tightening torque for oil-lubricated screws with slotted or cross-recess head screws

The following table specifies the recommended standard tightening torque for *oil-lubricated screws with slotted or cross-recess head screws*.



#### Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

#### Tightening torque for oil-lubricated screws with allen head screws

The following table specifies the recommended standard tightening torque for *oil-lubricated screws with allen head screws*.



#### Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

| Dimension | Tightening torque (Nm)<br>Class 8.8, oil-lubricated | Tightening torque (Nm)<br>Class 10.9, oil-lubricated | Tightening torque (Nm)<br>Class 12.9, oil-lubricated |
|-----------|---|--|--|
| M5        | 6   | -  | -  |
| M6        | 10  | -  | -  |
| M8        | 24  | 34   | 40   |
| M10       | 47  | 67   | 80   |

Continues on next page

## 9 Reference information

### 9.4 Screw joints

Continued

| Dimension | Tightening torque (Nm)<br>Class 8.8, oil-lubricated | Tightening torque (Nm)<br>Class 10.9, oil-lubricated | Tightening torque (Nm)<br>Class 12.9, oil-lubricated |
|-----------|---|--|--|
| M12       | 82  | 115  | 140  |
| M16       | 200   | 290  | 340  |
| M20       | 400   | 560  | 670  |
| M24       | 680   | 960  | 1150   |

Tightening torque for lubricated screws (Molykote, Gleitmo or equivalent) with allen head screws

The following table specifies the recommended standard tightening torque for *screws lubricated with Molykote 1000, Gleitmo 603 or equivalent with allen head screws*.



#### Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

| Dimension | Tightening torque (Nm)<br>Class 10.9, lubricated <sup>i</sup> | Tightening torque (Nm)<br>Class 12.9, lubricated <sup>i</sup> |
|-----------|---|---|
| M5        |   | 8   |
| M6        |   | 14  |
| M8        | 28  | 35  |
| M10       | 55  | 70  |
| M12       | 96  | 120   |
| M16       | 235   | 300   |
| M20       | 460   | 550   |
| M24       | 790   | 950   |

<sup>i</sup> Lubricated with Molykote 1000, Gleitmo 603 or equivalent

### Water and air connectors

The following table specifies the recommended standard tightening torque for *water and air connectors*.



#### Note

A special torque specified in the repair, maintenance or installation procedure overrides the standard torque.

| Dimension | Material   | Tightening torque<br>Nm - Nominal                 | Tightening torque<br>Nm - Min. | Tightening torque<br>Nm - Max. |
|-----------|------------|---|--------------------------------|--------------------------------|
| ALL       | Mixed      | The lower tightening torque of the two materials. |                                |                                |
| 1/8       | Brass only | 12  | 8                              | 15                             |
| 1/4       | Brass only | 15  | 10                             | 20                             |
| 3/8       | Brass only | 20  | 15                             | 25                             |
| 1/2       | Brass only | 40  | 30                             | 50                             |

Continues on next page

| Dimension | Material                | Tightening torque<br>Nm - Nominal | Tightening torque<br>Nm - Min. | Tightening torque<br>Nm - Max. |
|-----------|-------------------------|-----------------------------------|--------------------------------|--------------------------------|
| 1/2       | Stainless<br>steel only | 49                                | 47                             | 59                             |
| 3/4       | Brass only              | 70                                | 55                             | 90                             |

## 9 Reference information

---

### 9.5 Weight specifications

### 9.5 Weight specifications

---


#### Definition

In installation, repair, and maintenance procedures, weights of the components handled are sometimes specified. All components exceeding 22 kg (50 lbs) are highlighted in this way.

To avoid injury, ABB recommends the use of a lifting accessory when handling components with a weight exceeding 22 kg. A wide range of lifting accessories and devices are available for each manipulator model.

#### Example

Following is an example of a weight specification in a procedure:

|  | Action   | Note |
|--|--|------|
|  |  <b>CAUTION</b><br>The arm weighs 25 kg.<br>All lifting accessories used must be sized accordingly. |      |

## 9.6 Standard toolkit

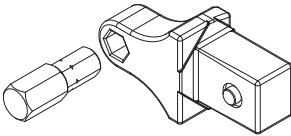
### General

All service (repairs, maintenance, and installation) procedures contains lists of tools required to perform the specified activity.

All special tools required are listed directly in the procedures while all the tools that are considered standard are gathered in the standard toolkit and defined in the following table.

This way, the tools required are the sum of the standard toolkit and any tools listed in the instruction.

### Contents, standard toolkit

| Qty | Tool   | Rem.  |
|-----|--|---|
| 1   | Ring-open-end spanner 8-19 mm  |   |
| 1   | Bit holder and hexagon bit SW10,<br>Bit holder dimension: 5/16" (14x18 mm)<br>Used for screw access in narrow locations. | Used for screw access in narrow locations (for example the screws for axis-1 gearbox/frame and wrist/arm tube).<br><br>xx2200001085 |
| 1   | Socket head cap 2.5-17 mm  |   |
| 1   | Torx socket no: 10-30  |   |
| 1   | Box spanner set  |   |
| 1   | Torque wrench 10-100 Nm  |   |
| 1   | Torque wrench 75-400 Nm  |   |
| 1   | Ratchet head for torque wrench 1/2   |   |
| 2   | Hexagon-headed screw M10x100   |   |
| 1   | Hexagon-headed screw M16x90  |   |
| 1   | Hex bit socket head cap no. 14 socket 40 mm L=100 mm   |   |
| 1   | Hex bit socket head cap no. 14 socket 40 mm L=20 mm  | To be shortened to 12 mm  |
| 1   | Hex bit socket head cap no. 6 socket 40 mm L=145 mm  |   |
| 1   | Hex bit socket head cap no. 6 socket 40mm bit L=220 mm   |   |
| 1   | Hexagon socket spanner no. 8   | Screwdriver for hexagon screws, used for the power cable connector at the base.   |
| 1   | Plastic mallet   |   |

## 9 Reference information

---

### 9.7 Special tools

### 9.7 Special tools

---

#### General

All service instructions contain lists of tools required to perform the specified activity. The required tools are a sum of standard tools, defined in the section [Standard toolkit on page 665](#), and of special tools, listed directly in the instructions and also gathered in this section.

#### Special tools

---

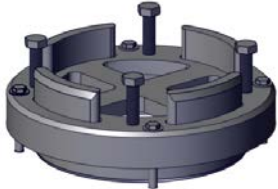

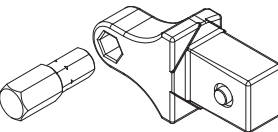


#### Note

If the replacing procedure is not listed in the table below, only standard tools are needed for the procedure.

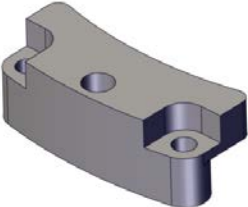




*Continues on next page*



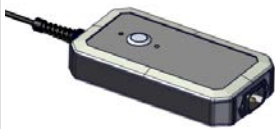

| Tools and equipment with spare part number:<br>(These tools can be ordered from ABB) |                                       |  | Axis-1 motor | Axis-2 motor | Axis-3 motor | Axis-4 motor | Axis-5 motor | Axis-6 motor | Axis-1 cassette sealing | Axis-4 cassette sealing<br>(including arm house cover) | Axis-1 gearbox | Axis-2 gearbox | Axis-3 gearbox | Axis-6 gearbox | Wrist |
|--|---------------------------------------|--|--------------|--------------|--------------|--------------|--------------|--------------|-------------------------|--|----------------|----------------|----------------|----------------|-------|
| Removal/refitting tools  |                                       |  |              |              |              |              |              |              |                         |  |                |                |                |                |       |
| 3HAC079880-001   | Replacement tool for cassette sealing | <br>xx2100002288   |              |              |              |              |              |              | 1                       |  | 1              |                |                |                |       |
| 3HAC079878-001   | Replacement tool for arm house cover  | <br>xx2100002289  |              |              |              |              |              |              |                         | 1  |                |                |                |                |       |
| 3HAC14631-1  | Removal tool motor M12                |  |              | 2            | 2            |              |              |              |                         |  |                | 2              |                |                |       |
| 3HAC14972-1  | Removal tool motor M10                |  |              |              |              | 2            | 2            |              |                         |  |                |                |                |                |       |
| 3HAC080346-001   | Removal tool motor M8                 |  |              |              |              |              |              | 2            |                         |  |                |                |                |                |       |
| -  | Screws M8x75, fully threaded          |  |              |              |              |              |              |              |                         |  |                |                | 2              |                |       |
| -  | Screws M10x60, fully threaded         |  |              |              |              |              |              |              |                         |  |                | 2              |                |                |       |
| 3HAC12342-1  | Bits extender                         |  |              | 1            | 1            | 1            | 1            |              |                         |  | 1              | 1              |                |                |       |
|  | Bit holder and hexagon bit SW10       | <br>xx2200001085 |              |              |              |              |              |              |                         |  | 1              |                |                |                |       |
| Lifting accessories  |                                       |  |              |              |              |              |              |              |                         |  |                |                |                |                |       |
| -  | Roundsling, 1 m                       |  |              |              |              |              |              |              |                         |  |                | 1              |                |                | 1     |
| -  | Roundsling, 1.5 m                     |  |              |              |              |              |              |              |                         |  |                | 1              | 1              |                |       |
| 3HAC15607-1  | Lifting accessory set                 |  |              |              |              |              |              |              |                         |  | 1              |                |                |                |       |

9 Reference information

9.7 Special tools

| Tools and equipment with spare part number:<br>(These tools can be ordered from ABB) |                            |   | Axis-1 motor | Axis-2 motor | Axis-3 motor | Axis-4 motor | Axis-5 motor | Axis-6 motor | Axis-1 cassette sealing | Axis-4 cassette sealing<br>(including arm house cover) | Axis-1 gearbox | Axis-2 gearbox | Axis-3 gearbox | Axis-6 gearbox | Wrist |
|--|----------------------------|---|--------------|--------------|--------------|--------------|--------------|--------------|-------------------------|--|----------------|----------------|----------------|----------------|-------|
| 3HAC081565-001   | Lifting adapter            | <br>xx2200000205   |              |              |              |              |              |              |                         |  | 1              |                |                |                |       |
| 3HAC081585-001   | Lifting accessory for gear | <br>xx2100002415  |              |              |              |              |              |              |                         |  |                | 1              | 1              |                |       |
| 3HAC15534-1  | Lifting accessory, motor   |   |              | 1            |              |              |              |              |                         |  |                | 1              |                |                |       |
| -  | Fender washer              |   |              |              |              |              |              |              |                         |  | 1              | 1              | 1              |                |       |
| 3HAC15556-1  | Lifting accessory (chain)  | <br>xx1200001241 |              | 1            |              |              |              |              |                         |  | 1              | 1              | 1              |                |       |
| 3HAC16131-1  | Lifting eye                | <br>xx1200001242 |              |              |              |              |              |              |                         |  | 1              | 1              | 1              |                |       |
| -  | Lifting shackle            | <br>xx1200001243 |              |              |              |              |              |              |                         |  |                | 1              |                |                |       |
| Guide pins   |                            |   |              |              |              |              |              |              |                         |  |                |                |                |                |       |
| 3HAC080345-001   | Guide pin, M6x150          |   |              |              |              |              |              | 2            |                         |  |                |                |                |                |       |
| 3HAC15520-2  | Guide pin, M8x150          |   |              |              |              | 2            | 2            |              |                         |  |                |                |                |                |       |



Continues on next page

| Tools and equipment with spare part number:<br>(These tools can be ordered from ABB) |                                       |   | Axis-1 motor | Axis-2 motor | Axis-3 motor | Axis-4 motor | Axis-5 motor | Axis-6 motor | Axis-1 cassette sealing | Axis-4 cassette sealing<br>(including arm house cover) | Axis-1 gearbox | Axis-2 gearbox | Axis-3 gearbox | Axis-6 gearbox | Wrist |
|--|---------------------------------------|---|--------------|--------------|--------------|--------------|--------------|--------------|-------------------------|--|----------------|----------------|----------------|----------------|-------|
| 3HAC15521-2  | Guide pin, M10x150                    |   |              | 2            | 2            |              |              |              |                         |  |                | 2              | 2              |                |       |
| 3HAC13056-2  | Guide pin, M12x150                    |   |              |              |              |              |              |              |                         |  | 2              | 1              |                |                |       |
| 3HAC13056-3  | Guide pin, M12x200                    |   |              |              |              |              |              |              |                         |  |                | 1              |                |                |       |
| Brake release  |                                       |   |              |              |              |              |              |              |                         |  |                |                |                |                |       |
| 3HAC081310-001   | Brake release tool                    | <br>xx210000666   | 1            | 1            | 1            | 1            | 1            | 1            |                         |  | 1              | 1              | 1              | 1              | 1     |
| Calibration tools  |                                       |   |              |              |              |              |              |              |                         |  |                |                |                |                |       |
| 3HAC074564-001<br>(axes 1, 2, 3 and 4)<br>3HAC074119-001<br>(axes 5 and 6)           | Calibration toolbox, Axis Calibration |   | 1            | 1            | 1            | 1            | 1            | 1            |                         |  | 1              | 1              | 1              | 1              |       |
| Adjustment and fixing tools  |                                       |   |              |              |              |              |              |              |                         |  |                |                |                |                |       |
| 3HAB7887-1   | Rotation tool M4                      |   | 1            | 1            | 1            | 1            | 1            |              |                         |  | 1              | 1              |                |                |       |
| 3HAB7887-1   | Rotation tool M3                      |   |              |              |              |              |              | 1            |                         |  |                |                |                | 1              |       |
| 3HAC080331-001   | Adjustment tool for gear              |   |              |              |              |              |              |              |                         |  |                | 1              | 1              |                |       |
| -  | Lock screw, M16x120                   |   |              | 1            |              |              |              |              |                         |  |                |                |                |                |       |
| 3HAC15535-1  | Support legs                          |   |              |              |              |              |              |              |                         |  | 4              |                |                |                |       |
| Special tools for inverted robot   |                                       |   |              |              |              |              |              |              |                         |  |                |                |                |                |       |
| 3HAC073537-001   | Lifting and turning tool              | <br>xx2100002608 |              |              |              |              |              |              |                         |  | 1              | 1              |                |                |       |

Continues on next page

9 Reference information

9.7 Special tools

| Tools and equipment with spare part number:<br>(These tools can be ordered from ABB) |   |   | Axis-1 motor | Axis-2 motor | Axis-3 motor | Axis-4 motor | Axis-5 motor | Axis-6 motor | Axis-1 cassette sealing | Axis-4 cassette sealing<br>(including arm house<br>cover) | Axis-1 gearbox | Axis-2 gearbox | Axis-3 gearbox | Axis-6 gearbox | Wrist |
|--|---|---|--------------|--------------|--------------|--------------|--------------|--------------|-------------------------|---|----------------|----------------|----------------|----------------|-------|
| 3HAC058825-001   | Fork lift accessory set                   | <br>xx2200000207   |              |              |              |              |              |              |                         |   | 1              | 1              |                |                |       |
| 3HAC082693-001   | Oil level gauge                           | <br>xx1600002093  | 1            |              |              |              |              |              |                         |   |                |                |                |                |       |
| 3HAC081586-001   | Lifting accessory, motor (inverted robot) | <br>xx2100002816 | 1            |              |              |              |              |              |                         |   |                |                |                |                |       |

## 9.8 Lifting accessories and lifting instructions

---

### General

Many repair and maintenance activities require different pieces of lifting accessories, which are specified in each procedure.

The use of each piece of lifting accessories is *not* detailed in the activity procedure, but in the instruction delivered with each piece of lifting accessories.

The instructions delivered with the lifting accessories should be stored for later reference.

**This page is intentionally left blank**

# Index

## A

Absolute Accuracy, calibration, 623  
 allergenic material, 26  
 aluminum  
   disposal, 654  
 ambient humidity  
   operation, 40  
   storage, 40  
 ambient temperature  
   operation, 40  
   storage, 40  
 assembly instructions, 49  
 assessment of hazards and risks, 26  
 axis-6 gearbox  
   changing oil, 182  
   replacing, 601  
 axis-6 motor  
   replacing, 446  
 axis-5 gearbox  
   changing oil, 177  
 axis-5 motor  
   replacing, 428  
 axis-4 gearbox  
   changing oil, 172  
 axis-4 motor  
   replacing, 413  
 axis-3 gearbox  
   changing oil, 167  
   replacing, 556  
 axis-3 motor  
   replacing, 398  
 axis-2 gearbox  
   changing oil, 161  
   replacing, 513  
 axis-2 motor  
   replacing, 379  
 axis-1 cassette sealing  
   replacing, 207  
 axis-1 gearbox  
   changing oil, 150  
   replacing, 458  
 axis-1 motor  
   replacing, 354  
 Axis Calibration, 630  
   calibration tool  
     article number, 633, 637  
     examining, 633  
     installation position, 635  
   overview of method, 630  
   procedure on FlexPendant, 637  
   protective cover and protection plug, 635, 637

## B

base plate, 54  
 batteries  
   disposal, 654  
 Brake power supply, faulty, 652  
 brake release unit  
   replacing, 341  
 brake releasing, 76  
 brakes  
   testing function, 34

## C

cabinet lock, 27  
 cable harness  
   inspecting, 116  
   refitting, 310  
   removing, 287  
 cabling between robot and controller, 104  
 calibrating  
   robot, 630  
   roughly, 628  
 calibrating robot, 630  
 calibration  
   Absolute Accuracy type, 622  
   rough, 628  
   standard type, 622  
   verification, 643  
   when to calibrate, 624  
 calibration, Absolute Accuracy, 623  
 calibration manuals, 623  
 calibration marks, 625  
 calibration position  
   jogging to, 645  
   scales, 625  
 calibration scales, 625  
 CalibWare, 622  
 carbon dioxide extinguisher, 27  
 cassette sealing axis 4  
   replacing, 222  
 cast iron  
   disposal, 654  
 changing oil  
   axis-6 gearbox, 182  
   axis-5 gearbox, 177  
   axis-4 gearbox, 172  
   axis-3 gearbox, 167  
   axis-2 gearbox, 161  
   axis-1 gearbox, 150  
 circuit boards  
   disposal, 654  
 cleaning, 190  
 climbing on robot, 30  
 connecting the robot and controller, cabling, 104  
 cooling fan, motor  
   installing, 81  
 copper  
   disposal, 654

## D

damaged bearings, 650  
 damper  
   inspecting, 118  
 dimensions  
   robot, 86  
 direction of axes, 627  
 dysprosium  
   disposal, 654

## E

environmental information, 654  
 EPS, 102  
 equipment, robot, 86  
 ESD  
   damage elimination, 48  
   sensitive equipment, 48  
 expected life, 113  
 extended working range, 102  
 extended working range, axis 1, 102

extra equipment, 86

## F

faulty brake, 652  
fire extinguishing, 27  
fitting, equipment, 86  
FlexPendant  
    jogging to calibration position, 645  
    MoveAbsJ instruction, 645  
    updating revolution counters, 628  
foundation  
    requirements, 39

## G

gearbox  
    inspecting oil level axis 1, 125  
    inspecting oil level axis 2, 130  
    inspecting oil level axis 3, 134  
    inspecting oil level axis 4, 138  
    inspecting oil level axis 5, 141  
    inspecting oil level axis 6, 144  
gearboxes  
    location of, 148  
Gravity Beta, 78  
grease, 30  
    disposal, 655

## H

hanging  
    installed hanging, 26  
hazard levels, 17  
hazardous material, 654  
height  
    installed at a height, 26  
hot gearbox oil, 649–650  
hot surfaces, 30  
HRA, 26  
humidity  
    operation, 40  
    storage, 40

## I

information labels  
    inspecting, 120  
inspecting  
    cable harness, 116  
    damper, 118  
    information labels, 120  
    mechanical stop, 123  
    motor seal, 114  
inspecting oil levels  
    axis 1, 125  
    axis 2, 130  
    axis 3, 134  
    axis 4, 138  
    axis 5, 141  
    axis 6, 144  
installation  
    equipment, 86  
installation procedure, 53  
installing  
    cooling fan, motor, 81  
instructions for assembly, 49  
integrator responsibility, 26  
intervals for maintenance, 111  
inverted mounting, 78

## L

labels  
    robot, 19  
leak-down test, 196  
leaking sealing, 649  
lifting  
    robot, 66, 68  
    robot down, 204  
lifting accessory, 664  
lifting accessory, robot, 63  
lifting robot  
    with lifting accessory, 63  
limitation of liability, 15  
lithium  
    disposal, 654  
Lithium  
    disposal, 654  
loads on foundation, 38  
lock and tag, 27  
lubricants, 30  
lubrication  
    amount in gearboxes, 148  
    type of lubrication, 148

## M

magnesium  
    disposal, 655  
maintenance intervals, 111  
maintenance schedule, 111  
mechanical stop  
    inspecting, 123  
motor seal  
    inspecting, 114  
mounting, equipment, 86  
movable mechanical stop, 98  
MoveAbsJ instruction, 645

## N

national regulations, 26  
negative directions, axes, 627  
neodymium  
    disposal, 654  
nodular iron  
    disposal, 654  
noise, 650

## O

oil, 30  
    amount in gearboxes, 148  
    disposal, 655  
    type of oil, 148  
oil leaks, 649  
oil level  
    gearbox axis 1, 125  
    gearbox axis 2, 130  
    gearbox axis 3, 134  
    gearbox axis 4, 138  
    gearbox axis 5, 141  
    gearbox axis 6, 144  
operating conditions, 40  
option  
    Extended working range, 102  
original spare parts, 15  
overfilled gearbox, 649

## P

pedestal



- installed on pedestal, 26
- personnel
  - requirements, 16
- positive directions, axes, 627
- PPE, 16
- product standards, 658
- protection classes, 40
- protection type, 40
- protective equipment, 16
- protective wear, 16

## R

- recycling, 654
- refitting
  - cable harness, 310
- regional regulations, 26
- release brakes, 33
- removing
  - cable harness, 287
- replacements, report, 195
- replacing
  - axis-6 gearbox, 601
  - axis-6 motor, 446
  - axis-5 motor, 428
  - axis-4 motor, 413
  - axis-3 gearbox, 556
  - axis-3 motor, 398
  - axis-2 gearbox, 513
  - axis-2 motor, 379
  - axis-1 cassette sealing, 207
  - axis-1 gearbox, 458
  - axis-1 motor, 354
  - brake release unit, 341
  - cassette sealing axis 4, 222
  - SMB battery, 187
  - SMB unit, 348
  - turning disc, 280
  - wrist, 255
  - xx, 67
- report replacements, 195
- requirements on foundation, 39
- responsibility and validity, 15
- restricting
  - working range axis 1, 102
- revolution counters
  - storing on FlexPendant, 628
  - updating, 628
- risk of burns, 30
- risk of tipping, 51
- robot
  - dimensions, 86
  - equipment, fitting, 86
  - labels, 19
  - lifting, 66, 68
  - lifting down from inverted position, 204
  - protection class, 40
  - protection types, 40
  - symbols, 19
  - technical data, 37
  - working range, 41

## S

- safety
  - brake testing, 34
  - ESD, 48
  - fire extinguishing, 27
  - release robot axes, 33

- signals, 17
  - signals in manual, 17
  - symbols, 17
  - symbols on robot, 19
  - test run, 107
- safety devices, 27
- safety signals
  - in manual, 17
- safety standards, 658
- scales on robot, 625
- schedule of maintenance, 111
- screw joints, 660
- securing, robot, 72
- securing the robot to foundation, attachment screws, 72
- shipping, 653
- signals
  - safety, 17
- SMB battery
  - replacing, 187
- SMB unit
  - replacing, 348
- stability, 51
- standards, 658
- steel
  - disposal, 655
- storage conditions, 40
- symbols
  - safety, 17
- synchronization position, 628
- sync marks, 625
- system integrator requirements, 26
- system parameter
  - Gravity Beta, 78

## T

- taking
  - robot down, 204
- technical data
  - robot, 37
- temperatures
  - operation, 40
  - storage, 40
- testing
  - brakes, 34
- thermo plastics
  - disposal, 655
- thermo setting polymers
  - disposal, 655
- tilted mounting, 78
- torques on foundation, 38
- transportation, 653
- troubleshooting
  - safety, 35
- turning disc
  - replacing, 280
- turning radius, 45

## U

- upcycling, 654
- updating revolution counters, 628
- users
  - requirements, 16

## V

- validity and responsibility, 15
- verifying calibration, 643

### W

weight, 37

axis-1 gearbox, 479–480, 483, 534–535, 537, 583–584

axis-1 motor, 362, 366, 368, 370, 387, 390, 404, 406, 419, 421, 436, 438, 450, 473, 499, 530, 544, 577, 590  
base, 481

complete arm system, 477, 490

robot, 65, 70, 73, 205, 463, 465, 467, 509, 518

upper and lower arm, 520, 532, 540

upper arm, complete, 572, 588

wrist, 266

working range, 46

robot, 41

wrist

replacing, 255

### X

xx

replacing, 67

### Z

zero position

checking, 644



**ABB AB****Robotics & Discrete Automation**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

**ABB AS****Robotics & Discrete Automation**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

**ABB Engineering (Shanghai) Ltd.**

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201315, China

Telephone: +86 21 6105 6666

**ABB Inc.****Robotics & Discrete Automation**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

**[abb.com/robotics](http://abb.com/robotics)**