



ROBOTICS

Application manual

Continuous Application Platform



Trace back information:
Workspace 24B version a1
Checked in 2024-05-30
Skribenta version 5.5.019

Application manual

Continuous Application Platform

RobotWare 6.15.07

Document ID: 3HAC050990-001

Revision: G

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2004-2024 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

Overview of this manual	7
1 Continuous Application Platform	9
2 Functionality of CAP	11
2.1 Robot movement	12
2.2 Supervision	14
2.3 Supervision and process phases	18
2.4 Motion delay	20
2.5 Programming recommendations	21
2.6 Program execution	22
2.7 Predefined events	23
2.8 Coupling between phases and events	24
2.9 Error handling	26
2.9.1 Recoverable errors	27
2.9.2 Writing a general error handler	32
2.10 Restart	34
2.11 System event routines	36
2.12 Limitations	37
3 Programming examples	39
3.1 Laser cutting example	39
3.2 Step by step	40
4 RAPID references	43
4.1 Instructions	43
4.1.1 CapAPTrSetup - Set up an At-Point-Tracker	43
4.1.2 CapAPTrSetupAI - Setup an At-Point-Tracker controlled by analog input signals ..	46
4.1.3 CapAPTrSetupAO - Setup an At-Point-Tracker controlled by analog output signals	49
4.1.4 CapAPTrSetupPERS - Setup an At-Point-Tracker controlled by persistent variables	52
4.1.5 CapC - Circular CAP movement instruction	55
4.1.6 CapCondSetDO - Set a digital output signal at TCP stop	66
4.1.7 CapEquiDist - Generate equidistant event	68
4.1.8 CapL - Linear CAP movement instruction	70
4.1.9 CapLATrSetup - Set up a Look-Ahead-Tracker	80
4.1.10 CapNoProcess - Run CAP without process	85
4.1.11 CapRefresh - Refresh CAP data	87
4.1.12 CAPSetStopMode - Set the stop mode for execution errors	89
4.1.13 CapWeaveSync - set up signals and levels for weave synchronization	90
4.1.14 ICap - connect CAP events to trap routines	93
4.1.15 InitSuperv - Reset all supervision for CAP	98
4.1.16 IPathPos - Get center line robtarget when weaving	99
4.1.17 RemoveSuperv - Remove condition for one signal	101
4.1.18 SetupSuperv - Setup conditions for signal supervision in CAP	103
4.2 Functions	106
4.2.1 CapGetFailSigs - Get failed I/O signals	106
4.3 Data types	108
4.3.1 capaptrreferencedata - Variable setup data for At-Point-Tracker	108
4.3.2 capdata - CAP data	110
4.3.3 caplatrackdata - CAP Look-Ahead-Tracker track data	114
4.3.4 capspeeddata - Speed data for CAP	118
4.3.5 capstopmode - Defines stop modes for CAP	120
4.3.6 captrackdata - CAP track data	121

4.3.7	captrackoffsframe - Defines frame in which the captrackdata components seamoffs_y and seamoffs_z are applied	124
4.3.8	capweavedata - Weavedata for CAP	126
4.3.9	flypointdata - Data for flying start/end	133
4.3.10	processtimes - process times	136
4.3.11	restartblkdata - blockdata for restart	137
4.3.12	supervtimeouts - Handshake supervision time outs	139
4.3.13	weavestartdata - weave start data	141
Index		143

Overview of this manual

About this manual

This manual describes the option *Continuous Application Platform* and contains instructions for the configuration.

This manual describes RobotWare 6.

Who should read this manual?

This manual is intended for:

- Personnel responsible for installations and configurations of fieldbus hardware/software
- Personnel responsible for I/O system configuration
- System integrators

Prerequisites

The reader should have the required knowledge of:

- Mechanical installation work
- Electrical installation work
- System parameter configuration

References

References	Document ID
<i>Application manual - Arc and Arc Sensor</i>	3HAC050988-001
<i>Application manual - Controller software IRC5</i>	3HAC050798-001
<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>	3HAC050917-001
<i>Technical reference manual - RAPID Overview</i>	3HAC050947-001

Revisions

Revision	Description
-	Released with RobotWare 6.0.
A	Released with RobotWare 6.01. Minor corrections.
B	Released with RobotWare 6.04. <ul style="list-style-type: none">• Minor corrections.• The RAPID instructions, functions, and data types are moved to <i>Technical reference manual - RAPID Instructions, Functions and Data types</i>.
C	Released with RobotWare 6.05. <ul style="list-style-type: none">• Minor corrections.
D	Released with RobotWare 6.12. <ul style="list-style-type: none">• Updated information for <code>weavestartdata</code>, <code>cycle_time</code>.• The full information for CAP RAPID instructions, functions, and data types are added back to this manual.

Continues on next page

Revision	Description
E	Released with RobotWare 6.14. <ul style="list-style-type: none">Information about TRAP execution updated in System event routines on page 36 and ICap - connect CAP events to trap routines on page 93.
F	Released with RobotWare 6.15.06. <ul style="list-style-type: none">Minor corrections.
G	Released with RobotWare 6.15.07. <ul style="list-style-type: none">Added captrackoffsframe - <i>Defines frame in which the captrackdata components seamoffs_y and seamoffs_z are applied on page 124.</i>

1 Continuous Application Platform

Introduction

The Continuous Application Platform (CAP) consists of a number of RAPID instructions and data types that make development of continuous applications easier, faster, and more robust.

The basic idea of CAP is to separate synchronization of the robot movement from control of the application process. CAP provides a toolbox for movement synchronization, which is used by the application layer in RAPID to control the application process. By this, two things are achieved:

- The CAP core is robust and generic.
- The application layer is easy to customize.

CAP offers subscription of a variety of process events (`ICap`) that the application builder will use in the application layer to synchronize the application process to the robot movement.

This page is intentionally left blank

2 Functionality of CAP


Description of CAP

With CAP it is possible to synchronize a continuous application process with the TCP movement of a robot.

The synchronization between robot movement and application layer is handled via predefined RAPID events. These events trigger trap routines in RAPID ([Predefined events on page 23](#)), where the application builder implements the RAPID code to control the application process.

CAP enables the RAPID user to order supervision of I/O signals depending on the TCP movement of the robot ([Supervision on page 14](#)).

For synchronization of movement and process, the process is divided into different phases. For every process phase CAP can supervise a number of digital I/O signals ([Process phases on page 12](#)).

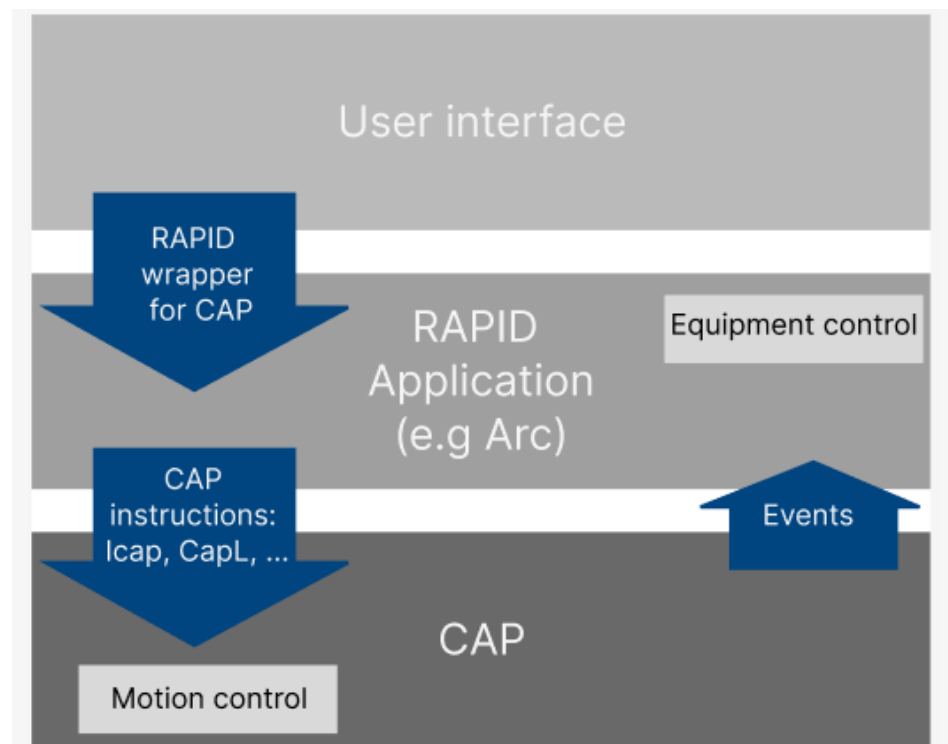

xx1200000163

Continues on next page

2 Functionality of CAP


2.1 Robot movement

2.1 Robot movement

Instructions and TCP movement

A CAP movement instruction (`CapL` or `CapC`) is similar to other movement instructions (for example, `MoveL`, `TriggL`). Compared to the `TriggL` instruction it contains also the information necessary for CAP. That information is given through the arguments `Cdata`, `Weavestart`, `Weave` and the optional parameters `\Track` or `\Corr`.

The motion synchronization is handled by the CAP process - there is one process for each RAPID task that controls a robot, which uses CAP in its application. This CAP process is active over several CAP movement instructions from the first instruction (`Cdata.first_instr = TRUE`) to the last instruction (`Cdata.last_instr = TRUE`) see [capdata - CAP data on page 110](#).

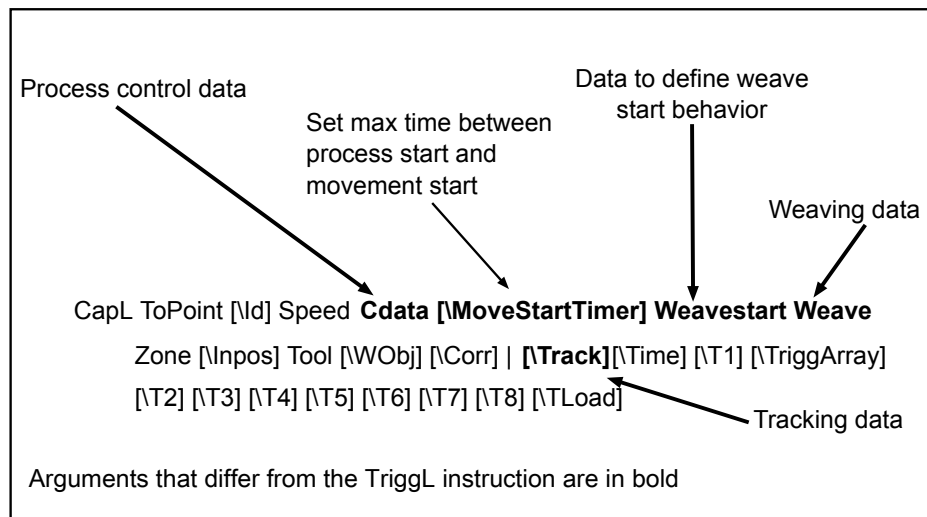

xx1200000164

During continuous execution the robot movement speed with active application process is defined by `Cdata.speed_data`. For step-wise execution (forward or backward) the robot movement speed is defined by `Speed` - CAP will in this case automatically inhibit the application process.

For more information on programming CAP movement instructions see [Programming examples on page 39](#).

Process phases

CAP provides four different process phases. The application builder uses these phases to synchronize the robot movement with the application process:

- PRE_START
- MAIN
- POST1
- POST2

Each process phases has associated supervision lists for I/O signal supervision ([Supervision on page 14](#)).

Continues on next page

During the application process phases CAP generates a number of events that the application builder connects to RAPID TRAP routines in the application layer. These TRAP routines contain application code to control the application process.

2 Functionality of CAP

2.2 Supervision

2.2 Supervision

Introduction to supervision

CAP supervises I/O signals during execution of the application process and generates supervision errors if any of the supervised signal fails.

Supervision is set up from the RAPID application level, see [SetupSuperv - Setup conditions for signal supervision in CAP on page 103](#).

Supervision phases

There are two different types of supervision phases:

- Handshake supervision.
- Status supervision.

As mentioned in [Process phases on page 12](#), the CAP application process is divided into four process phases. Each of those phases has three supervision phases:

Process phase	Start handshake supervision phase	Status supervision phase	End handshake supervision phase
PRE_START	PRE	PRE_START	END_PRE
MAIN	START	MAIN	END_MAIN
POST1	START_POST1	POST1	END_POST1
POST2	START_POST2	POST2	END_POST2


Handshake supervision

There is one handshake supervision phase prior to each status supervision phase to insure the start conditions, and another handshake supervision phase after to insure the end conditions.

It is possible to specify a time-out for handshake supervisions. If a time-out is specified and expires before all supervision conditions are fulfilled, an ERROR is generated. The time-out can also be set to last forever, that is, the CAP process will be waiting for all supervision requests to be fulfilled. The time-out times are

Continues on next page

specified in `supervtimeouts` which is part of the `capdata`. If no handshake supervision is set up that phase is skipped.

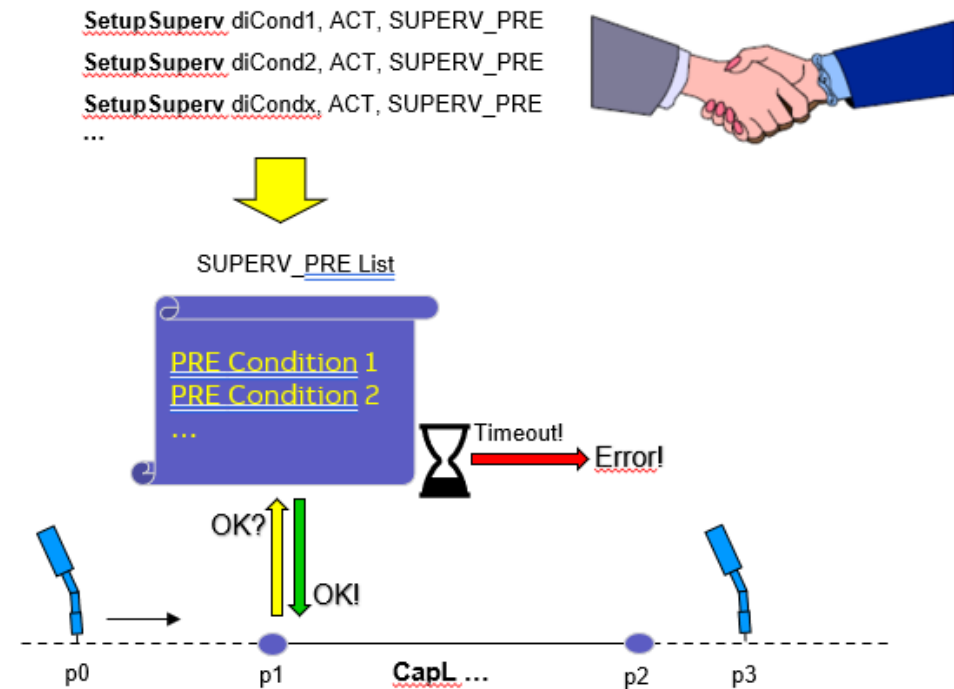

xx1200000165

These are the handshake supervision phases.

- PRE
- END_PRE
- START
- END_MAIN
- START_POST1
- END_POST1
- START_POST2
- END_POST2

Continues on next page


2 Functionality of CAP

2.2 Supervision

Continued

Status supervision

For status supervision phases all conditions that the application builder specified for it (`SetupSuperv`) are supervised (see figure below).

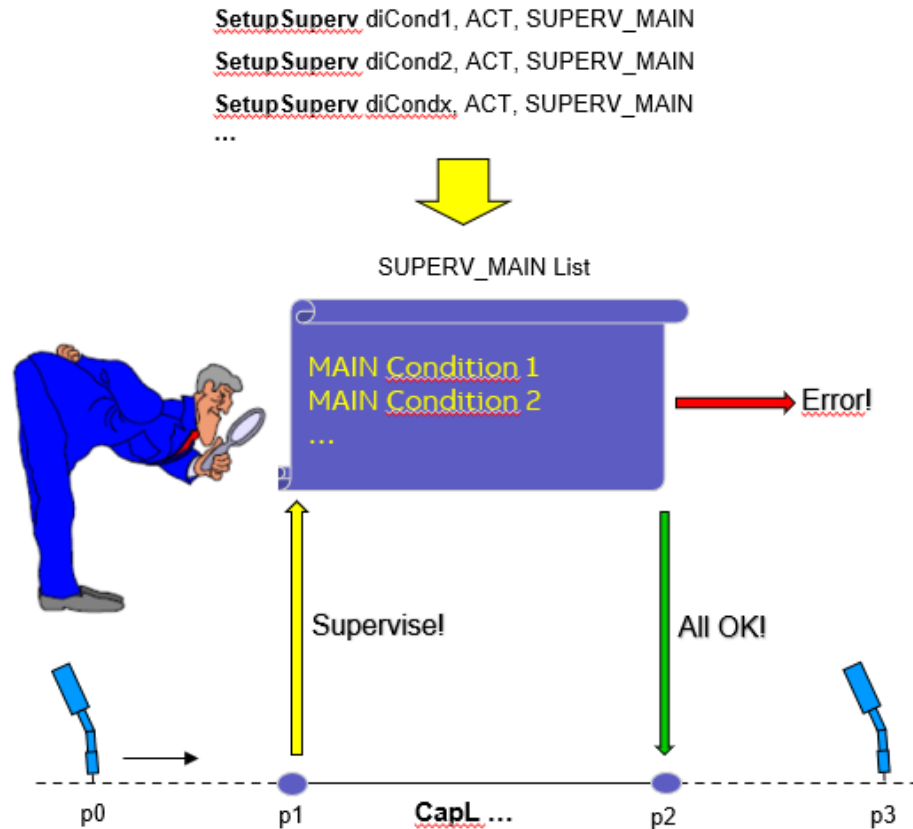


The component `proc_times` in `capdata` defines the duration of the process phases `PRE_START`, `POST1`, and `POST2`. If supervision is requested during any of these phases, the duration time for each phase must be bigger than zero; otherwise the supervision will fail. No time has to be specified for the `MAIN` phase, because this time is defined by the movement of the robot.

These are the status supervision phases.

- `PRE_START`
- `MAIN`
- `POST1`
- `POST2`

Continues on next page

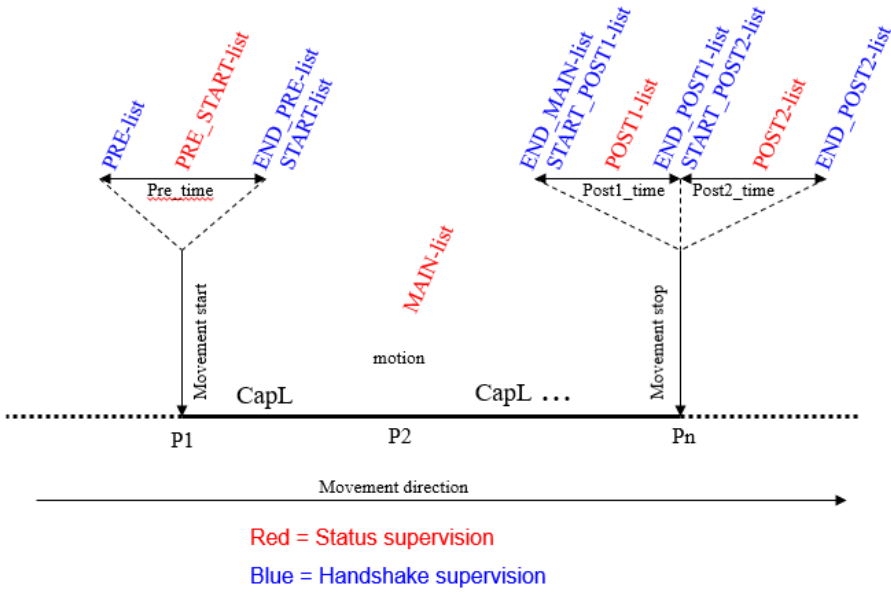

xx1200000167

2 Functionality of CAP

2.3 Supervision and process phases

2.3 Supervision and process phases

Phases

The process phases PRE_START, POST1, and POST2 are common to one single CAP process path, that is:

- the first CAP instruction that starts or restarts the CAP process is the only one that has a PRE_START supervision phase. At restart the presence of this phase depends on the setting of pre_phase in the data type `restartblkdata`. See [restartblkdata - blockdata for restart on page 137](#).
- the last CAP instruction (`last_instr = TRUE` in `capdata`) that terminates the CAP process, is the only one that has the phases POST1 and POST2. See [capdata - CAP data on page 110](#).

PRE_START phase

When the robot reaches the starting point of the path, all conditions in the PRE supervision list must be fulfilled for the process to be allowed to enter the PRE_START status supervision phase. If a time-out is specified and the conditions cannot be met within that time, the process is stopped, and an error is sent.

During the PRE_START phase all conditions defined in the PRE_START supervision list must be fulfilled. If some of these conditions fail, the process is stopped and an error message is sent.

After the PRE_START phase all conditions in the END_PRE supervision list must be fulfilled for the process to be allowed to enter the START handshake supervision phase. If a time-out is specified and the conditions cannot be met within that time, the process is stopped, and an error is sent.

When using *flying start* this phase will not be available, but the duration time can be used to create an ignition delay.

Summary

- Starts when all conditions in the PRE supervision list are met.
- Supervised by the PRE_START supervision list.
- Ends when all conditions in the END_PRE supervision list are met.

MAIN phase

All conditions in the START supervision list must be fulfilled before the application process can enter the status supervision phase MAIN. If a time-out is specified and the conditions cannot be met within that time, the application process is stopped, and an error is sent.

During the MAIN phase all conditions defined in the MAIN supervision list must be fulfilled. If some of these conditions fail, the application process is stopped and an error message is sent.

Continues on next page

All conditions in the END_MAIN supervision list must be fulfilled before the application process can end the MAIN process phase. If the conditions cannot be met within that time, the application process is stopped, and an error is sent.

Summary

- Starts when all conditions in the START supervision list are met.
- Supervised by the MAIN supervision list.
- Ends when all conditions in the END_MAIN supervision list are met.

POST1 phase

All conditions in the START_POST1 supervision list must be fulfilled for the application process to be allowed to enter the POST1 status supervision phase. If a time-out is specified for START_POST1 and the conditions cannot be met within that time, the application process is stopped, and an error is sent.

During the POST1 phase all conditions defined in the POST1 supervision list must be fulfilled. If some of these conditions fail, the application process is stopped and an error message is sent.

All conditions in the END_POST1 supervision list must be fulfilled for the application process to end the POST1 process phase. If the conditions cannot be met within that time, the application process is stopped, and an error is sent.

This phase is not available for *flying start*.

Summary

- Starts when all conditions in the START_POST1 supervision list are met.
- Supervised by the POST1 supervision list.
- Ends when all conditions in the END_POST1 supervision list are met.

POST2 phase

All conditions in the START_POST2 supervision list must be fulfilled for the application process to be allowed to enter the POST2 status supervision phase. If a time-out is specified for START_POST2 and the conditions cannot be met within that time, the application process is stopped, and an error is sent.

During the POST2 phase all conditions defined in the POST2 supervision list must be fulfilled for the application process to end the POST2 process phase, i.e. to end the CAP process. If some of these conditions fail, the application process is stopped and an error message is sent.

This phase is not available for *flying start*.

Summary

- Starts when all conditions in the START_POST2 supervision list are met.
- Supervised by the POST2 supervision list.
- Ends when all conditions in the END_POST2 supervision list are met.

2 Functionality of CAP

2.4 Motion delay

2.4 Motion delay

Description

Motion delay gives the user the possibility to delay the start of the robot movement. This can be used for example with laser cutting, where the movement must not be started before the material has been penetrated. The time for the motion delay is specified in `capspeeddata`. See [capspeeddata - Speed data for CAP on page 118](#). This functionality is not available for *flying start*.

2.5 Programming recommendations

Corner zones

A sequence of CAP movement instructions shall have corner zones (for example, z10) on the path.

For example:

```
MoveL p10,v100,fine,tool;  
CapL p20,v50,cdata,nowvst,nowv,z20,tool;  
CapC p30,p40,v50,cdata,nowvst,nowv,z20,tool;  
CapL p50,v50,cdata,nowvst,nowv,z20,tool;  
CapL p60,v50,cdata,nowvst,nowv,fine,tool;  
MoveL p70,v100,fine,tool;
```

If the last movement instruction before the first CAP instruction in a sequence starts from a corner zone, CAP will start the application process with a *flying start*.

If the last instruction of a sequence of CAP instructions ends in a corner zone, CAP will end the application process with a *flying end*.

Within a sequence of CAP instructions, avoid logical instructions that take long time. That may cause error *50024 Corner path failure* and *110013 Application process interrupted*, which means that a corner zone is converted to a fine point, the application process is interrupted and restarted with the next CAP instruction.

2 Functionality of CAP

2.6 Program execution

2.6 Program execution

Corner zones

If `last_instr` is set to `TRUE` in `capdata` in the middle of a sequence of CAP instructions, the application process is ended with all end phases, as described in [Process phases on page 12](#). Which phases are executed, depends on the presence of *flying end*. The following CAP instruction will start the process again, with all start phases as described in [Process phases on page 12](#). Which phases are executed, depends on the presence of *flying start*.


If a fine point occurs in the middle of a sequence of CAP instructions without `last_instr` set to `TRUE` in `capdata`, the application process will not be interrupted, the program execution will proceed to the next CAP instruction in advance (prefetch), and the movement will execute a corner zone `z0`.

If execution of logical instructions in the middle of a sequence of CAP instructions take so long time, that a programmed corner path is converted to a fine point (50024 *Corner path failure*), the application process is interrupted (110013 *Application process interrupted*) without executing the end phases described in [Process phases on page 12](#).

2.7 Predefined events

Description

The predefined CAP events, which occur during the CAP process, can be connected to RAPID TRAP routines. To do this, the RAPID instruction `ICap` is used before running the first CAP movement instruction. This enables the user to synchronize application process equipment with the robot movement. See [ICap - connect CAP events to trap routines on page 93](#).

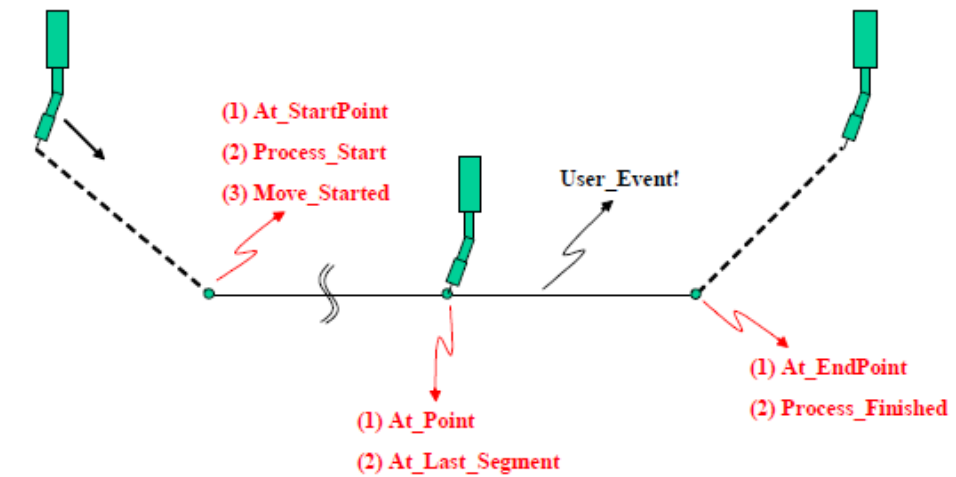

xx1200000168

2 Functionality of CAP

2.8 Coupling between phases and events

2.8 Coupling between phases and events

Phases and events

Conditional events

Events for flying start/end

	Phase	Events
PRE_START	PRE	CAP_PF_RESTART RESTART AT_RESTARTPOINT FLY_START CAP_START START_PRE PRE_STARTED
	PRE_START	
	END_PRE	END_PRE PRE_ENDED
MAIN	START	START_MAIN MAIN_STARTED
	MAIN	STOP_WEAVESTART WEAVESTART_REG MOTION_DELAY STARTSPEED_TIME MAIN_MOTION MOVE_STARTED AT_ERRORPOINT EQUIDIST CENTERLINE CAP_STOP AT_POINT NEW_INSTR LAST_SEGMENT PATH_END_POINT PROCESS_ENDPOINT FLY_END
	END_MAIN	END_MAIN MAIN_ENDED LAST_INSTR_ENDED
POST1	START_POST1	START_POST1 POST1_STARTED
	POST1	
	END_POST1	END_POST1 POST1_ENDED

Continues on next page

	Phase	Events
POST2	START_POST2	START_POST2 POST2_STARTED
	POST2	
	END_POST2	END_POST2 POST2_ENDED PROCESS_ENDED

All events are listed in alphabetical order in [ICap - connect CAP events to trap routines on page 93](#).

User events

The CAP movement instructions `CapL` and `CapC` offer the possibility to define trigger events (switches `\T1` to `\T8` and `\TriggArray`). These trigger events can be coupled to CAP movement instructions with `TriggIO`, `TriggEquip` or `TriggInt`. See [CapL - Linear CAP movement instruction on page 70](#) and [CapC - Circular CAP movement instruction on page 55](#).

2 Functionality of CAP

2.9 Error handling

2.9 Error handling

Description

Two different types of error can occur during execution of the RAPID instructions `CapL` or `CapC`:

- Recoverable error: these errors can be handled in a RAPID error handler, see error handling for [CapL - Linear CAP movement instruction on page 70](#). The system variable `ERRNO` is set and the user can check the value of `ERRNO` in the error handler, to get information about which error occurred and choose adequate recovery measures. For recoverable errors it is possible to use the RAPID instructions `RETRY`, `TRYNEXT`, `StartMoveRetry` in the error handler. An error message is generated.
- Fatal error: if such an error occurs, the robot controller has to be restarted. A fatal error message is generated.

Continues on next page

2.9.1 Recoverable errors

Introduction

Recoverable errors can be handled in a RAPID error handler. The application builder can choose to use `RETRY` or `StartMoveRetry` several times, depending on the application and the type of error. If for example, the arc in an arc welding application does not strike the first time, it makes sense to retry arc ignition several times. If these attempts are unsuccessful the error may be raised to the next level of RAPID (`RAISE`) or (only available in a `NOSTEPIN` / `NOVIEW` module) to user level (`RaiseToUser`) - see examples below.

Errors from CapL and CapC

Errors from the movement instructions `CapL` and `CapC` are CAP specific. See [CapL - Linear CAP movement instruction on page 70](#) and [CapC - Circular CAP movement instruction on page 55](#). That means, that those error codes have to be translated to application specific error codes in the error handler, to make it easier for users of that application to understand the error message. After translation of the error, the new, application specific error code is raised to the user (`RAISE new_err_code`) - see [Example 1 on page 28](#).

These errors should be converted to application specific errors, depending on the type of application that is built on top of CAP. To achieve this the `ERRNO` has to be checked in the error handler. See [Example 1 on page 28](#).

Suppose a supervised signal fails in the MAIN supervision phase. The end user should not get a general `CAP_MAIN_ERR` error. The application layer should return a more specific error, since this error depends on how CAP is used by the RAPID application. If several signals are supervised during a supervision phase, all these signals have to be checked in the application error handler to identify the error more specifically.

No error handler

If no error handler can be found or there is an error handler, but it does not handle the error - that is, none of the instructions `RETRY`, `StartMoveRetry`, `TRYNEXT`, `RETURN` or `RAISE` are present in the error handler - the active robot path is cleared. That means, that neither *regain to path* nor *backing on the path* is possible. At restart of program execution the robot movement starts from the current position of the TCP, which might result in a *path shortcut*.

Start phase supervision errors

If a START phase supervision error occurs during *flying start*, the movement is stopped at the end of the *START distance* and at restart the application process is handled like an ordinary restart after an error - with all user defined restart functionality like *scrape start*, *start delay*, etc.

Continues on next page

2 Functionality of CAP

2.9.1 Recoverable errors

Continued

Examples

Below there are two examples of different error handling type. It is recommended to implement error handling as shown in example 2, where the CAP application process survives and no extra code has to be executed in a retry from user level. See [Example 2 on page 29](#).

The `SkipWarn` instruction in the error handlers is used to prevent the CAP specific error from being sent to the error log. For an application user (for example, Arc Welding) CAP specific errors are not interesting. The errors shown in the event log shall be application specific.

Example 1

This is an example with RAPID modules that are not `NOSTEPIN` / `NOVIEW`. If the error is sent to the RAPID main routine using `RETRY`, the CAP process will exit.

A `RETRY` order in the error handler case `MY_AW_ERR_1` will continue execution and make a retry on `arcl_move_only`. After a retry in the calling RAPID routine a new CAP process will be created when the `CapL` instruction is executed and the value of `example_count1` will be 2 .

```
MODULE CAP_EXAMPLE1
VAR num example1_count:=0;
PROC main()
  MoveJ pl0,v200,fine,tool0;
  arcl_move_only pl1, v20, z20, tool0;
  ERROR
    TEST ERRNO
    CASE MY_AW_ERR_1:
      StartMoveRetry;
    CASE MY_AW_ERR_2:
      EXIT;
    DEFAULT:
      EXIT;
    ENDTEST
  ENDPROC

  LOCAL PROC arcl_move_only (robtarget ToPoint, speeddata Speed,
    zonedata Zone, PERS tooldata Tool \PERS wobjdata WObj \switch
    Corr)

    example1_count := example1_count + 1;
    CapL Topoint, Speed, IntCdata, IntWeavestart, IntWeave, Zone, Tool
      \wobj?wobj;
    ERROR
      ResetIoSignals;

    IF no_of_retries > 0 THEN
      IF err_cnt < no_of_retries THEN
        err_cnt := err_cnt + 1;
        Skipwarn; !Remove CAP error from event log err_code :=
          new_aw_errMsg();
        StartMoveRetry;
```

Continues on next page

```

ELSE
    err_cnt := 0;
    Skipwarn;
    err_code := new_aw_errMsg();
    RAISE err_code;
    !Kills the CAP process, and raises mapped error
ENDIF
ELSE
    Skipwarn;
    err_code := new_aw_errMsg();
    RAISE err_code;
    !Kills the CAP process, and raises mapped error
ENDIF
ENDPROC

FUNC errnum new_aw_errMsg (\switch W)
VAR errnum ret_code;
TEST ERRNO
CASE CAP_PRE_ERR:
    ! Check of signals here
    ret_code := AW_EQIP_ERR;
ENDTEST

RETURN ret_code;
ENDFUNC
ENDMODULE

```

Example 2

This is an example with one RAPID module CAP_EXAMPLE2, where main is located. Another module that is NOVIEW and NOSTEPIN, contains the procedure arcl_move_only, which encapsulates the process control. If the error is raised to the main routine (RaiseToUser \Continue), the CAP process is still active. The RETRY order in the error handler case MY_AW_ERR_1 will continue execution and make a retry directly on the CapL instruction. The example_count1 will be 1 when executing the CapL instruction after a retry from the user level.

**Note**

The instruction RaiseToUser can only be used in NOVIEW and/or NOSTEPIN module.

```

MODULE CAP_EXAMPLE2

VAR num example1_count:=0;

PROC main()
    MoveJ p10,v200,fine,tool0;
    arcl_move_only p11, v20, z20, tool0;

    ERROR
    TEST ERRNO

```

Continues on next page

2 Functionality of CAP

2.9.1 Recoverable errors

Continued

```
CASE MY_AW_ERR_1:
    StartMoveRetry;
CASE MY_AW_ERR_2:
    EXIT;
DEFAULT:
    EXIT;
ENDTEST
ENDPROC
ENDMODULE

MODULE ARCX_MOVE_ONLY(NOSTEPIN, NOVIEW)
LOCAL PROC arcl_move_only(robtargtarget ToPoint, speeddata Speed,
    zonedata Zone, PERS tooldata Tool \PERS wobjdata WObj \switch
    Corr)
example1_count:=example1_count + 1;

    CapLTopoint, Speed, IntCdata, IntWeavestart, IntWeave, Zone, Tool
        \wobj?wobj;
ERROR
    ResetIoSignals;

    IF no_of_retries > 0 THEN
        IF err_cnt < no_of_retries THEN
            err_cnt := err_cnt + 1;
            Skipwarn;
            err_code := new_aw_errMsg();
            StartMoveRetry;
        ELSE
            err_cnt := 0;
            Skipwarn;
            err_code := new_aw_errMsg();
            RaiseToUser \Continue \ErrorNumber:=err_code;
        ENDIF
    ELSE
        Skipwarn;
        err_code := new_aw_errMsg();
        RaiseToUser \Continue \ErrorNumber:=err_code;
    ENDIF
ENDPROC

FUNC errnum new_aw_errMsg (\switch W)
VAR errnum ret_code;
TEST ERRNO
CASE CAP_PRE_ERR:
    ! Check of signals here
    ret_code := AW_EQIP_ERR;
ENDTEST
RETURN ret_code;
ENDFUNC
ENDMODULE
```

Continues on next page

The `errnum` raised to the calling routine `arcl_move_only` is `AW_EQIP_ERR`, that is, the CAP error `CAP_PRE_ERR` is replaced by `AW_EQIP_ERR` and the CAP error will not appear in the error log (topic *Process*).

2 Functionality of CAP

2.9.2 Writing a general error handler

2.9.2 Writing a general error handler

General error handlers

For a CAP system with one robot you can write an error handler as shown in examples 1 and 2.

For a MultiMove system, errors must be handled as in example 3 below.

The error handlers for all tasks executing synchronized motion must contain the following:

For recoverable errors handled application internally:

```
StorePath;  
! Here you may have some application specific actions/movements  
RestoPath;  
StartMoveRetry;
```

For errors handled by the user:

```
RaiseToUser \Continue \ErrorNumber:=error_code;
```

Not all instructions need to be in all tasks, but some are important. **RETRY** must be replaced by **StartMoveRetry** in all RAPID tasks if running in synchronized mode. **StartMoveRetry** restarts all path processes. For a synchronized task using the instruction **MoveExtJ** or other move instructions like **TriggL** or **MoveL**, **StartMoveRetry** enables that mechanical unit to move again.

Example 3

This example only shows the error handler.

```
IF err_cnt < no_of_retries THEN  
  err_cnt := err_cnt + 1;  
  ! Suppress CAP error message  
  Skipwarn;  
  ! Remap CAP error to application specific error  
  err_code := new_aw_errMsg();  
  ! Store current movement information  
  StorePath;  
  
  ! Here you may have some application specific actions/movements  
  
  ! Restore movement information stored with previous StorePath  
  RestoPath;  
  ! Restart the movement  
  StartMoveRetry;  
ELSE  
  err_cnt := 0;  
  ! Suppress CAP error message  
  Skipwarn;  
  ! Remap CAP error to application specific error  
  err_code := new_aw_errMsg();  
  ! Raise the application specific error to the RAPID user level  
  RaiseToUser \Continue \ErrorNumber:=err_code; !***  
ENDIF
```

Continues on next page



Note

`StartMoveRetry` is an instruction that combines `StartMove` and `RETRY` in one single step. A `StartMove` will order a restart of movement for the mechanical unit controlled by the executing RAPID task. It is the `RETRY` that makes RAPID execution leave the error handler and continue execution where the error originally occurred

RaiseToUser

`RaiseToUser` can be used with `\Continue` or `\Breakoff`.

- `\Continue` will raise the error to user level (first level that is not in a NOVIEW module). A `RETRY` from that level will start the instruction that failed exactly where the error occurred - that is, it will not re-run the NOVIEW procedure as a whole.
- `\Breakoff` will rerun the instruction where the program pointer is on user level.

If `RaiseToUser` is used, the user itself has to restart or enable restart of robot movement by using:

- `StartMove` or `StartMoveRetry` will restart movement as soon as all synchronized robots have sent their restart orders.
- `StartMoveReset` enables manual restart (start button on the FlexPendant).

2 Functionality of CAP

2.10 Restart

2.10 Restart

Description

If the execution of a `CapL/CapC` instruction is stopped due to a recoverable error or a program stop, it is possible to let the robot back a certain distance on the programmed path before restart of the process. The backing distance has to be specified in `capdata`, see [capdata - CAP data on page 110](#).

Sensors

Sensors can be used together with CAP. The different sensor systems implemented are At-PointTracker (for example, serial *WeldGuide*) and Look-Ahead-Tracker (for example, laser tracker). See also *Application manual - Controller software IRC5* as well as [CapL - Linear CAP movement instruction on page 70](#), [CapC - Circular CAP movement instruction on page 55](#), and [captrackdata - CAP track data on page 121](#).

Units

In CAP the following units are used:

length	mm
time	s
speed	mm/s
angle	degree

Tuning

Using the RAPID instruction `CapRefresh`, it is possible to change the active value of (tune) the following data during execution:

`weavedata` components:

- active
- width
- height
- bias

`weavestartdata` components:

- active

`capdata` components:

- `speed_data.main`
- `restart_dist`

Example

The example changes the main speed and weave within a TRAP.

```
VAR intnum intno0;

PROC main()
  IDelete intno0;
  CONNECT intno0 WITH MainMotionTrp;
```

Continues on next page

```
ICap intno0, MAIN_MOTION;  
CapL pll, v100, cdata1, weavestart, weave, fine, tool0;  
ENDPROC  
  
TRAP MainMotionTrp  
  cdata1.speed_data.main := 23;  
  weave.width := 5;  
ENDTRAP
```



Note

In this example the TRAP-routine is inside the main module. The recommendation is that all TRAP-routines should be executed by a background task.

2 Functionality of CAP

2.11 System event routines

2.11 System event routines

Introduction

CAP is not aware of any process equipment, i.e. the control of process equipment has to be handled in TRAP routines connected to CAP events set up with `ICap`, see [ICap - connect CAP events to trap routines on page 93](#). It is also possible, but not recommended, to use shelf-hooks (stop-, start-, restart-, ...) to activate and deactivate process equipment.

Any error (fatal or recoverable) or RAPID program stop with an active CAP application process, generates the `ICap` event `CAP_STOP`. CAP always demands that a TRAP routine is connected to `CAP_STOP`. This TRAP routine has to deactivate external equipment. If anything unexpected happens in the controller software, the stop shelf on system level takes the system to a fail-safe state, but it does not stop the application process. Keep in mind that TRAP execution is stopped when RAPID execution of a NORMAL task is stopped. Therefore the TRAP connected to `CAP_STOP` has to be placed in a STATIC or SEMISTATIC task.

Exceptions

Not all errors can be handled in shelf-hooks or in the TRAP routine connected to `CAP_STOP`. If the system, for some reason, is forced to system failure state, all execution of RAPID code is immediately stopped and TRAP routines might not be executed due to high load in the controller. To handle this situation, CAP offers the possibility to register digital signals together with a signal state (0 or 1) using the RAPID instruction `CapCondSetDO`. At any RAPID execution stop, CAP will set all signals that were registered, to the respective registered state. It is highly recommended to register signals in CAP that stop the application process.

2.12 Limitations

Limitations

- Execution of RAPID instructions that take long time (e.g. writing to file, `WaitTime`, ...) between CAP movement instructions (`CapL`, `CapC`) will delay the execution of the next movement instruction. That may cause corner path failure, stopping the movement of the robot for a short time, which may be fatal for the process (for example, arc welding).
- CAP does not support error recovery with long jump.

This page is intentionally left blank

3 Programming examples


3.1 Laser cutting example

Requirements

- a slot is to be cut into a number of metal sheets with a laser
- accuracy *is not* critical at the starting point of the slot
- accuracy *is* critical at the finishing point of the slot
- the application is time critical, i.e. it should be as fast as possible

CAP setup to meet the requirements

- *flying start*: the robot can move with speed past the start point (P1) and start the process on the fly between point P1 and Pstart.
- *normal end*: the robot must cut all the way to the end point (P2) and stop before turning off the laser and moving on to next cycle.
- In order to assure the quality of the cuts the process needs to be started at the latest one second after passing Pstart. Three seconds are given for ending the process.

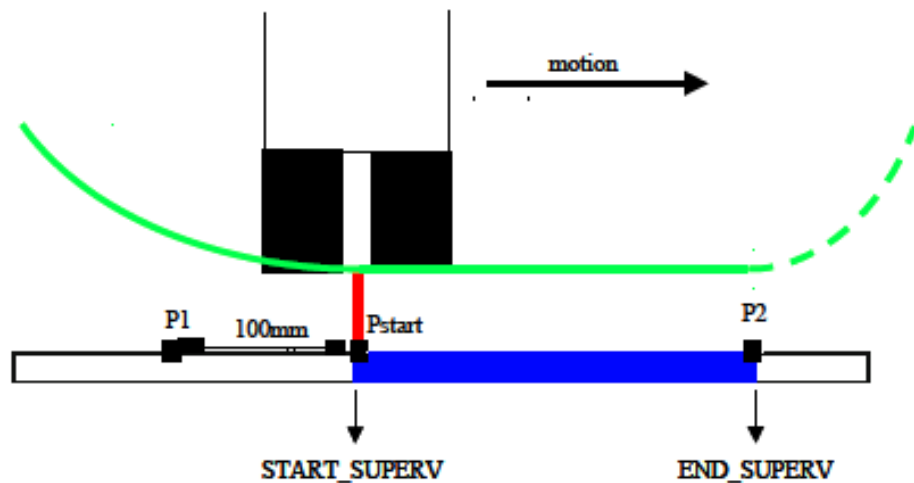

xx1200000172

3 Programming examples

3.2 Step by step

3.2 Step by step

Set up CAP events

First you need to set up the necessary CAP events. For this application a minimum of two events are needed:

- **start the application process:** SUPERV_START generated at position *Pstart*
- **stop the application process:** SUPERV_END_MAIN generated at the end position *P2*

```
VAR intnum start_intno:=0;
VAR intnum end_intno:=1;

TRAP start_trap
  SetDo diLaserOn, high;
ENDTRAP

TRAP end_trap
  SetDo diLaserOn, low;
ENDTRAP

IDelete start_intno;
IDelete end_intno;
CONNECT start_intno WITH start_trap;
CONNECT end_intno WITH end_trap;
ICap start_intno, START_MAIN;
ICap end_intno, END_MAIN;
```

Set up supervision

In this case only one signal, *diLaserOn*, needs to be supervised, but in three different process phases:

- 1 *diLaserOn* needs to go high (ACT) in the START phase.
- 2 *diLaserOn* needs to stay high (i.e. supervision shall trigger on change from ACT to PAS) during the MAIN phase.
- 3 *diLaserOn* needs to go low (PAS) in the END_MAIN phase.

That means that we need to setup the handshake supervisions with time-out timers for the phases START and END_MAIN. We need also a status supervision during MAIN.

```
SetupSuperv diLaserOn, ACT, SUPERV_START;
SetupSuperv diLaserOn, ACT, SUPERV_MAIN;
SetupSuperv diLaserOn, PAS, SUPERV_END_MAIN;

capdata.start_fly_point.process_dist := 0;
capdata.start_fly_point.distance := 100;
capdata.sup_timeouts.start_cond := 1;
capdata.end_fly_point.process_dist := 0;
capdata.end_fly_point.distance := 0;
capdata.sup_timeouts.end_main_cond := 3;
```

Continues on next page

The main program

The user might use an encapsulation of `CapL`, we call it `CutL` in the following way:

```
PROC CUTL (...)  
  MoveL p1, v100, z10,...  
  CapL p2, v100, cdata, startweave, weave, fine, tool0, ...  
  MoveL px, ...  
ENDPROC
```

This page is intentionally left blank

4 RAPID references

4.1 Instructions

4.1.1 CapAPTrSetup - Set up an At-Point-Tracker

Usage

CapAPTrSetup (*Set up an At-Point-Tracker*) is used to set up an At-Point-Tracker type of sensor, for example, *WeldGuide* or *AWC*.

The controller communicates with the sensors over serial or ethernet channels using one of the supported transport protocols (RTP1, SOCKETDEV or LTAPPTCP).

Basic example

SIO.cfg:

```
COM_TRP:
-Name "wg:" -Type "SOCKETDEV" -RemoteAddress "192.168.1255.101"
-RemotePort "6344"
```

RAPID code:

```
! Define variable numbers
CONST num SensorOn := 6;
CONST num XCoord := 8;
CONST num YCoord := 9;
CONST num ZCoord := 10;
VAR pos SensorPos;

! Setup a Weldguide
CapAPTrSetup "wg:", do_left, 80, do_right, 80;
```

Arguments

```
CapAPTrSetup device DoLeft LevelLeft DoRight LevelRight [\LogFile]
[\LogSize]
```

device

Data type: string

The I/O device name configured in sio.cfg for the sensor used.

DoLeft

Data type: signaldo

Digital output signal for weave synchronization on the left weave cycle.

LevelLeft

Data type: num

The coordination position on the left side of the weaving pattern. The value specified is a percentage of the width on the left of the weaving center. When weaving is carried out beyond this point, a digital output signal is automatically set high (provided the signal is defined).

Continues on next page


4 RAPID references

4.1.1 CapAPTrSetup - Set up an At-Point-Tracker

Continuous Application Platform (CAP)

Continued

This type of coordination can be used for seam tracking using Through-the-Arc Tracker.

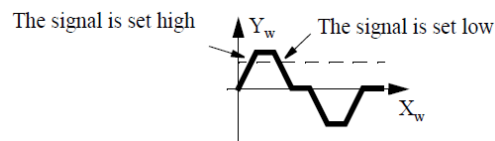

xx1200000178

DoRight

Data type: `signaldo`


Digital output signal for weave synchronization on the right weave cycle.

LevelRight

Data type: `num`

The coordination position on the right side of the weaving pattern. The value specified is a percentage of the width on the right of the weaving center. When weaving is carried out beyond this point, a digital output signal is automatically set high (provided the signal is defined).

This type of coordination can be used for seam tracking using Through-the-Arc Tracker.

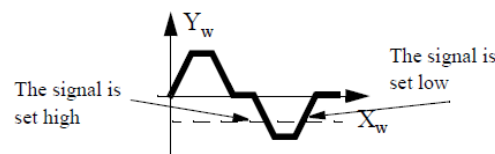

xx1200000179

[LogFile]

Data type: `string`

Name of tracklog log file.

[LogSize]

Data type: `num`

Size of the tracklog ring buffer, that is the number of sensor measurements that can be buffered during tracking.

Default value: 1000.

Syntax

```
CapAPTrSetup
[device ':='] < expression (IN) of string> ','
[DoLeft ':='] < expression (IN) of signaldo> ','
[LevelLeft ':='] < expression (IN) of num> ','
[DoRight ':='] < expression (IN) of signaldo> ','
[LevelRight ':='] < expression (IN) of num>
['\LogFile ':='] < expression (IN) of string>
['\LogSize ':='] < expression (IN) of num> ';'

```

Continues on next page

4.1.1 CapAPTrSetup - Set up an At-Point-Tracker Continuous Application Platform (CAP) Continued

Related information

	Described in:
<i>Sensor Interface</i>	<i>Application manual - Controller software IRC5</i>

4 RAPID references

4.1.2 CapAPTrSetupAI - Setup an At-Point-Tracker controlled by analog input signals *Continuous Application Platform (CAP)*

4.1.2 CapAPTrSetupAI - Setup an At-Point-Tracker controlled by analog input signals

Usage

CapAPTrSetupAI is used to setup an At-Point-Tracker controlled by analog input signals.

Basic examples

The following example illustrates the instruction CapAPTrSetupAI.

Example 1

```
TASK PERS capdata cData:=[.....];
TASK PERS weavestartdata wsData:=[.....];
TASK PERS capweavedata wData:=[.....];
TASK PERS captrackdata trackData:=[ "ANALOG_TRACKER",.....];

VAR capaptrreferencedata referenceData:=[2,2,1,1,0.1,0.1];
VAR signalai ai_y;
VAR signalai ai_z;

AliasIO realsignal_y, ai_y;
AliasIO realsignal_z, ai_z;
CapAPTrSetupAI ai_y, ai_z, referenceData;

CapL p1, v200, cData, wsData, wData , fine, tWeldGun
    \Track:=trackData;
```

Arguments

```
CapAPTrSetupAI ai_y, ai_z, ReferenceData [\MaxIncrCorr]
    [\WarnMaxCorr] [\Filter] [\SampleTime] [\Logfile] [\LogSize]
    [\LatestCorr] [\AccCorr]
```

ai_y

Data type: signalai

Analog input signal used as process position for the y-direction.

ai_z

Data type: signalai

Analog input signal used as process position for the z-direction.

ReferenceData

Data type: capaptrreferencedata

Setup data used for the correction regulator loop.

MaxIncrCorr

Data type: num

Maximum incremental correction allowed (in mm).

If the incremental TCP correction is larger than \MaxIncrCorr and \WarnMaxCorr, the robot will continue its path but the applied incremental correction will not exceed

Continues on next page

4.1.2 CapAPTrSetupAI - Setup an At-Point-Tracker controlled by analog input signals

Continuous Application Platform (CAP)
Continued

`\MaxIncCorr`. If `\WarnMaxCorr` is not specified, a track error is reported and the program execution is stopped.

`WarnMaxCorr`

Data type: `switch`

If this switch is present the program execution is not interrupted when the limit for maximum correction is exceeded, specified in `\MaxIncCorr`. Only a warning is sent.

`Filter`

Data type: `num`

Size of the reference sample data filter. A value between 1 and 15 is allowed, the default value is 1.

`SampleTime`

Data type: `num`

Sample time in milliseconds for the correction loop. The value is rounded to a multiple of 24. The minimum value allowed is 24, and the default value is 24.

`LogFile`

Data type: `string`

The name of the tracklog log file. The log file is placed in the HOME directory of the system.

`LogSize`

Data type: `num`

The size of the tracklog ring buffer that is the number of sensor measurements that can be buffered during tracking.

Default value: 1000.

`LatestCorr`

Data type: `pos`

Size of the latest added correction (in mm).

`AccCorr`

Data type: `pos`

Size of the total accumulated correction added (in mm).

Syntax

```
CapAPTrSetupAI
[aoi_y ':='] <expression (IN) of signalai> ',',
[ai_z ':='] <expression (IN) of signalai> ',',
[ReferenceData ':='] <expression (IN) of capaptrreferencedata>
',',
[\MaxIncrCorr ':='] <expression (IN) of num> ',',
[\WarnMaxCorr ':='] <expression (IN) of switch> ',',
[\Filter ':='] <expression (IN) of num> ',',
[\SampleTime ':='] <expression (IN) of num> ',',
[\LogFile ':='] <expression (IN) of string> ',',
```

Continues on next page

4 RAPID references

4.1.2 CapAPTrSetupAI - Setup an At-Point-Tracker controlled by analog input signals

Continuous Application Platform (CAP)

Continued

```
[\\LogSize ':='] <expression (IN) of num> ','  
[\\LatestCorr ':='] <expression (PERS) of pos> ','  
[\\AccCorr ':='] <expression (PERS) of pos> ';' 
```

Related information

For information about	See
Instruction CapAPTrSetupAO	CapAPTrSetupAO - Setup an At-Point-Tracker controlled by analog output signals on page 49
Instruction CapAPTrSetupPERS	CapAPTrSetupPERS - Setup an At-Point-Tracker controlled by persistent variables on page 52
Data type capaptrreferencedata	capaptrreferencedata - Variable setup data for At-Point-Tracker on page 108
Sensor Interface	Application manual - Controller software IRC5

4.1.3 CapAPTrSetupAO - Setup an At-Point-Tracker controlled by analog output signals

Continuous Application Platform (CAP)

4.1.3 CapAPTrSetupAO - Setup an At-Point-Tracker controlled by analog output signals

Usage

CapAPTrSetupAO is used to setup an At-Point-Tracker controlled by analog output signals.

Basic examples

The following example illustrates the instruction CapAPTrSetupAO.

Example 1

```
TASK PERS capdata cData:=[.....];
TASK PERS weavestartdata wsData:=[.....];
TASK PERS capweavedata wData:=[.....];
TASK PERS captrackdata trackData:=["ANALOG_TRACKER",.....];

VAR capaptrreferencedata referenceData:=[2,2,1,1,0.1,0.1];
VAR signalao ao_y;
VAR signalao ao_z;

AliasIO realsignal_y, ao_y;
AliasIO realsignal_z, ao_z;
CapAPTrSetupAO ao_y, ao_z, referenceData;

CapL pl, v200, cData, wsData, wData , fine, tWeldGun
  \Track:=trackData;
```

Arguments

```
CapAPTrSetupAO ao_y, ao_z, ReferenceData [\MaxIncrCorr]
[\WarnMaxCorr] [\Filter] [\SampleTime] [\Logfile] [\LogSize]
[\LatestCorr] [\AccCorr]
```

ao_y

Data type: signalao

Analog output signal used as process position for the y-direction.

ao_z

Data type: signalao

Analog output signal used as process position for the z-direction.

ReferenceData

Data type: capaptrreferencedata

Setup data used for the correction regulator loop.

MaxIncrCorr

Data type: num

Maximum incremental correction allowed (in mm).

If the incremental TCP correction is larger than \MaxIncrCorr and \WarnMaxCorr, the robot will continue its path but the applied incremental correction will not exceed

Continues on next page

4 RAPID references

4.1.3 CapAPTrSetupAO - Setup an At-Point-Tracker controlled by analog output signals

Continuous Application Platform (CAP)

Continued

`\MaxIncrCorr`. If `\WarnMaxCorr` is not specified, a track error is reported and the program execution is stopped.

`WarnMaxCorr`

Data type: `switch`

If this switch is present the program execution is not interrupted when the limit for maximum correction is exceeded, specified in `\MaxIncrCorr`. Only a warning is sent.

`Filter`

Data type: `num`

Size of the reference sample data filter. A value between 1 and 15 is allowed, the default value is 1.

`SampleTime`

Data type: `num`

Sample time in milliseconds for the correction loop. The value is rounded to a multiple of 24. The minimum value allowed is 24, and the default value is 24.

`LogFile`

Data type: `string`

The name of the tracklog log file. The log file is placed in the HOME directory of the system.

`LogSize`

Data type: `num`

The size of the tracklog ring buffer that is the number of sensor measurements that can be buffered during tracking.

Default value: 1000.

`LatestCorr`

Data type: `pos`

Size of the latest added correction (in mm).

`AccCorr`

Data type: `pos`

Size of the total accumulated correction added (in mm).

Syntax

```
CapAPTrSetupAO
[ao_y ':='] <expression (IN) of signalao> ','
[ao_z ':='] <expression (IN) of signalao> ','
[ReferenceData ':='] <expression (IN) of capaptrreferencedata>
','
[\MaxIncrCorr ':='] <expression (IN) of num> ','
[\WarnMaxCorr ':='] <expression (IN) of switch> ','
[\Filter ':='] <expression (IN) of num> ','
[\SampleTime ':='] <expression (IN) of num> ','
[\LogFile ':='] <expression (IN) of string> ','
```

Continues on next page

4.1.3 CapAPTrSetupAO - Setup an At-Point-Tracker controlled by analog output signals

*Continuous Application Platform (CAP)**Continued*

```
[\\LogSize ':='] <expression (IN) of num> ','  
[\\LatestCorr ':='] <expression (PERS) of pos> ','  
[\\AccCorr ':='] <expression (PERS) of pos> ';' 
```

Related information

For information about	See
Instruction CapAPTrSetupAI	CapAPTrSetupAI - Setup an At-Point-Tracker controlled by analog input signals on page 46
Instruction CapAPTrSetupPERS	CapAPTrSetupPERS - Setup an At-Point-Tracker controlled by persistent variables on page 52
Data type capaptrreferencedata	capaptrreferencedata - Variable setup data for At-Point-Tracker on page 108
Sensor Interface	Application manual - Controller software IRC5

4 RAPID references

4.1.4 CapAPTrSetupPERS - Setup an At-Point-Tracker controlled by persistent variables *Continuous Application Platform (CAP)*

4.1.4 CapAPTrSetupPERS - Setup an At-Point-Tracker controlled by persistent variables

Usage

CapAPTrSetupPERS is used to setup an At-Point-Tracker controlled by persistent variables.

Basic examples

The following example illustrates the instruction CapAPTrSetupPERS.

Example 1

```
TASK PERS capdata cData:=[.....];
TASK PERS weavestartdata wsData:=[.....];
TASK PERS capweavedata wData:=[.....];
TASK PERS captrackdata trackData:=[ "ANALOG_TRACKER",.....];
PERS pos corr:=[0,-0.05,-0.025];

VAR capaptrreferencedata referenceData:=[2,2,1,1,0.1,0.1];

main()
IDelete intnol;
CONNECT intnol WITH trOffset;
CapAPTRSetupPERS corr.y, corr.z, referenceData;

ITimer 1,intnol;
CapL pl, v200, cData, wsData, wData , fine,
      tWeldGun\Track:=trackData;
ENDPROC

TRAP trOffset
  corr.y := referenceData.reference_y +- .....;
  corr.z := referenceData.reference_z +- .....;
ENDTRAP
```

Arguments

```
CapAPTrSetupPERS var_y, var_z, ReferenceData [\ResetToReference]
              [\MaxIncrCorr] [\WarnMaxCorr] [\Filter] [\SampleTime]
              [\Logfile] [\LogSize] [\LatestCorr] [\AccCorr]
```

var_y

Data type: num

Persistent data used as process position for the y-direction.

var_z

Data type: signalai

Persistent data used as process position for the z-direction.

ReferenceData

Data type: capaptrreferencedata

Setup data used for the correction regulator loop.

Continues on next page

4.1.4 CapAPTrSetupPERS - Setup an At-Point-Tracker controlled by persistent variables

Continuous Application Platform (CAP)

Continued

`[\ResetToReference]`**Data type:** `switch`

This switch enables resetting the value of the persistent correction data `var_y` and `var_z` to the reference value. If `var_y` and `var_z` are updated at low frequency, for example, using RAPID code, this switch is used to avoid drifting of the path correction.

`MaxIncCorr`**Data type:** `num`

Maximum incremental correction allowed (in mm).

If the incremental TCP correction is larger than `\MaxIncCorr` and `\WarnMaxCorr`, the robot will continue its path but the applied incremental correction will not exceed `\MaxIncCorr`. If `\WarnMaxCorr` is not specified, a track error is reported and the program execution is stopped.

`WarnMaxCorr`**Data type:** `switch`

If this switch is present the program execution is not interrupted when the limit for maximum correction is exceeded, specified in `\MaxIncCorr`. Only a warning is sent.

`Filter`**Data type:** `num`

Size of the reference sample data filter. A value between 1 and 15 is allowed, the default value is 1.

`SampleTime`**Data type:** `num`

Sample time in milliseconds for the correction loop. The value is rounded to a multiple of 24. The minimum value allowed is 24, and the default value is 24.

`LogFile`**Data type:** `string`

The name of the tracklog log file. The log file is placed in the HOME directory of the system.

`LogSize`**Data type:** `num`

The size of the tracklog ring buffer that is the number of sensor measurements that can be buffered during tracking.

Default value: 1000.

`LatestCorr`**Data type:** `pos`

Size of the latest added correction (in mm).

`AccCorr`**Data type:** `pos`*Continues on next page*

4 RAPID references

4.1.4 CapAPTrSetupPERS - Setup an At-Point-Tracker controlled by persistent variables

Continuous Application Platform (CAP)

Continued

Size of the total accumulated correction added (in mm).

Syntax

```
CapAPTrSetupPERS
[var_y ':='] <expression (PERS) of num> ','
[var_z ':='] <expression (PERS) of vnum> ','
[ReferenceData ':='] <expression (IN) of capaptrreferencedata>
','
[\ResetToReference ':='] <expression (IN) of switch> ','
[\MaxIncrCorr ':='] <expression (IN) of num> ','
[\WarnMaxCorr ':='] <expression (IN) of switch> ','
[\Filter ':='] <expression (IN) of num> ','
[\SampleTime ':='] <expression (IN) of num> ','
[\LogFile ':='] <expression (IN) of string> ','
[\LogSize ':='] <expression (IN) of num> ','
[\LatestCorr ':='] <expression (PERS) of pos> ','
[\AccCorr ':='] <expression (PERS) of pos> ';'

```

Related information

For information about	See
Instruction CapAPTrSetupAI	CapAPTrSetupAI - Setup an At-Point-Tracker controlled by analog input signals on page 46
Instruction CapAPTrSetupAO	CapAPTrSetupAO - Setup an At-Point-Tracker controlled by analog output signals on page 49
Data type capaptrreferencedata	capaptrreferencedata - Variable setup data for At-Point-Tracker on page 108
Sensor Interface	Application manual - Controller software IRC5

4.1.5 CapC - Circular CAP movement instruction

Continuous Application Platform (CAP)

4.1.5 CapC - Circular CAP movement instruction

Usage

CapC is used to move the tool center point (TCP) along a circular path to a given destination and at the same time control a continuous process. Furthermore it is possible to connect up to eight events to CapC. The events are defined using the instructions TriggRampAO, TriggIO, TriggEquip, TriggInt, TriggCheckIO, or TriggSpeed.

Basic examples

Example 1

Circular movements with CapC.

```
CapC cirp, p1, v100, cdata, weavestart, weave, fine, gun1;
```

The TCP of the tool, gun1, is moved circularly to the fine point p1 with speed defined in cdata.

Example 2

Circular movement with user event and CAP event.


```
VAR intnum start_intno;
...
PROC main()
  VAR trigndata gunon;

  IDelete start_intno;
  CONNECT start_intno WITH start_trap;
  ICap start_intno, CAP_START;
  TriggIO gunon, 0 \Start \DOP:=gun, on;

  MoveJ p1, v500, z50, gun1;
  CapC p2,p3,v500,cdata,wstart,w1,fine,gun1,\T1:=gunon;
ENDPROC

TRAP start_trap
  ! This routine will be executed when the event CAP_START is
  reported
ENDTRAP
```

The digital output signal gun is set when the robot's TCP passes the midpoint of the corner path of the point p1. The trap routine start_trap is executed when the CAP process is starting.

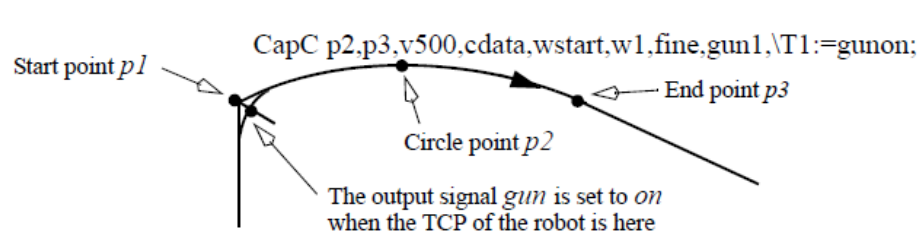

xx1200000174

Continues on next page

4 RAPID references

4.1.5 CapC - Circular CAP movement instruction

Continuous Application Platform (CAP)

Continued

Arguments

```
CapC Cirpoint ToPoint [\ID] Speed Cdata [\MoveStartTimer] Weavestart
      Weave Zone [\Inpos] Tool [\WObj] [\Track] | [\Corr]
      [\TrackOffsetFrame] [\PreProcessTracking] [\Time] [\T1] [\T2]
      [\T3] [\T4] [\T5] [\T6] [\T7] [\T8] [\TLoad]
```

CirPoint

Data type: robtarget

The circle point of the robot. The circle point is a position on the circle between the start point and the destination point. To obtain the best accuracy it should be placed about halfway between the start and destination points. If it is placed too close to the start or destination point, the robot may give a warning. The circle point is defined as a named position or stored directly in the instruction (marked with an * in the instruction). The position of the external axes are not used.

ToPoint

Data type: robtarget

The destination point of the robot and external axes. It is defined as a named position or stored directly in the instruction (marked with an * in the instruction).

[\ID]

Synchronization id

Data type: identno

The argument [\ID] is mandatory in *MultiMove* systems, if the movement is synchronized or coordinated synchronized. This argument is not allowed in any other case. The specified id number must be the same in all the cooperating program tasks. By using the id number the movements are not mixed up at the runtime.

Speed

Data type: speeddata

The speed data that applies to movements. Speed data defines the velocity of the TCP, the tool reorientation, and external axes.

Cdata

(CAP process Data)

Data type: capdata

CAP process data, see [capdata - CAP data on page 110](#) for a detailed description.

[\Movestart_timer]

(Time in s)

Data type: num

Upper limit for the time difference between the order of the process start and the actual start of the robot's TCP movement in a MultiMove system in synchronized mode.

Weavestart

(Weavestart Data)

Continues on next page

Data type: weavestartdata

Weave start data for the CAP process, see [weavestartdata - weave start data on page 141](#) for a detailed description.

Weave

(Weave Data)

Data type: capweavedata

Weaving data for the CAP process, see [capweavedata - Weavedata for CAP on page 126](#) for a detailed description.

Zone

Data type: zonedata

Zone data for the movement. Zone data describes the size of the generated corner path.

[\Inpos]

In position

Data type: stoppoint data

This argument is used to specify the convergence criteria for the position of the robot's TCP in the stop point. The stop point data substitutes the zone specified in the `Zone` parameter.

Tool

Data type: tooldata

The tool in use when the robot moves. The tool center point is the point that is moved to the specified destination point.

[\WObj]

Work Object

Data type: wobjdata

The work object (object coordinate system) to which the robot position in the instruction is related.

This argument can be omitted and if it is then the position is related to the world coordinate system. If, on the other hand, a stationary TCP or coordinated external axes are used this argument must be specified in order for a circle relative to the work object to be executed.

[\Track]

(Track Sensor Data)

Data type: captrackdata

This data structure contains data needed for use of path correction generating sensors together with `CapC`, see [captrackdata - CAP track data on page 121](#). This argument is not allowed together with the argument `\Corr`.

[\Corr]

Correction

Data type: switch

Continues on next page

4 RAPID references

4.1.5 CapC - Circular CAP movement instruction

Continuous Application Platform (CAP)

Continued

Correction data written to a corrections entry by the instruction `CorrWrite` will be added to the path and destination position if this argument is present.

The RobotWare option *Path Offset* is required when using this argument.

[`\TrackOffsetFrame`]

Data type: `captrackoffsframe`

This optional argument is used to select the frame in which the optical tracking offset (`seamoffs_y` and `seamoffs_z`) is applied.

[`\PreProcessTracking`]

Data type: `switch`

This argument is effective only if `first_instruction` is set to `TRUE` and the `\Track` argument is present.

This argument activates *Pre Process Tracking*, which means that the robot will be tracking only, without process, during that CapX instruction. Thereby sensor data are available for successful tracking right off the start of the path with process, e.g. welding.

For more information see *Operating manual - Tracking and searching with optical sensors*.

[`\Time`]

Data type: `num`

This argument is used to specify the total time in seconds during which the robot and additional axes move. It is then substituted for the corresponding speed data.

[`\T1`]

Trigg 1

Data type: `triggdata`

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[`\T2`]

Trigg 2

Data type: `triggdata`

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[`\T3`]

Trigg 3

Data type: `triggdata`

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

Continues on next page

[\T4]

Trigg 4

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions TriggIO, TriggEquip, TriggInt, TriggCheckIO, TriggSpeed, or TriggRampAO.

[\T5]

Trigg 5

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions TriggIO, TriggEquip, TriggInt, TriggCheckIO, TriggSpeed, or TriggRampAO.

[\T6]

Trigg 6

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions TriggIO, TriggEquip, TriggInt, TriggCheckIO, TriggSpeed, or TriggRampAO.

[\T8]

Trigg 8

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions TriggIO, TriggEquip, TriggInt, TriggCheckIO, TriggSpeed, or TriggRampAO.

[\T8]

Trigg 8

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions TriggIO, TriggEquip, TriggInt, TriggCheckIO, TriggSpeed, or TriggRampAO.

[\TLoad]

Total load

Data type: loaddata

The \TLoad argument describes the total load used in the movement. The total load is the tool load together with the payload that the tool is carrying. If the \TLoad argument is used, then the loaddata in the current tooldata is not considered.

If the \TLoad argument is set to load0, then the \TLoad argument is not considered and the loaddata in the current tooldata is used instead.

To be able to use the \TLoad argument it is necessary to set the value of the system parameter ModalPayloadMode to 0. If ModalPayloadMode is set to 0, it is no longer possible to use the instruction GripLoad.

Continues on next page

4 RAPID references

4.1.5 CapC - Circular CAP movement instruction

Continuous Application Platform (CAP)

Continued

The total load can be identified with the service routine `LoadIdentify`. If the system parameter `ModalPayLoadMode` is set to 0, the operator has the possibility to copy the `loaddata` from the tool to an existing or new `loaddata` persistent variable when running the service routine.

It is possible to test run the program without any payload by using a digital input signal connected to the system input `SimMode` (Simulated Mode). If the digital input signal is set to 1, the `loaddata` in the optional argument `\TLoad` is not considered, and the `loaddata` in the current `tooldata` is used instead.



Note

The default functionality to handle payload is to use the instruction `GripLoad`. Therefore the default value of the system parameter `ModalPayLoadMode` is 1.

Program execution

See *Technical reference manual - RAPID Instructions, Functions and Data types* for information about the `MoveL` and `TriggL`.

Error handling

There are several different types of errors that can be handled in the error handler for the `CapC/CapL` instructions:

- supervision errors
- sensor specific errors
- errors specific to a MultiMove system
- errors inherited from `TriggX` functionality
- other CAP errors

If one of the signals that is supposed to be supervised does not have the correct value, or if it changes value during supervision, the system variable `ERRNO` is set.

If no values can be read from the track sensor, the system variable `ERRNO` is set.

For a MultiMove system running in synchronized mode the error handler must take care of two other errors. One is used to report that some other application has detected a recoverable error. This enables recoverable error handling in synchronized RAPID tasks. The other error, `CAP_MOV_WATCHDOG`, is reported if the time between the order of the process start and the actual start of the robot's TCP movement in a MultiMove system in synchronized mode expires. The time used is specified in the optional parameter `Movestart_timer` in the `CapC` instruction.

If anything abnormal is detected, program execution will stop. If, however, an error handler is programmed, the errors defined below can be remedied without stopping production. However, a recommendation is that some of the errors (the errors with `CAP_XX`) these errors should not be presented for the end user. Map those errors

Continues on next page

4.1.5 CapC - Circular CAP movement instruction

*Continuous Application Platform (CAP)**Continued*

to a application specific error. For the supervision errors the instruction `CapGetFailSigs` can be used to get which specific signal that failed.

Supervision errors

The following recoverable errors are generated and can be handled in an error handler. The system variable `ERRNO` will be set to:

<code>CAP_PRE_ERR</code>	This error occurs when there is an error in the <code>PRE</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>pre_cond</code> time-out).
<code>CAP_PRESTART_ERR</code>	This error occurs when there is an error during the supervision of the <code>PRESTART</code> phase.
<code>CAP_END_PRE_ERR</code>	This event occurs when there is an error in the <code>END_PRE</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>start_cond</code> time-out).
<code>CAP_START_ERR</code>	This event occurs when there is an error in the <code>START</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>start_cond</code> time-out).
<code>CAP_MAIN_ERR</code>	This error occurs when there is an error during the supervision of the <code>MAIN</code> phase.
<code>CAP_ENDMAIN_ERR</code>	This error occurs when there is an error in the <code>END_MAIN</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>end_main_cond</code> time-out).
<code>CAP_START_POST1_ERR</code>	This event occurs when there is an error in the <code>START_POST1</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>end_main_cond</code> time-out).
<code>CAP_POST1_ERR</code>	This error occurs when there is an error during the supervision of the <code>POST1</code> phase.
<code>CAP_POST1END_ERR</code>	This error occurs when there is an error in the <code>END_POST1</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>end_main_cond</code> time-out).
<code>CAP_START_POST2_ERR</code>	This event occurs when there is an error in the <code>START_POST2</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>end_main_cond</code> time-out).
<code>CAP_POST2_ERR</code>	This error occurs when there is an error during the supervision of the <code>POST2</code> phase.
<code>CAP_POST2END_ERR</code>	<p>This error occurs when there is an error in the <code>END_POST2</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>end_main_cond</code> time-out).</p> <p>If supervision is done on two different signals in the same phase, and both of them fails, the first one that is setup with <code>SetupSuperv</code> is the one that generates the error.</p> <p>If supervision is done on two different signals in the same phase, and both of them fails, the first one that is setup with is the one that generates the error.</p>

Continues on next page

4 RAPID references

4.1.5 CapC - Circular CAP movement instruction

Continuous Application Platform (CAP)

Continued

Sensor related errors

The following recoverable errors are generated and can be handled in an error handler. The system variable `ERRNO` will be set to:

<code>CAP_TRACK_ERR</code>	Track error occurs when reading data from sensor and after a time no valid data are received. One reason for this could be that the sensor cannot indicate the seam.
<code>CAP_TRACKSTA_ERR</code>	Track start error occurs when no valid data has been read from the laser track sensor.
<code>CAP_TRACKCOR_ERR</code>	Track correction error occurs when something goes wrong in the calculation of the offset.
<code>CAP_TRACKCOM_ERR</code>	The communication between the robot controller and the sensor equipment is broken.
<code>CAP_TRACKPFR_ERR</code>	It is not possible to continue tracking, if a power failure occurred during tracking.
<code>CAP_SEN_NO_MEAS</code>	The controller did not get a valid measurement from sensor.
<code>CAP_SEN_NOREADY</code>	The sensor is not ready yet.
<code>CAP_SEN_GENERRO</code>	A general sensor error occurred.
<code>CAP_SEN_BUSY</code>	The sensor is busy and cannot answer the request.
<code>CAP_SEN_UNKNOWN</code>	The command sent to the sensor is unknown to sensor.
<code>CAP_SEN_ILLEGAL</code>	The variable or block number sent to the sensor is illegal.
<code>CAP_SEN_EXALARM</code>	An external alarm occurred in the sensor.
<code>CAP_SEN_CAALARM</code>	A camera alarm occurred in the sensor.
<code>CAP_SEN_TEMP</code>	The sensor temperature is out of range.
<code>CAP_SEN_VALUE</code>	The value sent to the sensor is out of range.
<code>CAP_SEN_CAMCHECK</code>	The camera check failed.
<code>CAP_SEN_TIMEOUT</code>	The sensor did not respond within the time out time.

Errors possible in MultiMove systems

The following recoverable errors are generated and can be handled in an error handler. The system variable `ERRNO` will be set to:

<code>ERR_PATH_STOP</code>	When using synchronized motion this error is reported when an application controlling one mechanical unit detects a recoverable error and notifies other applications that something went wrong. If this error code is received from a <code>CapC</code> instruction, the error is a reaction on another error. All tasks using movement instructions in synchronized mode in a MultiMove system should have this <code>ERRNO</code> value defined in the error handler.
----------------------------	--

Continues on next page

4.1.5 CapC - Circular CAP movement instruction

*Continuous Application Platform (CAP)**Continued*

Errors inherited from TriggX

The instruction CapC is based on the instruction TriggC. As a consequence you can get and handle the errors ERR_AO_LIM and ERR_DIPLAG_LIM, as in TriggC.

The system variable ERRNO will be set to:

ERR_AO_LIM	If the programmed ScaleValue/SetValue argument for the specified analog output signal AOp/AOutput in some of the connected TriggSpeed/TriggRampAO instructions, results are out of limit for the analog signal together with the programmed Speed in this instruction. The system variable ERRNO is set to ERR_AO_LIM.
ERR_DIPLAG_LIM	If the programmed DipLag argument in some of the connected TriggSpeed instructions, is too big in relation to the used system parameter <i>Event Preset Time</i> , the system variable ERRNO is set to ERR_DIPLAG_LIM.

Other CAP errors

The following recoverable errors are generated and can be handled in an error handler. The system variable ERRNO will be set to:

CAP_ATPROC_START	This recoverable error is generated at the end of the first CapC/L instruction of a sequence if the optional argument \PreProcessTracking is used. It can be handled in the error handler to start the process. For more information see <i>Operating manual - Tracking and searching with optical sensors</i> .
CAP_NOPROC_END	This error occurs when the instruction CapNoProcess is used to run a certain distance without application process and the end of this distance is reached. This is not really an error, but it uses the mechanisms of error recovery.
CAP_MOV_WATCHDOG	This error occurs when the switch \Movestart_timer is specified and the time between the process start (MAIN_STARTED) and the start of the robot movement exceeds the time specified with the switch.

CAP process

During continuous execution in both Auto mode and Manual mode, the CAP process is running, unless it is blocked. That means, that all data controlling the CAP process (that is, Cdata, Weavestart, Weave and Movestart_timer), are used. In these modes all CAP trigger activities are carried out, see [ICap - connect CAP events to trap routines on page 93](#).

In all other execution modes the CAP process is not running, and the CapC instruction behaves like a MoveC instruction.

Trigger conditions [T1] to [T8]

As the trigger conditions are fulfilled when the robot is positioned closer and closer to the end point, the defined trigger activities are carried out. The trigger conditions are fulfilled either at a certain distance before the end point of the instruction, or at a certain distance after the start point of the instruction, or at a certain point in time (limited to a short time) before the end point of the instruction.

Continues on next page

4 RAPID references

4.1.5 CapC - Circular CAP movement instruction


Continuous Application Platform (CAP)

Continued

During stepping execution forwards, the I/O activities are carried out but the interrupt routines are not run. During stepping execution backwards, no trigger activities at all are carried out.

Limitations

There are some limitations in how the *CirPoint* and the *ToPoint* can be placed, as shown in the figure below.

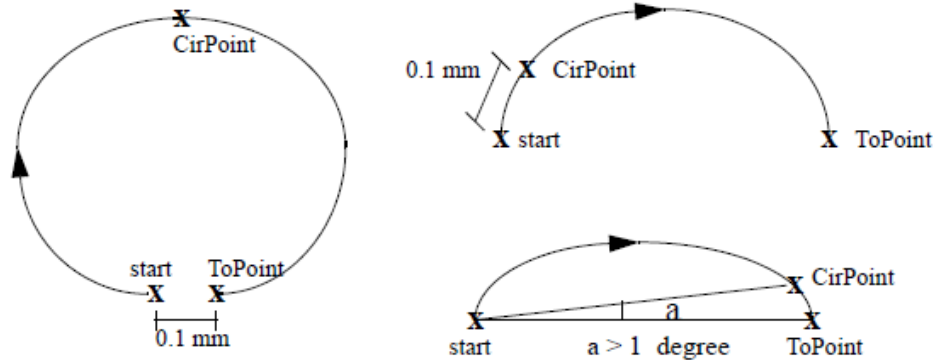

- Minimum distance between start and ToPoint is 0.1 mm.
- Minimum distance between start and CirPoint is 0.1 mm.
- Minimum angle between CirPoint and ToPoint from the start point is 1 degree.

The accuracy can be poor near the limits, for example, if the start point and the ToPoint on the circle are close to each other, the fault caused by the leaning of the circle can be much greater than the accuracy with which the points have been programmed.

A change of execution mode from forward to backward or vice versa, while the robot is stopped on a circular path, is not permitted and will result in an error message.

The instruction `CapC` (or any other instruction including circular movement) should never be started from the beginning, with TCP between the circle point and the end point. Otherwise the robot will not take the programmed path (positioning around the circular path in another direction compared with that programmed).

Make sure that the robot can reach the circle point during program execution and divide the circle segment if necessary.

If the current start point deviates from the usual, so that the total positioning length of the instruction `CapC` is shorter than usual, it may happen that several or all of the trigger conditions are fulfilled immediately and at the same position. In such cases, the sequence in which the trigger activities are carried out will be undefined. The program logic in the user program may not be based on a normal sequence of trigger activities for an "incomplete movement".

`CapC` cannot be executed in a RAPID routine connected to any of the following special system events: PowerOn, Stop, QStop, Restart, Reset or Step.

Continues on next page

Syntax

CapC

```

[CirPoint ':='] < expression (IN) of robtarg >
[ToPoint ':='] < expression (IN) of robtarg >
['\ ' Id ':=' < expression (IN) of identno > ] ', '
[Speed ':='] < expression (IN) of speeddata >
[Cdata ':='] < persistent (PERS) of capdata >
['\ ' Movestart_timer ':=' < expression (IN) of num > ] ', '
[Weavestart ':='] < persistent (PERS) of weavestartdata >
[Weave ':='] < persistent (PERS) of capweavedata >
[Zone ':='] < expression (IN) of zonedata >
['\ ' Inpos ':=' < expression (IN) of stoppointdata >] ', '
[Tool ':='] < persistent (PERS) of tooldata >
['\ ' WObj ':=' < persistent (PERS) of wobjdata > ]
['\ ' Track ':=' < persistent (PERS) of captrackdata > ]
|[ '\ ' Corr]
['\ ' TrackOffsetFrame ':=' < expression (IN) of captrackoffsframe
> ]
|[ '\ ' PreProcessTracking]
['\ ' Time ':=' < expression (IN) of num > ]
['\ ' T1 ':=' < variable (VAR) of trigdata > ]
['\ ' T2 ':=' < variable (VAR) of trigdata > ]
['\ ' T3 ':=' < variable (VAR) of trigdata > ]
['\ ' T4 ':=' < variable (VAR) of trigdata > ]
['\ ' T5 ':=' < variable (VAR) of trigdata > ]
['\ ' T6 ':=' < variable (VAR) of trigdata > ]
['\ ' T7 ':=' < variable (VAR) of trigdata > ]
['\ ' T8 ':=' < variable (VAR) of trigdata > ]
['\ ' TLoad ':=' < persistent (PERS) of loaddata > ] ';'

```

Related information

For information about	See
Definition of CAP data	capdata - CAP data on page 110
Definition of weave start data	weavestartdata - weave start data on page 141
Definition of weave data	capweavedata - Weavedata for CAP on page 126
Definition of track data	captrackdata - CAP track data on page 121
Path Offset	<i>Application manual - Controller software IRC5</i>
Using optical sensors for tracking or searching.	<i>Operating manual - Tracking and searching with optical sensors</i>
MoveL CorrCon	<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>

4 RAPID references

4.1.6 CapCondSetDO - Set a digital output signal at TCP stop Continuous Application Platform (CAP)

4.1.6 CapCondSetDO - Set a digital output signal at TCP stop

Usage

`CapSetDOAtStop` is used to define a digital output signal and its value, which will be set when the TCP of the robot that runs CAP, stops moving during a CAP instruction (`CapL` or `CapC`) before the CAP sequence is finished.

An existing definition of such signals, is cleared with the CAP instruction `InitSuperv.`

Basic example

```
CapCondSetDO do15, 1;
```

The signal `do15` is set to 1 when the TCP stops.

```
CapCondSetDO weld, off;
```

The signal `weld` is set to `off` when the TCP stops.

Arguments

`CapCondSetDO` Signal Value

Signal

Data type: `signaldo`

The name of the signal to be changed.

Value

Data type: `dionum`

The desired value of the signal 0 or 1.

Specified Value	Set digital output to
0	0
Any value except 0	1

Limitations

The final value of the signal depends on the configuration of the signal. If the signal is inverted in the system parameters, the value of the physical channel is the opposite.

A maximum of 10 signals per RAPID task may be set up.

Syntax

```
CapCondSetDO
[Signal ':='] < variable (VAR) of signaldo > ',',
[Value ':='] < expression (IN) of dionum > ';;'
```

Related information

For information about	See
<code>InitSuperv</code> instruction	InitSuperv - Reset all supervision for CAP on page 98
<code>SetupSuperv</code> instruction	SetupSuperv - Setup conditions for signal supervision in CAP on page 103

Continues on next page

4.1.6 CapCondSetDO - Set a digital output signal at TCP stop

Continuous Application Platform (CAP)
Continued

For information about	See
RemoveSuperv instruction	RemoveSuperv - Remove condition for one signal on page 101

4 RAPID references

4.1.7 CapEquiDist - Generate equidistant event *Continuous Application Platform (CAP)*

4.1.7 CapEquiDist - Generate equidistant event

Usage

CapEquiDist is used to tell CAP to generate an equidistant RAPID event (EQUIDIST) on the CAP path. The first event is generated at the startpoint of the first CAP instruction in a sequence of CAP instructions. From RAPID it is possible to subscribe this event using ICap.

Basic example

```
VAR intnum intno_equi;

PROC main()
    .....
    IDelete intno_equi;
    Connect intno_equi equi_trp;
    ICap intno_equi, EQUIDIST
    .....
    CapEquiDist\Distance:=5.0;
    MoveL p60, v1000, fine, tWeldGun;
    CapL p_fig3_l_1, v500, cd, wsd, cwd, z10, tWeldGun;
    CapL p_fig3_l_2, v500, cd, wsd, cwd, fine, tWeldGun;
    .....
    CapEquiDist\Reset;
    MoveL p70, v1000, fine, tWeldGun;
    CapL p_fig3_l_3, v500, cd, wsd, cwd, fine, tWeldGun;
    .....

    ERROR
        Retry;
ENDPROC

TRAP equi_trp
    ! do whatever you want, but it must not take too long time
ENDTRAP
```

In this example, the event EQUIDIST will be generated on the first CAP path. It will be sent every 5 mm on the path over several CAP instructions with zones.

Arguments

CapEquiDist [\Distance] [\Reset]

[\Distance]

Distance in mm

Data type: num

The data provided with this optional argument defines the distance in mm between two consecutive equidistant events.

[\Reset]

Reset event generation

Continues on next page

4.1.7 CapEquiDist - Generate equidistant event *Continuous Application Platform (CAP)* *Continued*

Data type: switch

If this switch is present, the event generation is reset, that is, the equidistant event will not be generated any longer on a CapL/CapC path. This switch has precedence before the \Distance switch.

Limitations

If the CAP path is long compared to the event distance, the system can run out of event resources, and the error message **50368 Too Short distance between equidistant events**.

Syntax

```
CapEquiDist  
  ['\ Distance ':= ' < expression (IN) of num >]  
  ['\ Reset] ';' 
```

4 RAPID references

4.1.8 CapL - Linear CAP movement instruction Continuous Application Platform (CAP)

4.1.8 CapL - Linear CAP movement instruction

Usage

CapL is used to move the tool center point (TCP) linearly to a given destination and at the same time control a continuous process. Furthermore it is possible to connect up to eight events to CapL. The events are defined using the instructions TriggRampAO, TriggIO, TriggEquip, TriggInt, TriggCheckIO, or TriggSpeed.

Basic examples

Example 1

Linear movements with CapL.

```
CapL p1, v100, cdata, weavestart, weave, z50, gun1;
```


The TCP of the tool, gun1, is moved linearly to the position p1, with speed defined in cdata, and zone data z50.

Example 2

Circular movement with user event and CAP event.

```
VAR intnum start_intno;  
...  
PROC main()  
  VAR triggdata gunon;  
  IDelete start_intno;  
  CONNECT start_intno WITH start_trap;  
  ICap start_intno, CAP_START;  
  TriggIO gunon, 0 \Start \DOp:=gun, on;  
  MoveJ p1, v500, z50, gun1;  
  CapL p2, v500, cdata, wstart, w1, fine, gun1 \T1:=gunon;  
ENDPROC  
  
TRAP start_trap  
  !This routine is executed when event CAP_START arrives  
ENDTRAP
```

The digital output signal gun is set when the robot TCP passes the midpoint of the corner path of the point p1. The trap routine start_trap is executed when the CAP process is starting.

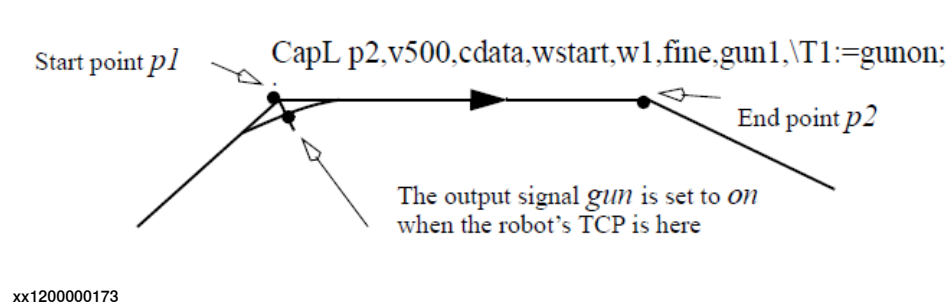

Continues on next page

4.1.8 CapL - Linear CAP movement instruction

Continuous Application Platform (CAP)
Continued

Arguments

```
CapL ToPoint [\Id] Speed Cdata [\MoveStartTimer] Weavestart Weave
Zone [\Inpos] Tool [\WObj] [\Track] | [\Corr]
[\TrackOffsetFrame] [\PreProcessTracking] [\Time] [\T1] [\T2]
[\T3] [\T4] [\T5] [\T6] [\T7] [\T8] [\TLoad]
```

ToPoint

Data type: robtarget

The destination point of the robot and external axes. It is defined as a named position or stored directly in the instruction (marked with an * in the instruction).

[\ID]

Synchronization id**Data type:** identno

The argument [\ID] is mandatory in *MultiMove* systems, if the movement is synchronized or coordinated synchronized. This argument is not allowed in any other case. The specified id number must be the same in all the cooperating program tasks. By using the id number the movements are not mixed up at the runtime.

Speed

Data type: speeddata

The speed data that applies to movements. Speed data defines the velocity of the TCP, the tool reorientation, and external axes.

Cdata

(CAP process Data)**Data type:** capdata

CAP process data, see [capdata - CAP data on page 110](#) for a detailed description.

[\Movestart_timer]

(Time in s)**Data type:** num

Upper limit for the time difference between the order of the process start and the actual start of the robot's TCP movement in a MultiMove system in synchronized mode.

Weavestart

(Weavestart Data)**Data type:** weavestartdata

Weave start data for the CAP process, see [weavestartdata - weave start data on page 141](#) for a detailed description.

Weave

(Weave Data)**Data type:** capweavedata

Weaving data for the CAP process, see [capweavedata - Weavedata for CAP on page 126](#) for a detailed description.

Continues on next page

4 RAPID references

4.1.8 CapL - Linear CAP movement instruction

Continuous Application Platform (CAP)

Continued

Zone

Data type: zonedata

Zone data for the movement. Zone data describes the size of the generated corner path.

[\Inpos]

In position

Data type: stoppoint data

This argument is used to specify the convergence criteria for the position of the robot's TCP in the stop point. The stop point data substitutes the zone specified in the Zone parameter.

Tool

Data type: tooldata

The tool in use when the robot moves. The tool center point is the point that is moved to the specified destination point.

[\WObj]

Work Object

Data type: wobjdata

The work object (object coordinate system) to which the robot position in the instruction is related.

This argument can be omitted and if it is then the position is related to the world coordinate system. If, on the other hand, a stationary TCP or coordinated external axes are used this argument must be specified in order for a circle relative to the work object to be executed.

[\Track]

(Track Sensor Data)

Data type: captrackdata

This data structure contains data needed for use of path correction generating sensors together with CapL, see [captrackdata - CAP track data on page 121](#). This argument is not allowed together with the argument \Corr.

[\Corr]

Correction

Data type: switch

Correction data written to a corrections entry by the instruction CorrWrite will be added to the path and destination position if this argument is present.

The RobotWare option *Path Offset* is required when using this argument.

[\TrackOffsetFrame]

Data type: captrackoffsframe

This optional argument is used to select the frame in which the optical tracking offset (seamoffs_y and seamoffs_z) is applied.

Continues on next page

[\PreProcessTracking]

Data type: switch

This argument is effective only if `first_instruction` is set to `TRUE` and the `\Track` argument is present.

This argument activates *Pre Process Tracking*, which means that the robot will be tracking only, without process, during that CapX instruction. Thereby sensor data are available for successful tracking right off the start of the path with process, e.g. welding.

For more information see *Operating manual - Tracking and searching with optical sensors*.

[\Time]

Data type: num

This argument is used to specify the total time in seconds during which the robot and additional axes move. It is then substituted for the corresponding speed data.

[\T1]

Trigg 1

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[\T2]

Trigg 2

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[\T3]

Trigg 3

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[\T4]

Trigg 4

Data type: triggdata

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[\T5]

Trigg 5

Continues on next page

4 RAPID references

4.1.8 CapL - Linear CAP movement instruction

Continuous Application Platform (CAP)

Continued

Data type: `triggdata`

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[`\T6`]

Trigg 6

Data type: `triggdata`

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[`\T8`]

Trigg 8

Data type: `triggdata`

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[`\T8`]

Trigg 8

Data type: `triggdata`

Variable that refers to trigger conditions and trigger activity defined earlier in the program using the instructions `TriggIO`, `TriggEquip`, `TriggInt`, `TriggCheckIO`, `TriggSpeed`, or `TriggRampAO`.

[`\TLoad`]

Total load

Data type: `loaddata`

The `\TLoad` argument describes the total load used in the movement. The total load is the tool load together with the payload that the tool is carrying. If the `\TLoad` argument is used, then the `loaddata` in the current `tooldata` is not considered.

If the `\TLoad` argument is set to `load0`, then the `\TLoad` argument is not considered and the `loaddata` in the current `tooldata` is used instead.

To be able to use the `\TLoad` argument it is necessary to set the value of the system parameter `ModalPayLoadMode` to 0. If `ModalPayLoadMode` is set to 0, it is no longer possible to use the instruction `GripLoad`.

The total load can be identified with the service routine `LoadIdentify`. If the system parameter `ModalPayLoadMode` is set to 0, the operator has the possibility to copy the `loaddata` from the tool to an existing or new `loaddata` persistent variable when running the service routine.

It is possible to test run the program without any payload by using a digital input signal connected to the system input `SimMode` (Simulated Mode). If the digital

Continues on next page

4.1.8 CapL - Linear CAP movement instruction Continuous Application Platform (CAP) Continued

input signal is set to 1, the `loaddata` in the optional argument `\TLoad` is not considered, and the `loaddata` in the current `tooldata` is used instead.



Note

The default functionality to handle payload is to use the instruction `GripLoad`. Therefore the default value of the system parameter `ModalPayLoadMode` is 1.

Program execution

See *Technical reference manual - RAPID Instructions, Functions and Data types* for information about the `MoveL` and `TriggL`.

Error handling

There are several different types of errors that can be handled in the error handler for the `CapC/CapL` instructions:

- supervision errors
- sensor specific errors
- errors specific to a MultiMove system
- errors inherited from `TriggX` functionality
- other CAP errors

If one of the signals that is supposed to be supervised does not have the correct value, or if it changes value during supervision, the system variable `ERRNO` is set. If no values can be read from the track sensor, the system variable `ERRNO` is set.

For a MultiMove system running in synchronized mode the error handler must take care of two other errors. One is used to report that some other application has detected an recoverable error. This enables recoverable error handling in synchronized RAPID tasks. The other error, `CAP_MOV_WATCHDOG`, is reported if the time between the order of the process start and the actual start of the robot's TCP movement in a MultiMove system in synchronized mode expires. The time used is specified in the optional parameter `Movestart_timer` in the `CapL` instruction.

If anything abnormal is detected, program execution will stop. If, however, an error handler is programmed, the errors defined below can be remedied without stopping production. However, a recommendation is that some of the errors (the errors with `CAP_XX`) these errors should not be presented for the end user. Map those errors to a application specific error. For the supervision errors the instruction `CapGetFailSigs` can be used to get which specific signal that failed.

Supervision errors

The following recoverable errors are generated and can be handled in an error handler. The system variable `ERRNO` will be set to:

<code>CAP_PRE_ERR</code>	This error occurs when there is an error in the <code>PRE</code> supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in <code>pre_cond</code> timeout).
--------------------------	---

Continues on next page

4 RAPID references

4.1.8 CapL - Linear CAP movement instruction

Continuous Application Platform (CAP)

Continued

CAP_PRESTART_ERR	This error occurs when there is an error during the supervision of the PRESTART phase.
CAP_END_PRE_ERR	This event occurs when there is an error in the END_PRE supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in start_cond time-out).
CAP_START_ERR	This event occurs when there is an error in the START supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in start_cond time-out).
CAP_MAIN_ERR	This error occurs when there is an error during the supervision of the MAIN phase.
CAP_ENDMAIN_ERR	This error occurs when there is an error in the END_MAIN supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in end_main_cond time-out).
CAP_START_POST1_ERR	This event occurs when there is an error in the START_POST1 supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in end_main_cond time-out).
CAP_POST1_ERR	This error occurs when there is an error during the supervision of the POST1 phase.
CAP_POST1END_ERR	This error occurs when there is an error in the END_POST1 supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in end_main_cond time-out).
CAP_START_POST2_ERR	This event occurs when there is an error in the START_POST1 supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in end_main_cond time-out).
CAP_POST2_ERR	This error occurs when there is an error during the supervision of the POST2 phase.
CAP_POST2END_ERR	<p>This error occurs when there is an error in the END_POST2 supervision list, that is, when the conditions in the list are not met within the specified time frame (specified in end_main_cond time-out).</p> <p>If supervision is done on two different signals in the same phase, and both of them fails, the first one that is setup with SetupSuperv is the one that generates the error.</p>

Sensor related errors

The following recoverable errors are generated and can be handled in an error handler. The system variable `ERRNO` will be set to:

CAP_TRACK_ERR	Track error occurs when reading data from sensor and after a time no valid data are received. One reason for this could be that the sensor cannot indicate the seam.
CAP_TRACKSTA_ERR	Track start error occurs when no valid data has been read from the laser track sensor.
CAP_TRACKCOR_ERR	Track correction error occurs when something goes wrong in the calculation of the offset.
CAP_TRACKCOM_ERR	The communication between the robot controller and the sensor equipment is broken.

Continues on next page

4.1.8 CapL - Linear CAP movement instruction

Continuous Application Platform (CAP)

Continued

CAP_TRACKPFR_ERR	It is not possible to continue tracking, if a power failure occurred during tracking.
CAP_SEN_NO_MEAS	The controller did not get a valid measurement from sensor.
CAP_SEN_NOREADY	The sensor is not ready yet.
CAP_SEN_GENERRO	A general sensor error occurred.
CAP_SEN_BUSY	The sensor is busy and cannot answer the request.
CAP_SEN_UNKNOWN	The command sent to the sensor is unknown to sensor.
CAP_SEN_ILLEGAL	The variable or block number sent to the sensor is illegal.
CAP_SEN_EXALARM	An external alarm occurred in the sensor.
CAP_SEN_CAALARM	A camera alarm occurred in the sensor.
CAP_SEN_TEMP	The sensor temperature is out of range.
CAP_SEN_VALUE	The value sent to the sensor is out of range.
CAP_SEN_CAMCHECK	The camera check failed.
CAP_SEN_TIMEOUT	The sensor did not respond within the time out time.

Errors possible in MultiMove systems

The following recoverable errors are generated and can be handled in an error handler. The system variable `ERRNO` will be set to:

ERR_PATH_STOP	When using synchronized motion this error is reported when an application controlling one mechanical unit detects a recoverable error and notifies other applications that something went wrong. If this error code is received from a CapL instruction, the error is a reaction on another error. All tasks using movement instructions in synchronized mode in a MultiMove system should have this <code>ERRNO</code> value defined in the error handler.
---------------	---

Errors inherited from TriggX

The instruction `CapL` is based on the instruction `TriggL`. As a consequence you can get and handle the errors `ERR_AO_LIM` and `ERR_DIPLAG_LIM`, as in `TriggL`.

The system variable `ERRNO` will be set to:

ERR_AO_LIM	If the programmed <code>ScaleValue/SetValue</code> argument for the specified analog output signal <code>AOp/AOutput</code> in some of the connected <code>TriggSpeed/TriggRampAO</code> instructions, results are out of limit for the analog signal together with the programmed <code>Speed</code> in this instruction. The system variable <code>ERRNO</code> is set to <code>ERR_AO_LIM</code> .
ERR_DIPLAG_LIM	If the programmed <code>DipLag</code> argument in some of the connected <code>TriggSpeed</code> instructions, is too big in relation to the used system parameter <i>Event Preset Time</i> , the system variable <code>ERRNO</code> is set to <code>ERR_DIPLAG_LIM</code> .

Continues on next page

4 RAPID references

4.1.8 CapL - Linear CAP movement instruction

Continuous Application Platform (CAP)

Continued

Other CAP errors

The following recoverable errors are generated and can be handled in an error handler. The system variable `ERRNO` will be set to:

CAP_ATPROC_START	This recoverable error is generated at the end of the first CapC/L instruction of a sequence if the optional argument <code>\PreProcessTracking</code> is used. It can be handled in the error handler to start the process. For more information see <i>Operating manual - Tracking and searching with optical sensors</i> .
CAP_NOPROC_END	This error occurs when the instruction <code>CapNoProcess</code> is used to run a certain distance without application process and the end of this distance is reached. This is not really an error, but it uses the mechanisms of error recovery.
CAP_MOV_WATCHDOG	This error occurs when the switch <code>\Movestart_timer</code> is specified and the time between the process start (<code>MAIN_STARTED</code>) and the start of the robot movement exceeds the time specified with the switch.

CAP process

During continuous execution in both Auto mode and Manual mode, the CAP process is running, unless it is blocked. That means, that all data controlling the CAP process (that is, `Cdata`, `Weavestart`, `Weave` and `Movestart_timer`), are used. In these modes all CAP trigger activities are carried out, see [ICap - connect CAP events to trap routines on page 93](#).

In all other execution modes the CAP process is not running, and the `CapL` instruction behaves like a `MoveL` instruction.

Trigger conditions [T1] to [T8]

As the trigger conditions are fulfilled when the robot is positioned closer and closer to the end point, the defined trigger activities are carried out. The trigger conditions are fulfilled either at a certain distance before the end point of the instruction, or at a certain distance after the start point of the instruction, or at a certain point in time (limited to a short time) before the end point of the instruction.

During stepping execution forwards, the I/O activities are carried out but the interrupt routines are not run. During stepping execution backwards, no trigger activities at all are carried out.

Limitations

If the current start point deviates from the usual, so that the total positioning length of the instruction `CapL` is shorter than usual (for example, at the start of `CapL` with the robot position at the end point), it may happen that several or all of the trigger conditions are fulfilled immediately and at the same position. In such cases, the sequence in which the trigger activities are carried out will be undefined. The program logic in the user program may not be based on a normal sequence of trigger activities for an "incomplete movement".

The behavior of the CAP process may be undefined if an error occurs during `CapL` or `CapC` instructions with extremely short TCP movements (< 1 mm).

Continues on next page

CapL cannot be executed in a RAPID routine connected to any of the following special system events: PowerOn, Stop, QStop, Restart, Reset or Step.

Syntax

CapL

```
[ToPoint ':='] < expression (IN) of robtarget >
['\ ' Id ':='] < expression (IN) of identno >] ', '
[Speed ':='] < expression (IN) of speeddata > ', '
[Cdata ':='] < persistent (PERS) of capdata >
['\ ' Movestart_timer ':='] < expression (IN) of num >] ', '
[Weavestart ':='] < persistent (PERS) of weavestartdata > ', '
[Weave ':='] < persistent (PERS) of capweavedata > ', '
[Zone ':='] < expression (IN) of zonedata >
['\ ' Inpos ':='] < expression (IN) of stoppointdata >] ', '
[Tool ':='] < persistent (PERS) of tooldata >
['\ ' WObj ':='] < persistent (PERS) of wobjdata >]
['\ ' Track ':='] < persistent (PERS) of captrackdata > ]
|[ '\ ' Corr]
['\ ' TrackOffsetFrame ':='] < expression (IN) of captrackoffsframe
> ]
|[ '\ ' PreProcessTracking]
['\ ' Time ':='] < expression (IN) of num > ]
['\ ' T1 ':='] < variable (VAR) of trigdata > ]
['\ ' T2 ':='] < variable (VAR) of trigdata > ]
['\ ' T3 ':='] < variable (VAR) of trigdata > ]
['\ ' T4 ':='] < variable (VAR) of trigdata > ]
['\ ' T5 ':='] < variable (VAR) of trigdata > ]
['\ ' T6 ':='] < variable (VAR) of trigdata > ]
['\ ' T7 ':='] < variable (VAR) of trigdata > ]
['\ ' T8 ':='] < variable (VAR) of trigdata > ]
['\ ' TLoad' :='] < persistent (PERS) of loaddata >] ';'
```

Related information

For information about	See
Definition of CAP data	capdata - CAP data on page 110
Definition of weave start data	weavestartdata - weave start data on page 141
Definition of weave data	capweavedata - Weavedata for CAP on page 126
Definition of track data	captrackdata - CAP track data on page 121
Path Offset	<i>Application manual - Controller software IRC5</i>
Using optical sensors for tracking or searching.	<i>Operating manual - Tracking and searching with optical sensors</i>
MoveL TriggL	<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>

4 RAPID references

4.1.9 CapLATrSetup - Set up a Look-Ahead-Tracker *Continuous Application Platform (CAP)*

4.1.9 CapLATrSetup - Set up a Look-Ahead-Tracker

Usage

CapLATrSetup (*Set up a Look-Ahead-Tracker*) is used to set up a Look-Ahead-Tracker type of sensor, for example, Laser Tracker.

The sensor interface communicates with a maximum of two sensors over serial channels using the RTP1 transport protocol. The two channels must be named *laser1:* and *swg:*.

Basic example

SIO.cfg:

```
COM_TRP:
-Name "SCOUT:" -Type "RTP1"
-Name "digi-ip:" -Type "SOCKDEV" -PhyChannel "LAN1" -RemoteAdress
"192.168.125.5"
```

RAPID code:

```
! Define variable numbers
CONST num SensorOn := 6;
CONST num XCoord := 8;
CONST num YCoord := 9;
CONST num ZCoord := 10;
! Sensor calibration frame
PERS pose calibFrame := [[236.4,0.3,96.3],[1,0,0,0]];
! Trackdata
PERS captrackdata captrack1 := ["digi-ip:", [1,10,1,0,0,0,0,0]];

! Set up a Laser Tracker
CapLATrSetup "digi-ip:",
    calibFrame\SensorFreq:=20\CorrFilter:=5\MaxBlind:=100\MaxIncCorr:=2;

! Request start of sensor measurements
WriteVar "digi-ip:", SensorOn, 1;

! Track using Cap
CapL p_fig1_l_1, v200, cd_event1, wsd_event, cwd_event, z20,
    tWeldGun\Track:=captrack1;

! Stop sensor
WriteVar "digi-ip:", SensorOn, 0;
```

Arguments

```
CapLATrSetup device CalibFrame CalibPos [\WarnMaxCorr] [\LogFile]
[\LogSize] [\SensorFreq] [\Ip1ServoDelay] [\Ip1CorrGain]
[\ServoSensFactor] [\CorrFilter] [\Ip1CorrFilter]
[\ServoCorrFilter] [\ErrRampIn] [\ErrRampOut] [\CBAngle]
[\MaxBlind] [\MaxIncCorr] [\CalibFrame2] [\CalibFrame3]
```

device

Data type: string

Continues on next page

Device name as defined in sio.cfg.

calibframe

Data type: `pose`

LATR calibration frame (position and orientation relative the predefined tool tool0.

CalibPos

Data type: `pose`

LATR calibration offset. Adjustment of the sensor frame which places the origo of the path correction frame near the level of the tool frame used during calibration.

[WarnMaxCorr]

Data type: `switch`

If this switch is present, program execution is not interrupted, when the limit for maximum correction, specified in the trackdata, is exceeded. Only a warning will be sent.

[Logfile]

Data type: `string`

Name of tracklog log file.

[LogSize]

Data type: `num`

Size of the tracklog ring buffer, that is the number of sensor measurements that can be buffered during tracking.

Default: 1000.

[SensorFreq]

Data type: `num`

Defines the sample frequency of the sensor used (for example, M-Spot-90 has 5Hz sampling frequency).

The highest available value is dependent on the communication link and its speed. We recommend not to use values higher than 20Hz.

Default: 5 Hz.

[IpolServoDelay]

Data type: `num`

Defines an robot controller internal time delay between ipol task and servo task.

Default: 74 ms.



Note

Do not change the default value!

[IpolCorrGain]

Data type: `num`

Defines, the gain factor for the correction imposed on ipol.

Continues on next page

4 RAPID references

4.1.9 CapLATrSetup - Set up a Look-Ahead-Tracker

Continuous Application Platform (CAP)

Continued

Default: 0.0.



Note

Do not change the default value!

[ServoSensFactor]

Data type: `num`

Defines the number of servo corrections per sensor reading.

Default: 0.



Note

Do not change the default value!

[CorrFilter]

Data type: `num`

Defines filtering of the correction calculated, using mean value over corr filter values.

Default: 1.



Note

Do not change the default value!

[IpolCorrFilter]

Data type: `num`

Defines filtering of the ipol correction, using mean value over path filter values.

Default: 1.



Note

Do not change the default value!

[ServoCorrFilter]

Data type: `num`

Defines filtering of the servo correction, using mean value over path servo filter values.

Default: 1.



Note

Do not change the default value!

[ErrRampIn]

Data type: `num`

Defines during how many sensor readings ramp in is done after error caused by sensor reading.

Continues on next page

Default: 1.

[ErrorRampOut]

Data type: num

Defines during how many sensor readings ramp out is done when an error caused by sensor reading occurred.

Default: 1.

[CBAngle]

Data type: num

Defines the angle between a 3D sensor beam and the sensor z-axis

Default: 0.0.

[MaxBlind]

Data type: num

Maximum distance the TCP may move assuming, that the latest correction is still valid.

At the start of the tracking, the `MaxBlind` distance is automatically increased by the look ahead of the sensor.

Default: no limit.

[MaxIncCorr]

Data type: num

Maximum incremental correction allowed.

If the incremental TCP correction is bigger than `\MaxIncCorr` and `\WarnMaxCorr` was specified, the robot will continue its path but the applied incremental correction will not exceed `\MaxIncCorr`. If `\WarnMaxCorr` was not specified, a track error is reported and program execution is stopped.

Default: 5 mm.

[CalibFrame2]

Data type: pose

Alternative LATR calibration frame number 2 (position and orientation relative the predefined tool `tool0`).

[CalibFrame3]

Data type: pose

Alternative LATR calibration frame number 3 (position and orientation relative the predefined tool `tool0`).

Syntax

```
CapLATrSetup
[device ':='] < expression (IN) of string> ','
[CalibFrame ':='] < persistent (PERS) of pose > ','
[CalibPos ':='] < persistent (PERS) of pos >
[\WarnMaxCorr]
[\LogFile ':='] < expression (IN) of string >]
[\LogSize ':='] < expression (IN) of num >]
```

Continues on next page

4 RAPID references

4.1.9 CapLATrSetup - Set up a Look-Ahead-Tracker

Continuous Application Platform (CAP)

Continued

```
[\SensorFreq ':=' < expression (IN) of num >]
[\IpolServoDelay ':=' < expression (IN) of num >]
[\IpolCorrGain ':=' < expression (IN) of num >]
[\ServoSensFactor ':=' < expression (IN) of num >]
[\CorrFilter ':=' < expression (IN) of num >]
[\IpolCorrFilter ':=' < expression (IN) of num >]
[\ServoCorrFilter ':=' < expression (IN) of num >]
[\ErrRampIn ':=' < expression (IN) of num >]
[\ErrRampOut ':=' < expression (IN) of num >]
[\CBAngle ':=' < expression (IN) of num >]
[\MaxBlind ':=' < expression (IN) of num >]
[\MaxIncCorr ':=' < expression (IN) of num >]
[\CalibFrame2 ':=' < persistent (PERS) of pose >]
[\CalibFrame3 ':=' < persistent (PERS) of pose >] ';'

```

Related information

For information about	See
<i>Sensor Interface</i>	<i>Application manual - Controller software IRC5</i>

4.1.10 CapNoProcess - Run CAP without process Continuous Application Platform (CAP)

4.1.10 CapNoProcess - Run CAP without process

Usage

CapNoProcess is used to run CAP a certain distance without process.

With CapNoProcess, it is possible to tell CAP to execute a certain distance (in mm) without process. This is useful, if there was a recoverable process error, which in some way makes it impossible to restart the process at the error location.

In the beginning and at the end of the skip distance, backing on the path (restart_dist component in capdata) is suppressed.

At the end of the skip distance a error with errno CAP_NOPROC_END is generated.

Basic example

```
VAR num skip_dist := 0.0;
VAR bool cap_skip := FALSE;

PROC main()
    .....
    skip_dist := 25.0;
    CapL p_fig3_l_1, v500, cd, wsd, cwd, fine, tWeldGun;
    .....
    skip_dist := 15.0;
    CapL p_fig3_l_3, v500, cd, wsd, cwd, fine, tWeldGun;
    .....

    ERROR
    StorePath;
    TEST ERRNO
    CASE CAP_NOPROC_END:
        IF cap_skip THEN
            ! This is the end of the skip distance
            cap_skip := FALSE;
        ENDIF
    CASE CAP_MAIN_ERR:
        IF skip_dist > 0.0 THEN
            ! This is the start of the skip distance
            CapNoProcess skip_dist;
            cap_skip := TRUE;
        ENDIF
    DEFAULT:
    ENDTEST
    RestoPath;
    StartMoveRetry;
ENDPROC
ENDMODULE
```

In this example, the recoverable error CAP_MAIN_ERR is followed by 25 mm movement (at 10 mm/s) without process for the first CapL instruction and by 15

Continues on next page

4 RAPID references

4.1.10 CapNoProcess - Run CAP without process

Continuous Application Platform (CAP)

Continued

mm for the second. At the end of that distance, CAP_NOPROC_END is generated and the process is restarted.

Arguments

CapNoProcess skip_distance

skip_distance

Distance in mm

Data type: num

CapNoProcess has a num variable as input parameter, that defines the skip distance in mm.

Limitations

The speed of the TCP during skip is predefined with 10 mm/s. The shortest skip distance is predefined with 10 mm.

In synchronized MultiMove systems, the shortest distance of all skip distances defined for the different synchronized process robots will be the actual one.

If the skip distance is longer than the distance from the current TCP position to the end of the current sequence of CAP instructions, nothing special will happen: RAPID execution continues as usual, without stopping the robot.

Syntax

```
CapNoProcess
[skip_dist '[:='] < variable (IN) of num >';'
```

Related information

For information about	See
InitSuperv	InitSuperv - Reset all supervision for CAP on page 98
SetupSuperv	SetupSuperv - Setup conditions for signal supervision in CAP on page 103
RemoveSuperv	RemoveSuperv - Remove condition for one signal on page 101

4.1.11 CapRefresh - Refresh CAP data

Usage

CapRefresh is used to tell the CAP process to refresh its process data. It can for example, be used to tune CAP process parameters during program execution.

Basic example

```
PROC PulseSpeed()
  ! Setup a 1 Hz timer interrupt
  CONNECT intnol WITH TuneTrp;
  ITimer 1, intnol;
  CapL pl, v100, cdata, wstartdata, wdata, fine, gun1;
  IDelete intnol;
ENDPROC

TRAP TuneTrp
  ! Modify the main speed component of active cdata
  IF HighValueFlag = TRUE THEN
    cdata.speed_data.start := 10;
    HighValueFlag := FALSE;
  ELSE
    cdata.speed_data.start := 15;
    HighValueFlag := TRUE;
  ENDIF
  ! Order the process control to refresh process parameters
  CapRefresh;
ENDTRAP
```

In this example the speed will be switched between 10 and 15 mm/s at a rate of 1 Hz.

Arguments

CapRefresh [**\MainSpeed**] [**\MainWeave**] [**\StartWeave**] [**\RestartDist**]

Without optional argument the CAP data capdata, capweavedata, weavestartdata, captrackdata, and movestarttimer are - if present - re-read from the PERSISTENT RAPID variable specified in the currently active CAP instruction.

[MainSpeed]

Data type: switch

If this switch is present, CAP will reread the component capdata.speed_data.main of the currently active CAP instruction.

[MainWeave]

Data type: switch

If this switch is present, CAP will reread the components capweavedata.width, capweavedata.length, capweavedata.bias, and capweavedata.active of the currently active CAP instruction.

Continues on next page

4 RAPID references

4.1.11 CapRefresh - Refresh CAP data

Continuous Application Platform (CAP)

Continued

`[StartWeave]`

Data type: `bool`

If this switch is present, CAP will use its value instead of `weavestartdata.active` of the currently active CAP instruction. The data of the currently active CAP instruction remain untouched.

`[RestartDist]`

Data type: `num`

If this switch is present, CAP will use its value instead of `capdata.restart_dist` of the currently active CAP instruction. The data of the currently active CAP instruction remain untouched.

Syntax

```
CapRefresh
  ['\' MainSpeed]
  ['\' MainWeave]
  ['\' Startweave ':=' < expression (IN) of bool >]
  ['\' RestartDist ':=' < expression (IN) of num >] ';'

```

4.1.12 CAPSetStopMode - Set the stop mode for execution errors

Continuous Application Platform (CAP)

4.1.12 CAPSetStopMode - Set the stop mode for execution errors

Usage

`CAPSetStopMode` sets the stop mode that should be used when the robot movement is stopped due to a process error. The default stop mode is `SMOOTH_STOP_ON_PATH`.

Basic example

```
CAPSetStopMode QUICK_STOP_ON_PATH;
```

Arguments

```
CAPSetStopMode StopMode;
```

StopMode

Data type: `capstopmode`

Stop mode, see [capstopmode - Defines stop modes for CAP on page 120](#).

Syntax

```
CAPSetStopMode  
[StopMode ':='] <variable (VAR) of capstopmode> ';' 
```

Related information

For information about	See
Data type <code>capstopmode</code>	capstopmode - Defines stop modes for CAP on page 120

4 RAPID references

4.1.13 CapWeaveSync - set up signals and levels for weave synchronization

Continuous Application Platform (CAP)

4.1.13 CapWeaveSync - set up signals and levels for weave synchronization

Usage

CapWeaveSync is used to setup weaving synchronization signals without sensors. The I/O signals must be defined in EIO.cfg.

Basic example

RAPID program:

```
PROC main()  
  ...  
  CapWeaveSync \DoLeft:=do_sync_left \LevelLeft:=80  
              \DoRight:=do_sync_right \LevelRight:=80;  
  ...  
ENDPROC
```

In this example the signals do_sync_left and do_sync_right are set up with weaving level 80%.

The CapWeaveSync instruction should be executed only once, for example, from the startup shelf.

Arguments

```
CapWeaveSync [\Reset] [\DoLeft] [\LevelLeft] [\DoRight]  
              [\LevelRight]
```

[\Reset]

Data type: switch

Clear weave synchronization data.

[\DoLeft]

Data type: signaldo


Digital output signal for weave synchronization on the left weave cycle.

[\LevelLeft]

Data type: num

The coordination position on the left side of the weaving pattern. The value specified is a percentage of the width on the left of the weaving centre. When weaving is carried out beyond this point, a digital output signal is automatically set high (if the signal is defined).

This type of coordination can be used for seam tracking using Through-the-Arc Tracker.

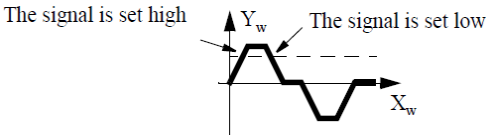

xx1200000176

[\LevelLeft]

Data type: num


Continues on next page

4.1.13 CapWeaveSync - set up signals and levels for weave synchronization

*Continuous Application Platform (CAP)**Continued*

The coordination position on the left side of the weaving pattern. The value specified is a percentage of the width on the left of the weaving centre. When weaving is carried out beyond this point, a digital output signal is automatically set high (if the signal is defined).

This type of coordination can be used for seam tracking using Through-the-Arc Tracker.

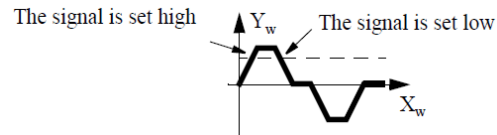

xx1200000176

[\DoRight]

Data type: signaldo


Digital output signal for weave synchronization on the right weave cycle.

[\LevelRight]

Data type: num

The coordination position on the right side of the weaving pattern. The value specified is a percentage of the width on the right of the weaving centre. When weaving is carried out beyond this point, a digital output signal is automatically set high (provided the signal is defined).

This type of coordination can be used for seam tracking using Through-the-Arc Tracker.

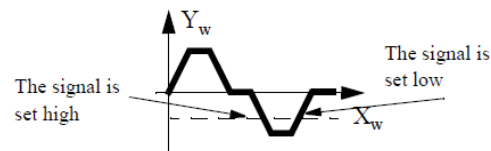

xx1200000177

Program execution

The defined signals are checked and set when running without a sensor.

Limitations

The signals must be defined in EIO.cfg.

It is not possible to use only either level or corresponding signal. It will not result in errors when loading the RAPID file, but it will result in RAPID run-time errors for the instruction CapWeaveSynch.

Syntax

```
CapWeaveSync
[ '\ ' Reset ]
[ DoLeft ':' < expression (IN) of signaldo > ]
[ LevelLeft ':' < expression (IN) of num > ]
[ DoRight ':' < expression (IN) of signaldo > ]
[ LevelRight ':' < expression (IN) of num > ] ';'

```

Continues on next page

4 RAPID references

4.1.13 CapWeaveSync - set up signals and levels for weave synchronization

Continuous Application Platform (CAP)

Continued

Related information

For information about	See
capweavedata data type	capweavedata - Weavedata for CAP on page 126

4.1.14 ICap - connect CAP events to trap routines

Continuous Application Platform (CAP)

4.1.14 ICap - connect CAP events to trap routines

Usage

ICap is used to connect an interrupt number (which is already connected to a trap routine) with a specific CAP Event, see Arguments below for a listing of available Events. When using ICap, an association between a specific process event and a user defined Trap routine is created. In other words, the Trap routine in question is executed when the associated CAP event occurs.

We recommend placing the traps in a background task.

Basic example

Below is an example where the CAP Event CAP_START is associated with the trap routine start_trap.

```
VAR intnum start_intno:=0;
...

TRAP start_trap
  ! This routine will be executed when the event CAP_START is
    reported from the core
  ! Do what you want to do
ENDTRAP

PROC main()
  IDelete start_intno;
  CONNECT start_intno WITH start_trap;
  ICap start_intno, CAP_START;
  CapL p1, v100, cdata, weavestart, weave, z50, gun1;
ENDPROC
```

Arguments

ICap Interrupt Event

Interrupt

Data type: intnum

The interrupt identity. This should have previously been connected to a trap routine by means of the instruction CONNECT.

Event

Data type: num

The CAP event number to be associated with the interrupt. These events are predefined constants.

Continues on next page

4 RAPID references

4.1.14 ICap - connect CAP events to trap routines

Continuous Application Platform (CAP)

Continued

Available CAP events

To see the events listed according to phases, see section [Coupling between phases and events on page 24](#).

Events	Phase	Event number	Description
AT_ERRORPOINT	MAIN	28	This event occurs after restart, when the TCP reaches the position of the supervision error.
AT_POINT	MAIN	13	This event occurs at every robtarget on the process path except the start and finish point.
AT_RESTARTPOINT	MAIN	14	This event occurs when the robot has jogged back, the restart distance, on the process path after a stop.
CAP_PF_RESTART	MAIN	26	This event occurs when restart is ordered.
CAP_START		0	This event occurs as soon as the CAP process is started.
CAP_STOP		25	This event is a required event. If any other event is used, this event must be defined too. The event/trap is executed as soon as possible after the controller is stopped due to an error or a program stop. An error can be a recoverable error detected in CAP, a fatal error detected in CAP or an internal error stopping the controller. The code executed in this trap should take all external equipment to a safe state, for example, reset all external I/O-signals. Keep in mind that TRAP execution is stopped when RAPID execution of a NORMAL task is stopped. Therefore the TRAP connected to CAP_STOP has to be placed in a STATIC or SEMISTATIC task.
END_MAIN	END_MAIN	17	This event occurs at the point on the process path where supervision of the end sequence is started, that is, when the robot reaches the end point of the process.
END_POST1	END_POST1	21	This event occurs when it is time to end the POST1 phase, that is, when it is time to change from the POST1 to the POST2-phase. If using a <i>flying end</i> no event is distributed.
END_POST2	END_POST2	23	This event occurs when the POST2 phase is at an end, that is, when it is time to finally finish the process. If using a <i>flying end</i> no event is distributed.
END_PRE	PRE	32	This event occurs when the supervision of the PRE-phase, if present, is activated. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
EQUIDIST	MAIN	27	This event is sent, if it is ordered with the instruction <code>CapEquiDist</code> .

Continues on next page

4.1.14 ICap - connect CAP events to trap routines

*Continuous Application Platform (CAP)**Continued*

Events	Phase	Event number	Description
FLY_END	MAIN	30	This event occurs when using <i>flying end</i> . This event is only available with <i>flying end</i> .
FLY_START	MAIN	29	This event occurs when using <i>flying start</i> . This event is only available with <i>flying start</i> .
LAST_INSTR_ENDED	MAIN	31	This event occurs when RAPID execution of the last CAP instruction is finished during <i>flying end</i> . This event is only available with <i>flying end</i> .
LAST_SEGMENT	MAIN	15	This event occurs at the starting point of the last segment.
MAIN_ENDED	END_MAIN	18	This event occurs when all conditions of the END_MAIN supervision list are fulfilled, that is, when the main process is considered ended.
MAIN_MOTION	MAIN	9	This event occurs when main motion is activated with the process running.
MAIN_STARTED	START	4	This event occurs when all conditions of the START Supervision list are fulfilled, that is, when the MAIN-phase is started.
MOTION_DELAY	MAIN	7	This event occurs after the delay, if any, of motion start. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
MOVE_STARTED	MAIN	10	This event occurs as soon as the robot starts moving along the process path. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
NEW_INSTR	MAIN	12	This event occurs when a new CapL or CapC instruction is fetched from the RAPID program.
PATH_END_POINT		19	This event occurs when the robot reaches the end point of the path, that is, the fine point or the middle of the zone (for <i>flying end</i>) in the last CAP instruction.
POST1_ENDED	END_POST1	22	This event occurs when all the conditions of the END_POST1 supervision list are fulfilled, that is, when the POST1 phase is successfully ended and the POST2 phase is started. If using a <i>flying end</i> no event is distributed.
POST1_STARTED	POST1	35	This event occurs when the supervision of the POST1-phase, if present, is activated. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.

Continues on next page

4 RAPID references

4.1.14 ICap - connect CAP events to trap routines

Continuous Application Platform (CAP)

Continued

Events	Phase	Event number	Description
POST2_ENDED	END_POST2	24	This event occurs when all the conditions of the END_POST2 supervision list are fulfilled, that is, when the POST2 phase, and thus the whole process, is successfully ended. If using a <i>flying end</i> no event is distributed.
POST2_STARTED	POST2	37	This event occurs when the supervision of the POST1-phase, if present, is activated. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
PRE_ENDED	PRE	33	This event occurs when the supervision of the PRE-phase, if present, is activated. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
PRE_STARTED	PRE	2	This event occurs when all the requirements of the PRE Supervision list are fulfilled, that is, when the PRE_START-phase is started. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
PROCESS_END_POINT	MAIN	16	This event occurs when the robot reaches the end point of the process, that is, where the process is supposed to be ended. If using a <i>flying end</i> no event is distributed.
PROCESS_ENDED		20	This event occurs only when both the process is ended at the fine point or the middle of the zone (for <i>flying end</i>) in the last CAP instruction.
RESTART	MAIN	11	This event occurs when restart is ordered.
START_MAIN	START	3	This event occurs when the PRE_START-phase is ended and the MAIN-phase is started.
START_POST1	POST1	34	This event occurs when the supervision of the POST1-phase, if present, is activated. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
START_POST2	POST2	36	This event occurs when the supervision of the POST1-phase, if present, is activated. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
START_PRE	PRE	1	This event occurs when the supervision of the PRE-phase, if present, is activated. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.

Continues on next page

4.1.14 ICap - connect CAP events to trap routines

*Continuous Application Platform (CAP)**Continued*

Events	Phase	Event number	Description
STARTSPEED_TIME	MAIN	8	This event occurs when the time to use <i>Start Speed</i> runs out and it is time to switch to main motion data.
STOP_WEAVESTART	MAIN	5	This event occurs, before each weave start - but only if weave start is ordered. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.
WEAVESTART_REGAIN	MAIN	6	This event occurs when the robot has regained back to the path after a weave start. If using a <i>flying start</i> no event is distributed, because there is a TCP movement already. At a restart this event is distributed.

Limitations

The same variable for interrupt identity cannot be used more than once, without first deleting it. Interrupts should therefore be handled as shown in one of the alternatives below.

```
PROC setup_events ()
  VAR intnum start_intno;
  IDelete start_intno;
  CONNECT start_intno WITH start_trap;
  ICap start_intno, CAP_START;
ENDPROC
```

All activation of interrupts is done at the beginning of the program. These instructions are then kept outside the main flow of the program. The ICap instruction should be executed only once, for example, from the startup system event routine. A recommendation is that the traps should be placed in a background task.

Syntax

```
ICap
  [Interrupt ':='] < variable (IN) of intnum > ','
  [Event ':='] < variable (IN) of num > ';'

```

Related information

For information about	See
CONNECT IDelete intnum	<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>

4 RAPID references

4.1.15 InitSuperv - Reset all supervision for CAP *Continuous Application Platform (CAP)*

4.1.15 InitSuperv - Reset all supervision for CAP

Usage

`InitSuperv` is used to initiate CAP supervision. This means that all supervision lists will be cleared and all I/O subscriptions will be removed.

Example

```
PROC main()  
  InitSuperv;  
  SetupSuperv diWR_EST, ACT,SUPERV_MAIN;  
  SetupSuperv diGA_EST, ACT,SUPERV_MAIN;  
  CapL p2, v100, cdata1, weavestart, weave,fine, tWeldGun;  
ENDPROC
```

`InitSuperv` is used to clear all supervision lists before setting up new supervision.

Limitations

The `InitSuperv` instruction should be executed only once, for example, from the startup shelf.

Syntax

```
InitSuperv ';' ;
```

Related information

For information about	See
SetupSuperv instruction	SetupSuperv - Setup conditions for signal supervision in CAP on page 103
RemoveSuperv instruction	RemoveSuperv - Remove condition for one signal on page 101

4.1.16 IPathPos - Get center line robtarget when weaving Continuous Application Platform (CAP)

4.1.16 IPathPos - Get center line robtarget when weaving

Usage

IPathPos is used to retrieve the position of the center line during weaving with CAP.

This function is mainly used together with the tracking functionality. It is necessary to activate weaving and the synchronization signals on both the left side and the right side.

Basic example

```
connect intpt, TRP_ipathpos IPathPos p_robtarget, sen_pos, intpt;
```

When `p_robtarget` gets a new calculated value, the interrupt `intpt` will be sent, and the trap routine `TRP_ipathpos` will be executed.

Arguments

```
IPathPos p_robtarget, sen_pos, intpt [\NoDispl] [\EOffs]
```

p_robtarget

Data type: robtarget

`p_robtarget` keeps the latest value of the calculated robtarget.

sen_pos

Data type: pos

`sen_pos` is not used.

intpt

Data type: intno

`intpt` specifies the interrupt that will be received each time a new value is assigned to `p_robtarget`.

[\NoDispl]

Data type: switch

If `\NoDispl` is specified, the value returned in the PERS `p_robtarget` will not include any displacement that might be specified using the RAPID instructions `PDispSet` and `PDispOn`.

[\EOffs]

Data type: switch

If `[\EOffs]` is specified, the value returned in the PERS `p_robtarget` will include any offset specified using the RAPID instruction `EOffsSet`.

Limitations

It is necessary to activate weaving and weave synchronization (with or without tracking).

Syntax

```
IPathPos
[p_robtarget ':='] < persistent (PERS) of robtarget > ','
```

Continues on next page

4 RAPID references

4.1.16 IPathPos - Get center line robtarget when weaving

Continuous Application Platform (CAP)

Continued

```
[sen_pos ':='] < persistent (PERS) of pos > ', '  
[Interrupt ':='] < variable (IN) of intnum >  
['\ ' EOffs ]  
['\ ' NoDispl ] ';' 
```

Related information

For information about	See
CapWeaveSync instruction	CapWeaveSync - set up signals and levels for weave synchronization on page 90
CapAPTrSetup instruction	CapAPTrSetup - Set up an At-Point-Tracker on page 43
CapLATrSetup instruction	CapLATrSetup - Set up a Look-Ahead-Tracker on page 80

4.1.17 RemoveSuperv - Remove condition for one signal Continuous Application Platform (CAP)

4.1.17 RemoveSuperv - Remove condition for one signal

Usage

RemoveSuperv is used to remove conditions added by SetupSuperv from supervision.

Basic example

```
PROC main()
  InitSuperv;
  SetupSuperv diWR_EST, ACT, SUPERV_MAIN \ErrIndSig:= do_WR_Sup;
  SetupSuperv diGA_EST, ACT, SUPERV_MAIN;
  CapL p2, v100, cdata1, weavestart, weave,fine, tWeldGun;
  RemoveSuperv di_Arc_Sup, ACT, SUPERV_START;
ENDPROC
```

Removes the signal *di_Arc_Sup* from the START list.

Arguments

RemoveSuperv Signal Condition Listtype

Signal

Data type: signal*di*

Digital signal to remove from supervision list.

Condition

Data type: num

The name representing one of the following available conditions:

ACT:	Used for status supervision. Expected signal status during supervision: active. If the signal becomes passive, supervision triggers.
PAS:	Used for status supervision. Expected signal status during supervision: passive. If the signal becomes active, supervision triggers.
POS_EDGE:	Used for handshake supervision. Expected signal status at the end of supervision: active. If the signal does not become active within the chosen timeout, supervision triggers.
NEG_EDGE:	Used for handshake supervision. Expected signal status at the end of supervision: passive. If the signal does not become passive within the chosen timeout, supervision triggers.

Listtype

Data type: num

The name representing the number of the different lists (for example, phases in the process):

- SUPERV_PRE
- SUPERV_PRE_START
- SUPERV_END_PRE
- SUPERV_START
- SUPERV_MAIN
- SUPERV_END_MAIN

Continues on next page

4 RAPID references

4.1.17 RemoveSuperv - Remove condition for one signal

Continuous Application Platform (CAP)

Continued

- SUPERV_START_POST1
- SUPERV_POST1
- SUPERV_END_POST1
- SUPERV_START_POST2
- SUPERV_POST2
- SUPERV_END_POST2

Syntax

```
RemoveSuperv
[Signal ':='] < variable (VAR) of signaldi > ','
[Condition ':='] < variable (IN) of num > ','
[Listtype ':='] < variable (IN) of num > ';'

```

Related information

For information about	See
InitSuperv instruction	InitSuperv - Reset all supervision for CAP on page 98
SetupSuperv instruction	SetupSuperv - Setup conditions for signal supervision in CAP on page 103

4.1.18 SetupSuperv - Setup conditions for signal supervision in CAP Continuous Application Platform (CAP)

4.1.18 SetupSuperv - Setup conditions for signal supervision in CAP

Usage

SetupSuperv is used to set up conditions for I/O signals to be supervised. The conditions are collected in different lists:

- PRE
- PRE_START
- END_PRE
- START
- MAIN
- END_MAIN
- START_POST1
- POST1
- END_POST1
- START_POST2
- POST2
- END_POST2

For more information about supervision lists see *Application manual - Continuous Application Platform*.

As an optional parameter an out signal can be specified. This out signal is set to high, if the given condition fails.

Basic example

```
PROC main()
  InitSuperv;
  SetupSuperv diWR_EST, ACT, SUPERV_MAIN \ErrIndSig:= do_WR_Sup;
  SetupSuperv diGA_EST, ACT, SUPERV_MAIN;
  CapL p2, v100, cdata1, weavestart, weave, fine, tWeldGun;
ENDPROC
```

SetupSuperv is used to set up supervision on signals. If signal *diWR_EST* fails during SUPERV_MAIN phase, the digital output signal *do_WR_Sup* is set high.

The SetupSuperv instruction should be executed only if supervision data is changed. If the supervision data is never changed, it is a good idea to put it into a module, that is executed from the startup shelf.

Arguments

SetupSuperv Signal Condition Listtype [\ErrIndSig]

Signal

Data type: signal_{di}

Digital signal to be supervised.

Continues on next page

4 RAPID references

4.1.18 SetupSuperv - Setup conditions for signal supervision in CAP

Continuous Application Platform (CAP)

Continued

Condition

Data type: num

The name representing one of the following available conditions:

ACT:	Used for status supervision. Expected signal status during supervision: active. If the signal becomes passive, supervision triggers.
PAS:	Used for status supervision. Expected signal status during supervision: passive. If the signal becomes active, supervision triggers.
POS_EDGE:	Used for handshake supervision. Expected signal status at the end of supervision: active. If the signal does not become active within the chosen timeout, supervision triggers.
NEG_EDGE:	Used for handshake supervision. Expected signal status at the end of supervision: passive. If the signal does not become passive within the chosen timeout, supervision triggers.

Listtype

Data type: num

The name representing the number of the different lists (for example, phases in the process):

- SUPERV_PRE
- SUPERV_PRE_START
- SUPERV_END_PRE
- SUPERV_START
- SUPERV_MAIN
- SUPERV_END_MAIN
- SUPERV_START_POST1
- SUPERV_POST1
- SUPERV_END_POST1
- SUPERV_START_POST2
- SUPERV_POST2
- SUPERV_END_POST2

[ErrIndSig]

Data type: signaldo

Used to indicate which condition that failed if a failure has occurred. When the failure occurs the value on this signal is set to 1. This is an optional parameter.

Program execution

The given signal and its condition is added to the selected list. If a signal fails, the CapL/CapC instruction will report that a supervision error occurred during the specified phase and which signal(s) failed.

Errors

CAP_SPV_LIM

The maximum number of supervisions set up is exceeded.

Continues on next page

4.1.18 SetupSuperv - Setup conditions for signal supervision in CAP Continuous Application Platform (CAP) Continued

CAP_SPV_UNK_LST

The supervision list is unknown.

Limitations

Only digital input signals can be supervised.

Status supervision applies for a complete sequence of CAP instructions (see section *Supervision and process phases* in *Application manual - Continuous Application Platform*).

Syntax

```
SetupSuperv
[Signal ':='] < variable (VAR) of signaldi > ','
[Condition ':='] < variable (IN) of num > ','
[Listtype ':='] < variable (IN) of num >
[\ErrIndSig ':='] < variable (VAR) of signaldo >] ';'

```

Related information

For information about	See
InitSuperv instruction	InitSuperv - Reset all supervision for CAP on page 98
RemoveSuperv instruction	RemoveSuperv - Remove condition for one signal on page 101

4 RAPID references

4.2.1 CapGetFailSigs - Get failed I/O signals

Continuous Application Platform (CAP)

4.2 Functions

4.2.1 CapGetFailSigs - Get failed I/O signals

Usage

`CapGetFailSigs` is used to return the names on the signal or signals that failed during supervision of `CapL` or `CapC`.

If supervision of one or several signals fails during the process a recoverable error will be returned from the `CapL/CapC` instruction. To determine which signal or signals that failed, `CapGetFailSigs` can be used in an error handler for all cases of supervision errors.

Basic example

```
Stringcopied := CapGetFailSigs(Failstring);
```

`Stringcopied` is assigned the value `TRUE` if the copy succeeds, and `FALSE` if it fails.

`Failstring` contains the signals that failed as text. If no string could be copied the string `EMPTY` is returned.

Return value

Data type: `bool`

`TRUE` or `FALSE` depending on if the fail string is modified.

Arguments

`CapGetFailSigs (ErrorNames)`

ErrorNames

Data type: `string`

`CapGetFailSigs` requires a string variable as input parameter.

Limitations

If many signals in a supervision list failed at the same time, only three of them are reported with `CapGetFailSigs`.

Syntax

```
CapGetFailSigs '('  
[ErrorNames ':=' ] < variable (INOUT) of string >')'
```

A function with a return value of the data type `bool`.

Related information

For information about	See
<code>InitSuperv</code>	InitSuperv - Reset all supervision for CAP on page 98
<code>SetupSuperv</code>	SetupSuperv - Setup conditions for signal supervision in CAP on page 103

Continues on next page

4.2.1 CapGetFailSigs - Get failed I/O signals

Continuous Application Platform (CAP)

Continued

For information about	See
RemoveSuperv	RemoveSuperv - Remove condition for one signal on page 101

4 RAPID references

4.3.1 capaptrreferencedata - Variable setup data for At-Point-Tracker Continuous Application Platform (CAP)

4.3 Data types

4.3.1 capaptrreferencedata - Variable setup data for At-Point-Tracker

Usage

capaptrreferencedata is used to setup the needed information for the At-Point-Tracker correction process setup by the CapAPTrSetupAO, CapAPTrSetupAI, and CapAPTrSetupPERS instructions.

Components

reference_y

Data type: num

Defines the reference for the Y position.

reference_z

Data type: num

Defines the reference for the Z position.

threshold_y

Data type: num

The difference between the input signal and the reference_y value must be greater than the threshold_y value for the regulator to react on the change.

threshold_z

Data type: num

The difference between the input signal and the reference_z value must be greater than the threshold_z value for the regulator to react on the change.

gain_y

Data type: num

The difference between the reference_y value and the input signal value is scaled with the gain_y value.

gain_z

Data type: num

The difference between the reference_z value and the input signal value is scaled with the gain_z value.

Structure

```
< data object of capaptrreferencedata >
  < reference_y of num >
  < reference_z of num >
  < threshold_y of num >
  < threshold_z of num >
  < gain_y of num >
  < gain_z of num >
```

Continues on next page

4.3.1 capaptrreferencedata - Variable setup data for At-Point-Tracker
Continuous Application Platform (CAP)
Continued

Related information

For information about	See
Instruction CapAPTrSetupAI	CapAPTrSetupAI - Setup an At-Point-Tracker controlled by analog input signals on page 46
Instruction CapAPTrSetupAO	CapAPTrSetupAO - Setup an At-Point-Tracker controlled by analog output signals on page 49
Instruction CapAPTrSetupPERS	CapAPTrSetupPERS - Setup an At-Point-Tracker controlled by persistent variables on page 52
Sensor Interface	Application manual - Controller software IRC5

4 RAPID references

4.3.2 capdata - CAP data

Continuous Application Platform (CAP)

4.3.2 capdata - CAP data

Usage

capdata contains all data necessary for defining the behavior of the CAP process.

Components

start_fly

Flying start

Data type: bool

Defines whether or not flying start is used:

Value	Consequence
TRUE	flying start is used
FALSE	flying start is NOT used

Flying start means that the robot movement is started before the process is started. The process is then started on the run (see [flypointdata - Data for flying start/end on page 133](#)).

end_fly

Flying end

Data type: bool

Defines whether or not flying end is used:

Value	Consequence
TRUE	flying end is used
FALSE	flying end is NOT used

Flying end means that the CAP process can be terminated before the robot reaches the end point, thus allowing the robot to leave the process path on the run that is, using a zone point (see [flypointdata - Data for flying start/end on page 133](#)).

first_instr

First instruction

Data type: bool

Defines whether or not a CapL/CapC instruction is the first instruction in a sequence of CapL/CapC instructions:

Value	Consequence
TRUE	this is the first instruction in a sequence of CapL/CapC instructions
FALSE	this is not the first instruction in a sequence of CapL/CapC instructions

last_instr

Last instruction

Data type: bool

Continues on next page

Defines whether or not a CapL/CapC instruction is the last instruction in a sequence of CapL/CapC instructions:

Value	Consequence
TRUE	this is the last instruction in a sequence of CapL/CapC instructions
FALSE	this is not the last instruction in a sequence of CapL/CapC instructions

restart_dist

Restart distance, unit: mm

Data type: num

Defines the distance the robot has to back along the path, when it is restarted after having encountered a stop when a CAP process was active.

In MultiMove systems all synchronized robots must use the same restart distance.

speed_data

Speed data for CAP

Data type: capspeeddata

Defines all CAP data concerning speed (see [capspeeddata - Speed data for CAP on page 118](#)).

start_fly_point

Data type: flypointdata

These data are only taken into account when start_fly is TRUE.

Defines flying start information for the CAP process (see [flypointdata - Data for flying start/end on page 133](#).)

end_fly_point

Data type: flypointdata

These data are only taken into account when end_fly is TRUE.

Defines flying end information for the CAP process (see [flypointdata - Data for flying start/end on page 133](#).)

sup_timeouts

Data type: supervtimeouts

Defines the timeouts used for all handshake supervision phases (see [supervtimeouts - Handshake supervision time outs on page 139](#) and section *Supervision in Application manual - Continuous Application Platform*).

proc_times

Data type: processtimes

Defines the timeouts used for the status supervision phases PRE, POST1, and POST2 (see [processtimes - process times on page 136](#) and section *Supervision and process phases in Application manual - Continuous Application Platform*).

block_at_restart

Data type: restartblkdata

Continues on next page

4 RAPID references

4.3.2 capdata - CAP data

Continuous Application Platform (CAP)

Continued

Defines the behavior of the CAP process during a restart (see [restartblkdata - blockdata for restart on page 137](#)).

Structure

```
< data object of capdata >
  < start_fly of bool >
  < end_fly of bool >
  < first_instr of bool >
  < last_instr of bool >
  < restart_dist of num >
  < speed_data of capspeeddata >
    < fly_start of num >
    < start of num >
    < startspeed_time of num >
    < startmove_delay of num >
    < main of num >
    < fly_end of num >
  < start_fly_point of flypointdata >
    < from_start of bool >
    < time_before of num >
    < distance of num >
  < end_fly_point of flypointdata >
    < from_start of bool >
    < time_before of num >
    < distance of num >
  < sup_timeouts of supervtimeouts >
    < pre_cond of num >
    < start_cond of num >
    < end_main_cond of num >
    < end_post1_cond of num >
    < end_post2_cond of num >
  < proc_times of processtimes >
    < pre of num >
    < post1 of num >
    < post2 of num >
  < block_at_restart of restartblkdata >
    < weave_start of bool >
    < motion_delay of bool >
    < pre_phase of bool >
    < startspeed_phase of bool >
    < post1_phase of bool >
    < post2_phase of bool >
```

Related information

	Described in:
capspeeddata data type	capspeeddata - Speed data for CAP on page 118
flypointdata data type	flypointdata - Data for flying start/end on page 133

Continues on next page

	Described in:
supervtimeouts data type	supervtimeouts - Handshake supervision time outs on page 139
processtimes data type	processtimes - process times on page 136
block_at_restart data type	restartblkdata - blockdata for restart on page 137
CapL instruction	CapL - Linear CAP movement instruction on page 70
CapC instruction	CapC - Circular CAP movement instruction on page 55

4 RAPID references

4.3.3 caplatrackdata - CAP Look-Ahead-Tracker track data Continuous Application Platform (CAP)

4.3.3 caplatrackdata - CAP Look-Ahead-Tracker track data

Usage

caplatrackdata contains data, with which the user can influence how the CapL/CapC instructions incorporate the path correction data generated by a Look-Ahead-Tracker (for example, Laser Tracker). caplatrackdata is part of the captrackdata.

Basic examples

```
PERS captrackdata captrack := ["laser1:",50,[1,10,1,0,0,0,0,0]]
CapL p1, v200, cd, wsd, cwd, z20, tWeldGun \Track:=captrack;
```

Components

joint_no

Data type: num

Defines the joint type (expressed as a number) the sensor equipment shall use during tracking.

filter

Data type: num

Defines the time constant of a low pass filter applied to path corrections. The component may be set to values between 1 and 10 where 1 gives the fastest response (no filtering) to path errors detected by the sensor.

calibframe_no

Data type: num

Defines which calibration frame of the three frames defined in CapLATrSetup, that shall be used.

Value	Calibration frame	Description
1	calibframe	Mandatory in CapLATrSetup
2	calibframe2	Optional in CapLATrSetup
3	calibframe3	Optional in CapLATrSetup)


seamoffs_y, seamoffs_z

Data type: num

The seam offset components are used to add constant offsets to the sensor generated path (in mm). If for example the sensor considers the upper edge of a


Continues on next page

lap joint to be the correct seam position, as indicated in the figure below, the seam offsets may be used to correct the path.

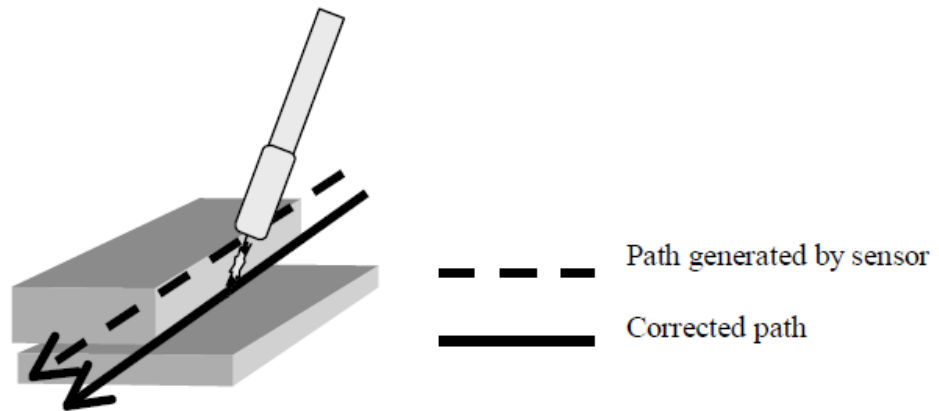

xx1200000199

The corrections are defined in the path coordinate system, which is right handed.

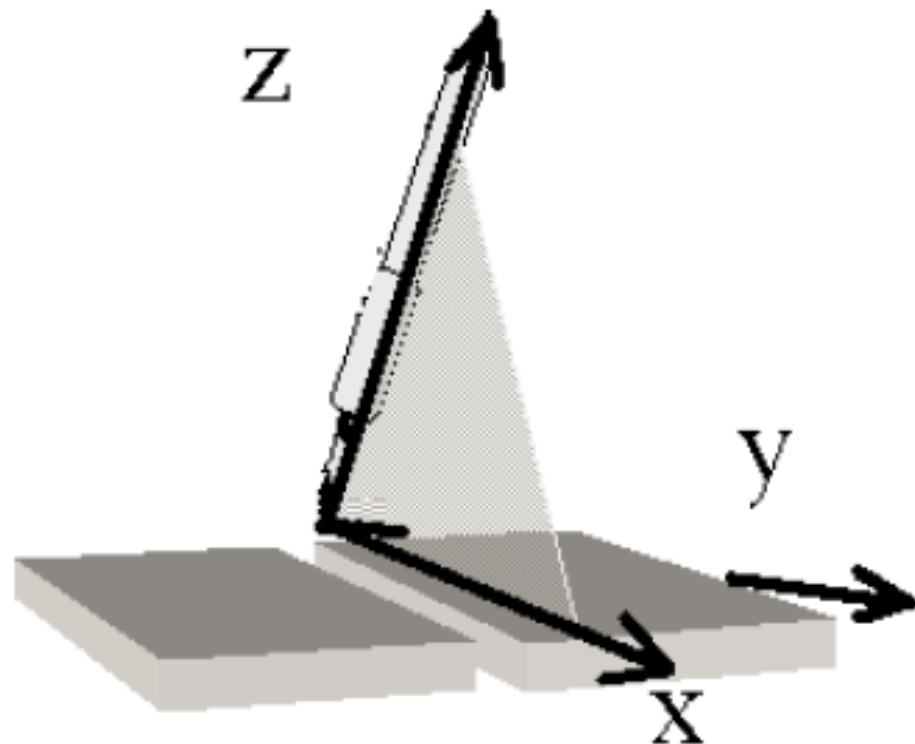

xx1200000200

- The x-direction is parallel to the path tangent.
- The z-direction is the tool z-vector.
- The x-direction is perpendicular to a plane through the x and z-directions.

seamadapt_y, seamadapt_z

Data type: num

Continues on next page

4 RAPID references

4.3.3 caplatrackdata - CAP Look-Ahead-Tracker track data

Continuous Application Platform (CAP)

Continued

The seam adapt components are similar to the seam offset components. The magnitudes of the offsets are however not given as fixed values. The offsets are calculated as the measured seam gap multiplied by the seam adapt values.

The components are used to adapt the tool offset with respect to the seam to optimize the process for different gap sizes.

track_mode

Data type: num

With the `track_mode` component it is possible to selectively influence the tracking behavior of a laser tracker.

Value	Track Mode
0	Normal tracking. y- and z-corrections are both taken into account
1	Tracking as if y-corrections sent by the Laser Tracker were zero. z-corrections are taken into account. ⁱ
2	Tracking as if z-corrections sent by the Laser Tracker were zero. y-corrections are taken into account. ⁱ
3	Tracking as if y- and z-corrections sent by the Laser Tracker were zero. ⁱ
4	y-correction switched off totally, that is, the correction of the y component is set to zero before it is sent to the robot. z-correction is taken into account. ⁱⁱ
5	z-correction switched off totally, that is, the correction of the z component is set to zero before it is sent to the robot. y-correction is taken into account. ⁱⁱ
6	y- and z-corrections are switched off totally, that is, the correction of the y and the z component is set to zero before it is sent to the robot. ⁱⁱ
7	y-correction is faded out, that is, the TCP returns ramped to the programmed y component of the path. z-correction is active.
8	z-correction is faded out, that is, the TCP returns ramped to the programmed z component of the path. y-correction is active.
9	y- and z-corrections are faded out, that is, the TCP returns ramped to the programmed path.
10	y-correction is faded in, that is, the TCP returns ramped to the programmed y component of the path. z-correction is active.
11	z-correction is faded in, that is, the TCP returns ramped to the programmed z component of the path. y-correction is active.
12	y- and z-corrections are faded in, that is, the TCP returns ramped to the programmed path.
13	Tracking as if y-corrections sent by the Laser Tracker were zero. z-corrections are taken into account. The difference to <code>track_mode 1</code> is, that the mode starts at the robot TCP position and not at the sensor TCP position. ⁱ
14	Tracking as if z-corrections sent by the Laser Tracker were zero. y-corrections are taken into account. The difference to <code>track_mode 2</code> is that the mode starts at the robot TCP position and not at the sensor TCP position. ⁱ

Continues on next page

4.3.3 caplatrackdata - CAP Look-Ahead-Tracker track data

*Continuous Application Platform (CAP)**Continued*

Value	Track Mode
15	Tracking as if y- and z-corrections sent by the Laser Tracker were zero. The difference to <code>track_mode 3</code> is that the mode starts at the robot TCP position and not at the sensor TCP position. ⁱ

- ⁱ For `track_mode 1, 2, or 3`, the accumulated correction from the previous `CapL/CapC` instruction will be preserved for y or/and z and passed on to the next `CapL/CapC` instruction. This is the case during the whole lifetime of the CAP process. A new CAP process will be unaffected
- ⁱⁱ For `track_mode 4, 5, or 6`, the sensor readings are accumulated even though y- and/or z-correction is set to zero before sending to the robot. That means, a 'dip' might occur in the beginning and in the end of the `CapL/CapC` instruction.

Syntax

```

< data object of caplatrackdata >
  < joint_no of num >
  < filter of num >
  < calibframe_no of num >
  < seamoffs_y of num >
  < seamoffs_z of num >
  < seamadapt_y of num >
  < seamadapt_z of num >
  < track_mode of num >

```

Related information

	Described in:
captrackdata data type	captrackdata - CAP track data on page 121

4 RAPID references

4.3.4 capspeeddata - Speed data for CAP *Continuous Application Platform (CAP)*

4.3.4 capspeeddata - Speed data for CAP

Usage

`capspeeddata` is used to define all data concerning velocity for a CAP process - it is part of `capdata` and defines all velocity data and process times needed for a CAP process:

- velocity and how long this velocity shall be used at the start of the CAP process,
- delay for the movement of the robot relative the start of the CAP process,
- velocity for the CAP process,

The velocity is restricted by the performance of the robot. This differs, depending on the type of robot and the path of movement.

Components

`fly_start`

Data type: `num`

Not used.

`start`

Data type: `num`

Velocity (in mm/s) used at the start of the CAP process.

`startspeed_time`

Data type: `num`

The time (in seconds) to run at `start` velocity.

`startmove_delay`

Data type: `num`

The time (in seconds) that the robot movement is delayed relative the start of the CAP process.

`main`

Data type: `num`

The main CAP process velocity (mm/s).

`fly_end`

Data type: `num`

Not used.

Structure

```
< data object of capspeeddata >  
  < fly_start of num >  
  < start of num >  
  < startspeed_time of num >  
  < startmove_delay of num >  
  < main of num >  
  < fly_end of num >
```

Continues on next page

4.3.4 capspeeddata - Speed data for CAP *Continuous Application Platform (CAP)* *Continued*

Related information

	Described in:
capdata data type	capdata - CAP data on page 110

4 RAPID references

4.3.5 capstopmode - Defines stop modes for CAP *Continuous Application Platform (CAP)*

4.3.5 capstopmode - Defines stop modes for CAP

Usage

`capstopmode` is used to define the available stop modes in CAP.

Basic examples

The following example illustrates the data type `capstopmode`.

Example 1

```
CAPSetStopMode SMOOTH_STOP_ON_PATH;
```

Predefined values

Value	Description
SMOOTH_STOP_ON_PATH	The robot movement is stopped smoothly without leaving the programmed path.
QUICK_STOP_ON_PATH	The robot movement is stopped as fast as possible without leaving the programmed path.
EMERGENCY_STOP	The robot movement is stopped as fast as possible regardless if it leaves the programmed path.

Characteristics

`capstopmode` is an alias data type for `num` and consequently inherits its characteristics.

Related information

	Described in:
Instruction <code>CAPSetStopMode</code>	CAPSetStopMode - Set the stop mode for execution errors on page 89

4.3.6 captrackdata - CAP track data

Usage

captrackdata provides the CapL/CapC instructions with all data necessary for path correction with a Look-Ahead- or At-Point-Tracker. The data is passed to the CapL/C instructions with use of the optional argument \Track.

The component device determines, which type of tracker is to be used.

captrackdata cannot be changed within a sequence of CapL/CapC instructions.

The component device is set by the first CapL/C instruction - if it is different in the remaining CapL/C instructions of the same sequence of CapL/CapC instructions, it will not have any effect.

To be able to change the captrackdata to be used in a CapL/CapC instruction, the sequence has to be terminated first by setting the component last_inst to TRUE in capdata.

If the \Track is not present in the first CapL/C instruction and all following in the same sequence of CapL/CapC instructions, no correction will be applied.

Basic examples

SIO.cfg:

```
COM_TRP:
-Name "SCOUT:" -Type "RTP1"
-Name "digi-ip:" -Type "SOCKDEV" -PhyChannel "LAN1" -RemoteAdress
"192.168.125.5"
```

RAPID program:

```
PERS captrackdata captrack1 := ["digi-ip:",50,[1,10,1,0,0,0,0,0]];
CONST string laser := "digi-ip: ";
PERS pose pose1 := [[137.867,-326.31,18.5],
[0.640984,0.766438,0.0348674,0.0223137]];
PROC main()
VAR pos sensorPos;
CapLATrSetup laser, pose1, pos \SensorFreq:=10 \CorrFilter:=5
\MaxBlind:=100 \MaxIncCorr:=2;
WriteVar laser, 6, 1;
! sensor ON
CapL p1, v200, cd, wsd_event, cwd, z20, tWeldGun
\Track:=captrack1;
CapC p2, p3, v200, cd2, wsd, cwd, z20, tWeldGun \Track:=captrack1;
CapL p4, v200, cd3, wsd, cwd, fine, tWeldGun \Track:=captrack1;
WriteVar laser, 6, 0;
! sensor OFF
ENDPROC
```

Components

device

Sensor device

Data type: string

Continues on next page

4 RAPID references

4.3.6 captrackdata - CAP track data

Continuous Application Platform (CAP)

Continued

Defines, to which device the sensor is connected, that shall be used in the CapL/CapC instructions to generate path corrections.

max_corr

Maximum allowed path correction

Data type: num

Defines the maximum path correction allowed.


For Look-Ahead trackers:

- If the TCP offset due to path corrections is more than max_corr and \WarnMaxCorr was specified in CapLATrSetup, the robot will continue its path but the applied path correction will not exceed max_corr.
- If \WarnMaxCorr was not specified, a track error is reported and program execution is stopped.

For At-Point trackers:

- If the TCP offset due to path corrections is more than max_corr, a track error is reported and program execution is stopped.

The figure shows the tool in a position relative to the programmed path where a max_corr track error would be reported. Unit: mm

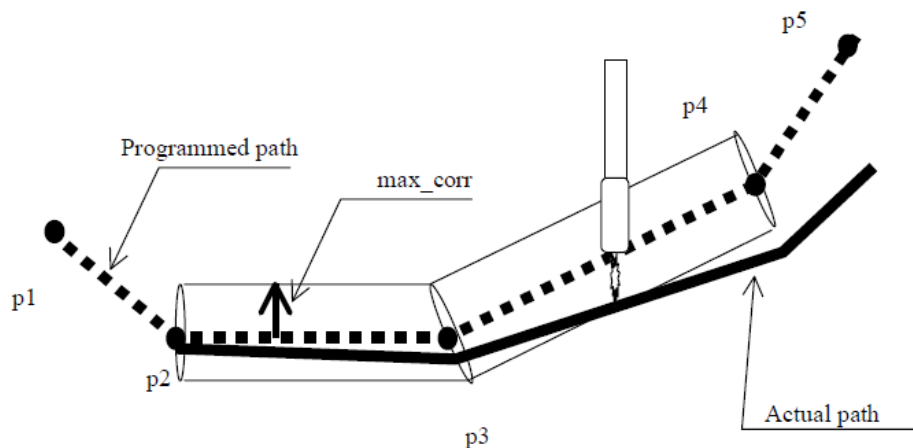

xx1200000198

la_trackdata

Look-Ahead-Tracker track data

Data type: caplatrackdata

Defines tracking data, that are specific for Look-Ahead-Trackers (for example, laser trackers).

Syntax

```
< data object of captrackdata >  
  < device of string >  
  < max_corr of num>  
  < la_trackdata of caplatrackdata >
```

Continues on next page

Related information

	Described in:
caplatrackdata	caplatrackdata - CAP Look-Ahead-Tracker track data on page 114
CapAPTrSetup	CapAPTrSetup - Set up an At-Point-Tracker on page 43
CapLATrSetup	CapLATrSetup - Set up a Look-Ahead-Tracker on page 80

4 RAPID references

4.3.7 captrackoffsframe - Defines frame in which the captrackdata components seamoffs_y and seamoffs_z are applied

Continuous Application Platform (CAP)

4.3.7 captrackoffsframe - Defines frame in which the captrackdata components seamoffs_y and seamoffs_z are applied

Usage

captrackoffsframe is used to define the frame in which the captrackdata components seamoffs_y and seamoffs_z are applied. The default frame is the sensor measurement coordinate system.

Basic examples

The following example illustrates the data type captrackoffsframe.

Example 1

```
CapL p90, v200, capdata1, capwvst1, capwv1, z10,  
  tWeldGun\Track:=captrack1  
  \TrackOffsetFrame:=CAP_OFFSET_FRAME_PATH;
```

Predefined values


Value	Description
CAP_OFFSET_FRAME_SENSOR	The sensor measurement coordinate system. This is the default value, if this optional argument is not present.
CAP_OFFSET_FRAME_PATH	The path coordinate system.

Continues on next page

4.3.7 captrackoffsframe - Defines frame in which the captrackdata components seamoffs_y and seamoffs_z are applied

Continuous Application Platform (CAP)

Continued

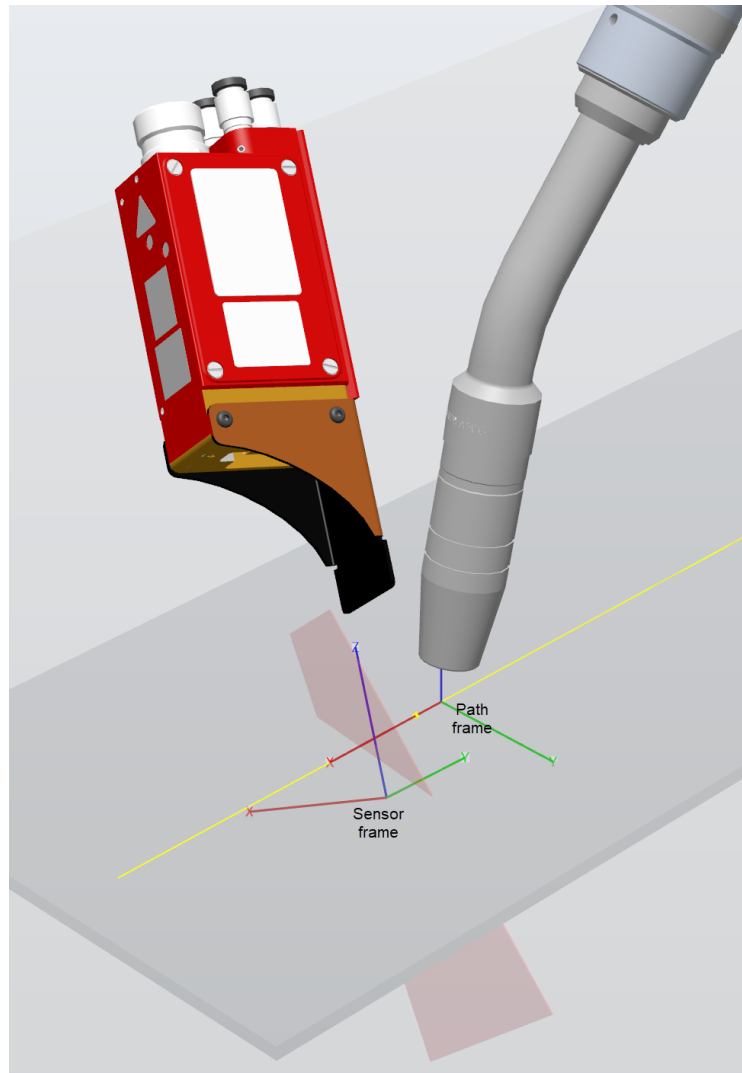

xx2400000789

Characteristics

captrackoffsframe is an alias data type for num and inherits its characteristics.

Related information

	Described in:
Instruction CapC	CapC - Circular CAP movement instruction on page 55
Instruction CapL	CapL - Linear CAP movement instruction on page 70

4 RAPID references

4.3.8 capweavedata - Weavedata for CAP *Continuous Application Platform (CAP)*

4.3.8 capweavedata - Weavedata for CAP

Usage

`capweavedata` is used to define weaving for a CAP process during its MAIN phase (see *Application manual - Continuous Application Platform*).

Description of weaving

Weaving is superimposed on the basic path of the process. That means, that the process speed (defined in `capspeeddata`) is kept as defined, but the TCP speed is increased unless the physical robot limitations are reached.

Available weaving types:

- geometric weaving: most accurate shape
- wrist weaving: only robot axis 6 is used for weaving
- rapid weaving: geometric weaving but specifying weaving frequency instead of length
- rapid weaving axis 4-6: only robot axis 4, 5 and 6 are used for weaving

Available weaving shapes:

- Zig-zag weaving
- V-shaped weaving
- Triangular weaving
- Circular weaving

All `capweavedata` components apply to the MAIN phase.

Components

The path coordinate system is defined by:

- X: path/movement direction
- Z: tool z-direction
- Y: perpendicular to both X and Z as to build a right-handed coordinate system

active

Data type: `bool`


Value	Description
TRUE	Perform weaving during the MAIN phase of the CAP process
FALSE	Do NOT perform weaving during the MAIN phase of the CAP process

Continues on next page

width

Data type: num

For circular weaving, width is the radius of the circle (W in the following figure).
For all other weaving shapes, width is the total amplitude of the weaving pattern.

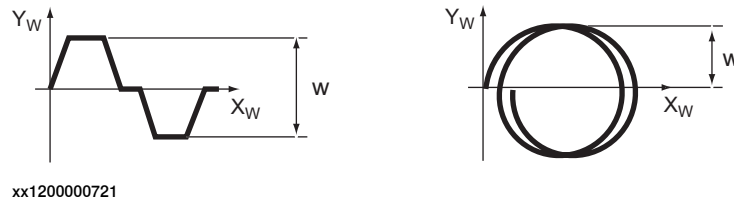

shape

Data type: num

The shape of the weaving pattern in the main phase.

Value	Shape geometry	Result
0	No weaving	
1	Zig-zag weaving	Weaving horizontal to the seam xx1200000714
2	V-shaped weaving	Weaving in the shape of a "V", vertical to the seam xx1200000715
3	Triangular weaving	A triangular shape, vertical to the seam xx1200000716
4	Circular weaving (Only available with geometric weaving, weaving type 0)	A circular shape, vertical to the seam xx1200000717

type

Data type: num

Defines what axes are used for weaving during the MAIN phase

Specified value	Weaving type
0	Geometric weaving. All axes are used during weaving.
1	Wrist weaving. Mainly axis 4, 5 and 6 are used during weaving.
2	Rapid weaving. Mainly axis 4, 5 and 6 are used during weaving, but weaving frequency is specified instead of weaving length.
3	Rapid weaving, mainly with Axes 4, 5 and 6.

Continues on next page

4 RAPID references

4.3.8 capweavedata - Weavedata for CAP

Continuous Application Platform (CAP)


Continued

length

Data type: num

Defines the length of the weaving cycle in the MAIN phase for geometric weaving (type = 0) and wrist weaving (type = 1). The length argument is not used for the other weaving types.

For circular weaving the length component defines the distance between two successive circles (L) if the cycle_time argument is set to 0. The TCP rotates left with a positive length value, and right with a negative length value. If cycle_time has a value then length is not used.

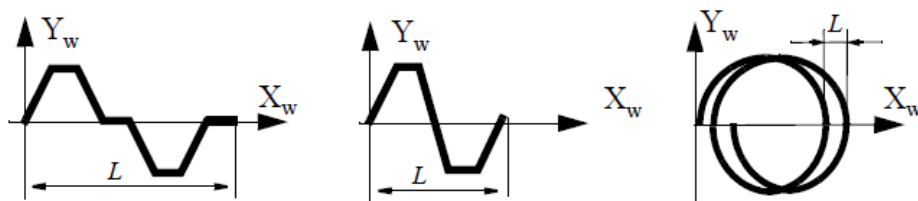


xx1200000187

cycle_time

Data type: num

Defines the weaving frequency (in Hz) in the MAIN phase for of Rapid weaving types and for circular weaving. The cycle_time argument is not used for the other weaving types.

For circular weaving the cycle_time argument defines the number of circles per second. The TCP rotates left with a positive cycle_time value, and right with a negative cycle_time value. If cycle_time has a value then length is not used.

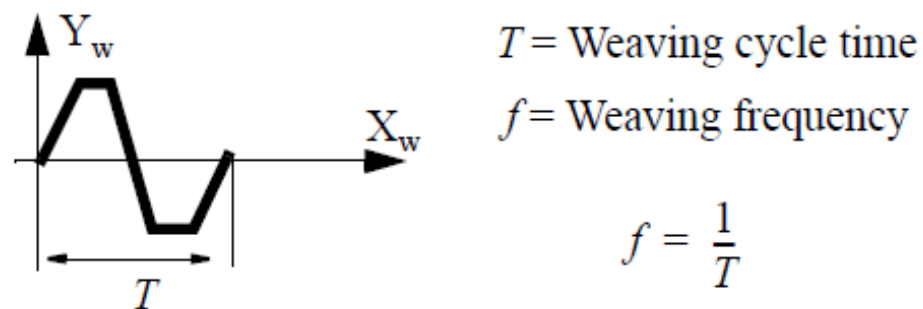

xx1200000188


height

Data type: num

Defines the height of the weaving pattern (in mm) during V-shaped and triangular weaving.

Continues on next page

Not available for circular weaving.

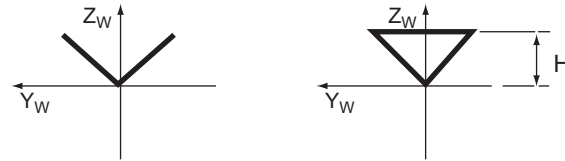


xx1200000722

dwel_left

Data type: num

The length of the dwell (DL) used to force the TCP to move only in the direction of the seam at the left turning point of the weave. Not available for circular weaving.

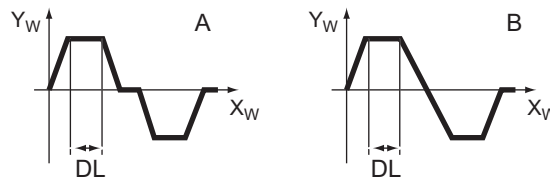


xx1200000723

A	Zigzag and V-shaped weaving
B	Triangular weaving

dwel_center

Data type: num

The length of the dwell (DC) used to force the TCP to move only in the direction of the seam at the center point of the weave. Not available for circular weaving.

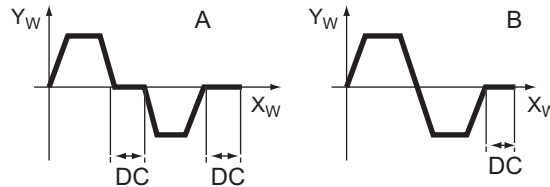


xx1200000724

A	Zigzag and V-shaped weaving
B	Triangular weaving

dwel_right

Data type: num

The length of the dwell (DR) used to force the TCP to move only in the direction of the seam at the right turning point of the weave. Not available for circular weaving.

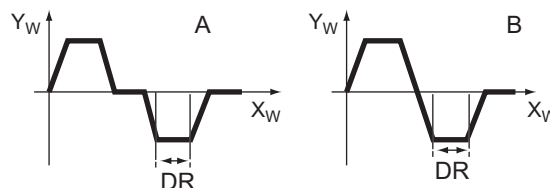

xx1200000725

Continues on next page


4 RAPID references

4.3.8 capweavedata - Weavedata for CAP
Continuous Application Platform (CAP)
Continued

A	Zigzag and V-shaped weaving
B	Triangular weaving


dir

Data type: num
The weave direction angle horizontal to the seam. An angle of zero degrees results in a weave vertical to the seam.

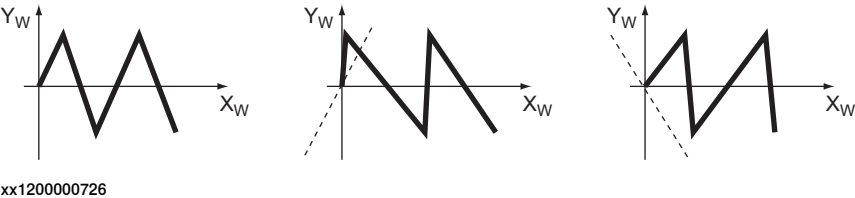


tilt

Data type: num
The weave tilt angle, vertical to the seam. An angle of zero degrees results in a weave which is vertical to the seam.

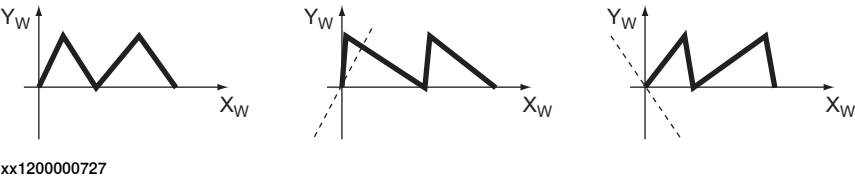


rot

Data type: num
The weave orientation angle, horizontal-vertical to the seam. An angle of zero degrees results in symmetrical weaving.

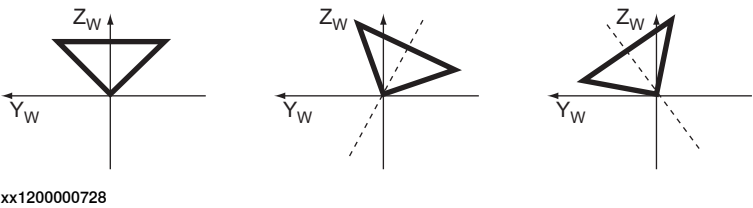

bias

Data type: num
The bias horizontal to the weaving pattern. The bias can only be specified for zig-zag weaving and may not be greater than half the width of the weave. Not available for circular weaving.
The following figure shows zigzag weaving with and without bias (B).

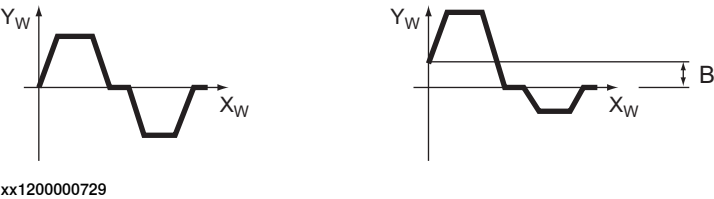

Continues on next page

ptrn_sync_on


Data type: bool

Value	Description
TRUE	Send synchronization pulses at the right and left turning points of the weave pattern
FALSE	Do NOT send synchronization pulses at the right and left turning points of the weave pattern

Limitations

The maximum weaving frequency is 2 Hz.

The inclination of the weaving pattern must not exceed the ratio 1:10 (84 degrees).
See the following figure.

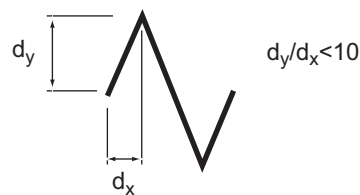

xx1200000730

Change of `weave_type` in `weavedata` is not possible in zone points, only in fine points. This is the behavior for both *TrueMove* and *QuickMove*, first and second generation.

All robots, that use *TrueMove* or *QuickMove* second generation have the following changed behavior for the different weaving types available in RW Arc, compared to *TrueMove* or *QuickMove* first generation:

- Geometric weaving - There is no change.
- Wrist weaving - uses mainly the wrist axes (4, 5, and 6) but small corrections can also be added to the main axes to be able to keep the pattern in the desired plane.
- Rapid weaving - In *TrueMove* or *QuickMove* second generation both geometric weaving and wrist weaving have highly improved performance. Therefore Rapid weaving (both types) is not necessary as a special weaving type any more.
Rapid weaving axis 1, 2, and 3 is the same as geometric weaving.
Rapid weaving axis 4, 5, and 6 is the same as wrist weaving.
The weaving types are still available for backward compatibility.

The system uses *TrueMove* or *QuickMove* second generation, if there is a switch `dyn_ipol_type 1` in `MOC.cfg` in the `MOTION_PLANNER` data (system parameters).

Syntax

```
< data object of capweavedata >
  < active of bool>
  < width of num >
  < shape of num >
```

Continues on next page

4 RAPID references

4.3.8 capweavedata - Weavedata for CAP

Continuous Application Platform (CAP)

Continued

< type of num >
< length of num >
< cycle_time of num >
< height of num >
< dwell_left of num >
< dwell_center of num >
< dwell_right of num >
< dir of num >
< tilt of num >
< rot of num >
< bias of num >
< ptrn_sync_on of bool >

Related information

	Described in:
capdata data type	capdata - CAP data on page 110

4.3.9 flypointdata - Data for flying start/end

Usage

`flypointdata` is used to define all data of flying start or flying end for a CAP process - it is part of `capdata` for both flying start and flying end.

Definitions

`flypointdata` defines data for both flying start and flying end:

- This functionality is only available for CAP.
- Flying start is triggered by the combination of *first instruction* = *TRUE* and zone point.
- Flying end is triggered by the combination of *last_instr* = *TRUE* and zone point.
- Weavestart will be ignored.
- If the starting point is a fine point, no flying start will be performed.
- If the end point is a fine point, no flying end will be performed.
- Motion delay will be ignored.
- Restart after an error will work in the same way as usual: there are no specific features for flying start, scrape start is available, if the application process was active, when the error occurred.
- If weaving is activated, the transition in the zone is made by ramping in the weaving pattern starting at the entrance to the zone until the full pattern is reached when the TCP leaves the zone.
- Supervision is active during START phase (with moving TCP), MAIN phase and END_MAIN phase (with moving TCP).
- Backing on the path will be limited to backing to position 4 (see the following figure).
- The user has to adapt distance and the approach and leaving angle to the application process: for example, for arc welding at the point where the arc shall be established (point 4 in the figure) has to be selected in such a way, that it is possible to ignite.
- The distance between position 4 and 6 must not be = 0.
- The `START process_dist` must be equal to or shorter than `START distance`.
- If program execution is stopped and the application process is active (between positions 3 and 6), CAP will behave as usual, that is, backing on path (only if pos. 4 had been passed), weave start, motion delay and movement start timeout are available.
- If program execution is stopped between positions 1 and 3 or between positions 7 and 10, the `CapX` instruction will behave like a `TrigX` instruction.
- The first CAP segment with flying start is recommended to be at least `START distance` long.

Continues on next page


4 RAPID references

4.3.9 flypointdata - Data for flying start/end

Continuous Application Platform (CAP)

Continued

- If the first segment is shorter than `START distance`, but longer than `START process_dist`, the positions 2 and 4 will be moved towards position 1.
- If the first segment is shorter than or equal `START process_dist`, positions 1 and 2 will coincide and position 4 will be at the end of the segment.
- The last CAP segment with flying end is recommended to be at least `END distance + END process_dist` long.
- If the last segment is shorter than `END distance + END process_dist`, but longer than `END process_dist`, the positions 7 and 9 will be moved towards position 10.
- If the last segment is shorter than or equal `END process_dist`, positions 8 and 10 will coincide and position 6 will be at the start of the segment.
- The `START` phase timeout specified in `capdata` will only be used at restart of the application process.
- If a process error occurs after the prefetch request from motion has arrived at the last CAP instruction (after position 9), that is, `PGM` is released from the CAP instruction and may continue with the next instruction, an error log message is sent, the process is stopped, *but* the robot movement continues.

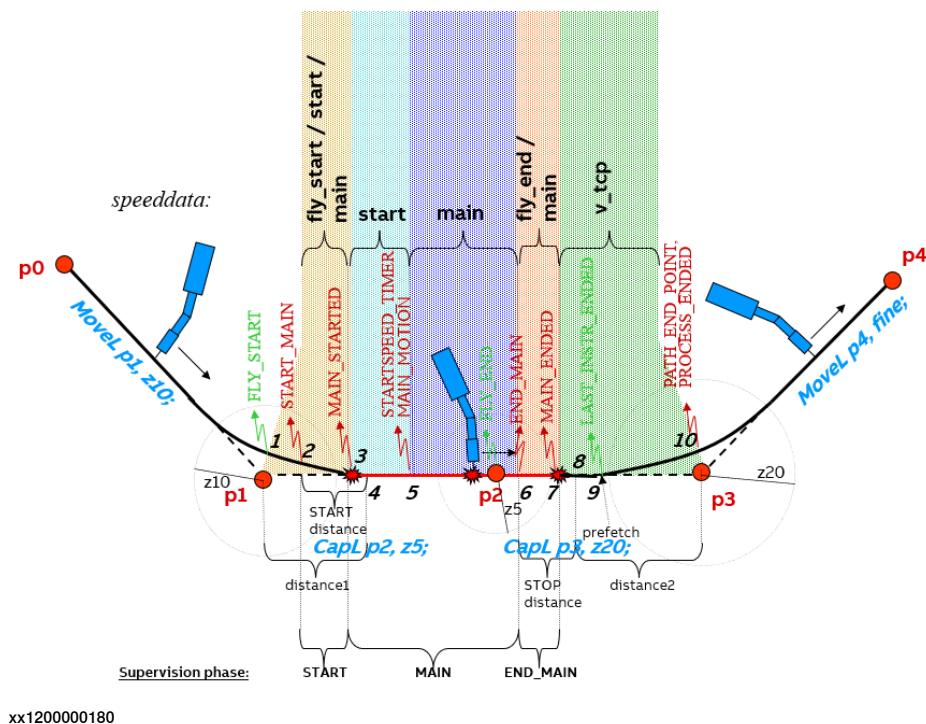

xx1200000180

Components

from_start

Data type: bool

Not used.

process_dist

Data type: num

Continues on next page

4.3.9 flypointdata - Data for flying start/end
Continuous Application Platform (CAP)
Continued

The distance (in mm) within which the process is started (for *flying start*) or ended (for *flying end*).

distance

Data type: num

Sets the start/end of the supervision of the CAP process as a distance (in mm) from the start/end point.

Structure

```
< databases of flypointdata >  
< from_start of bool >  
< process_dist of num >  
< distance of num >
```

Related information

	Described in:
capdata data type	capdata - CAP data on page 110

4 RAPID references

4.3.10 processtimes - process times

Continuous Application Platform (CAP)

4.3.10 processtimes - process times

Usage

`processtimes` is used to define the duration times for all status supervision phases in CAP, except phase MAIN, which is defined by the robot movement (see section *Supervision in Application manual - Continuous Application Platform*).

`processtimes` is a component of `capdata` and defines the timeout times for the following status supervision phases in CAP:

- PRE_START
- POST1
- POST2

The specified timeout time has to be larger than zero, if supervision should be used during the corresponding status supervision phase in CAP (see section *Supervision and process phases in Application manual - Continuous Application Platform*).

Components

pre

Data type: num

Defines the duration of the phase PRE_START in seconds. During that time all conditions defined for that phase have to be fulfilled.

post1

Data type: num

Defines the duration of the phase POST1 in seconds. During that time all conditions defined for that phase have to be fulfilled.

post2

Data type: num

Defines the duration of the phase POST2 in seconds. During that time all conditions defined for that phase have to be fulfilled.

Syntax

```
< data object of processtimes >
  < pre of num >
  < post1 of num >
  < post2 of num >
```

Related information

	Described in:
<code>capdata</code> data type	capdata - CAP data on page 110

4.3.11 restartblkdata - blockdata for restart

Usage

restartblkdata is used to define the behavior of a CAP process at restart.

restartblkdata is a component of capdata and defines the following for a CAP process at restart, if:

- The robot should execute/block weaving stationary during process restart (weave_start).
- Robot movement restart should be delayed or not relative process restart (motion_delay).
- The phases START_PRE, PRE and END_PRE should be executed/blocked (pre_phase).
- A velocity different from main velocity should be used or not during start of the process (startspeed_phase).
- The phases START_POST1, POST1 and END_POST1 should be executed/blocked (post1_phase).
- The phases START_POST2, POST2 and END_POST2 should be executed/blocked (post2_phase).

Components

weave_start

Data type: bool

Value	Description
FALSE	Stationary weaving at restart until the process has started
TRUE	No stationary weaving at restart until the process has started

motion_delay

Data type: bool

Value	Description
FALSE	Delay of robot movement at restart after the process has started
TRUE	No delay of robot movement at restart after the process has started

pre_phase

Data type: bool

Value	Description
FALSE	Execute the phases PRE, PRE_START and END_PRE phase at restart
TRUE	Do NOT execute the phases PRE, PRE_START and END_PRE phase at restart

Continues on next page

4 RAPID references

4.3.11 restartblkdata - blockdata for restart

Continuous Application Platform (CAP)

Continued

startspeed_phase

Data type: bool

Value	Description
FALSE	Move the robot with start speed in the beginning of a restart
TRUE	Do NOT move the robot with start speed in the beginning of a restart, use main speed directly

post1_phase

Data type: bool

Value	Description
FALSE	Execute the phases START_POST1, POST1 and END_POST1 at restart
TRUE	Do NOT execute the phases START_POST1, POST1 and END_POST1 at restart

post2_phase

Data type: bool

Value	Description
FALSE	Execute the phases START_POST2, POST2 and END_POST2 at restart
TRUE	Do NOT execute the phases START_POST2, POST2 and END_POST2 at restart

Syntax

```
< data object of restartblkdata >  
  < weave_start of bool >  
  < motion_delay of bool >  
  < pre_phase of bool >  
  < startspeed_phase of bool >  
  < post1_phase of bool >  
  < post2_phase of bool >
```

Related information

	Described in:
capdata data type	capdata - CAP data on page 110

4.3.12 supervtimeouts - Handshake supervision time outs

Usage

`supervtimeouts` is used to define timeout times for handshake supervision in CAP.

`supervtimeouts` is a component of `capdata` and defines the timeout times for the following handshake supervision phases in CAP:

- PRE
- END_PRE and START
- END MAIN and START_POST1
- END_POST1 and START_POST2
- END_POST2

If the parameter is set to 0, there is no timeout.

Components

`pre_cond`

Data type: `num`

Timeout time (in seconds) for the PRE phase conditions to be fulfilled.

`start_cond`

Data type: `num`

Timeout time (in seconds) for the END_PRE and START phase conditions to be fulfilled.

`end_main_cond`

Data type: `num`

Timeout time (in seconds) for the END_MAIN and START_POST1 phase conditions to be fulfilled.

`end_post1_cond`

Data type: `num`

Timeout time (in seconds) for the END_POST1 and START_POST2 phase conditions to be fulfilled.

`end_post2_cond`

Data type: `num`

Timeout time (in seconds) for the END_POST2 phase conditions to be fulfilled.

Syntax

```
< data object of supervtimeouts >  
  < pre_cond of num >  
  < start_cond of num >  
  < end_main_cond of num >  
  < end_post1_cond of num >  
  < end_post2_cond of num >
```

Continues on next page

4 RAPID references

4.3.12 supervtimeouts - Handshake supervision time outs

Continuous Application Platform (CAP)

Continued

Related information

	Described in:
capdata data type	capdata - CAP data on page 110

4.3.13 weavestartdata - weave start data

Usage

`weavestartdata` is used to control stationary weaving during start and restart of a process in CAP.

`weavestartdata` is a component of `capdata` and defines the properties of stationary weaving at start or restart of a CAP process:

- if there shall be stationary weaving at start (`active`)
- width of stationary weaving (`width`)
- direction relative path direction (`dir`)
- frequency of stationary weaving (`cycle_time`)

Stationary weaving uses always geometric weaving with zig-zag pattern, see [capweavedata - Weavedata for CAP on page 126](#).

Components

active

Data type: `bool`

Value	Description
TRUE	Perform stationary weaving at start of a CAP process
FALSE	Do NOT perform stationary weaving at start of a CAP process

width

Data type: `num`

Defines the amplitude of stationary weaving (mm).

dir

Data type: `num`

Defines the direction of stationary weaving relative to the path direction (degrees). Zero degrees means weaving perpendicular to both the path and the z-coordinate of the tool.

cycle_time

Data type: `num`

Defines the total time (in seconds) for a complete cycle of stationary weaving, that is, it defines the weaving frequency. The stationary weaving will last until the process has started, that is, the supervision criteria of the START_MAIN phase are fulfilled.

Syntax

```
< data object of weavestartdata >
  < active of bool >
  < width of num >
  < dir of num >
  < cycle_time of num >
```

Continues on next page

4 RAPID references

4.3.13 weavestartdata - weave start data
Continuous Application Platform (CAP)
Continued

Related information

	Described in:
capdata data type	capdata - CAP data on page 110

Index

C

- capaptrreferencedata, 108
- CapAPTrSetup, 43
- CapAPTrSetupAI, 46
- CapAPTrSetupAO, 49
- CapAPTrSetupPERS, 52
- CapC, 55
- CapCondSetDO, 66
- capdata, 110
- CapEquiDist, 68
- CapGetFailSigs, 106
- CapL, 70
- caplatrackdata, 114
- CapLATrSetup, 80
- CapNoProcess, 85
- CapRefresh, 87
- CAPSetStopMode, 89
- capspeeddata, 118
- capstopmode, 120, 124
- captrackdata, 121
- capweavedata, 126
- CapWeaveSync, 90
- corner zones
 - program execution, 22
 - recommendations, 21
- coupling between phases and events, 24

E

- errors
 - limitations, 37

- recoverable, 27
- event routines
 - system, 36
- events
 - predefined, 23

F

- flypointdata, 133

I

- ICap, 93
- InitSuperv, 98
- IPathPos, 99

P

- predefined events, 23
- processtimes, 136

R

- RaiseToUser, 33
- RemoveSuperv, 101
- restartblkdata, 137

S

- SetupSuperv, 103
- supervtimeouts, 139
- system event routines, 36

U

- units, 34

W

- weavestartdata, 141

**ABB AB****Robotics & Discrete Automation**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS**Robotics & Discrete Automation**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

ABB Inc.**Robotics & Discrete Automation**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics