



ROBOTICS

Application manual

RobotWare Add-Ins



Trace back information:
Workspace 25A version a14
Checked in 2025-03-07
Skribenta version 5.6.018

Application manual

RobotWare Add-Ins

RobotWare 6.16

Document ID: 3HAC051193-001

Revision: M

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2015-2025 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

| | |
|---|------------|
| Overview of this manual | 7 |
| 1 Introduction | 9 |
| 1.1 About RobotWare Add-Ins | 9 |
| 1.2 The CIRCLEMOVE example | 11 |
| 2 RobotWare Add-In functionality | 13 |
| 2.1 Required files and file structure | 13 |
| 2.2 version.xml | 15 |
| 2.3 The install.cmd file | 17 |
| 2.3.1 Introduction | 17 |
| 2.3.2 Commands | 18 |
| 2.3.3 Examples of install.cmd files | 28 |
| 2.4 RAPID modules | 29 |
| 2.5 Custom event log messages | 31 |
| 2.5.1 About event log messages | 31 |
| 2.5.2 Event log texts | 32 |
| 2.5.3 Event log titles | 34 |
| 2.5.4 Validating event log .xml files | 35 |
| 2.6 System parameters related to add-in development | 36 |
| 2.6.1 About cfg files | 36 |
| 2.6.2 Topic Controller | 39 |
| 2.6.3 Topic I/O System | 43 |
| 2.6.4 Topic Man-machine Communication | 44 |
| 2.6.5 Example cfg files | 54 |
| 2.7 Using text resources from files | 56 |
| 2.8 Hiding RAPID content | 58 |
| 2.9 Optional settings for RAPID arguments (RAPID meta data) | 60 |
| 2.9.1 Hiding arguments in programs | 61 |
| 2.9.2 Hiding optional argument when changing selected instruction | 63 |
| 2.9.3 Argument filter | 65 |
| 2.9.4 Argument value range | 67 |
| 2.10 FlexPendant applications | 68 |
| 3 RobotWare Add-In Packaging tool | 69 |
| 3.1 Introduction | 69 |
| 3.1.1 About the RobotWare Add-In Packaging tool | 69 |
| 3.1.2 Optional features | 71 |
| 3.1.3 Files of a packaged add-in | 73 |
| 3.1.4 Signing with digital certificates | 74 |
| 3.1.5 Types of add-in packaging tools | 78 |
| 3.2 User interface | 79 |
| 3.2.1 The home page | 79 |
| 3.2.2 The File menu | 80 |
| 3.2.3 The Product Manifest view | 82 |
| 3.2.4 The Files and folders view | 91 |
| 3.2.5 The Signing Certificate view | 94 |
| 3.3 Creating and building an add-in project | 96 |
| 3.4 Converting an additional option to an add-in | 97 |
| 3.5 Building an add-in from the console | 98 |
| 4 License Generator | 101 |
| 4.1 Introduction | 101 |
| 4.2 The user interface | 102 |
| 4.2.1 The Preferences window | 102 |
| 4.2.2 The main window | 103 |

Table of contents

4.3 Creating the license 105

Index **107**

Overview of this manual

About this manual

This manual contains instructions for how to create your own Add-In to use with ABB's robot systems.

Usage

With the help of this manual, you can package functionality into an Add-In and create a license that allows access to the Add-In.

Who should read this manual?

This manual is intended for:

- line builders that want to implement the same program solution on many robots
- ABB's partners, selling the robot systems with their own functionality added
- ABB companies selling robot systems

Prerequisites

The reader should...

- be experienced in working with ABB robots
- be experienced RAPID programmer
- be familiar with system parameters

References

| Reference | Document ID |
|---|----------------|
| <i>Technical reference manual - System parameters</i> | 3HAC050948-001 |
| <i>Operating manual - RobotStudio</i> | 3HAC032104-001 |

Revisions

| Revision | Description |
|----------|--|
| - | Released with RobotWare 6.00.01 First release. |
| A | Released with RobotWare 6.02 <ul style="list-style-type: none">• Added section about I/O signals, see Topic I/O System on page 43.• Updated the path to the utility folders throughout the manual, for example see Template files on page 31.• Added section Hiding RAPID content on page 58.• Added section Optional settings for RAPID arguments (RAPID meta data) on page 60 and updated section register on page 25.• Updated the section RobotWare Add-In Packaging tool on page 69.• Minor corrections. |

Continues on next page

| Revision | Description |
|----------|--|
| B | Released with RobotWare 6.03 <ul style="list-style-type: none">Added the tag <i>VersionName</i> to the <i>version.xml</i> file, see version.xml on page 15.Updated the section register on page 25.Added sections Argument filter on page 65 and Argument value range on page 67.Updated the section Product Details tab on page 82.Minor corrections. |
| C | Released with RobotWare 6.04 <ul style="list-style-type: none">Added commands for deleting items in the FlexPendant programming window picklist, see The install.cmd file on page 17.Added command <i>direxist</i>, see Commands on page 18.Minor corrections. |
| D | Released with RobotWare 6.07 <ul style="list-style-type: none">Added the section Building an add-in from the console on page 98. |
| E | Released with RobotWare 6.08 <ul style="list-style-type: none">Updated the section User interface on page 79.Updated the RAPID code example in the section RAPID modules on page 29. |
| F | Released with RobotWare 6.10. <ul style="list-style-type: none">Updated with information for Unicode support, see Unicode characters in UI and TP instructions in RAPID on page 56. |
| G | Released with RobotWare 6.11. <ul style="list-style-type: none">Added more information about arguments in the Unicode support, see Unicode characters in UI and TP instructions in RAPID on page 56. |
| H | Released with RobotWare 6.12. <ul style="list-style-type: none">Updated the section RobotWare Add-In Packaging tool on page 69.New script <i>math_lib_set_mem_size</i> added in section Commands on page 18. |
| J | Released with RobotWare 6.13. <ul style="list-style-type: none">Section Argument Name Rules (MMC_REAL_PARAM) on page 46 updated with information about how to add a string in Rapid rules. |
| K | Released with RobotWare 6.14.01. <ul style="list-style-type: none">Updated the section Building an add-in from the console on page 98.Updated the section Commands on page 18. |
| L | Released with RobotWare 6.15.03. <ul style="list-style-type: none">Updated the section config on page 18. |
| M | Released with RobotWare 6.16. <ul style="list-style-type: none">Added information about naming convention. |

1 Introduction

1.1 About RobotWare Add-Ins

What is an Add-In

In RobotWare 6 the concept of additional options has been replaced with RobotWare Add-Ins. If you were familiar with the additional option concept, you will see that from a structural point of view, additional options and Add-Ins are handled the same way on the robot controller. What is new is that the packaging has been changed to simplify installation with Installation Manager. For more information about the packaging tool and process, see [RobotWare Add-In Packaging tool on page 69](#).

Using Add-Ins

Add-Ins allow to create installable supplemental software packages that extend the capabilities offered by RobotWare, making ABB's robot controllers even smarter and even more user-friendly. Creating RobotWare Add-Ins is also the recommended way for 3rd party developers to add new features into RobotWare.

An Add-In can include a number of RAPID modules, system modules, or program modules which hold the basic code for the Add-In. The Add-In also includes some files for loading and configuration at start up. The Add-In may also include *.xml* files with event log messages in different languages.

An Add-In can also consist of more advanced coding, such as *C#* code, for FlexPendant applications. This manual will cover the first case, with coding done in RAPID only. For more advanced coding, use RobotStudio SDK applications.

Unlicensed, open, Add-Ins

What you need from ABB to package your own open Add-In is:

- RobotWare Add-In Packaging tool

Licensed Add-Ins

What you need from ABB to package your own licensed Add-In is:

- RobotWare Add-In Packaging tool
- a license certificate for the RobotWare Add-In Packaging tool for your Add-In name

To license the Add-In, you will also need:

- License Generator
- a publisher certificate.
- a licensing certificate for the License Generator

For more information, see [Digital signing on page 74](#).

Continues on next page

1 Introduction

1.1 About RobotWare Add-Ins

Continued

Basic approach

These are the major steps for creating an Add-In. More detailed descriptions are given later in this manual.

- 1 Create the RAPID code for the Add-In, see [RAPID modules on page 29](#).
- 2 Create the event message files, see [Custom event log messages on page 31](#).
- 3 Create configuration files for system parameters, see [System parameters related to add-in development on page 36](#).
- 4 Create the file `version.xml`, see [version.xml on page 15](#).
- 5 Create the file `install.cmd`, see [The install.cmd file on page 17](#).
- 6 Create and package the RobotWare Add-In, see [RobotWare Add-In Packaging tool on page 69](#).
- 7 For licensed Add-Ins:
Create a licence file, see [License Generator on page 101](#).
- 8 Use the Installation Manager in RobotStudio to create a system that uses the Add-In.
For more information, see *Operating manual - RobotStudio*.

Selections within Add-Ins

An Add-In can contain selections (that is, optional functionality selectable at installation). For more information see [getkey on page 22](#) and the **Feature Data** section in the [Options tab on page 84](#).

1.2 The CIRCLEMOVE example

Introduction

Throughout this manual, an example Add-In is used to illustrate how to implement an Add-In. This Add-In is called *CIRCLEMOVE*.

Some parts of this manual have detailed reference information for commands and syntax used in the Add-In files. Looking at the examples can be a way of solving your problem without having to read all the reference information.

Description

The Add-In *CIRCLEMOVE* contains an instruction called `MoveCircle` that will move the robot in a complete circle. This instruction is added to a pick list on the FlexPendant and behaves just like one of the original instructions.

Error messages are stored in *.xml* files (in this example only in English), and are used in the RAPID code.

This page is intentionally left blank

2 RobotWare Add-In functionality

2.1 Required files and file structure

Add-In files

An Add-In consists of a number of files that you need to create in order to make your own Add-In.

| File type | Description |
|----------------------------|--|
| <i>version.xml</i> | Name, version number and description of the Add-In, see version.xml on page 15 . |
| <i>install.cmd</i> | Installation script. Specifies for example which <i>.cfg</i> files to load, see The install.cmd file on page 17 . |
| <i>.cfg</i> | One or several <i>.cfg</i> files with the configuration of system parameters. If the Add-In includes RAPID, one of the <i>.cfg</i> files should specify which RAPID module (<i>.sys</i> file) to load, see System parameters related to add-in development on page 36 . |
| <i>.sys</i> or <i>.mod</i> | The RAPID source code, see RAPID modules on page 29 . |

Event log message files

If the Add-In contains customized event log messages, two XML files for each language are required. These are placed in a specific folder for each language:

- `<Add-In folder>\language\<language code>\<Add-In name>_elogtext.xml`
- `<Add-In folder>\language\<language code>\<Add-In name>_elogtitles.xml`

The language codes consist of two letters, for example *en*, *de*, or *fr*, and are defined by the standard ISO 639, see [Custom event log messages on page 31](#).

File structure

This picture displays the layout of an Add-In, required by the robot controller, before it has been packaged with the RobotWare Add-In Packaging tool.


The *tps* folder is used for FlexPendant applications, see [FlexPendant applications on page 68](#).

Continues on next page

2 RobotWare Add-In functionality

2.1 Required files and file structure

Continued

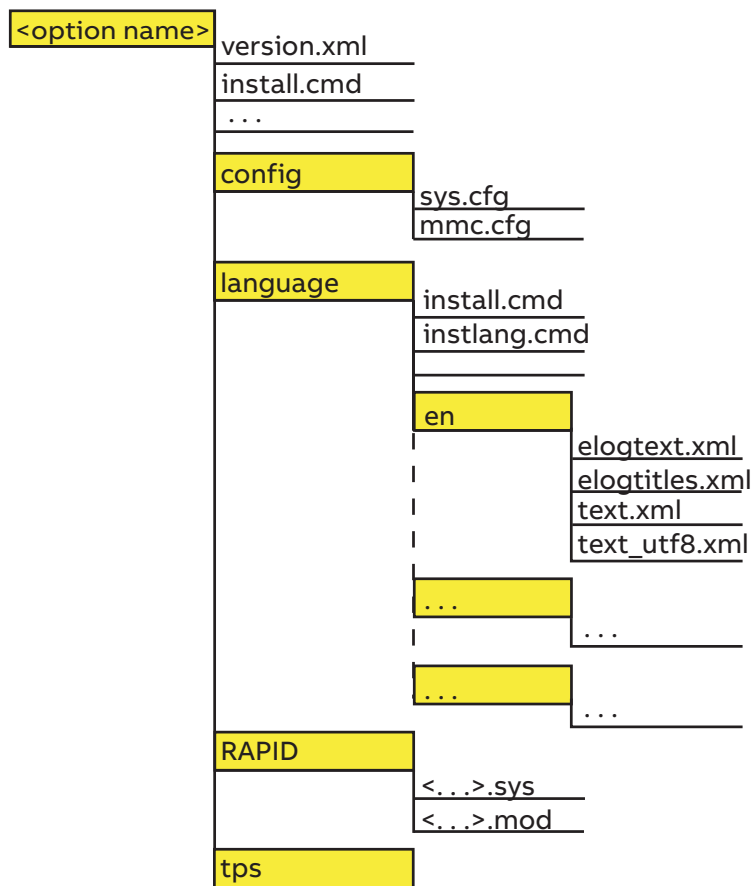

xx1400002781



Note

Note that *mmc.cfg*, *sys.cfg*, and the folder *language* (and everything in that folder) are optional. How to set up the language folders and their content is described in [Including language files from your add-in on page 56](#).

Naming convention

The RAPID language is constructed using the standard ISO 8859-1 (Latin-1) character set. In addition, newline, tab, and form feed control characters are recognized. Everything such as names of modules, variables, folders, etc. must use symbols from the ISO 8859-1 character set.

2.2 version.xml

Introduction

A RobotWare 6 Add-In contains a *version.xml* file that holds the name, version, and description of the Add-In. This is the same as for a RobotWare 5 additional option.

When converting a RobotWare 5 additional option to a RobotWare 6 Add-In, the information in the *version.xml* file is read by the RobotWare Add-In Packaging tool.



Note

In RobotWare 6, the role of the *version.xml* file has been largely replaced by the product manifest file. However, some client applications may still require the file to be present and the RobotWare Add-In Packaging tool will therefore automatically create a *version.xml* file based on the product manifest information.

XML description

The file *version.xml* is using the following tags:

| Tag | Description |
|--------------------|---|
| <i>Major</i> | Major version number. This number is changed every time a new Add-In version with major changes is released. Integer between 0 and 65535. |
| <i>Minor</i> | Minor version number. This number is changed every time a new Add-In version with minor changes is released. Integer between 0 and 65535. |
| <i>Revision</i> | Revision number. This number is changed every time a revision of the Add-In is released. Integer between 0 and 65535. |
| <i>Build</i> | Build number. To be used internally during developing and testing of the Add-In. Integer between 0 and 65535. |
| <i>VersionName</i> | The complete product version as displayed to the end user. This may include additional identifiers such as " <i>Beta</i> " or " <i>Release Candidate</i> ". |
| <i>Title</i> | The name of the Add-In. |
| <i>Description</i> | A description of what the Add-In is used for. Max 255 characters. |
| <i>Date</i> | The release date for this version of the Add-In. Format: YYYY-MM-DD |
| <i>Type</i> | Always set to <i>AdditionalOption</i> . |

Example file

```
<Version>
  <Major>1</Major>
  <Minor>01</Minor>
  <Revision>01</Revision>
  <Build>001</Build>
```

Continues on next page

2 RobotWare Add-In functionality

2.2 version.xml

Continued

```
<VersionName>1.01.01 Beta 2</VersionName>
<Title>CircleMove</Title>
<Description>CIRCLEMOVE Add-In (gives access to the instruction
    MoveCircle)</Description>
<Date>2014-12-31</Date>
<Type>AdditionalOption</Type>
</Version>
```


2.3 The install.cmd file

2.3.1 Introduction

Description

The install.cmd file is an installation script that for example define which configuration files and event log messages files to load. One of the configuration files (*sys.cfg*) defines which RAPID program files (.sys) to load.

2 RobotWare Add-In functionality

2.3.2 Commands

2.3.2 Commands

Overview

This section describes the syntax of the commands that can be used in the installation script *install.cmd*.

The script *install.cmd* is executed when using the restart mode **Reset system** to automatically install a number of different files, like configuration files or text files. The *install.cmd* file can contain conditions so that certain actions only are executed if certain conditions are true.

\$

\$ defines the name of a string variable.

Example:

```
setstr -strvar $LANG -value "en"
```

Predefined strings:

| String | Predefined value |
|------------|---|
| \$BOOTPATH | The folder where <i>install.cmd</i> is executed. For example: /hd0a/<system name>/PRODUCTS/<Add-In folder> |
| \$HOME | /hd0a/<system name>/HOME |
| \$SYSPAR | /hd0a/<system name>/SYSPAR |
| \$RWTEMP | /hd0a/temp |

#

Comment, if # followed by a space.

Label, if no space between # and text.

Example:

```
# A comment  
#Label
```

config

This command can be used for two different purposes:

- Erase unprotected contents of a configuration domain before loading a new content.

or

- Modify existing contents of a configuration domain.

Continues on next page

Erase unprotected contents

The `config` command can be used to erase unprotected contents of a configuration domain before loading a new content.

| Parameter | Description | Default |
|-----------|--|---------|
| domain | The topic of the <i>cfg</i> file. Allowed values are: <ul style="list-style-type: none"> <i>SIO</i> - Communication <i>SYS</i> - Controller <i>EIO</i> - I/O <i>MMC</i> - Man-machine communication <i>MOC</i> - Motion | |
| erase | Erase unprotected instances of the specified configuration domain. | FALSE |

Example:

```
config -erase -domain MOC
```

Modify existing contents

The `config` command can be used to modify existing contents of a configuration domain.

The following operations are possible:

- Add new instances
- Replace existing instances
- Modify existing non-internal instances in the specified configuration domain

| Parameter | Description | Default |
|-----------|--|---------|
| filename | The <i>cfg</i> file name, including file path. | |
| load | The types and instances specified in the <i>cfg</i> file will be added to the <i>cfg</i> database. If an instance with the same name already exists, an error will be generated and the <i>cfg</i> file will not be loaded. To overwrite the existing instances, use option <code>-replace</code> . | TRUE |
| internal | Load an internal configuration file. All instances loaded with this option will be write-protected. Once they have been loaded, they cannot be overwritten. See Exceptions on page 20 . | FALSE |
| replace | Replace all existing non-internal instances with the same name as those in the loaded <i>cfg</i> file. See Exceptions on page 20 . | FALSE |
| modify | Modify all existing non-internal instances with the same name as those in the loaded <i>cfg</i> file. With this option it is possible to change one or several parameters of each instance and all other mandatory parameters are not needed. | FALSE |
| force | Affects only if used together with the " <code>-replace</code> and <code>-internal</code> " arguments. Same behavior as for " <code>-replace</code> and <code>-internal</code> " except that existing internal/write-protected instances also will be replaced. Replaced instances will be write-protected (internal). See Exceptions on page 20 . | FALSE |

Examples:

```
config -filename $BOOTPATH/eio.cfg -load
```

Continues on next page

2 RobotWare Add-In functionality

2.3.2 Commands

Continued

```
config -filename $BOOTPATH/sys.cfg -internal
config -filename $BOOTPATH/eiopw.cfg -replace
config -filename $BOOTPATH/awNoSimPrompt.cfg -replace -internal
```

Replace existing instances (also if internal/write-protected) and add new instances, all replaced/new instances will be write-protected (internal):

```
config -filename $BOOTPATH/myeio.cfg -replace -internal -force
```



Note

The cfg files must start with the name of the domain since the config command uses this information to determine the domain. The first row in the cfg file shall contain the following information where <version> and <revision> are optional:

```
<domain name>:CFG_1.0:<version>:<revision>::
```

Example:

```
EIO:CFG_1.0:: Domain EIO without version and revision
```

Exceptions

When loading a configuration file, only one loading parameter maybe specified at a time (see the examples).

The only exception to that are these two combinations of arguments: "-replace and -internal" or "-replace and -internal and -force".

The first combination results in a replace of existing non-internal instances and the replaced instances will also get write-protected (internal). Already existing internal/write-protected instances will not be replaced, they will be ignored.

The second combination results in a replace of existing non-internal/internal instances and the replaced instances will also get write-protected (internal).

copy

Copy a file.

| Parameter | Description | Default |
|-----------|---|---------|
| from | The file to be copied, including the file path. | |
| to | The new file name, including the file path. | |

Example:

```
copy -from $BOOTPATH/instop.cmd -to $RWTEMP/instop.cmd
```

delay

Delay the running of the command script.

| Parameter | Description | Default |
|-----------|----------------------------------|---------|
| time | Number of milliseconds to delay. | 100 |

Example:

```
delay -time 1000
```

Continues on next page

delete

Delete a file.

| Parameter | Description | Default |
|-----------|--|---------|
| name | Name of file to delete, including file path. | |

Example:

```
delete -path $RWTEMP/opt_10.cmd
```

delete_cfg_instance

Deletes a named cfg instance.

Only instances in EIO, SYS and PROC cfg domain can be deleted.

| Parameter | Description | Default |
|------------------|--|---------|
| domain | The cfg domain for the instance to be deleted. | |
| type | The cfg type for the instance to be deleted. | |
| instance | The cfg instance name to be deleted. | |
| ignore_not_exist | To silent ignore if instance does not exist. | FALSE |

Example:

```
delete_cfg_instance -domain EIO -type MYEIOTYPE -instance  
"MyEioInstance" -ignore_not_exist  
---
```

direxist

If a directory exists, go to a label.

| Parameter | Description | Default |
|-----------|--|---------|
| path | The complete path to the folder. | |
| label | The label to go to if the folder exists. | |

Example:

```
direxist -path $TEMP/MyFolder -label CLEANUP_0
```

echo

Echo (print) a message to the VxWorks console output during the system start.

| Parameter | Description | Default |
|-----------|--------------------------------------|---------|
| text | The text to show on the FlexPendant. | |

Examples:

```
echo -text "Installing configuration files"
```

fileexist

If a file exists, go to a label.

| Parameter | Description | Default |
|-----------|--|---------|
| path | File name, including the file path. | |
| label | The label to go to if the file exists. | |

Example:

Continues on next page

2 RobotWare Add-In functionality

2.3.2 Commands

Continued

```
fileexist -path $RWTEMP/opt_10.cmd -label CLEANUP_0
```

find_replace

Find and replace occurrences of a string in a file. Only the first occurrence of the string in each line of the text is replaced.

| Parameter | Description | Default |
|-----------|--|---------|
| path | File to search, including the file path. | |
| find | String to find. | |
| replace | String to replace with. | |

Example:

```
find_replace -path $HOME/myfile.txt -find "ABC" -replace "CBA"
```

getkey

A number of selections can be made by user at the time of system creation. Values of these selections come from product manifest file and are stored by the system as a number of keys. The values stored in these keys can be read at the system startup time using the `getkey` command.

| Parameter | Description | Default |
|-----------|--|---------|
| id | Name of the key whose value is to be retrieved. | |
| strvar | Name of the variable where the result (the key value) is stored. | |
| errlabel | Label to go to if an error occurs. | |

Example:

```
getkey -id "LangSelect" -strvar $ANSWER -errlabel ENGLISH
```

goto

Go to a label.

The label to go to can either be specified directly, using the parameter `label`, or via a string containing the label name, using the parameter `strvar`.

| Parameter | Description | Default |
|-----------|--|---------|
| strvar | A string containing the label name to go to. | |
| label | Label to go to | |

Examples:

```
goto -strvar $ANSWER  
goto -label END_LABEL
```

ifstr

If a string variable is equal to a string value, go to the specified label. If not equal, the next statement is executed.

If the string variable is undefined, the command returns an error code.

| Parameter | Description | Default |
|-----------|---|---------|
| strvar | String variable to be compared with a string value. | |
| value | String value to compare the string variable with. | |

Continues on next page

| Parameter | Description | Default |
|-----------|---|---------|
| label | Label to go to if the comparison is true. | |

Example:

```
ifstr -strvar $ANSWER -value "IRT5454_2B" -label APP2
```

ifvc

If the script containing this command is run on the virtual controller, go to the specified label.

| Parameter | Description | Default |
|-----------|--|---------|
| label | Label to go to if the script is run on a virtual controller. | |

Example:

```
ifvc -label NO_START_DELAY
```

include

Include the script of another command file. Executes all commands in the script and then return to the current script.

| Parameter | Description | Default |
|-----------|--|---------|
| path | The file name of the included script, including the file path. | |

Example:

```
include -path $BOOTPATH/instdrv.cmd
```

math_lib_set_mem_size

Used to increase the size of the memory pool used for matrix calculations in RAPID.

| Parameter | Description | Default |
|-----------|--------------------|-------------|
| size | The size in bytes. | 20000 bytes |

The default size is 20000 bytes.

Minimum allowed size is 20000 (same as default size).

Maximum allowed size is 20000000, that is, 20 MB.

If several calls to math_lib_set_mem_size are made, the largest value is used.

mkdir

Make a directory.

| Parameter | Description | Default |
|-----------|-------------------------------------|---------|
| path | Directory name, including the path. | |

Example:

```
mkdir -path $RWTEMP/newdir
```

Continues on next page

2 RobotWare Add-In functionality

2.3.2 Commands

Continued

onerror

Set the default behavior of the script motor in case a script command fails and returns an error status code.

It is always the most recent `onerror` command that sets the current default behavior. The `onerror` semantics of included scripts does not affect the `onerror` semantics of any script that includes it.

| Parameter | Description | Default |
|-----------|---|----------|
| action | Defines if an error should result in: go to label, continue execution, stop execution, system failure or return from included script to the including script Defines what behavior an error should result in. The allowed values are: <ul style="list-style-type: none">• <i>goto</i> - Go to a label• <i>continue</i> - Ignore errors and continue execution• <i>stop</i> - Stop execution of startup task using <i>assert()</i>• <i>sysfail</i> - Call <i>SYS_FAIL()</i>• <i>return</i> - If used by a script included by another script, execution returns to the calling script. The included script returns an error code that needs to be handled by the including script. | continue |
| label | The label to go to if action is <i>goto</i> . | |

Examples:

```
onerror -action goto -label MY_LABEL1
onerror -action continue
onerror -action stop
onerror -action sysfail
onerror -action return
```

print

Prints a text to the VXWorks console.

| Parameter | Description | Default |
|-----------|----------------------------------|---------|
| text | The text to show on the console. | |

Example:

```
print -text "Copying files to $BOOTPATH"
```

rapid_delete_palette

Deletes a picklist in the FlexPendant programming window.

| Parameter | Description | Default |
|-----------|---|---------|
| palette | The name of the picklist to be deleted. | |

Example:

```
rapid_delete_palette -palette "M.C 3"
rapid_delete_palette -palette "Settings"
```

Continues on next page

rapid_delete_palette_instruction

Deletes a RAPID instruction in a picklist in the FlexPendant programming window.

| Parameter | Description | Default |
|-------------|--|---------|
| palette | The name of the picklist. | |
| instruction | The name of the RAPID instruction to be deleted. | |

Example:

```
rapid_delete_palette_instruction -palette "Common" -instruction
"FOR"
rapid_delete_palette_instruction -palette "Common" -instruction
":="
rapid_delete_palette_instruction -palette "Common" -instruction
"MoveAbsJ"
rapid_delete_palette_instruction -palette "M.C 1" -instruction
"MoveJ"
```

register

Registers additional information from an xml to controller registers, depending on the type parameter. The supported types are:

- Error messages (elogmes) – register the xml-file to the *elogtext_registry.xml* file. Once registered, these messages can be used by the RAPID program.
- Error message titles (elogtitle) – register the xml-file to the *elogtext_registry.xml* file.
- Options (option) - Registers the option in the *option_registry.xml* file. This will enable automatic loading of FlexPendant applications from the *tps* folder for the add-in.
- RAPID meta data (rapid_metadata) – Registers additional RAPID argument settings to the *rapid_metadata_registry.xml*.
- RAPID texts (rapid_text) – Registers additional RAPID texts with support for Unicode characters in *rapid_text_registry.xml*.

| Parameter | Description | Applies to type |
|-----------|--|--|
| type | Defines which type (for example elogmes, elogtitle, option, rapid_metadata, or rapid_text) that is being registered. | |
| domain_no | Error messages are stored in different domains. Which domain to register in is defined by domain_no. For add-ins, domain_no should always be 9. | elogmes, elogtitle |
| min | The first message number in the file being registered. | elogmes, elogtitle, rapid_text |
| max | The last message number in the file being registered. | elogmes, elogtitle, rapid_text |
| prepath | The path to the language directory. | elogmes, elogtitle, rapid_metadata, rapid_text |

Continues on next page

2 RobotWare Add-In functionality

2.3.2 Commands

Continued

| Parameter | Description | Applies to type |
|-------------|--|--|
| postpath | The rest of the path, after the language directory, including the character \ (backslash) and the file name. | elogmes, elogtitle, rapid_metadata, rapid_text |
| extopt | A flag indicating that the add-in is an external add-in. | option |
| description | The name of the add-in. | option |
| path | The path to the add-in. | option |
| resource | The resource name of the RAPID text table file. | rapid_text |

Examples:

```
# Register event log message for Add-In
register -type elogmes -domain_no 11 -min 5001 -max 5001 -prepath
    $BOOTPATH/language/-postpath /CircleMove_elogtext.xml
-extopt

# Register path for Add-In
register -type option -description MyAddIn -path $BOOTPATH

# Register path for RAPID meta data
register -type rapid_metadata -prepath $HOME/ -postpath
    my_rapid_edit_rules.xml
# Register path for RAPID text resource with Unicode support
register -type rapid_text -min 1 -max 123 -resource myAddIn -prepath
    $BOOTPATH/language/ -postpath
    myAddInTexts.xml
```

setenv

Define an environment variable and set its value.

An environment variable can be used in the RAPID code or in cfg files.

If you define the path to your add-in folder as an environment variable, this variable can be used in your programs instead of hard coding the path.

| Parameter | Description | Default |
|-----------|--|---------|
| name | The environment variable to be assigned a new value. | |
| value | The string to assign to the environment variable. | |

Example:

```
setenv -name CIRCLEMOVE -value $BOOTPATH
```

System environment variables

The following environment variables are set up by the system and cannot be overwritten.

| Environment variable | Value |
|----------------------|----------------------------|
| HOME | /hd0a/<system name>/HOME |
| BACKUP | /hd0a/BACKUP |
| SYSPAR | /hd0a/<system name>/SYSPAR |

Continues on next page

| Environment variable | Value |
|----------------------|--|
| TEMP | /hd0a/temp |
| SYSTEM | /hd0a/<system name> |
| RELEASE | /hd0a/<system name>/Products/ROBOTWARE_6.XX.XXXX |

setstr

Define a string variable and set its value. The string can only be used in the installation script.

| Parameter | Description | Default |
|-----------|--|---------|
| strvar | The string variable to be assigned a new string. | |
| value | The string to assign to the string variable. | |

Examples:

```
setstr -strvar $LANG -value "en"
setstr -strvar $CFGPATH -value $SYSPAR
```

text

This command loads a text description file into a text resource of a package. It accomplishes the same thing as the RAPID instruction `TextTabInstall`, but can also specify different texts for different languages.

For more information, read about user message functionality in *Application manual - Controller software IRC5*, and [Overview on page 56](#).

| Parameter | Description | Default |
|-----------|--|---------|
| filename | Name of the description file, including the file path. | |
| package | Package for building the text resource. | "en" |

Example:

```
text -filename $BOOTPATH/language/en/text_file.xml -package "en"
```

timestamp

Read the system clock and print number of seconds and milliseconds to the standard output.

No parameters.

2 RobotWare Add-In functionality

2.3.3 Examples of install.cmd files

2.3.3 Examples of install.cmd files

Example for CIRCLEMOVE

```
# Install.cmd script for Add-In CIRCLEMOVE
echo -text "Installing CIRCLEMOVE Add-In"
# Load configuration files
config -filename $BOOTPATH/CircleMove_sys.cfg -domain SYS -internal
config -filename $BOOTPATH/CircleMove_mmc.cfg -domain MMC
# Define environment variable
setenv -name CIRCLEMOVE -value $BOOTPATH
# Register elog messages
register -type elogmes -domain_no 11 -min 5001 -max 5001 -prepath
    $BOOTPATH/language/ -postpath /CircleMove_elogtext.xml
register -type elogtitle -prepath $BOOTPATH/language/ -postpath
    /CircleMove_elogtitles.xml
```

2.4 RAPID modules

Overview

The RAPID code, implementing the functionality of your add-in, is written in a system module (.sys) file (preferably <Add-In name>.sys).



Tip

By setting the argument NOSTEPIN on the module, stepwise execution of the RAPID program will not step into the module. This makes a routine written in the module behave like an instruction delivered from ABB.

RAPID code example

This is an example of how to create your own move instruction and how to use your own error messages. An instruction, `MoveCircle`, is created that moves the robot TCP in a circle around a `robtarg`, with the radius given as argument. If `MoveCircle` is called with a too small radius, a message defined in an .xml file is written to the event log, see [Event log texts on page 32](#).

```
MODULE CIRCLEMOVE(SYSMODULE, NOSTEPIN)

VAR errnum ERR_CIRCLE:= -1;
VAR num errorid := 5001;

PROC MoveCircle(
  robtarget pCenter,
  num Radius,
  speeddata Speed,
  zonedata Zone,
  PERS tooldata Tool
  \PERS wobjdata Wobj)

  VAR robtarget p1;
  VAR robtarget p2;
  VAR robtarget p3;
  VAR robtarget p4;

  BookErrNo ERR_CIRCLE;
  IF Radius < 2 THEN
    ErrRaise "ERR_CIRCLE", errorid, ERRSTR_TASK, "Radius",
      NumToStr(Radius,2), "2", ERRSTR_CONTEXT;
  ENDIF

  p1:=pCenter;
  p2:=pCenter;
  p3:=pCenter;
  p4:=pCenter;
  p1.trans:=pCenter.trans+[0,Radius,0];
  p2.trans:=pCenter.trans+[Radius,0,0];
```

Continues on next page

2 RobotWare Add-In functionality

2.4 RAPID modules

Continued

```
p3.trans:=pCenter.trans+[0,-Radius,0];
p4.trans:=pCenter.trans+[-Radius,0,0];
MoveL p1,Speed,Zone,Tool\WObj?WObj;
MoveC p2,p3,Speed,z10,Tool\WObj?WObj;
MoveC p4,p1,Speed,Zone,Tool\WObj?WObj;

BACKWARD
MoveL p1,Speed,Zone,Tool\WObj?WObj;

ERROR
IF ERRNO = ERR_CIRCLE THEN
  TPWrite "The radius is too small";
  RAISE;
ENDIF

ENDPROC
ENDMODULE
```

2.5 Custom event log messages

2.5.1 About event log messages

Overview

It is possible to create your own event log messages. The text of the message is placed in one .xml file for each language. You can then use RAPID instructions such as `ErrRaise` and `ErrLog` in the Circlemove example to raise an error using this message. Language independent strings can be used as arguments to `ErrRaise` and `ErrLog`, and be included in the message.

Two .xml files

Your event log messages are added to the system via two .xml files. One .xml file contains all the information about the messages. The other one contains their message number and title. Both are required.

These files can be given any name, as long as the installation script *install.cmd* points out the correct file names. It is recommended to use the following names:

- `<Add-In name>_elogtext.xml`
- `<Add-In name>_elogtitles.xml`

Template files

Template files for the two required .xml files are included in the RobotWare installation.

- `template_elogtext.xml`
- `template_elogtitles.xml`

The template files are located in the following directory in the RobotWare installation: `...\\RobotPackages\\RobotWare_RPK_<version>\\utility\\Template\\Elog`.



Note

Navigate to the RobotWare installation folder from the RobotStudio **Add-Ins** tab, by right-clicking on the installed RobotWare version in the **Add-Ins** browser and selecting **Open Package Folder**.

2 RobotWare Add-In functionality

2.5.2 Event log texts

2.5.2 Event log texts

Overview

All event log messages must be written in the following *.xml* file:

- `<Add-In name>_elogtext.xml`

The messages must have unique numbers, within its domain, which are used to reference the message text from the RAPID code.

Explanation of the *.xml* file


This is a list of the XML tags and arguments that you need to define. All other tags and arguments should always look like in the example below. The complete syntax is also shown in the example below.

| XML tag or argument | Description |
|---------------------|--|
| domainNo | Event log messages are divided into different domains. Domain number 8 is called <i>User events</i> and is reserved for non-ABB messages. For add-ins, always use domain 8 to avoid conflict with messages defined by ABB. |
| lang | Language code for the text in the messages. The same two-letter code as the name of the folder where the message <i>.xml</i> files are placed. This code is defined by the standard <i>ISO 639</i> . |
| min | The first message number in this file. |
| max | The last message number in this file. |
| Message | Create one instance of <code>Message</code> for each error message. |
| number | A unique number, between 1 and 9999, identifying the error message. Make sure that the systems using this add-in will not have other add-ins using the same message numbers. |
| eDefine | A unique name for the message. Keep it short and descriptive. |
| Title | The message title that will be shown in the event log. |
| Description | The text describing the error, shown in the event log. |
| arg | A string used as argument in the <code>ErrRaise</code> or <code>ErrLog</code> instruction will be inserted in the message. |
| format | The format of the argument sting from <code>ErrRaise</code> or <code>ErrLog</code> . For example <code>% . 40s</code> means that the string cannot be longer than 40 characters. |
| ordinal | Determines which string argument from <code>ErrRaise</code> or <code>ErrLog</code> that should be used in this <code>arg</code> tag. For example 1 means that the first string argument is used. |

Example of the *.xml* file

This *.xml* file `<Add-In name>_elogtext.xml` contains the text for an error message that will look similar to this:

Continues on next page

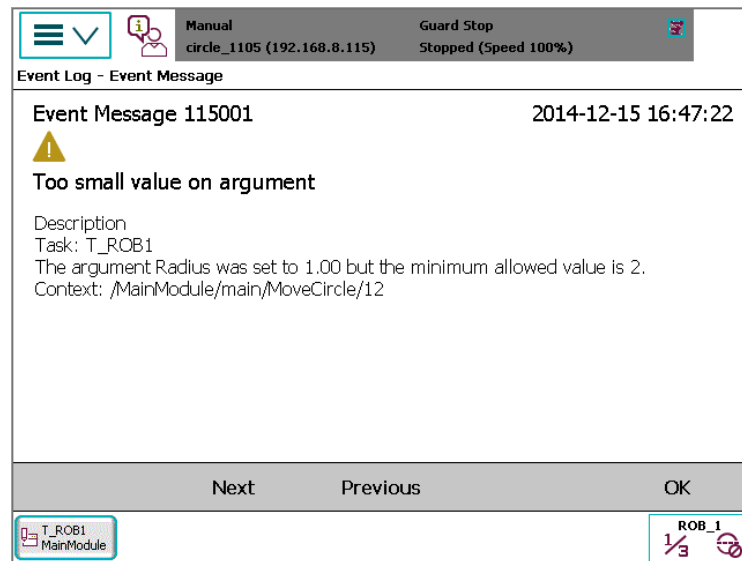

xx1400002871

```
<?xml version="1.0" encoding="utf-8"?>
<!--*****-->
<!--The text description file for Elog Messages -->
<Domain elogDomain="PROC" domainNo="11" lang="en"
  elogTextVersion="1.0" xmlns="urn:abb-robotics-elog-text"
  min="5001" max="5001">
  <Message number="5001" eDefine="ERR_ARG_TO_SMALL">
    <Title>Too small value on argument</Title>
    <Description>
      Task: <arg format="%s" ordinal="1" /><p />
      The argument <arg format="%s" ordinal="2" /> was set to <arg
        format="%s" ordinal="3" /> but the minimum allowed value
        is
        <arg format="%s" ordinal="4" />. <p />
      Context: <arg format="%s" ordinal="5" />
    <p />
    </Description>
  </Message>
</Domain>
```

2 RobotWare Add-In functionality

2.5.3 Event log titles

2.5.3 Event log titles

Overview

For the internal handling of event log messages, the following *.xml* file listing the message numbers and their titles is necessary:

- `<Add-In name>_elogtitles.xml`

Explanation of the *.xml* file

This is a list of the *.xml* tags and arguments that you need to define. For the complete syntax, see the example below.

| XML tag or argument | Description |
|---------------------|---|
| Title | Create one instance of <code>Title</code> for each event log message. The text in the <code>Title</code> tag must be identical to the text in the event log text <i>.xml</i> file. |
| number | The same event log message number as in the event log text <i>.xml</i> file. |

Example of the *.xml* file

```
<?xml version="1.0" encoding="utf-8"?>
<ExtractTitles>
<Title domain="11" number="5001">Too small value on argument</Title>
</ExtractTitles>
```

2.5.4 Validating event log .xml files

Introduction

A validation tool checks that the event log *.xml* file is correctly formatted, using the corresponding XML schema file, *elogtext.xsd*.

- The schema file (*elogtext.xsd*) and the file *template_elogtest.xml* are available in the RobotWare installation, see [Template files on page 31](#).
- The command line tool *XMLFileValidator* can be downloaded from the [Robot-Studio Online Community](#), where it is included in the *Tools and Utilities* package.

To run the validation, start the tool and use your search paths using the principle below:

```
xmlfilevalidator elogtext.xsd my_elogtext.xml
```

The result of the validation is displayed in the console. Detailed error information including row- and column references, is displayed for any found formatting errors.

Prerequisites

The *XMLFileValidator* is provided as-is.

Microsoft .NET framework version 2.0 or later is required.

2 RobotWare Add-In functionality

2.6.1 About cfg files

2.6 System parameters related to add-in development

2.6.1 About cfg files

Overview

The cfg files are used to define instances of system parameter types in a specific domain. The specified instances are then created by loading the cfg file. Only one domain can be specified per cfg file.

The file shall be formatted according to the rules in the following sections.

Domain specifier

A cfg file must start with a name of a domain where the specified instances will be created.

The row must contain the following information, where `<version>` and `<revision>` are optional:

```
<domain name>:CFG_1.0:<version>:<revision>::
```

Example

| | |
|-------------------|------------------------------------|
| EIO:CFG_1.0:: | Domain EIO without version number |
| EIO:CFG_1.0:5:0:: | Domain EIO with version number 5.0 |
| EIO:CFG_1.0:6:0:: | Domain EIO with version number 6.0 |

Comments

A comment row starts with '#'.

Type specifiers

The domain specifier is followed by one or more parameter type specifiers and their instances.

- A type specifier should always be preceded by a row containing a single character '#'. (Not mandatory)
- A type specifier consists of a parameter type name directly followed by a ':':
- There should be an empty row between the type name and the first instance. (Not mandatory)
- There should be no more rows after the last instance row in a cfg file. (Not mandatory)
- Add a description of all attributes in a type directly after the type specifier. This is helpful for the user to understand the type. (Not mandatory)

See cfg file examples later in this section.

Instances and attributes

The type specifier is followed by zero or more instances. Each instance contains one or several attributes defining its properties. Attributes can be mandatory or optional.

Continues on next page

Mandatory attributes must be specified explicitly in the cfg file otherwise an error will be generated when loading the file. Optional attributes that are not specified in the cfg file will be set to the default value for this attribute at loading. If the value of the optional attribute is specified, then the specified value will be used.

Each instance shall start with the Name attribute (if the instance has a name). Each attribute shall start with '-' (dash) followed by the attribute name, a blank space and value. Blank spaces are not allowed in the value except for string values with quotation marks.

Example:

```
-name MoveCircle -param_nr 6
```

Quotation marks can be used for string values. Note, all characters (including spaces) inside the quotation marks will be treated as one single string.

Example:

```
-name "M.C 1" -type "MMC_MC1"
```

Single or multiple rows

All attributes and their values in an instance can be put in a single row or in multiple rows. Comments or empty rows are not allowed in an instance. Several attributes per row are allowed.

For instances with multiple rows, each row in an instance shall end with '\'
(backslash), except for the last row. The name and the value of an attribute cannot be separated by '\', that is, they must be on the same row.

For example, the following is not valid:

```
-name \  
"M.C 1"
```

Arrays

If an attribute is of an array type, then the attribute value may consist of several comma separated values. Blank spaces and the multiple row separator '\'
cannot be used inside the array.

Example:

```
-name MoveCircle -default_struct 1,1,1,1,1,0
```

Attribute of type Boolean

If the attribute is of type Boolean, giving only the attribute name in the cfg file will set the value to true.

Example:

```
-hidden
```

Example of cfg file

```
SIO:CFG_1.0::  
#  
COM_PHY_CHANNEL:  
  
-Name "COM1" -Connector "COM1"  
-Name "LAN1" -Connector "LAN"  
#  
COM_TRP:
```

Continues on next page

2 RobotWare Add-In functionality

2.6.1 About cfg files

Continued

```
# -Name Name of transmissions protocol (MAN)
# -Type Name of transmissions protocol type (MAN)
# -PhyChannel Name of the physical channel (MAN)
# -HostName Name of host (OPT)
# -RemoteAddress Remote address (OPT)
# -Gateway Default gateway (OPT)
# -SubnetMask SubNetmask (OPT)

-Name "TCPIP1" -Type "TCP/IP" -PhyChannel "LAN1"
```

2.6.2 Topic Controller

About the topic Controller

This section describes system parameters that belong to the topic *Controller* (that is, in the configuration file `sys.cfg`) and that are closely related to add-in development.






The configuration of which program modules to load is made in the topic *Controller*. All files containing the RAPID code for the add-in must be defined here.

For more information about the types and parameters of the *Controller* topic, see *Technical reference manual - System parameters*.

Automatic loading of modules (CAB_TASK_MODULES)

The type `CAB_TASK_MODULES` is used to define modules to be loaded when the controller is started.

For more information, see *Technical reference manual - System parameters*.


| Parameter | Description |
|---------------|--|
| File | The name of the file including the path on the controller. An environment variable can preferably be used. That is, <code><environment variable>:/<file name></code> . See setenv on page 26 . |
| Task | Name of a task, if it should only be loaded to one specific task.  Note The parameters <i>Task</i> , <i>Shared</i> , <i>AllTask</i> and <i>AllMotionTask</i> are mutually exclusive. |
| Shared | Defines if the contents of a module should be reachable from all tasks. The module is not loaded, it is installed, but reachable from all tasks.  Note The parameters <i>Task</i> , <i>Shared</i> , <i>AllTask</i> and <i>AllMotionTask</i> are mutually exclusive.  Note The parameter <i>Shared</i> cannot be combined with <i>Installed</i> . |
| AllTask | Defines if the module should be loaded into all tasks.  Note The parameters <i>Task</i> , <i>Shared</i> , <i>AllTask</i> and <i>AllMotionTask</i> are mutually exclusive. |
| AllMotionTask | Defines if the module should be loaded into all motion tasks.  Note The parameters <i>Task</i> , <i>Shared</i> , <i>AllTask</i> and <i>AllMotionTask</i> are mutually exclusive. |

Continues on next page

2 RobotWare Add-In functionality

2.6.2 Topic Controller

Continued

| Parameter | Description |
|-----------|--|
| Installed | <p>A module can be loaded or installed.</p> <p>A loaded module will behave like a module manually loaded from the teach pendant.</p> <p>An installed module will behave like a built in module. By default the attributes NOVIEW and NOSTEPIN are set, even if not stated in the module declaration. Thus it will not be visible from the FlexPendant and can only be removed by using the restart mode Reset system. It will not be possible to step into a routine in such a module with FWD.</p> <p>It is recommended that all application modules are installed as built in modules, since then they will be handled as part of the controller and quite separated from the user's modules.</p> <div> Note</div> <p>The parameter <i>Installed</i> cannot be combined with <i>Shared</i>.</p> |
| Hidden | RAPID routines and data in this module are hidden from the user. |

Example

```
CAB_TASK_MODULES:  
-File "CIRCLEMOVE:/CircleMove.sys" -Installed -AllTask
```



Tip

When loading modules automatically, a correct file path must be used.

Since the name of the directory for the add-in can be changed, the files are often copied to the HOME directory so the file path is unmistakable for "automatic loading of modules".

This can be a problem when doing backup between releases.

Since all files in the HOME directory are saved to the backup, new files copied from the add-in directory will be overwritten by the old files in the backup.

Instead of copying the files to the HOME directory, the files can remain in the add-in directory and therefor avoid copying the files from the HOME directory to the backup.

To access the files in the add-in directory an environment variable must be used, therefore use [setenv on page 26](#).

Modules included in a backup

Two things affects what to include when creating a backup:

- 1 From where the module is loaded.
- 2 How the configuration file is loaded.

Modules not included in the backup

A module will not be included in the backup:

- if the module is loaded from *\$RELEASE*. For example:

```
-File "RELEASE:/options/xxx.modx" -Task "T_ROB1"
```

Continues on next page

- if the module is loaded from any user defined environment variable, using [setenv on page 26](#).

A module will not be included in the backup and no configuration entries will be listed in the *sys.cfg* (BACKUP/SYSPAR/SYS.CFG):

- if the module is loaded from *\$RELEASE*, or any user defined environment variable, and the loaded configuration file is set to *-internal*. For example:

```
config -filename $RELEASE/options/xxx.cfg -domain SYS
-internal
```

Modules included in the backup

A module will be included in the backup:

- if the module is loaded, installed, or shared from elsewhere without *\$RELEASE* or any user defined environment variable

A module will be included in the backup but no configuration entries will be listed in the *sys.cfg* (BACKUP/SYSPAR/SYS.CFG):

- if the module is loaded from elsewhere except *\$RELEASE* or any user defined environment variable, and the loaded configuration file is set to *-internal*.
Only loaded modules will be included in the backup, no installed or shared.

Exclude files and directories at backup

By default all files and directories in the *HOME* directory are included in the backup.

It is possible to exclude *HOME* directory files and directories from the backup.

It is also possible to include files or directories to the backup that are not located in the *HOME* directory.

The text must be edited directly in the *SYS.CFG* file for type *BACKUP_RESTORE*.

| Parameter | Description |
|-----------------------------|---|
| ExcludeFileFromHomeAtBackup | This file in the <i>HOME</i> directory shall not be included in the backup. |
| ExcludeDirFromHomeAtBackup | This directory in the <i>HOME</i> directory shall not be included in the backup. |
| IncludeFileAtBackup | This file is not located in the <i>HOME</i> directory, but shall be included in the <i>BACKINFO</i> directory in the backup. |
| IncludeDirAtBackup | This directory is not located in the <i>HOME</i> directory, but shall be included in the <i>BACKINFO</i> directory in the backup. |

Example

```
BACKUP_RESTORE:
-ExcludeDirFromHomeAtBackup "SecretDirectory"
-IncludeFileAtBackup "SYSTEM:/ImportantFile.xml"
```

Continues on next page

2 RobotWare Add-In functionality

2.6.2 Topic Controller

Continued



Note

The main *HOME* and *DATA* directory is intended for use by the end user RAPID program and user files.

In RobotWare 7, each add-in has its own dedicated *HOME* and *DATA* directory under the *AddInData* location that is separated from the main *HOME* and *DATA* directory. For more information see [Introduction on page 17](#).

2.6.3 Topic I/O System

About the topic I/O System

This section describes system parameters that belong to the topic *I/O System* (that is, in the configuration file *eio.cfg*).

For more information about the types and parameters of the *I/O System* topic, see *Technical reference manual - System parameters*.

Hiding I/O signals to the user

Add-ins can use virtual signals for internal communication, for example to communicate between RAPID tasks. It is possible to hide such signals from browsing by setting the `Access` property, for each signal, to `internal`.

It is possible to modify a hidden signal from RAPID, if the name of the signal is known and if the category of the signal is set to `RAPID`.

Example

```
EIO:CFG_1.0::  
#  
EIO_SIGNAL:  
-Name "DOAccessInternal" -SignalType "DO" -Access "internal"  
-Name "DOAccessInternalRAPID" -SignalType "DO" -Access "internal"  
-Category "rapid"
```

2 RobotWare Add-In functionality

2.6.4 Topic Man-machine Communication

2.6.4 Topic Man-machine Communication

About the topic Man-machine Communication

This section describes some of the types and system parameters in the topic *Man-machine communication* (that is, the configuration file mmc.cfg). It is used to define how a self-developed instruction should be presented on the FlexPendant, for example which menu to select it from (pick lists) and which argument values should be used as default (RAPID rules).

A short example is given for each type, and an example of an entire cfg file is shown after the type descriptions.

Pick list titles (MMC_PALETTE_HEAD)

It is possible to add custom pick lists alongside with the predefined pick lists that are included by default. The title for each custom pick list is defined in the *MMC_PALETTE_HEAD* type.

| Parameter | Description |
|-----------|---|
| name | The title of the custom pick list. |
| type | The type that contains the instruction names of the pick list |

Example

```
MMC_PALETTE_HEAD:
-name "M.C 1" -type "MMC_MC1"
-name "SpotWelding" -type "MMC_SPOTWELD"
```

Custom pick lists (MMC_MC1, MMC_MC2, MMC_MC3, etc.)

For each custom pick list there shall be an alias type definition to configure which instructions will be present in the pick list.

| Parameter | Description |
|-----------|------------------------------|
| name | The name of the instruction. |



Note

- The pick list types contains more parameters and more functionality. For more information about these, see section *Most Common Instruction Types* in *Technical reference manual - System parameters*.
- Note the use of the equal sign to define the alias type, where the type name defined in *MMC_PALETTE_HEAD* is defined as an alias of the base type *MMC_PALETTE*.

Example

```
MMC_MC1 = MMC_PALETTE:
-name MoveCircle
MMC_SPOTWELD = MMC_PALETTE:
-name "SpotL"
-name "SpotJ"
```

Continues on next page

Default arguments (MMC_REAL_ROUTINE)

MMC_REAL_ROUTINE is used to define which arguments should have proposed values, that is, a default value when the instruction is added on the FlexPendant.

| Parameter | Description |
|----------------|--|
| name | The instruction name. |
| default_struct | Defines which arguments should have proposed values. <ul style="list-style-type: none"> 0: No proposed value 1: A proposed value. If alternative arguments, 1 indicates that the first alternative argument should be used with a proposed value. 2: Only for alternative arguments. The second alternative argument should be used with a proposed value. 3: Only for alternative arguments. The third alternative argument should be used with a proposed value. 4: Only for alternative arguments. The fourth alternative argument should be used with a proposed value. |
| hidden | Defines if the instruction should be hidden when showing RAPID routines. If <i>hidden</i> is set, the instruction will not be shown when choosing an instance for ProcCall or Move PP to Routine. For changes of the <i>hidden</i> parameter to take effect, the controller must be restarted by using the restart mode Reset RAPID or Reset system . A restart is not enough. |

**Tip**

It is not necessary to specify *default_struct* if there should only be proposed values for required arguments.

Example

The instruction `TriggInt` is defined with the following arguments:

```
TriggInt TriggData Distance [\Start] | [\Time] Interrupt
```

| Argument | Argument number | Argument alternative |
|-----------|-----------------|----------------------|
| TriggData | 1 | 0 |
| Distance | 2 | 0 |
| Start | 3 | 1 |
| Time | 3 | 2 |
| Interrupt | 4 | 0 |

Note that `Start` and `Time` are alternative arguments and therefore have the same argument number.

The following alternatives are examples of how to configure an instance of the type *MMC_REAL_ROUTINE*:

Proposed values for `TriggData`, `Distance`, and `Interrupt` (the same result as if *default_struct* is not defined):

```
-name TriggInt -default_struct 1,1,0,1
```

Proposed values for `TriggData`, `Distance`, `Start`, and `Interrupt`:

```
-name TriggInt -default_struct 1,1,1,1
```

Proposed values for `TriggData`, `Distance`, `Time`, and `Interrupt`:

Continues on next page

2 RobotWare Add-In functionality

2.6.4 Topic Man-machine Communication

Continued

```
-name TriggInt -default_struct 1,1,2,1
```

Argument reuse (MMC_INST_NOT_REUSING_PREV_OPT_ARG)

The proposed value of an instruction argument can be the same as (or in sequence with) the same argument for a previous instruction. For example, if a work object has been used in the previous move instruction, the same work object is proposed when a new move instruction is added.

If the reusing of argument values is not desired for some arguments, those arguments are specified in the type *MMC_INST_NOT_REUSING_PREV_OPT_ARG*. Even if *default_struct* in the type *MMC_REAL_ROUTINE* is set to 0, an argument used in the previous instruction will be used in the next instruction. To avoid this, these arguments must also be specified in *MMC_INST_NOT_REUSING_PREV_OPT_ARG*.

| Parameter | Description |
|-----------|--|
| param_nr | Specifies the argument numbers that should not reuse values from previous instruction calls. |

Example

The instruction *MoveL* is defined with the following arguments:

```
MoveL [\Conc] ToPoint [\ID] Speed [\V] | [\T] Zone [\Z] [\Inpos]  
Tool [\WObj] [\Corr] [\TLoad]
```

As the arguments *Conc*, *V*, *T*, *Z*, and *Inpos* should not be reused, the instance of *MMC_INST_NOT_REUSING_PREV_OPT_ARG* would look like this:

```
MMC_INST_NOT_REUSING_PREV_OPT_ARG:  
-name MoveL -param_nr 1,5,7,8
```

Note that both *V* and *T* have argument number 5, as they are alternative arguments.

Argument Name Rules (MMC_REAL_PARAM)

The type *MMC_REAL_PARAM* is used to specify how to generate the proposed identifier for instruction arguments.

Even arguments that have *default_struct* in *MMC_REAL_ROUTINE* set to 0 and are defined in *param_nr* in *MMC_INST_NOT_REUSING_PREV_OPT_ARG* may need to be defined in *MMC_REAL_PARAM*. No argument proposal will be used when the instruction is chosen from a pick list, but if the argument is actively selected it will use the identifier specified in *MMC_REAL_PARAM*.

| Parameter | Description |
|-----------|---|
| name | The instruction argument, defined as <i><instruction name>_<argument name></i> (for example <i>MoveL_Tool</i>). It is also possible to define a common argument name (<i>common_<argument name></i>) to be used in the type <i>MMC_COMMON_PARAM</i> . |

Continues on next page

| Parameter | Description |
|-----------|--|
| name_rule | Specifies how the argument proposal should be generated. The following rules can be used: <ul style="list-style-type: none"> NONE - Unexpanded placeholder. No proposal is generated. CUR - The parameter <i>method</i> is used to define the argument proposal. For example used when the tool argument should use the current tool. DEF - The argument proposal should be a default value defined by the parameter <i>def_name</i>. SEQ - The argument proposal is based on the previous instruction with a similar argument. Based on the identifier used in the previous instruction, an increment of the index is used to create a new identifier. For example, if the robtarget of the previous move instruction is p10, the next move instruction will propose p20 (unless p20 is already used, then p30, p40, ... will be tried until an identifier is found that is not already used). If no similar argument is found, looking 100 instructions back, a data value is used instead of an identifier. LAST - The argument proposal gets its value from the previous instruction with a similar argument. If no similar argument is found, looking 100 instructions back, a default value specified by <i>def_name</i> is used. VAL - No argument identifier is used. A literal value is used instead. |
| method | Method to be called if <i>name_rule</i> is CUR or SEQ. Supported methods are: <ul style="list-style-type: none"> hirule_robtarg - robtarget symbol name increment value hirule_jointtarg - jointtarget symbol name increment value hirule_tooldata - current tooldata hirule_wobjdata - current wobjdata hirule_tloaddata - current tload |
| def_name | Default name needed if <i>name_rule</i> is LAST or DEF. <div data-bbox="596 1122 655 1182" data-label="Image"></div> Note A string must have 3 quotation marks: <pre>-name Direction -name_rule LAST -def_name "" "Z" ""</pre> |

Example

This example shows how some arguments for the `MoveL` instruction are configured. It also defines the common arguments `common_point`, `common_speed`, and `common_zone`, that are used in the type `MMC_COMMON_PARAM`.

| Argument | Argument proposal |
|----------|--|
| V | If V is actively selected it should: <ol style="list-style-type: none"> 1 use the value from the last instruction using V 2 use the default value 1000 |
| ID | No identifier should be proposed for ID. A numeric value is proposed instead. The proposed numeric value is defined in <code>MMC_REAL_DATATYPE</code> . |
| T | If T is actively selected it should use the default value 5. |
| Z | If Z is actively selected it should: <ol style="list-style-type: none"> 1 use the value from the last instruction using Z 2 use the default value 50 |
| Tool | The proposal for Tool should be defined by the method <code>hirule_tooldata</code> . |
| WObj | The proposal for WObj should be defined by the method <code>hirule_wobjdata</code> . |

Continues on next page

2 RobotWare Add-In functionality

2.6.4 Topic Man-machine Communication

Continued

| Argument | Argument proposal |
|--------------|---|
| TLoad | The proposal for TLoad should be defined by the method <code>hirule_tloaddata</code> . |
| common_point | The proposal for common_point should: 1 be a sequential increase from the last robtarget 2 be defined by the method <code>hirule_robtarg</code> |
| common_speed | The proposal for Tool should: 1 use the value from the last instruction using <code>speeddata</code> 2 use the default value 1000 |
| common_zone | The proposal for common_zone should: 1 use the value from the last instruction using <code>zonedata</code> 2 use the default value z50 |

```
MMC_REAL_PARAM:
-name MoveL_V -name_rule LAST -def_name 1000
-name MoveL_ID -name_rule VAL
-name MoveL_T -name_rule DEF -def_name 5
-name MoveL_Z -name_rule LAST -def_name 50
-name MoveL_Tool -name_rule CUR -method hirule_tooldata
-name MoveL_WObj -name_rule CUR -method hirule_wobjdata
-name MoveL_TLoad -name_rule CUR -method hirule_tloaddata

-name common_point -name_rule SEQ -method hirule_robtarg
-name common_speed -name_rule LAST -def_name v1000
-name common_zone -name_rule LAST -def_name z50
```

Argument Identifier Rules (MMC_COMMON_PARAM)

With the type *MMC_COMMON_PARAM*, a common argument (defined in *MMC_REAL_PARAM*) is used to define an argument proposal.

For example, a common argument defining proposals for all `ToPoint` arguments can be defined in *MMC_REAL_PARAM*. In *MMC_COMMON_PARAM*, the `ToPoint` argument for all move instructions can use that common argument.

| Parameter | Description |
|-------------------|--|
| name | The instruction argument, defined as <i><instruction name>_<argument name></i> (for example <code>MoveL_Tool</code>). |
| common_space_name | Name of the common argument defined in <i>MMC_REAL_PARAM</i> . |

Example

In this example the argument proposals for the `MoveL` arguments `ToPoint`, `Speed`, and `Zone` are defined by `common_point`, `common_speed`, and `common_zone`.

```
MMC_COMMON_PARAM:
-name MoveL_ToPoint -common_space_name common_point
-name MoveL_Speed -common_space_name common_speed
-name MoveL_Zone -common_space_name common_zone
```

Continues on next page

Data Value Rules (MMC_REAL_DATATYPE)

The type *MMC_REAL_DATATYPE* is used to specify how to generate the proposed value for a data type.

When an instruction is added, the proposed argument identifiers are defined in *MMC_REAL_PARAM*, while the values of those arguments are defined in *MMC_REAL_DATATYPE*.

| Parameter | Description |
|---------------|---|
| name | Name of the data type. |
| def_name | Default base identifier for the data (for example tool). The identifier for the data is created from the <i>def_name</i> and an index. If nothing else is defined, the index starts at 1 and the increment for each data is 1 (for example the first tooldata is called tool1, the second is called tool2 and so on). |
| value_rule | Specifies how the value of the new data should be generated: <ul style="list-style-type: none"> NONE - No initialize value for non-value data type. CUR - The parameter <i>method</i> is used to define the data value. For example used when a robtarget is given the value of the current robot TCP. DEF - The data value should be a default value defined by the parameter <i>use_value</i>. SEQ - The data value is based on the previous data of the same data type. The previous value is increased with a value defined by <i>use_value</i>. If no data is found, when looking up to 100 statements back, a zero value is used. |
| method | Method to be called if <i>value_rule</i> is CUR. Supported methods are: <ul style="list-style-type: none"> hirule_robtarget - current robot TCP robtarget value hirule_jointtarget - current robot TCP jointtarget value hirule_tooldata - current tooldata value hirule_wobjdata - current wobjdata value hirule_tloaddata - current tload value |
| use_value | Default value if <i>value_rule</i> is DEF or SEQ. Also used as increment value if <i>value_rule</i> is SEQ. |
| object_type | Data object type (i.e. CONST, VAR, PERS or TASK PERS). |
| validate_hook | Method to be called when validating data. Supported methods are: <ul style="list-style-type: none"> hirule_validate_tooldata hirule_validate_wobjdata hirule_validate_robtarget hirule_validate_orient hirule_validate_pose hirule_validate_progdisp hirule_validate_loaddata |

Example

This example defines the proposed values for the data types *identno* and *robtarget*.

| Data type | Proposed data value |
|-----------|--|
| identno | If no <i>identno</i> exists, the value is 10. Otherwise the value from the last <i>identno</i> is increased with 10. |

Continues on next page

2 RobotWare Add-In functionality

2.6.4 Topic Man-machine Communication

Continued

| Data type | Proposed data value |
|-----------|---|
| robtargt | The new <code>robtargt</code> gets the value of the current robot TCP. A validation is used so that the value of a <code>robtargt</code> cannot be changed to an incorrect format. |

```
MMC_REAL_DATATYPE:
-name identno -def_name id -value_rule SEQ -use_value 10 \
-object_type CONST
-name robtargt -def_name p -value_rule CUR \
-method hirule_robtargt -object_type CONST\
-validate_hook hirule_validate_robtargt
```

Highlight argument (MMC_SELECT_PARAM)

When an instruction is added, one of the arguments can be automatically selected for further definitions. This is defined in the type `MMC_SELECT_PARAM`. For example, when adding a `MoveC` instruction, the `CirPoint` is set to the current TCP value and the `ToPoint` is selected for the required modify position.

| Parameter | Description |
|-----------|---|
| param_nr | Parameter number for the argument to be selected. |

Example

The instruction `MoveC` is defined with the following arguments:

```
MoveC [\Conc] CirPoint ToPoint [\ID] Speed [\V] | [\T] Zone [\Z]
[\Inpos] Tool [\WObj] [\Corr] [\TLoad]
```

Since a modify position of `ToPoint` is required after the instruction is added, the argument `ToPoint` is selected:

```
MMC_SELECT_PARAM:
-name MoveC -param_nr 3
```

Work objects (MMC_INSTR_WITH_WOBJ)

`MMC_INSTR_WITH_WOBJ` is used when adding instructions from the FlexPendant, for which no default arguments are specified in `MMC_REAL_PARAM`.

It checks if the instruction has a `\WObj` optional argument, and what position the optional argument has in the instruction. If the active work object on the FlexPendant differs from the default work object, `wobj0`, then the optional argument `\WObj` in the instruction is added and set to the active work object.

| Parameter | Description |
|-----------|---|
| name | Name of the instruction. |
| param_nr | Argument number for the <code>\WObj</code> optional argument. |

Example

```
MMC_INSTR_WITH_WOBJ:
-name MoveL -param_nr 10
```

Continues on next page

Load objects (MMC_INSTR_WITH_TLOAD)

MMC_INSTR_WITH_TLOAD is used when adding instructions from the FlexPendant, for which no default arguments are specified in MMC_REAL_PARAM.

It checks if the instruction has a \TLoad optional argument, and what position the optional argument has in the instruction. If the active payload on the FlexPendant differs from the default payload, load0, then the optional argument \TLoad in the instruction is added and set to the active payload.

| Parameter | Description |
|-----------|---|
| name | Name of the instruction. |
| param_nr | Argument number for the \TLoad optional argument. |

Example

```
MMC_INSTR_WITH_TLOAD:
-name MoveL -param_nr 12
```

Circular points (MMC_INSTR_WITH_CIR_POINT)

MMC_INSTR_WITH_CIR_POINT is used for instructions with circular points, CirPoint.

After a position is modified, the controller tries to update the planned path to use the new position. This functionality needs to know if a target is a circular point.

| Parameter | Description |
|-----------|---|
| name | Name of the instruction. |
| param_nr | Argument number for the circular point, CirPoint. |

Example

```
MMC_INSTR_WITH_CIR_POINT:
-name MoveC -param_nr 2
```

Arguments not available for modify position (MMC_NO_MODPOS)

MMC_NO_MODPOS defines instruction arguments that should not be modified with modify position, even though they are of data type robtarget or jointtarget.

| Parameter | Description |
|-----------|---|
| name | The instruction argument, defined as <instruction name>_<argument name> (for example MoveL_Tool). |

Example

The instruction MToolTCPCalib is defined with the following arguments:

```
MToolTCPCalib Pos1 Pos2 Pos3 Pos 4 Tool MaxErr MeanErr
```

Pos1, Pos2, Pos3, Pos4 are of type jointtarget but should not be available for modify position:

```
MMC_NO_MODPOS:
-name MToolTCPCalib_Pos1
-name MToolTCPCalib_Pos2
-name MToolTCPCalib_Pos3
-name MToolTCPCalib_Pos4
```

Continues on next page

2 RobotWare Add-In functionality

2.6.4 Topic Man-machine Communication

Continued

Targets not available for modify position when additional axes offset is active

(MMC_NO_DATA_MODPOS_IF_ACT_EOFFS)

MMC_NO_DATA_MODPOS_IF_ACT_EOFFS defines data types, targets, that should not be modified with modify position by url (e.g. from **Program Data** view on the FlexPendant) if an additional axes offset is active.

| Parameter | Description |
|-----------|----------------------------|
| name | The name of the data type. |

Example

```
MMC_NO_DATA_MODPOS_IF_ACT_EOFFS:  
-name jointtarget
```

Optional argument for considering additional axes offset (MMC_USE_ACT_EOFFS_IN_MODPOS)

MMC_USE_ACT_EOFFS_IN_MODPOS is used to define instructions with optional arguments, that controls if an active additional axes offset shall be considered or not, when calculating the current position.

| Parameter | Description |
|----------------|---|
| name | The name of the instruction. |
| param_nr | Identifies the optional argument. |
| use_if_present | Defines if the offset shall be considered if the argument is present (1) or when it is not present (0). |

Example

```
MMC_USE_ACT_EOFFS_IN_MODPOS:  
-name MoveAbsJ -param_nr 4 -use_if_present 0
```

Between points (MMC_NO_PC_MOVEMENT)

For instructions with between point, such as *MoveC*, the program pointer should not continue to the next instruction after modify position of the between point. The type *MMC_NO_PC_MOVEMENT* is used to define the between points for which a modify position will not move the program pointer to the next instruction.

| Parameter | Description |
|-----------|--|
| name | The instruction argument, defined as <i><instruction name>_<argument name></i> (for example <i>MoveC_CirPoint</i>). |

Example

```
MMC_NO_PC_MOVEMENT:  
-name movec_cirpoint
```

Continues on next page

Without between point (MMC_NO_PC_MOVEMENT_CLEAR_PATH)

For instructions without between point, such as `SpotL`, the program pointer should not continue to the next instruction and a clear path is performed after modify position. The type `MMC_NO_PC_MOVEMENT_CLEAR_PATH` is used default in Spot systems to avoid disturbing event log messages and regain dialogs after modifying position.

| Parameter | Description |
|-----------|--|
| name | The instruction argument, defined as <code><instruction name>_<argument name></code> . |

Example

```
MMC_NO_PC_MOVEMENT_CLEAR_PATH:
-name SpotL_ToPoint
-name SpotJ_ToPoint
-name SpotML_ToPoint
-name SpotMJ_ToPoint
```

Service routines (MMC_SERV_ROUT_STRUCT)

`MMC_SERV_ROUT_STRUCT` is used to specify instructions that should be defined as service routines.

| Parameter | Description |
|-----------|-------------------|
| name | Instruction name. |

Example

In this example the instruction `LoadIdentify` is defined as a service routine:

```
MMC_SERV_ROUT_STRUCT:
-name LoadIdentify
```

Change of motion mode (MMC_CHANGE_MOTION_MODE)

For some move instructions it is possible to change motion mode (for example from `MoveL` and `MoveJ`). Which instructions allow change of mode and what instruction it is changed to is defined in `MMC_CHANGE_MOTION_MODE`.

| Parameter | Description |
|-------------|---|
| name | Name of the existing instruction. |
| shift_name | Name of the instruction it should be changed to. |
| shift_mode | Motion mode of instruction after changing motion mode. |
| param_restr | Defines an argument number. If this argument is set, change of motion is not allowed. |

Example

This example specifies that the instruction `MoveL` can be changed into a `MoveJ` instruction. If the argument `Corr` is set this change of motion mode cannot be done.

```
MMC_CHANGE_MOTION_MODE:
-name MoveL -shift_name MoveJ -shift_mode Joint -param_restr 11
-name MoveJ -shift_name MoveL -shift_mode Linear
```

2 RobotWare Add-In functionality

2.6.5 Example cfg files

2.6.5 Example cfg files

Overview

This section contains cfg example files for the add-in *Circlemove* and the instruction *MoveCircle*.

CircleMove_sys.cfg

This example uses the environment variable **CIRCLEMOVE** that is defined in *install.cmd*, see [Examples of install.cmd files on page 28](#).

```
SYS:CFG_1.0::  
# Installation of RAPID routines for Add-In CircleMove  
# $Revision: 1.7 $  
  
#  
CAB_TASK_MODULES:  
  
-File "CIRCLEMOVE:/CircleMove.sys" -Install -AllTask
```

CircleMove_mmc.cfg

The instruction *MoveCircle* is defined with the following arguments:

```
MoveCircle pCenter Radius Speed Zone Tool [\WObj]
```

To define how *MoveCircle* should behave on the FlexPendant, the following configuration is placed in a file called *CircleMove_mmc.cfg*, which is added to the *CircleMove* add-in.

```
MMC:CFG_1.0::  
# MMC : RAPID PROGRAMMING RULES FOR MODULE CIRCLEMOVE  
# $Revision: 1.7 $  
  
#  
MMC_MC1 = MMC_PALETTE:  
  
-name MoveCircle  
  
#  
MMC_REAL_ROUTINE:  
  
-name MoveCircle -default_struct 1,1,1,1,1,0 -hidden  
  
#  
MMC_REAL_PARAM:  
  
-name MoveCircle_pCenter -name_rule SEQ -method hirule_robtarg  
-name MoveCircle_Radius -name_rule LAST def_name 10  
-name MoveCircle_Speed -name_rule LAST -def_name v1000  
-name MoveCircle_Zone -name_rule LAST -def_name z50  
-name MoveCircle_Tool -name_rule CUR -method hirule_tooldata  
-name MoveCircle_WObj -name_rule CUR -method hirule_wobjdata  
  
#
```

Continues on next page

```
MMC_INSTR_WITH_WOBJ:
```

```
-name MoveCircle -param_nr 6
```

2 RobotWare Add-In functionality

2.7 Using text resources from files

2.7 Using text resources from files

Overview

It is possible to use text strings from a text table file. This is useful, for example, when a message to the user should be displayed in different languages.

How to use text table files is described in section *Advanced RAPID* in *Application manual - Controller software IRC5*.

Including language files from your add-in

Localized files can be installed by moving their installation to a separate `install.cmd` file and including it from the main installation script.

```
include -path "$BOOTPATH/language/install.cmd"
```

The add-in folder must contain a subfolder called *language* with a separate `install.cmd` file used to install the localized files. The localized files are placed in language specific subfolders of the folder *language*. The subfolders should be named with the 2 letter language code, for example *en*, *de*, *fr* etc. See illustration in section [Required files and file structure on page 13](#).

The file `install.cmd` will call the file `instlang.cmd` in the language folder once for every installed language on the robot controller with the variable `$LANG` set to the corresponding language code. After this process has completed the `$LANG` variable will always be reset to *en*.

If using the RAPID instruction `TextGet`, place the text strings in the respective language folder in a file ending with *text.xml*.

Example

Example of `instlang.cmd`, how to install a localized file.

```
fileexist -path $BOOTPATH/language/$LANG/CircleMove_text.xml -label  
INSTALL_FILE  
goto -label END  
#INSTALL_FILE  
text -filename $BOOTPATH/language/$LANG/CircleMove_text.xml -package  
$LANG  
#END
```

Unicode characters in UI and TP instructions in RAPID

To support Unicode characters in the text, the registry `rapid_text` is needed. This enables text tables with UTF-8 encoding.

Place text strings in the respective language folder in a file ending with *text_utf8.xml*.

More information about installation of localized language files can be found above in the overview.

The following examples are available in the AddIn Packaging Tool.

Example of how to install/register Unicode files

```
register -type rapid_text -resource circlemove_text -min 200 -max  
206 -prepath $BOOTPATH/language/ -postpath  
/CircleMove_text_utf8.xml
```

Continues on next page

Example of how to use/get Unicode in RAPID

To get Unicode text on the FlexPendant, each string resource must be written as:

```
{{<resourceName:textNumber}}
```

Example of resource string to get string 205 in the resource in the AddIn:

```
{{circlemove_text:205}}
```

Use ; (semicolon) as separator to add arguments after the resource string.

```
{{circlemove_text:206;1.00;2}}
```

Strings with arguments in the resource file should be written as below with 1 as start index.

```
The radius {1} is too small, minimum is {2} mm
```

The result on the FlexPendant will be:

```
The radius 1.00 is too small, minimum is 2 mm
```

2.8 Hiding RAPID content

Overview

It is possible to hide the implementation of RAPID code on the FlexPendant.

Developers of add-ins often expose a public interface to their functionality that other RAPID programmers and end users can access. It is a good programming practice to hide parts of the internal implementation that are not intended for the users of your add-in.

This section describes some recommendations for hiding the code.

Split the code into two modules

One way of hiding the code is to split the code into two modules. The first module contains the implementation that shall be hidden, and the second module contains the public interface which is visible. The interface module contents will be visible but the code can be encrypted.

For more information, see [Automatic loading of modules \(CAB_TASK_MODULES\) on page 39](#).

Example

sys.cfg

```
CAB_TASK_MODULES:
-File "CIRCLEMOVE:/CircleMoveImpl.sys" -Hidden -AllTask
-File "CIRCLEMOVE:/CircleMove.sys" -AllTask
```

CircleMove.sys - Interface

```
MODULE CIRCLEMOVE(SYSMODULE, NOSTEPIN)
PROC MoveCircle(
  robtargt pCenter,
  num Radius,
  speeddata Speed,
  zonedata Zone,
  PERS tooldata Tool
  \PERS wobjdata WObj)

  MoveCircIeImpl pCenter, Radius, Speed, Zone, Tool \WObj?WObj;

ENDPROC
ENDMODULE
```

Continues on next page

CircleMoveImpl.sys - Implementation

```
MODULE CIRCLEMOVEIMPL(SYSMODULE, NOVIEW)
  VAR errnum ERR_CIRCLE:= -1;
  VAR num errorid := 5001;
  PROC MoveCircleImpl(
    robtarget pCenter,
    num Radius,
    speeddata Speed,
    zonedata Zone,
    PERS tooldata Tool
    \PERS wobjdata Wobj)

    ...

  ENDPROC
ENDMODULE
```

Use hidden modules and the pick list

Another method is to place all code in a hidden module and use the pick list to call the procedures.

For more information, see [Custom pick lists \(MMC_MC1, MMC_MC2, MMC_MC3, etc.\) on page 44](#).

Example

sys.cfg

```
CAB_TASK_MODULES:
  -File "CIRCLEMOVE:/CircleMove.sys" -Hidden -AllTask
```

mmc.cfg

```
MMC_CIRCLEMOVE_PALETTE = MMC_PALETTE:
  -name "MoveCircle"
MMC_PALETTE_HEAD:
  -name "Move Circle Palette" -type "MMC_CIRCLEMOVE_PALETTE"
```

2 RobotWare Add-In functionality

2.9 Optional settings for RAPID arguments (RAPID meta data)

2.9 Optional settings for RAPID arguments (RAPID meta data)

Overview

It is possible to specify certain optional settings for arguments in RAPID instructions. For instance it is possible to define if certain arguments shall be hidden when viewing the RAPID program on the FlexPendant.

The optional settings are specified in an .xml file.

XML format

```
<?xml version="1.0" encoding="utf-8"?>
<Rapid>
  <Edit>
    <Instruction name="Instr1">
      <Argument name="Arg1" show="true" showeditor="false" />
    </Instruction>
  </Edit>
</Rapid>
```



Tip

Use the template file named *rapid_edit_rules.xml* located in the following directory in the RobotWare package folder:

...\\RobotPackages\\RobotWare_RPK_<version>\\utility\\Template\\RAPID Optional Arguments\\

Navigate to the RobotWare installation folder from the RobotStudio **Add-Ins** tab, by right-clicking on the installed RobotWare version in the **Add-Ins** browser and selecting **Open Package Folder**.

Name and location of the .xml file

The .xml file shall be registered using the setup script (see [register on page 25](#)) or should be named *rapid_edit_rules.xml* and installed in the \$(HOME) directory of the controller.

Continues on next page

2.9.1 Hiding arguments in programs

Overview

It is possible to hide any of the arguments listed when displaying a programmed RAPID instruction in the **Program Editor** and the **Production Window** on the FlexPendant.

Which arguments to be shown in program windows is specified in the .xml file using the `showeditor` attribute. The default value is that arguments shall be shown.

XML format

```
<?xml version="1.0" encoding="utf-8"?>
<Rapid>
  <Edit>
    <Instruction name="Instr1">
      <Argument name="Arg1" showeditor="true" />
      <Argument name="Arg2" showeditor="false" />
    </Instruction>
  </Edit>
</Rapid>
```

Example

This is an example of an .xml file specifying which optional arguments to show for MoveJ.

```
<?xml version="1.0" encoding="utf-8"?>
<Rapid>
  <Edit>
    <Instruction name="MoveJ">
      <Argument name="Conc" showeditor="true" />
      <Argument name="ID" showeditor="true" />
      <Argument name="V" showeditor="true" />
      <Argument name="T" showeditor="false" />
      <Argument name="Z" showeditor="false" />
      <Argument name="Inpos" showeditor="false" />
      <Argument name="WObj" showeditor="true" />
      <Argument name="TLoad" showeditor="false" />
    </Instruction>
  </Edit>
</Rapid>
```

The result will be that only the arguments `Conc`, `ID`, `V` and `WObj` will be shown in the program windows on the FlexPendant for the instruction `MoveJ`.

Continues on next page

2 RobotWare Add-In functionality

2.9.1 Hiding arguments in programs

Continued



Note

Hiding an argument has priority over other functions such as selection of argument when adding an instruction, see [Highlight argument \(MMC_SELECT_PARAM\) on page 50](#), or additional optional argument in pick lists, see [Pick list titles \(MMC_PALETTE_HEAD\) on page 44](#). For the latter case the argument will be added, but it will not be shown.

2.9.2 Hiding optional argument when changing selected instruction

Overview

It is possible to hide any of the optional arguments listed when a RAPID instruction is changed from the FlexPendant.

Which optional arguments to be shown on the FlexPendant is specified in the *.xml* file using the `show`-attribute. The default value is that arguments shall be shown.

XML format

```
<?xml version="1.0" encoding="utf-8"?>
<Rapid>
  <Edit>
    <Instruction name="Instr1">
      <Argument name="Arg1" show="true" />
      <Argument name="Arg2" show="false" />
    </Instruction>
  </Edit>
</Rapid>
```

Example

This is an example of an *.xml* file specifying which optional arguments to show for MoveJ.

```
<?xml version="1.0" encoding="utf-8"?>
<Rapid>
  <Edit>
    <Instruction name="MoveJ">
      <Argument name="Conc" show="true" />
      <Argument name="ID" show="true" />
      <Argument name="V" show="true" />
      <Argument name="T" show="false" />
      <Argument name="Z" show="false" />
      <Argument name="Inpos" show="false" />
      <Argument name="WObj" show="true" />
    </Instruction>
  </Edit>
</Rapid>
```

The result will be that only the optional arguments `Conc`, `ID`, `V`, and `WObj` will be shown when changing the instruction on the FlexPendant for the instruction `MoveJ`.

Usage

| show | showeditor | Comment |
|---------------|---------------|--|
| <not defined> | <not defined> | Default, same as True, True |
| True | True | Shown everywhere in FP |
| True | False | Hidden in Program Editor and Production Window |

Continues on next page

2 RobotWare Add-In functionality

2.9.2 Hiding optional argument when changing selected instruction

Continued

| show | showeditor | Comment |
|-------|------------|--|
| False | True | Hidden in Argument Window , but shown in Program Editor and Production Window . Users will not be able to program arguments having this combination, thus it is unlikely that users will be exposed to this combination. Which means that in practice this is more like False/False. |
| False | False | Totally hidden, cannot be edited by Program Editor |

2.9.3 Argument filter

Overview

It is possible to filter the data that is shown as arguments listed on the FlexPendant and in RobotStudio.

The filter for a specific parameter is specified in the *.xml* file using the *filter-attribute*. The default value is that no filter is used.

XML format

```
<?xml version="1.0" encoding="utf-8"?>
<Rapid>
  <Edit>
    <Instruction name="Instr1">
      <Argument name="Arg1" filter="PLC_do_.*" />
    </Instruction>
  </Edit>
</Rapid>
```

In the example above only data with a name starting with "PLC_do_" will be matched and shown for the parameter "Arg1" in the instruction "Instr1".

Regular expressions

The regular expressions are a powerful mechanism when it comes to matching a multitude of names with a single expression.

In a regular expression all alphanumeric characters match, for example the expression "abc" will match the sequence "abc". Regular expressions are case sensitive. Most other characters also match, but a small set is known as the meta-characters. These are:

| Expression | Meaning |
|------------|--|
| ^ | Marks the beginning of the name being matched. Default. |
| \$ | Marks the end of the name being matched. Default. |
| . | Any single character. |
| [s] | Any character in the non-empty set s, where s is a sequence of characters. Ranges may be specified as c-c. |
| [^s] | Any character not in the set s. |
| r* | Zero or more occurrences of the regular expression r. |
| r+ | One or more occurrences of the regular expression r. |
| r? | Zero or one occurrence of the regular expression r. |
| (r) | The regular expression r. Used to separate a regular expression from another. |
| r r' | The regular expression r or r'. |

Continues on next page

2 RobotWare Add-In functionality

2.9.3 Argument filter

Continued

Examples

Some examples:

- The expression "MoveL" (or "^MoveL\$") would match the name "MoveL", and nothing else.
- The expression "Move.*" would match "MoveL", "MoveC", "MoveCDO" etc.
- The expression ". *Move.*" would match the names "MyMove", "MoveL", "MoveC", "MoveCDO" etc.
- The expressions "", ". *", or "^.*\$", i.e. an empty string, matches anything.

2.9.4 Argument value range

Overview

It is possible to define minimum and maximum allowed value when specifying a numerical value for an argument. The value will be validated by the FlexPendant and RobotStudio when entering such a value.

The minimum and maximum allowed values for a specific parameter is specified in the *.xml* file using the `minvalue` and `maxvalue` attributes. The default value is that no minimum and maximum values are used.

XML format

```
<?xml version="1.0" encoding="utf-8"?>
<Rapid>
  <Edit>
    <Instruction name="Instr1">
      <Argument name="Arg1" minvalue="1" maxvalue="16" />
    </Instruction>
  </Edit>
</Rapid>
```

In the example above only values between 1 and 16 will be allowed when entering a numerical value for the parameter "Arg1" in the instruction "Instr1".



Note

The check for valid numerical value will only be performed when entering a numerical value as argument. No validation will be performed if for instance a variable is used as argument.

2 RobotWare Add-In functionality

2.10 FlexPendant applications

2.10 FlexPendant applications

Introduction

Customized FlexPendant applications can be included in the RobotWare Add-In, simply by adding the compiled application assemblies and other resources to the file structure. No additional configuration is needed.

For the application to be loaded properly the Add-In must also register itself using the `register -type option` command in the *install.cmd* file, see [register on page 25](#).



Note

This section only describes the deployment of FlexPendant applications. For information on creating FlexPendant applications, see the corresponding manual for the software used to create the FlexPendant application.

File structure

When adding a FlexPendant application to the Add-In, the application assemblies (*.dll*) and other resources (*.jpg*, *.gif*, *.bmp*) need to be placed in the *tps* folder in the Add-In file structure, see [File structure on page 13](#).

Localized FlexPendant application

If the FlexPendant application is localized, i.e. has support for multiple languages, the language specific resources should be placed in *tps* folders under each language code folder.

For example, english resource files should be placed in the folder `\<option name>\language\en\tps\`.

3 RobotWare Add-In Packaging tool

3.1 Introduction

3.1.1 About the RobotWare Add-In Packaging tool

General

RobotWare Add-In Packaging tool (APT) is a Windows program that helps to pack the add-in as a package that can be deployed to the robot controller using the **Modify Installation** function. The output of the RobotWare Add-In Packaging tool is a product manifest file and a robot package file.

The tool helps you to:

- Re-package RobotWare 5 additional options into RobotWare 6 add-ins.
- Package new RobotWare 6 add-ins.
- Define how the end-user will see the add-in product in the **Modify Installation** function.
- Define one or more optional features and rules for how options can be selected in the **Modify Installation** function.
- Define dependencies between your add-in and other products (RobotWare and other add-ins).

The RobotWare add-in and the RobotWare add-in license can then be used together with RobotWare to create a RobotWare system using the **Modify Installation** function in RobotStudio.

For more information about the **Modify Installation** function, see *Operating manual - RobotStudio*.



Tip

See also the tutorials on using the RobotWare Add-In Packaging tool available at [ABB Library Download Center](#).

Open and licensed add-ins

There are two major types of add-ins that can be created with the RobotWare Add-In Packaging tool, open add-ins and licensed add-ins.

For open add-ins, the product manifest and the robot package file created will contain everything required for the user to install the product unsigned.

For licensed add-ins, there is also a signing step involved in the packaging of the add-ins, that will later allow you to generate licenses for the add-ins. The licensed add-ins will require the user to add a license file using the **Modify Installation** function to be able to install the add-in.

Continues on next page

3 RobotWare Add-In Packaging tool

3.1.1 About the RobotWare Add-In Packaging tool

Continued

Installation procedure

Before installing the software make sure that the certificates are available, for more information see [Digital signing on page 74](#).

| | Action |
|---|---|
| 1 | Install the RobotWare Add-In Packaging tool. |
| 2 | Install the certificate for signing add-ins using the RobotWare Add-In Packaging tool. Use the password provided by ABB. (A certificate is only needed when packaging licensed add-ins.) |
| 3 | Install your own publisher certificate. (A certificate is only needed when packaging licensed add-ins.) |
| 4 | Start the RobotWare Add-In Packaging tool. |

3.1.2 Optional features

Option identity

The option identity is what uniquely identifies an option in a product.

The option identity namespace must start with the product identity and also have its own unique part. If the add-in has many options, the option identity part may be built up of several parts, to group options logically.

For example: `open.yourcompany.yourproduct.youroption`

When you decide what scheme to use for the option identity names, keep in mind that these option identity names are the identifiers that will be used in settings files and license files (for licensed add-ins). If option identifiers are changed between two releases of an add-in, compatibility with old settings files and license files will be broken.

System options and robot options

In RobotWare 5, all options and additional options were system options. To be able to have one configuration of equipment for one robot and another configuration of equipment for another robot in a MultiMove system, it was necessary to make special arrangements in the *relkey.opt* file.

In RobotWare 6 there is support for both system options and robot options. Typically an option is classified as a robot option if its primary use is within the task of a robot. For example, equipment that a robot is dressed with is an example of a robot option. Or something that is connected to, or set up for, a specific robot in a MultiMove system. A system option is global to the system, for example languages.

Dependencies

A dependency specified for an option in an add-in could be either of type AND dependency, or of type OR dependency. This will define the dependency rule between the options selected.

For example, dependencies like the following can be defined: Source option A is dependent on both option B and C. Source option D is dependent on either A, B, or C.

AND dependency

If an option does not work unless all of its dependent options are also being installed, all these options are mandatory and should go into the AND dependency list.

Example:

```
813-1 Optical Tracking
<AND dependent on>
624-1 Continuous Application Platform
628-1 Sensor Interface
```

OR dependency

If an option does not work unless one of its dependent options are also being installed, all these options should go into the OR dependency list. In this case the option will work if either of the options in the list are also selected for installation.

Continues on next page

3 RobotWare Add-In Packaging tool

3.1.2 Optional features

Continued

For example, PROFIenergy requires that either PROFINET Controller/Device or PROFINET Device is selected for installation:

```
963-1 PROFIenergy
<OR dependent on>
888-2 PROFINET Controller/Device
888-3 PROFINET Device
```


3.1.3 Files of a packaged add-in

The product manifest file

The product manifest file (*.rmf*) is a container of the metadata for the add-in product. It contains all product and option details.

Product details:

- Product name, product id, product version, version name, company name, company url, copyright, and description.
- Any product dependencies to other products, such as RobotWare or add-ins that the product may have.

Option details:

- Descriptions of all the options that are included in the add-in, such as option names, option id's, option type (system or robot) and licensing restrictions,
- How the option structure should be displayed to the user in the **Modify Installation** function.
- Any dependencies to other options that the options in the add-in may have.
- Any conflicts to other options that the options in the add-in may have.

The purpose of the product manifest is to define how the end-user will see the product using the **Modify Installation** function. It will display the options in a structure to the user and define the rules for how options can be selected and what other products are required for the add-in to work.

The robot package file

The robot package file (*.rpk*) is an archive file that contains the actual contents of the add-in, in a compressed form.

The folders and files of the add-in containing installation and application logics in *.cmd*, *.cfg*, and *.sys* files.

This package will be transferred to the controller during installation and will be unpacked on the controller where the *.cmd* files of the add-in will be executed to install the add-in on the controller.

3 RobotWare Add-In Packaging tool

3.1.4 Signing with digital certificates

3.1.4 Signing with digital certificates

Digital signing

RobotWare 6 uses signing with digital certificates to ensure the integrity of published products. When creating a RobotWare add-in that contains licensed options a digital signature is mandatory.

To digitally sign a RobotWare add-in two different types of certificates are required, a publisher certificate and a licensing certificate.

The publisher certificate signature has 2 main purposes:

- Identify the publisher of the add-in to the end user.
- Ensure the integrity of the published software. For example, any modifications to the signed product manifest file will make the signature invalid and cause the robot controller to refuse to install the add-in.

The publisher certificate is also commonly known as a code-signing certificate.

The add-in packaging tool will accept any x509 v3 certificate issued for this purpose.

ABB does not issue publisher certificates, it is the responsibility of the add-in developer to obtain a suitable certificate for example by purchasing it from a trusted certificate authority vendor or create their own self-signed certificate.

The licensing certificate is issued by ABB. This certificate is tied to the product id you specify and grants you as the publisher the right to issue licenses for your add-in. In addition to being used to sign your product the licensing certificate is also used by the License Generator when creating license files for your RobotWare add-in.

Timestamping

In addition to the signing certificates the RobotWare Add-In Packaging tool also allows you to specify a timestamping server. Timestamping is the process of applying a timestamp from a trusted source to your digital signature. This ensures that the signature will still remain valid even if the signing certificate expires or is revoked at a later date.

For example, without a timestamp the act of revoking a publisher or licensing certificate would invalidate all products ever signed with these certificates whereas with a timestamp products signed up to the revocation date will still remain valid.

Although not required, it is considered best practice and recommended to apply a timestamp when signing your product.

The RobotWare Add-In Packaging tool supports timestamping services that follows *Microsoft Authenticode®* standard. If you have purchased a publisher certificate from a certificate authority they should be able to recommend a suitable timestamping service.

As an alternative *Symantec®* operates a public timestamping service at the URL <http://timestamp.verisign.com/scripts/timestamp.dll>. (Note that it is not possible to browse to this URL.)

Continues on next page

Installation of digital certificates

All digital certificates (with the exception of self-signed certificates) are signed by an issuer certificate. The issuer certificate in turn can have its own issuer, and so on, until a self-signed root certificate is reached, this forms a so called certificate chain.

For example the certificate chain for an ABB issued licensing certificate looks like this:

```
ABB RobotWare Licensing Root
|
ABB RobotWare Licensing Issuing CA
|
Licensing for <your product>
```

The add-in packaging tool requires that all issuer certificates must be installed in the Windows certificate store to be able to use the end user certificate for signing. In the example above the *ABB RobotWare Licensing Root* and *ABB RobotWare Licensing Issuing CA* certificates must be installed in order to be able to use the *Licensing for <your product>* certificate.

In the case of publisher certificates, if you have purchased a certificate from a 3rd party vendor the necessary certificate chain is usually already preinstalled in Windows and no further installation is necessary.

In the case of licensing certificates the complete certificate chain is included in the .pfx file delivered from ABB and the simplest way to install the issuer certificates is therefore to install the .pfx file. This will also install the end user certificate which can be uninstalled afterwards if desired.


To install the certificates locate the .pfx file in Windows Explorer, right click on the file and select the **Install PFX** option, this will open up the **Certificate Import Wizard**. Proceed through the wizard (you will need the pfx password provided by ABB) until prompted to select a certificate store:

Continues on next page

3 RobotWare Add-In Packaging tool

3.1.4 Signing with digital certificates

Continued

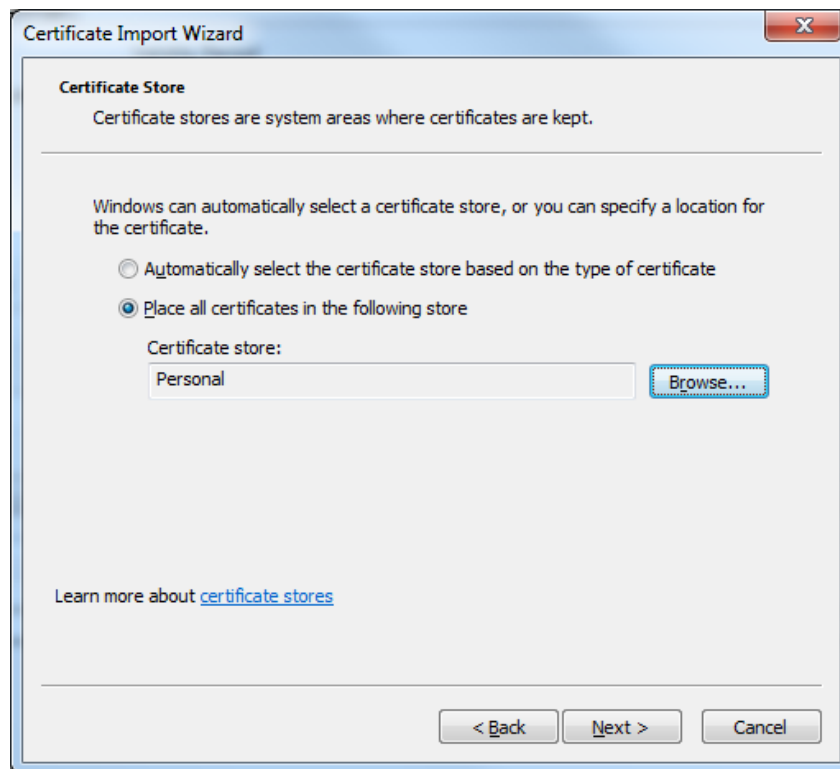


xx1500000935

By default the wizard will try to determine the appropriate store based on the type of certificate. This would cause parts of the certificate chain to be installed as a trusted root certificate which is not recommended in the case of licensing certificates for security reasons. Instead it is recommended to change the default option and place all the certificates in the personal store. This will not affect the signing operations but will prevent the certificates from being trusted for operations for which they are not intended.

Viewing the installed certificates

It is possible to view and manipulate the contents of the Windows certificate store through the *certmgr* snap-in to the Microsoft Management Console. To launch the snap-in, execute the file *certmgr.msc* in the Windows system folder, usually *C:\Windows\system32\certmgr.msc*.

Continues on next page

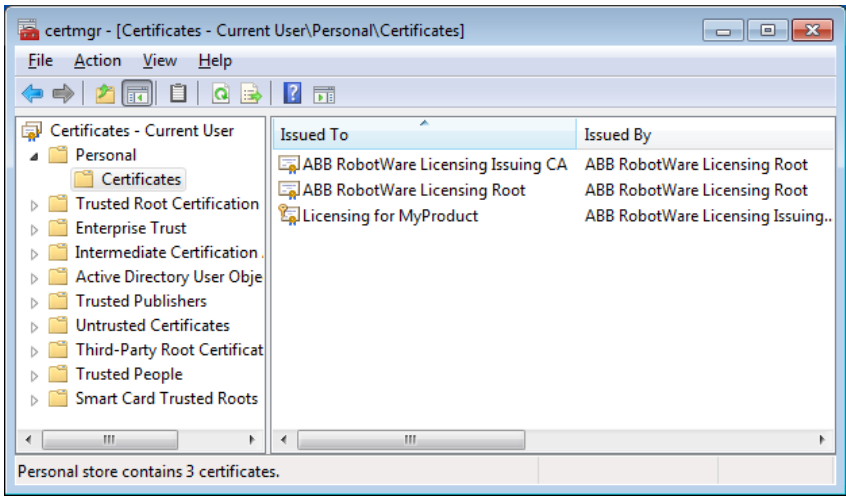

xx1500000936

3 RobotWare Add-In Packaging tool

3.1.5 Types of add-in packaging tools

3.1.5 Types of add-in packaging tools

Overview


The RobotWare Add-In Packaging tool is available in two forms; a GUI based tool and a console based packaging tool. See [User interface on page 79](#) and [Building an add-in from the console on page 98](#).

3.2 User interface

3.2.1 The home page

The home page

The home page of RobotWare Add-In Packaging tool is displayed when you select **New** or **Open** from the **File** menu.

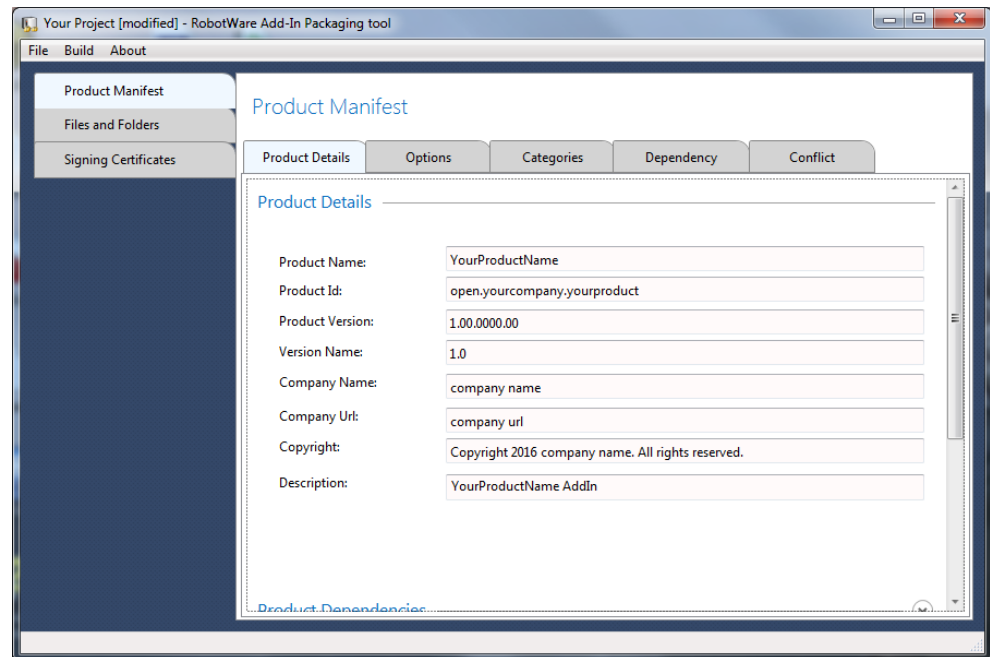

xx1400002260

The home page has three main views, **Product Manifest**, **Files and Folders**, and **Signing Certificates**.

When all the information about the add-in has been entered, the add-in is built by selecting **Build Project** from the **Build** menu.


3 RobotWare Add-In Packaging tool

3.2.2 The File menu

3.2.2 The File menu


The File menu

The **File** menu is used to manage the projects:

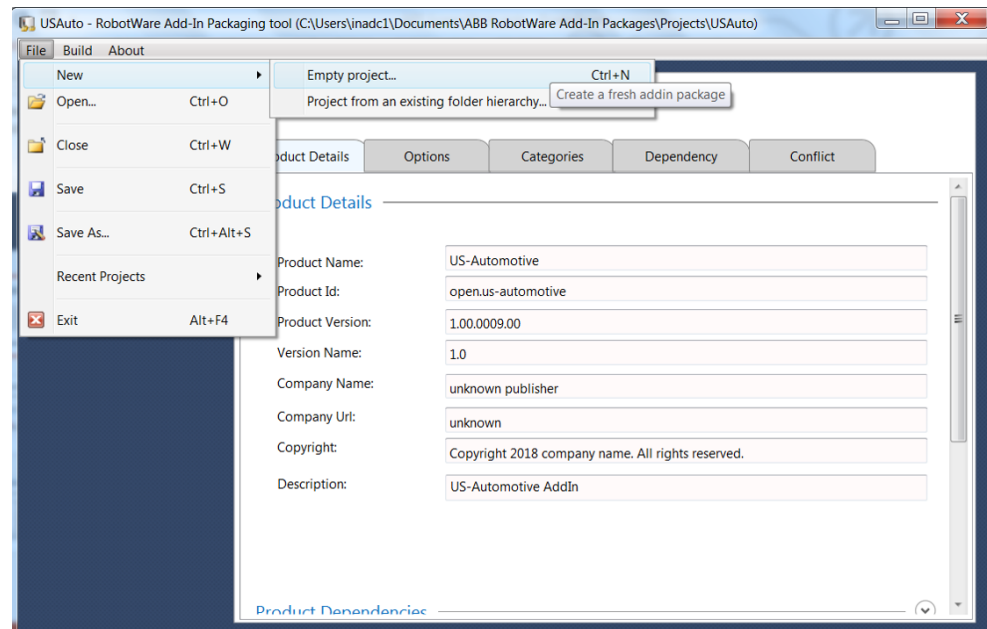



xx1800001606

The following table provides an overview of the options available in the **File** menu:

| Name | Description |
|-------|---|
| New | <p>Creates a new add-in project. The following options are available:</p> <ul style="list-style-type: none">Empty project: Select this option to create an add-in package project from scratch.Project from an existing folder hierarchy: Select this option to create an add-in using an existing 5.xx additional options. <p>For details about creating a project, see Creating and building an add-in project on page 96.</p> <p>For details about converting an additional option to an add-in, see Converting an additional option to an add-in on page 97.</p> |
| Open | <p>Opens an existing add-in project.</p> <div> Note</div> <p>The add-in project file extension is .rpkproj</p> |
| Close | <p>Closes the current active project.</p> |
| Save | <p>Saves the current active project.</p> |

Continues on next page

| Name | Description |
|-----------------|---|
| Save As | <p>Save the current active project to a different location on the file system/network.</p> <p> Note</p> <p>Make sure the folder has required read and write access.</p> <p> Note</p> <p>The Save As operation saves all the project details in project files (.rp-kproj, .rpkspecs and .manifest) into the newly selected location. Also a copy of source files under the Files and folders tab will be created and stored under the newly selected project folder.</p> |
| Recent Projects | Displays a list of 10 recently closed projects. You can choose to open a recent project directly, instead of using the Open menu item. |
| Exit | Exits the tool. |

3 RobotWare Add-In Packaging tool

3.2.3 The Product Manifest view

3.2.3 The Product Manifest view

Introduction

The **Product Manifest** view is used to fill the product related information that goes into the product manifest file. For example, product details such as **Product Name**, **Company Name** and **Product Version**. The **Product Manifest** view is also used to structure the add-in, and to set any dependencies or conflicts with the other add-ins or RobotWare versions.



xx1400002260

Product Details tab

The following information is to be defined in the **Product Details** tab.

| Field name | Description |
|--------------|--------------------------|
| Product Name | The name of the product. |

Continues on next page

| Field name | Description |
|------------------------|--|
| Product Id | <p>The internal identifier that uniquely identifies the product.</p> <ul style="list-style-type: none"> For licensed products the Product Id must start with one of the namespace strings defined by the licensing certificate. For more information, see Digital signing on page 74. For unlicensed products the Product Id must start with the string <i>open</i>, for example: <i>open.yourcompany.yourproduct</i>. <p> Note</p> <p>The namespace must be unique and may not contain the id of another product. If so, it will not be possible to select both products when creating an RS system.</p> <p>For example, if product A has id <i>open.mycompany.A</i>, then product B <i>cannot</i> have id <i>open.mycompany.A.B</i>.</p> <p>The id must be changed to <i>open.mycompany.A_B</i> or some other unique name.</p> |
| Product Version | <p>The product version field is used to uniquely identify a specific build of the product. This information is used by the Modify Installation function and other tools to determine the relation between different releases of a product, that is, older, equal, or newer.</p> <p>The format of the product version can have maximum four fields: <major version>.<minor version>.<build version>.<revision></p> |
| Version Name | <p>The version name field represents the product version as displayed to the end user. It differs from the Product Version field in that it is intended for display purposes only and is not restricted to a specific format. It can, for example, contain identifiers such as "<i>Beta</i>" or "<i>Release Candidate</i>" in addition to the version.</p> <p>As a comparison RobotWare 6.02.01 has a Product Version of "6.02.1029.01" and a Version Name of "6.02.01.00".</p> <p> Note</p> <p>Add-Ins built with version 1.3 or older of the RobotWare Add-In Packaging tool are displayed in the Modify Installation function as a combination of the Product Name and Product Version fields.</p> <p>From version 1.4 the Version Name is used instead of Product Version and it is therefore important that this field contains relevant information.</p> |
| Company Name | The name of your company. |
| Company Url | The website of your company. |
| Copyright | Copyright information. |
| Description | Short product description. |

The **Product Dependencies** settings are used to set up dependencies to other add-ins and RobotWare versions.

Click **Add** and then **Import** to add a dependent software. The following fields will be filled automatically:

| Field name | Description |
|-----------------|---|
| Identity | The internal identifier of the product. |

Continues on next page

3 RobotWare Add-In Packaging tool

3.2.3 The Product Manifest view


Continued

| Field name | Description |
|-------------------|--|
| Name | The name of the product. |
| Platform | The installation target platform, for instance robot controller and/or virtual controller. |
| Publisher | The company name of the add-in publisher. |
| MinVersion | The minimum product version. |
| MaxVersion | The maximum product version (optional). |
| Type | Product type. Always set to <i>Add-In</i> . |

Options tab

The **Options** tab helps you to create options and to specify their details.

Click **New** to display the required fields for creating a new option.

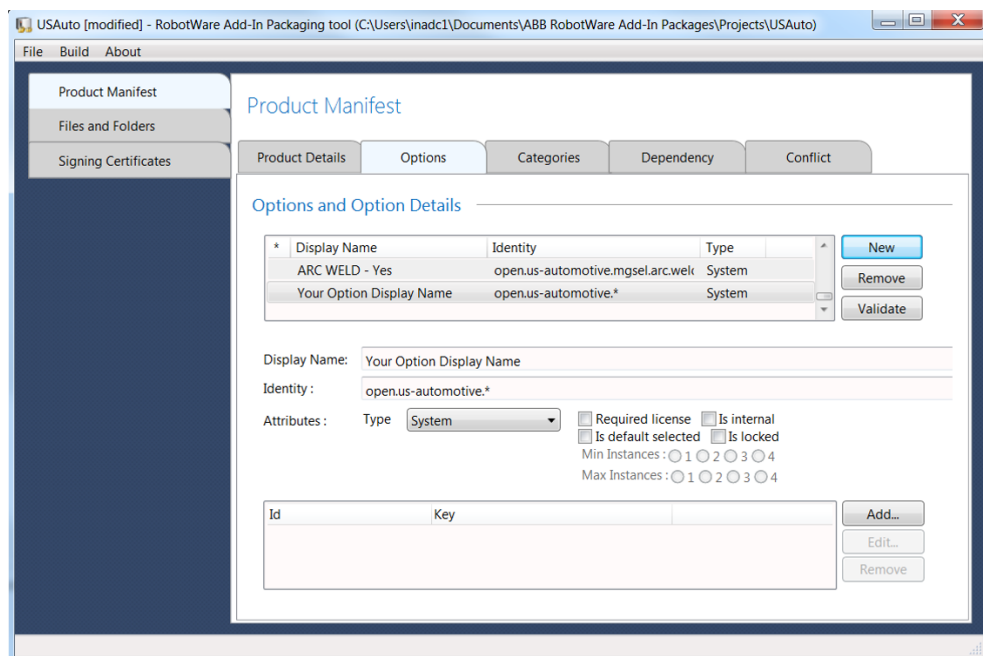




xx1800001609

The information is to be defined in the following fields:

| Field name | Description |
|---------------------|---|
| New | Displays all fields that must be completed for the creation of a new option. |
| Remove | Removes the selected option. |
| Validate | Validates the newly created option. |
| Display Name | Type the name of the option. This name is displayed in the Modify Installation function in RobotStudio. |
| Identity | Type the internal identifier of the option. This id is what uniquely identifies an option in a product. The identifier must begin with the the internal identifier of the product. For example: <code>open.yourcompany.yourproduct.youroption</code> For more information, see Optional features on page 71 . |

Continues on next page

| Field name | Description |
|----------------------|---|
| Type | <p>Select the type of the option:</p> <ul style="list-style-type: none"> • System - Options that are global for the system. • Robot - Options that can be set per robot in the system. For example, when using MultiMove where different robots may have different equipment. |
| Attributes | <p>Select the option attributes:</p> <ul style="list-style-type: none"> • Required license - The option requires a license. • Is internal - The option is not shown in the Modify Installation function user interface. • Is default selected - The option is selected by default in the Modify Installation function in RobotStudio. • Is locked - The option cannot be deselected in Modify RobotWare function in RobotStudio. <p> Note</p> <p>For licensed products, at least one option should have the Required license check box selected.</p> |
| Min Instances | <p>The minimum number of robots in the system that can have the option.</p> <p> Note</p> <p>This field is only valid for the option type <i>Robot</i>.</p> |
| Max Instances | <p>The maximum number of robots in the system that can have the option. For example, when using several robots in a MultiMove system.</p> <p> Note</p> <p>This field is only valid for the option type <i>Robot</i>.</p> |

Validate the option

Before leaving the **Options** tab, you must validate the options by clicking the **Validate** button.

The following validation is performed:

- The option identity must always begin with product identity text as prefix.

Feature Data

For each option it is possible to define key values that can be retrieved from *install.cmd* file during product installation. For more information see, [getkey on page 22](#).

| Field name | Description |
|------------|----------------------|
| Id | Id of the key value. |
| Key | Key value. |

Continues on next page

3 RobotWare Add-In Packaging tool


3.2.3 The Product Manifest view

Continued

Feature Data in MultiMove systems

By default, all the robots in a MultiMove system will get the same option settings. When it is desired to have different settings for the different robots it is necessary to provide more details to the robot options in the **Feature Data** settings.

Select a robot option in the option view, in the **Feature Data** section, add `{{instance}}` to the **Id** or **Key** data of those robot options you would like to work per robot in a MultiMove system, for example `ROBOT{{instance}}COLOR`.

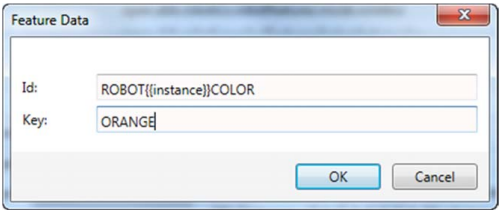

xx1400002532


During installation, the **Modify Installation** function will resolve `{{instance}}` to 1, 2, 3, or 4, depending on which robot this setting was meant for. This will allow to check for settings like `ROBOT1COLOR`, `ROBOT2COLOR`, `ROBOT3COLOR`, and `ROBOT4COLOR` in the *install.cmd* files, for example in the following way:

```
getkey -id "ROBOT1COLOR" -var 10 -strvar $ANSWER -errlabel ERROR
goto -strvar $ANSWER
#ORANGE
config ...
#NEXT
#ERROR
```

Categories tab

The **Categories** tab is used to group and structure the options according to how the add-in should be displayed in the **Modify Installation** user interface.

It is not allowed to mix system options and robot options within the same category. When both system options and robot options are included in the add-in, they must be put into separate categories.

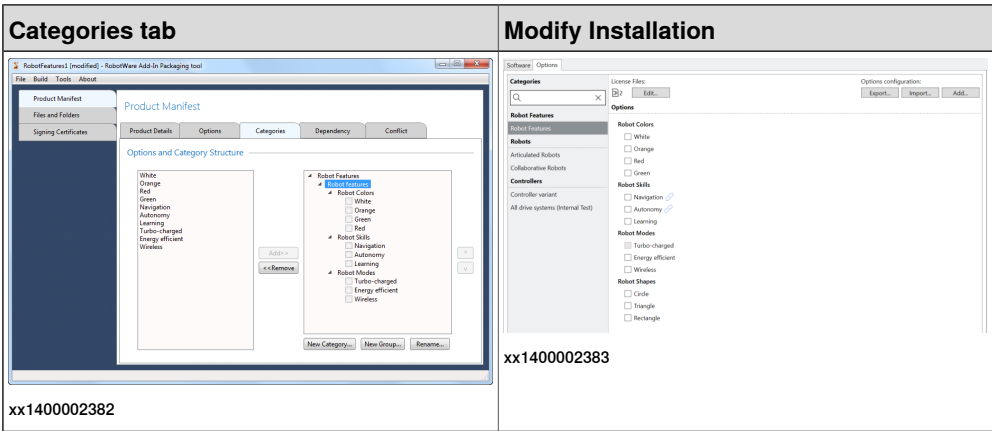


Continues on next page

The following validation is performed:

- Only the same option type can be grouped together in a category. That is, an option of the type *System* cannot be in the same category as an option of type *Robot*.

Dependency tab

The **Dependency** tab is used to configure the dependencies between options.

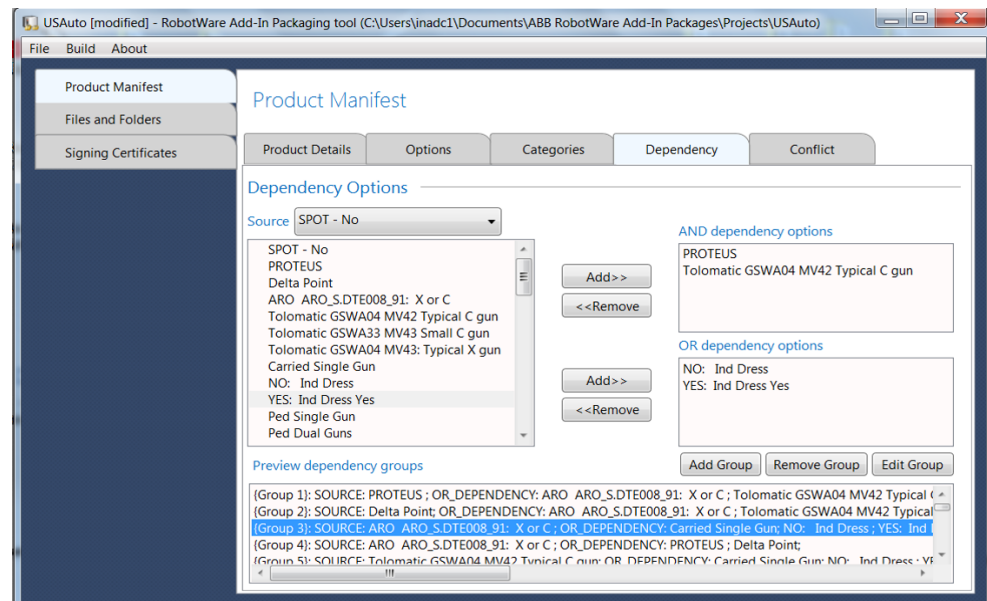

xx1800001610

A dependency specified for an option in an add-in could be either of type:

For more information, see [Dependencies on page 71](#).



Note

Combining *AND dependencies* with *OR dependencies* in the same group is not supported.

Use the following procedure to configure the dependencies between options:

- 1 Select a source from the **Source** list. The source option is the option that should have a dependency to one or several other options.
- 2 Select an option in the list, and click **Add** to move the dependencies for that option either to the **AND dependency options** list or to the **OR dependency options** list.



Note

If you added a product dependency in the **Product Details** tab, the options of that product will also be listed as options that the source option can depend upon.

- 3 Click **Add Group** to define the dependency.

The group is added to the **Preview dependency groups** section.

Continues on next page

3 RobotWare Add-In Packaging tool

3.2.3 The Product Manifest view

Continued




Note

When the dependency has been defined, it is listed in the dependency group list. Use the **Edit Group** and **Remove Group** buttons to edit or remove a dependency rule for an option dependency group.

Conflict tab

The **Conflict** tab is used to configure conflicts between the options.

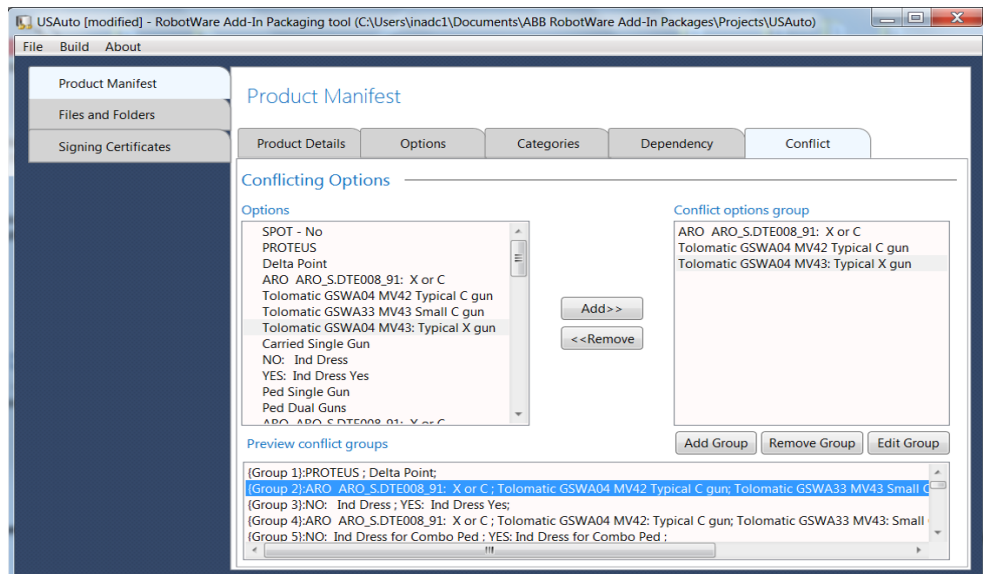

xx1800001773

You can add the conflicting options one by one, and group them by clicking **Add Group**. You can create a conflict group for each set of conflicting options.



Note

The **Remove** button in **Conflict** tab is enabled only when the conflicting options are added in the **Conflict Group** section.

The following sections provide examples of creating some conflicting groups:


Creating simple conflict group

Use the following procedure to configure a simple conflict between options:

- 1 Click on the **Categories** tab.
The **Categories** page is displayed.

Continues on next page

- 2 In the Category Structure section, right click on an item and select **Create Conflict Group**.

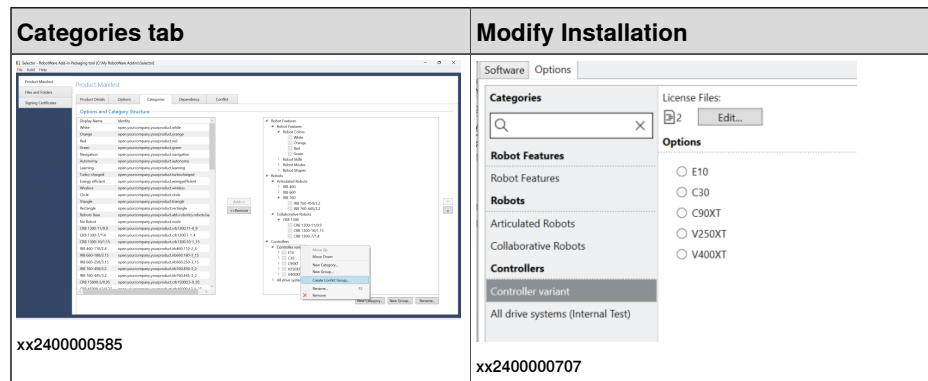


The new conflict group is created based on the selected item and is displayed in the **Preview conflict groups** section of the **Conflict** tab.

Creating conflict group for a name appearing multiple times in the hierarchal tree

Use the following procedure to configure a conflict group for a name appearing multiple times in the hierarchal tree:

- 1 Click on the **Categories** tab.
The **Categories** page is displayed.
- 2 In the Category Structure section, right click on a name that is appearing multiple times (in the below image, the name *Variant type* is appearing multiple times) and select **Create Conflict Group**.

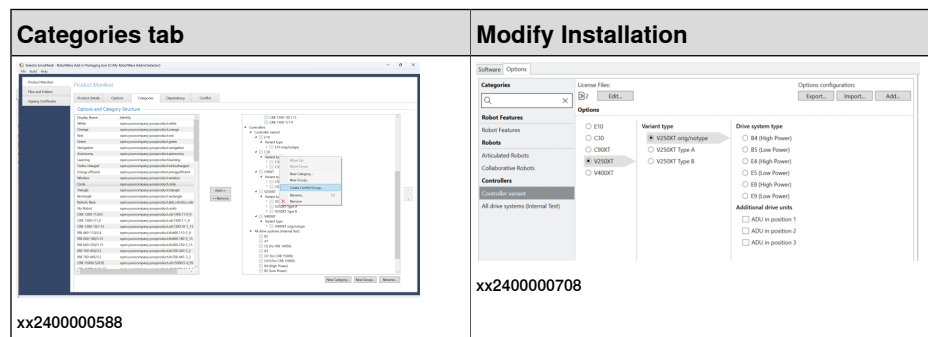

The new conflict group is created based on the selected items and is displayed in the **Preview conflict groups** section of the **Conflict** tab.

Creating a conflict group that has items with different features

Use the following procedure to configure the conflicts between options:

- 1 Click on the **Conflict** tab.


Continues on next page

3 RobotWare Add-In Packaging tool

3.2.3 The Product Manifest view

Continued

The Conflict page is displayed.

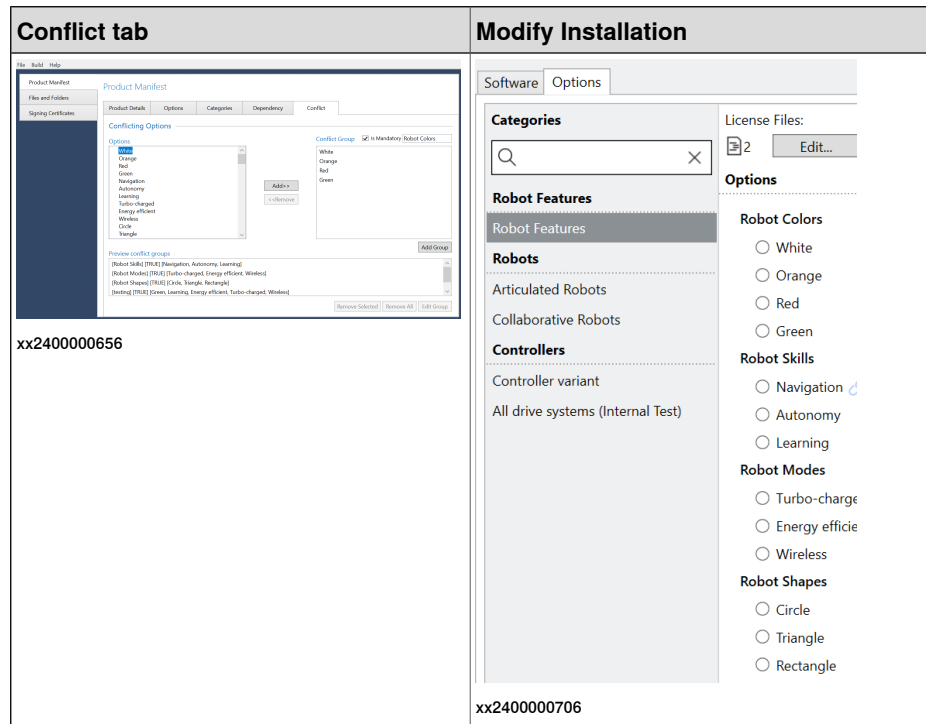

- 2 From the **Options** section select the different items that need to be considered as a group.



Note

You can use the CTRL and SHIFT keys to select multiple options.

- 3 Click the **Add** button.
The selected items are moved to the **Conflict Group** section.
- 4 Type a name for the group in the text box.
- 5 Select the **Is Mandatory** check box if one of the group item must be selected when displayed in **Modify Installation**.
- 6 Click the **Add Group** button.

The new group is created and added to the **Preview conflict groups** section. Select the **Is Mandatory** check box if one of the group item must be selected. If **Is Mandatory** is selected, the group items are displayed with radio buttons in **Modify Installation** so that one item from the group must be selected.




Note

If **Is Mandatory** is not selected the group items are displayed with check boxes when the group is displayed in **Modify Installation**.

3.2.4 The Files and folders view


Overview

The Files and Folders view is used to create the robot package file.



**Note**

Verify that all the files and folders to be transferred to the controller during installation are in place. Files and folders can be added and removed using the user interface.

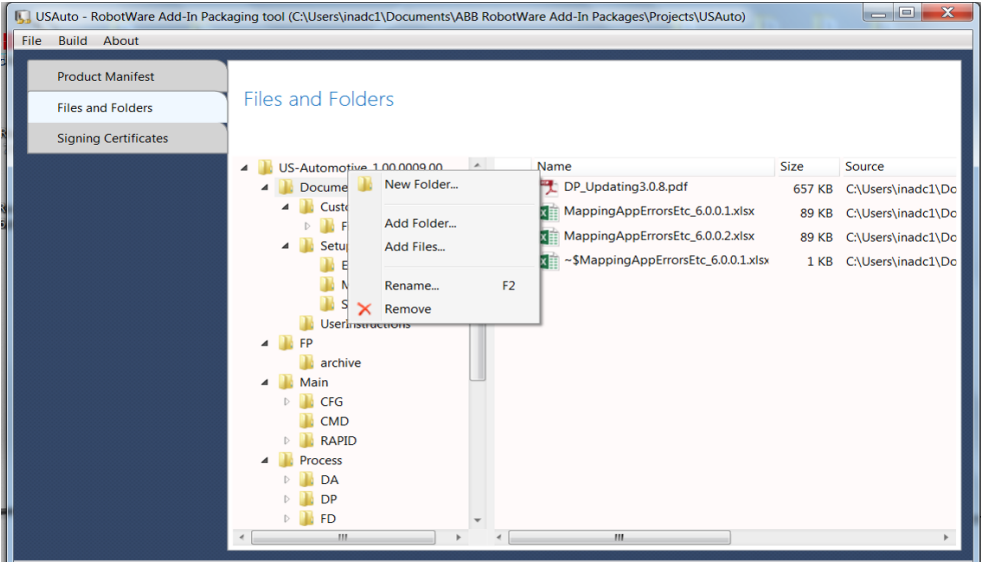Files and folders can be added to the project using the **Files and Folders** view. Right-click at the folder level for the following options:



xx1800001774

| Field name | Description |
|------------|---|
| New Folder | Creates a new folder. The folder is added to the respective level on the tree. |
| Add Folder | Adds an existing folder on the file system to the project. |
| Add Files | Adds the individual files to the project. |
| Rename | Renames the selected folder. <div>Note The root folder cannot be renamed.</div> |
| Remove | Removes the selected folder. <div>Note The root folder cannot be removed.</div> |


Right-click inside a folder for the following options:

Continues on next page

3 RobotWare Add-In Packaging tool

3.2.4 The Files and folders view

Continued

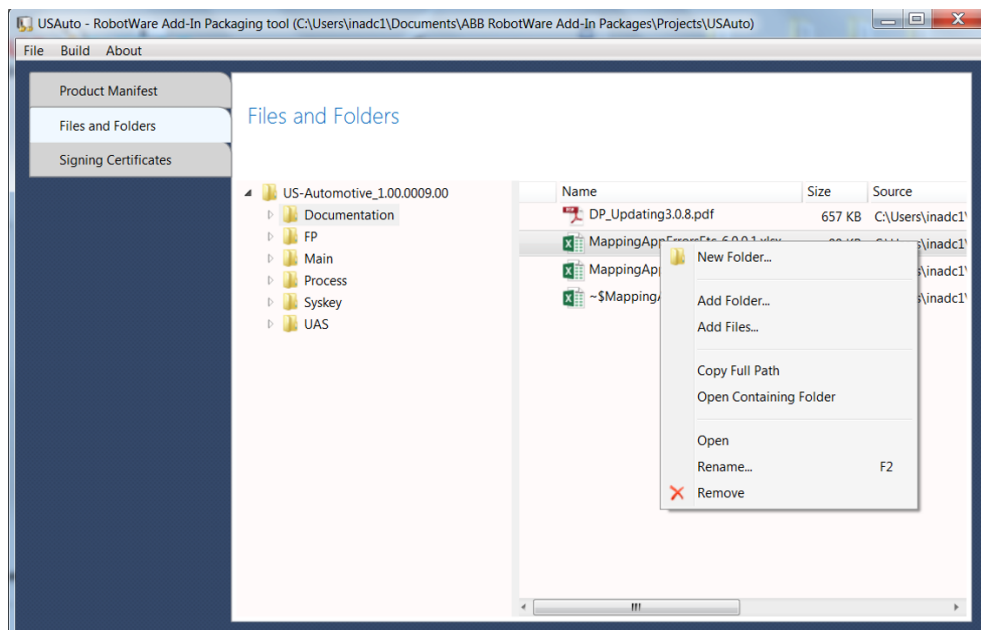

xx1800001775

| Field name | Description |
|------------------------|--|
| New Folder | Creates a new folder under the selected folder. The folder is added to the respective level on the tree. |
| Add Folder | Adds an existing folder under the selected folder. |
| Add Files | Adds the individual files to the project. |
| Copy Full Path | Copies the full path of the selected file to the clipboard. |
| Open Containing Folder | Opens the selected folder location in Explorer. |
| Open | Opens the selected file in the software tool for the file. |
| Rename | Renames the selected file. |
| Remove | Removes the selected file from the project. |

The name of the installation folder is a combination of the **Product Name** and the **Product Version**, that was defined in the **Product Details** tab.



Note

The added files or folders are not physically copied to the project folder. The RobotWare Add-In Packaging tool creates only a reference to the source files or folders. Hence the added files and folders should be available at the original source path.

When the project files or folders are modified in the original source location, there will be impacts in the **Files and Folders** view while opening a saved project.

- if a file or folder is deleted from the source location, then there will be an indication about the missing file or folder in the **Files and Folders** view.
- if a file or folder is manually added to the source location, then no indication is provided. You need to manually add the new file or folder in the **Files and**

Continues on next page

Folders view of the RobotWare Add-In Packaging tool, if the newly added file or folder is needed in the output package.

Files and folders for converted add-ins

After converting an additional option to an add-in, the *Syskey* directory can be removed from the **Files and Folders** view, since it will no longer be used in the RobotWare 6 installation. It was required for the import of the additional option, since it enables the RobotWare Add-In Packaging tool to auto generate the option details, but now the folder can be removed.

The *relkey.txt* file can also be removed, since it is not used anymore.


3 RobotWare Add-In Packaging tool

3.2.5 The Signing Certificate view



3.2.5 The Signing Certificate view

Overview

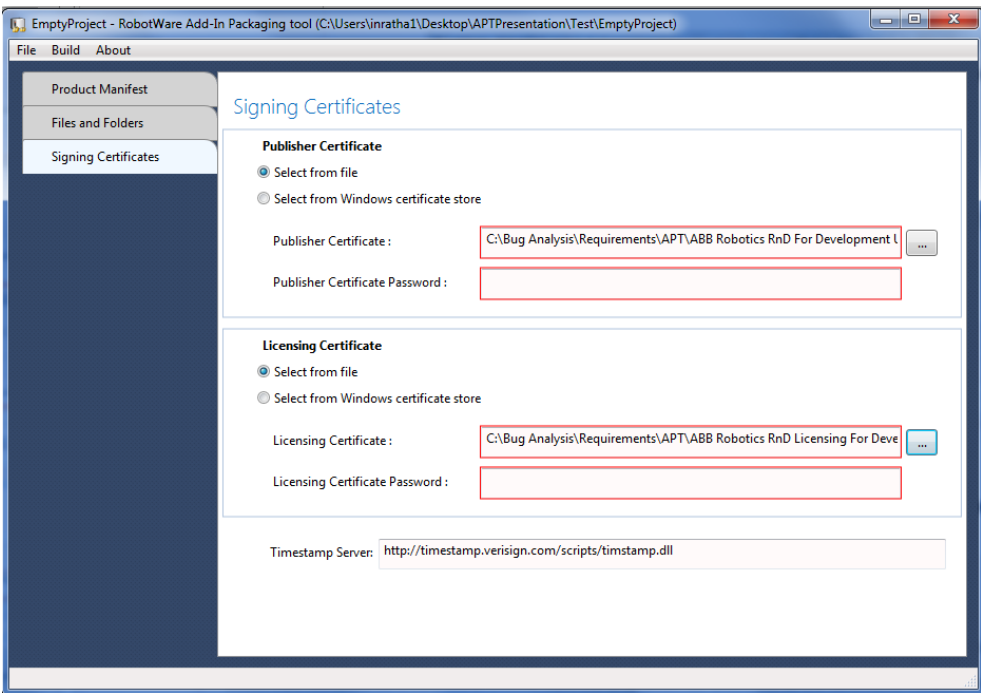

The **Signing Certificate** view is used to add the publisher and licensing certificates. This information is mandatory for licensed options and is used during the signing of the manifest and robot package files. For more information, see [Digital signing on page 74](#).



xx1800001776

| Section | Field name | Description |
|-----------------------|---------------------------------------|--|
| Publisher Certificate | Select from file | Select this option if the publisher certificate for digital signing should be provided as <i>.pfx</i> files.  Note Browse Publisher Certificate to select the certificate from its stored location. |
| | Select from Windows certificate store | Select this option if the publisher certificate for digital signing should be installed on your PC from the Windows certificate store. |
| | Publisher Certificate | Browse to select a certificate (<i>.pfx</i> file) from its stored location. The selected path is displayed.  Note This field is used in combination with option Select from file . |
| | Publisher Certificate Password | The password for the publisher certificate when specified as a <i>.pfx</i> file. |

Continues on next page

| Section | Field name | Description |
|-----------------------|---------------------------------------|---|
| Licensing Certificate | Select from file | <p>Select this option if the licensing certificate for digital signing should be provided as <i>.pfx</i> files.</p> <div>  Note </div> <p>Browse Licensing Certificate to select the certificate from its stored location.</p> |
| | Select from Windows certificate store | Select this option if the licensing certificate for digital signing should be installed on your PC from the Windows certificate store. |
| | Licensing Certificate | <p>Browse to select a certificate (<i>.pfx</i>file) from its stored location. The selected path is displayed.</p> <div>  Note </div> <p>This field is used in combination with option Select from file.</p> |
| | Licensing Certificate Password | The password for the licensing certificate when specified as a <i>.pfx</i> file. |
| | Timestamp Server | <p>Displays the URL to a timestamp server.</p> <p>For more information, see Timestamping on page 74.</p> |

3 RobotWare Add-In Packaging tool

3.3 Creating and building an add-in project

3.3 Creating and building an add-in project

Procedure

Use the following procedure to create and package the add-in.

| Step | Action | Description |
|------|--|--|
| 1 | Create a new empty project by clicking New and then Project from the File menu. Or: Select Project from an existing folder hierarchy , then the tool will try to generate default data for the add-in. | |
| 2 | Enter all the information about the add-in in the tabs of the product manifest view. | The Product Manifest view on page 82 |
| 3 | Add all files and folders. | Overview on page 91 |
| 4 | For licensed options, add the publisher and licensing certificates. | Overview on page 94 |
| 5 | Build the add-in by selecting Build Project from the Build menu. | |
| 6 | Generate a license using the License Generator. | License Generator on page 101 |
| 7 | Verify the add-in by building a system using the Installation Manager in RobotStudio. | Operating manual - RobotStudio |

3.4 Converting an additional option to an add-in

Overview

This section describes how to package an existing RobotWare 5 additional option as a RobotWare 6 add-in.

The RobotWare add-in Packaging tool will add information from the imported additional option as a template add-in. It is necessary to go through all the option details one by one to verify that the content is correct.

Limitations

Following are the limitations of RobotWare Add-In Packaging tool while converting an additional option to an add-in:

- The RobotWare Add-In Packaging tool does not perform any migration of the additional option to RobotWare 6, it is only a packaging tool. It is mandatory to first migrate the additional option to RobotWare 6, using the migration tool in RobotStudio.
- If the additional option has encrypted *relkey.opt* and *.dat* files, the files need to be decrypted. The RobotWare Add-In Packaging tool will not be able to process any encrypted files.

Procedure

Use the following procedure to convert an additional option to an add-in.

| | Action | See |
|---|---|--|
| 1 | Convert the project by clicking Project from an existing folder hierarchy from the File menu. | |
| 2 | Verify the information about the add-in in the tabs of the Product Manifest view. | The Product Manifest view on page 82 |
| 3 | Verify that all files and folders are present in the Files and folders view. | Overview on page 91 |
| 4 | For licensed options, add the publisher and licensing certificates. | Overview on page 94 |
| 5 | Build the add-In by selecting Build Project from the Build menu. | |
| 6 | Generate a license using the License Generator. | License Generator on page 101 |
| 7 | Verify the add-in by building a system using the Installation Manager in RobotStudio. | <i>Operating manual - RobotStudio</i> |

3 RobotWare Add-In Packaging tool

3.5 Building an add-in from the console

3.5 Building an add-in from the console

Overview

The console version of the RobotWare Add-In Packaging tool, `APTCommandLine.exe`, is used to build an existing add-in project from the command line.

The console version may be used as a batch command with relevant information to generate the add-in.

Use the argument "-h" along with `APTCommandline.exe` to display all the available arguments.



Note

Use : (colon) to separate an argument name and its value.



Note

Run `APTCommandline.exe` without any argument on the command line to view the usage of arguments with examples.

Prerequisites

The add-in project must be created with all relevant references and desired files and folders using the with the GUI based add-in packaging tool.

The console based add-in packaging tool uses this project to generate the add-in in an unattended manner when provided with all the relevant information in the batch command.

Description

The following table provides details of allowed add-in packaging tool command line parameters switches:

| Parameters switches | Description |
|----------------------|--|
| -h | Displays help text for APT commandline switches. |
| -projectfilename | Project file name. |
| -pubcertfile | Publisher signing certificate file. |
| -pubcertfilepassword | Password for the publisher certificate. |
| -liccertfile | Licensing signing certificate file. |
| -liccertfilepassword | Password for the licensing certificate |
| -liccertthumbprint | Thumb print for the licensing certificate stored in the certificate store. |
| -pubcertthumbprint | Thumb print for the publisher certificate stored in the certificate store. |
| -timestampurl | Time stamping server URL for code signing. |
| -outputfolder | Location to place the generated output. |
| -isopenaddin | Generates an open add-in when set to true. |

Continues on next page

| Parameters switches | Description |
|---------------------|--|
| -version | Changes the version of the generated product. |
| -autoincrement | Increments the version of the generated product. |

Following is an example command to build the project. The project path and the certificate path need to be provided.

```
C:\Program Files (x86)\ABB Industrial IT\Robotics
IT\AddinPackagingTool>APTCommandLine -projectfilename:"project
path" -isopenaddin:True -liccertfile:"certificate path"
```

For signing APT output files using Certificate files, possible options are:

- **Publisher certificate files** -pubcertfile along with the certificate file password -pubcertfilepassword.
- **Licensing certificate files** -liccertfile along with the certificate file password -liccertfilepassword.

For signing APT output files with thumbprint of certificate in the computer's certificate store, possible options are:

- **Publisher thumbprint** -pubcertthumbprint
- **Licensing thumbprint** -liccertthumbprint



Note

For publisher/licensing certificate signing, user can either use *certificate file(s) and password* or *thumbprint(s)* but not both in a single batch instruction.



Note

It is possible to use file *certificate file and password* for publisher signing and *thumbprint* for license signing.

This page is intentionally left blank

4 License Generator

4.1 Introduction

General

The License Generator generates license files for RobotWare add-ins.

Installation procedure

| | Action |
|---|--|
| 1 | Install the License Generator. |
| 2 | Install the certificate for the License Generator. Use the password provided by ABB. |
| 3 | Start the License Generator. |

4 License Generator


4.2.1 The Preferences window

4.2 The user interface


4.2.1 The Preferences window

Preferences

Before running the License Generator, the preferences in the **Preferences** window must be set up:

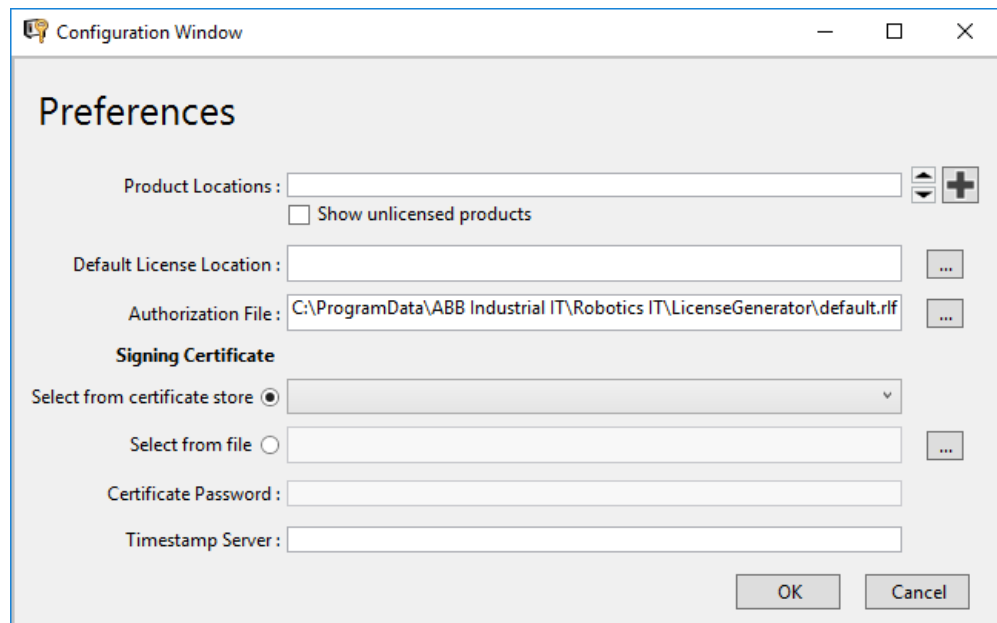


xx2000002041

| Field name | Description |
|--|--|
| Product Locations | The location of the product manifest files (*.rmf). |
| Default License Location | <div>The default location where the created licence files (*.rlf) should be saved.</div> <div> Note Make sure the folder has required read and write access.</div> |
| Authorization File | The authorization file, license file, (*.rlf) for the License Generator provided by ABB. |
| Signing Certificate (radio button) | <div>Install/use the certificate provided by ABB, same certificate as for the RobotWare Add-In Packaging tool.</div> <ul style="list-style-type: none">• Select from certificate store - Select certificates from store if the certificates are already installed.• Select from file - Select certificates from file (*.pfx) to install the certificates. |
| Certificate Password | Use the certificate password provided by ABB. |
| Timestamp Server | <div>URL to a timestamp server.</div> <div>For more information, see Timestamping on page 74.</div> |

4.2.2 The main window

Overview of the main window

The main window is used to add all options that are to be included in the license file. When all options are added, the license file is built by clicking **Generate License**.

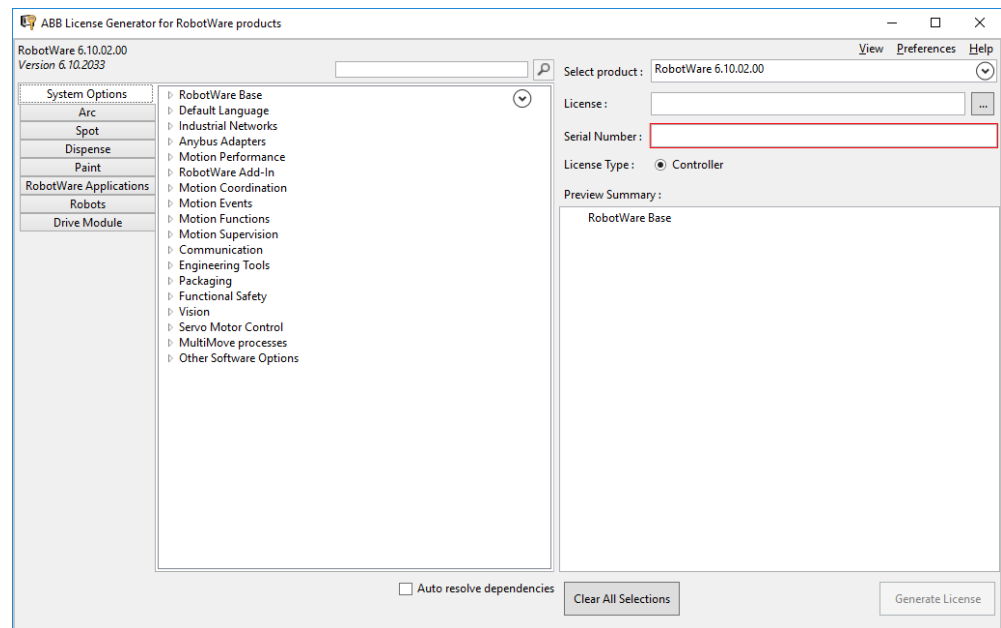

xx2000002040

| Field name | Description |
|---------------------------------------|---|
| Select product | Select the product manifest for which the license should be created. |
| License | Select a license to import. The content of that license will be copied. |
| Serial Number | Enter the serial number of the controller. |
| Expand/collapse button. | Expand/collapse the options in the selected tab. |
| License Type | License type Controller is selected. |
| Clear All Selections (button) | Clear all selected options. |
| Auto resolve dependencies (check box) | Automatically select dependant options. |
| Generate License (button) | Generate the license file. |



Tip

Double-click an option in the **Preview Summary** window to locate and highlight the option in the tree-view.

Continues on next page

4 License Generator

4.2.2 The main window

Continued



Tip

Use the search function to search for option names instead of browsing through the tree-view.

4.3 Creating the license

Creating a new license



Note

Before creating a license it is necessary to set up the preferences in the **Preferences** window, see [The Preferences window on page 102](#).

Use this procedure to create a new license.

| | Action |
|---|---|
| 1 | Select a product manifest to create the license for in the Select Product field. |
| 2 | Type in the serial number of the controller. |
| 3 | Select all options in the tree-view. |
| 4 | Generate the license file by clicking the Generate License button. |
| 5 | Verify the license by building a system using the Installation Manager in RobotStudio. |

Import and modify a license

Before creating a license it is necessary to set up the preferences in the **Preferences** window, see [The Preferences window on page 102](#).

Use this procedure to import and modify a license.

| | Action |
|---|---|
| 1 | Select the product manifest you want to create the license for in the Select Product field. |
| 2 | Select the license to import in the Order/License field. Click Open to import the license. |
| 3 | Type in the serial number of the controller. |
| 4 | (Optional) Add or remove options in the tree-view. |
| 5 | Generate the license file by clicking the Generate License button. |
| 6 | Verify the license by building a system using the Installation Manager. |

Viewing a licence file

The content of the license file is displayed in the **Licence View** window.

Use this procedure to view a license.

| | Action |
|---|--|
| 1 | Click View on the main menu. |
| 2 | Browse to the folder where the license is located. |
| 3 | Select the license file and click Open . |
| 4 | The content of the license file is displayed. |

This page is intentionally left blank

Index

\$, 18
#, 18

C

CAB_TASK_MODULES, 39
CIRCLEMOVE, 11
config, 18
copy, 20

D

default argument values, 44
delay, 20
delete, 21
delete_cfg_instance, 21
direxist, 21

E

echo, 21
eio.cfg, 43
event log messages, 31
event log texts, 32
event log titles, 34
example, 11, 15

F

fileexist, 21
file structure, 13
find_replace, 22

G

getkey, 22
goto, 22

I

ifstr, 22
ifvc, 23
include, 23
install.cmd, 18, 28
ISO 8859-1, 14

L

load modules, 39

M

math_lib_set_mem_size, 23
mkdir, 23
mmc.cfg, 44
module, 29
MoveCircle, 29

N

NOSTEPIN, 29

O

onerror, 24

P

pick list, 44
print, 24

R

rapid_delete_palette, 24
rapid_delete_palette_instruction, 25
RAPID module, 29
RAPID rules, 44
register, 25

S

selections, 10
setenv, 26
setstr, 27
sys.cfg, 39
system module, 29

T

template files, 31
text, 27
timestamp, 27

V

validating.xml, 35
version.xml, 15

X

xml
validating, 35

**ABB AB****Robotics & Discrete Automation**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS**Robotics & Discrete Automation**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201315, China

Telephone: +86 21 6105 6666

ABB Inc.**Robotics & Discrete Automation**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics