



ROBOTICS

Product specification

IRB 660



Trace back information:
Workspace 24D version a4
Checked in 2024-12-09
Skribenta version 5.6.018

Product specification

IRB 660-180/3.15

IRB 660-250/3.15

IRC5

Document ID: 3HAC023932-001

Revision: Y

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2004-2024 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

Overview of this specification	7
1 Description	11
1.1 Structure	11
1.1.1 Introduction	11
1.1.2 Different robot versions	13
1.1.3 Definition of version designation	14
1.2 Standards	17
1.2.1 Applicable standards	17
1.3 Installation	19
1.3.1 Introduction	19
1.3.2 Technical data	20
1.3.3 Mounting the manipulator	24
1.4 Calibration	29
1.4.1 Calibration methods	29
1.4.2 Fine calibration	30
1.4.3 Calibration tools for Axis Calibration	32
1.4.4 Synchronization marks and axis movement directions	33
1.4.4.1 Synchronization marks and synchronization position for axes	33
1.4.4.2 Calibration movement directions for all axes	34
1.5 Load diagrams	35
1.5.1 Introduction to Load diagrams	35
1.5.2 Load diagrams	36
1.5.3 Maximum load and moment of inertia	38
1.5.4 Maximum TCP acceleration	39
1.6 Mounting of equipment	40
1.6.1 Overview	40
1.7 Robot motion	45
1.7.1 Introduction	45
1.7.2 Performance according to ISO 9283	47
1.7.3 Velocity	48
1.7.4 Robot stopping distances and times	49
1.8 Customer connections	50
1.8.1 Introduction	50
1.9 Maintenance and troubleshooting	52
1.9.1 Introduction	52
2 Specification of variants and options	53
2.1 Introduction to variants and options	53
2.2 Manipulator	54
2.3 Floor cables	57
2.4 Process	58
2.5 User documentation	59
2.6 Warranty	60
3 Accessories	61
3.1 Introduction to accessories	61
Index	63

This page is intentionally left blank

Overview of this specification

About this product specification

This product specification describes the performance of the manipulator or a complete family of manipulators in terms of:

- The structure and dimensional prints
- The fulfilment of standards, safety, and operating equipment
- The load diagrams, mounting or extra equipment, the motion, and the robot reach
- The specification of available variants and options

The specification covers the manipulator using the IRC5 controller.

Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

The specification is intended for:

- Product managers and product personnel
- Sales and marketing personnel
- Order and customer service personnel
- Integrators and customers

References

Reference	Document ID
<i>Product manual - IRB 660</i>	3HAC025755-001
<i>Product specification - Controller IRC5</i> IRC5 with main computer DSQC1000.	3HAC047400-001
<i>Product specification - Controller software IRC5</i> IRC5 with main computer DSQC1000 and RobotWare 5.6x.	3HAC050945-001
<i>Product specification - Controller software IRC5</i> IRC5 with main computer DSQC1000 and RobotWare 6.	3HAC050945-001
<i>Product specification - Robot user documentation, IRC5 with RobotWare 6</i>	3HAC052355-001
<i>Product specification - Robot stopping distances according to ISO 10218-1</i>	3HAC048645-001

Revisions

Revision	Description
-	- New Product specification
A	- General corrections
B	- Changes in Figure 3 and Figure 16.

Continues on next page

Revision	Description
C	<ul style="list-style-type: none"> - Update Customer connections- Interbus removed - Footnote added to "Pose accuracy" - Stock Warranty
D	<ul style="list-style-type: none"> - Changes in chapter Standards - Directions of forces - Warranty information for Load diagrams
E	<ul style="list-style-type: none"> - Position switches removed.
F	<ul style="list-style-type: none"> - Work range - Explanation of ISO values (new figure and table) - Stopping distance - User documentation on DVD
G	<ul style="list-style-type: none"> - General update for 9.1 release
H	<ul style="list-style-type: none"> - Text for Standards updated
J	<ul style="list-style-type: none"> - Tightening torque adjusted
K	<ul style="list-style-type: none"> • Table for ambient temperature adjusted • New picture of tool flange • Minor corrections of foundation forces
L	<ul style="list-style-type: none"> • Machinery directive updated • Minor corrections
M	<ul style="list-style-type: none"> • Base plate drawing updated
N	<ul style="list-style-type: none"> • Minor corrections/update
P	<ul style="list-style-type: none"> • Text for ISO test adjusted
Q	<ul style="list-style-type: none"> • Minor corrections/update
R	<p>Published in release R17.1. The following updates are done in this revision:</p> <ul style="list-style-type: none"> • Axis Calibration method added • Restriction of load diagram added.
S	<p>Published in release R17.2. The following updates are done in this revision:</p> <ul style="list-style-type: none"> • Updated list of applicable standards. • TCP acceleration information added
T	<p>Published in release R18.2. The following updates are done in this revision:</p> <ul style="list-style-type: none"> • Added locating hole position in tool flange view.
U	<p>Published in release R20D. The following updates are done in this revision:</p> <ul style="list-style-type: none"> • Minor changes. • New customer option cable harness (with ethernet cable) added. • Warranty section updated.
V	<p>Published in release 21B. The following updates are done in this revision:</p> <ul style="list-style-type: none"> • Text regarding fastener quality is updated. • Specification updated in customer connection section for DressPack, Parallel and Ethernet communication. • Removed Axis resolution. • Updated information about the option <i>Extended working range</i>.

Continues on next page

Revision	Description
X	Published in release 21D. The following updates are done in this revision: <ul style="list-style-type: none"> • Minor changes. • The data for robot stopping distances is removed. See <i>Product specification - Robot stopping distances according to ISO 10218-1</i>. • Description for option 455-8 updated.
Y	Published in release 24D. The following updates are done in this revision: <ul style="list-style-type: none"> • Updated data for power consumption. • Updated the section Technical data on page 20. • Add RAL code in manipulator color.

This page is intentionally left blank

1 Description

1.1 Structure

1.1.1 Introduction

Robot family

IRB 660 is ABB Robotics latest generation of 4-axis palletizing robot, designed with a focus on its high production capacity, short cycle time at a high payload, long reach together with the very high uptime, which is significant for ABB's robots. It is available in two versions; a handling capacity of 180 kg and 250 kg, both with a reach of 3.15 m.

Customer connections such as power signals, Bus signals and twin air are integrated in the robot, from the robot base to connections at the robot tool flange.

Operating system

The robot is equipped with the IRC5 controller and robot control software, RobotWare. RobotWare supports every aspect of the robot system, such as motion control, development and execution of application programs, communication and so on. For more information, see *Product specification - Controller IRC5 with FlexPendant*.

Safety

Safety standards valid for complete robot, manipulator and controller.

Additional functionality

For additional functionality, the robot can be equipped with optional software for application support. For example, gluing and welding, communication feature such as network communication, and advanced functions such as multitasking, sensor control and so on. For a complete description on optional software, see *Product specification - Controller software IRC5*.

Continues on next page


1 Description

1.1.1 Introduction

Continued

Manipulator axes

The IRB 660 manipulator has 4 axes as shown in the following figure.

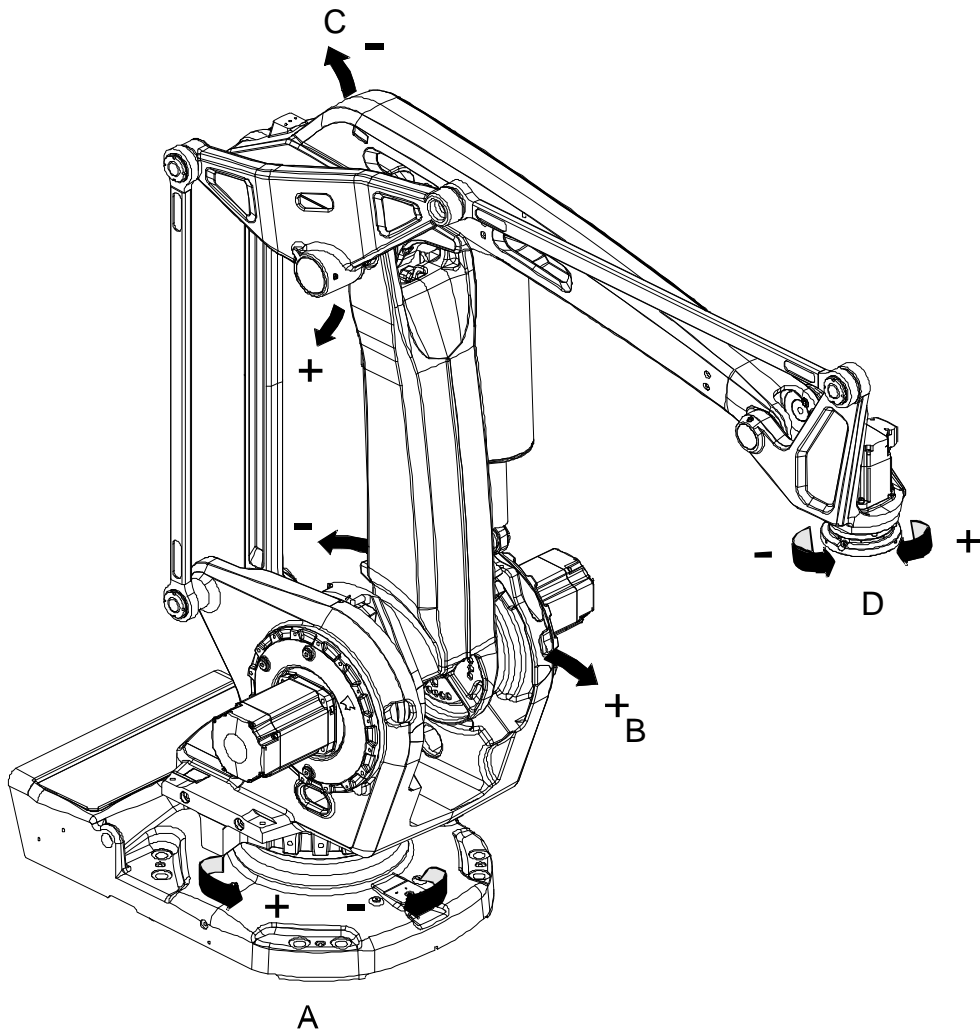

en1000000670

Pos.	Description
A	Axis 1
B	Axis 2
C	Axis 3
D	Axis 6

1.1.2 Different robot versions

General

The IRB 660 is available in two versions.

Robot type	Handling capacity (kg)	Reach (m)
IRB 660	180	3.15
IRB 660	250	3.15

1 Description

1.1.3 Definition of version designation

1.1.3 Definition of version designation

IRB 660 Mounting

Handling capacity/ Reach

	Prefix	Description
Mounting	-	Floor-mounted manipulator
Handling capacity	yyy	Indicates the maximum handling capacity (kg)
Reach	x.x	Indicates the maximum reach at wrist center (m)

Manipulator weight

Robot type	Handling capacity (kg)	Reach (m)	Weight (kg)
IRB 660	180	3.15	1,750
IRB 660	250	3.15	1,750

Other technical data

Data	Description	Note
Airborne noise level	The sound pressure level outside the working space	< 70 dB (A) Leq (acc. to Machinery directive 2006/42/EG).

Power consumption at max speed (vmax)

Type of Movement	IRB 660 (all variants)
ISO Cube	2.8 kW


Robot in calibration position	IRB 660 (all variants)
Brakes engaged	0.13 kW
Brakes disengaged	0.53 kW

General Palletizing movements in 48s. at maximum speed.

General Palletizing movements	Power consumption [kW] IRB 660-180/3.15
Max. speed	3.08

Continues on next page

The path E1-E2-E3-E4 in the ISO Cube is shown in the following figure.

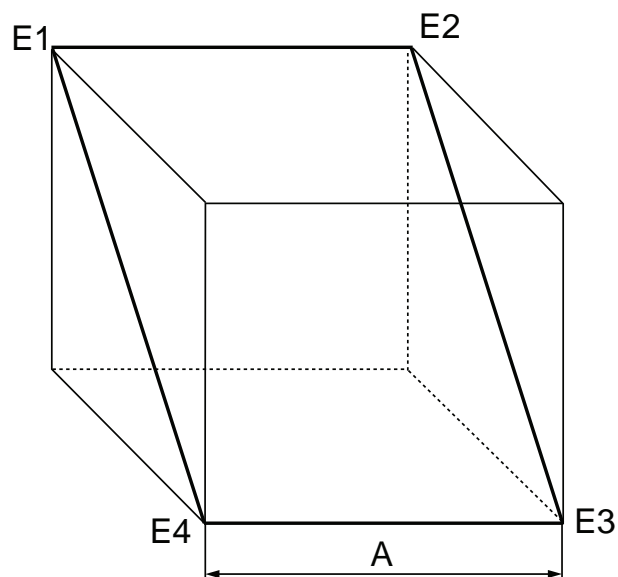

xx1000000101

Pos	Description
A	1,000 mm

Continues on next page


1 Description

1.1.3 Definition of version designation

Continued

Dimensions of IRB 660

The following figure shows the front, side, and top view of the manipulator (dimensions in mm). Allow 200 mm behind the manipulator foot for cables.

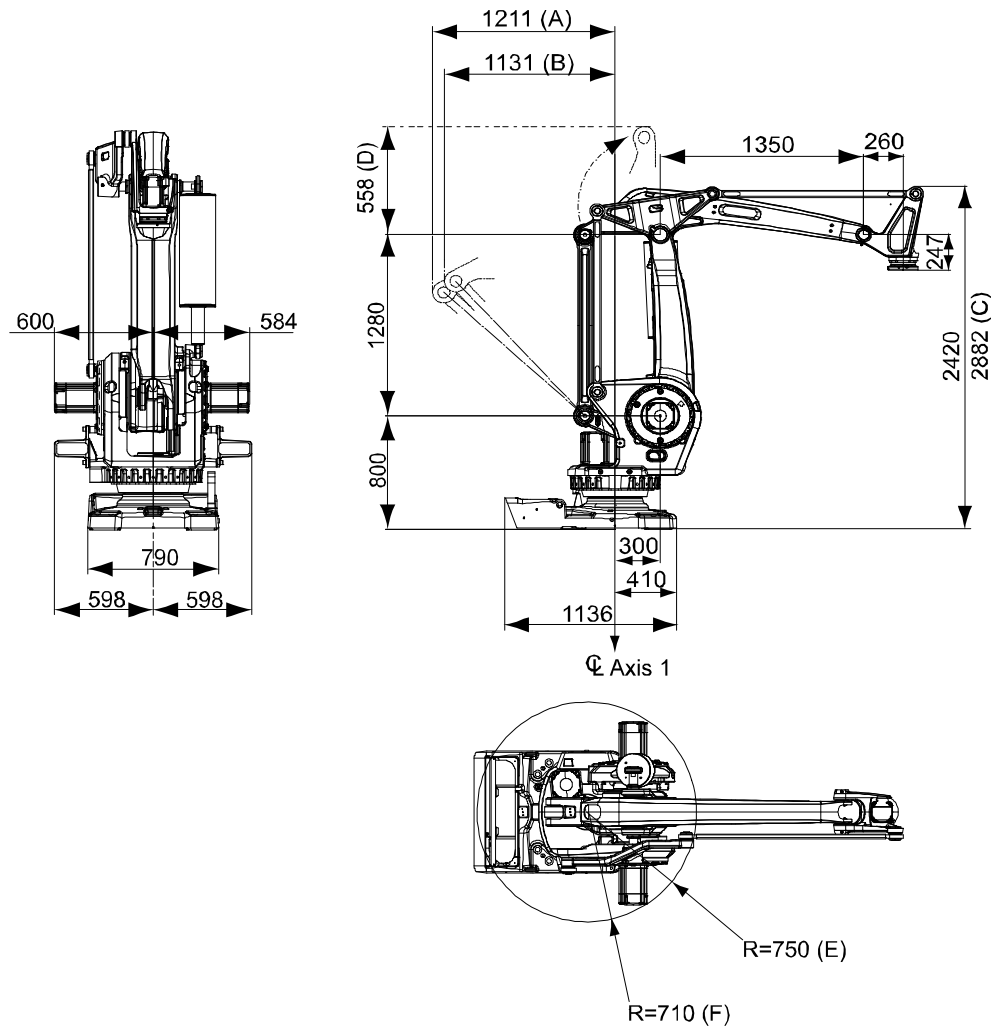

en1000000821

Position	Description
A	At mechanical stop
B	At max. working range axis 2
C	At max. working range axis 3
D	At min. working range axis 3
E	Radius for fork lift pocket
F	Radius for axis 3 motor

1.2 Standards

1.2.1 Applicable standards



Note

The listed standards are valid at the time of the release of this document. Phased out or replaced standards are removed from the list when needed.

General

The product is designed in accordance with ISO 10218-1:2011, Robots for industrial environments - Safety requirements -Part 1 Robots, and applicable parts in the normative references, as referred to from ISO 10218-1:2011. In case of deviations from ISO 10218-1:2011, these are listed in the declaration of incorporation which is part of the product delivery.

Normative standards as referred to from ISO 10218-1

Standard	Description
ISO 9283:1998	Manipulating industrial robots - Performance criteria and related test methods
ISO 10218-2	Robots and robotic devices - Safety requirements for industrial robots - Part 2: Robot systems and integration
ISO 12100	Safety of machinery - General principles for design - Risk assessment and risk reduction
ISO 13849-1:2006	Safety of machinery - Safety related parts of control systems - Part 1: General principles for design
ISO 13850	Safety of machinery - Emergency stop - Principles for design
IEC 60204-1	Safety of machinery - Electrical equipment of machines - Part 1: General requirements

Region specific standards and regulations

Standard	Description
ANSI/RIA R15.06	Safety requirements for industrial robots and robot systems
ANSI/UL 1740	Safety standard for robots and robotic equipment
CAN/CSA Z 434	Industrial robots and robot Systems - General safety requirements

Other standards used in design

Standard	Description
ISO 9787:2013	Robots and robotic devices -- Coordinate systems and motion nomenclatures
IEC 61000-6-2	Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments
IEC 61000-6-4	Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments

Continues on next page

1 Description

1.2.1 Applicable standards

Continued

Standard	Description
ISO 13732-1:2006	Ergonomics of the thermal environment - Part 1
IEC 60974-1:2012 ⁱ	Arc welding equipment - Part 1: Welding power sources
IEC 60974-10:2014 ⁱ	Arc welding equipment - Part 10: EMC requirements
ISO 14644-1:2015 ⁱⁱ	Classification of air cleanliness
IEC 60529:1989 + A2:2013	Degrees of protection provided by enclosures (IP code)

ⁱ Only valid for arc welding robots. Replaces IEC 61000-6-4 for arc welding robots.

ⁱⁱ Only robots with protection Clean Room.

1.3 Installation

1.3.1 Introduction

General

IRB 660 is designed for floor mounting (no tilting allowed around X or Y axis). Depending on the robot version, an end effector with maximum weight of 180 to 250 kg including payload, can be mounted on the mounting flange (axis 6). For more information on Load diagrams, see [Load diagrams on page 36](#).

Working range

The working range of axis 1 can be limited by mechanical stops.

The option *Electronic Position Switches* can be used on all axes, for position indication of the manipulator.

External Mains Transformer

Include an external transformer for mains voltage 200V and 220V.

Explosive environments

The robot must not be located or operated in an explosive environment.

1 Description

1.3.2 Technical data

1.3.2 Technical data

Weight, robot

The table shows the weight of the robot.

Robot model	Weight
IRB 660	1750 kg



Note

The weight does not include tools and other equipment fitted on the robot.

Mounting positions

The table shows valid mounting options for the manipulator.

Mounting option	Installation angle	Note
Floor mounted	0°	



Note


The actual mounting angle must always be configured in the system parameters, otherwise the performance and lifetime is affected. See the product manual for details.

Continues on next page

Loads on foundation, robot

The illustration shows the directions of the robots stress forces.

The directions are valid for all floor mounted, suspended and inverted robots.

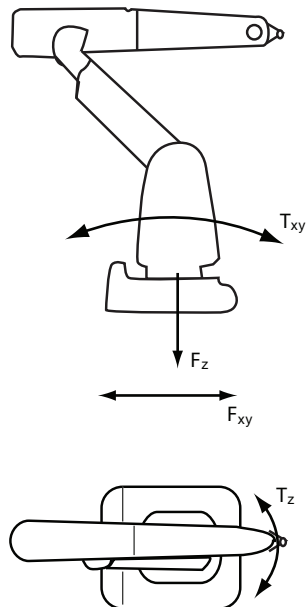

xx1100000521

F_{xy}	Force in any direction in the XY plane
F_z	Force in the Z plane
T_{xy}	Bending torque in any direction in the XY plane
T_z	Bending torque in the Z plane

The table shows the various forces and torques working on the robot during different kinds of operation.

**Note**

These forces and torques are extreme values that are rarely encountered during operation. The values also never reach their maximum at the same time!

**WARNING**

The robot installation is restricted to the mounting options given in following load table(s).

Floor mounted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	± 8.0 kN	± 11.7 kN
Force z	18.0 ± 4.9 kN	18.0 ± 8.2 kN
Torque xy	± 23.2 kNm	± 31.2 kNm
Torque z	± 7.7 kNm	± 9.9 kNm

Continues on next page


1 Description

1.3.2 Technical data

Continued

Requirements, foundation

The table shows the requirements for the foundation where the weight of the installed robot is included:

Requirement	Value	Note
Flatness of foundation surface	0.3 mm	Flat foundations give better repeatability of the resolver calibration compared to original settings on delivery from ABB. The value for levelness aims at the circumstance of the anchoring points in the robot base.
Minimum resonance frequency	22 Hz  Note It may affect the manipulator life-time to have a lower resonance frequency than recommended.	The value is recommended for optimal performance. Due to foundation stiffness, consider robot mass including equipment. ⁱ For information about compensating for foundation flexibility, see the application manual of the controller software, section <i>Motion Process Mode</i> .

ⁱ The minimum resonance frequency given should be interpreted as the frequency of the robot mass/inertia, robot assumed stiff, when a foundation translational/torsional elasticity is added, i.e., the stiffness of the pedestal where the robot is mounted. The minimum resonance frequency should not be interpreted as the resonance frequency of the building, floor etc. For example, if the equivalent mass of the floor is very high, it will not affect robot movement, even if the frequency is well below the stated frequency. The robot should be mounted as rigid as possible to the floor.

Disturbances from other machinery will affect the robot and the tool accuracy. The robot has resonance frequencies in the region 10 – 20 Hz and disturbances in this region will be amplified, although somewhat damped by the servo control. This might be a problem, depending on the requirements from the applications. If this is a problem, the robot needs to be isolated from the environment.

Storage conditions, robot

The table shows the allowed storage conditions for the robot:

Parameter	Value
Minimum ambient temperature	-25° C
Maximum ambient temperature	+55° C
Maximum ambient temperature (less than 24 hrs)	+70° C
Maximum ambient humidity	95% at constant temperature (gaseous only)

Operating conditions, robot

The table shows the allowed operating conditions for the robot:

Parameter	Value
Minimum ambient temperature	0° C
Maximum ambient temperature	+50° C
Maximum ambient humidity	95% at constant temperature

Continues on next page

Protection classes, robot

The table shows the available protection types of the robot, with the corresponding protection class.

Protection type	Protection class ⁱ
Manipulator, protection type Standard	IP 67

ⁱ According to IEC 60529.

1 Description

1.3.3 Mounting the manipulator

1.3.3 Mounting the manipulator


Maximum Load

Maximum load in relation to the base coordinate system.

Floor Mounted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	$\pm 8.0 \text{ kN}$	$\pm 11.7 \text{ kN}$
Force z	$18.0 \pm 4.9 \text{ kN}$	$18.0 \pm 8.2 \text{ kN}$
Torque xy	$\pm 23.2 \text{ kNm}$	$\pm 31.2 \text{ kNm}$
Torque z	$\pm 7.7 \text{ kNm}$	$\pm 9.9 \text{ kNm}$

The following figure shows the direction of forces.

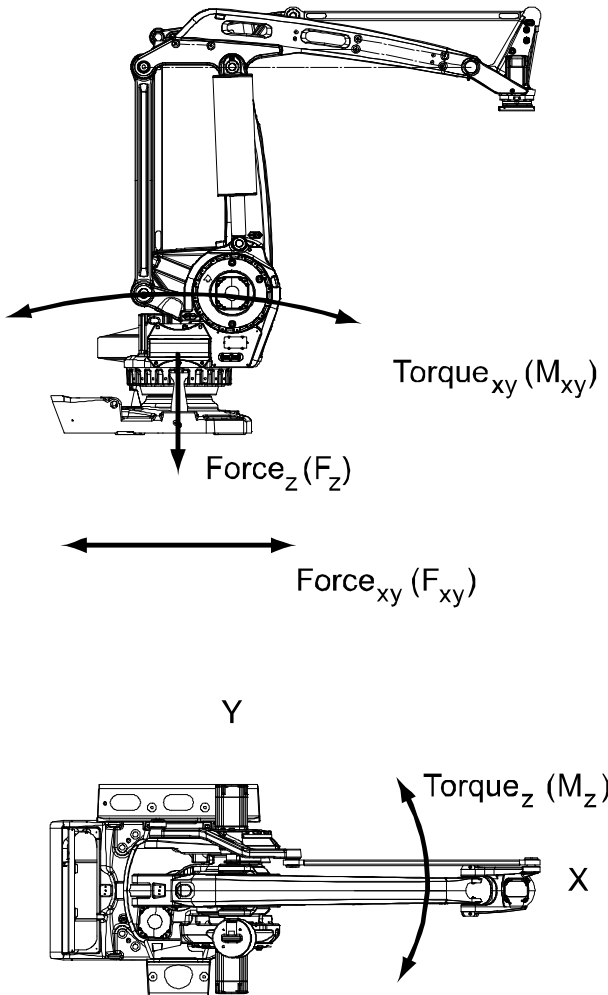

en1000000825

Note regarding M_{xy} and F_{xy}


The bending torque (M_{xy}) can occur in any direction in the XY-plane of the base coordinate system.

The same applies to the transverse force (F_{xy}).

Continues on next page

Fastening holes robot base

The following figure shows the hole configuration (dimensions in mm).

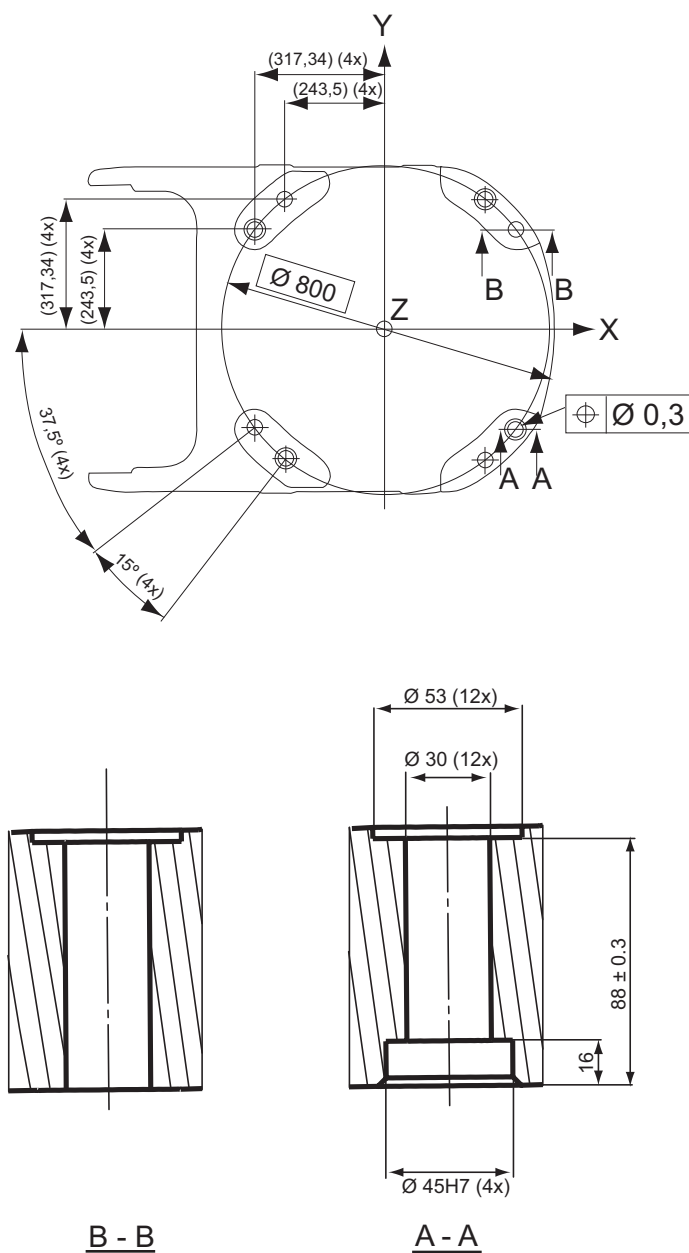

xx1000000826

Recommended screws for fastening the manipulator to a base plate:

- M24 x 140 8.8 with 4 mm flat washer. Torque value 725 Nm.



Note

Only two guiding sleeves shall be used. The corresponding holes in the base plate shall be circular and oval according to the following base plate drawing. Regarding AbsAcc performance, the recommended are the chosen guide holes those are according to the following base plate drawing.

Continues on next page


1 Description

1.3.3 Mounting the manipulator

Continued

Base plate drawing



The following figure shows the option base plate (dimensions in mm).

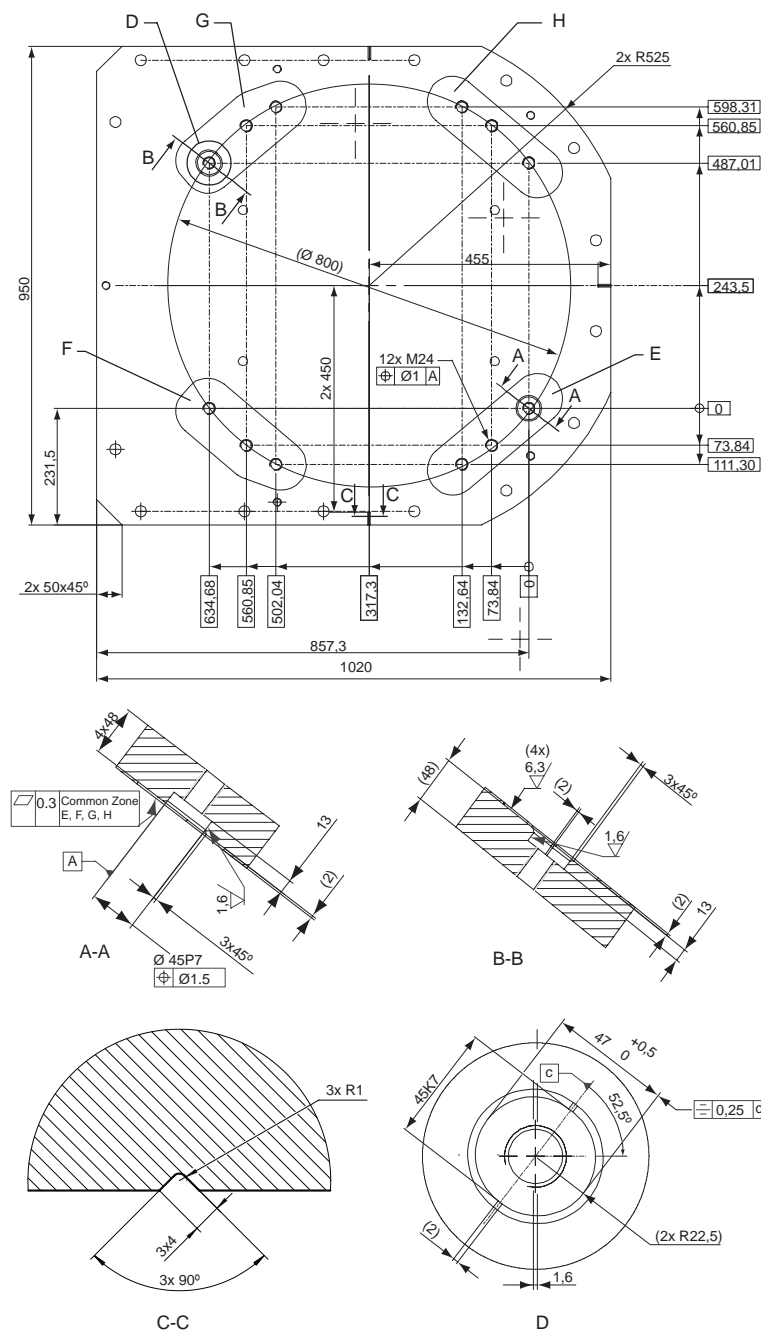

xx1000001053

E, F, G, H	Common tolerance zone (accuracy all over the base plate from one contact surface to the other)
------------	--

Continues on next page

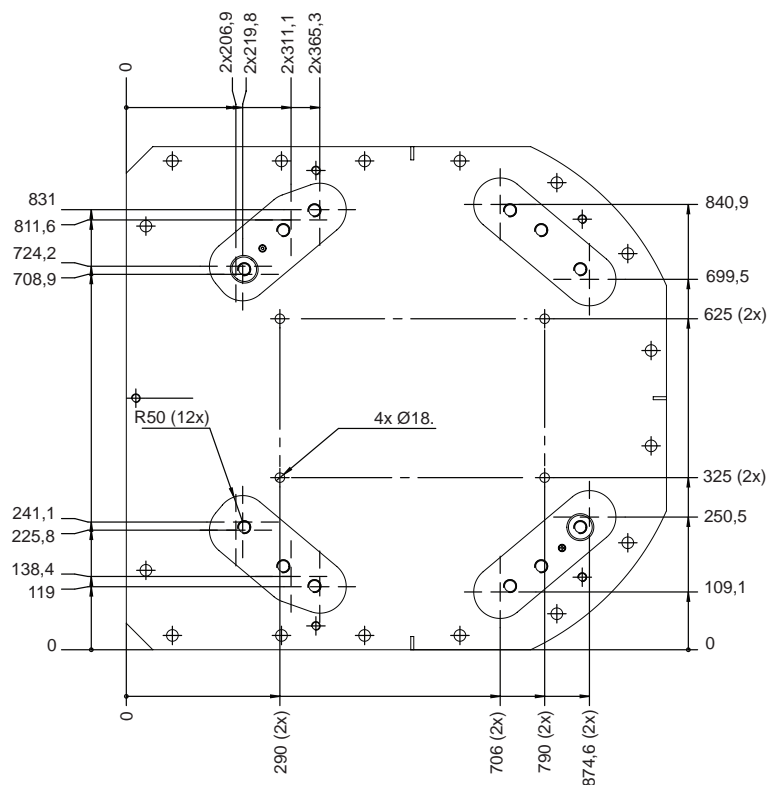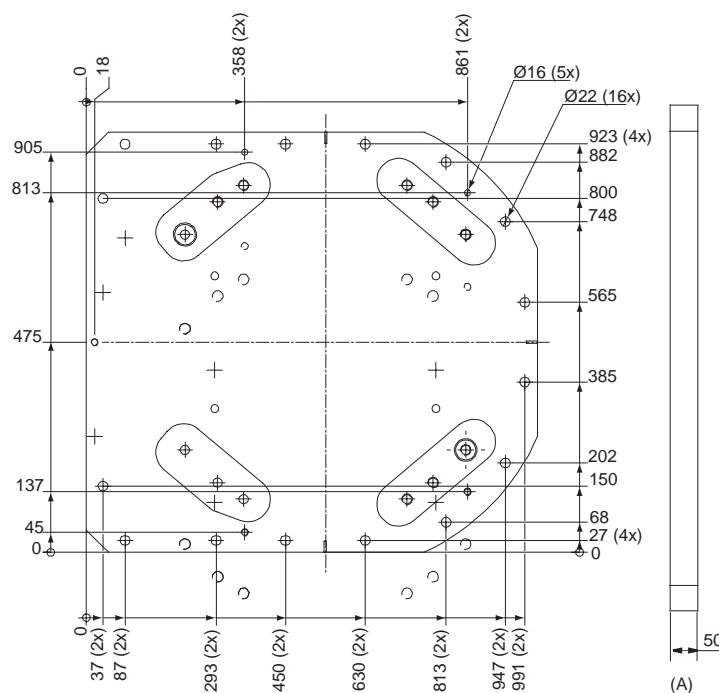

xx1000001054


Pos	Description
A	Color: RAL 9005 Thickness: 80-100 µm

Continues on next page

1 Description

1.3.3 Mounting the manipulator

Continued

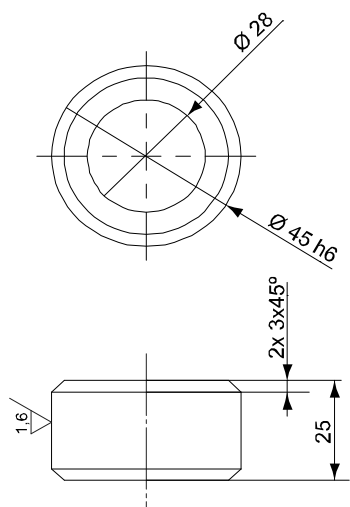

xx1000001055

Pos	Description
A	Guide sleeve protected from corrosion

1.4 Calibration

1.4.1 Calibration methods

Overview

This section specifies the different types of calibration and the calibration methods that are supplied by ABB.

More information is available in the product manual.

Types of calibration

Type of calibration	Description	Calibration method
Standard calibration	The calibrated robot is positioned at calibration position. Standard calibration data is found on the SMB (serial measurement board) or EIB in the robot.	Axis Calibration

Brief description of calibration methods

Axis Calibration method

Axis Calibration is a standard calibration method for calibration of IRB 660. It is the recommended method in order to achieve proper performance.

The following routines are available for the Axis Calibration method:

- Fine calibration
- Update revolution counters
- Reference calibration

The calibration equipment for Axis Calibration is delivered as a toolkit.

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.


1 Description

1.4.2 Fine calibration

1.4.2 Fine calibration

General

Fine calibration is made using *Calibration Pendulum*, see *Operating manual - Calibration Pendulum*.

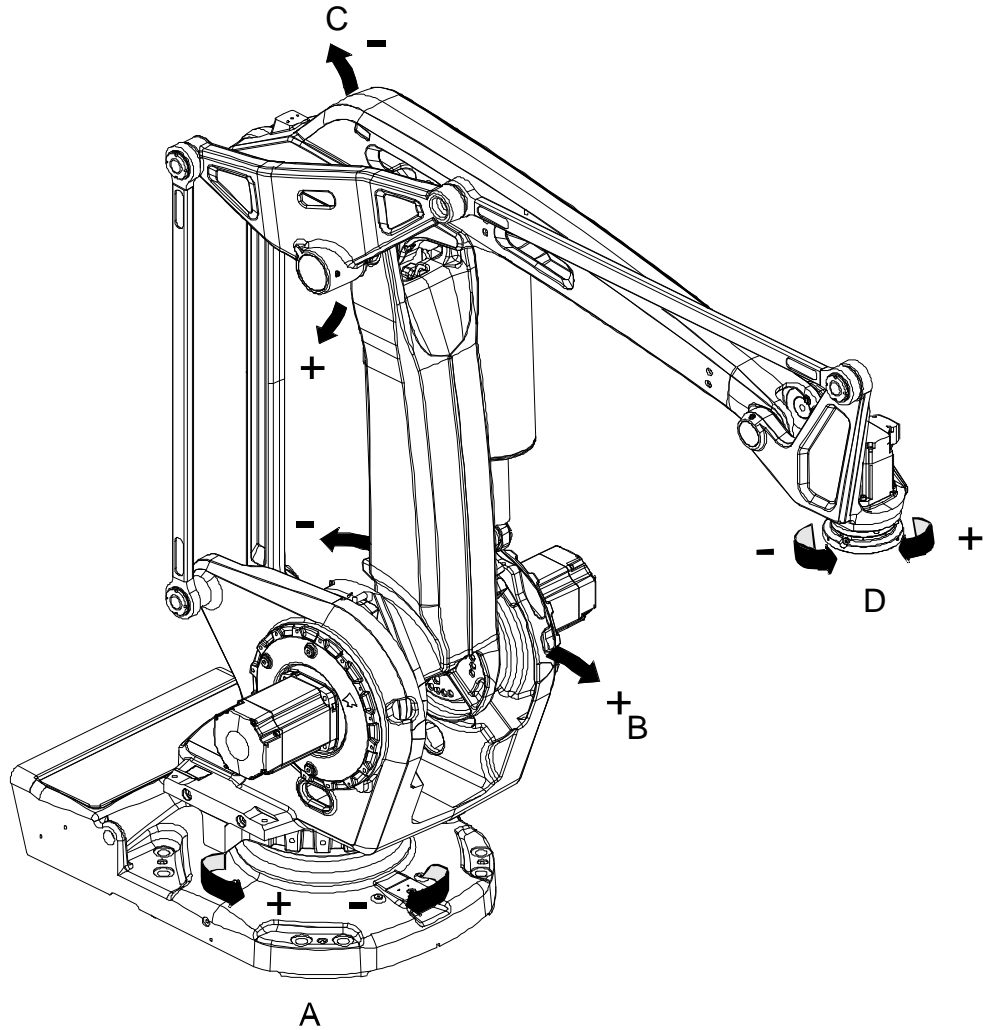

en1000000670

Position	Description
A	Axis 1
B	Axis 2
C	Axis 3
D	Axis 6

Calibration	Position
Calibration of all axes	All axes are in zero position
Calibration of axis 1 and 2	Axis 1 and 2 in zero position Axis 3 to 6 in any position

Continues on next page

Calibration	Position
Calibration of axis 1	Axis 1 in zero position Axis 2 to 6 in any position

1 Description

1.4.3 Calibration tools for Axis Calibration


1.4.3 Calibration tools for Axis Calibration

Calibration tools




WARNING

If any part is missing or damaged, the tool must be replaced immediately.

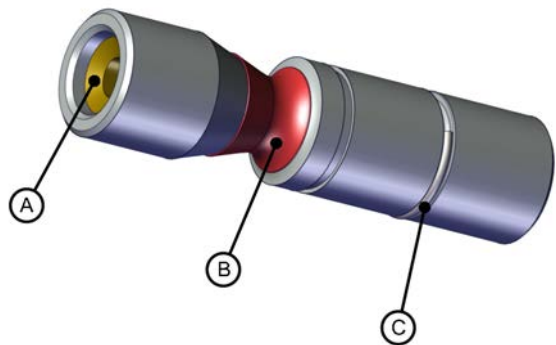

xx1500001914

A	Tube insert
B	Plastic protection
C	Steel spring ring

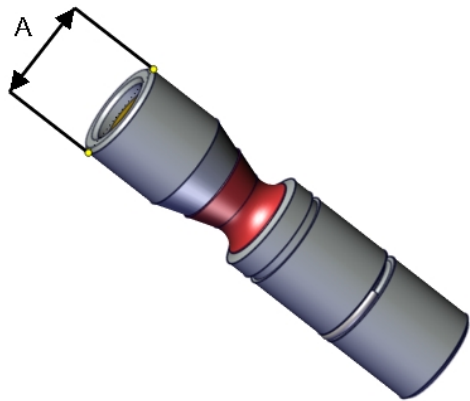

xx1500000951

A	Outer diameter
---	----------------

If including the calibration tool in a local periodic check system, the following measures should be checked.

- Outer diameter within $\varnothing 12g4$ mm, $\varnothing 8g4$ mm or $\varnothing 6g5$ mm (depending on calibration tool size).
- Straightness within 0.005 mm.


1.4.4 Synchronization marks and axis movement directions

1.4.4.1 Synchronization marks and synchronization position for axes

Introduction

This section shows the position of the synchronization marks and the synchronization position for each axis.

Synchronization marks, IRB 660

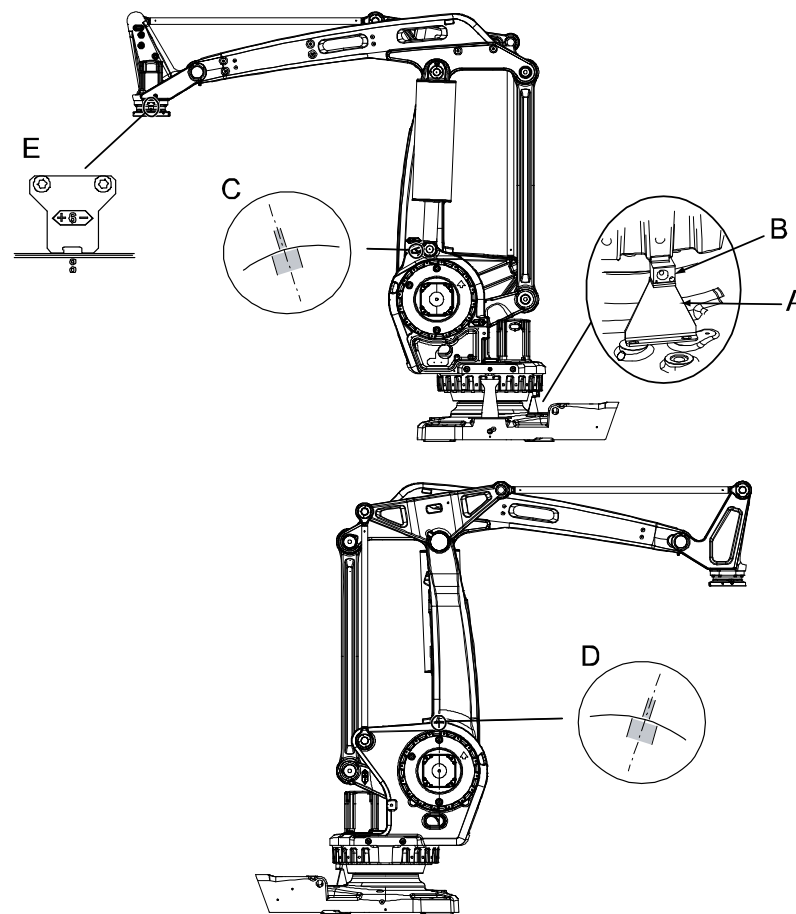

xx0500002487

A	Synchronization plate, axis 1
B	Synchronization tab on robot
C	Synchronization mark, axis 2
D	Synchronization mark, axis 3
E	Synchronization plate and mark, axis 6

Synchronization marks at axes 2 and 3

The synchronization marks at axes 2, 3 and 6, shown in the figure above, consist of two single marks that should be positioned opposite to one another when the robot is standing in its synchronization position. One of the marks is more narrow than the other and should be positioned within the limits of the wider mark.

1 Description

1.4.4.2 Calibration movement directions for all axes

1.4.4.2 Calibration movement directions for all axes


Overview

When calibrating, the axis must consistently be run towards the calibration position in the same direction in order to avoid position errors caused by backlash in gears and so on. Positive directions are shown in the graphic below.

Calibration service routines will handle the calibration movements automatically and these might be different from the positive directions shown below.

Manual movement directions, 4 axes

Note! The graphic shows an IRB 260. The positive direction is the same for all 4-axis robots

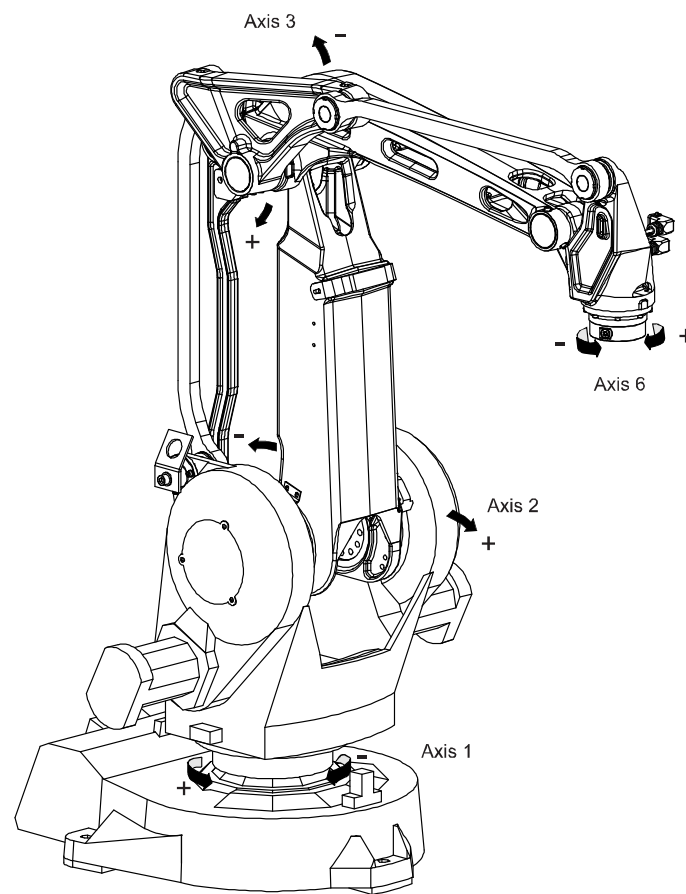

xx0500001927

1.5 Load diagrams

1.5.1 Introduction to Load diagrams

Information

**WARNING**

It is very important to always define correct actual load data and correct payload of the robot. Incorrect definitions of load data can result in overloading of the robot.

If incorrect load data is used, and/or if loads outside the load diagram are used, the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure

**WARNING**

In RobotWare, the service routine LoadIdentify can be used to determine correct load parameters. The routine automatically defines the tool and the load.

See *Operating manual - IRC5 with FlexPendant*, for detailed information.

**WARNING**

Robots running with incorrect load data and/or with loads outside the load diagram, will not be covered by robot warranty.

General

The load diagrams include a nominal payload inertia, J_0 of 15 kgm², and an extra load of 50 kg at the upper arm housing.

At different moment of inertia the load diagram will be changed. For robots that are allowed tilted, wall or inverted mounted, the load diagrams as given are valid and thus it is also possible to use RobotLoad within those tilt and axis limits.

Control of load case with RobotLoad

To verify a specific load case, use the RobotStudio add-in RobotLoad.

The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted arm load is exceeded. For over-load cases and special applications, contact ABB for further analysis.


1 Description

1.5.2 Load diagrams

1.5.2 Load diagrams

IRB 660-180/3.15


The following figures shows the maximum permitted load mounted on the robot tool flange at different positions (center of gravity).

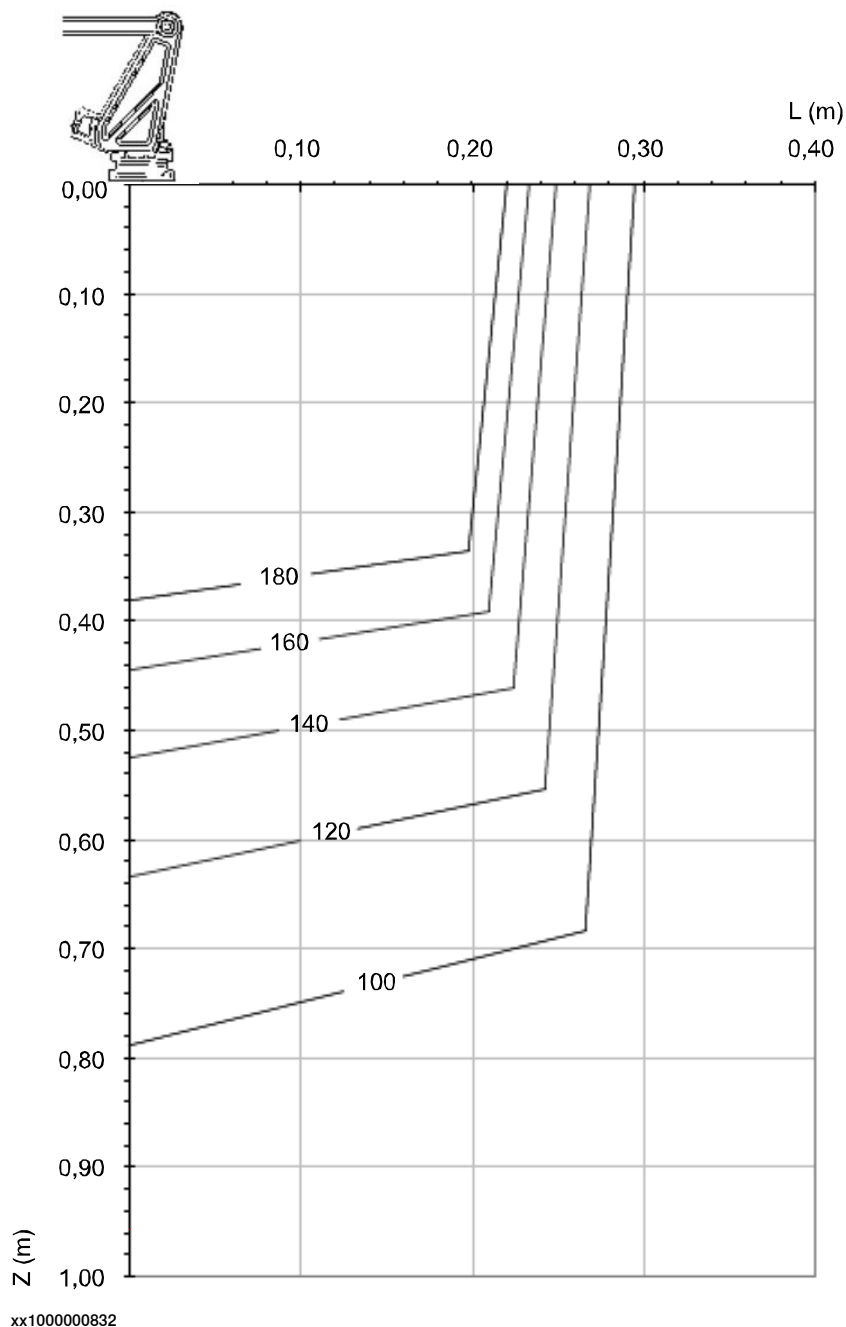

Continues on next page

IRB 660-250/3.15

The following figures shows the maximum permitted load mounted on the robot tool flange at different positions (center of gravity).

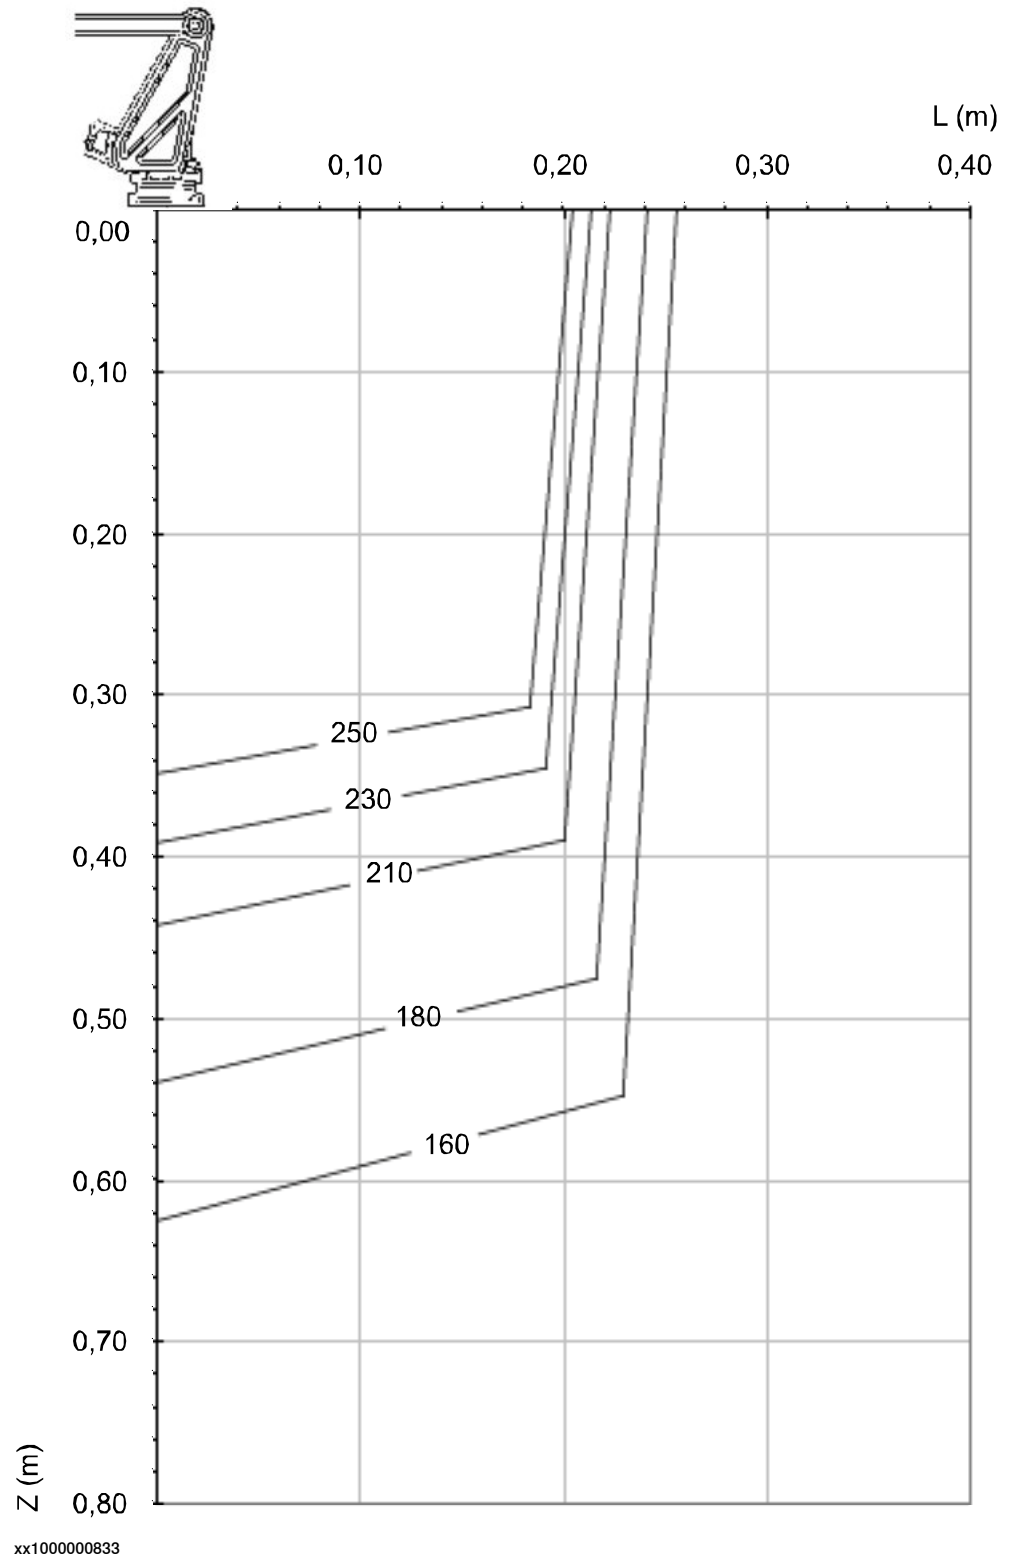

1 Description


1.5.3 Maximum load and moment of inertia

1.5.3 Maximum load and moment of inertia

Overview

Load in kg, Z and L in m and J in kgm^2 .

Axis	Maximum moment of inertia
6	$J_{a6} = \text{Load} \times L^2 + J_{0Z} \leq 250 \text{ kgm}^2$

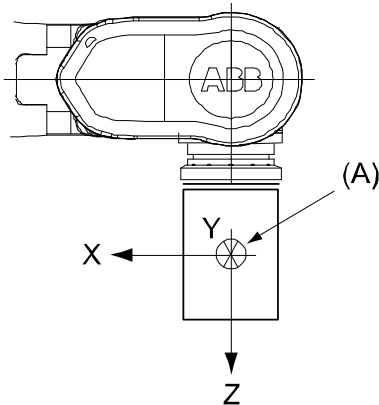

Pos	Description
A	Center of gravity

	Description
J_{0X} , J_{0Y} , J_{0Z}	Max. moment of inertia around the X, Y and Z axes at center of gravity.

1.5.4 Maximum TCP acceleration

General

Higher values can be reached with lower loads than the nominal because of our dynamical motion control QuickMove2. For specific values in the unique customer cycle, or for robots not listed in the table below, we recommend to use RobotStudio.

Maximum Cartesian design acceleration for nominal loads

Robot type	E-stop Max acceleration at nominal load COG [m/s ²]	Controlled Motion Max acceleration at nominal load COG [m/s ²]
IRB 660 - 250/3.15	31	18
IRB 660 - 180/3.15	37	24



Note

Acceleration levels for emergency stop and controlled motion includes acceleration due to gravitational forces. Nominal load is defined with nominal mass and cog with max offset in Z and L (see the load diagram).

1 Description

1.6.1 Overview


1.6 Mounting of equipment

1.6.1 Overview

General

Extra loads can be mounted on to the upper arm and on to the left side of the frame. Holes and definitions of masses are shown in following figures.

For mounting of an external vacuum hose there are six holes on the upper arm (see the following figure). The maximum weight for the vacuum hose and fastening device is 35kg. When using the holes, the weight of the vacuum hose shall be reduced from the maximum handling capacity, for each variant respectively.

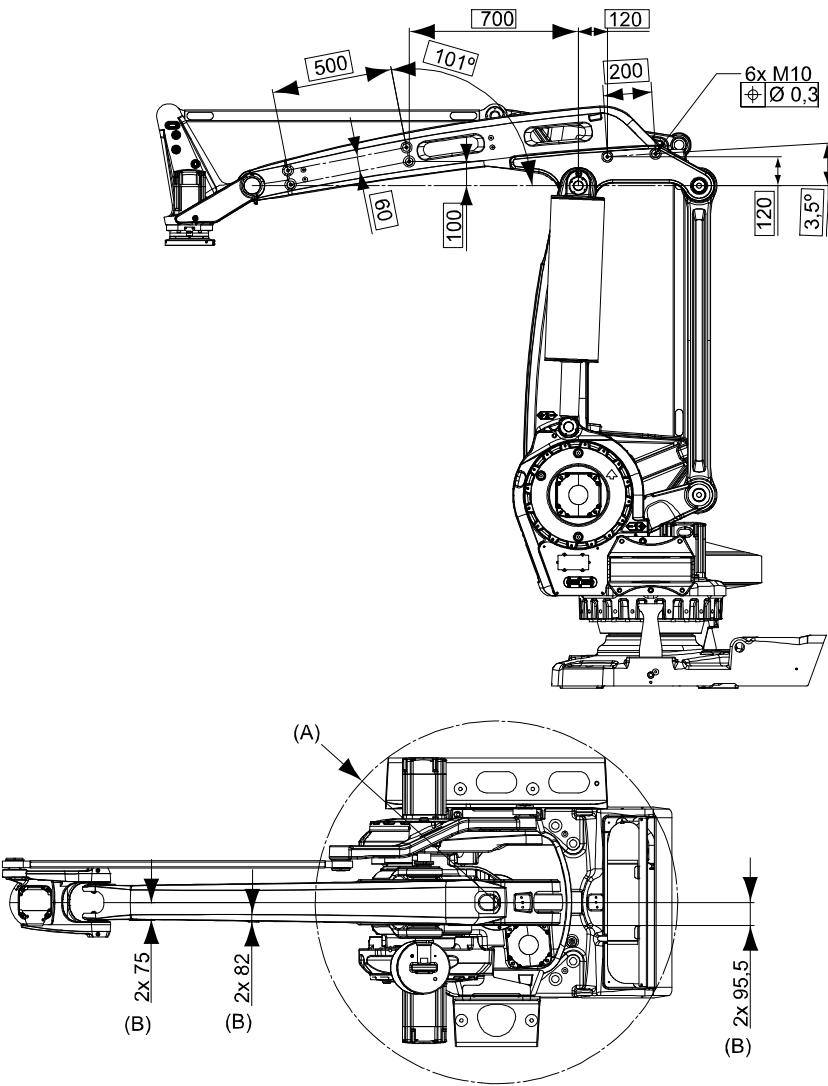

Position	Description
A	R750 Right fork lift pocket
B	M10 Mounting hole, upper arm

Continues on next page

For mounting of extra load on to the frame there are three holes on the left side (see the following figure). The maximum weight of the extra load is 150kg and the maximum moment of inertia is 120kgm².

[illegible]


Continues on next page

1 Description

1.6.1 Overview

Continued

The following figure shows the radius for extra load on frame.

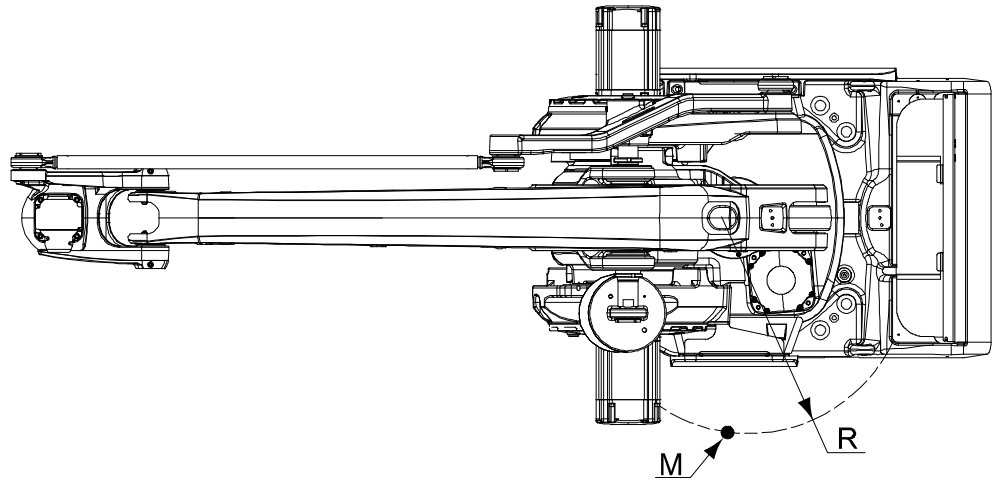


xx1000000837

Continues on next page

Robot tool flange

The following figure shows the robot tool flange SS-EN ISO 9409-1;2004 (dimensions in mm).

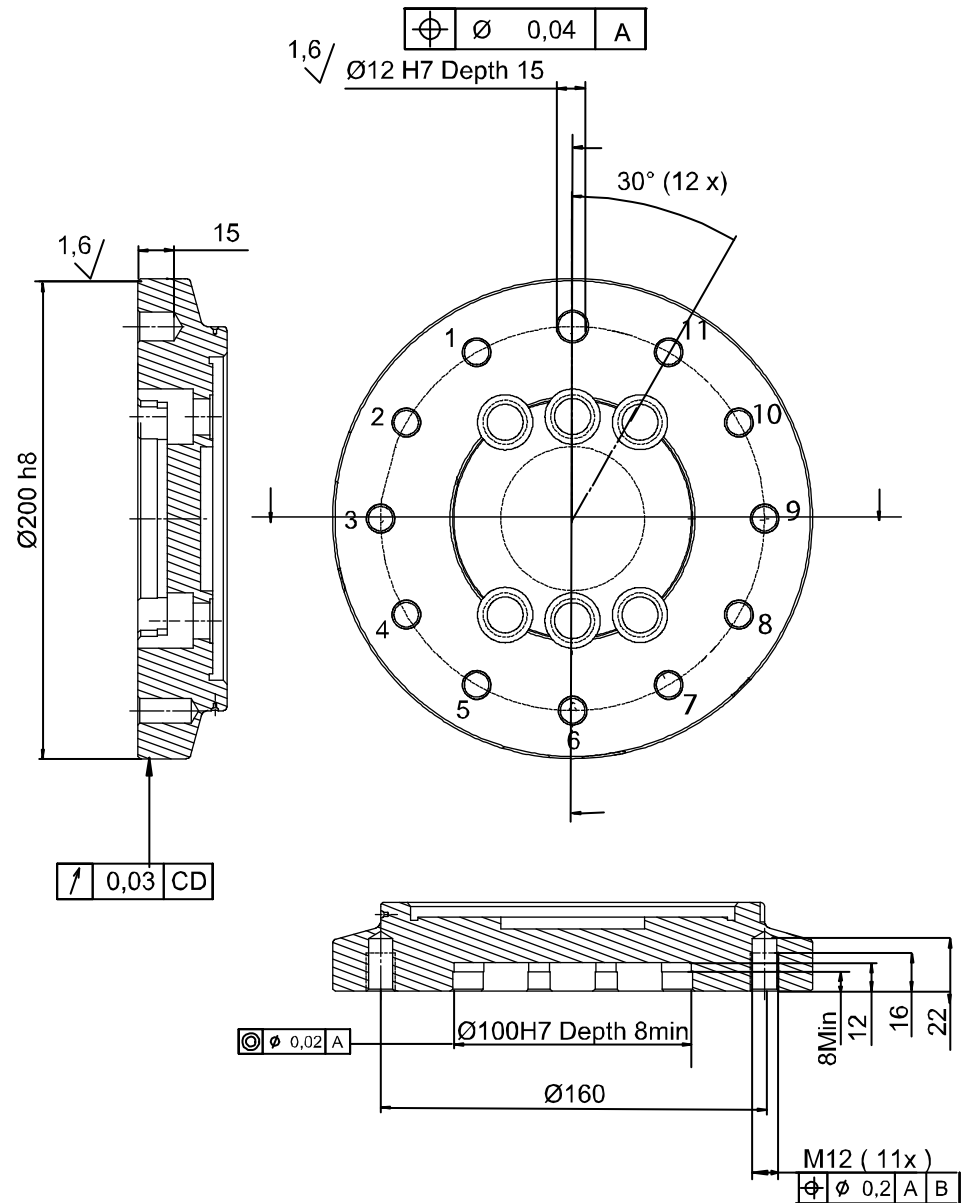


xx0500002292

Continues on next page

1 Description

1.6.1 Overview

Continued

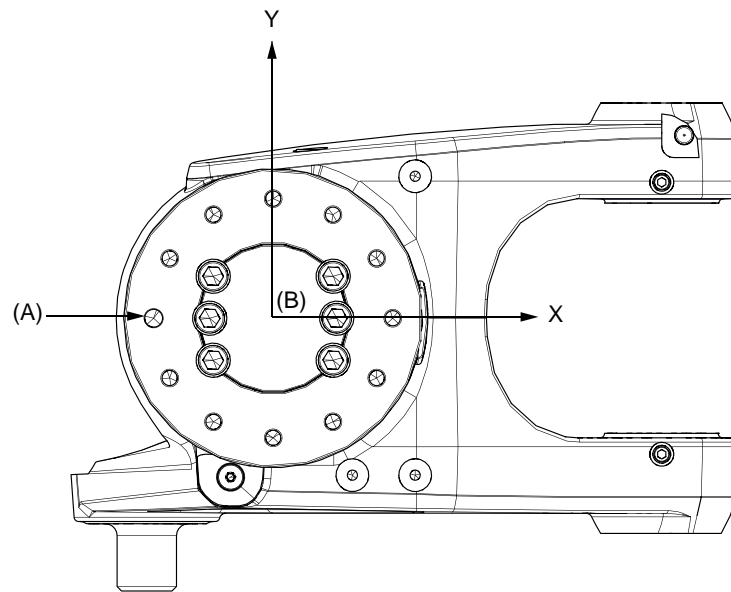

xx1800001377

-	Tool flange in bottom view
A	Locating hole
B	Tool coordinate system

Fastener quality

When fitting tools on the tool flange, only use screws with quality 12.9. For other equipment use suitable screws and tightening torque for your application.

1.7 Robot motion

1.7.1 Introduction

Type of Motion

Axis	Type of motion	Range of movement	Option
1	Rotation motion	+180° to -180°	+220° to -220°
2	Arm motion	+85° to -42°	
3	Arm motion	+120° to -20°	
6	Turn motion	+300° to -300° (default) +150 revolutions to -150 revolutions Max (see the following note)	



Note

- The default working range for axis 6 can be extended by changing parameter values in the software.
- Option 610-1 *Independent axis* can be used for resetting the revolution counter after the axis has been rotated (no need for “rewinding” the axis).

Continues on next page


1 Description

1.7.1 Introduction

Continued

Illustration

The following figure shows the extreme positions of the robot arm specified at the tool flange center (dimensions in mm).

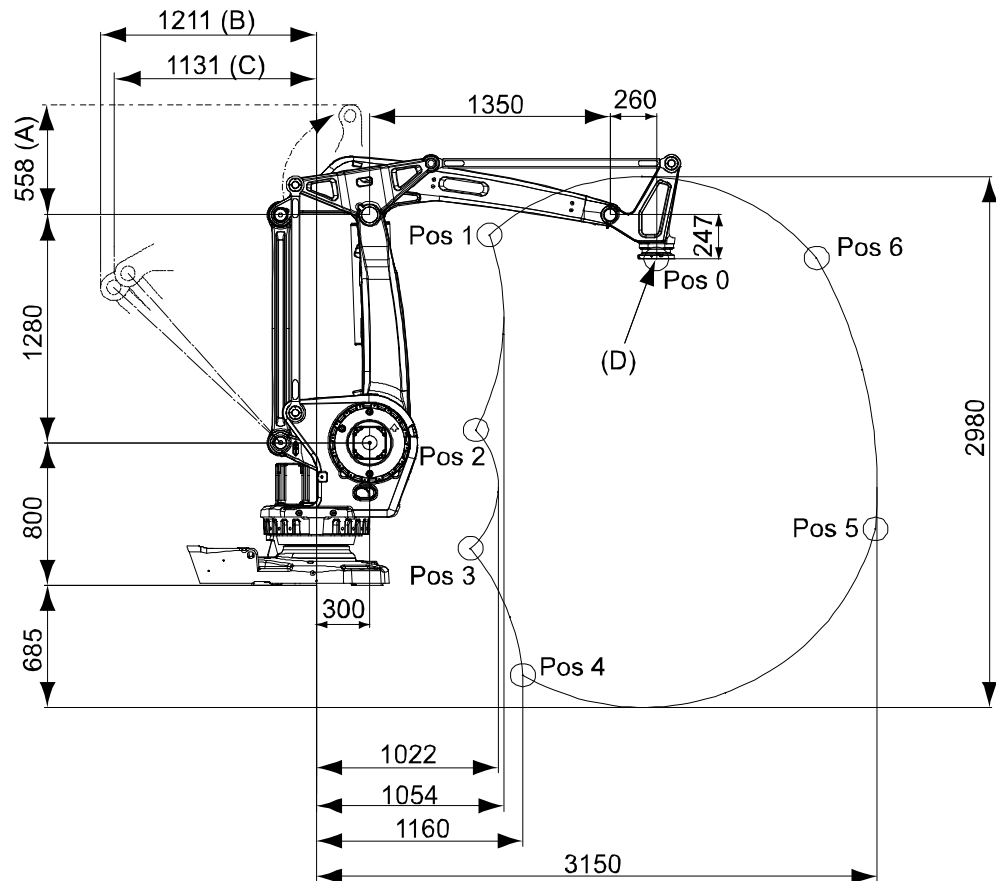

xx1000000839

Position	Description
A	Min. working stop
B	Mechanical stop
C	Max. working stop
D	Tool flange center

Positions at wrist center


Position number (see preceding figure)	X Position (mm)	Z Position (mm)	Axis2 Angle (degrees)	Axis3 Angle (degrees)
0	1910	1833	0	0
1	972	1966	-42	-20
2	895	870	-42	28
3	866	207	50	120
4	1160	-505	85	120
5	3139	315	85	15
6	2809	1837	50	-20

1.7.2 Performance according to ISO 9283

General

At rated maximum load, maximum offset and 1.6 m/s velocity on the inclined ISO test plane, with all six axes in motion. Values in the table below are the average result of measurements on a small number of robots. The result may differ depending on where in the working range the robot is positioning, velocity, arm configuration, from which direction the position is approached, the load direction of the arm system. Backlashes in gearboxes also affect the result.

The figures for AP, RP, AT and RT are measured according to figure below.

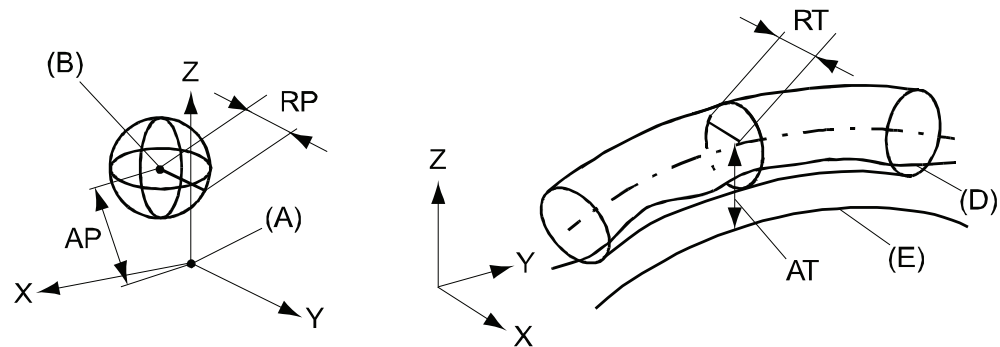

xx0800000424

Pos	Description	Pos	Description
A	Programmed position	E	Programmed path
B	Mean position at program execution	D	Actual path at program execution
AP	Mean distance from programmed position	AT	Max deviation from E to average path
RP	Tolerance of position B at repeated positioning	RT	Tolerance of the path at repeated program execution

Description	IRB 660-180/3.15	IRB 660-250/3.15
Unidirectional pose accuracy, AP ⁱ (mm)	0.20	0.20
Unidirectional pose repeatability, RP (mm)	0.05	0.05
Linear path repeatability, RT (mm)	0.23	0.17
Linear path accuracy, AT (mm)	2.20	2.13
Pose stabilization time PST (s)	0.17	0.22

ⁱ AP according to the ISO test above, is the difference between the taught position (position manually modified in the cell) and the average position obtained during program execution.

The above values are the range of average test results from a number of robots.

1 Description

1.7.3 Velocity

1.7.3 Velocity

Maximum axis speeds

Axis No.	IRB 660-180/3.15	IRB 660-250/3.15
1	130 °/s	95 °/s
2	130 °/s	95 °/s
3	130 °/s	95 °/s
6	300 °/s	240 °/s

There is a supervision function to prevent overheating in applications with intensive and frequent movements.

1.7.4 Robot stopping distances and times

Introduction

The stopping distances and times for category 0 and category 1 stops, as required by EN ISO 10218-1 Annex B, are listed in *Product specification - Robot stopping distances according to ISO 10218-1 (3HAC048645-001)*.

1 Description

1.8.1 Introduction

1.8 Customer connections

1.8.1 Introduction

General

Depending on the choice of options above the DressPack will have different content. The choice of routing will not affect the content. See tables for signal content below. For further information on the customer connection, see [Application interface connection type on page 58](#).

DressPack, Parallel, bus and air communication

Type	Application	Specification	Connection type	Harting Article No.	Comment
Power (CP)	Utility power	4x0.75mm ² (5A/250VAC)	3-module Harting, shell size 10B, EE	Female, EE, 8 pin9 140 083 101	1x0.75 mm ² protective earth
Signals (CS)	Parallel communication	16x AWG24 + 10x AWG24 (50V/1A)	3-module Harting, shell size 10B, HD+EE	Female, HD, 25 pin9 140 253 101	4 quad twisted, 5 screened pair twisted
Signals (CS)		5x2AWG24 (50V/1A)	3-module Harting, shell size 10B, HD	Female, HD, 25 pin9 140 253 101	Sep. Screened
Bus Communication (BUS)	Profibus	2xAWG26, Z=150 Ohm (1MHz)	3-module Harting, shell size 10B, DD	Female, DD, 12 pin9 140 123 101	
	CANBus	2xAWG26, Z=120 Ohm (1MHz)			
	BUS power & BUS utility	2x2 AWG24			
Air (AIR)	Utility air	2x12.7 (1/2") P Nom = 16 bar	Parker Push-lock, 1/2" M22x1,5 Brass 24 degree seal		

DressPack, Parallel and Ethernet communication

Type	Application	Specification	Connection type	Supplier Article No.	Comment
Functional Earth (FE)		10mm ²	M8 Cable lug		
Bus communication (BUS)	Ethernet/IP, PROFINET	4x0.4mm ²	M12 PFT Slim Design, 4-poles, D-coded	Male, Harting 21038821425	Ethernet CAT5e 100 Mbit ¹ .
Power (CP)	Utility power	4x0.75mm ² (5A/250VAC)	3-module Harting, shell size 10B, EE	Female, EE, 8 pin9 140 083 101	1x0.75mm ² protective earth

¹ Ethernet with wire colors according to PROFINET standard

Continues on next page

1 Description

1.8.1 Introduction

Continued

Type	Application	Specification	Connection type	Supplier Article No.	Comment
Signals (CS)	Parallel communication	16x AWG24 + 10x AWG24 (50V/1A)	3-module Harting, shell size 10B, HD+EE	Female, HD, 25 pin9 140 253 101	4 quad twisted, 5 screened pair twisted
Air (AIR)	Utility air	2x12.7 (1/2") P _{Nom} = 16 bar	Parker Push-lock, 1/2" M22x1,5 Brass 24 degree seal		

1 Description

1.9.1 Introduction

1.9 Maintenance and troubleshooting

1.9.1 Introduction

General

The robot requires only minimum maintenance during operation. It has been designed to make it as easy to service as possible:

- Maintenance-free AC motors are used
- Oil is used for the gear boxes
- The cabling is routed for longevity, and in the unlikely event of a failure, its modular design makes it easy to change

Maintenance

The maintenance intervals depend on the use of the robot, the required maintenance activities also depends on selected options. For detailed information on maintenance procedures, see *Product manual - IRB 660*, chapter *Maintenance*.

2 Specification of variants and options

2.1 Introduction to variants and options

General

The different variants and options for the IRB 660 are described in the following sections. The same option numbers are used here as in the specification form.

The variants and options related to the robot controller are described in the product specification for the controller.

2 Specification of variants and options

2.2 Manipulator

2.2 Manipulator

Variants

Option	IRB Type	Handling capacity (kg)	Reach (m)
435-58	660	180	3.15
435-59	660	250	3.15

Manipulator color

Option	Color	RAL code ⁱ
209-1	ABB orange standard	NCS 2070-Y60R
209-2	ABB white standard	RAL 9003
209-202	ABB Graphite White std Standard color	RAL 7035
209	RAL code should be specified (ABB non-standard colors)	

ⁱ The colors can differ depending on supplier and the material on which the paint is applied.



Note

Notice that delivery time for painted spare parts will increase for ABB none standard colors.

Equipment

Option	Type	Description
213-1	Safety lamp	A safety lamp with an orange fixed light can be mounted on the manipulator. The lamp is active in MOTORS ON mode. The safety lamp is required on a UL/UR approved robot.
159-1	Fork lift device	Lifting device on the manipulator for fork-lift handling.
37-1	Base plate	Can also be used for IRB 7600. See dimension drawing in Mounting the manipulator on page 24 .

Resolver connection, axis 7

Option	Description	Note
864-1	On base	Used together with first additional drive, option 907-1.

Electronic Position Switches (EPS)

Electronic Position Switches (EPS) is an additional safety computer in the controller, with the purpose of providing safe output signals representing the position of robot axes. The output signals are typically connected to cell safety circuitry and/or a safety PLC which takes care of interlocking the robot cell, for example in order to prevent robot and operator to enter a common area simultaneously. See *Application manual - Electronic Position Switches*.

Continues on next page

Work range limit Axis 1

To increase the safety of the robot, the working range of axis 1 can be restricted by extra mechanical stops.

Option	Type	Description
29-2	Axis 1, 7.5 degrees	Two stops which allow the working range to be restricted in increments of 7.5°.

Extended work range

Option	Type	Description
561-1	Extended work range axis 1	To extend the working range on Axis1 from $\pm 180^\circ$ to $\pm 220^\circ$. When the option is used the mechanical stop shall be removed. Requires options SafeMove or EPS (Electronic Position Switches).



CAUTION

The option *Extended work range* enables an extension of the working range for axis 1, through a software configuration. With this option installed, the working range can exceed the range limited by the mechanical stop on axis 1. The working range shall be limited through the option SafeMove.

A risk analysis must be done to ensure that no risks remain when using option *Extended work range*, to limit the working range, and before removing the mechanical stops.

For information about the option SafeMove, see *Application manual - Functional safety and SafeMove2*.

If the mechanical stop is removed, then the manipulator should have a marking for this, for example, a label. If the robot is delivered with the option *Extended work range*, then such a label is included on delivery.

Warranty

For the selected period of time, ABB will provide spare parts and labor to repair or replace the non-conforming portion of the equipment without additional charges. During that period, it is required to have a yearly *Preventative Maintenance* according to ABB manuals to be performed by ABB. If due to customer restrains no data can be analyzed with ABB Connected Services for robots with OmniCore controllers, and ABB has to travel to site, travel expenses are not covered. The *Extended Warranty* period always starts on the day of warranty expiration. Warranty Conditions apply as defined in the *Terms & Conditions*.



Note


This description above is not applicable for option *Stock warranty* [438-8]

Continues on next page

2 Specification of variants and options

2.2 Manipulator

Continued

Option	Type	Description
438-1	Standard warranty	Standard warranty is 12 months from <i>Customer Delivery Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply.
438-2	Standard warranty + 12 months	Standard warranty extended with 12 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-4	Standard warranty + 18 months	Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-5	Standard warranty + 24 months	Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-6	Standard warranty + 6 months	Standard warranty extended with 6 months from end date of the standard warranty. Warranty terms and conditions apply.
438-7	Standard warranty + 30 months	Standard warranty extended with 30 months from end date of the standard warranty. Warranty terms and conditions apply.
438-8	Stock warranty	<p>Maximum 6 months postponed start of standard warranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred before the end of stock warranty. Standard warranty commences automatically after 6 months from <i>Factory Shipment Date</i> or from activation date of standard warranty in WebConfig.</p> <div> Note</div> <p>Special conditions are applicable, see <i>Robotics Warranty Directives</i>.</p>

2.3 Floor cables

General

Additional floor cables for customer connections see [Process on page 58](#).

Manipulator cable length

Option	Lengths
210-2	7 m
210-3	15 m
210-4	22 m
210-5	30 m

2 Specification of variants and options

2.4 Process

2.4 Process

Application interface connection type

Option	Description	
16-1	Cabinet ⁱ	The signals are connected to 12-pole screw terminals, Phoenix MSTB 2.5/12-ST-5.08, to the control module.

ⁱ In a MultiMove application, additional robots have no control module. The screw terminal with internal cabling are then delivered separately to be mounted in the main robot control module or in another encapsulation, for example a PLC cabinet.

Communication

Option	Type	Description
455-6	Parallel, Bus and Air Communication	Includes Customer Signals (CS), Customer Power (CP), Bus signals and two hoses for Air (inner diameter 12.5 mm)
455-8	Parallel and Ethernet communication	Includes CP, customer signals and PROFINET or Ethernet/IP for process cable package and two hoses for Air (inner diameter 12.5 mm)

Parallel/CAN/DeviceNet/Profibus/Ethernet

The following information specifies the cable length for Parallel/CAN/DeviceNet/Profibus/Ethernet for connection to cabinet.

Option	Lengths
90-2/92-2/859-1/94-1	7 m
90-3/92-3/859-2/94-2	15 m
90-4/859-3	22 m
90-5/92-5/859-4/94-4	30 m

Empty cabinet

Option	Type	Description
768-1	Empty cabinet small	See <i>Product specification - Controller IRC5 with FlexPendant</i>
715-1	Installation kit	See <i>Product specification - Controller IRC5 with FlexPendant</i>

Connector kits upper arm

Option	Type	Description
431-1	Upper arm	Connector for customer Power/Signals/ and bus at axis 6 tool side.

2.5 User documentation

User documentation

The user documentation describes the robot in detail, including service and safety instructions.



Tip

All documents can be found via myABB Business Portal, www.abb.com/myABB.

2 Specification of variants and options

2.6 Warranty

2.6 Warranty


Warranty

For the selected period of time, ABB will provide spare parts and labor to repair or replace the non-conforming portion of the equipment without additional charges. During that period, it is required to have a yearly *Preventative Maintenance* according to ABB manuals to be performed by ABB. If due to customer restrains no data can be analyzed with ABB Connected Services for robots with OmniCore controllers, and ABB has to travel to site, travel expenses are not covered. The *Extended Warranty* period always starts on the day of warranty expiration. Warranty Conditions apply as defined in the *Terms & Conditions*.



Note

This description above is not applicable for option *Stock warranty* [438-8]

Option	Type	Description
438-1	Standard warranty	Standard warranty is 12 months from <i>Customer Delivery Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply.
438-2	Standard warranty + 12 months	Standard warranty extended with 12 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-4	Standard warranty + 18 months	Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-5	Standard warranty + 24 months	Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-6	Standard warranty + 6 months	Standard warranty extended with 6 months from end date of the standard warranty. Warranty terms and conditions apply.
438-7	Standard warranty + 30 months	Standard warranty extended with 30 months from end date of the standard warranty. Warranty terms and conditions apply.
438-8	Stock warranty	<p>Maximum 6 months postponed start of standard warranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred before the end of stock warranty. Standard warranty commences automatically after 6 months from <i>Factory Shipment Date</i> or from activation date of standard warranty in WebConfig.</p> <div>Note<p>Special conditions are applicable, see <i>Robotics Warranty Directives</i>.</p></div>

3 Accessories

3.1 Introduction to accessories

General

There is a range of tools and equipment available.

Basic software and software options for robot and PC

For more information, see *Product specification - Controller IRC5* and *Application manual - Controller software IRC5*.

This page is intentionally left blank

Index

A

accessories, 61
 ambient humidity
 operation, 22
 storage, 22
 ambient temperature
 operation, 22
 storage, 22
 Axis Calibration
 calibration tool
 article number, 32

B

bus cables, 58

C

cable lengths, 57
 calibration
 standard type, 29
 calibration marks, 33
 Calibration Pendulum, 30
 calibration position
 scales, 33
 calibration scales, 33
 CAN, 58
 category 0 stop, 49
 category 1 stop, 49
 communication signals, 58
 connections
 application interface, 58

D

DeviceNet, 58
 direction of axes, 34
 documentation, 59

E

extended working range, 55
 extra load, 40

F

fine calibration, 30
 foundation
 requirements, 22

H

humidity
 operation, 22
 storage, 22

I

instructions, 59
 ISO 9283, 47

L

load diagrams, 36
 loads on foundation, 21

M

maintenance, 52
 manuals, 59
 maximum load, 38
 moment of inertia, 38

N

negative directions, axes, 34

O

operating conditions, 22
 option
 Extended working range, 55
 options, 53

P

positive directions, axes, 34
 product standards, 17
 Profibus, 58
 protection classes, 23
 protection type, 23

R

requirements on foundation, 22
 robot
 protection class, 23
 protection types, 23

S

safety standards, 17
 scales on robot, 33
 service instructions, 59
 standards, 17
 ANSI, 17
 CAN, 17
 EN IEC, 17
 EN ISO, 17
 standard warranty, 55, 60
 stock warranty, 55, 60
 stopping distances, 49
 stopping times, 49
 storage conditions, 22
 sync marks, 33

T

temperatures
 operation, 22
 storage, 22
 torques on foundation, 21

U

user documentation, 59

V

variants, 53–54

W

warranty, 55, 60
 weight, 20

**ABB AB****Robotics & Discrete Automation**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS**Robotics & Discrete Automation**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

ABB Inc.**Robotics & Discrete Automation**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics