


ROBOTICS

# Product specification

## IRB 6790

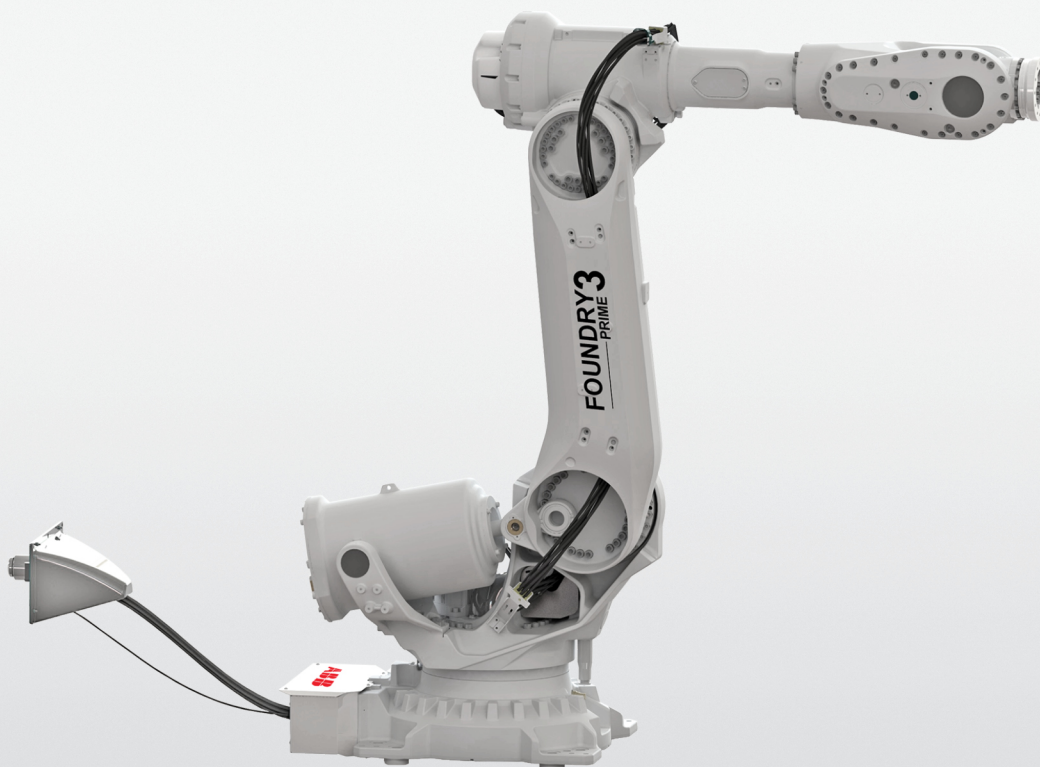

Trace back information:  
Workspace 25A version a17  
Checked in 2025-03-11  
Skribenta version 5.6.018

## **Product specification**

**IRB 6790 - 235/2.65**

**IRB 6790 - 205/2.80**

OmniCore

Document ID: 3HAC087217-001

Revision: C

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2024-2025 ABB. All rights reserved.  
Specifications subject to change without notice.

# Table of contents

|  |           |
|--|-----------|
| Overview of this product specification .....   | 7         |
| <b>1 Description</b> .....   | <b>9</b>  |
| 1.1 Structure .....  | 9         |
| 1.1.1 Introduction .....   | 9         |
| 1.1.2 Different robot variants .....   | 12        |
| 1.1.3 Technical data .....   | 13        |
| 1.2 Standards .....  | 15        |
| 1.2.1 Applicable standards .....   | 15        |
| 1.3 Installation .....   | 16        |
| 1.3.1 Introduction to installation .....   | 16        |
| 1.3.2 Technical data .....   | 17        |
| 1.3.3 Assembling the manipulator .....   | 21        |
| 1.3.4 Overpressure system .....  | 24        |
| 1.4 Calibration and references .....   | 25        |
| 1.4.1 Calibration methods .....  | 25        |
| 1.4.2 Fine calibration .....   | 27        |
| 1.4.3 Absolute Accuracy calibration .....  | 28        |
| 1.5 Load diagrams .....  | 30        |
| 1.5.1 Introduction .....   | 30        |
| 1.5.2 Diagrams .....   | 31        |
| 1.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement ..... | 35        |
| 1.5.4 Wrist torque .....   | 37        |
| 1.5.5 Maximum TCP acceleration .....   | 38        |
| 1.6 Fitting equipment to the robot .....   | 39        |
| 1.7 Maintenance and troubleshooting .....  | 45        |
| 1.8 Robot motion .....   | 46        |
| 1.8.1 Robot motion .....   | 46        |
| 1.8.2 Performance according to ISO 9283 .....  | 49        |
| 1.8.3 Velocity .....   | 50        |
| 1.8.4 Robot stopping distances and times .....   | 51        |
| <b>2 Specification of variants and options</b> .....   | <b>53</b> |
| 2.1 Introduction to variants and options .....   | 53        |
| 2.2 Manipulator .....  | 54        |
| 2.3 Floor cables .....   | 56        |
| 2.4 Warranty .....   | 57        |
| <b>Index</b> .....   | <b>59</b> |

**This page is intentionally left blank**

# Overview of this product specification

---

## About this product specification

It describes the performance of the manipulator or a complete family of manipulators in terms of:

- The structure and dimensions prints
- The fulfillment of standards, safety and operating requirements
- The load diagrams, mounting or extra equipment, the motion and the robot reach
- The specification of variants and options available

---

## Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

---

## Users

It is intended for:

- Product managers and product personnel
- Sales and marketing personnel
- Order and customer service personnel
- Robot programmers
- Project leaders
- Design engineers

---

## References

| Reference  | Document ID    |
|--|----------------|
| <i>Product specification - OmniCore V line</i>                                     | 3HAC074671-001 |
| <i>Product manual - IRB 6790 Foundry Prime</i>                                     | 3HAC063331-001 |
| <i>Product specification - Robot stopping distances according to ISO 10218-1</i>   | 3HAC048645-001 |
| <i>Product specification - Robot user documentation, OmniCore with RobotWare 7</i> | 3HAC065042-001 |

---

## Revisions

| Revision | Description  |
|----------|--|
| A        | First edition.   |
| B        | Published in release 24D. The following updates are done in this revision: <ul style="list-style-type: none"><li>• Updated the section <a href="#">Technical data on page 17</a>.</li><li>• Updated date of overpressure unit change.</li><li>• Added length of cables between interface plate and manipulator base.</li></ul> |
| C        | Published in release 25E. The following updates are done in this revision: <ul style="list-style-type: none"><li>• Removed prior design of overpressure unit.</li></ul>  |

**This page is intentionally left blank**



# 1 Description

## 1.1 Structure

### 1.1.1 Introduction

---

**General**

The IRB 6790 series is ABB Robotics 7th generation of high payload, high performance industrial robots. Based on the famous IRB 6700 series, with large working range, the very high wrist torque, the service friendly modular built up and the high availability, significant for ABB's robots.

The IRB 6790 is designed to generally withstand a very harsh environment, including detergents used in spraying applications. Even with this very robust design, some limitations exist:

- Detergents and allowed PH levels are specified in the product manual.
- Warranty will not apply if corrosion happens on structural parts. This corrosion/rust will not influence the functionality of the product.
- Maintenance needs to be performed according to recommendations in the product manuals.

---

**Software product range**

We have added a range of software products - all falling under the umbrella designation of Active Safety - to protect not only personnel in the unlikely event of an accident, but also robot tools, peripheral equipment and the robot itself.

---

**Operating system**

The robot is equipped with the OmniCore controller and robot control software, RobotWare. RobotWare supports every aspect of the robot system, such as motion control, development and execution of application programs, communication etc. See *Product specification - OmniCore V line*.

---

**Safety**

Safety standards valid for complete robot, manipulator and controller.

---

**Additional functionality**

For additional functionality, the robot can be equipped with optional software for application support - for example gluing and welding, communication features - network communication - and advanced functions such as multitasking, sensor control etc. For a complete description on optional software, see *Product specification - OmniCore V line*.

*Continues on next page*

# 1 Description

## 1.1.1 Introduction

Continued

### Foundry Prime

Robots with protection type Foundry Prime are specially designed to work in harsh environments such as water jet cleaning, high pressure deburring, immersion cleaning, washing and similar applications. To ensure that the protection offers the best reliability, special measures are required during installation and operation. It is required that the environmental and application conditions are fulfilled and that the special maintenance activities and intervals for the Foundry Prime protected robot are followed.

The manipulator can withstand indirect spray from jet pressure (max. 700 bar) and 100% humidity (gaseous mixture only). The manipulator can work with a cleaning bath temperature up to 60 °C.


The motors, the balancing device, and the serial measurement board cavity must be pressurized on Foundry Prime robots during operation and shut down. For detailed information of the maintenance program, see chapter Maintenance in the *Product manual - IRB 6790 Foundry Prime*.

### Washing and cleaning detergents

General washing detergent requirements:

- Washing and cleaning detergent with pH 7-10. Down to pH6 during short periods provided that the robot is washed carefully with tap water afterwards.
- Max. temperature on washing detergent is 60 °C
- The user must follow the supplier's recommendations regarding detergent concentration and pH value
- Washing and cleaning detergents with corrosion inhibitor should be used

### Robot axes

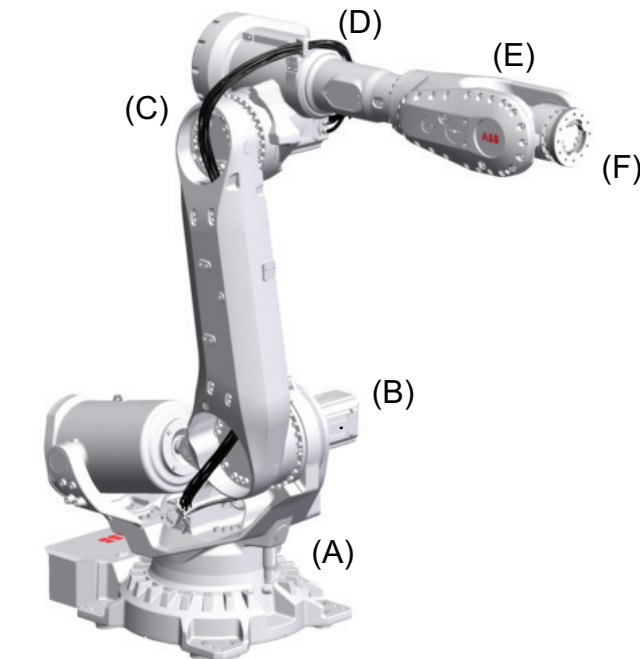

xx1300000244

|   |        |   |        |
|---|--------|---|--------|
| A | Axis 1 | B | Axis 2 |
|---|--------|---|--------|

Continues on next page

## 1 Description

---

### 1.1.1 Introduction

*Continued*

|   |        |   |        |
|---|--------|---|--------|
| C | Axis 3 | D | Axis 4 |
| E | Axis 5 | F | Axis 6 |

# 1 Description

---

## 1.1.2 Different robot variants

### 1.1.2 Different robot variants

---

#### General

The IRB 6790 is available in two variants.

#### Robot variants

The following variants are available.

| Robot    | Handling capacity (kg) | Reach (m) |
|----------|------------------------|-----------|
| IRB 6790 | 235 kg                 | 2.65 m    |
| IRB 6790 | 205 kg                 | 2.80 m    |

## 1.1.3 Technical data

## Available mounting options

|          | Prefix | Description                         |
|----------|--------|-------------------------------------|
| Mounting | -      | IRB 6790: Floor-mounted manipulator |

## Manipulator weight


| Robot variant     | Weight   |
|-------------------|----------|
| IRB 6790-235/2.65 | 1,260 kg |
| IRB 6790-205/2.80 | 1,270 kg |

## Other technical data

| Data                 | Description   | Note   |
|----------------------|---|--|
| Airborne noise level | The sound pressure level outside the working space. | < 71 dB (A) Leq (acc. to machinery directive 2006/42/EG) |

## Power consumption at max load

| Type of movement               | 235/2.65 | 205/2.80 |
|--------------------------------|----------|----------|
| ISO Cube<br>Max. velocity (kW) | 2.8      | 2.8      |
| Robot in calibration position  | 235/2.65 | 205/2.80 |
| Brakes engaged (kW)            | 0.24     | 0.24     |
| Brakes disengaged (kW)         | 0.87     | 0.87     |

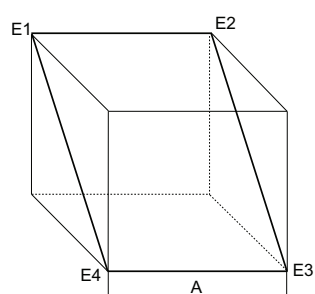

xx1000000101

| Pos | Description |
|-----|-------------|
| A   | 1,000 mm    |

Power factor (cos  $\phi$ )

The power factor is above 0.95 at a steady state power consumption higher than 2.0 kW, when the IRB 6790 is connected to the OmniCore V line.


Continues on next page

# 1 Description

## 1.1.3 Technical data

Continued

### Main dimensions of IRB 6790

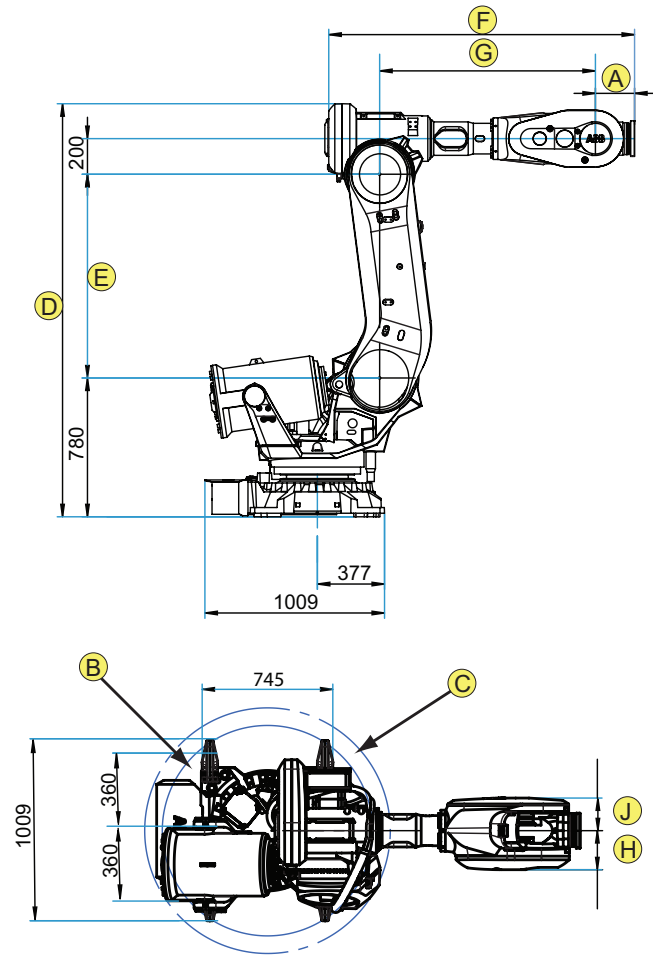

xx1300000241

| Pos | Description                |
|-----|----------------------------|
| A   | 200 mm                     |
| B   | Radius ax1, front = 532 mm |
| C   | Radius ax1, back = 633 mm  |

| Robot variant       | D    | E    | F    | G       | H   | J   |
|---------------------|------|------|------|---------|-----|-----|
| IRB 6790 - 235/2.65 | 2300 | 1135 | 1670 | 1,182.5 | 209 | 186 |
| IRB 6790 - 205/2.80 | 2445 | 1280 | 1670 | 1,182.5 | 186 | 209 |

## 1.2 Standards

### 1.2.1 Applicable standards

#### General

The product is compliant with ISO 10218-1:2011, *Robots for industrial environments - Safety requirements - Part 1 Robots*, and applicable parts in the normative references, as referred to from ISO 10218-1:2011. In case of deviation from ISO 10218-1:2011, these are listed in the declaration of incorporation. The declaration of incorporation is part of the delivery.

#### Robot standards

| Standard | Description  |
|----------|--|
| ISO 9283 | Manipulating industrial robots – Performance criteria and related test methods |
| ISO 9787 | Robots and robotic devices – Coordinate systems and motion nomenclatures       |
| ISO 9946 | Manipulating industrial robots – Presentation of characteristics               |

#### Other standards used in design

| Standard         | Description   |
|------------------|---|
| IEC 60204-1      | Safety of machinery - Electrical equipment of machines - Part 1: General requirements, normative reference from ISO 10218-1                 |
| IEC 61000-6-2    | Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments                           |
| IEC 61000-6-4    | Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments                           |
| ISO 13849-1:2006 | Safety of machinery - Safety related parts of control systems - Part 1: General principles for design, normative reference from ISO 10218-1 |

#### Consulted guidelines

The following guidelines have inspired and guided the product design:

| Guideline       | Description  |
|-----------------|--|
| VDI 3397 Part 1 | Metalworking Fluids  |
| VDI 3035        | Design of machine tools, production lines and peripheral equipment for the use of metalworking fluids                                  |
| DIN 51385       | Lubricants – Processing fluids for forming and machining of materials – Terms  |
| DIN 51485       | Lubricants – Processing fluids for forming and machining of materials – Metalworking and forming fluids: Requirements and test methods |

# 1 Description

## 1.3.1 Introduction to installation

## 1.3 Installation

### 1.3.1 Introduction to installation

#### General

IRB 6790 are designed for floor mounting (no tilting allowed around X-axis or Y-axis). Depending on the robot version, an end effector with max. weight of 205 to 235 kg including payload, can be mounted on the tool flange (axis 6). See [Load diagrams on page 30](#).

#### Extra loads


The upper arm can handle an additional load of 50 kg and the frame on axis 1 can handle an additional load of 250 kg.

See [Fitting equipment to the robot on page 39](#).

#### Working range limitation

To increase the safety of the robot, the working range of axis 1 can be restricted by extra mechanical stops.

Two stops which allow the working range to be restricted in increments of 15°.

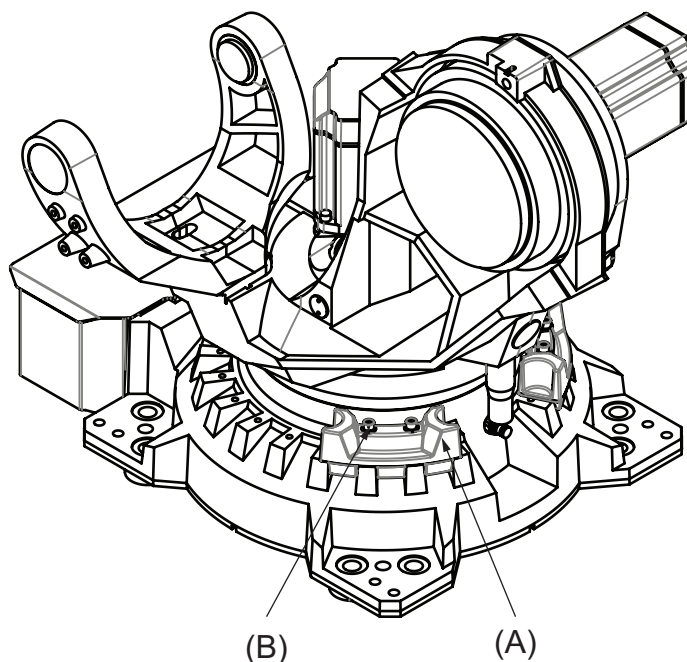

xx1400002035

| Pos | Description                                |
|-----|--|
| A   | Two mechanical stops                       |
| B   | Bolt tightening torque: 60 Nm <sup>i</sup> |

<sup>i</sup> In corrosive environment exchange bolts to stainless steel variants.

#### Explosive environments

The robot must not be located or operated in an explosive environment.



## 1.3.2 Technical data

### Weight, robot

The table shows the weight of the robot.

| Robot model | Weight  |
|-------------|---------|
| IRB 6790    | 1300 kg |



#### Note

The weight does not include tools and other equipment fitted on the robot.

### Mounting positions

The table shows valid mounting options for the manipulator.

| Mounting option | Installation angle | Note |
|-----------------|--------------------|------|
| Floor mounted   | 0°                 |      |



#### Note

The actual mounting angle must always be configured in the system parameters, otherwise the performance and lifetime is affected. See the product manual for details.

*Continues on next page*

# 1 Description


## 1.3.2 Technical data

Continued

### Loads on foundation, robot

The illustration shows the directions of the robots stress forces.

The directions are valid for all floor mounted, suspended and inverted robots.

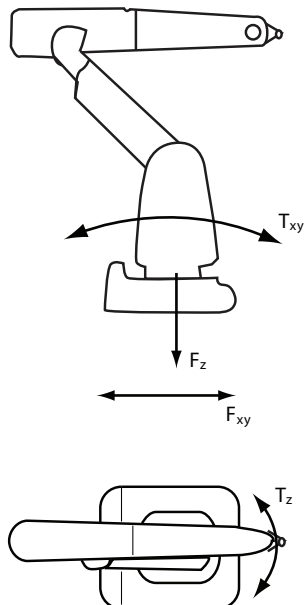

xx1100000521

|          |   |
|----------|---|
| $F_{xy}$ | Force in any direction in the XY plane          |
| $F_z$    | Force in the Z plane                            |
| $T_{xy}$ | Bending torque in any direction in the XY plane |
| $T_z$    | Bending torque in the Z plane                   |

The table shows the various forces and torques working on the robot during different kinds of operation.



#### Note

These forces and torques are extreme values that are rarely encountered during operation. The values also never reach their maximum at the same time!



#### WARNING

The robot installation is restricted to the mounting options given in following load table(s).


### Floor mounted

| Force     | Endurance load (in operation) | Max. load (emergency stop) |
|-----------|-------------------------------|----------------------------|
| Force xy  | $\pm 7.4$ kN                  | $\pm 19.8$ kN              |
| Force z   | $14.6 \pm 4.5$ kN             | $14.6 \pm 15.7$ kN         |
| Torque xy | $\pm 21.0$ kNm                | $\pm 37.1$ kNm             |
| Torque z  | $\pm 5.0$ kNm                 | $\pm 11.4$ kNm             |

Continues on next page

**Requirements, foundation**

The table shows the requirements for the foundation where the weight of the installed robot is included:

| Requirement                    | Value   | Note  |
|--------------------------------|---|---|
| Flatness of foundation surface | 0.3 mm  | Flat foundations give better repeatability of the resolver calibration compared to original settings on delivery from ABB.<br>The value for levelness aims at the circumstance of the anchoring points in the robot base.<br>In order to compensate for an uneven surface, the robot can be recalibrated during installation. If resolver/encoder calibration is changed this will influence the absolute accuracy. |
| Minimum resonance frequency    | 22 Hz<br> <b>Note</b><br>It may affect the manipulator life-time to have a lower resonance frequency than recommended. | The value is recommended for optimal performance.<br>Due to foundation stiffness, consider robot mass including equipment. <sup>i</sup><br>For information about compensating for foundation flexibility, see the application manual of the controller software, section <i>Motion Process Mode</i> .   |

<sup>i</sup> The minimum resonance frequency given should be interpreted as the frequency of the robot mass/inertia, robot assumed stiff, when a foundation translational/torsional elasticity is added, i.e., the stiffness of the pedestal where the robot is mounted. The minimum resonance frequency should not be interpreted as the resonance frequency of the building, floor etc. For example, if the equivalent mass of the floor is very high, it will not affect robot movement, even if the frequency is well below the stated frequency. The robot should be mounted as rigid as possible to the floor.  
Disturbances from other machinery will affect the robot and the tool accuracy. The robot has resonance frequencies in the region 10 – 20 Hz and disturbances in this region will be amplified, although somewhat damped by the servo control. This might be a problem, depending on the requirements from the applications. If this is a problem, the robot needs to be isolated from the environment.

**Storage conditions, robot**

The table shows the allowed storage conditions for the robot:

| Parameter                                      | Value                                       |
|--|---|
| Minimum ambient temperature                    | -25 °C (-13 °F)                             |
| Maximum ambient temperature                    | +55 °C (+131 °F)                            |
| Maximum ambient temperature (less than 24 hrs) | +70 °C (+158 °F)                            |
| Maximum ambient humidity                       | 100% at constant temperature (gaseous only) |

**Operating conditions, robot**

The table shows the allowed operating conditions for the robot:

| Parameter                   | Value                      |
|-----------------------------|----------------------------|
| Minimum ambient temperature | +5 °C <sup>i</sup> (41 °F) |
| Maximum ambient temperature | +50 °C (122 °F)            |

*Continues on next page*

# 1 Description

## 1.3.2 Technical data

*Continued*

| Parameter                | Value  |
|--------------------------|--|
| Maximum ambient humidity | 100% at constant temperature (gaseous only). |

- <sup>i</sup> At low environmental temperature (below 10° C) a warm-up phase is recommended to be run with the robot. Otherwise there is a risk that the robot stops or runs with lower performance due to temperature dependent oil and grease viscosity.

### Operating environment, robot

The robot may be exposed to washing detergents with pH 7-10.

For shorter periods, the robot may be exposed to washing detergent between pH 6 to 7, if all parts of the robot are rinsed with tap water afterwards. Organic acids, e.g. acetic acid, are not allowed to be used.



#### Note

Washing and cleaning detergents with corrosion inhibitor is recommended. Corrosive environment are also depending on tap water quality. To avoid risk with tap water quality, deionized water is recommended together with detergent.



#### Note

If the pH value or the detergent concentration is varying from its original specification, it can become very corrosive.

### Protection classes, robot

The table shows the available protection types of the robot, with the corresponding protection class.

| Protection type                            | Protection class <sup>i</sup> |
|--|-------------------------------|
| Manipulator, protection type Foundry Prime | IP69 <sup>ii</sup>            |

- <sup>i</sup> According to IEC 60529.

- <sup>ii</sup> Includes all manipulator electrical compartments, excludes the Harting connector on the connection panel which is IP67.


### 1.3.3 Assembling the manipulator

#### Maximum load

Maximum load in relation to the base coordinate system.

#### Floor mounted

| Force     | Endurance load (in operation) | Max. load (emergency stop) |
|-----------|-------------------------------|----------------------------|
| Force xy  | $\pm 7.4$ kN                  | $\pm 19.8$ kN              |
| Force z   | $14.6 \pm 4.5$ kN             | $14.6 \pm 15.7$ kN         |
| Torque xy | $\pm 21.0$ kNm                | $\pm 37.1$ kNm             |
| Torque z  | $\pm 5.0$ kNm                 | $\pm 11.4$ kNm             |

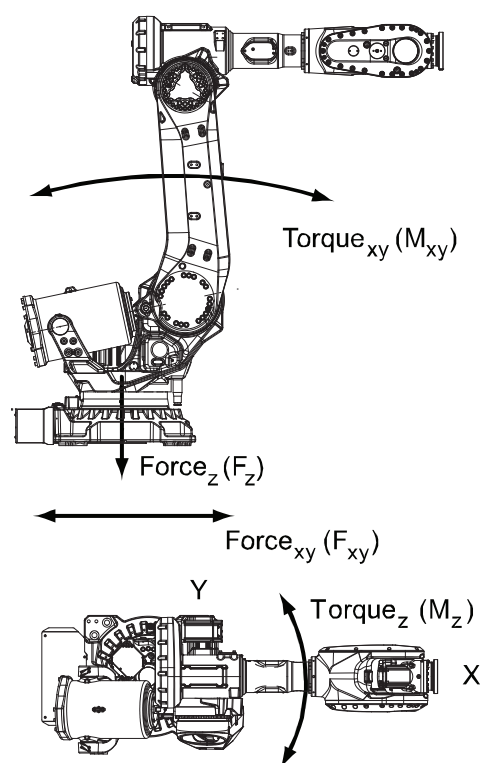

xx1300000242

#### Note regarding $M_{xy}$ and $F_{xy}$

The bending torque ( $M_{xy}$ ) can occur in any direction in the XY-plane of the base coordinate system.

The same applies to the transverse force ( $F_{xy}$ ).


*Continues on next page*

# 1 Description

## 1.3.3 Assembling the manipulator

Continued

### Fastening holes robot base - for all variants

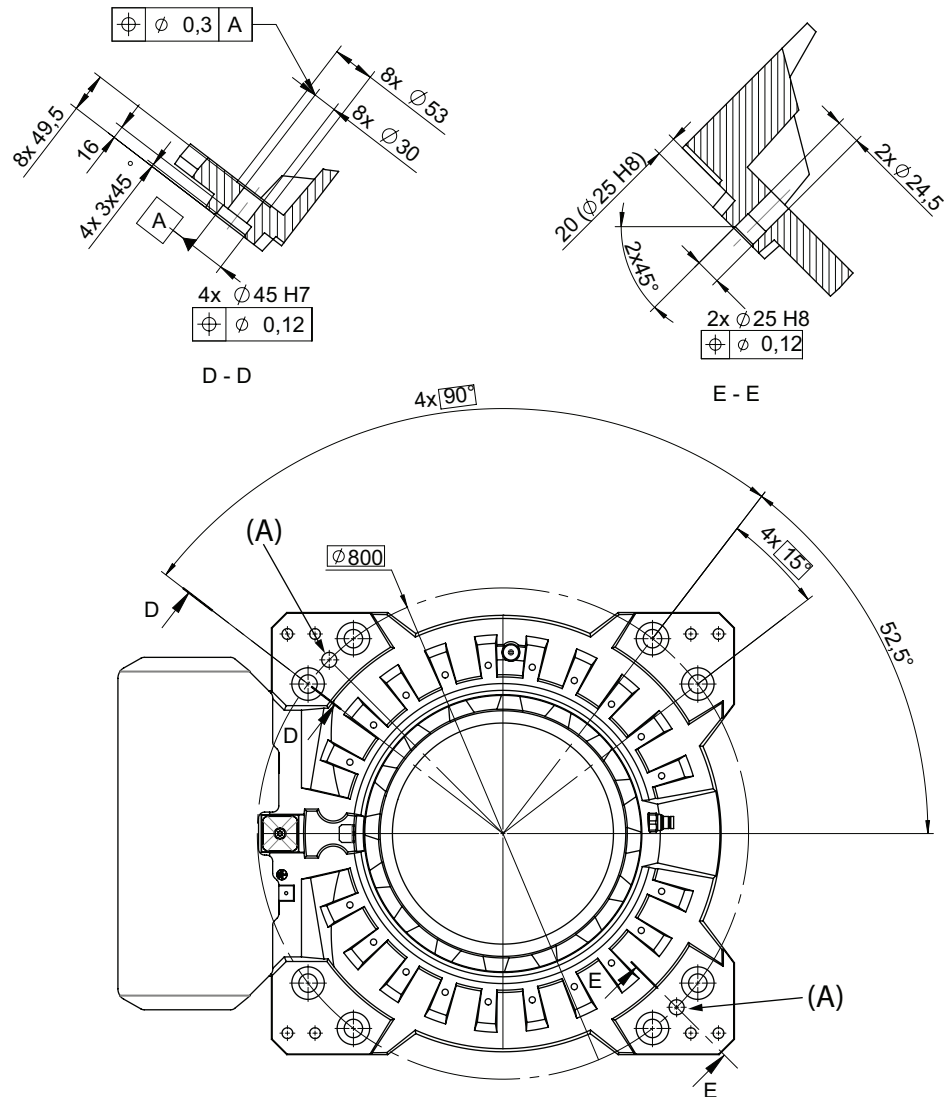

xx1300000243

| Pos | Description               |
|-----|---------------------------|
| A   | Holes for guide pins (x2) |

### Fastener quality

|  |   |
|--|---|
| Suitable screws:   | M24 x 100 <sup>i</sup>  |
| Quality:   | 8.8   |
| Screw tightening yield point utilization factor (v)<br>(according to VDI2230): | 90% (v=0.9)   |
| Suitable washer:   | 4 mm flat washer <sup>i</sup>   |
| Tightening torque:   | 550 Nm (screws lubricated with Molykote 1000)<br>600-725 Nm, typical 650 Nm (screws none or lightly lubricated) |

<sup>i</sup> Stainless steel versions recommended in corrosive environments.

Continues on next page

**Note**

Only two guide pins shall be used.


**AbsAcc performance**

Regarding AbsAcc performance, the use of guide pins are mandatory.

**Installation on a coherent and conductive structure**

The manipulator must be installed on a coherent and conductive metallic structure which reaches the connector point on the wall (unbroken, to be able to connect to ground). The connector point is installed on the outside (dry) wall to protect the connectors from detergents. The flow sensor at the connection point does not withstand fluids.

Protect the interface plate from direct or indirect spray with the harness/interface cover. Put the interface plate where it is not subject to direct or indirect spray.

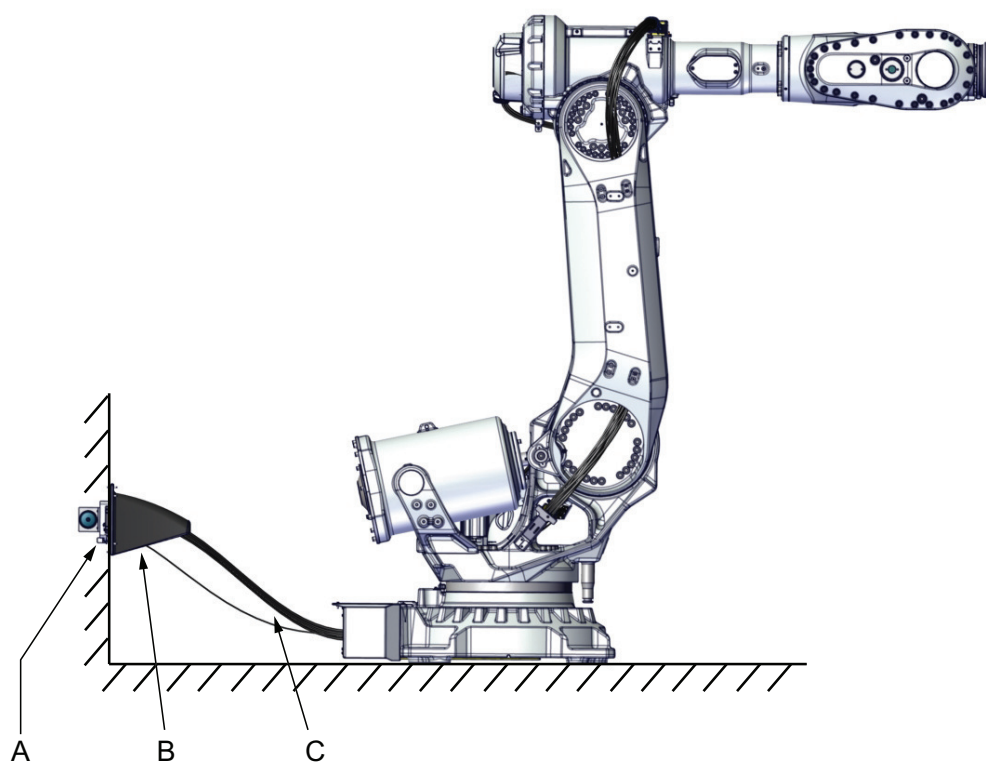

xx1700001180

|   |   |
|---|---|
| A | Connector point / interface plate                         |
| B | Harness/interface cover                                   |
| C | Cables between interface plate and manipulator base (5 m) |

## 1 Description


### 1.3.4 Overpressure system

### 1.3.4 Overpressure system

#### Overpressure system

The system is equipped with an overpressure device and a flow sensor.

The control system will alert if the air leakage exceeds the preset value.

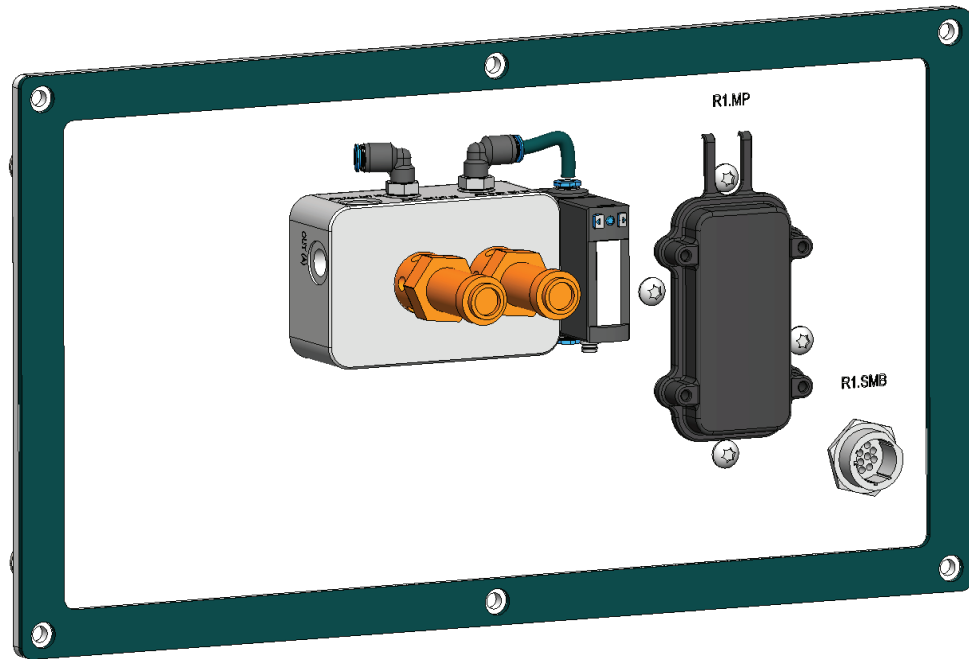

xx2400000735

#### Air preparation unit components

Components such as oil absorber, air dryer and pressure regulator are not included in the delivery of the overpressure system.



## 1.4 Calibration and references

### 1.4.1 Calibration methods

#### Overview

This section specifies the different types of calibration and the calibration methods that are supplied by ABB.

More information is available in the product manual.

#### Types of calibration

| Type of calibration                      | Description   | Calibration method |
|--|---|--------------------|
| Standard calibration                     | The calibrated robot is positioned at calibration position.<br>Standard calibration data is found on the SMB (serial measurement board) or EIB in the robot.  | Axis Calibration   |
| Absolute accuracy calibration (optional) | Based on standard calibration, and besides positioning the robot at synchronization position, the Absolute accuracy calibration also compensates for: <ul style="list-style-type: none"> <li>Mechanical tolerances in the robot structure</li> <li>Deflection due to load</li> </ul> Absolute accuracy calibration focuses on positioning accuracy in the Cartesian coordinate system for the robot.<br>Absolute accuracy calibration data is found on the serial measurement board (SMB) or other robot memory.<br>A robot calibrated with Absolute accuracy has the option information printed on its name plate (OmniCore).<br>To regain 100% Absolute accuracy performance, the robot must be recalibrated for absolute accuracy after repair or maintenance that affects the mechanical structure. | CalibWare          |

#### Brief description of calibration methods

##### Axis Calibration method

Axis Calibration is a standard calibration method for calibration of IRB 6790 . It is the recommended method in order to achieve proper performance.

The following routines are available for the Axis Calibration method:

- Fine calibration
- Update revolution counters
- Reference calibration

The calibration equipment for Axis Calibration is delivered as a toolkit.

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.

*Continues on next page*

# 1 Description

---

## 1.4.1 Calibration methods

*Continued*

### CalibWare - Absolute Accuracy calibration

The CalibWare tool guides through the calibration process and calculates new compensation parameters. This is further detailed in the *Application manual - CalibWare Field*.


If a service operation is done to a robot with the option Absolute Accuracy, a new absolute accuracy calibration is required in order to establish full performance. For most cases after replacements that do not include taking apart the robot structure, standard calibration is sufficient.

The Absolute Accuracy option varies according to the robot mounting position. This is printed on the robot name plate for each robot. The robot must be in the correct mounting position when it is recalibrated for absolute accuracy.

## 1.4.2 Fine calibration

### General

The fine calibration is done with the Axis calibration method.

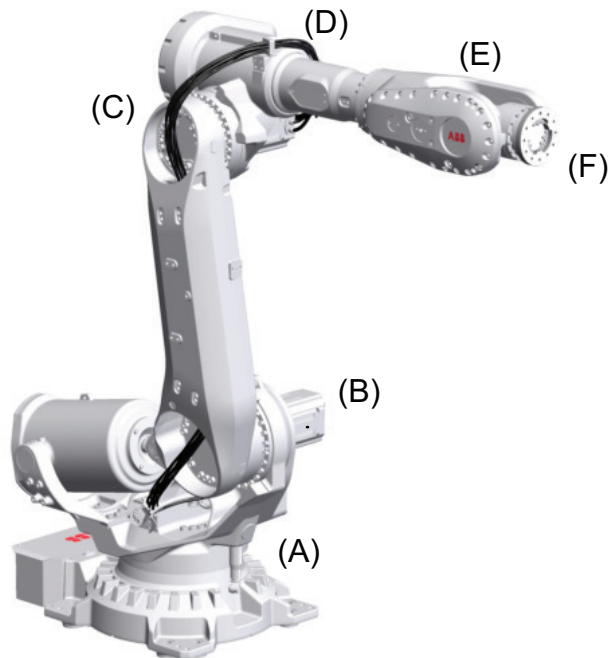

xx1300000244

### Axes

| Pos | Description | Pos | Description |
|-----|-------------|-----|-------------|
| A   | Axis 1      | B   | Axis 2      |
| C   | Axis 3      | D   | Axis 4      |
| E   | Axis 5      | F   | Axis 6      |

## 1 Description

---

### 1.4.3 Absolute Accuracy calibration

### 1.4.3 Absolute Accuracy calibration

---

#### Purpose

*Absolute Accuracy* is a calibration concept that improves TCP accuracy. The difference between an ideal robot and a real robot can be several millimeters, resulting from mechanical tolerances and deflection in the robot structure. *Absolute Accuracy* compensates for these differences.

Here are some examples of when this accuracy is important:

- Exchangeability of robots
- Offline programming with no or minimum touch-up
- Online programming with accurate movement and reorientation of tool
- Programming with accurate offset movement in relation to eg. vision system or offset programming
- Re-use of programs between applications

The option *Absolute Accuracy* is integrated in the controller algorithms and does not need external equipment or calculation.



#### Note

The performance data is applicable to the corresponding RobotWare version of the individual robot.



#### Note

Singularities might appear in slightly different positions on a real robot compared to RobotStudio, where *Absolute Accuracy* is off compared to the real controller.

---

#### What is included

Every *Absolute Accuracy* robot is delivered with:

- compensation parameters saved in the robot memory
- a birth certificate representing the *Absolute Accuracy* measurement protocol for the calibration and verification sequence.

A robot with *Absolute Accuracy* calibration has a label with this information on the manipulator.

*Absolute Accuracy* supports floor mounted, wall mounted, and ceiling mounted installations. The compensation parameters that are saved in the robot memory differ depending on which *Absolute Accuracy* option is selected.

---

#### When is *Absolute Accuracy* being used

*Absolute Accuracy* works on a robot target in Cartesian coordinates, not on the individual joints. Therefore, joint based movements (e.g. `MoveAbsJ`) will not be affected.

If the robot is inverted, the *Absolute Accuracy* calibration must be performed when the robot is inverted.

*Continues on next page*

**Absolute Accuracy active**

Absolute Accuracy will be active in the following cases:

- Any motion function based on robtargets (e.g. `MoveL`) and ModPos on robtargets
- Reorientation jogging
- Linear jogging
- Tool definition (4, 5, 6 point tool definition, room fixed TCP, stationary tool)
- Work object definition

**Absolute Accuracy not active**

The following are examples of when Absolute Accuracy is not active:

- Any motion function based on a jointtarget (`MoveAbsJ`)
- Independent joint
- Joint based jogging
- Additional axes
- Track motion

**Note**

In a robot system with, for example, an additional axis or track motion, the Absolute Accuracy is active for the manipulator but not for the additional axis or track motion.

**RAPID instructions**

There are no RAPID instructions included in this option.

**Production data**

Typical production data regarding calibration are:

| Robot             | Positioning accuracy (mm) |      |               |
|-------------------|---------------------------|------|---------------|
|                   | Average                   | Max  | % Within 1 mm |
| IRB 6790-235/2.55 | 0.35                      | 0.75 | 100           |
| IRB 6790-205/2.80 | 0.35                      | 0.75 | 100           |

# 1 Description

---

## 1.5.1 Introduction

## 1.5 Load diagrams

### 1.5.1 Introduction



#### WARNING

It is very important to always define correct actual load data and correct payload of the robot. Incorrect definitions of load data can result in overloading of the robot.

If incorrect load data is used, and/or if loads outside the load diagram are used, the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure



#### WARNING

In RobotWare, the service routine LoadIdentify can be used to determine correct load parameters. The routine automatically defines the tool and the load.

See *Operating manual - OmniCore*, for detailed information.



#### WARNING

Robots running with incorrect load data and/or with loads outside the load diagram, will not be covered by robot warranty.

---

### General

The load diagrams include a nominal payload inertia,  $J_0$  of 15 kgm<sup>2</sup>, and an extra load of 50 kg at the upper arm housing.

At different moment of inertia the load diagram will be changed. For robots that are allowed tilted, wall or inverted mounted, the load diagrams as given are valid and thus it is also possible to use RobotLoad within those tilt and axis limits.

---


### Control of load case with RobotLoad

To verify a specific load case, use the RobotStudio add-in RobotLoad.

The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted arm load is exceeded. For over-load cases and special applications, contact ABB for further analysis.

## 1.5.2 Diagrams

IRB 6790-235/2.65

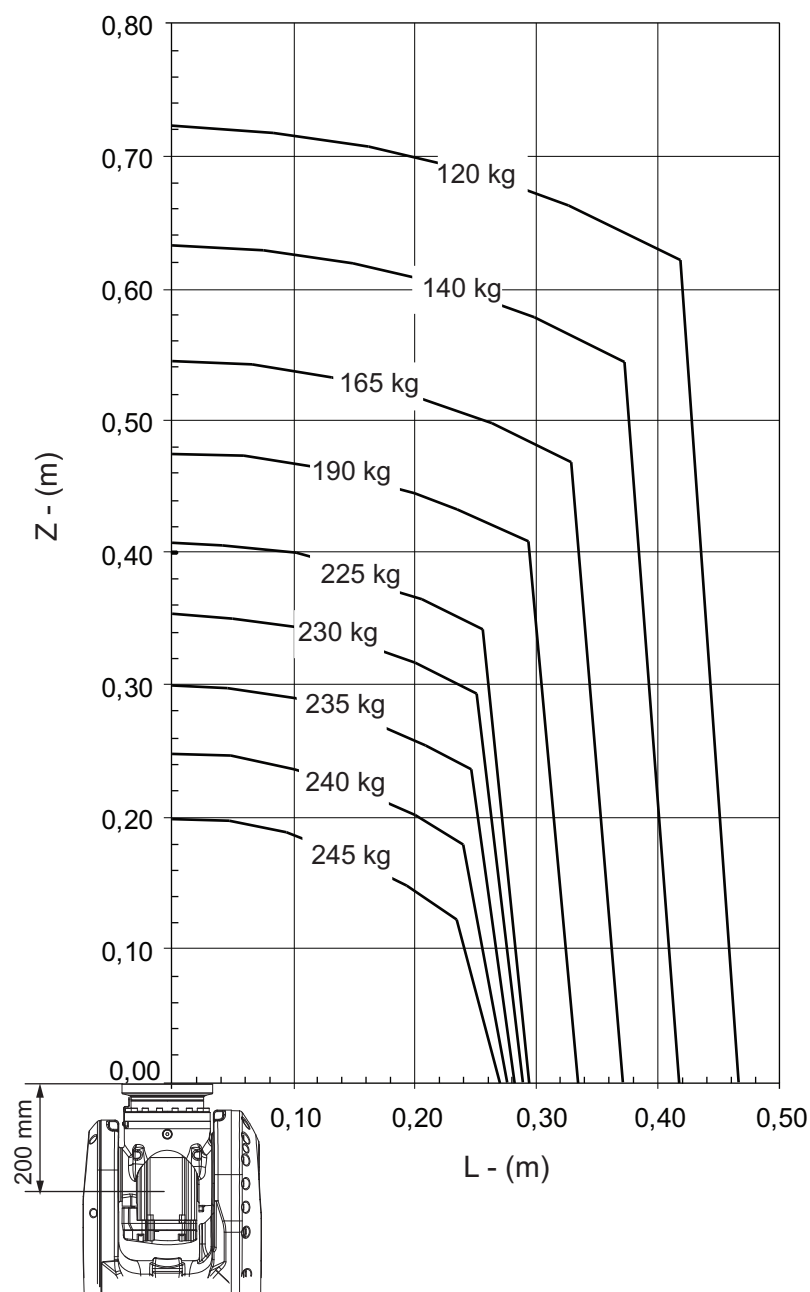


xx1300000245

*Continues on next page*

1 Description

1.5.2 Diagrams  
Continued

IRB 6790-235/2.65 "Vertical Wrist" ( $\pm 10^\circ$ )

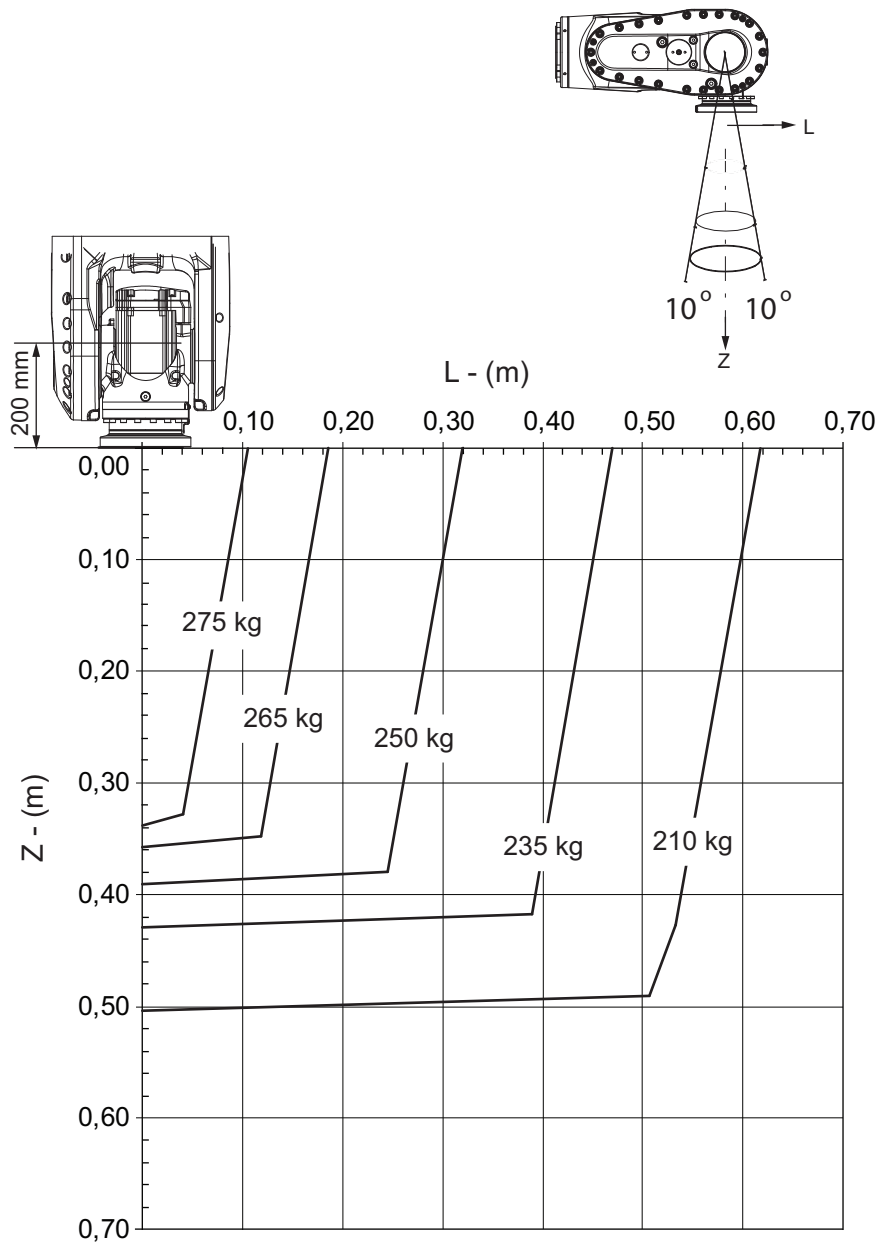

xx1300000246


For wrist down ( $0^\circ$  deviation from the vertical line).

|                  | Description |
|------------------|-------------|
| Max load         | 280 kg      |
| Z <sub>max</sub> | 0.327 m     |
| L <sub>max</sub> | 0.100 m     |

Continues on next page



IRB 6790-205/2.80

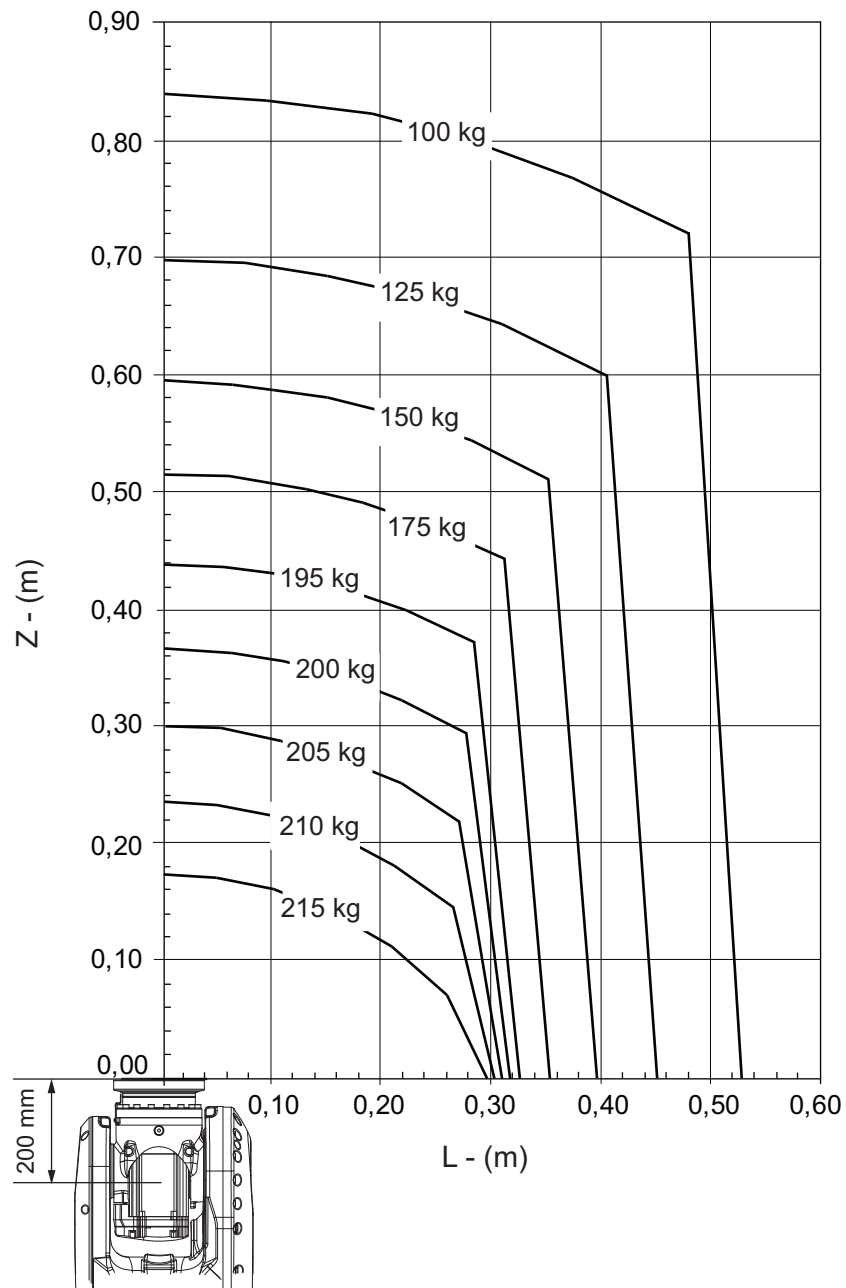


xx1300000249

Continues on next page

1 Description

1.5.2 Diagrams  
Continued

IRB 6790-205/2.80 "Vertical Wrist" ( $\pm 10^\circ$ )

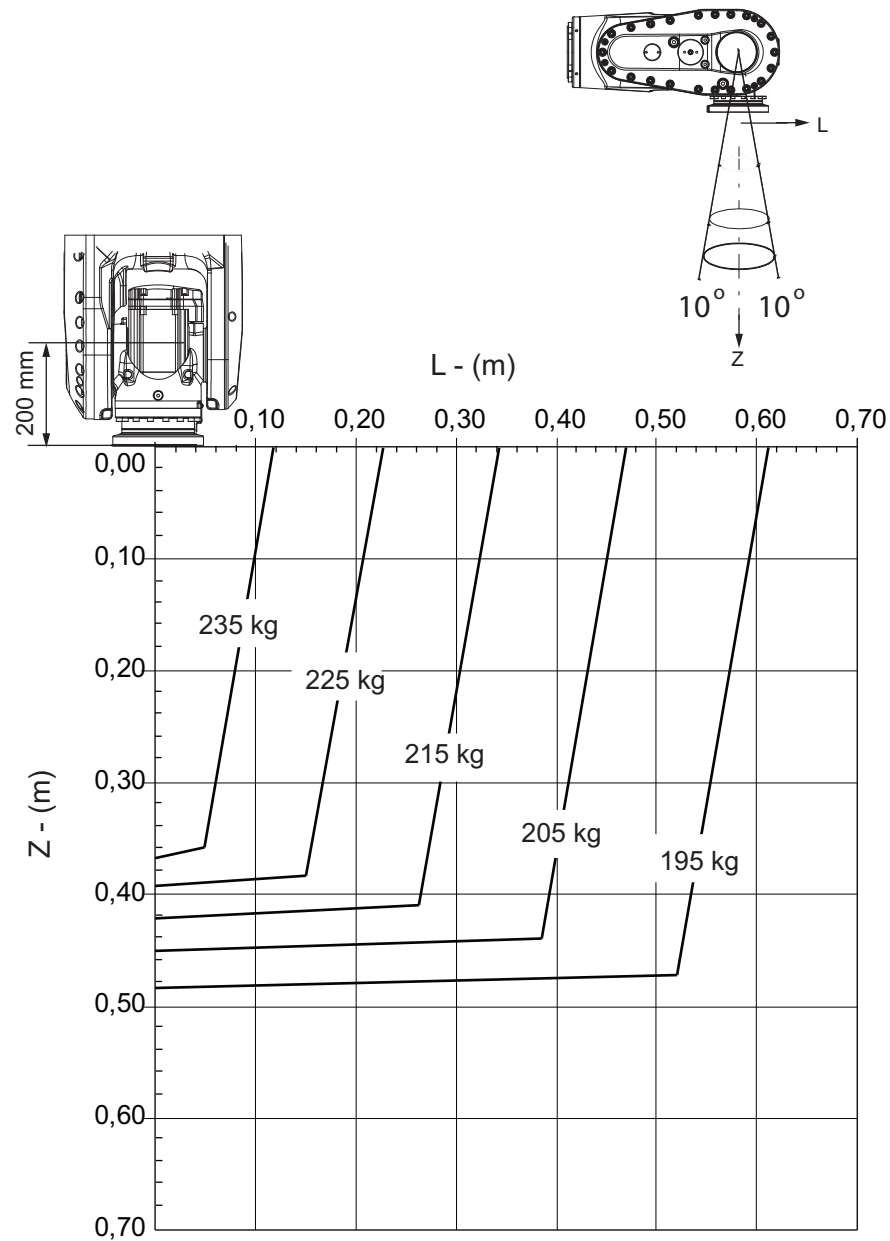

xx1300000250

For wrist down ( $0^\circ$  deviation from the vertical line).

|            | Description |
|------------|-------------|
| Max load   | 240 kg      |
| $Z_{\max}$ | 0.355 m     |
| $L_{\max}$ | 0.103 m     |

## 1.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement


## 1.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement

**Note**

Total load given as: mass in kg, center of gravity (Z and L) in meters and moment of inertia ( $J_{ox}$ ,  $J_{oy}$ ,  $J_{oz}$ ) in  $\text{kgm}^2$ .  $L = \sqrt{X^2 + Y^2}$ , see the following figure.

**Full movement of axis 5 ( $\pm 130^\circ$ )**

| Axis | Robot type                             | Maximum moment of inertia   |
|------|--|---|
| 5    | IRB 6790-235/2.65<br>IRB 6790-205/2.80 | $Ja_5 = \text{Load} \times ((Z + 0,200)^2 + L^2) + \max(J_{ox}, J_{oy}) \leq 250 \text{ kgm}^2$ |
| 6    | IRB 6790-235/2.65<br>IRB 6790-205/2.80 | $Ja_6 = \text{Load} \times L^2 + J_{oz} \leq 185 \text{ kgm}^2$                                 |



xx1400002028

| Pos | Description       |
|-----|-------------------|
| A   | Center of gravity |

|                                | Description   |
|--------------------------------|---|
| $J_{ox}$ , $J_{oy}$ , $J_{oz}$ | Max. moment of inertia around the X, Y and Z axes at center of gravity. |


*Continues on next page*

# 1 Description

## 1.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement Continued

### Limited axis 5, center line down

| Axis | Robot type                             | Maximum moment of inertia   |
|------|--|---|
| 5    | IRB 6790-235/2.65<br>IRB 6790-205/2.80 | $Ja_5 = \text{Load} \times ((Z + 0,200)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 275 \text{ kgm}^2$ |
| 6    | IRB 6790-235/2.65<br>IRB 6790-205/2.80 | $Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 250 \text{ kgm}^2$                                 |

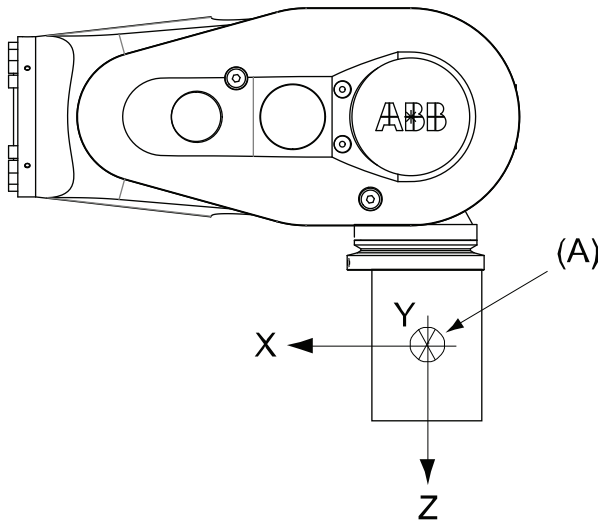

xx1400002029

| Pos | Description       |
|-----|-------------------|
| A   | Center of gravity |

|                          | Description   |
|--------------------------|---|
| $J_{0x}, J_{0y}, J_{0z}$ | Max. moment of inertia around the X, Y and Z axes at center of gravity. |

## 1.5.4 Wrist torque



### Note

The wrist torque values are for reference only, and should not be used for calculating permitted load offset (position of center of gravity) within the load diagram, since those also are limited by main axes torques as well as dynamic loads. Furthermore, arm loads will influence the permitted load diagram. To find the absolute limits of the load diagram, use the RobotStudio add-in RobotLoad.

## Torque

The table below shows the maximum permissible torque due to payload.

| Robot type        | Max wrist torque<br>axis 4 and 5 | Max wrist torque<br>axis 6 | Max torque valid at<br>load |
|-------------------|----------------------------------|----------------------------|-----------------------------|
| IRB 6790-235/2.65 | 1324 Nm                          | 650 Nm                     | 225 kg                      |
| IRB 6790-205/2.80 | 1263 Nm                          | 625 Nm                     | 192 kg                      |

# 1 Description

## 1.5.5 Maximum TCP acceleration

### 1.5.5 Maximum TCP acceleration

#### General

Higher values can be reached with lower loads than the nominal because of our dynamical motion control QuickMove2. For specific values in the unique customer cycle, or for robots not listed in the table below, we recommend to use RobotStudio.

#### Maximum Cartesian design acceleration for nominal loads

| Robot type          | E-stop<br>Max acceleration at nominal<br>load COG [m/s <sup>2</sup> ] | Controlled Motion<br>Max acceleration at nominal load<br>COG [m/s <sup>2</sup> ] |
|---------------------|---|--|
| IRB 6790 - 235/2.65 | 41  | 22   |
| IRB 6790 - 205/2.8  | 45  | 24   |



#### Note

Acceleration levels for emergency stop and controlled motion includes acceleration due to gravitational forces. Nominal load is defined with nominal mass and cog with max offset in Z and L (see the load diagram).

## 1.6 Fitting equipment to the robot

### General

Extra loads can be fitted on the upper arm housing, the lower arm, and on the frame. Definitions of distances and masses are shown in the following figures. The robot is supplied with holes for fitting extra equipment (see figure in [Holes for fitting extra equipment on page 42](#)). Maximum allowed arm load depends on center of gravity of arm load and robot payload.



#### Note

All equipment and cables used on the robot, must be designed and fitted not to damage the robot and/or its parts.

### Frame (hip load)


Extra load can be fitted on the frame.

|   | Description  |
|---|--|
| Permitted extra load on frame                   | $J_H = 100 \text{ kgm}^2$  |
| Recommended position (see the following figure) | $J_H = J_{H0} + M4 \times R^2$<br>where: <ul style="list-style-type: none"> <li>• <math>J_{H0}</math> is the moment of inertia of the equipment</li> <li>• <math>R</math> is the radius (m) from the center of axis 1</li> <li>• <math>M4</math> is the total mass (kg) of the equipment including bracket and harness (<math>\leq 250 \text{ kg}</math>)</li> </ul> |

*Continues on next page*

1 Description


1.6 Fitting equipment to the robot  
Continued

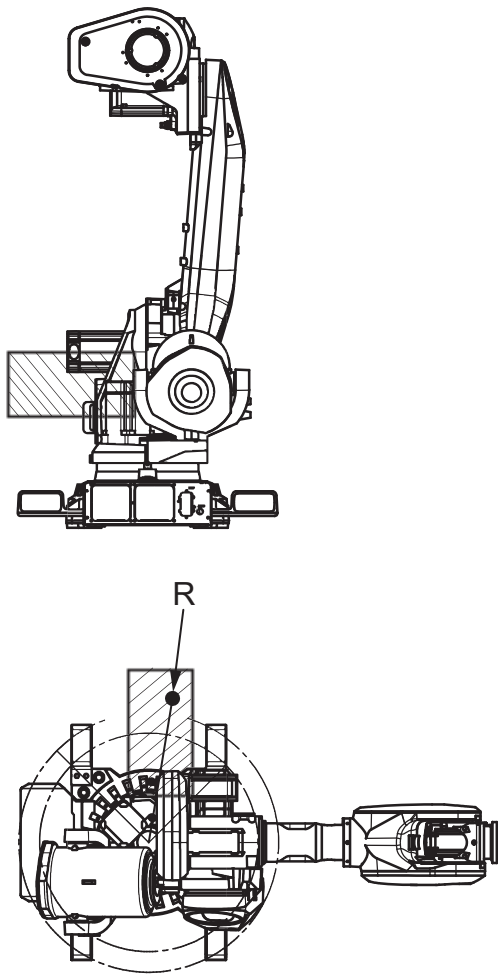

xx1300000262

Upper arm

Allowed extra load on the upper arm housing, in addition to the maximum handling weight, is  $M1 \leq 50 \text{ kg}$  with a distance  $(a) \leq 500 \text{ mm}$  from the center of gravity in the axis-3 extension.

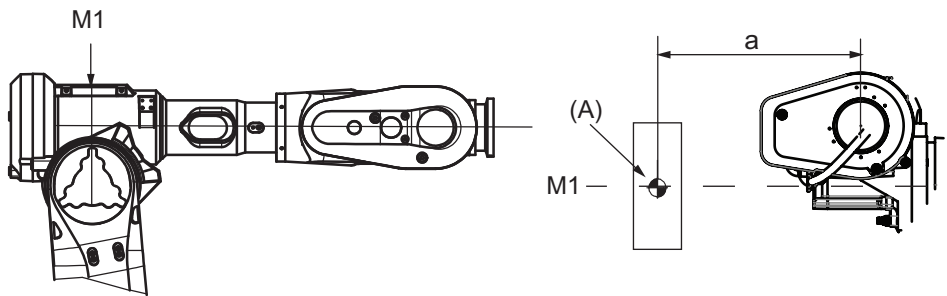


xx14000002019

|   |             |
|---|-------------|
| A | Mass center |
|---|-------------|

Continues on next page



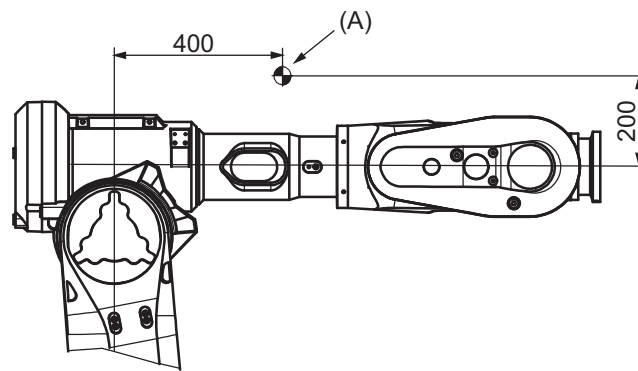

xx1300000866

|   |                         |
|---|-------------------------|
| A | Center of gravity 50 kg |
|---|-------------------------|


# 1 Description

## 1.6 Fitting equipment to the robot

Continued

### Holes for fitting extra equipment

Position of attachment holes - drawing 1

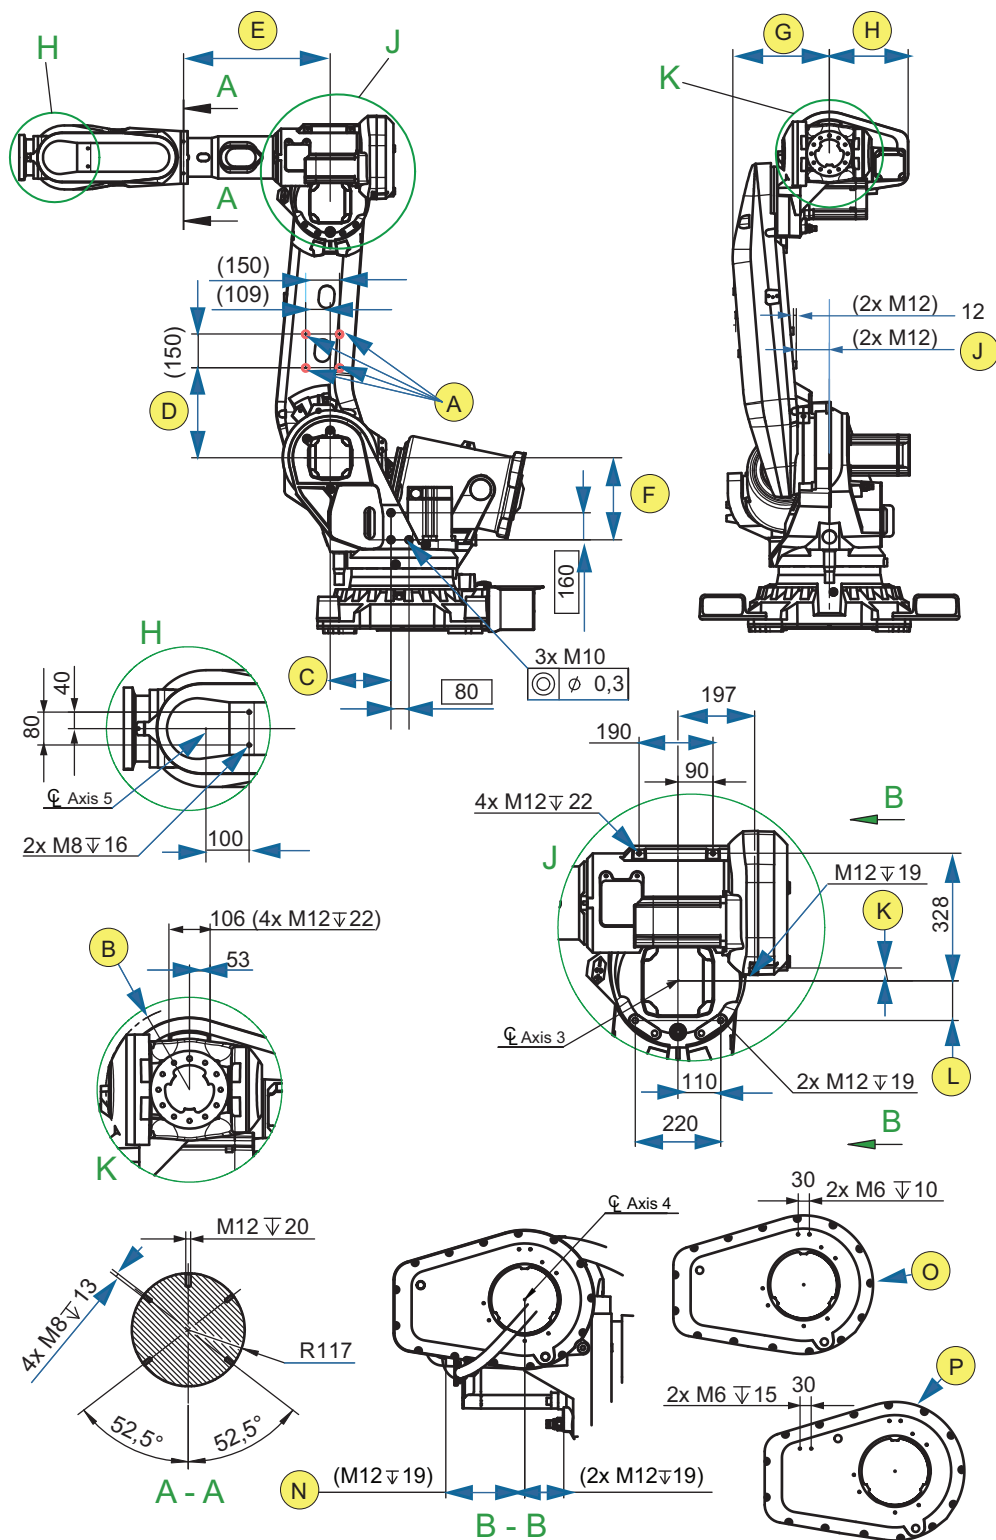

xx1300000263

|   |   |
|---|---|
| A | Allowed position for attachment holes, M12 through. Be careful not to touch the cables when drilling. |
|---|---|

Continues on next page

## 1 Description

## 1.6 Fitting equipment to the robot


*Continued*

|   |   |
|---|---|
| O | Attachment holes on arm house cover for extra equipment<br>IRB 6790 - 235/2.65, IRB 6790 - 205/2.80 |
| P | Attachment holes on arm house cover for extra equipment<br>Not valid for IRB 6790                   |

| Variant             | B <sup>I</sup> | C   | D   | E     | F   | G   | H   | J   | K  | L   | M   | N   |
|---------------------|----------------|-----|-----|-------|-----|-----|-----|-----|----|-----|-----|-----|
| IRB 6790 - 235/2.65 | R=216          | 270 | 400 | 652.5 | 365 | 437 | 349 | 147 | 33 | 102 | 104 | 210 |
| IRB 6790 - 205/2.80 | R=216          | 270 | 500 | 652.5 | 365 | 437 | 349 | 147 | 33 | 102 | 104 | 210 |

i Smallest circumscribed radius axis-4.

### Position of attachment holes - drawing 2

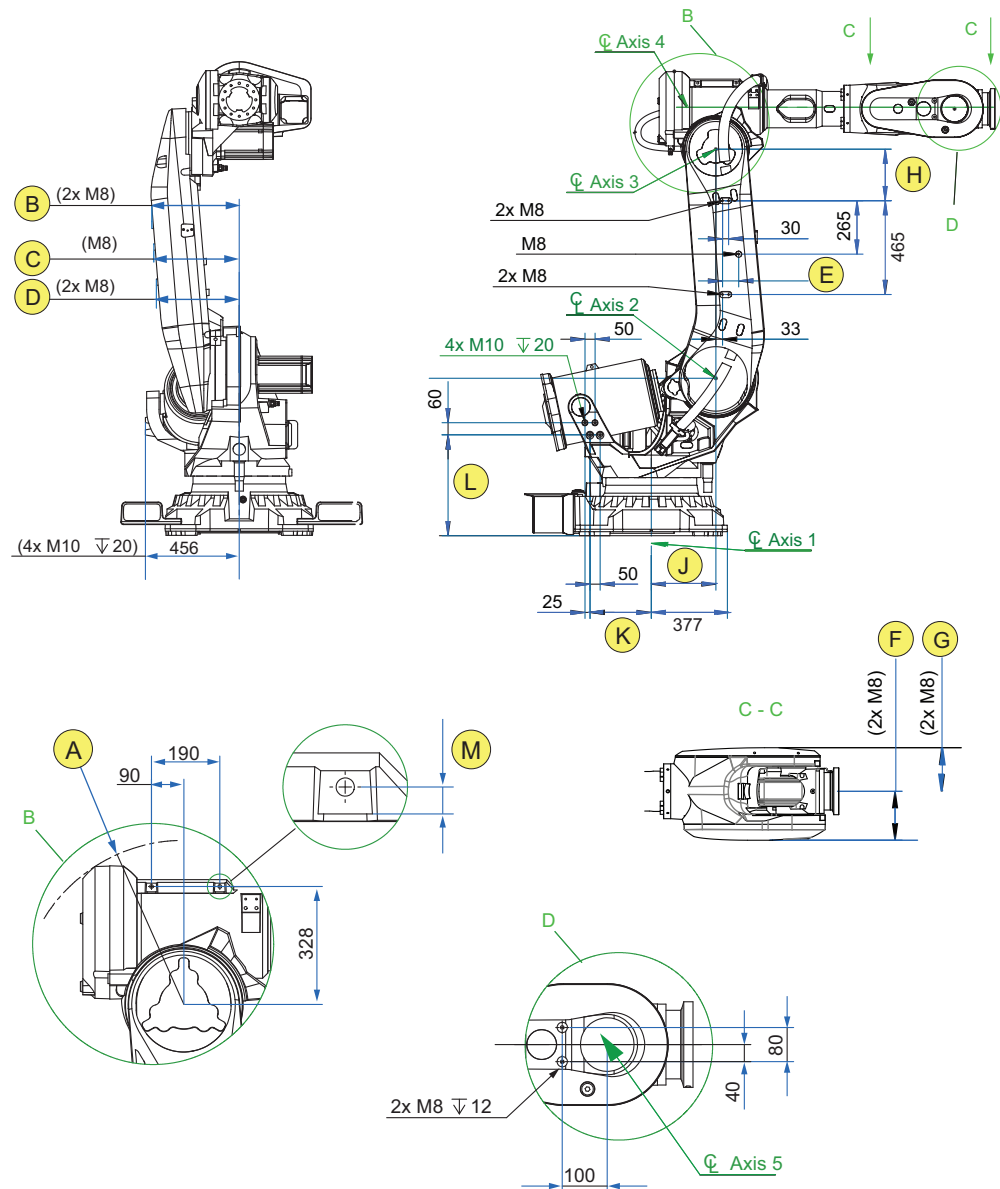

xx1300000264

| Variant             | A <sup>i</sup> | B   | C   | D   | E  | F     | G   | H   | J   | K     | L   | M    |
|---------------------|----------------|-----|-----|-----|----|-------|-----|-----|-----|-------|-----|------|
| IRB 6790 - 235/2.65 | R=456          | 433 | 418 | 403 | 80 | 208.5 | 186 | 255 | 320 | 303.5 | 500 | 13.8 |

*Continues on next page*

# 1 Description

## 1.6 Fitting equipment to the robot


Continued

| Variant             | A <sup>i</sup> | B   | C   | D   | E  | F     | G   | H   | J   | K     | L   | M    |
|---------------------|----------------|-----|-----|-----|----|-------|-----|-----|-----|-------|-----|------|
| IRB 6790 - 205/2.80 | R=456          | 438 | 423 | 408 | 80 | 208.5 | 186 | 255 | 320 | 303.5 | 500 | 13.8 |

<sup>i</sup> Smallest circumscribed radius axis-3.

### Extra cover


There is an extra upper arm cover for LID (LeanID) variants, which causes the value A to be different for the LID variants.

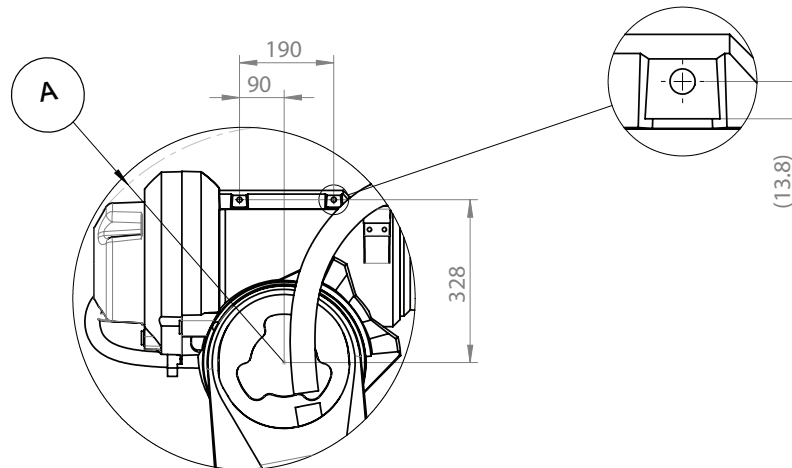

xx2100002054

### Tool flange, standard

Below is the standard tool flange. The guide pin hole is, in calibration position, pointing upwards in Z-direction.

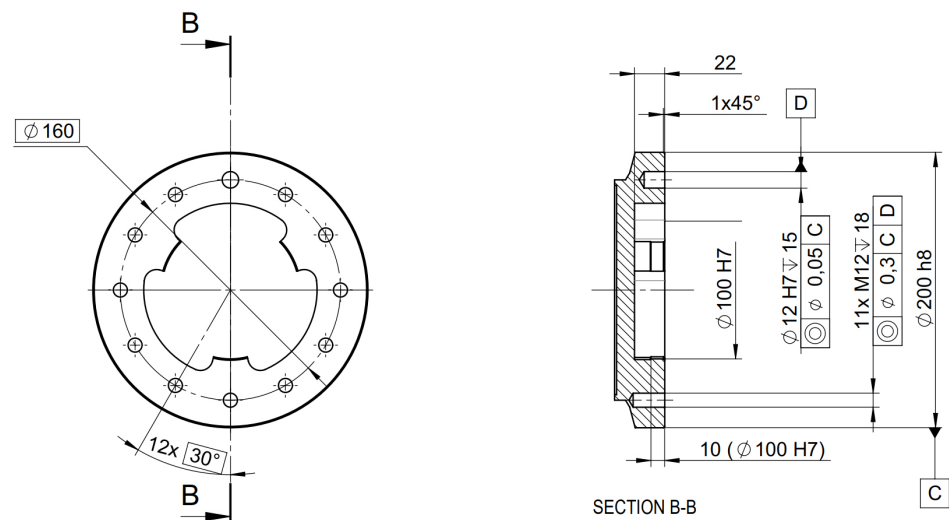

xx1700001590

### Fastener quality

When fitting tools on the tool flange, only use screws with quality 12.9. For other equipment use suitable screws and tightening torque for your application.

---

**1.7 Maintenance and troubleshooting**

---

**General**

The robot requires only minimum maintenance during operation. It has been designed to make it as easy to service as possible:

- Maintenance-free AC motors are used.
- Oil is used for the gearboxes.
- The cabling is routed for longevity, and in the unlikely event of a failure, its modular design makes it easy to change.

---

**Maintenance**

The maintenance intervals depend on the use of the robot. The required maintenance activities also depend on the selected options. For detailed information on maintenance procedures, see the maintenance section in *Product manual - IRB 6790 Foundry Prime*.

---

**Warranty**

Harsh environments typically involve a lot of different process parameters such as specific fluids, their concentration and certain additives etc. These parameters might affect the visual appearance of selected parts on the robot or cell by means of discoloration, surface or cosmetic corrosion. These cases as well as defects caused by damages in the surface treatment during transport or improper storage that do not directly impact proper function of the robot are excluded from the standard warranty and will not be covered.

# 1 Description

## 1.8.1 Robot motion

## 1.8 Robot motion

### 1.8.1 Robot motion

#### Type of motion

| Axis   | Type of motion  | Range of movement - IRB 6790                | Note  |
|--------|-----------------|---|---|
| Axis 1 | Rotation motion | $\pm 170^\circ$ or $\pm 220^\circ$ (option) |   |
| Axis 2 | Arm motion      | $-65^\circ / +85^\circ$                     |   |
| Axis 3 | Arm motion      | $-180^\circ / +70^\circ$                    |   |
| Axis 4 | Wrist motion    | $\pm 300^\circ$                             |   |
| Axis 5 | Bend motion     | $\pm 130^\circ$                             |   |
| Axis 6 | Turn motion     | $\pm 360^\circ$                             |   |
|        |                 | $\pm 93.7$ revolutions                      | Maximum value.<br>The default working range for axis 6 can be extended by changing parameter values in the software.<br>Option 610-1 <i>Independent axis</i> can be used for resetting the revolution counter after the axis has been rotated (no need for "rewinding" the axis). |

#### Working range


| Robot variant | Handling capacity (kg) | Reach (m) |
|---------------|------------------------|-----------|
| IRB 6790      | 235                    | 2.65      |

Continues on next page

## 1 Description

### 1.8.1 Robot motion

*Continued*

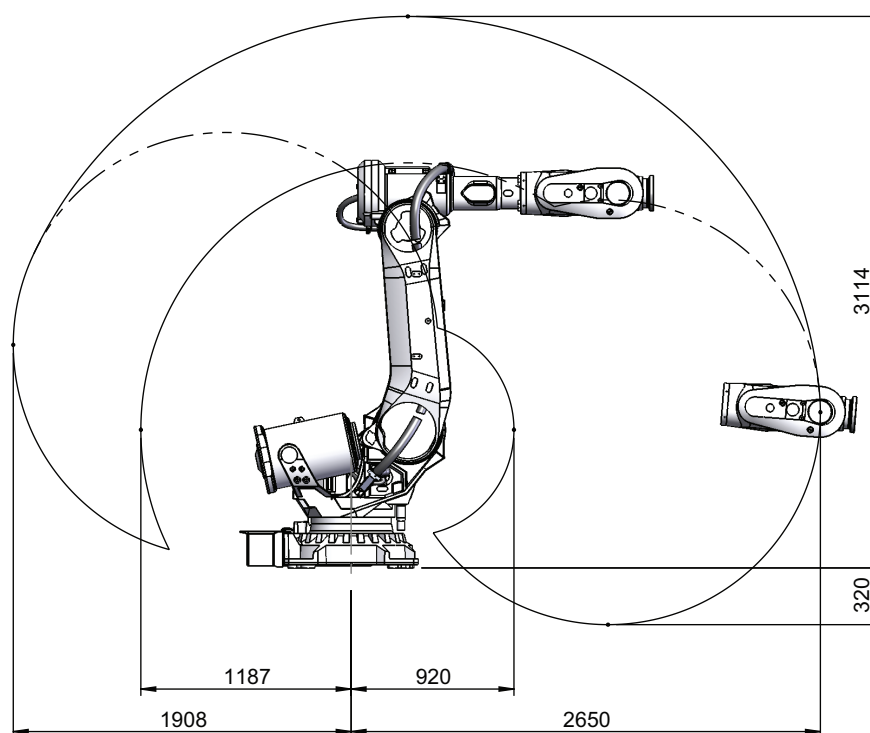


xx1300000281

*Continues on next page*

1 Description

1.8.1 Robot motion  
Continued

| Robot variant | Handling capacity (kg) | Reach (m) |
|---------------|------------------------|-----------|
| IRB 6790      | 205                    | 2.80      |

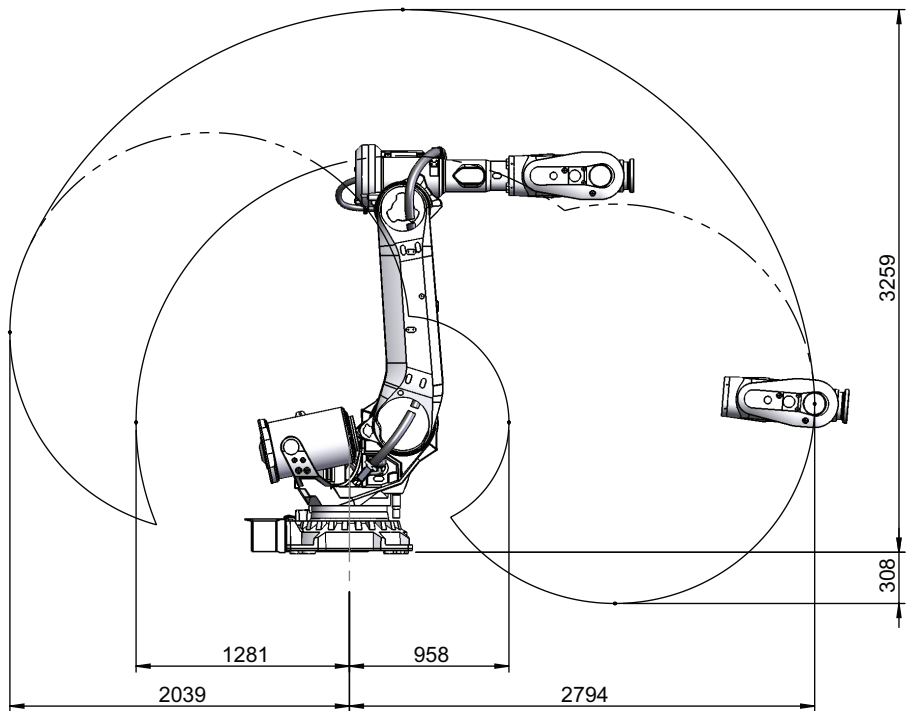

xx1300000282




## 1.8.2 Performance according to ISO 9283

## General

At rated maximum load, maximum offset and 1.6 m/s velocity on the inclined ISO test plane, with all six axes in motion. Values in the table below are the average result of measurements on a small number of robots. The result may differ depending on where in the working range the robot is positioning, velocity, arm configuration, from which direction the position is approached, the load direction of the arm system. Backlashes in gearboxes also affect the result.

The figures for AP, RP, AT and RT are measured according to figure below.

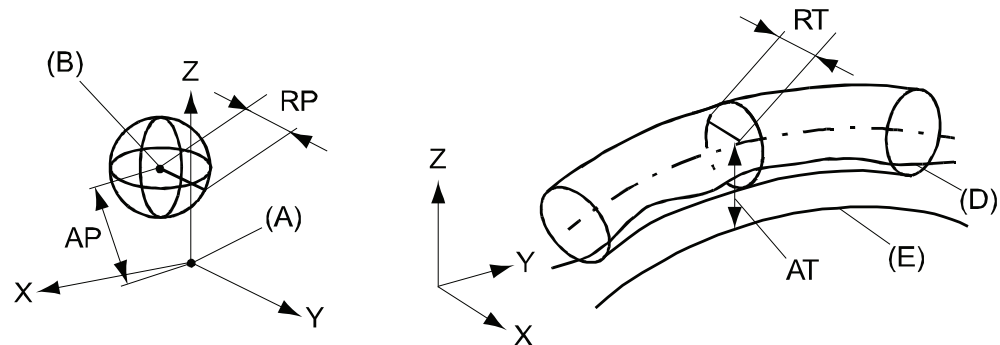

xx0800000424

| Pos | Description                                     | Pos | Description   |
|-----|---|-----|---|
| A   | Programmed position                             | E   | Programmed path                                     |
| B   | Mean position at program execution              | D   | Actual path at program execution                    |
| AP  | Mean distance from programmed position          | AT  | Max deviation from E to average path                |
| RP  | Tolerance of position B at repeated positioning | RT  | Tolerance of the path at repeated program execution |

| IRB 6790   | 235/2.65 | 205/2.80 |
|--|----------|----------|
| Pose accuracy, AP (mm) <sup>i</sup>                            | 0.03     | 0.06     |
| Pose repeatability, RP (mm)                                    | 0.05     | 0.05     |
| Pose stabilization time, PSt (s) within 0.5 mm of the position | 0.16     | 0.17     |
| Path accuracy, AT (mm)   | 1.7      | 1.5      |
| Path repeatability, RT (mm)                                    | 0.08     | 0.08     |

<sup>i</sup> AP according to the ISO test above, is the difference between the taught position (position manually modified in the cell) and the average position obtained during program execution.

# 1 Description

---

## 1.8.3 Velocity

### 1.8.3 Velocity

---

#### Maximum axis speed

| Robot type        | Axis 1  | Axis 2 | Axis 3 | Axis 4  | Axis 5  | Axis 6  |
|-------------------|---------|--------|--------|---------|---------|---------|
| IRB 6790-235/2.65 | 100 °/s | 90 °/s | 90 °/s | 170 °/s | 120 °/s | 190 °/s |
| IRB 6790-205/2.80 | 100 °/s | 90 °/s | 90 °/s | 170 °/s | 120 °/s | 190 °/s |

There is a supervision function to prevent overheating in applications with intensive and frequent movements (high duty cycle).

### 1.8.4 Robot stopping distances and times

---

#### Introduction

The stopping distances and times for category 0 and category 1 stops, as required by EN ISO 10218-1 Annex B, are listed in *Product specification - Robot stopping distances according to ISO 10218-1 (3HAC048645-001)*.

**This page is intentionally left blank**

## 2 Specification of variants and options

### 2.1 Introduction to variants and options

---

#### General

The different variants and options for the IRB 6790 are described in the following sections. The same option numbers are used here as in the specification form.

The variants and options related to the robot controller are described in the product specification for the controller.

## 2 Specification of variants and options

### 2.2 Manipulator

### 2.2 Manipulator

#### Variants

| Option  | IRB Type | Handling capacity (kg) | Reach (m) |
|---------|----------|------------------------|-----------|
| 3300-71 | 6790     | 235                    | 2.65      |
| 3300-72 | 6790     | 205                    | 2.80      |

#### Manipulator protection

| Option  | Protection type | Note  |
|---------|-----------------|---|
| 3352-18 | Foundry Prime 3 | IP69<br>See <a href="#">Foundry Prime on page 10</a> for a complete description of protection type Foundry Prime 3. |

#### Requirement

This option requires option [3316-1] Upper arm cover.

#### Upper arm cover

| Option | Description     |
|--------|-----------------|
| 3316-1 | Upper arm cover |

The manipulator can be equipped with additional upper arm covers for environmental conditions, where you want to further seal off the upper arm in wet or dirty conditions. These additional covers will prolong the lifetime of the cables, and simplify service/maintenance as the robot is kept more clean under the covers.




xx2100002592

*Continues on next page*

### Forklift device

The manipulator can be delivered with forklift devices, allowing a forklift to be used when moving the manipulator.
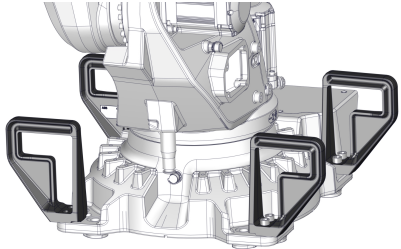
| Option | Description   |   |
|--------|---|---|
| 3318-1 | Forklift device on base<br>Forklift pockets placed on the base gives a low lifting point. | <br>xx2300001244 |

### Extended working range

| Option | Description               |  |
|--------|---------------------------|--|
| 3324-1 | Axis 1 to $\pm 220^\circ$ | The option extends the working range on axis 1 from $\pm 170^\circ$ to $\pm 220^\circ$ . |



#### CAUTION

The option *Extended work range* enables an extension of the working range for axis 1, through a software configuration. With this option installed, the working range can exceed the range limited by the mechanical stop on axis 1. The working range shall be limited through the option *SafeMove*.

A risk analysis must be done to ensure that no risks remain when using option *Extended work range*, to limit the working range, and before removing the mechanical stops.

For information about the option *SafeMove*, see *Application manual - Functional safety and SafeMove*.

If the mechanical stop is removed, then the manipulator should have a marking for this, for example, a label. If the robot is delivered with the option *Extended work range*, then such a label is included on delivery.

### Limitations

This option is not compatible with *DressPack SW*.

### Requirements

This option requires the option *SafeMove* [3043-x].

### Flow sensor kit

| Option | Protection type | Note                           |
|--------|-----------------|--------------------------------|
| 3347-1 | Flow sensor kit | Used for the overpressure unit |

### Requirements

This option requires options [3015-1] 24V 4Amps and [3032-1] Base Dig. 16in/16out.

## 2 Specification of variants and options

---

### 2.3 Floor cables

### 2.3 Floor cables

---

#### Manipulator cable length

| Option | Lengths |
|--------|---------|
| 3200-2 | 7 m     |
| 3200-3 | 15 m    |
| 3200-4 | 22 m    |
| 3200-5 | 30 m    |



## 2.4 Warranty


### Warranty

For the selected period of time, ABB will provide spare parts and labor to repair or replace the non-conforming portion of the equipment without additional charges. During that period, it is required to have a yearly *Preventative Maintenance* according to ABB manuals to be performed by ABB. If due to customer restrains no data can be analyzed with ABB Connected Services for robots with OmniCore controllers, and ABB has to travel to site, travel expenses are not covered. The *Extended Warranty* period always starts on the day of warranty expiration. Warranty Conditions apply as defined in the *Terms & Conditions*.



#### Note

This description above is not applicable for option *Stock warranty* [438-8]

| Option | Type              | Description   |
|--------|-------------------|---|
| 438-1  | Standard warranty | Standard warranty is 12 months from <i>Customer Delivery Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply.   |
| 438-8  | Stock warranty    | Maximum 6 months postponed start of standard warranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred before the end of stock warranty. Standard warranty commences automatically after 6 months from <i>Factory Shipment Date</i> or from activation date of standard warranty in WebConfig. <div><b>Note</b><br/>Special conditions are applicable, see <i>Robotics Warranty Directives</i>.</div> |

**This page is intentionally left blank**

# Index

## A

Absolute Accuracy, 28  
Absolute Accuracy, calibration, 26  
ambient humidity  
    operation, 19  
    storage, 19  
ambient temperature  
    operation, 19  
    storage, 19

## C

calibration  
    Absolute Accuracy type, 25  
    standard type, 25  
calibration, Absolute Accuracy, 26  
CalibWare, 25  
category 0 stop, 51  
category 1 stop, 51  
compensation parameters, 28

## E

equipment, on robot, 39  
extended working range, 55

## F

fitting equipment to robot, 39  
foundation  
    requirements, 19

## H

holes for equipment, 39  
humidity  
    operation, 19  
    storage, 19

## L

loads on foundation, 18

## O

operating conditions, 19  
option  
    Extended working range, 55  
options, 53

## P

product standards, 15  
protection classes, 20  
protection type, 20

## R

requirements on foundation, 19  
robot  
    protection class, 20  
    protection types, 20

## S

safety standards, 15  
standards, 15  
standard warranty, 57  
stock warranty, 57  
stopping distances, 51  
stopping times, 51  
storage conditions, 19

## T

temperatures  
    operation, 19  
    storage, 19  
torques on foundation, 18

## V

variants, 53

## W

warranty, 57  
weight, 17





**ABB AB****Robotics & Discrete Automation**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

**ABB AS****Robotics & Discrete Automation**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

**ABB Engineering (Shanghai) Ltd.**

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201315, China

Telephone: +86 21 6105 6666

**ABB Inc.****Robotics & Discrete Automation**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

**[abb.com/robotics](http://abb.com/robotics)**